

General Guidelines


Please read the following instruction carefully and use the product accordingly. Please keep this manual and hand it over







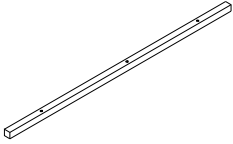
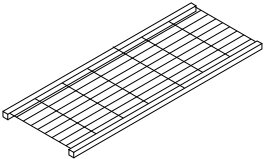

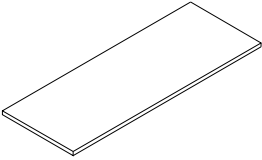
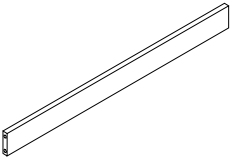
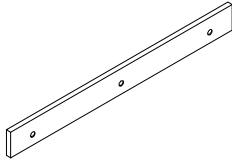
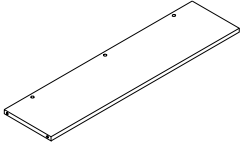




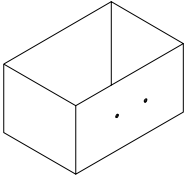










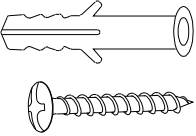


when you transfer the product. This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.

Notes: Product is intended for indoor use only. It must be assembled and used according to the instructions. The seller does not accept any responsibility for damage or injury resulting from improper assembly or use.


Please avoid long-term exposure to humid environment to prevent mildew.

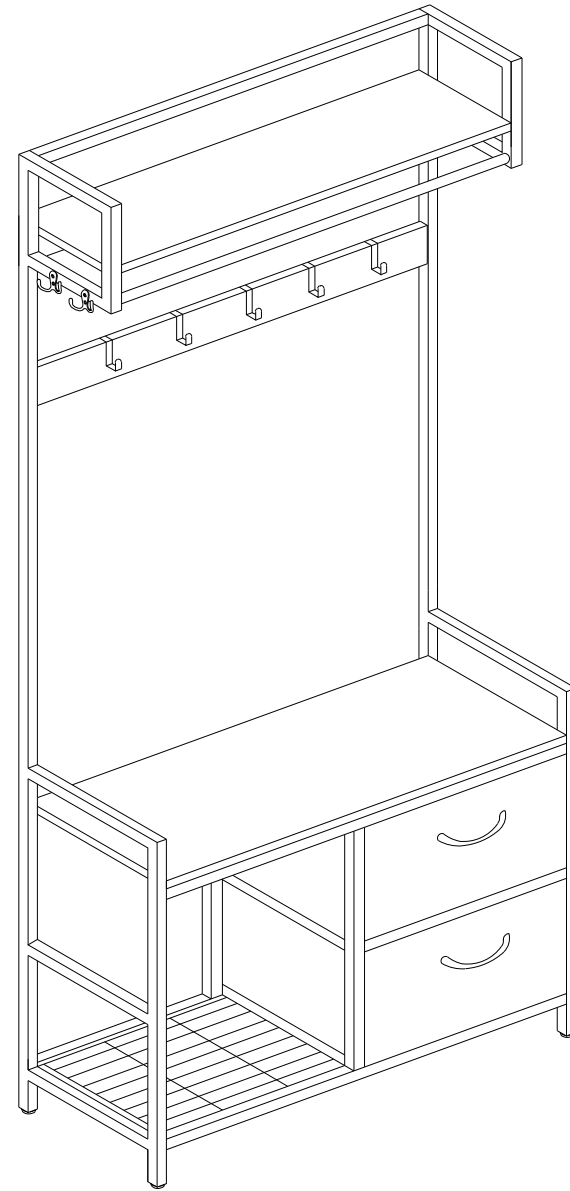-During assembly, align all screws with the corresponding pre-drilled holes first. Do not tighten the screws too tightly at the beginning of installation. Tighten screws after they are all assembled one by one. Inspect the screws regularly as screws may become loose during long-term use. If necessary, retighten them to ensure stability and security.


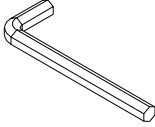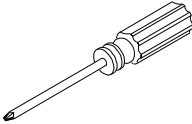
| | | | | | | |
|---|--|--|--|--|--|--|
| <p>①</p>  <p>x1</p> | <p>②</p>  <p>x1</p> | <p>③</p>  <p>x2</p> | <p>④</p>  <p>x1</p> | <p>⑤</p>  <p>x1</p> | <p>⑥</p>  <p>x1</p> | <p>⑦</p>  <p>x2</p> |
| <p>⑧</p>  <p>x1</p> | <p>⑨</p>  <p>x1</p> | <p>⑩</p>  <p>x1</p> | <p>⑪</p>  <p>x1</p> | <p>⑫</p>  <p>x1</p> | <p>⑬</p>  <p>x1</p> | <p>⑭</p>  <p>x1</p> |
| <p>⑮</p>  <p>x1</p> | <p>⑯</p>  <p>x5</p> | <p>⑰</p>  <p>x9</p> | <p>⑱</p>  <p>x2</p> | <p>⑲</p>  <p>x2</p> | <p>A</p>  <p>M6-35x20</p> | <p>B</p>  <p>M6-10x4</p> |
| <p>C</p>  <p>M4-10x2</p> | <p>D</p>  <p>x4</p> | <p>E</p>  <p>x4</p> | <p>F</p>  <p>x1</p> | <p>G</p>  <p>x1</p> | <p>H</p>  <p>M5-40x10</p> | <p>I</p>  <p>M4-8x8</p> |
| <p>J</p>  <p>M4-40x2</p> | <p>K</p>  <p>M3-12x10</p> | <p>L</p>  <p>x3</p> | | | | |


STEP 1

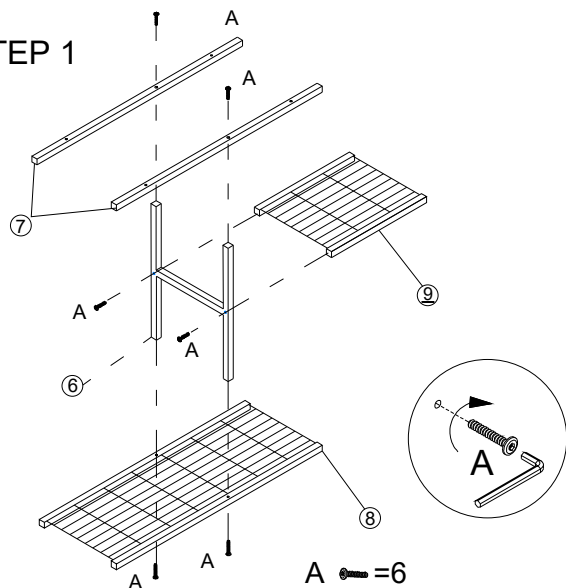

Use screw A to connect NO. 6, NO. 7, NO. 8, and NO. 9.


Note that the large circular hole on the NO. 7 is facing downwards.

STEP 2

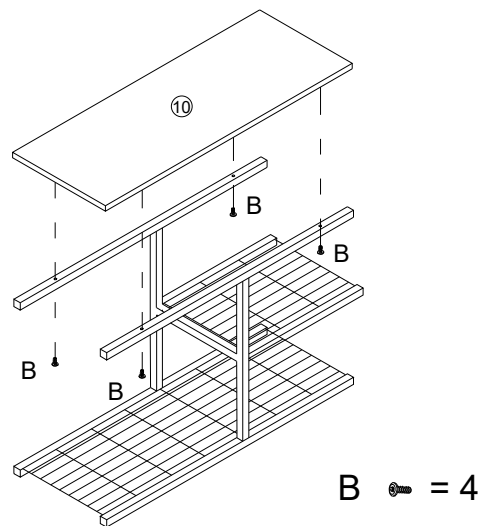

Use screw B to connect No. 10 to the frame.

STEP 3

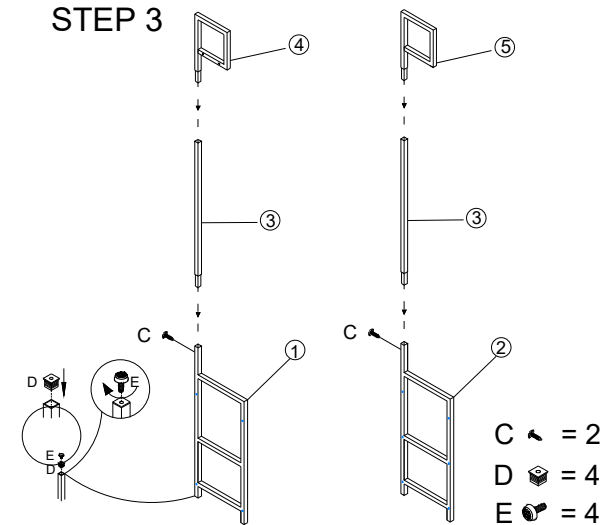


Install D and E at the bottom of NO. 1 and NO. 2.

Insert NO. 4 and NO. 3 into NO. 1 in sequence, and then insert NO. 5 and NO. 3 into NO. 2 in sequence. And fix No. 1 and No. 3, as well as No. 2 and No. 3, with screw C.

STEP 4


Pay attention to the three in one hole facing backwards

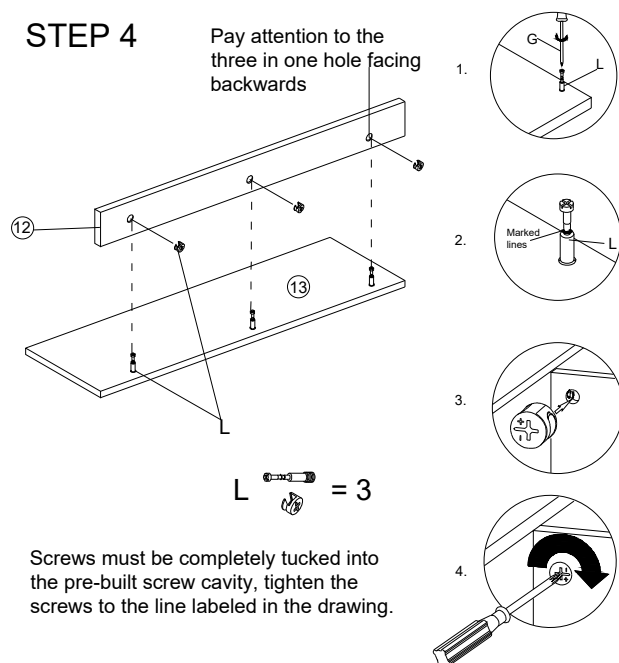

L = 3

Screws must be completely tucked into the pre-built screw cavity, tighten the screws to the line labeled in the drawing.


STEP 5

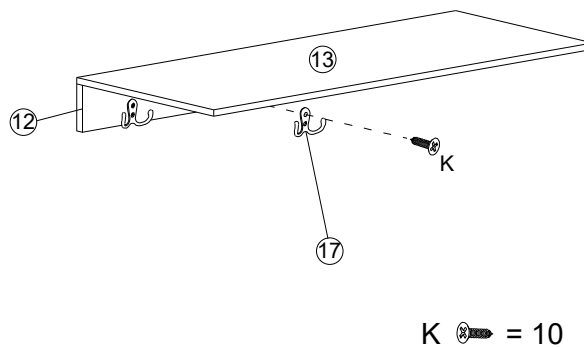

K = 10

Use screw K to secure hook 17 to NO. 12.

STEP 6

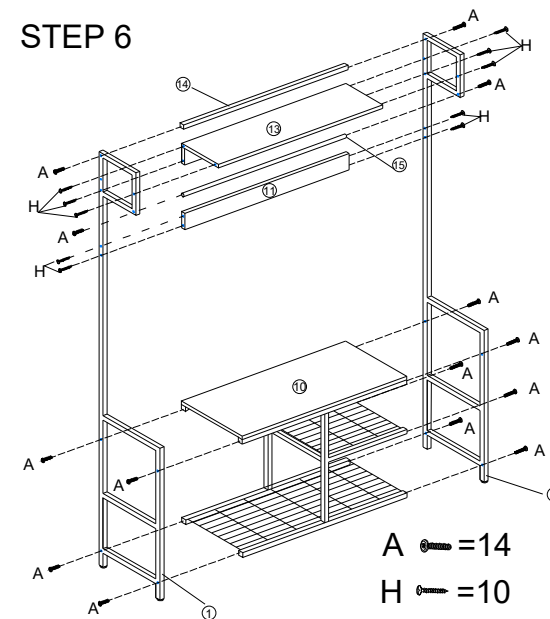


A = 14

H = 10


As shown in the figure, connect them with screws A and H.

STEP 7

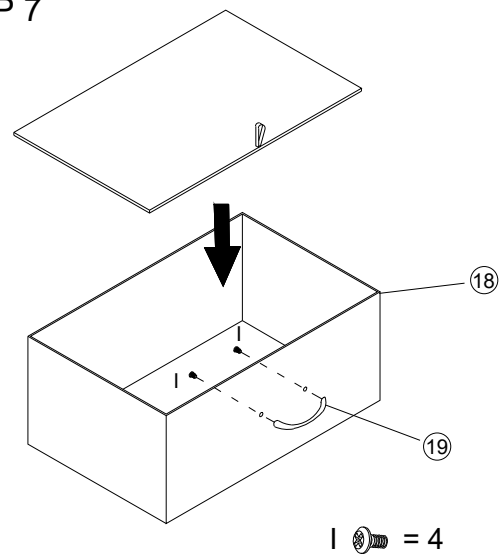


Install handle 19 onto drawer 18 using screw L.

STEP 8

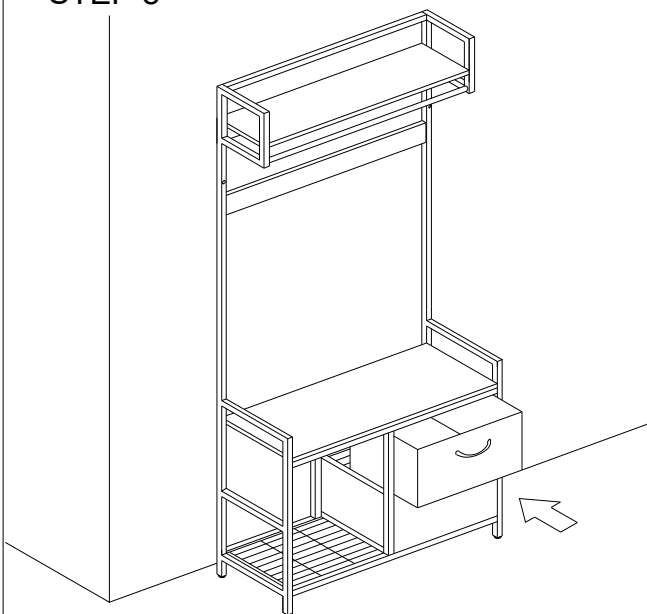


STEP 9

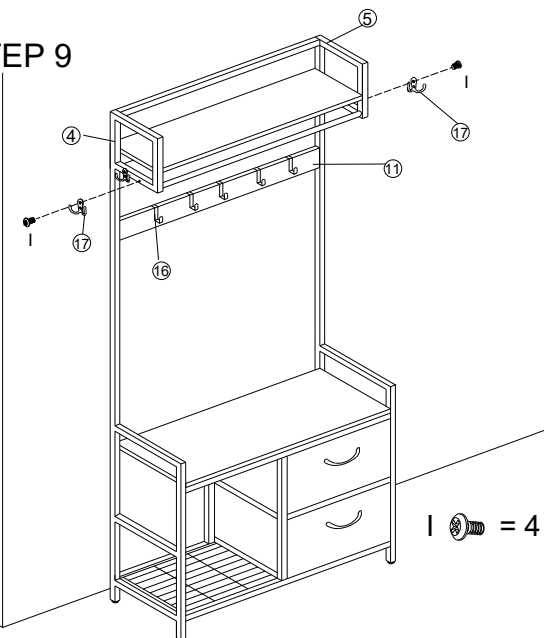

Use screw I to install NO. 17 onto NO. 4 and NO. 5. Then place NO. 16 onto board 11.

STEP 10

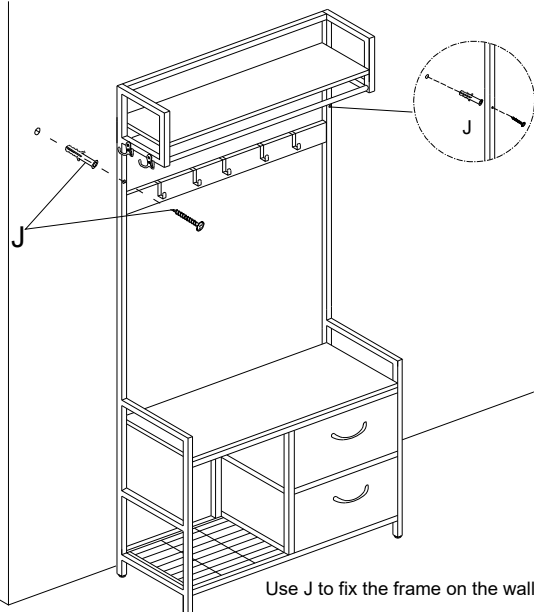

Use J to fix the frame on the wall.