



ASSEMBLY INSTRUCTIONS

FULL SIZE - MONTESORI HOUSE BED WITH FENCE

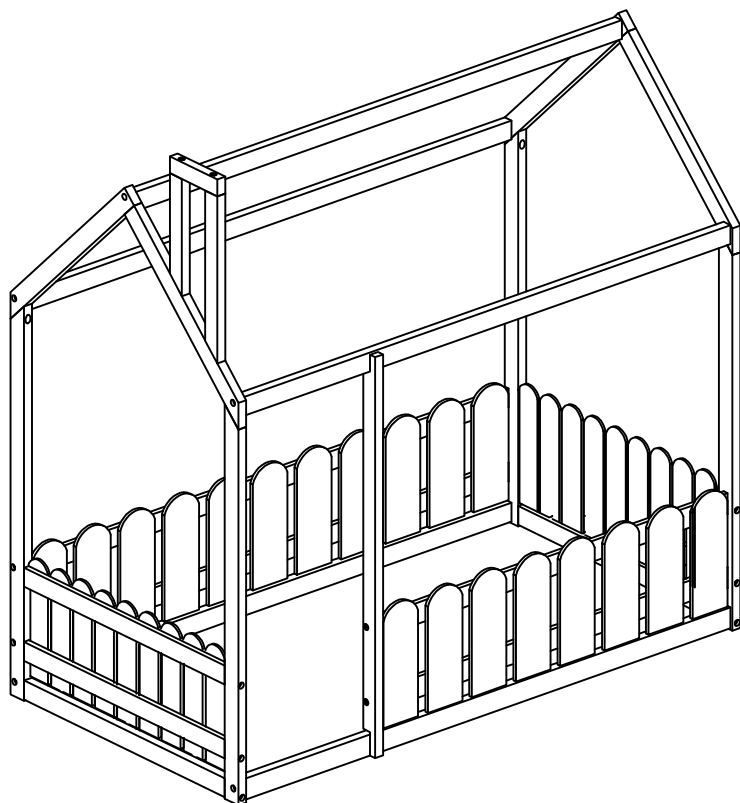














1

Detail View

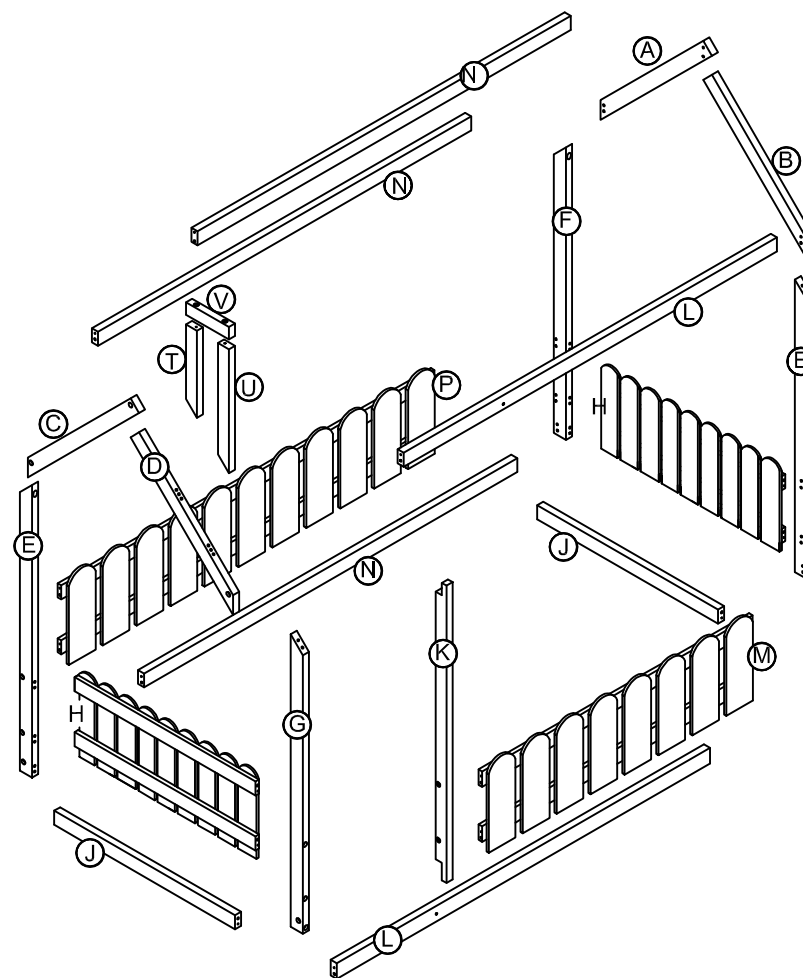


2


Part List

A 	B 	C 
Cap for upper HB-1pc	Cap for lower HB-1pc	Cap for upper FB-1pc
D 	E 	F 
Cap for lower FB-1pc	Upper leg HB (L/R)-2pcs	Upper leg FB -1pc
G 	H 	J 
Upper leg FB -1pc	Horizontal barHB&FB-2pcs	Horizontal barHB&FB-2pcs
K 	L 	M 
Center upper leg -1pc	Front guard rails 2pc	Front side panels - 1pc
N 	P 	T 
Back guard rails -3pc	Back side panels - 1pc	Guard rail top 1pc
U 	V 	
Guard rail top 1pc	Guard rail top 1pc	

Hardware List

1  Ø10*30mm Wood dowel (42pcs)	2  Ø1/4" x 80 mm Wood Screws (4pcs)	3  Ø1/4" x 70 mm Wood Screws (18pcs)
4  Ø1/4" x 100 mm Wood Screws (14pcs)	5  Ø1/4" x 30 mm Wood Screws (2pcs)	6  (1/4")4.5*58mm Allen Key (1pc)
7  Ø1/4" x 50 mm Wood Screws (4pcs)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

01	02
	
4PCS	2PCS

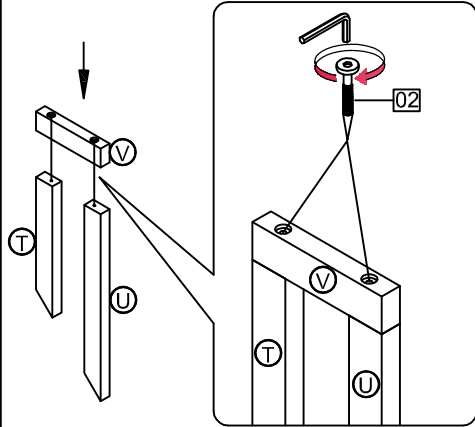


STEP 2:

01	02
	
4PCS	2PCS

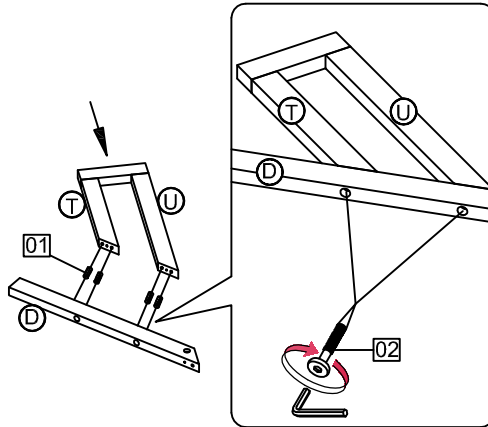


STEP 3:

01	04
	
6PCS	6PCS

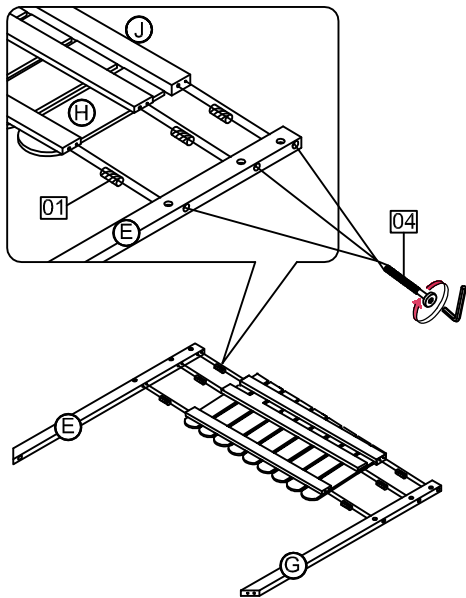

STEP 4:


01	07	04
		
2PCS	2PCS	1PC

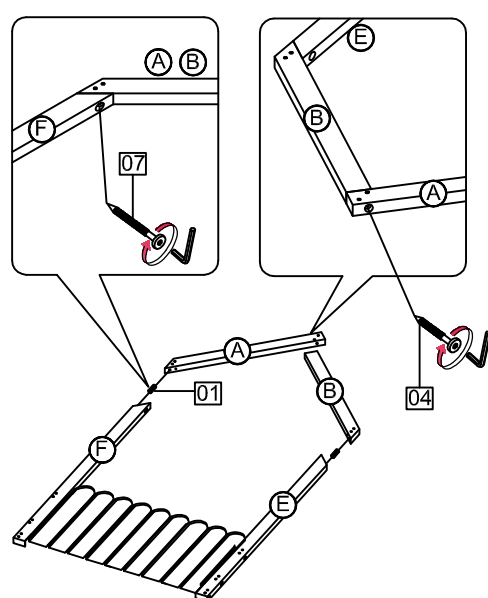

5


STEP 5:

01	04
	
6PCS	6PCS

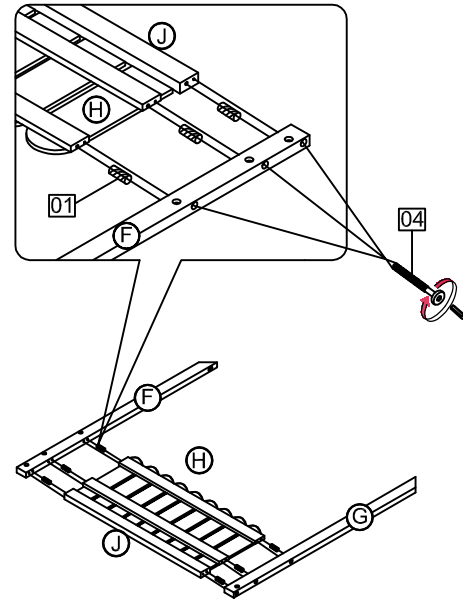

STEP 6:


01	07	04
		
2PCS	2PCS	1PC

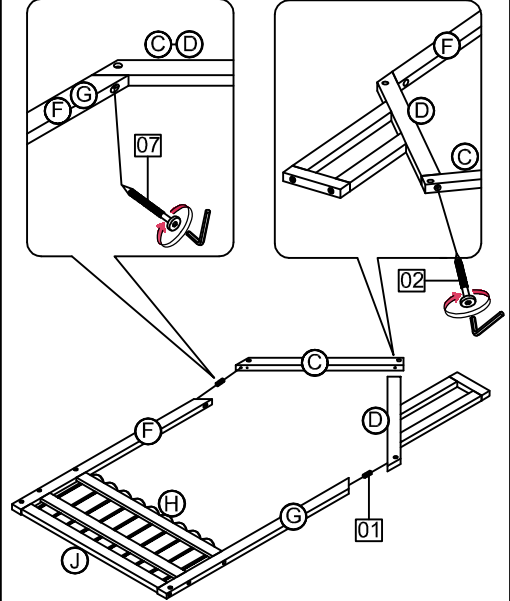

STEP 7:


01

14PCS

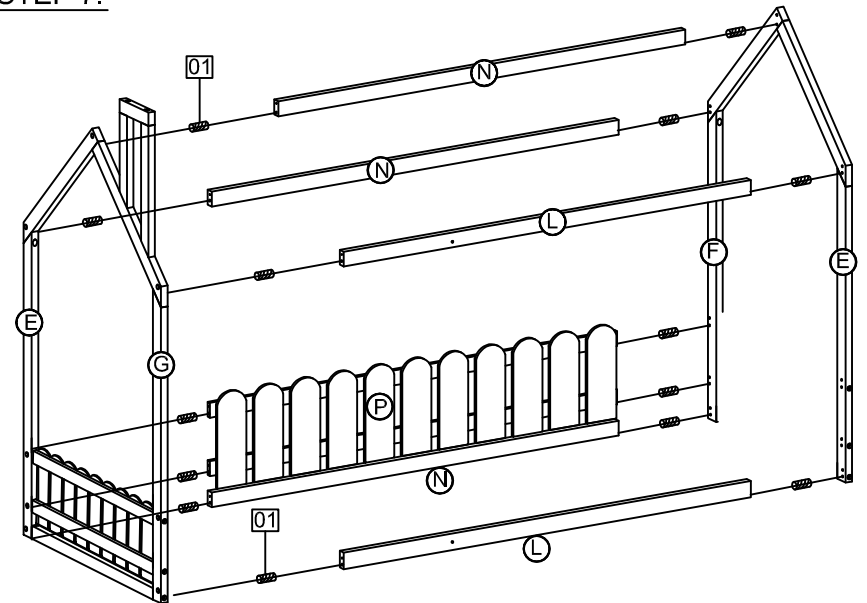


6


STEP 8:

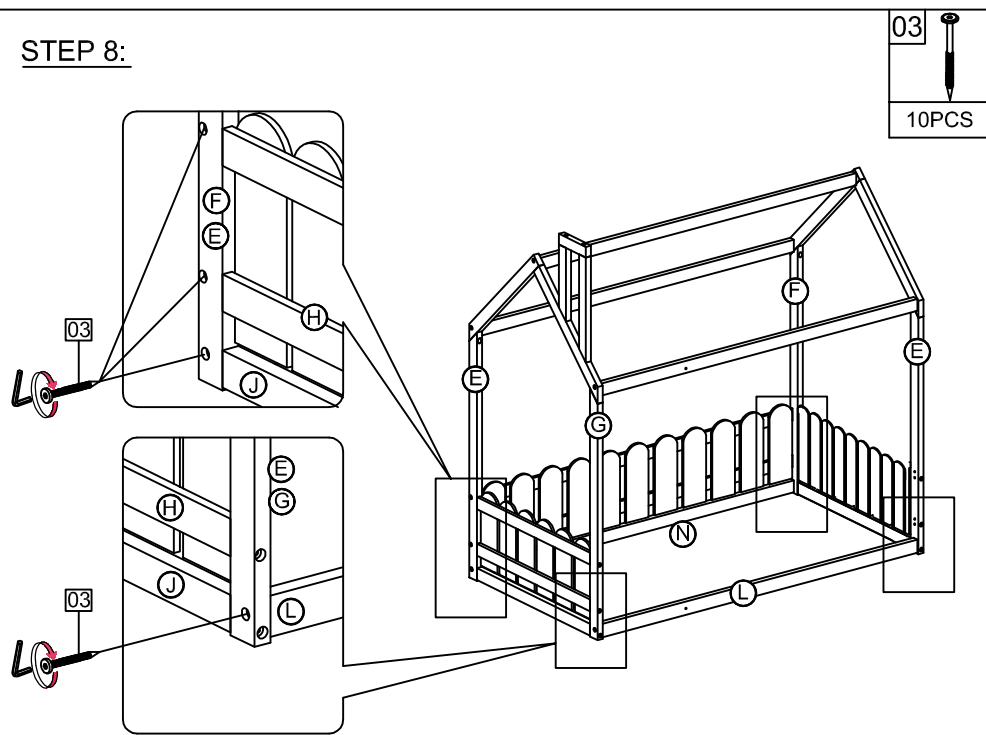


STEP 9:

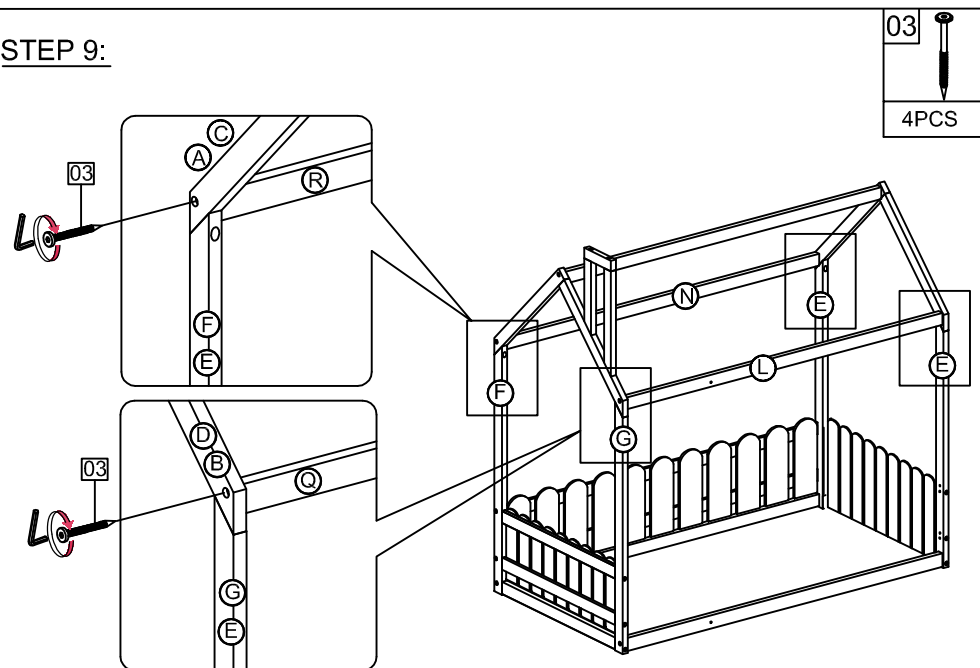

STEP 10:





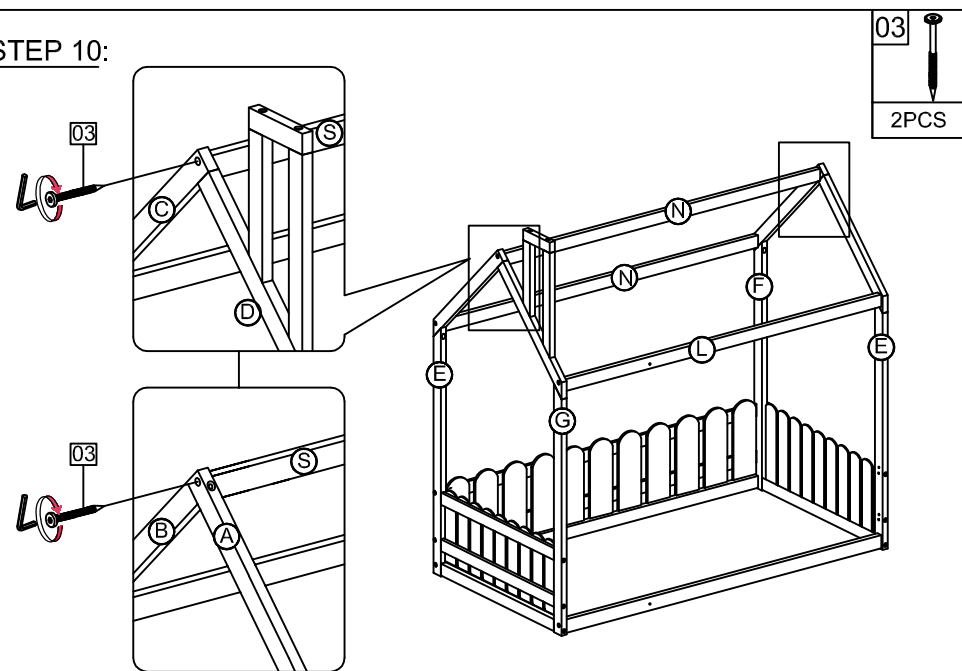


STEP 11:

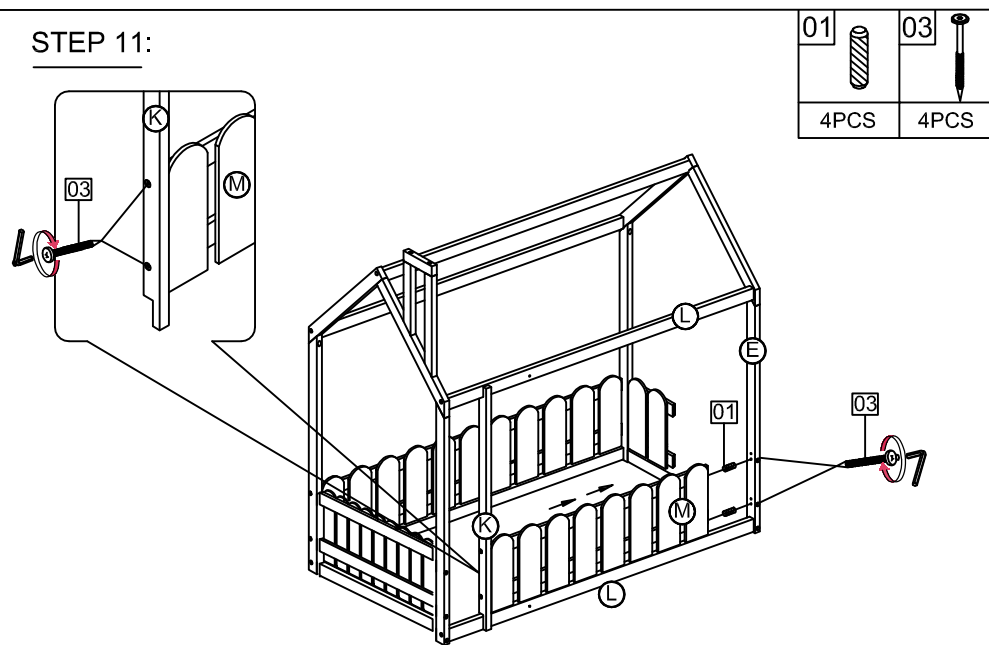

STEP 12:

05
2PCS

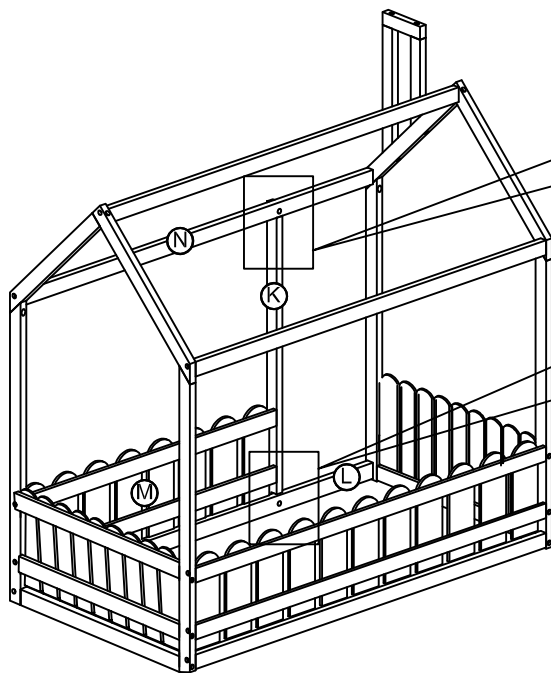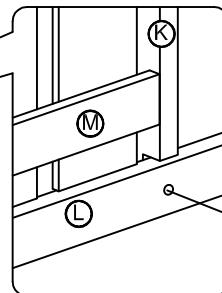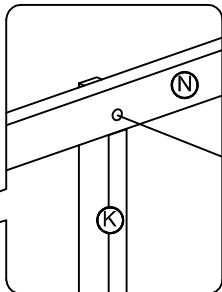

COMPLETED

