

Instruction Sheet for Modular Group

1. Ensure a suitable location has been selected for your modular sectional before assembly.
2. Wooden legs and U Clips are located inside the zippered compartment in the black dust cover under the modular frame.
3. Attach the wooden legs to the corresponding pre-drilled holes by hand turning clockwise until tight. (see Figure 1)
4. If required, plastic U clips are included for connecting pieces together to prevent movement. The U Clips are installed into base and hold pieces in place (see Figure 2)
5. First, connect U Clips to RAF sectional. Second, connect U Clips to LAF sectional. Last, use block to raise the corner and sectional pieces (see Figure 3), then you can use U Clips to connect the corner with sectional pieces by hand.
6. Use a wood block the size of 10 x 3 x 2. Do not use wood block larger than size recommended.
7. The ottoman does not include U Clips to enable it to be easily repositioned.
8. Your modular sectional is now ready for use!

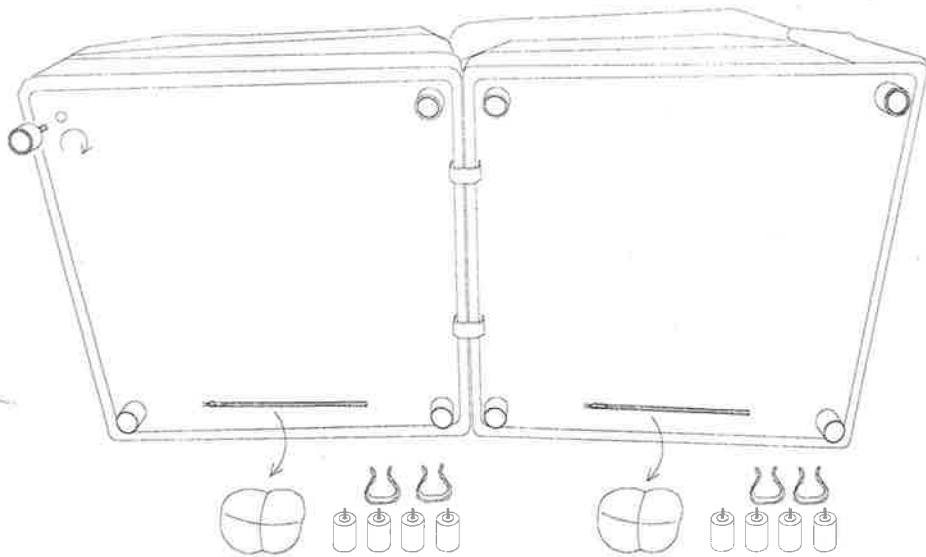


Figure 1


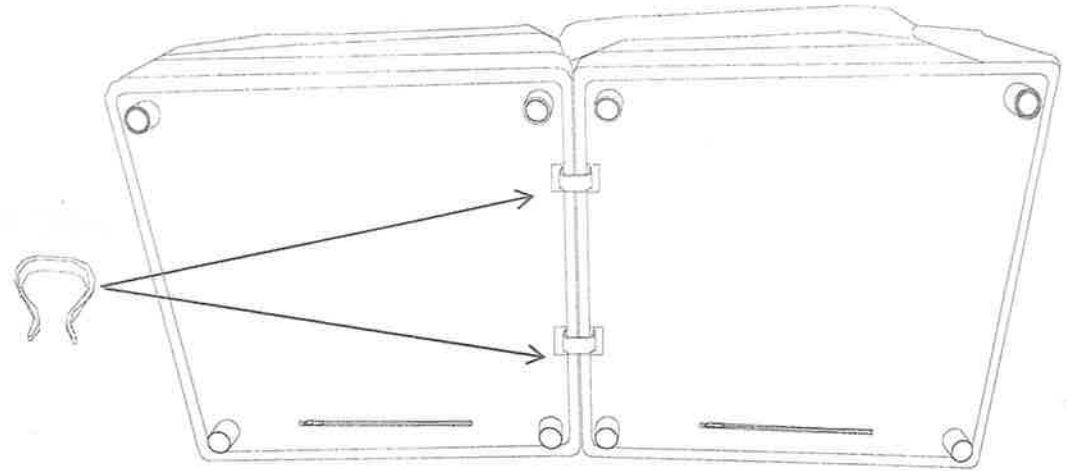


Figure 2


Step 1

RAF Sectional

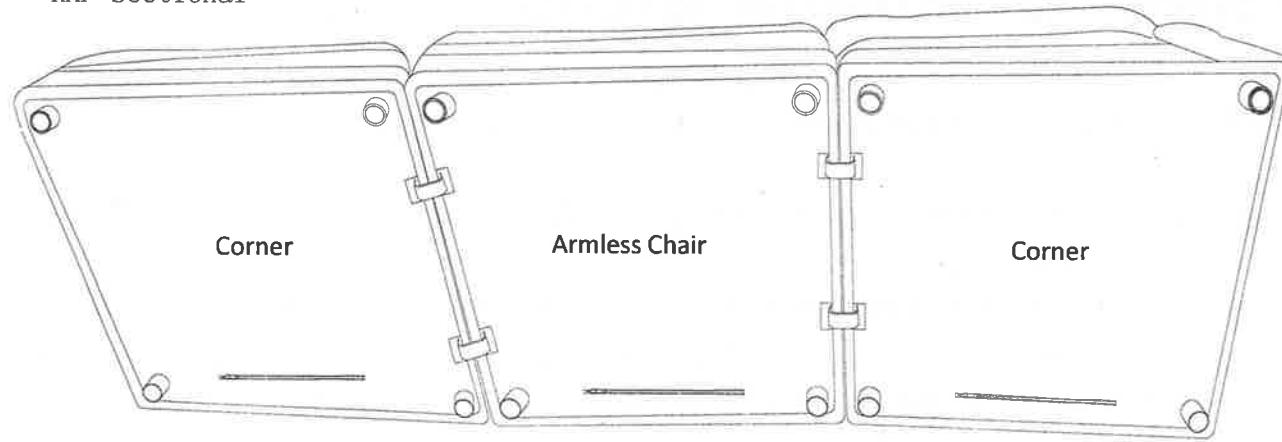

Step 2

LAF Sectional

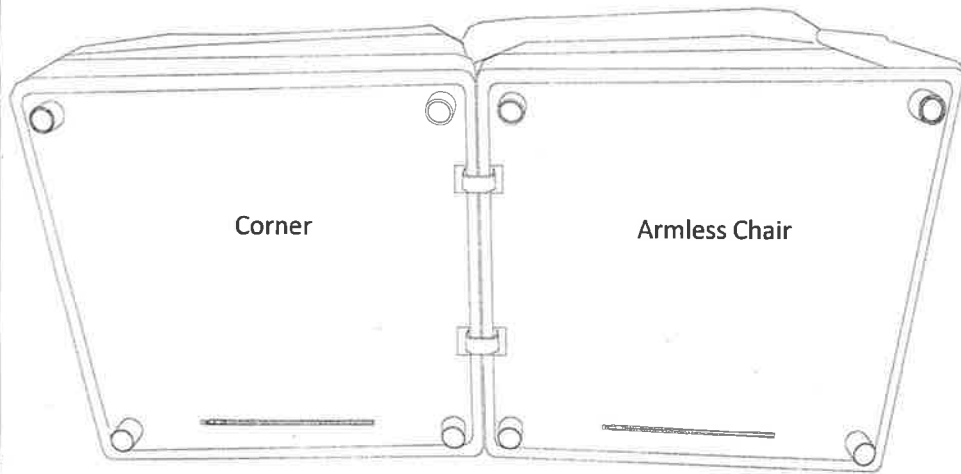

Step 3

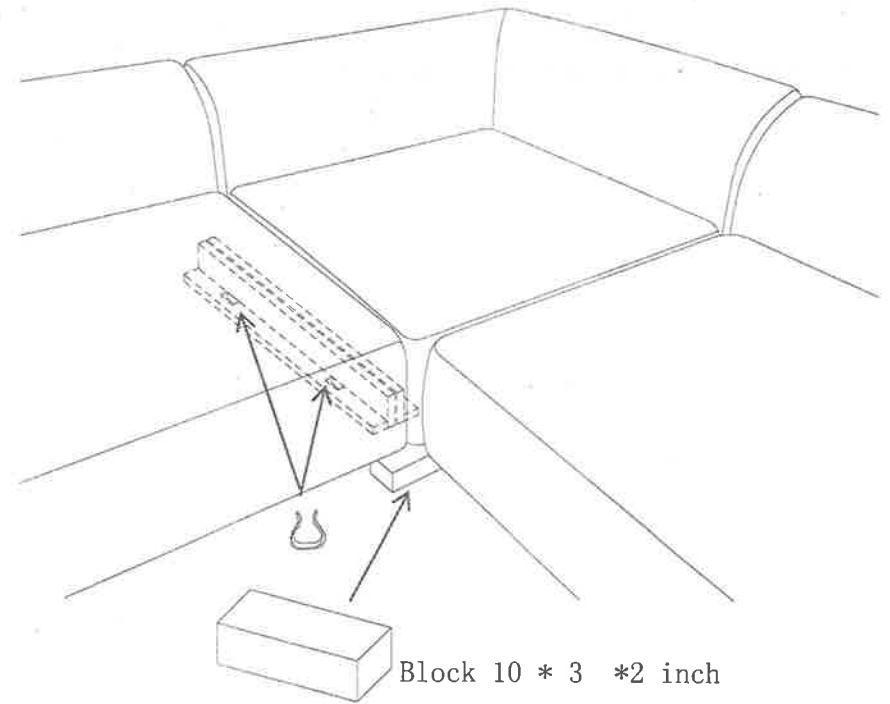


Figure 3