






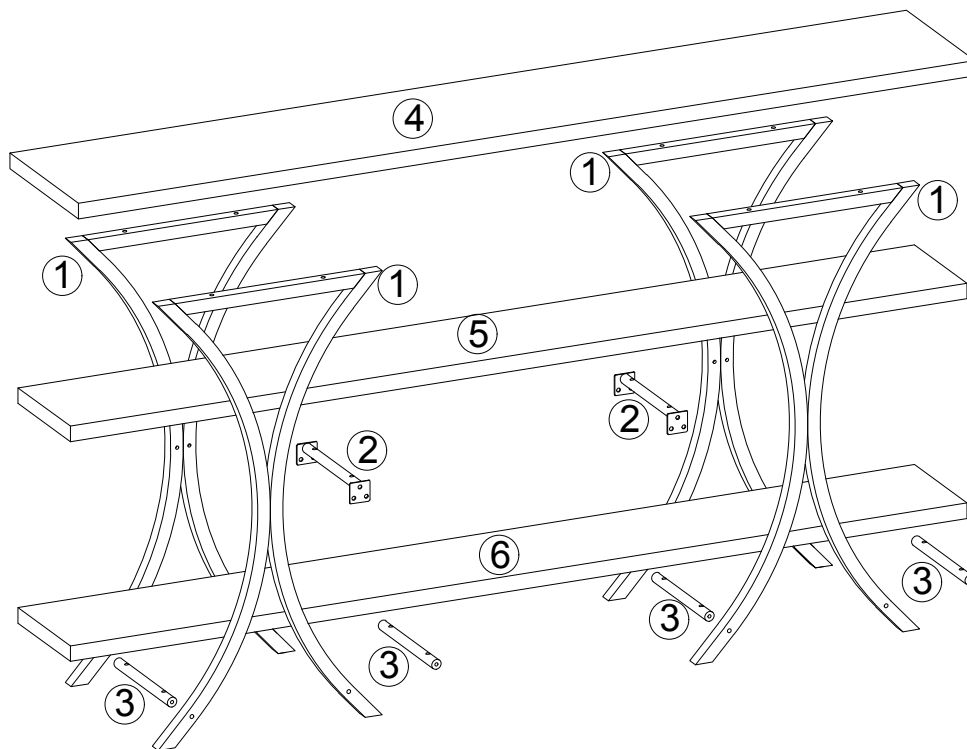

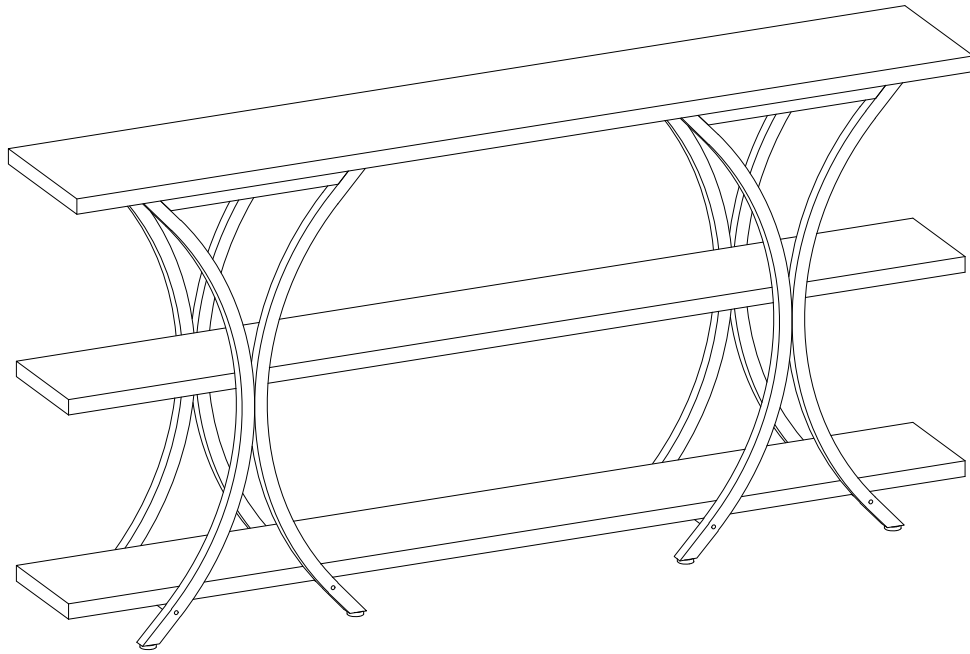


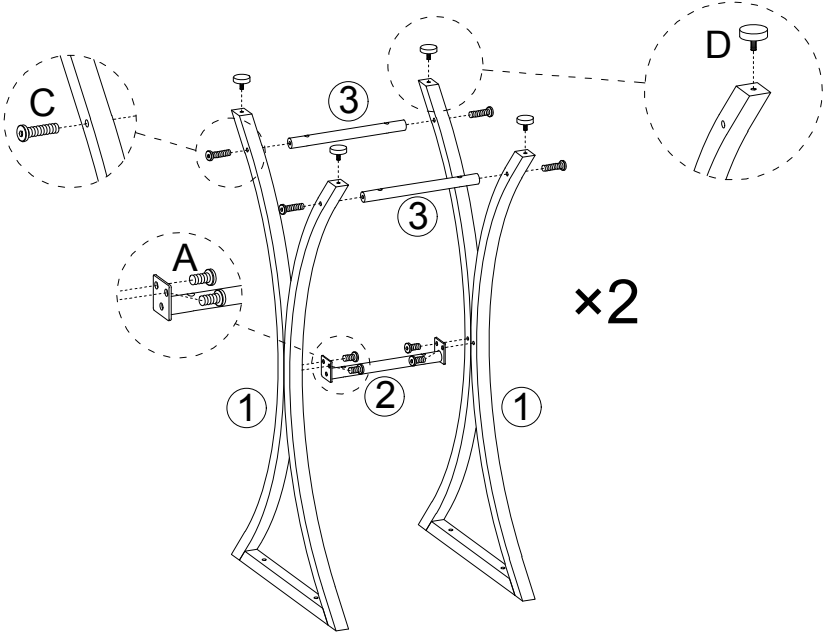
Installation Instructions




Notes: Don't tighten screws completely at first, just in case parts were assembled wrong and need disassemble. Tighten screws at last when all parts are put together.




 M6×12mm	 M6×30mm	 M6×35mm					
A×8pcs+1pc	B×12pcs+1pc	C×16pcs+1pc	D×8pcs	E×2pcs	F×2pcs	G×2pcs	H×1pc


STEP 1




 M6×12mm	 M6×35mm	
Ⓐ×8pcs	Ⓒ×8pcs	Ⓓ×8pcs

STEP 2

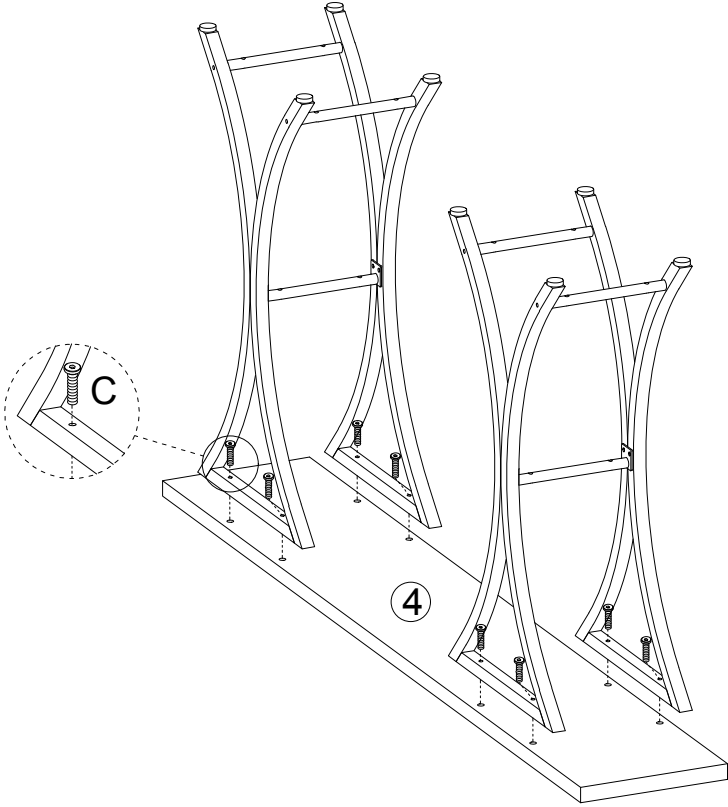

 M6×35mm
Ⓒ×8pcs


STEP 3

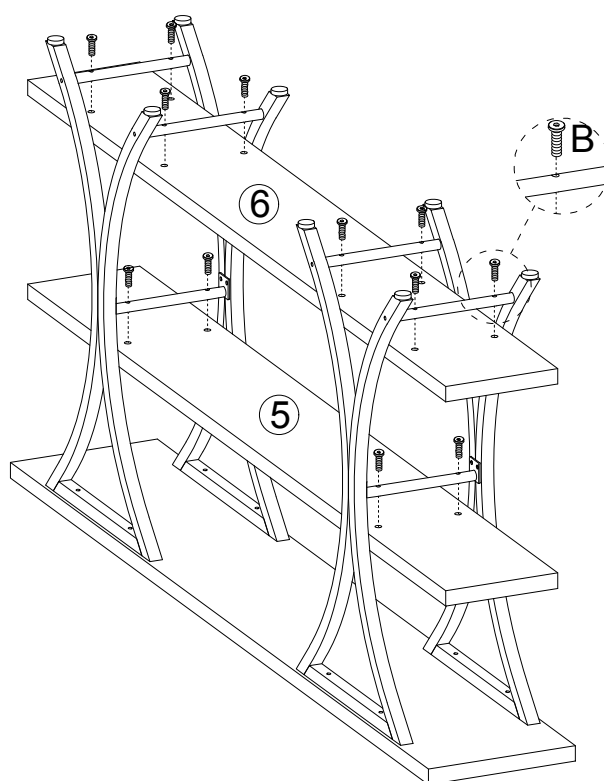

M6×30mm

Ⓑ×12pcs

STEP 4

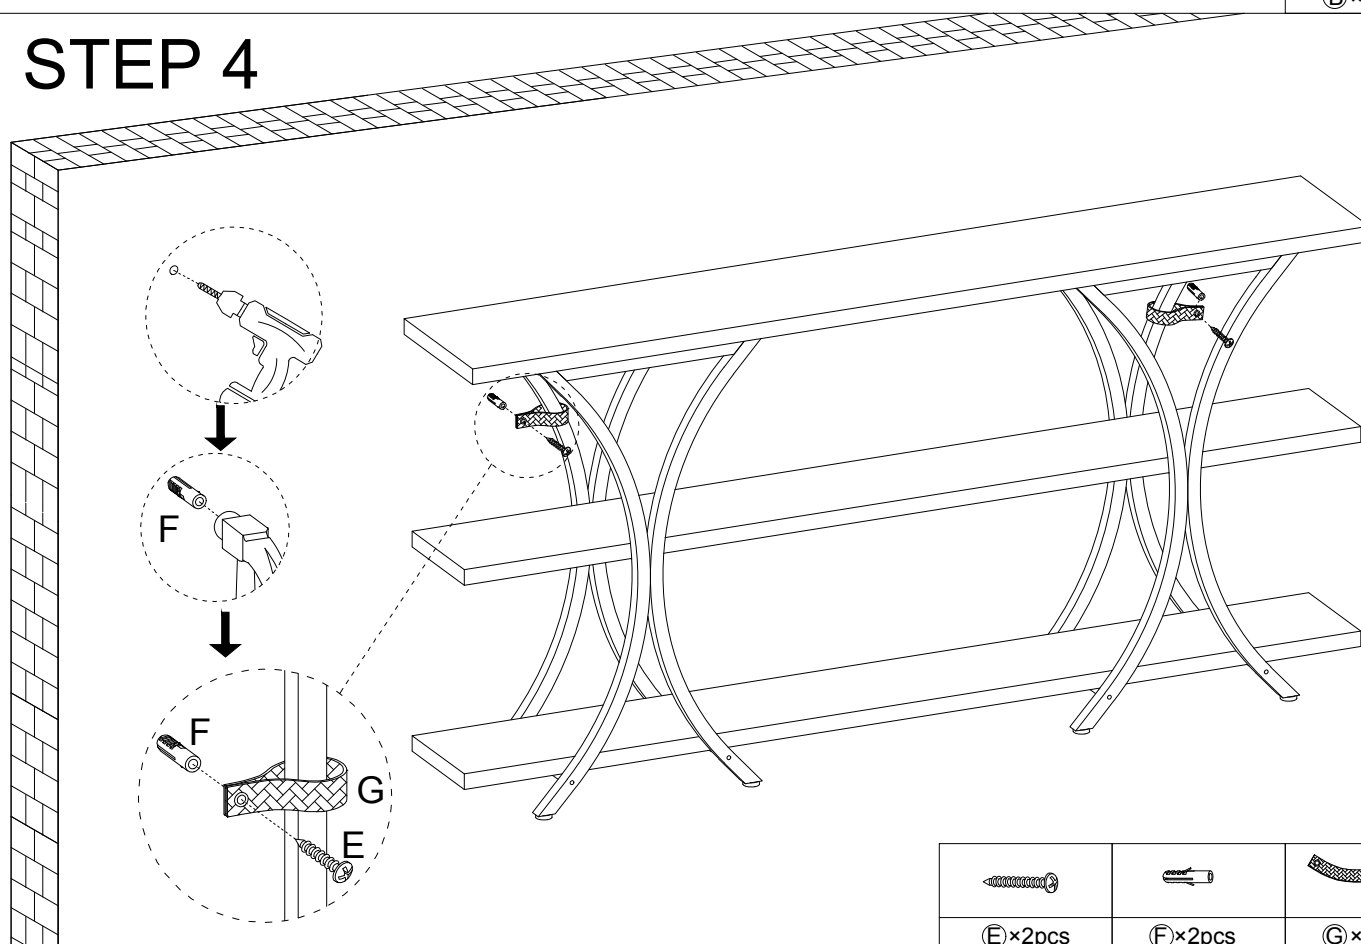

Ⓔ×2pcs



Ⓕ×2pcs



Ⓖ×2pcs

We genuinely appreciate your purchase of our product. Any problem (installation or damage caused by shipping), please feel free to contact us. Our customer service will help to solve the problem for your ASAP, as your satisfaction is our final goal.

www.tribesigns.com

E-mail: support@tribesigns.com