


ASSEMBLY INSTRUCTION

QUEEN BED


W2582P185359 W2582P185361
W2582P185356 W2582P185358
W2582P185363 W2582P185365

FULL BED

W2582P185371 W2582P185372
W2582P185373 W2582P185374
W2582P185378 W2582P185382

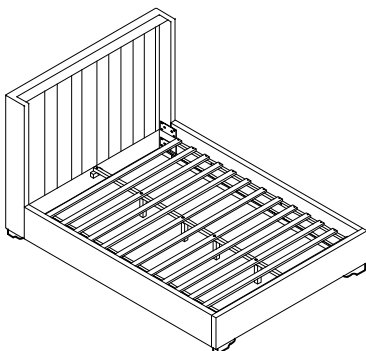


Part list

W2582P185359 W2582P185371 W2582P185356 W2582P185373 W2582P185363 W2582P185378			
No.	Parts	Description	QTY
A		Headboard	1
W2582P185361 W2582P185372 W2582P185358 W2582P185374 W2582P185365 W2582P185382			
B		Footboard	1
C		Side Rail	2
D		Wood strip for Side rail	2
E		Slats	13
F		Center support rails	1
G		Wood Block on Headboard & Footboard	2
H		Center leg	4

Hardware

W2582P185361 W2582P185372 W2582P185358 W2582P185374 W2582P185365 W2582P185382			
No.	Parts	Description	QTY
1		Bolt 5/16"×25mm	30
2		Flat Washer 5/16"	30
3		Lock washer 5/16"	48
4		Bolt 1/4"×60mm	18
5		Flat Washer 1/4"	18
6		Screw #8×30mm	28
7		Large L metal connector	2
8		Metal bracket	4
9		Allen Wrench	1

ASSEMBLY TOOLS REQUIRED(NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!

STEP 1:


Attach Large L metal connector (7) to Side rail (C), Footboard (B) with Bolt (1), Lock washer (3) and Flat washer (2) . Tighten with Allen Wrench (9).

Attach Metal Bracket (8) to side rail (C), Headboard(A) with Bolt (1), Lock washer (3) and Flat washer (2) . Tighten with Allen Wrench (9).

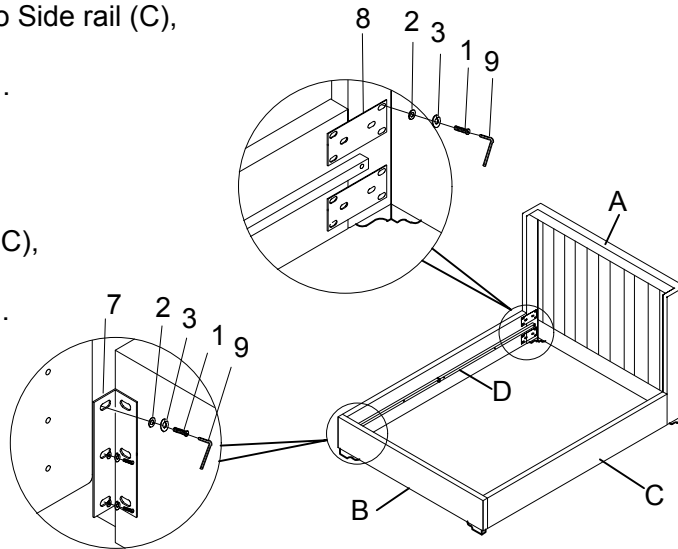


STEP 2:

Attach Wood strip for Side rail (D) to Side rail (C) with Bolt (4), Lock washer (3) and Flat washer (5) . Tighten with Allen Wrench (9).

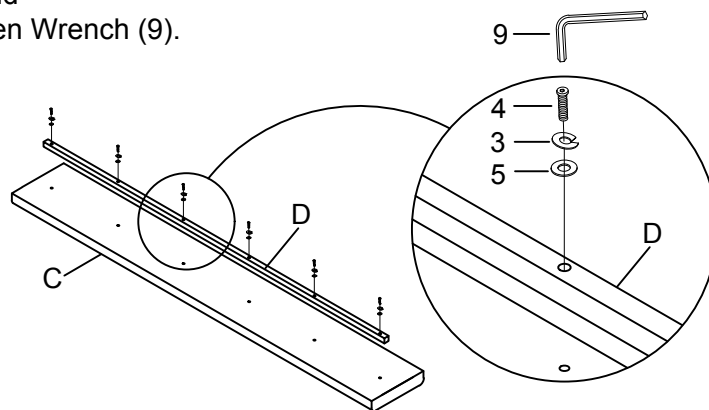


STEP 3:

Attach Wood Block on Headboard & Footboard (G) to Headboard (A) and Footboard (B) with Bolt (4), Lock washer (3) and Flat washer (5) Tighten with Allen Wrench (9).

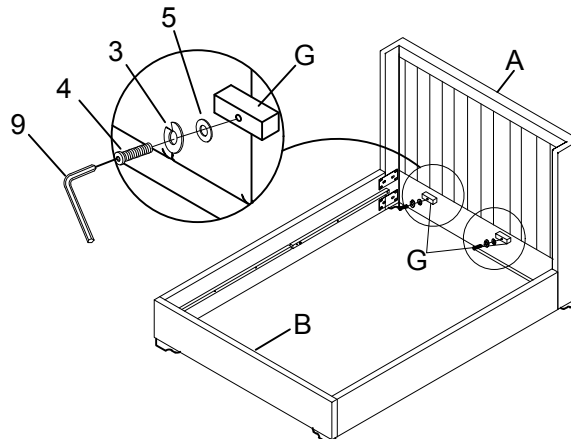


STEP 4:

Attach Center support rails (F) to Headboard (A) and Footboard (B) with Screw (6).

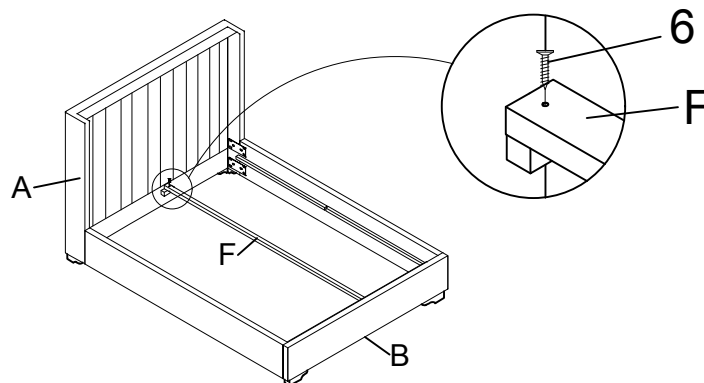

STEP 5:

Attach Center leg (H) to Center support rails (F) and Slats (E) with Bolt (4), Lock washer (3) and Flat washer (5). Tighten with Allen Wrench (9).

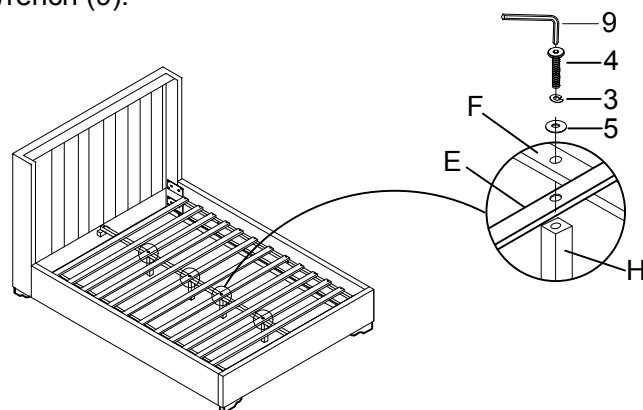

STEP 6:

Attach Slats (E) to Side rail (C) with Allen Screw (6).

