


TSP809-914#

Bathroom cabinet

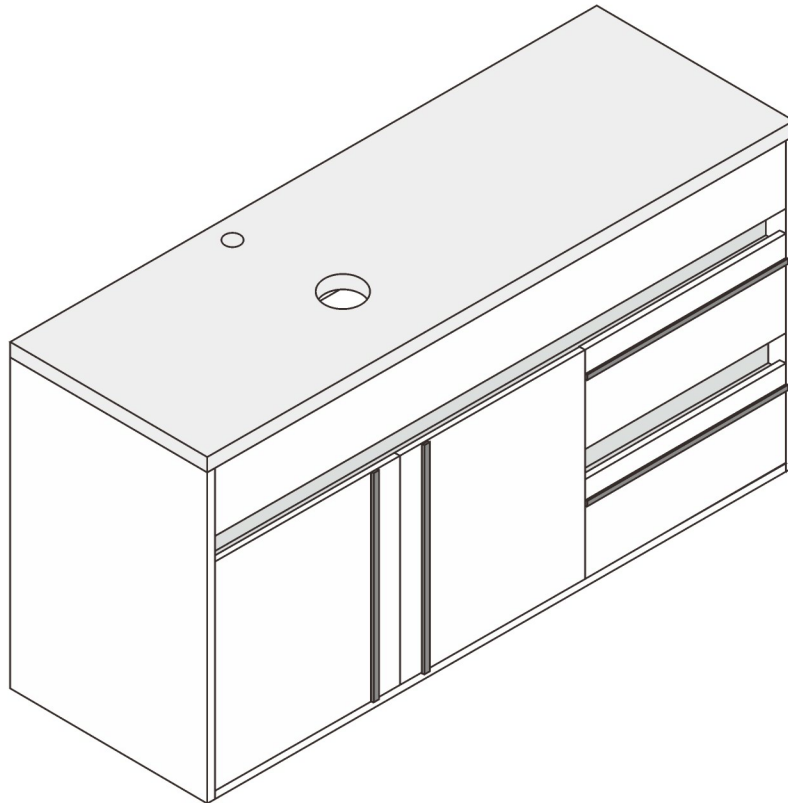


2 Persons


L900*W500*H500MM



Installation Instructions









Notes: Don't tighten screws completely at first, just in case parts were assembled wrongly and need disassemble. Tighten screws at last when all parts are put together.

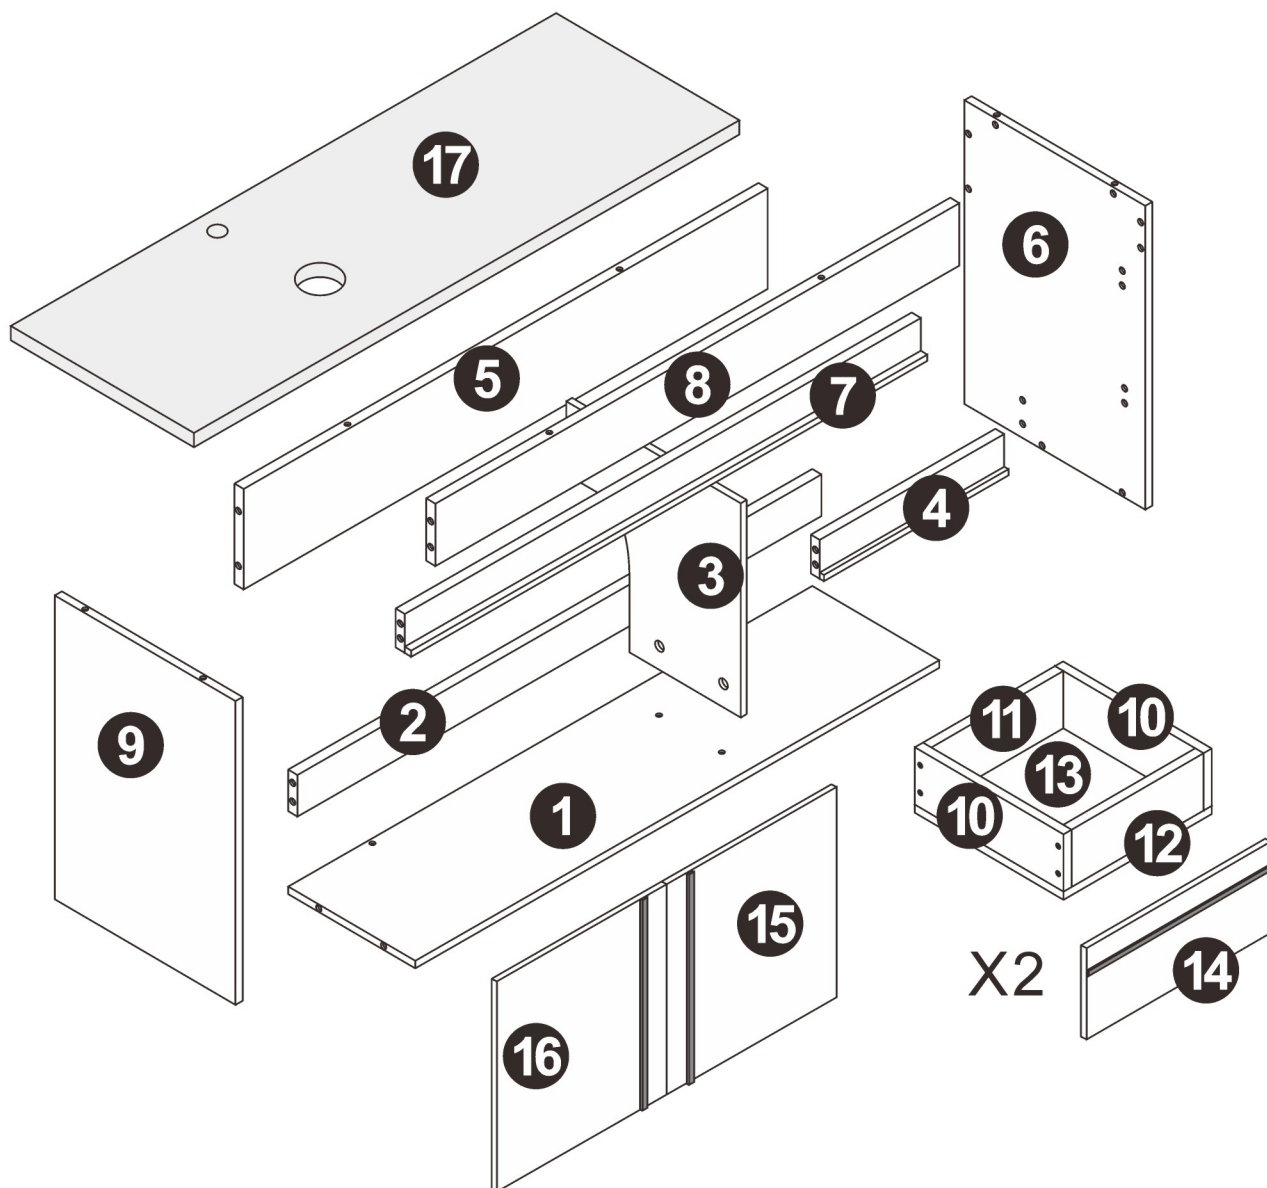


Disassembly and installation of accessories

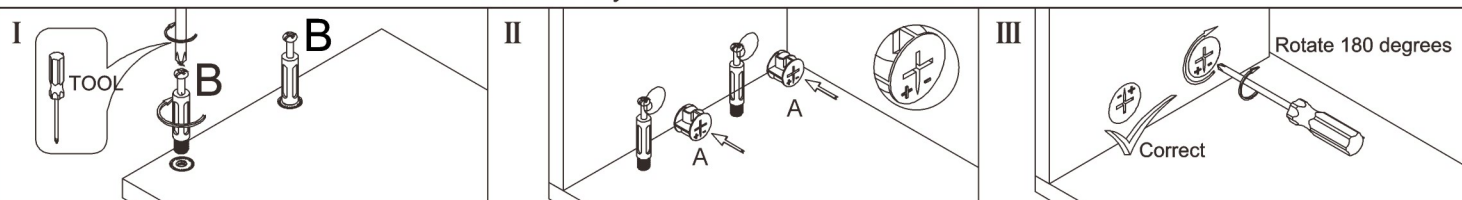

A 36PCS  15*10mm	B 36PCS  6*28mm	C 62PCS  3.5*14mm	D 4PCS  Three-section Rail	E 33PCS  3.5*35mm	F 8PCS  6*20	G 2PCS  Mid bend	H 2PCS  Middle bend
I 2PCS 	J 4PCS  6*60mm	M 2PCS 	N 2PCS 				

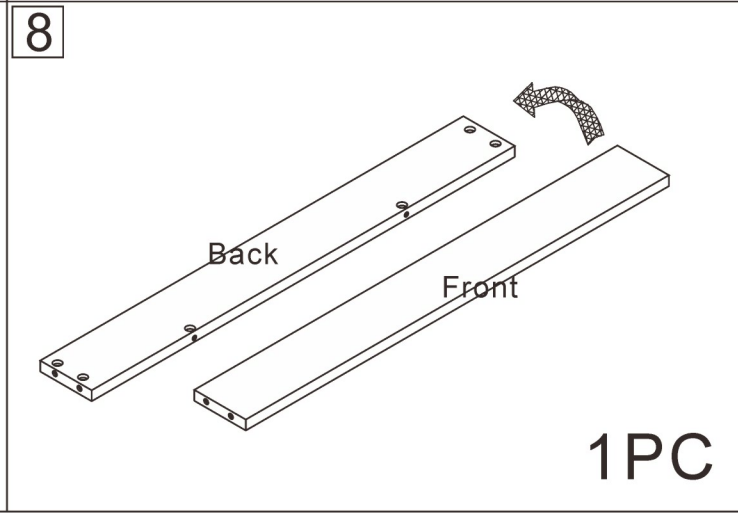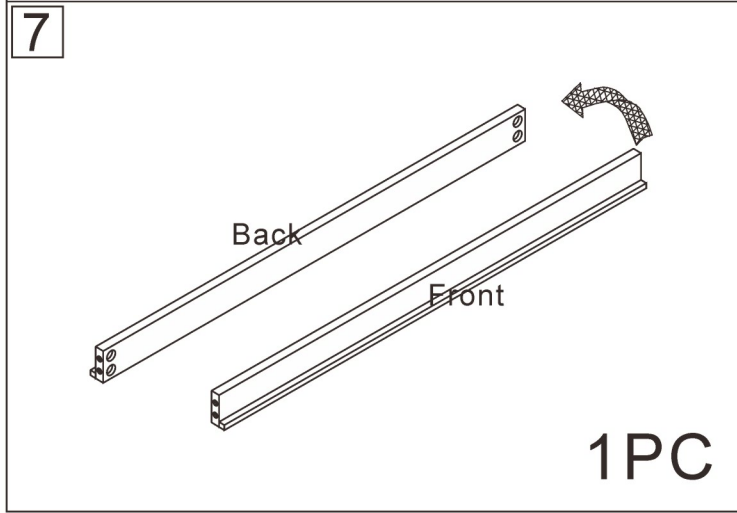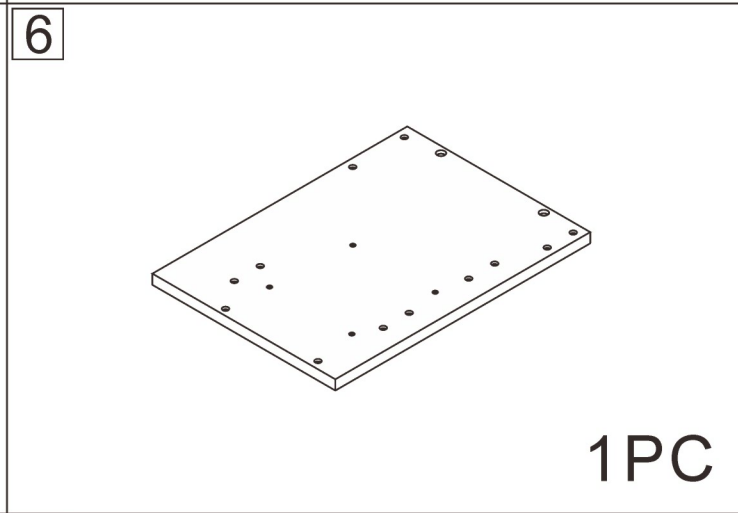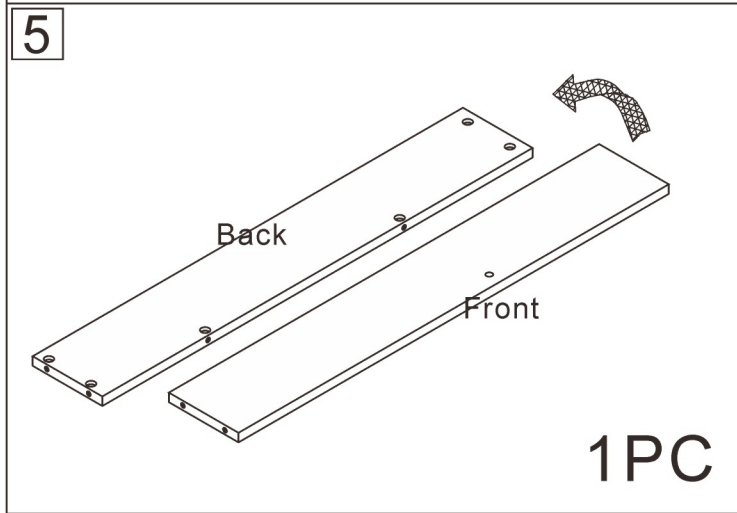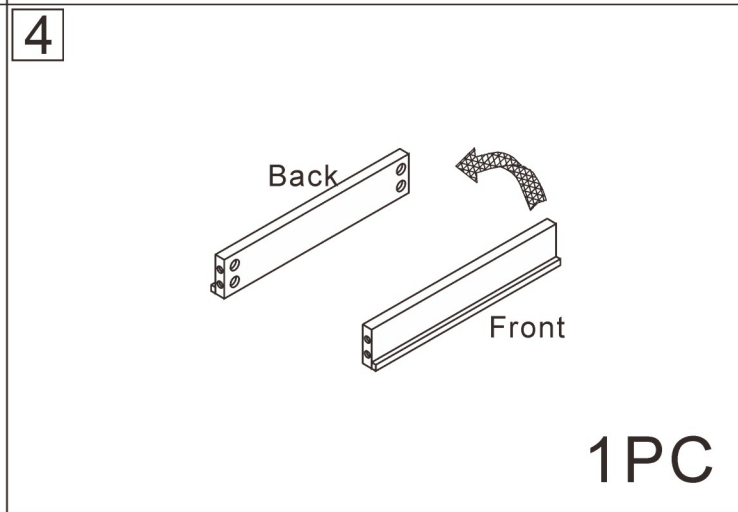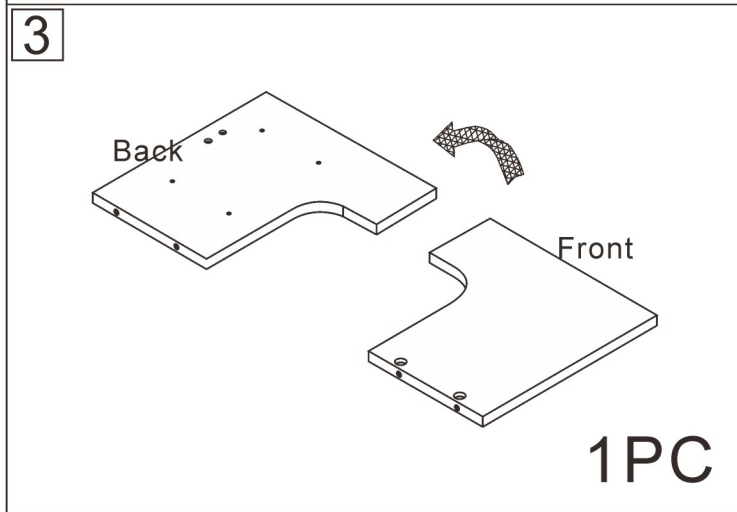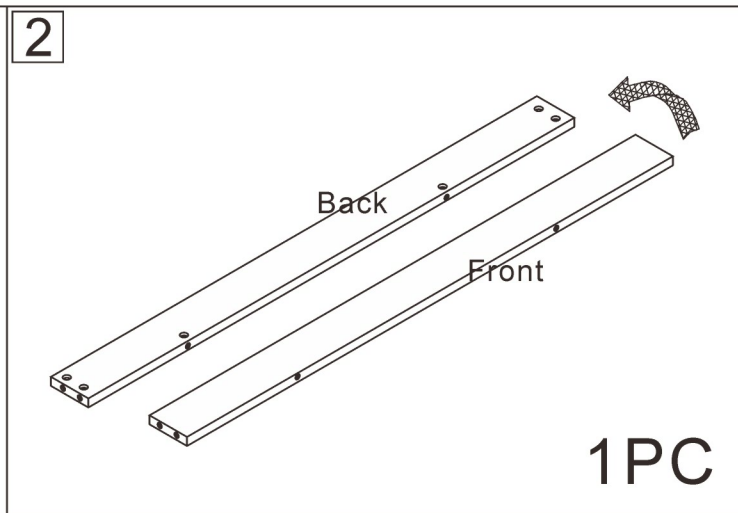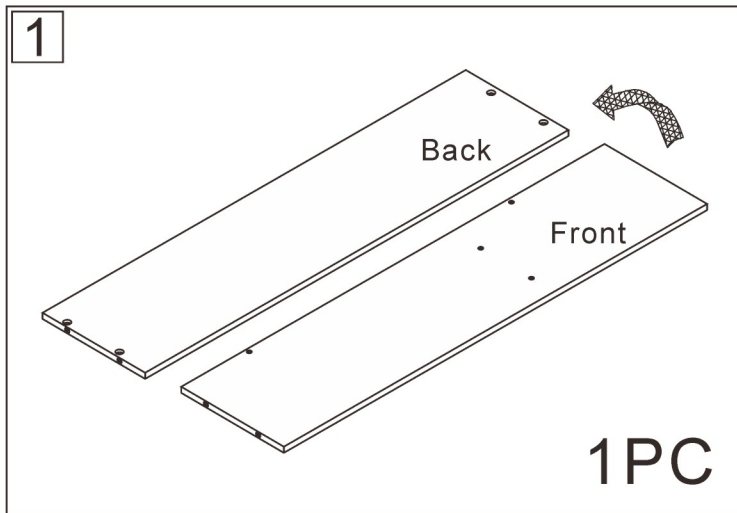


9

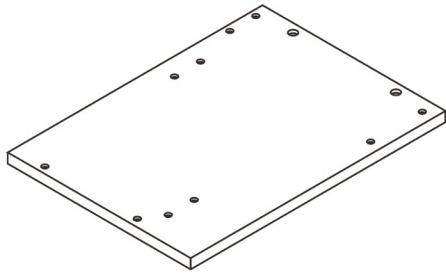


1PC

10

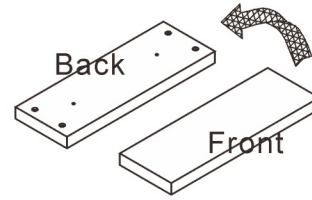


4PCS

11

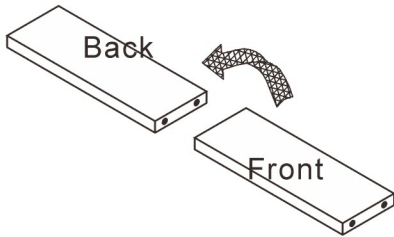


2PCS

12

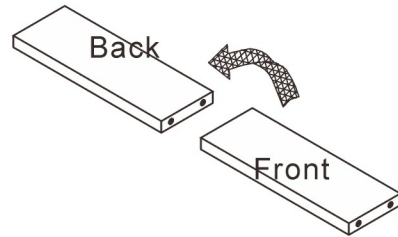


2PCS

13

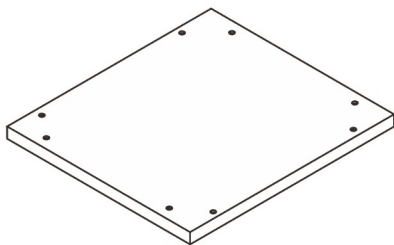


2PCS

14

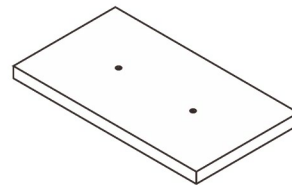


2PCS

15

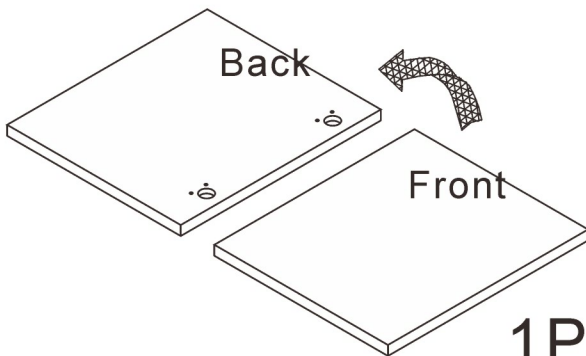


1PC

16

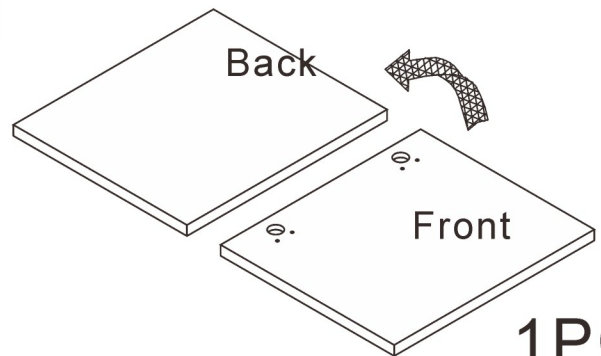

1PC






17

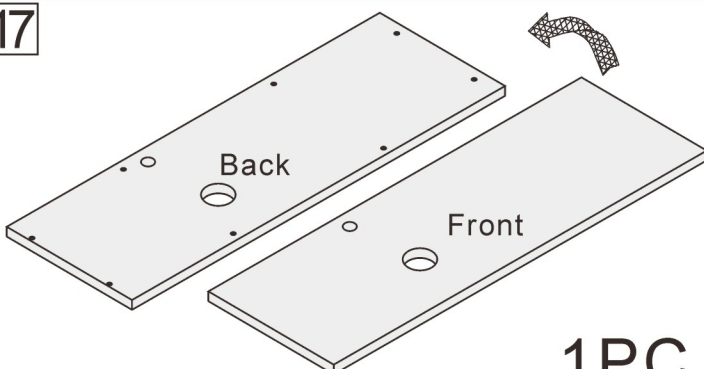

1PC

18

1

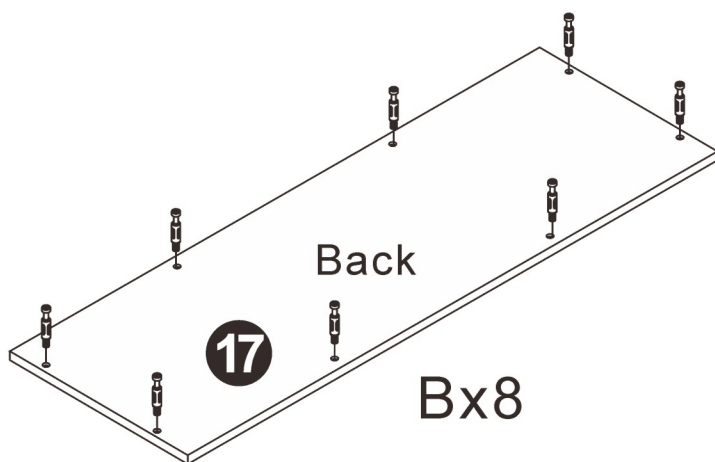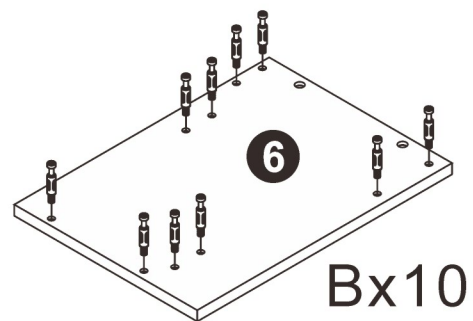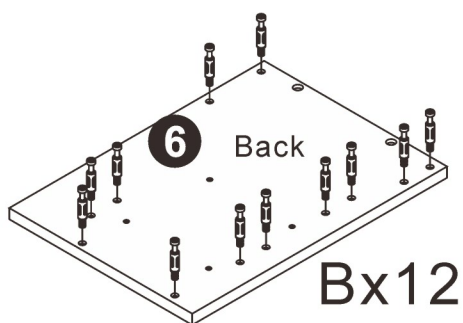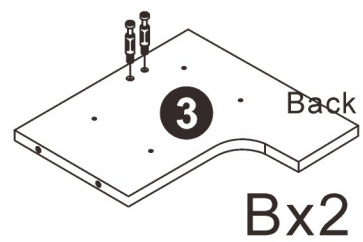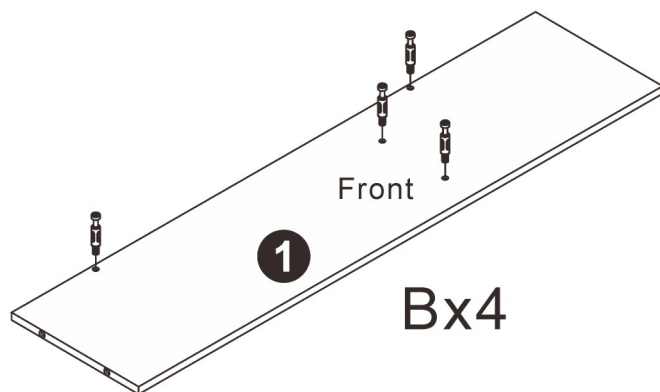


B 36PCS




6*28mm

2

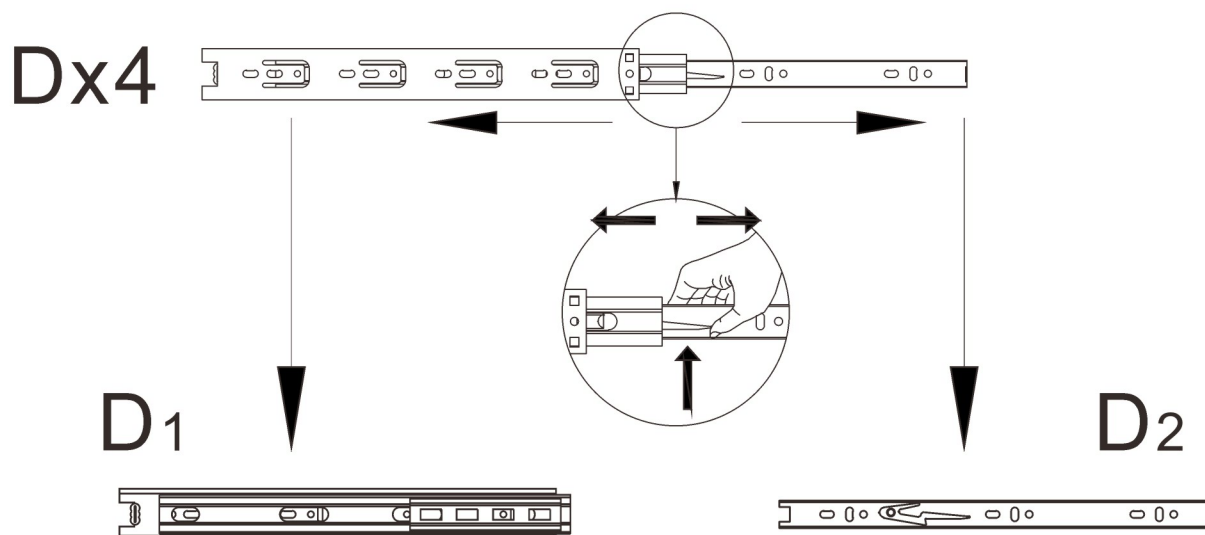

D ₁	4PCS
	
Three-section Rail	


3

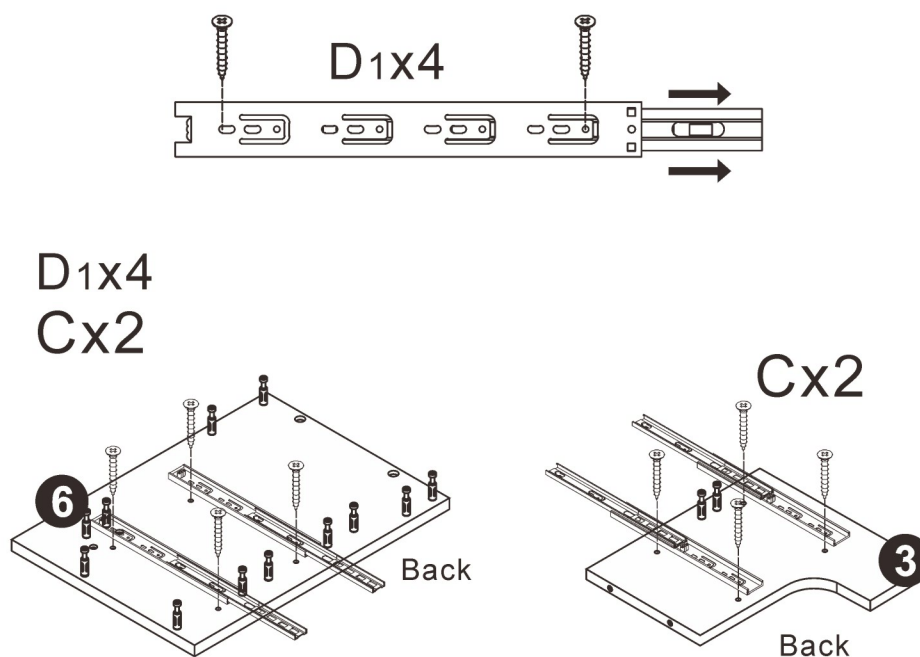

C	8PCS
	
3.5*14mm	


D ₁	4PCS
	
12 inch Three-section Rail	

4

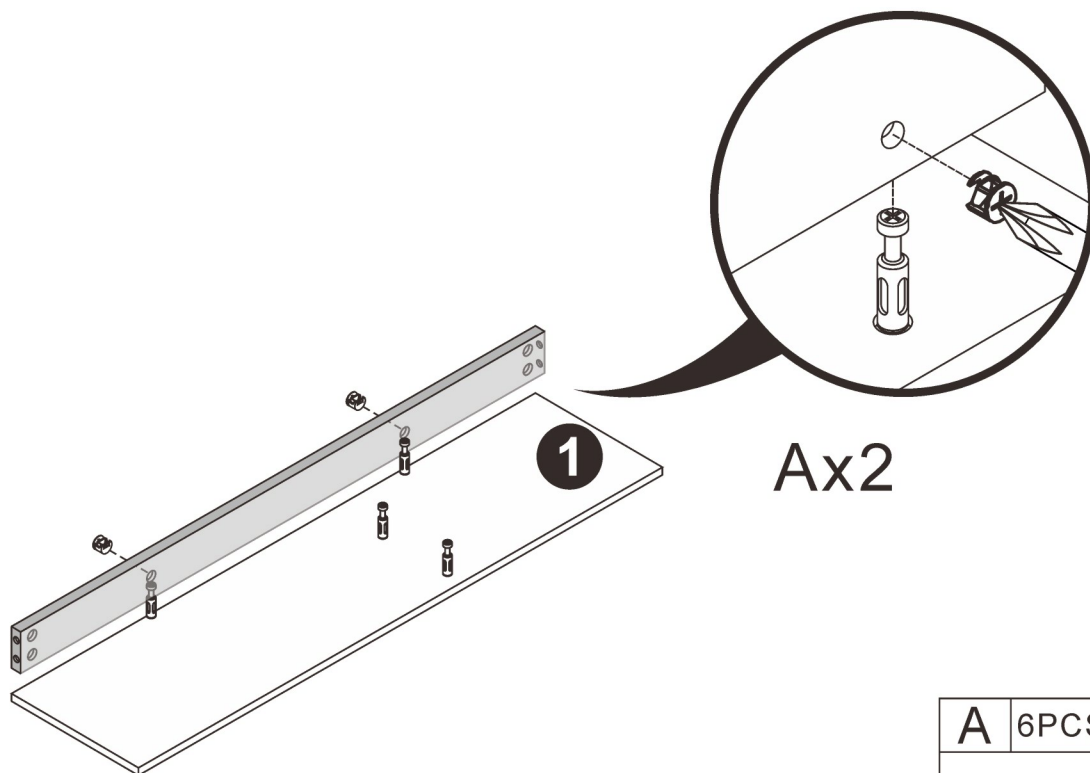


A	6PCS
	
15*10mm	

5

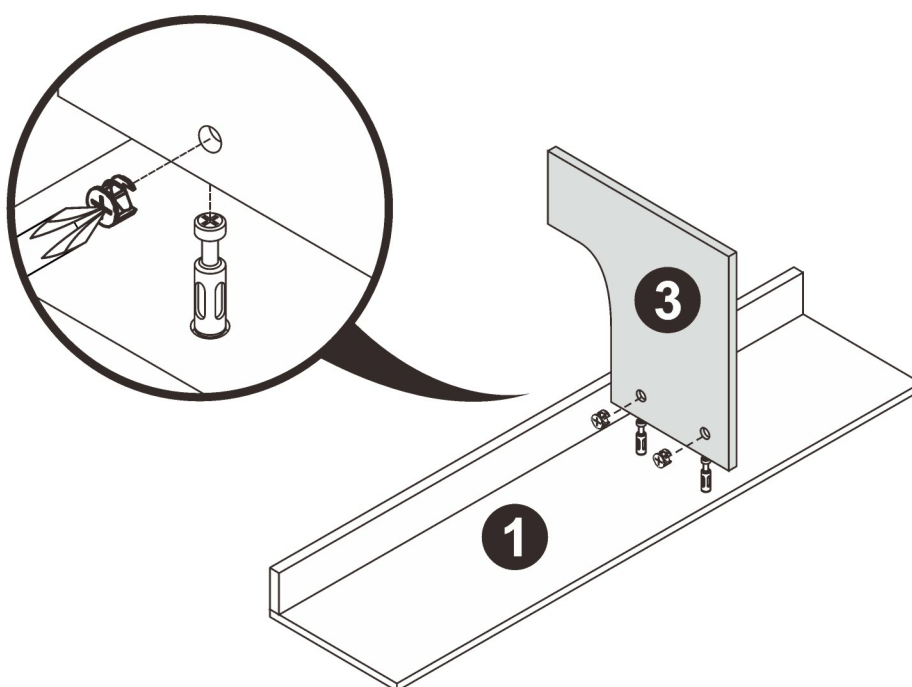


A	2PCS
	
15*10mm	

4

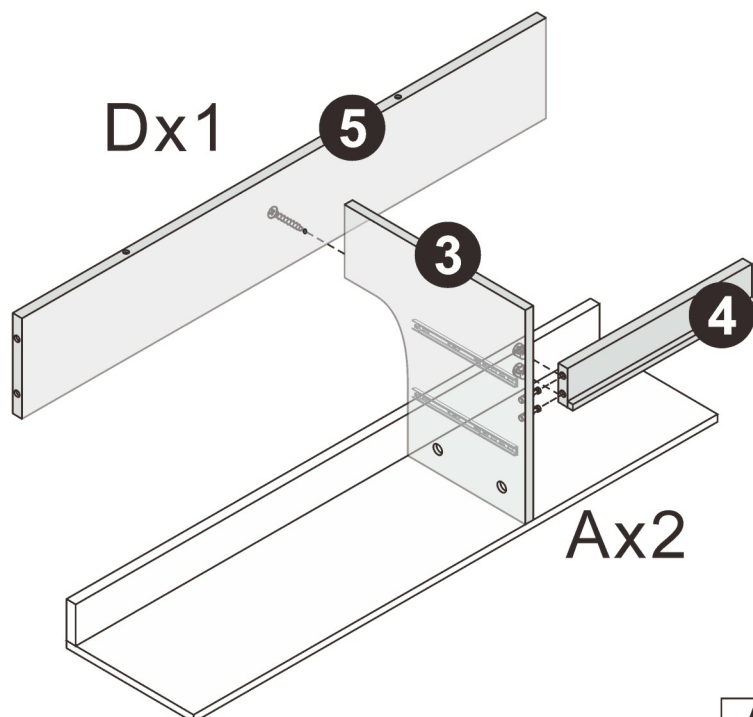


A	2PCS	E	1PCS
			
15*10mm		3.5*35mm	

5

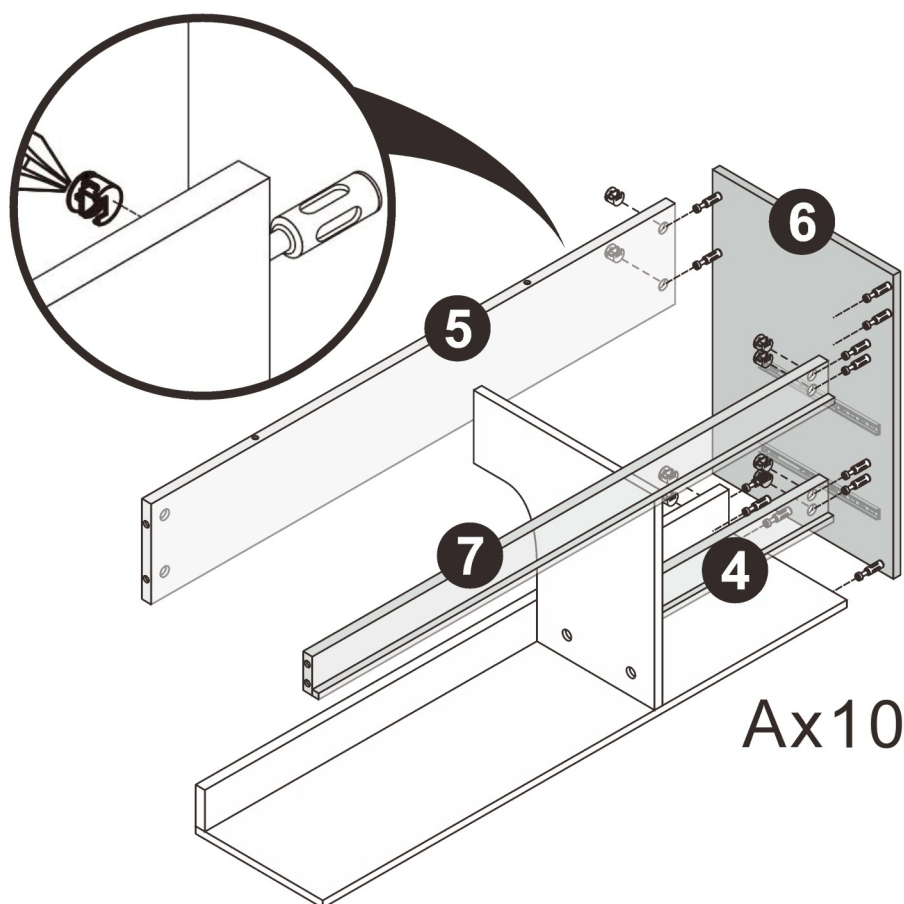

A	10PCS
	
15*10mm	

4

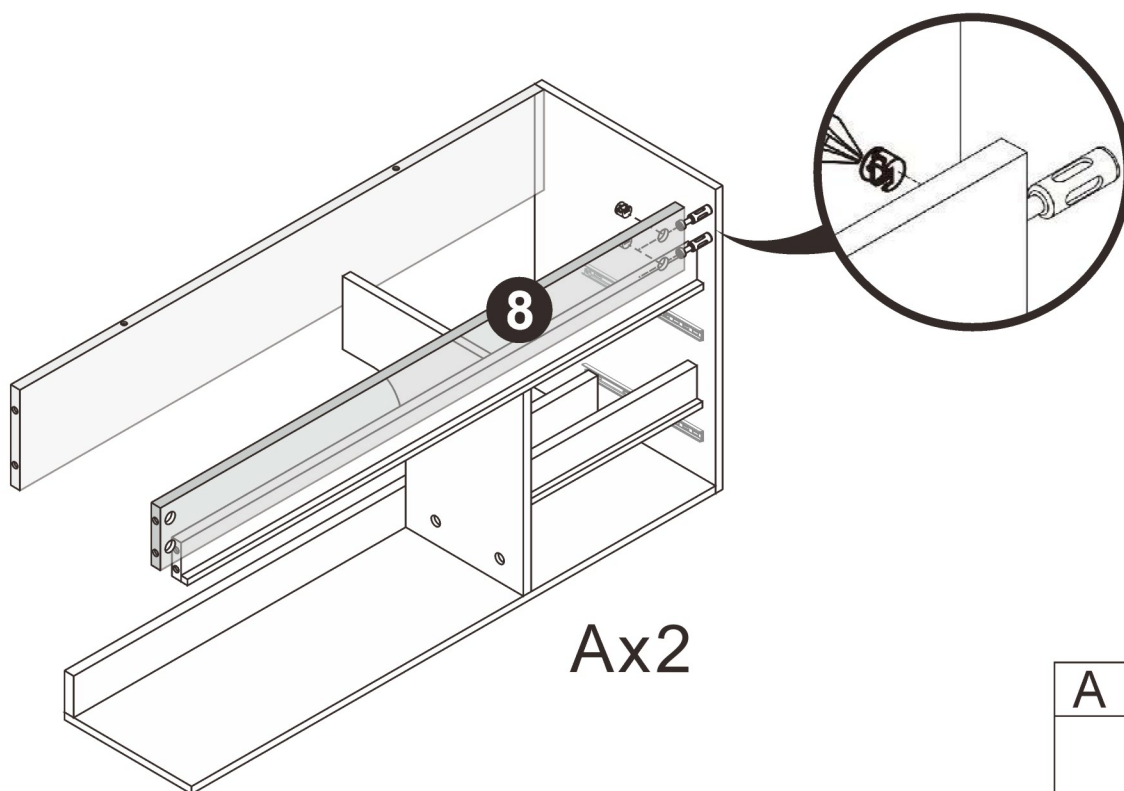


Ax2

A 2PCS



15*10mm

5

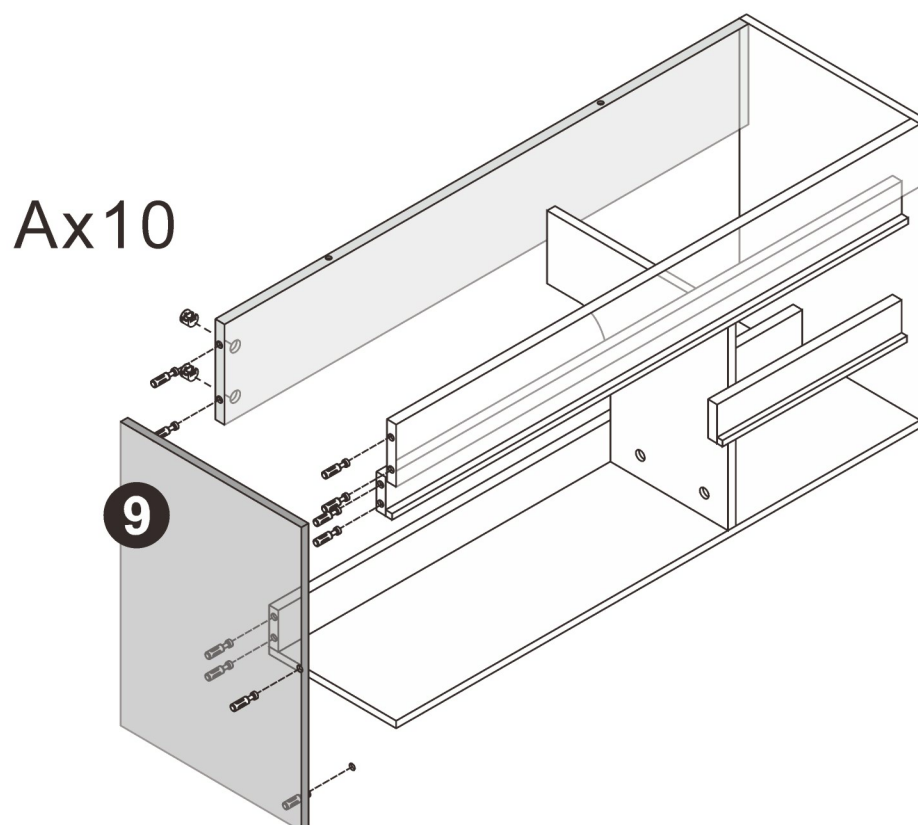


Ax10

A 10PCS





15*10mm

4

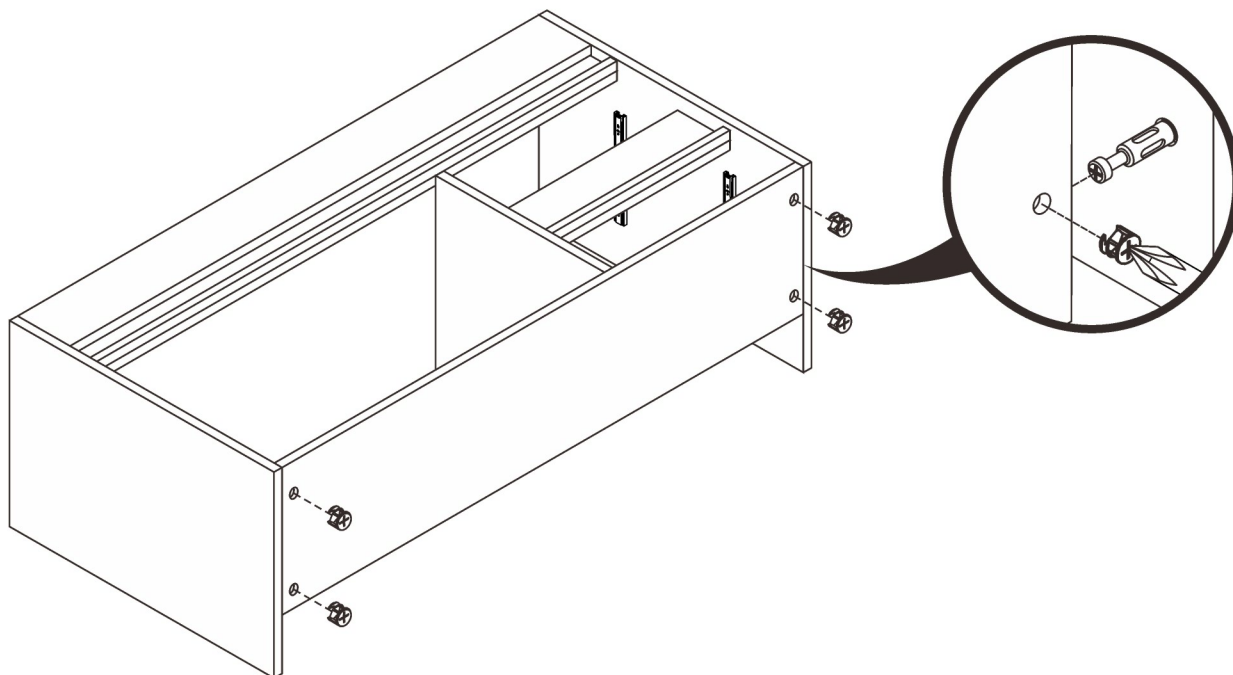


5

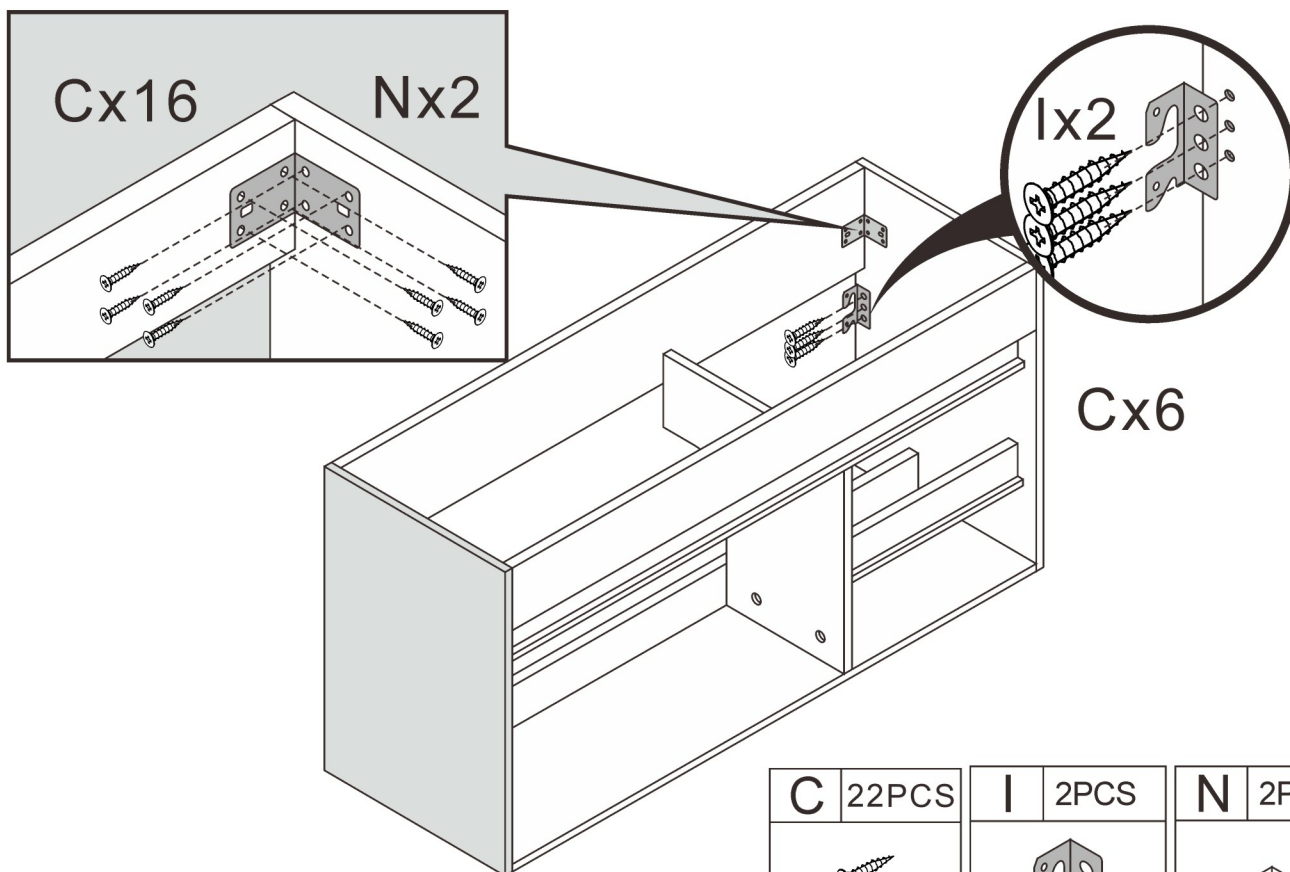


C	22PCS	I	2PCS	N	2PCS
					
3.5*14mm					

4

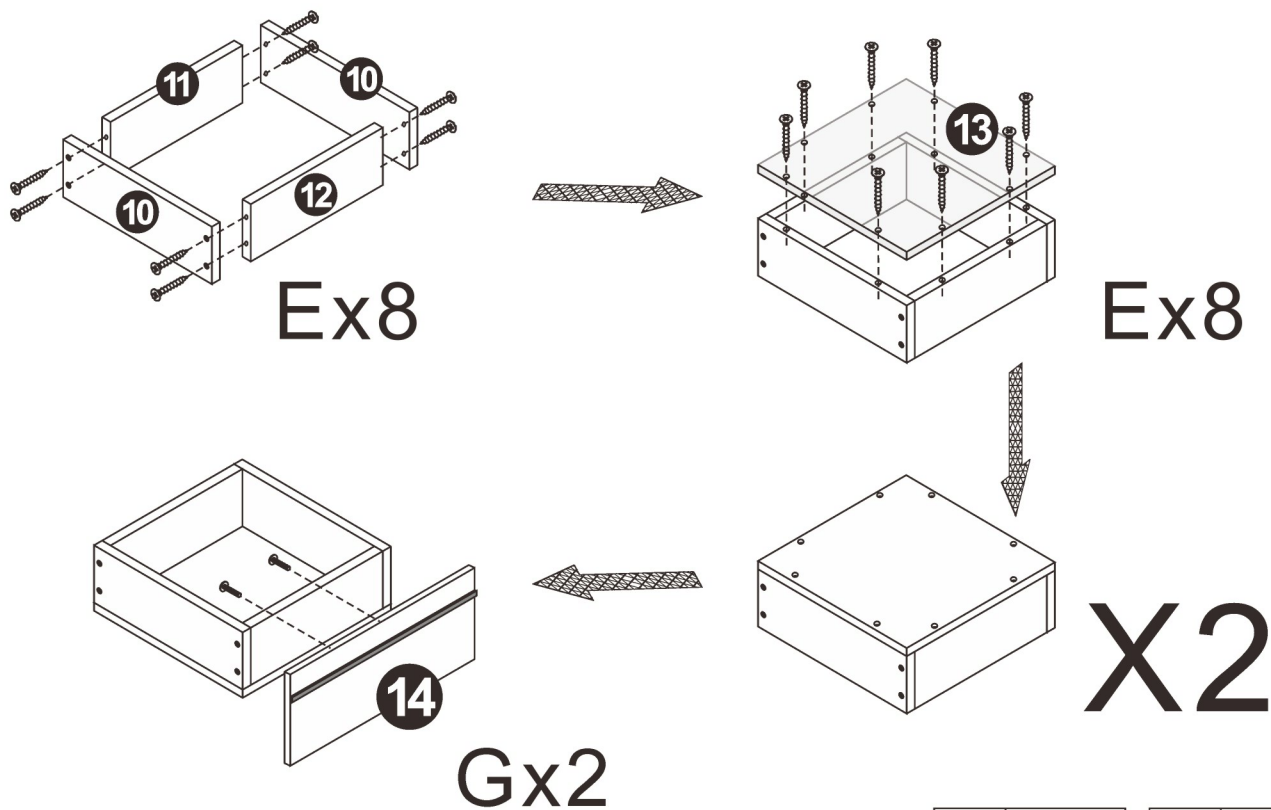


E	32PCS	F	4PCS
			
3.5*35mm		6*20	

5

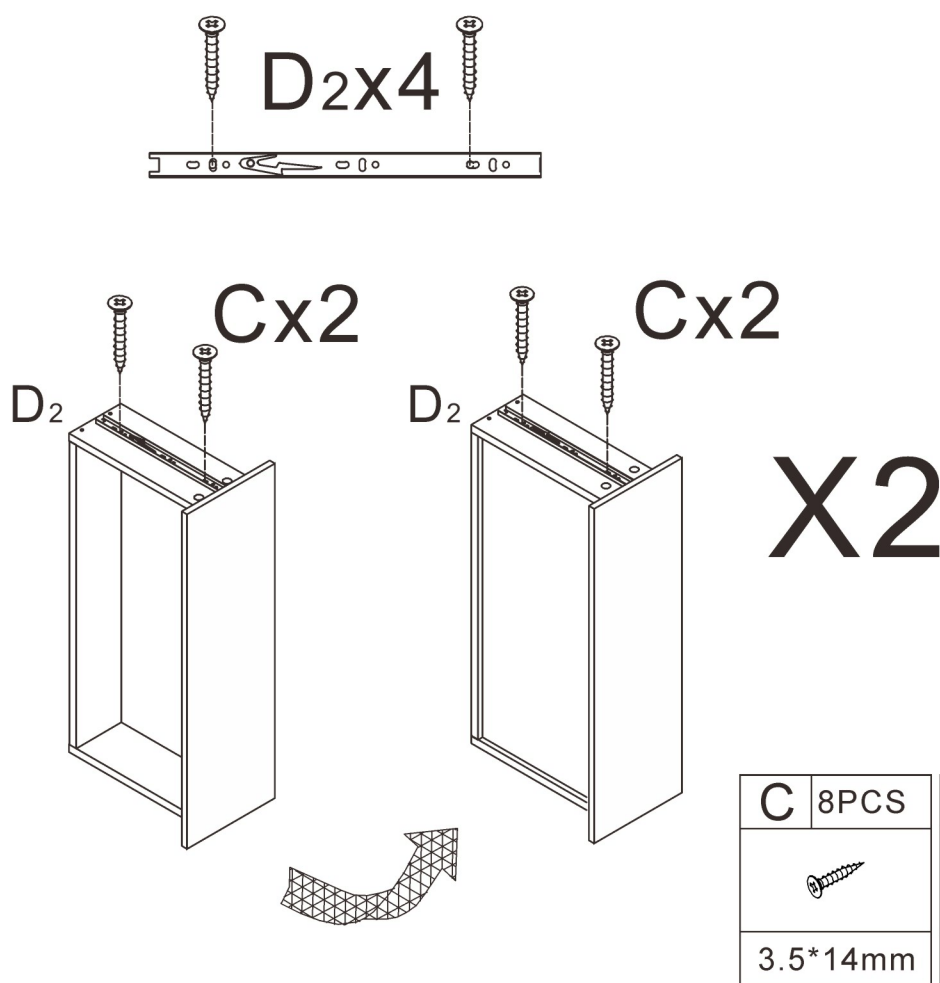

C	8PCS	D ₂	4PCS
			
3.5*14mm		Three-section Rail	

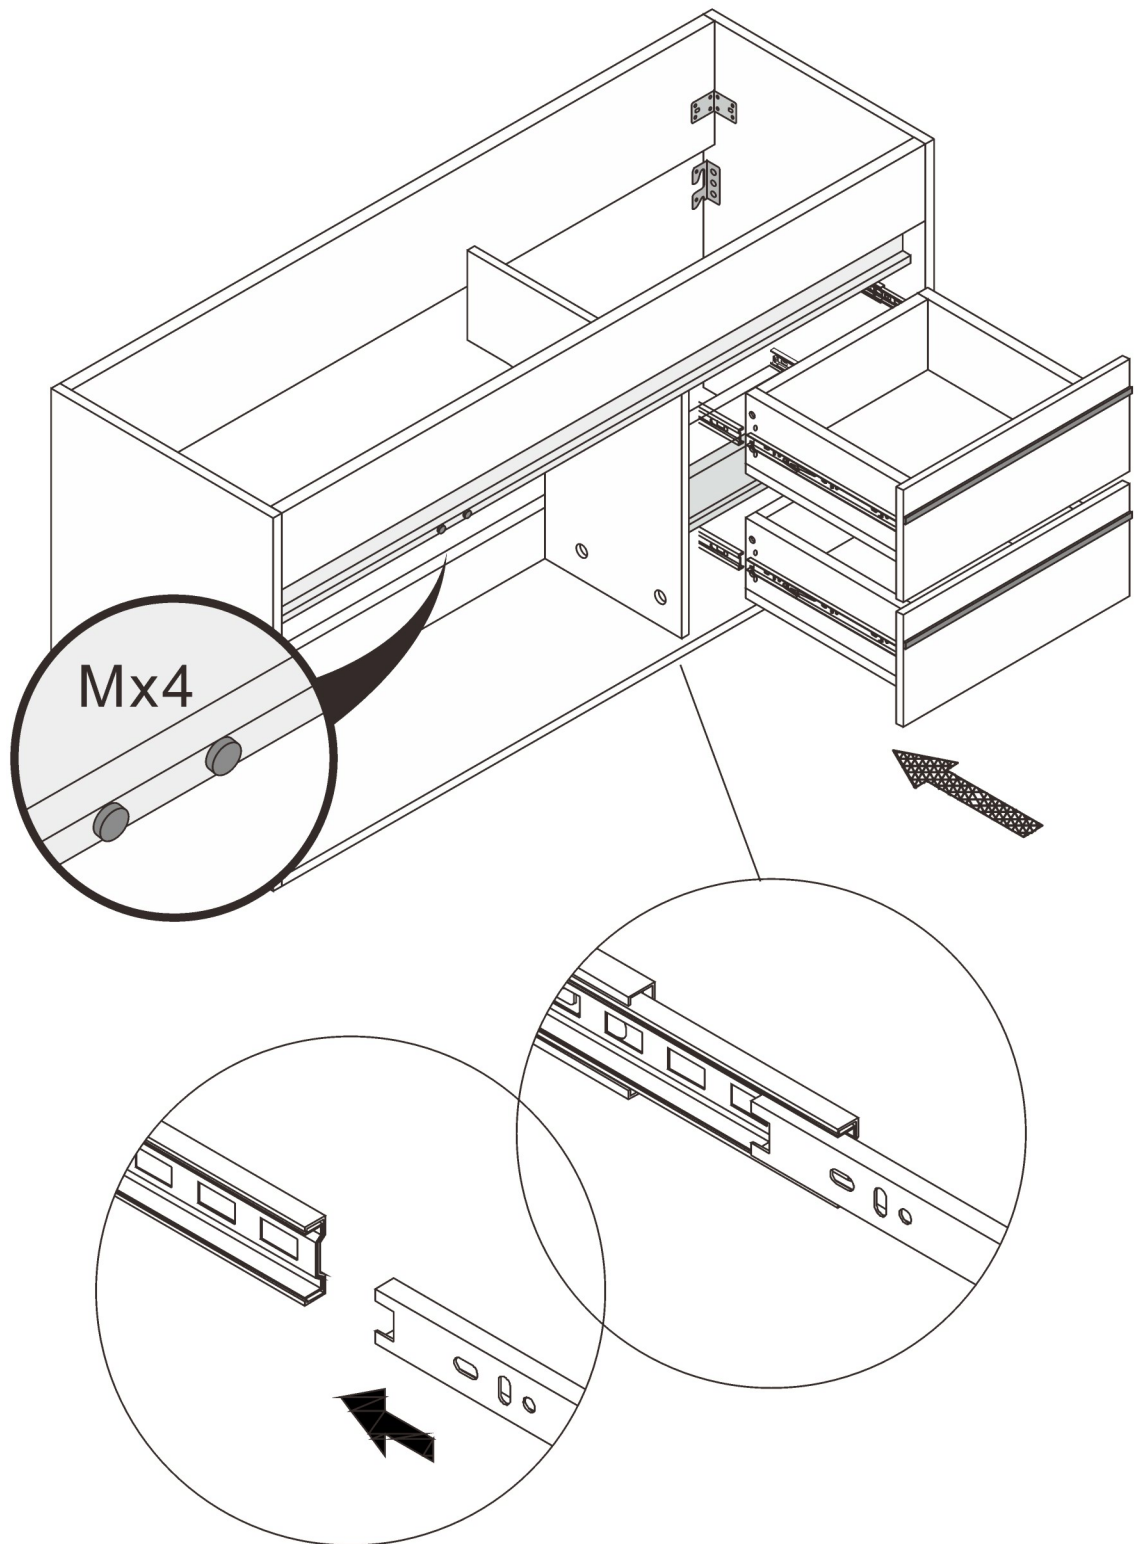


M	2PCS
	


12

Gx2
Cx4

Hx2
Cx4

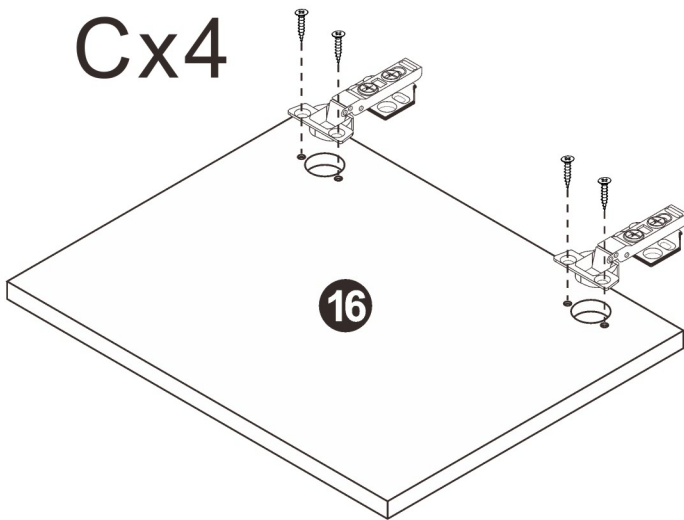



16

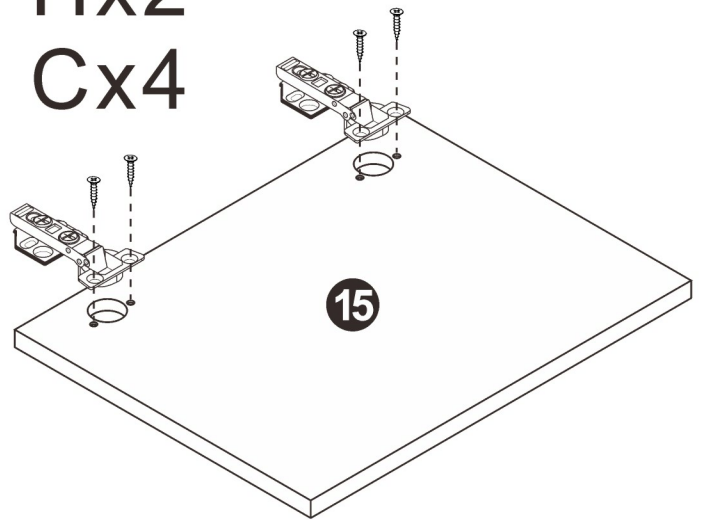



15

C	8PCS
	
3.5*14mm	

G	2PCS
	
Mid bend	

H	2PCS
	
Middle bend	

13

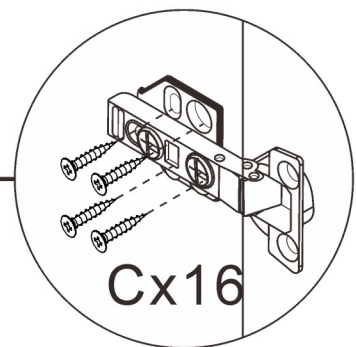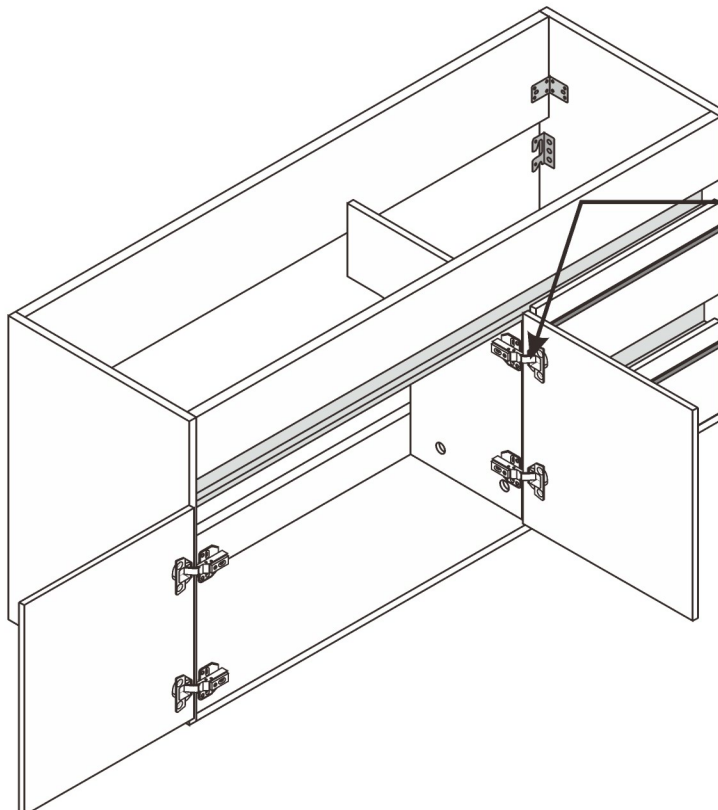

Cx16



C	16PCS
	
3.5*14mm	

SPECIAL TIPS FOR DOOR ALIGNMENT


CONSEJOS ESPECIALES PARA LA ALINEACIÓN DE PUERTAS

CONSEILS SPÉCIAUX POUR L'ALIGNEMENT DES PORTES





- A. Lateral adjustment (Moving door left-right) by screw adjusting
 Ajuste lateral (Puerta móvil de izquierda a derecha) mediante tornillo de ajuste
 Réglage latéral (porte mobile gauche-droite) par réglage à vis

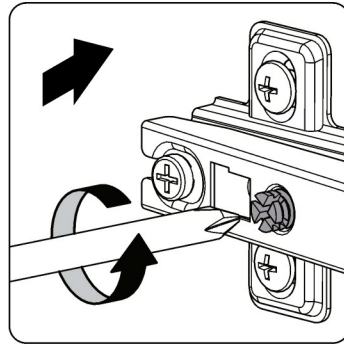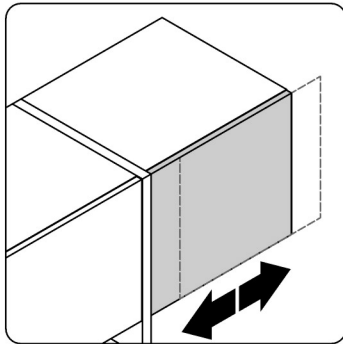





OR

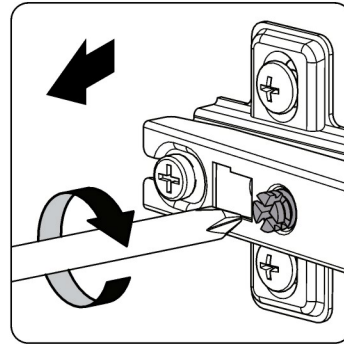


- B. Vertical adjustment (Moving door up-down) via the slot on the mounting plate
 Ajuste vertical (Puerta móvil arriba-abajo) a través de la ranura en la placa de montaje
 Réglage vertical (porte mobile de haut en bas) via la fente sur la plaque de montage

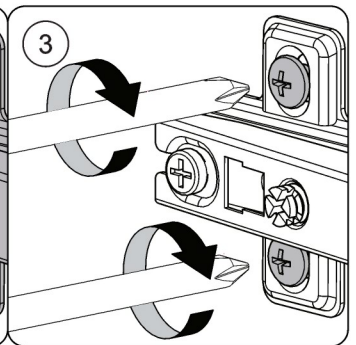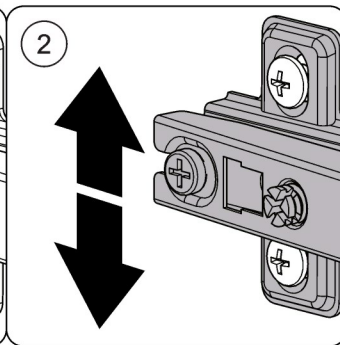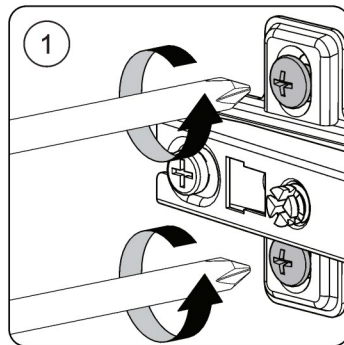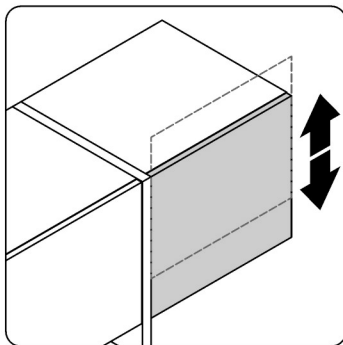

- C. Front-to-back adjustment (Spacing Door Off Cabinet) by slacking the hinge arm mounting screw
 Ajuste de adelante hacia atrás (espaciado entre la puerta y el gabinete) aflojando el tornillo de montaje del brazo de la bisagra
 Ajustement d'avant en arrière (espacement de la porte hors de l'armoire) en desserrant la vis de montage du bras de charnière

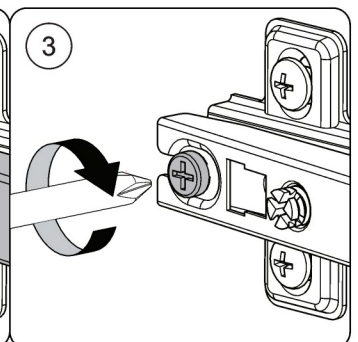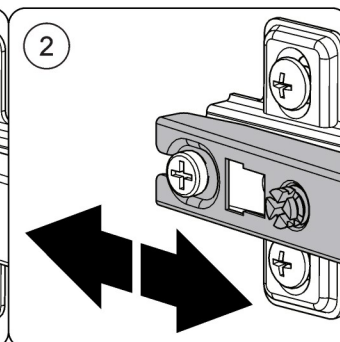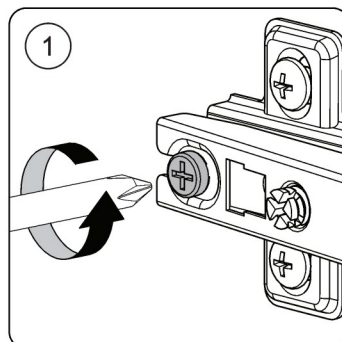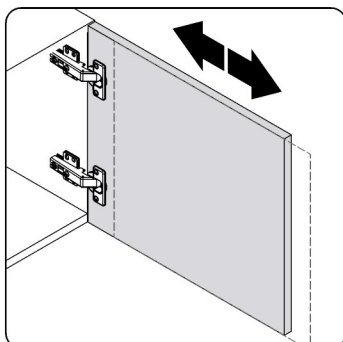


12

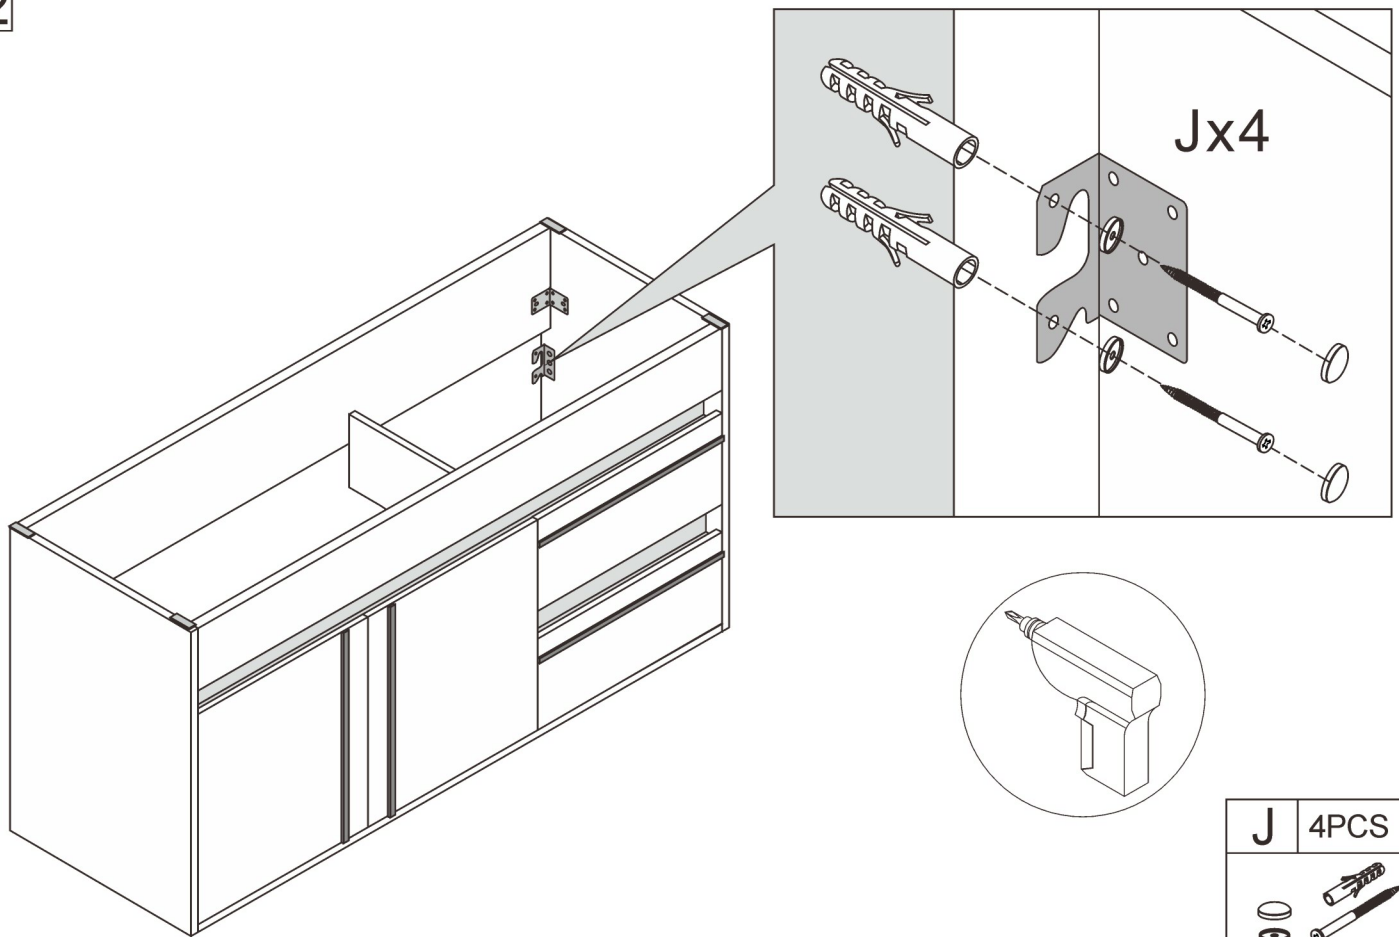


J	4PCS
Expansion screw	

13

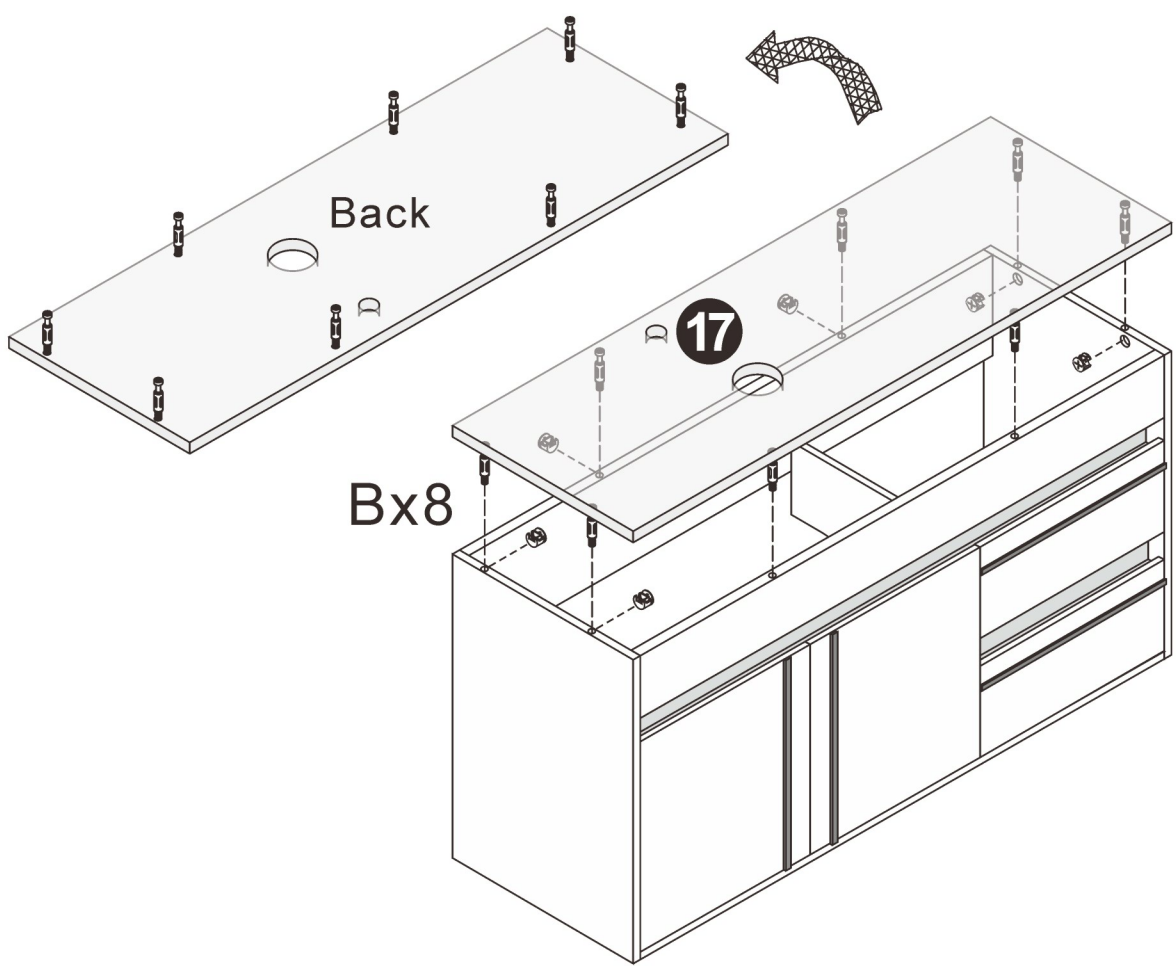

B	36PCS
6*28mm	

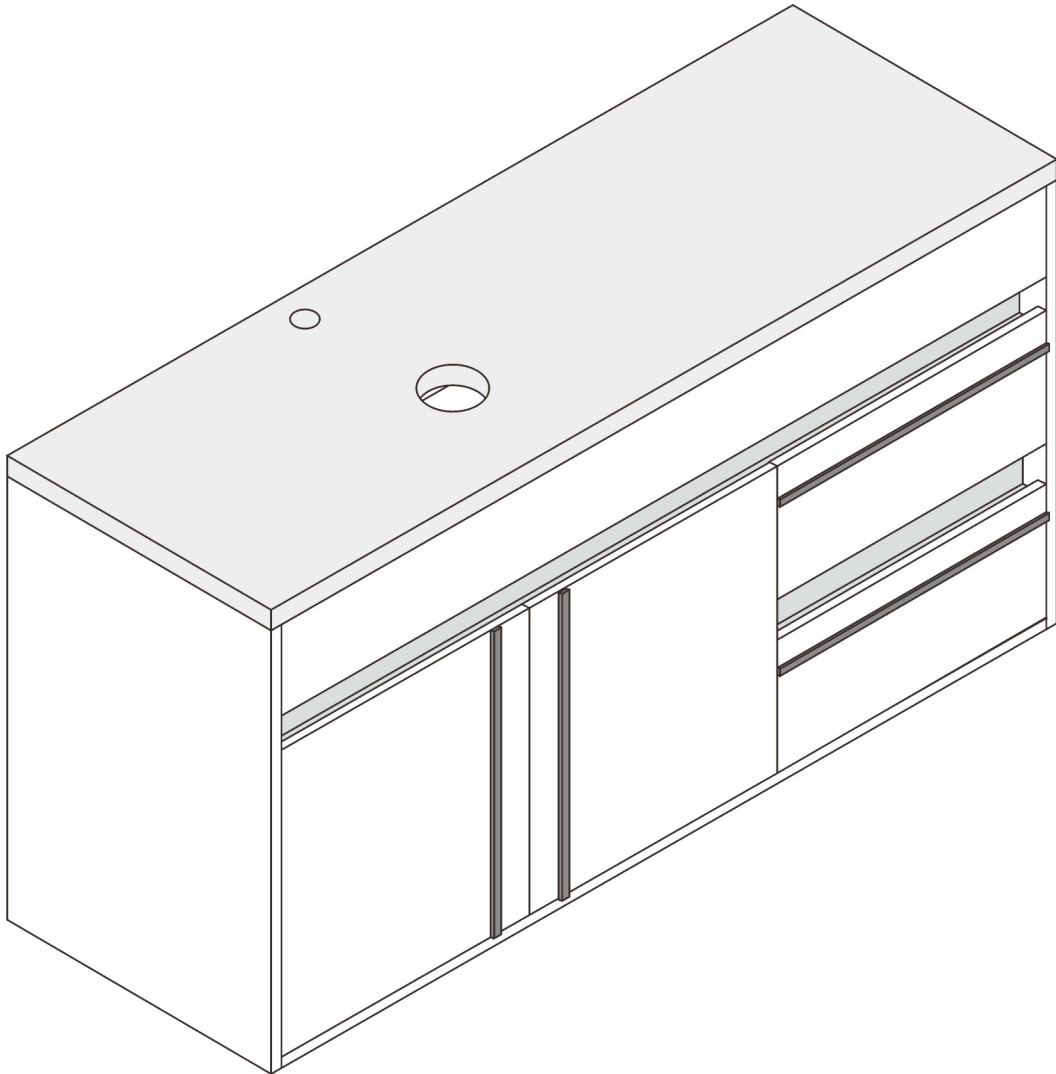

OK!