
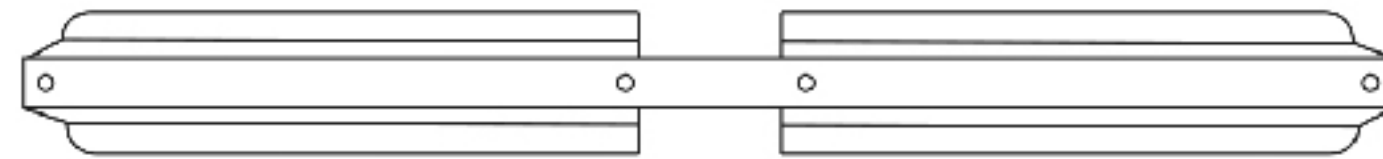
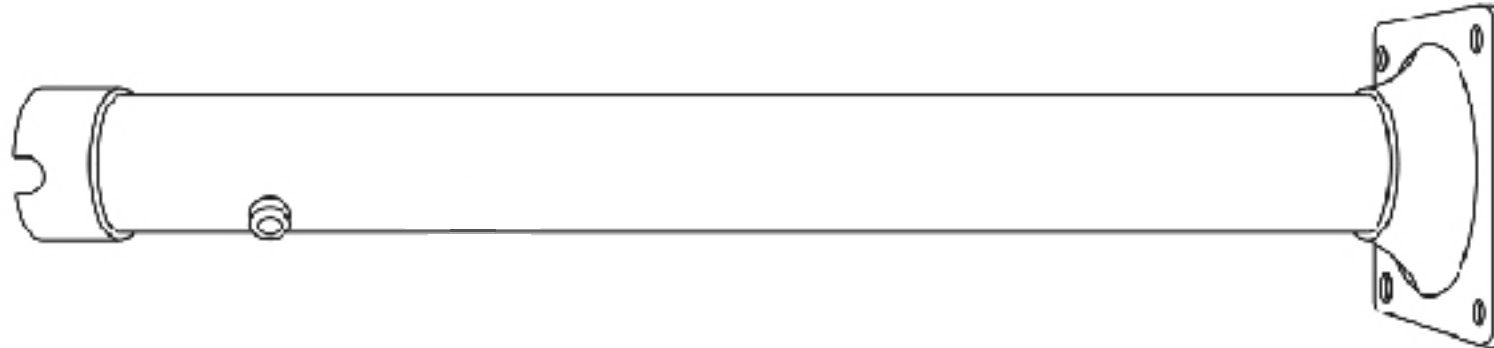
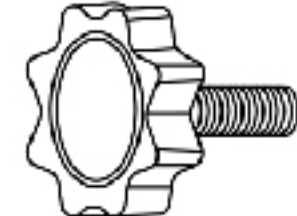
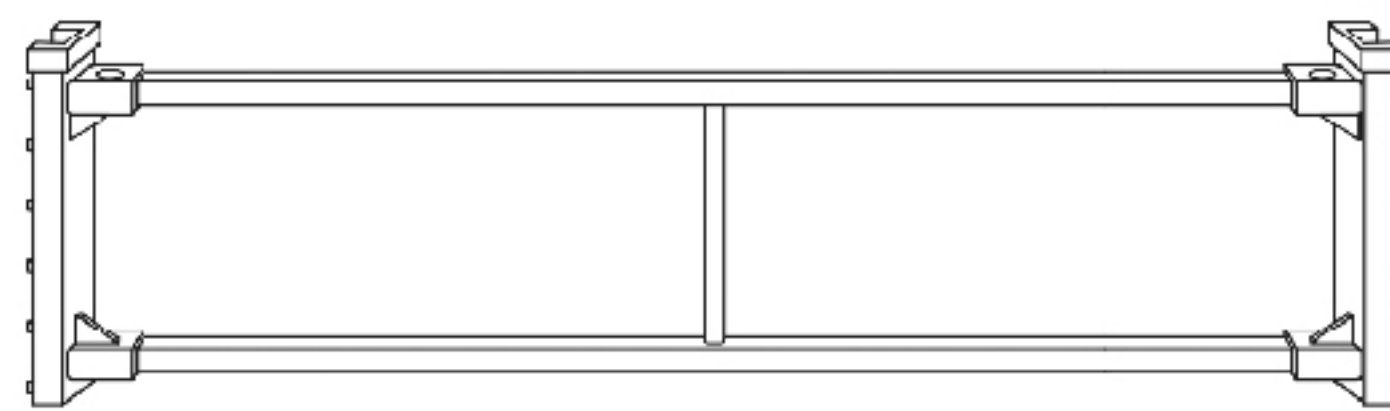
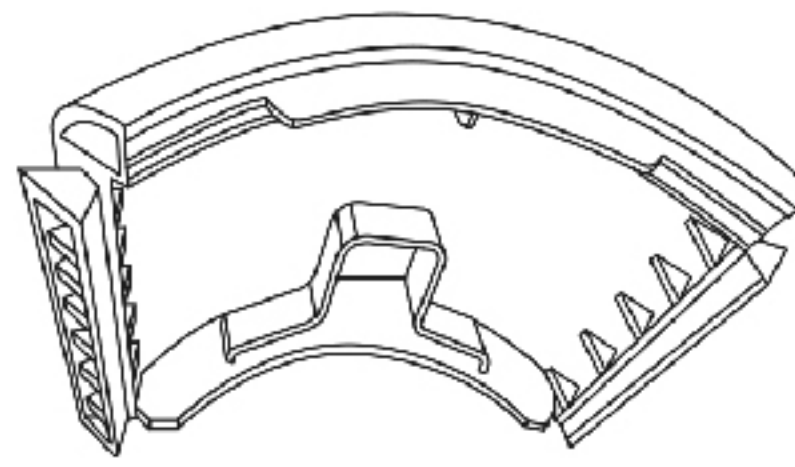
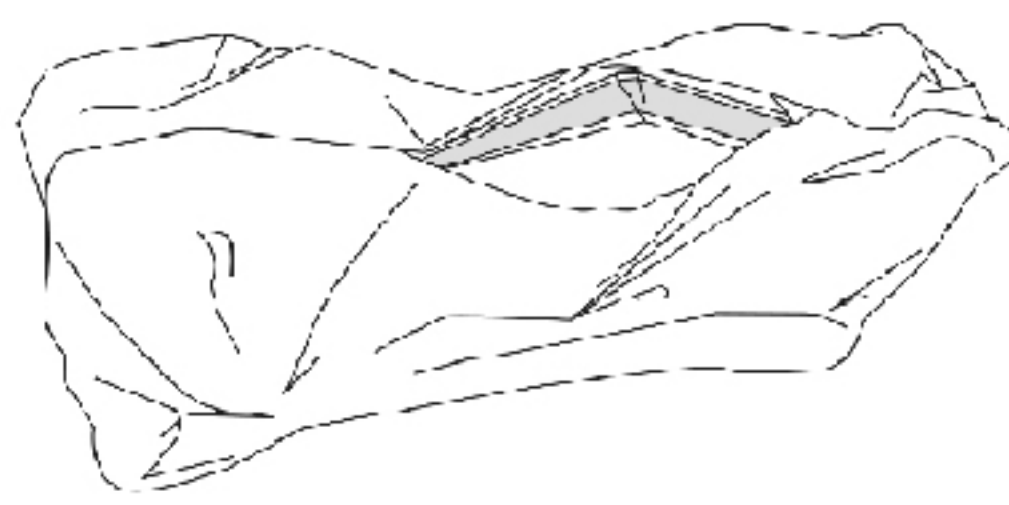
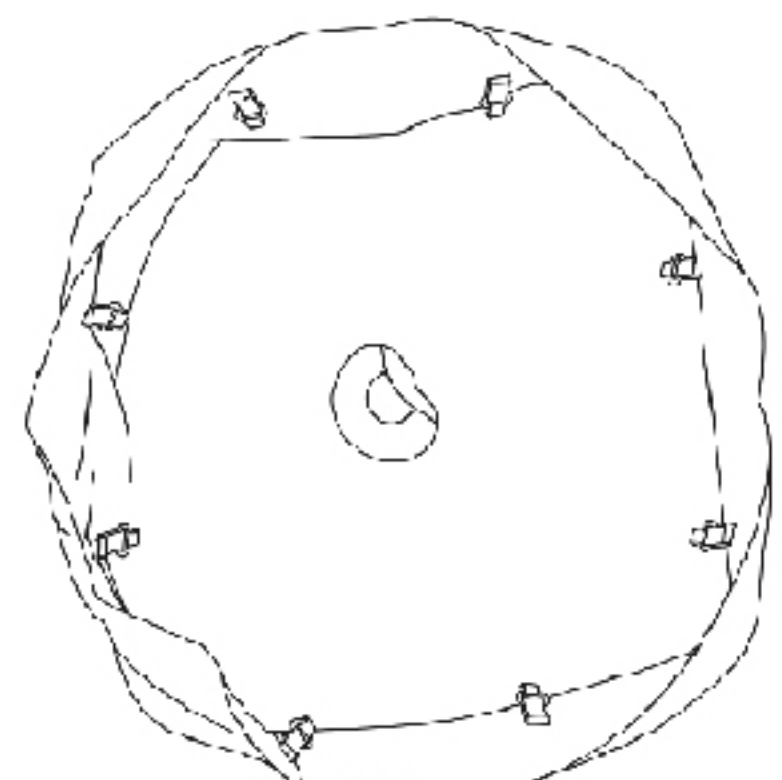
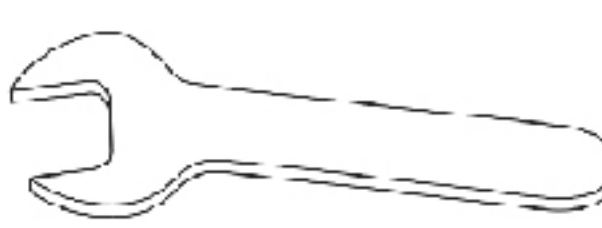
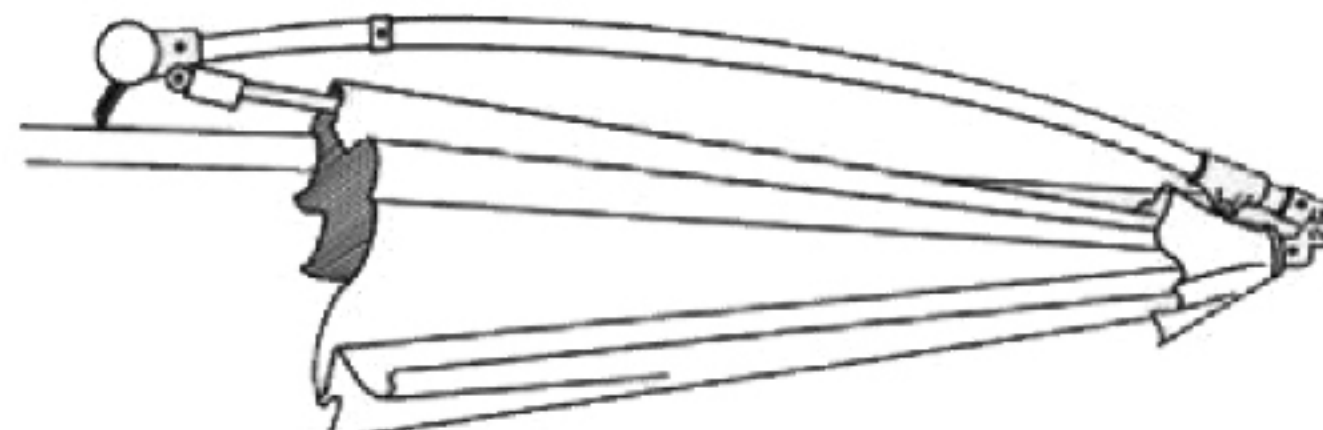
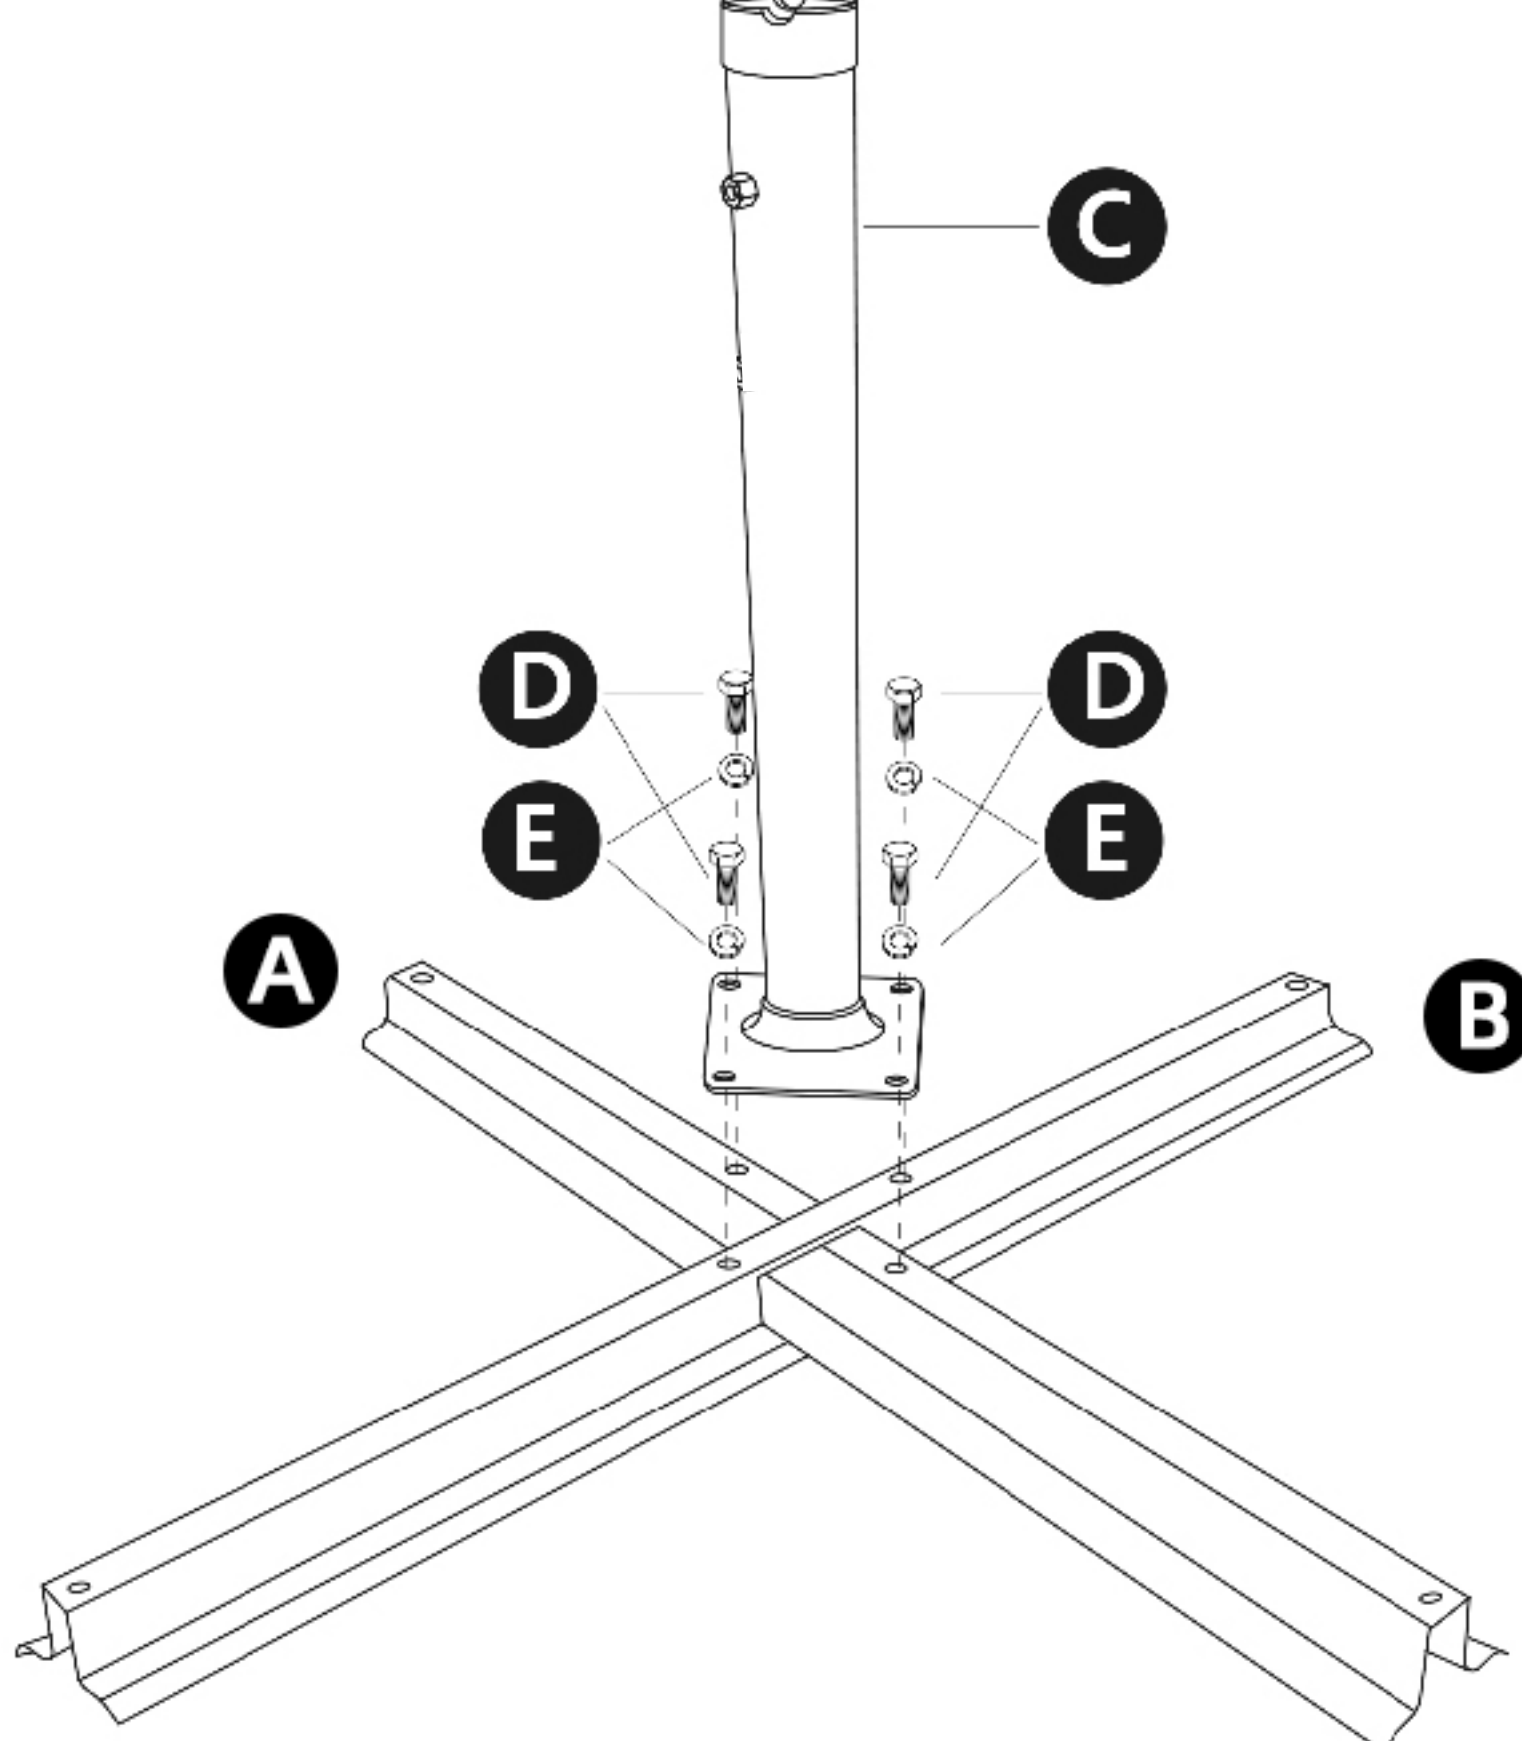
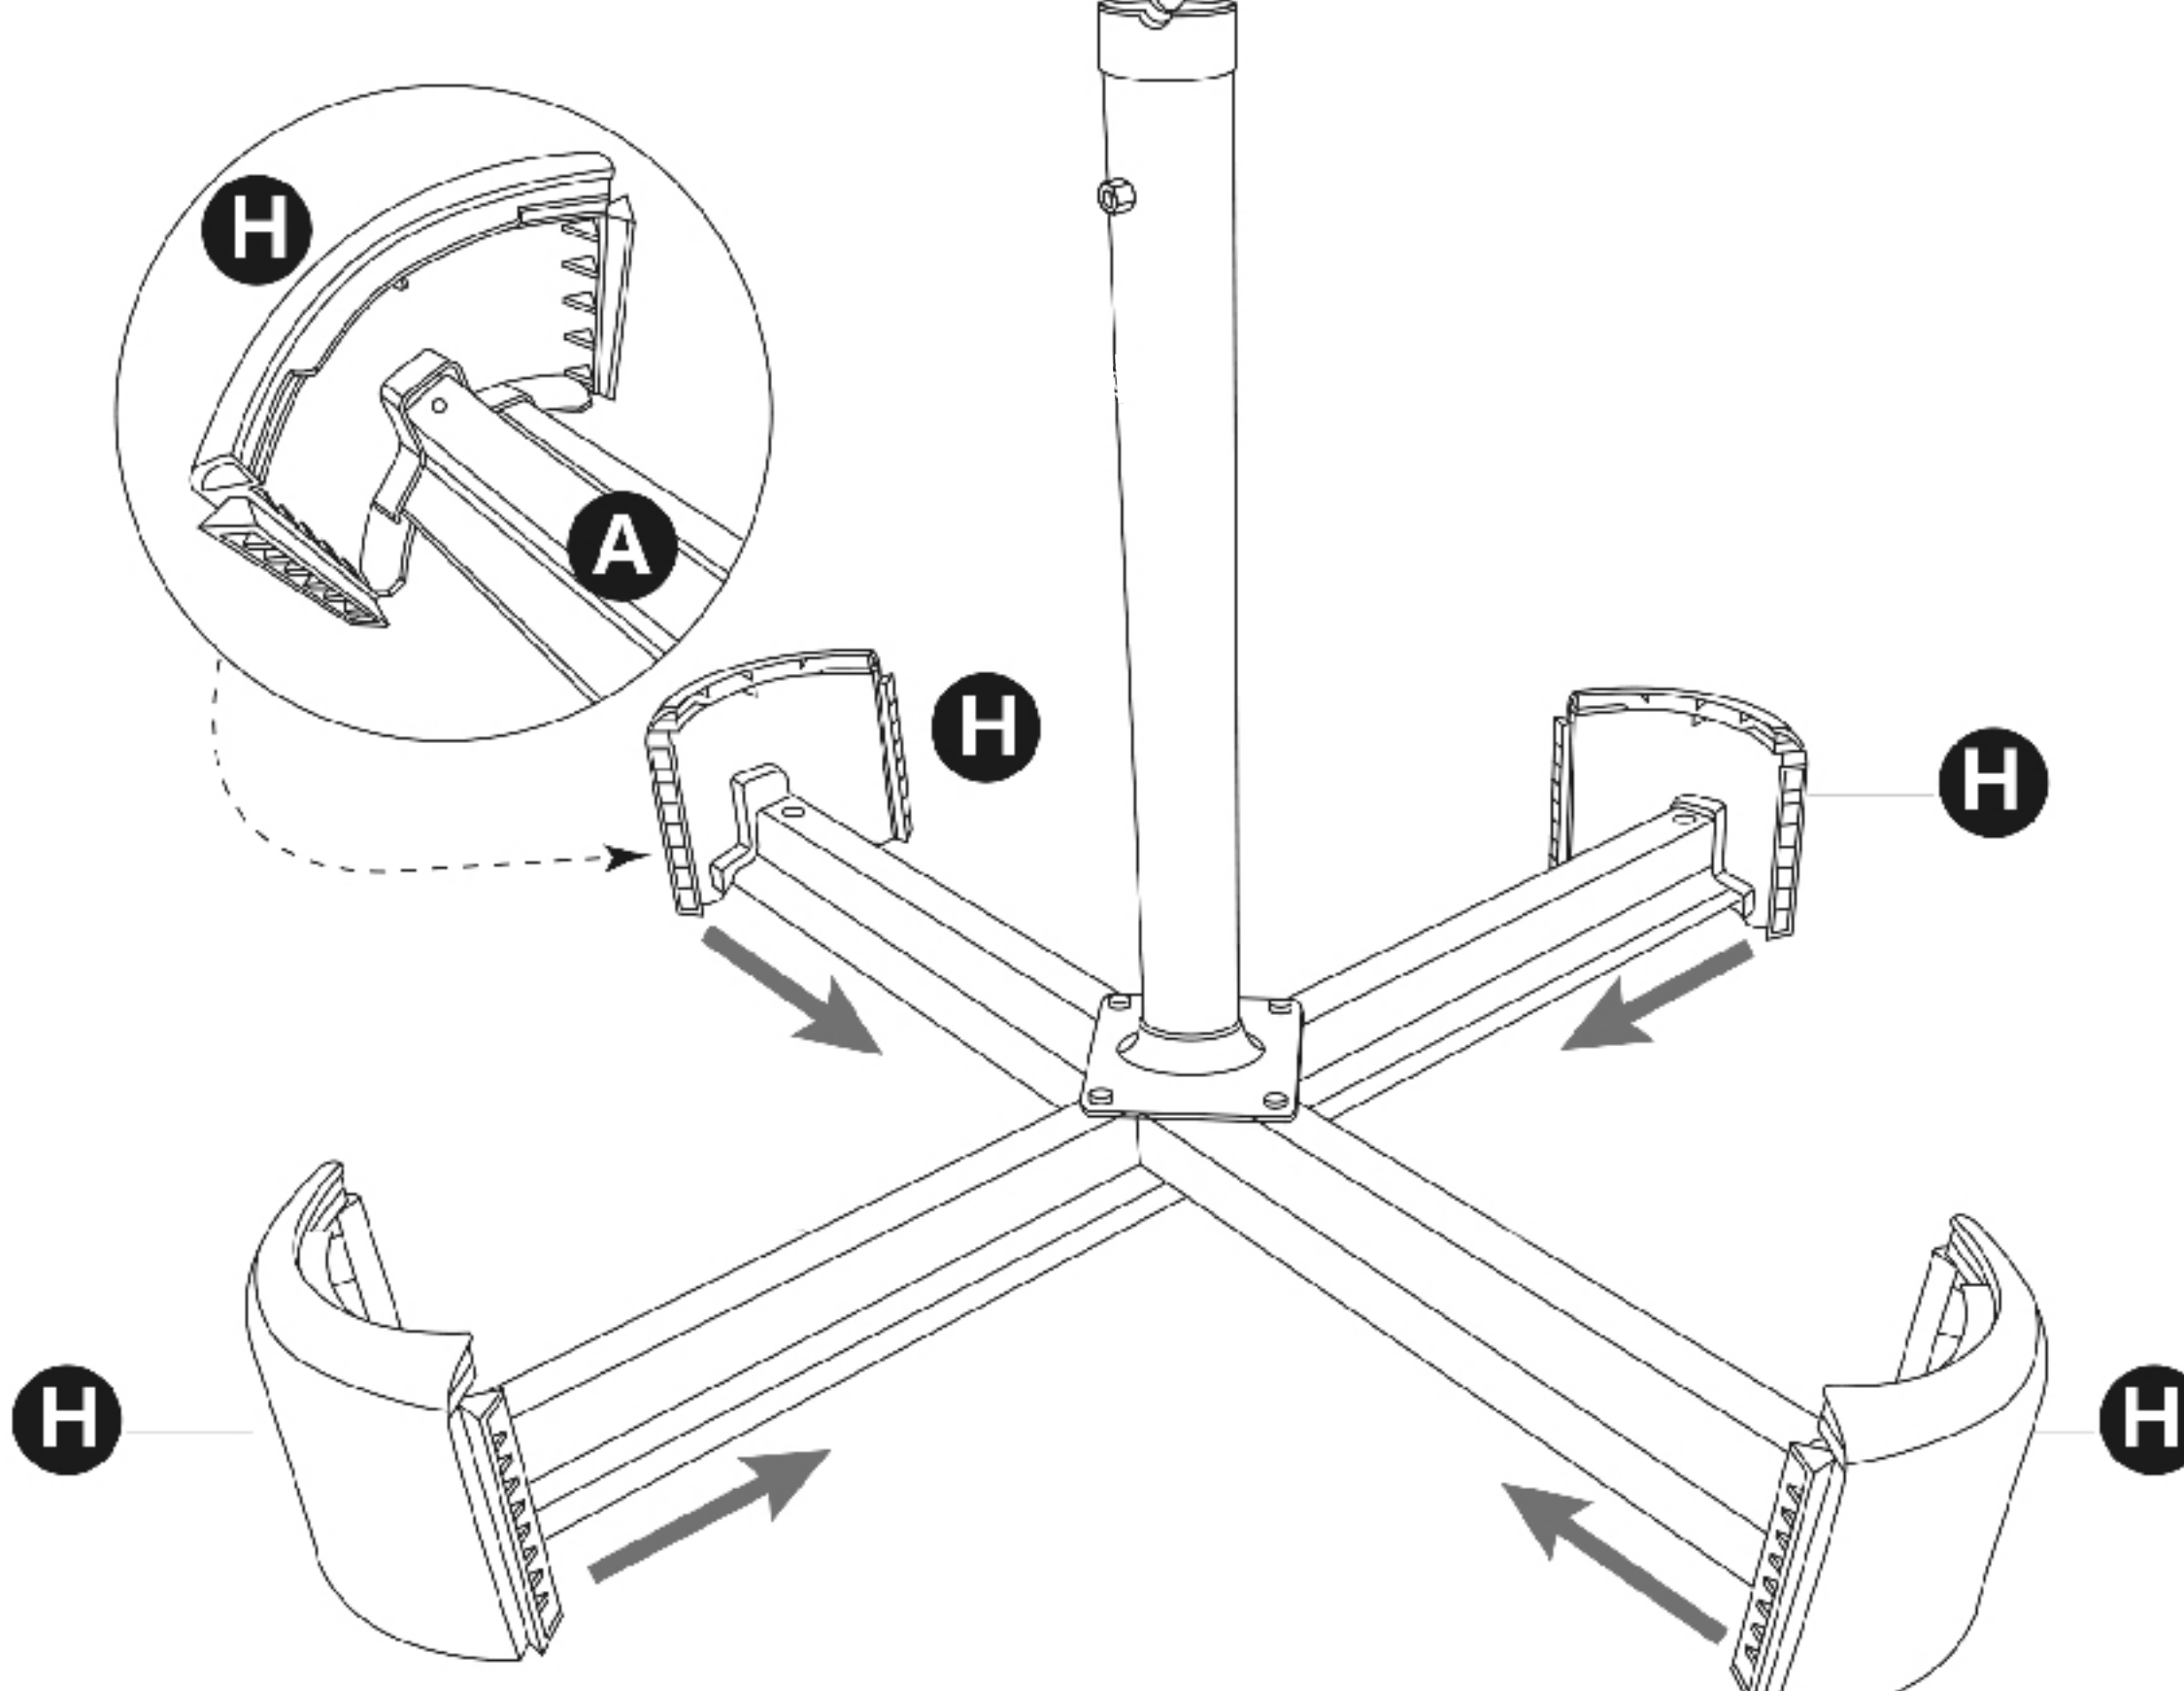
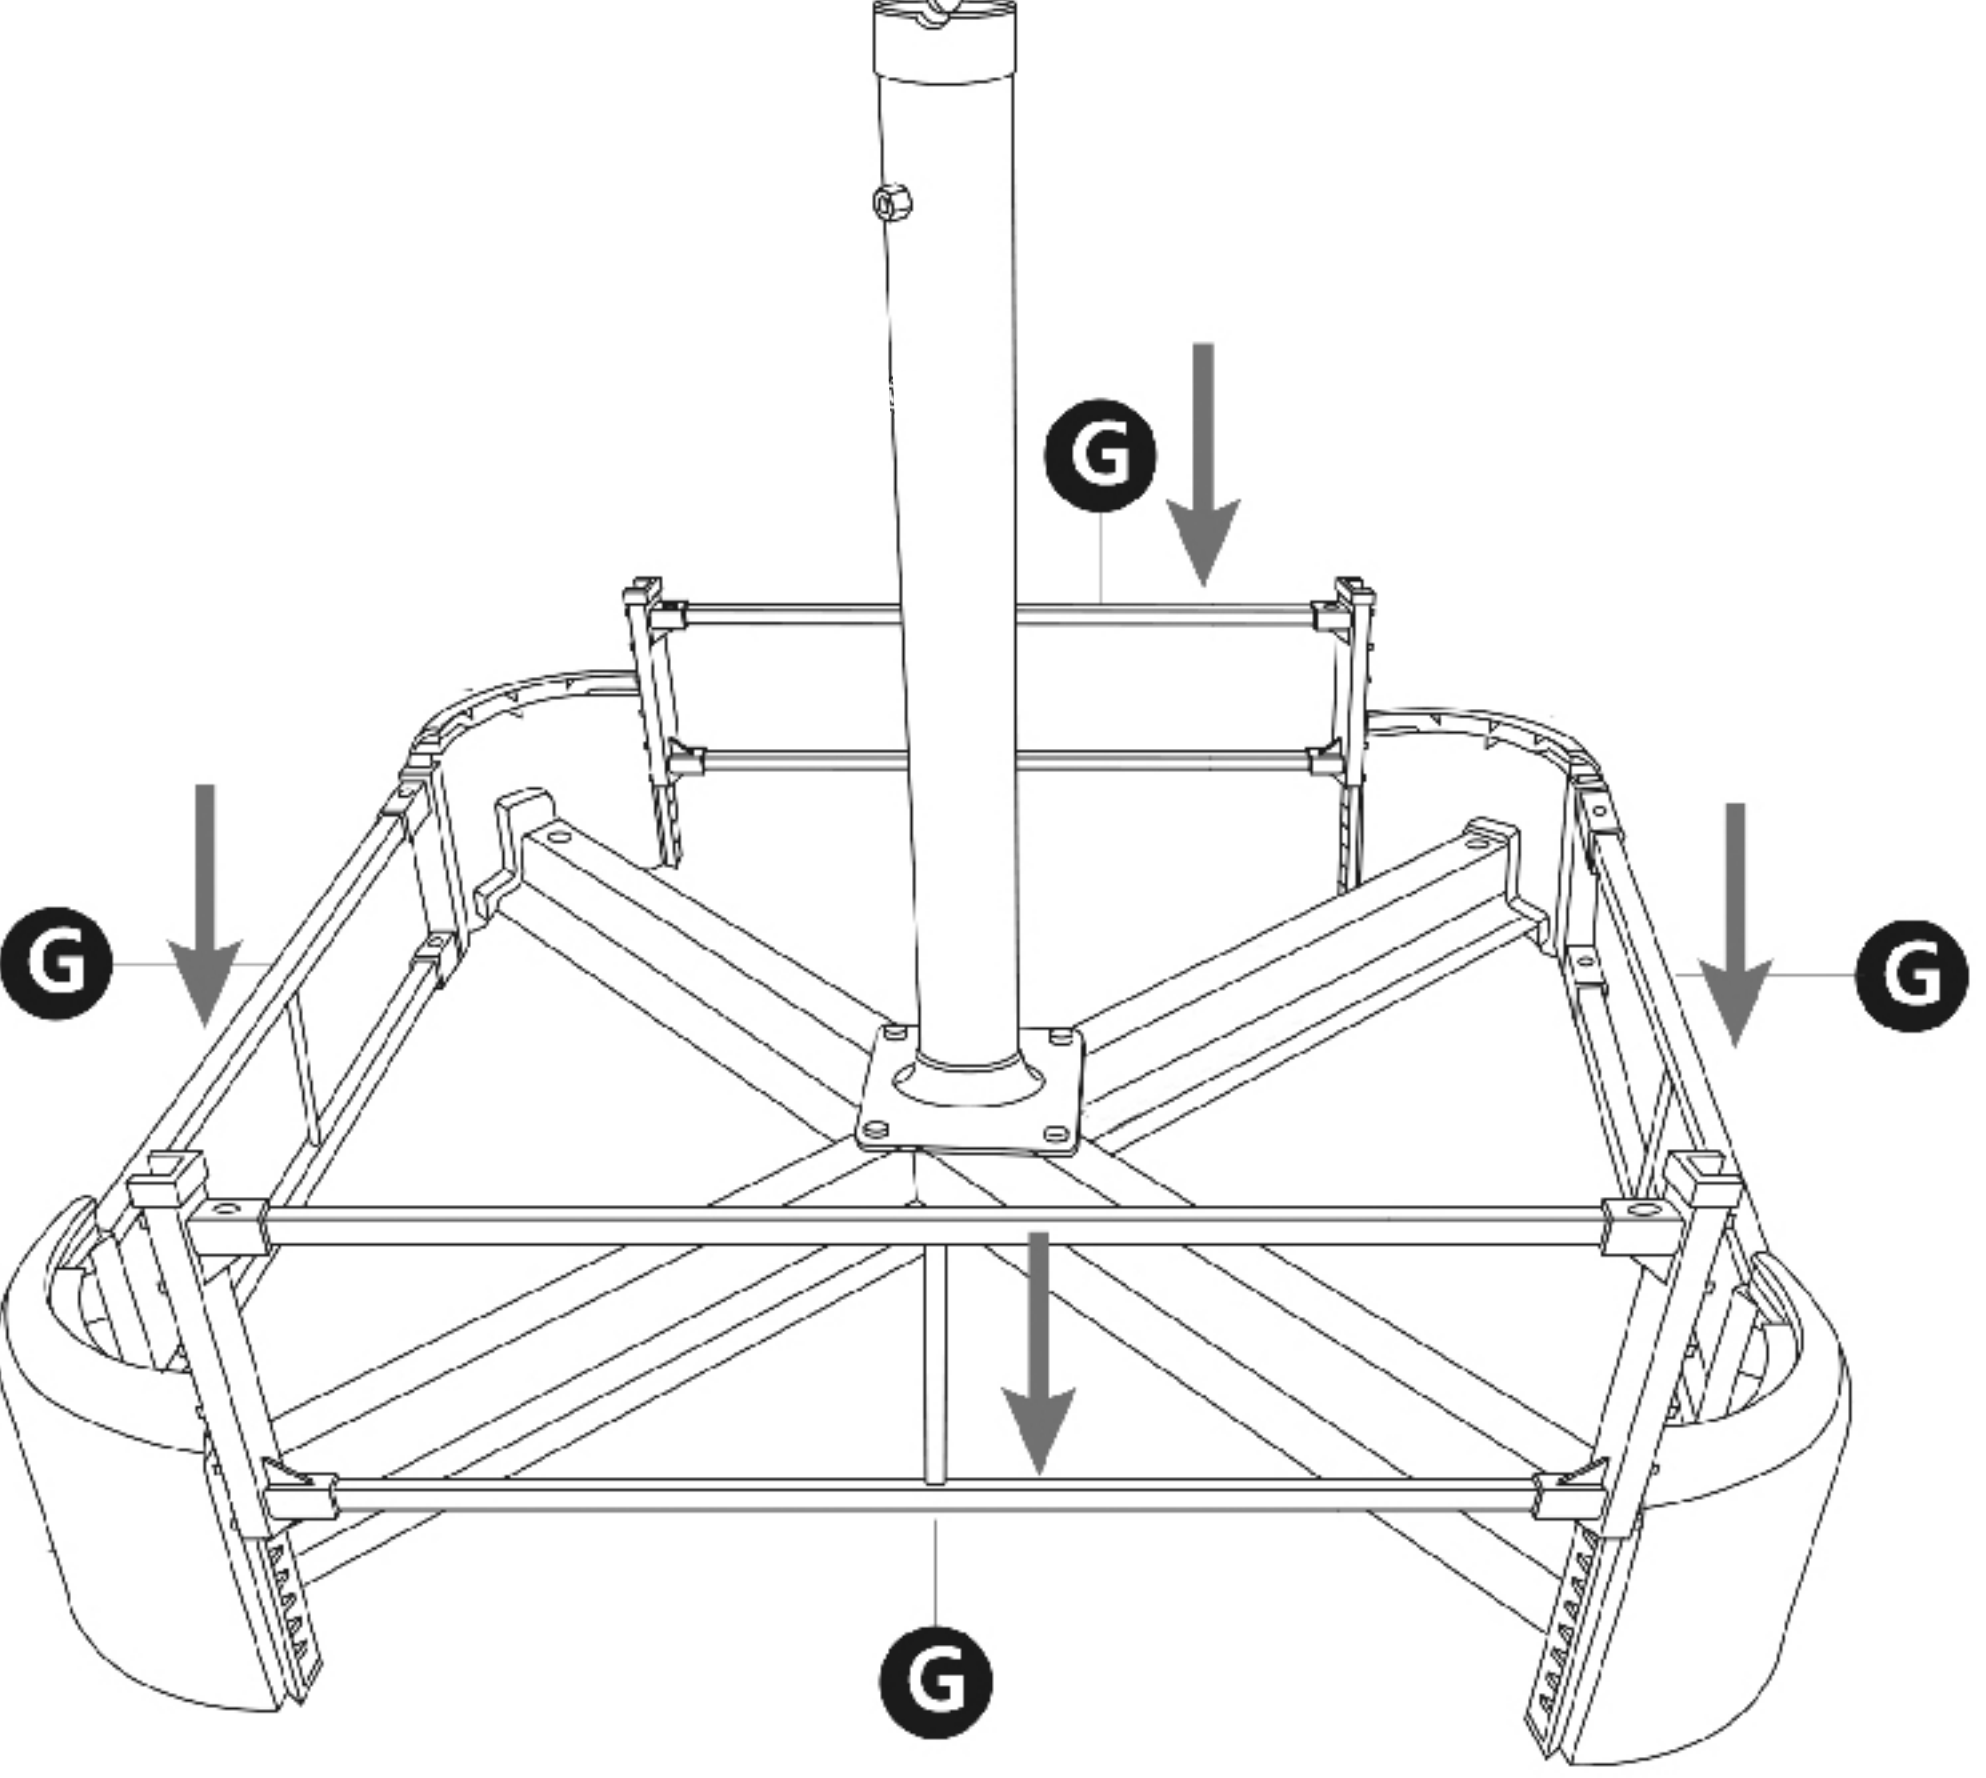
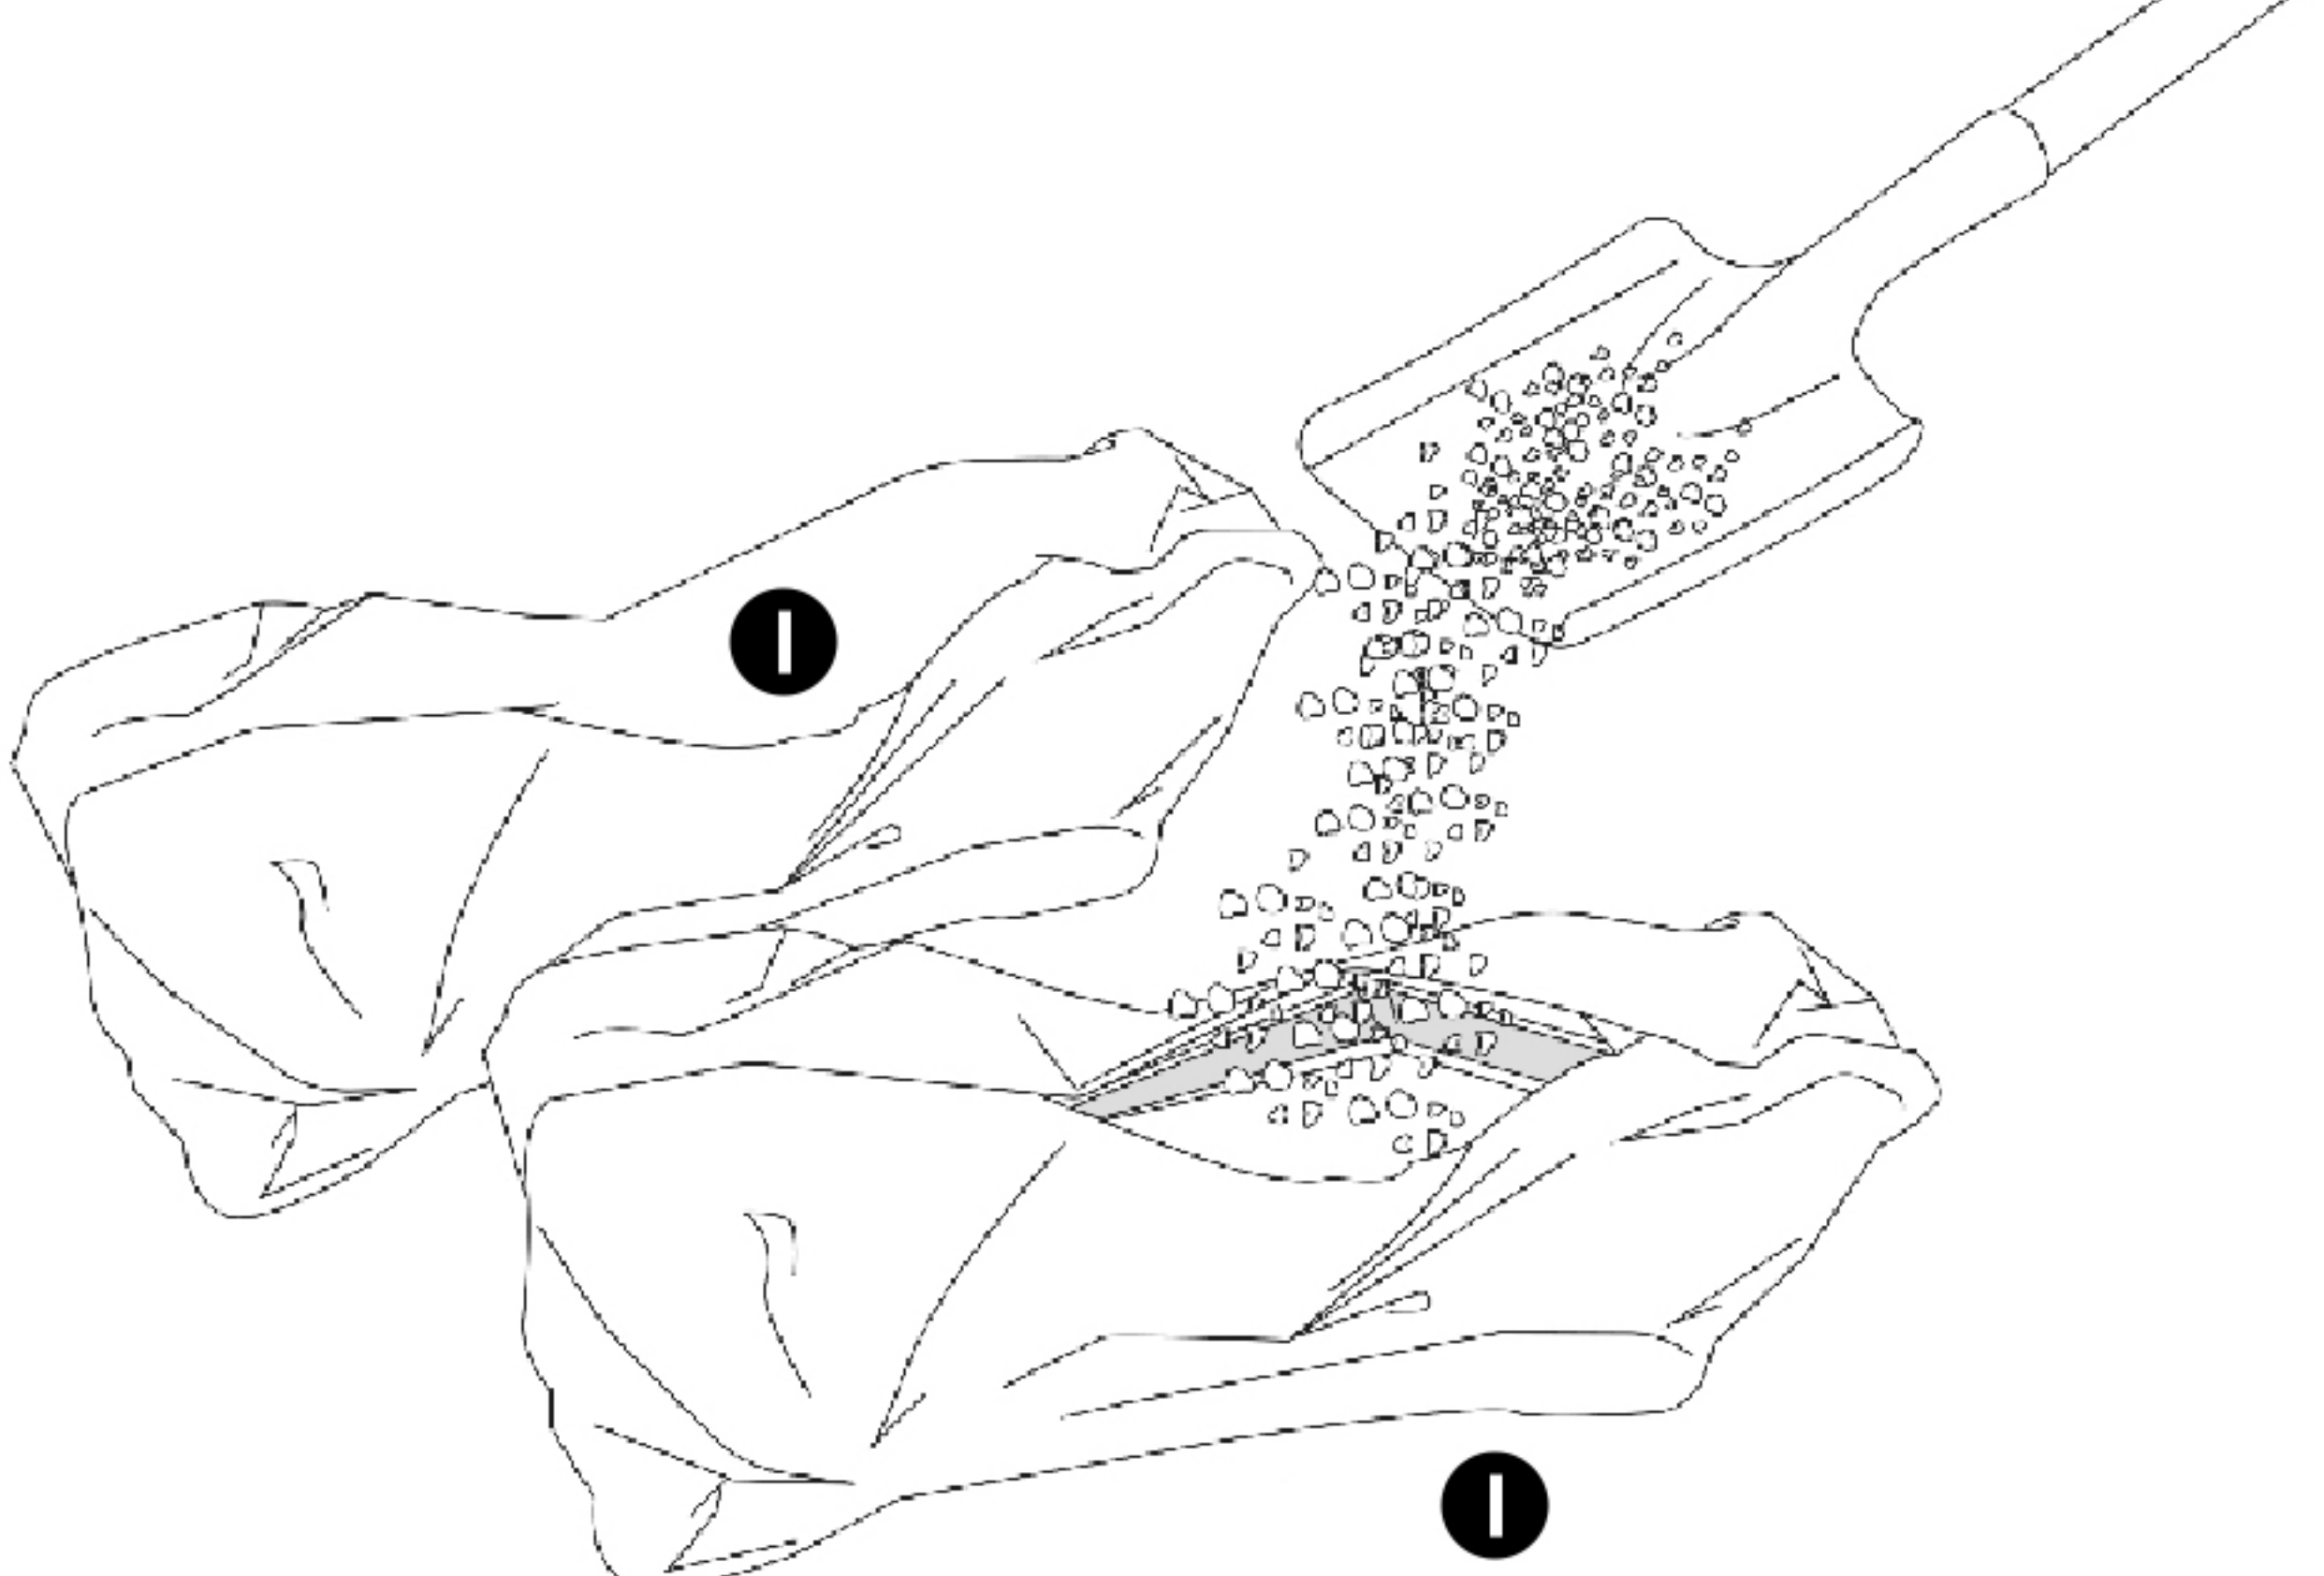
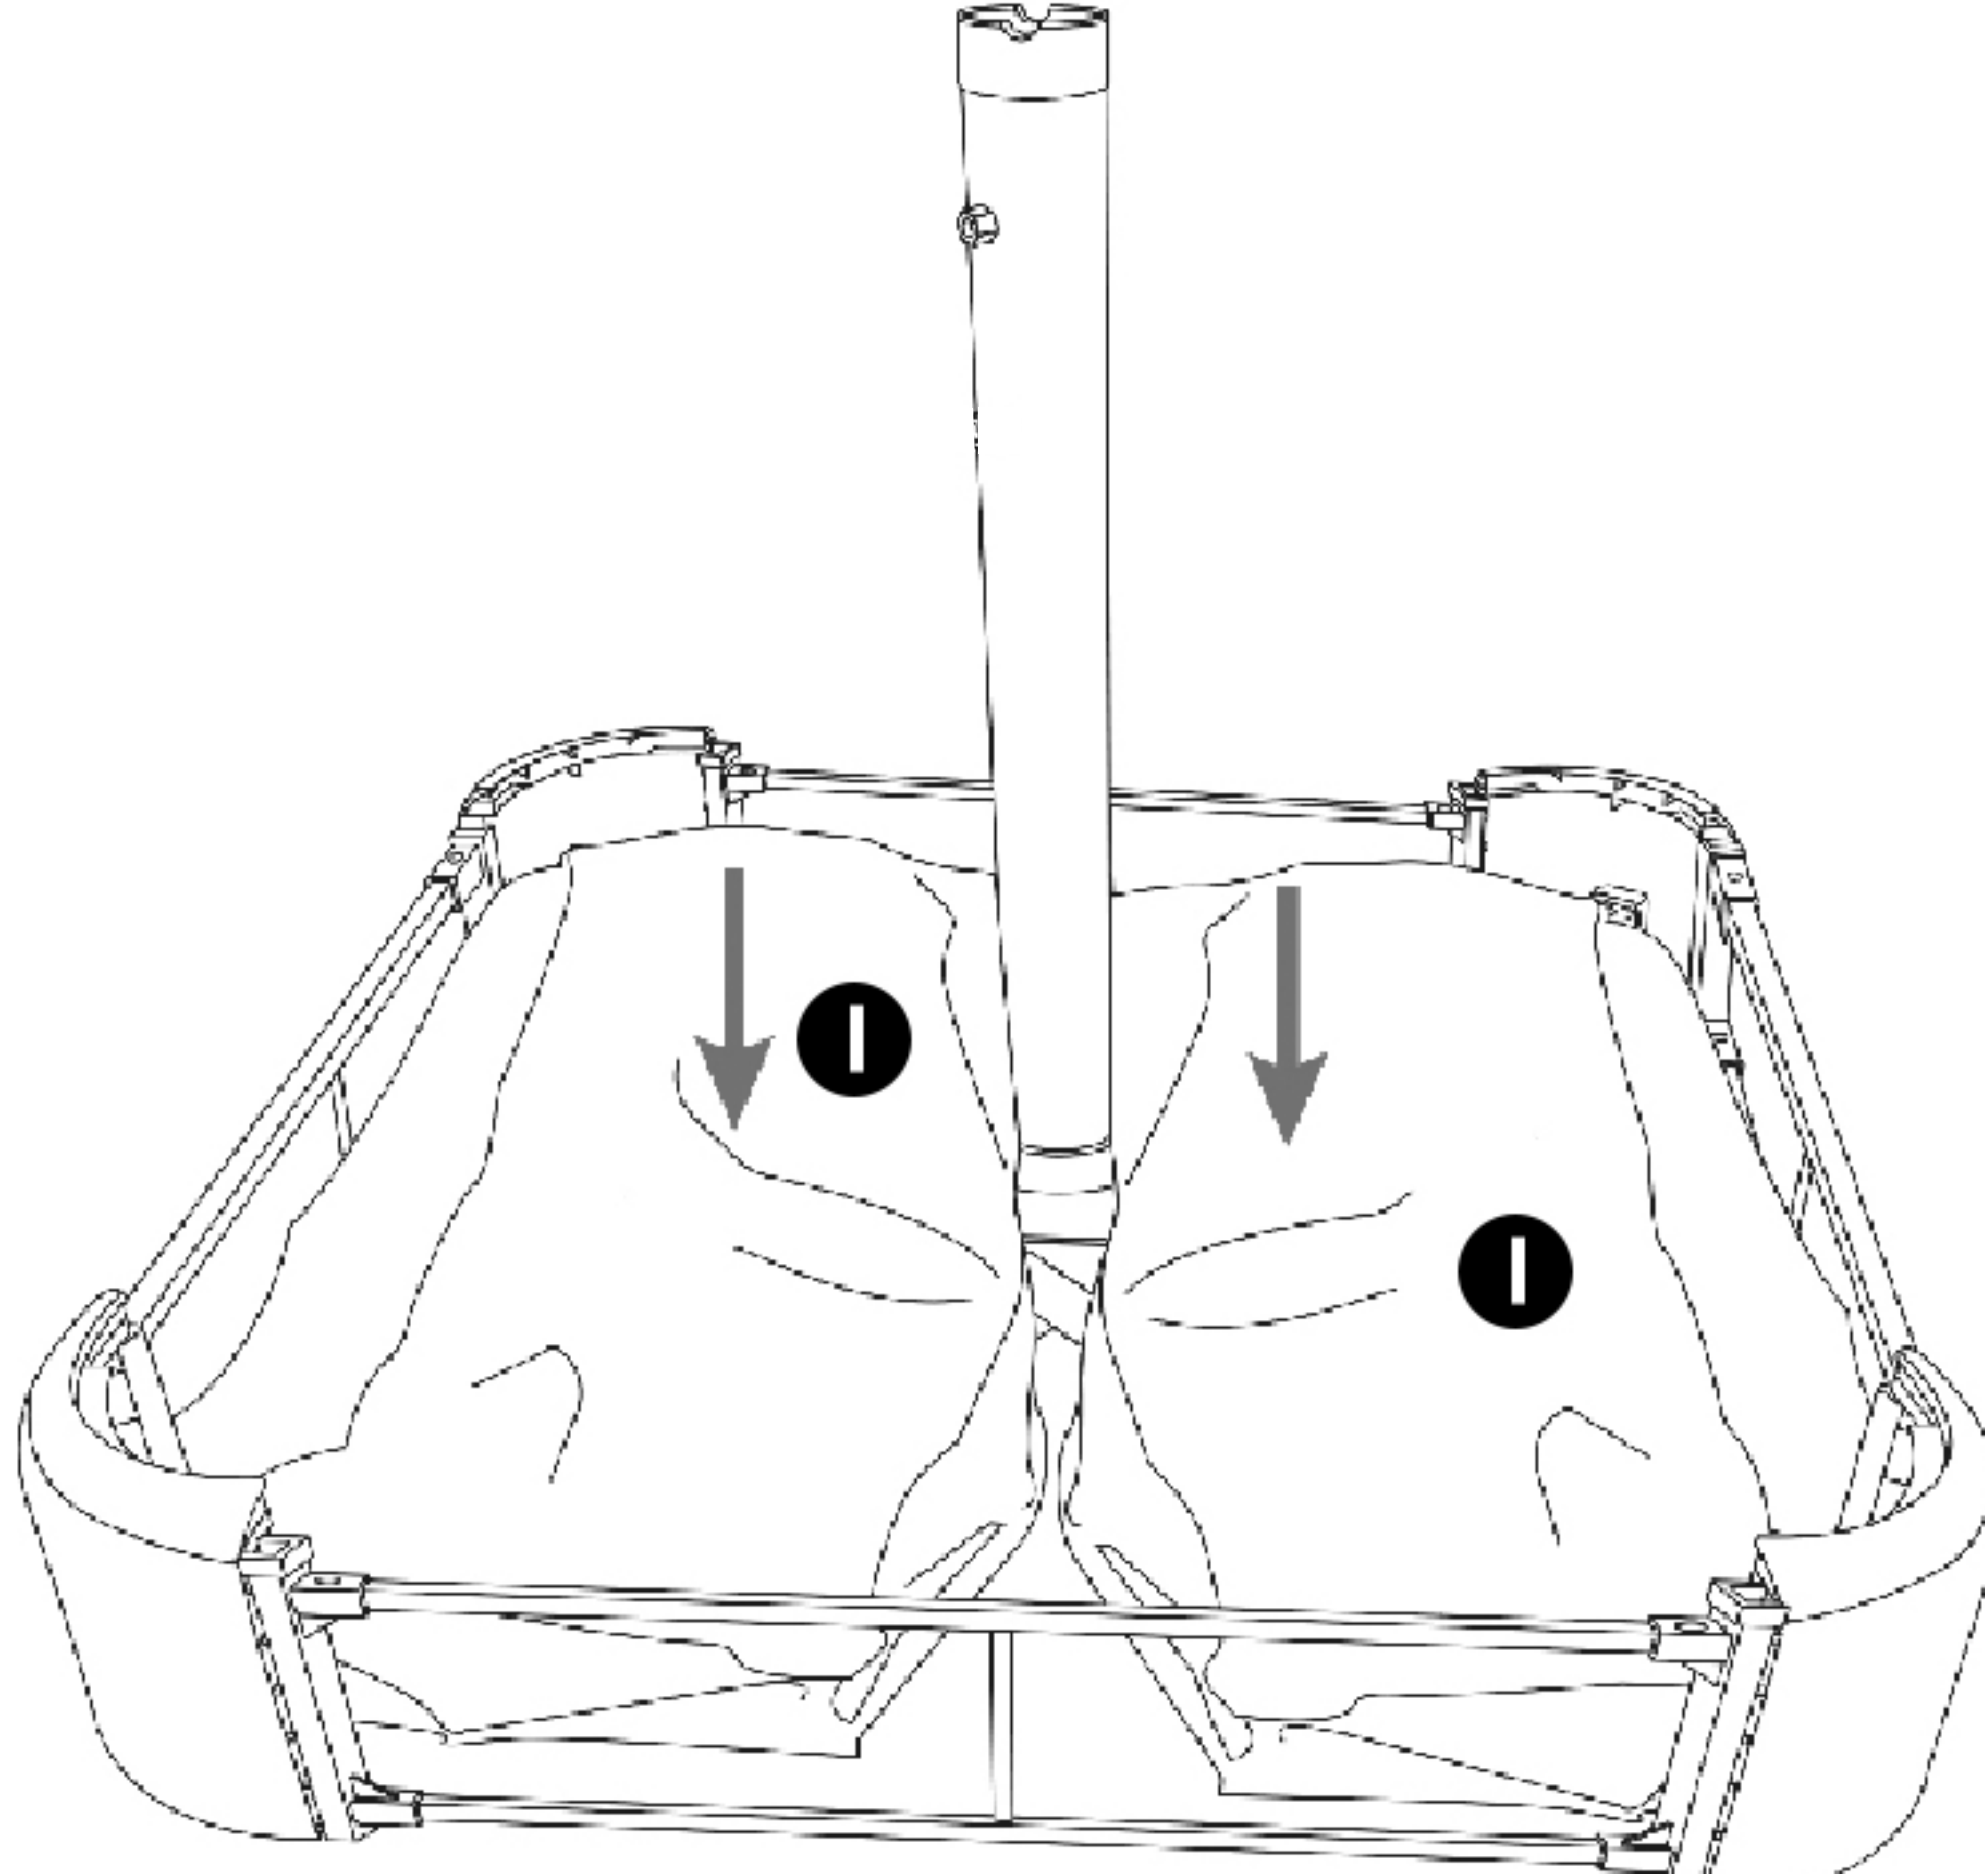
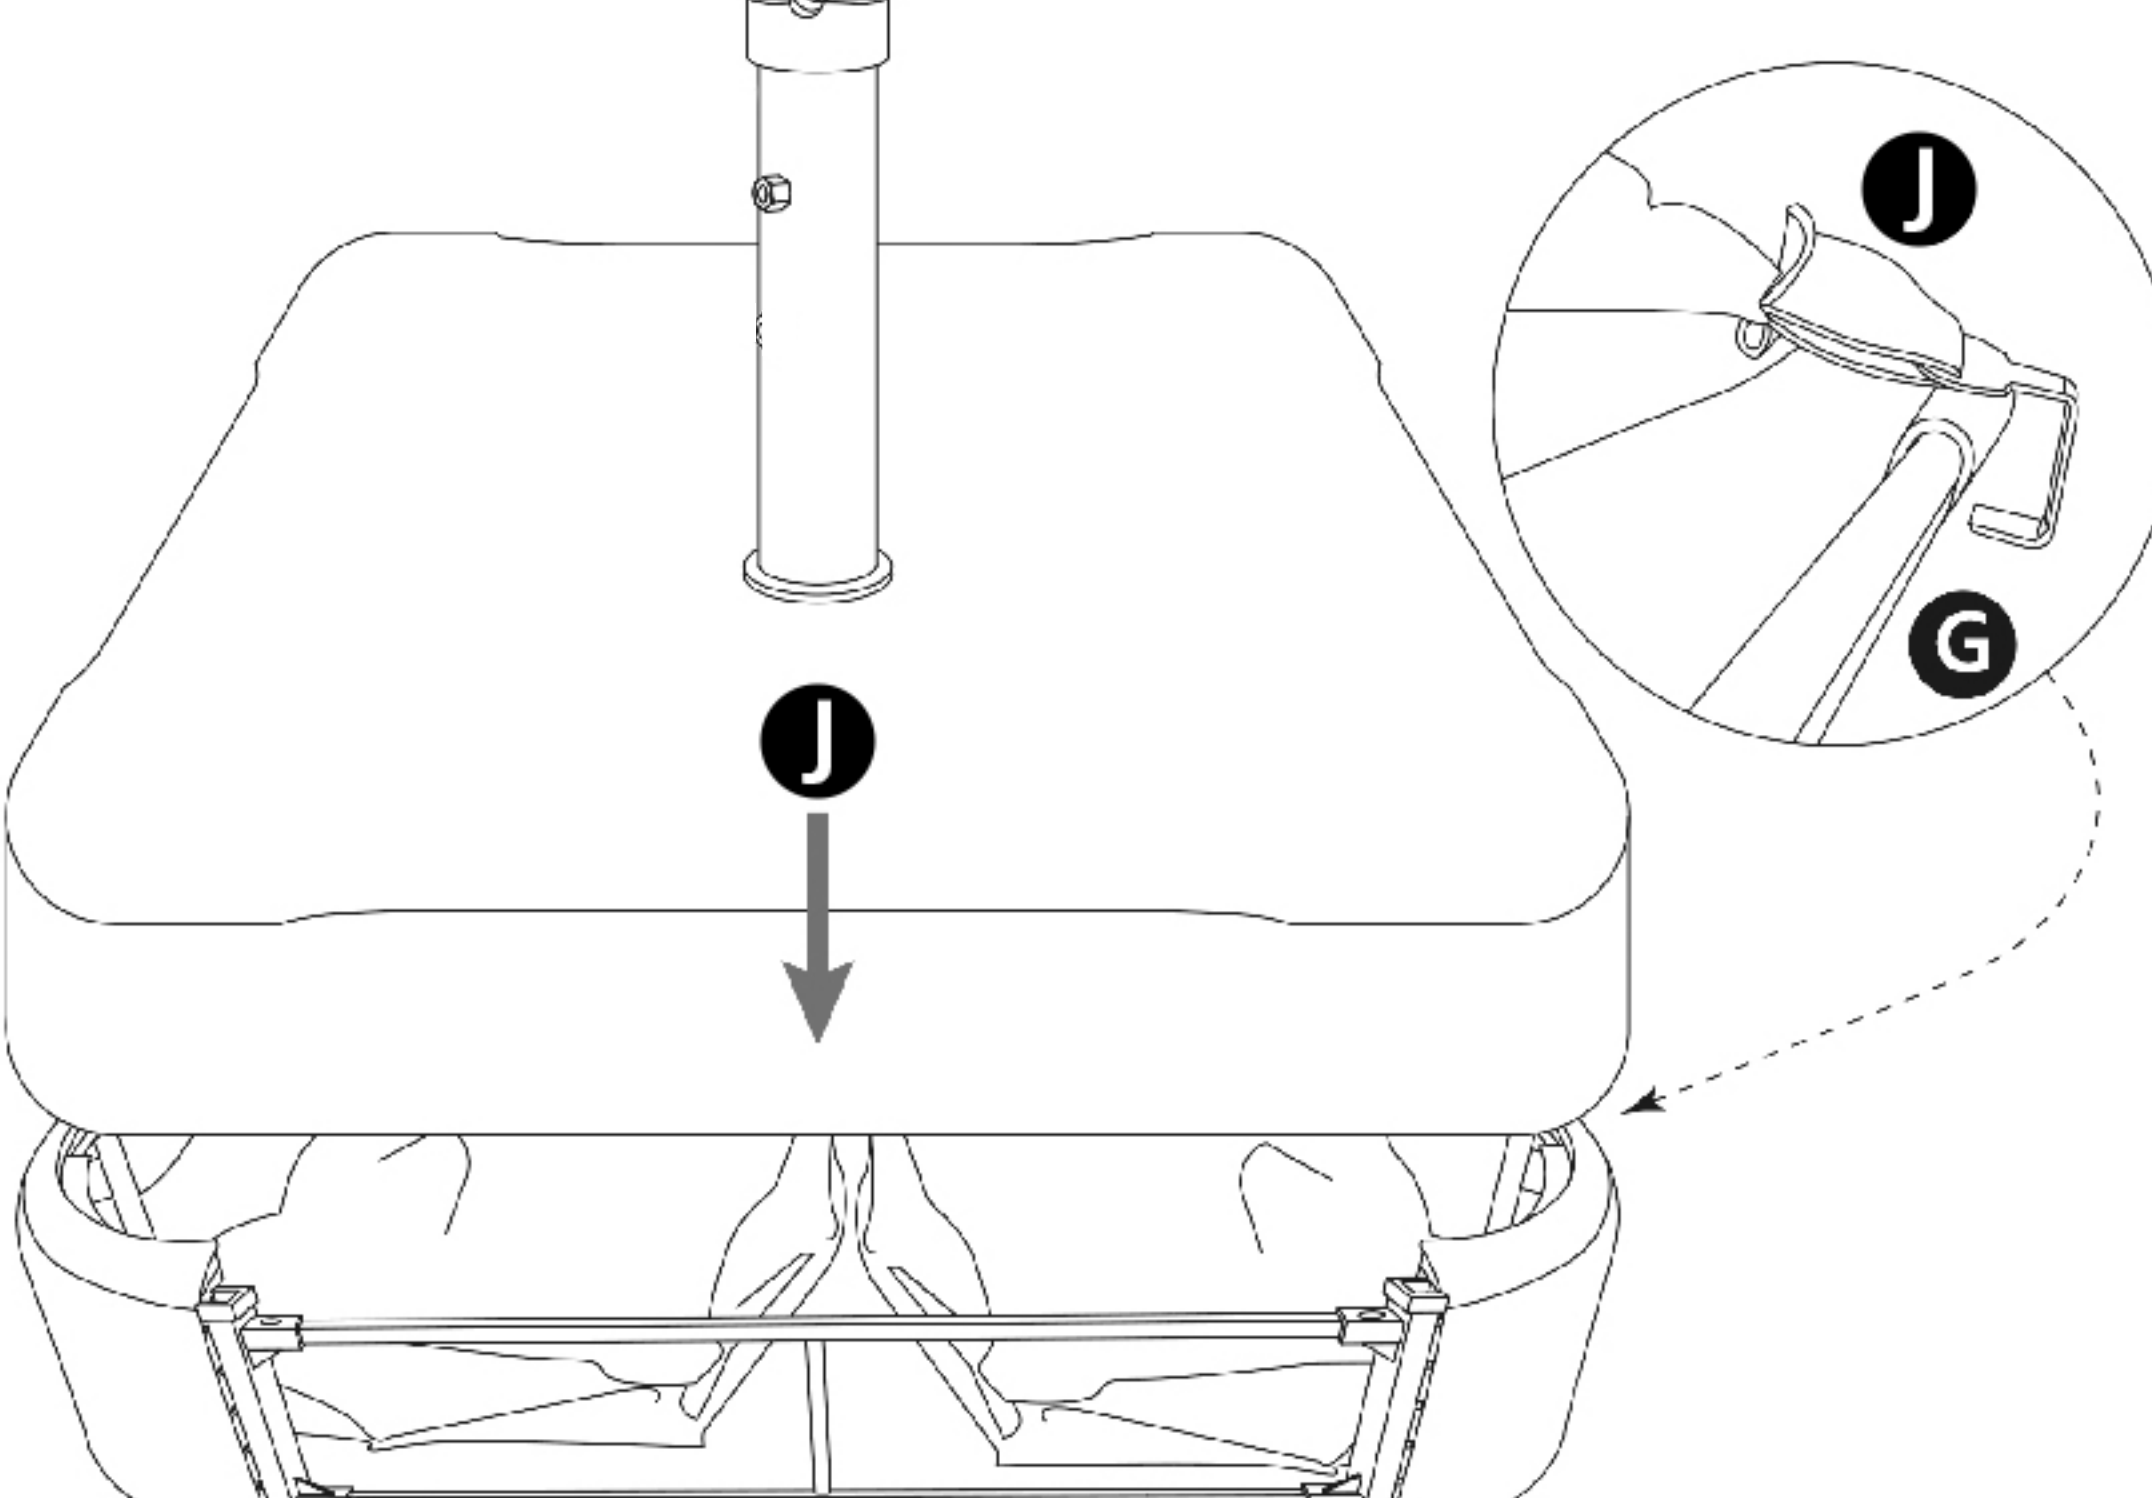



A x1	B x1	C x1	D x4
		 Base tube	 Screw M6
E x4	F x1	G x4	H x4
 Washer	 Thumb screw		
I x2	J x1	K x1	L x1
		 Spanner	 Umbrella body

01 	02 
03 	04  filled sand into bag
05 	06 

07

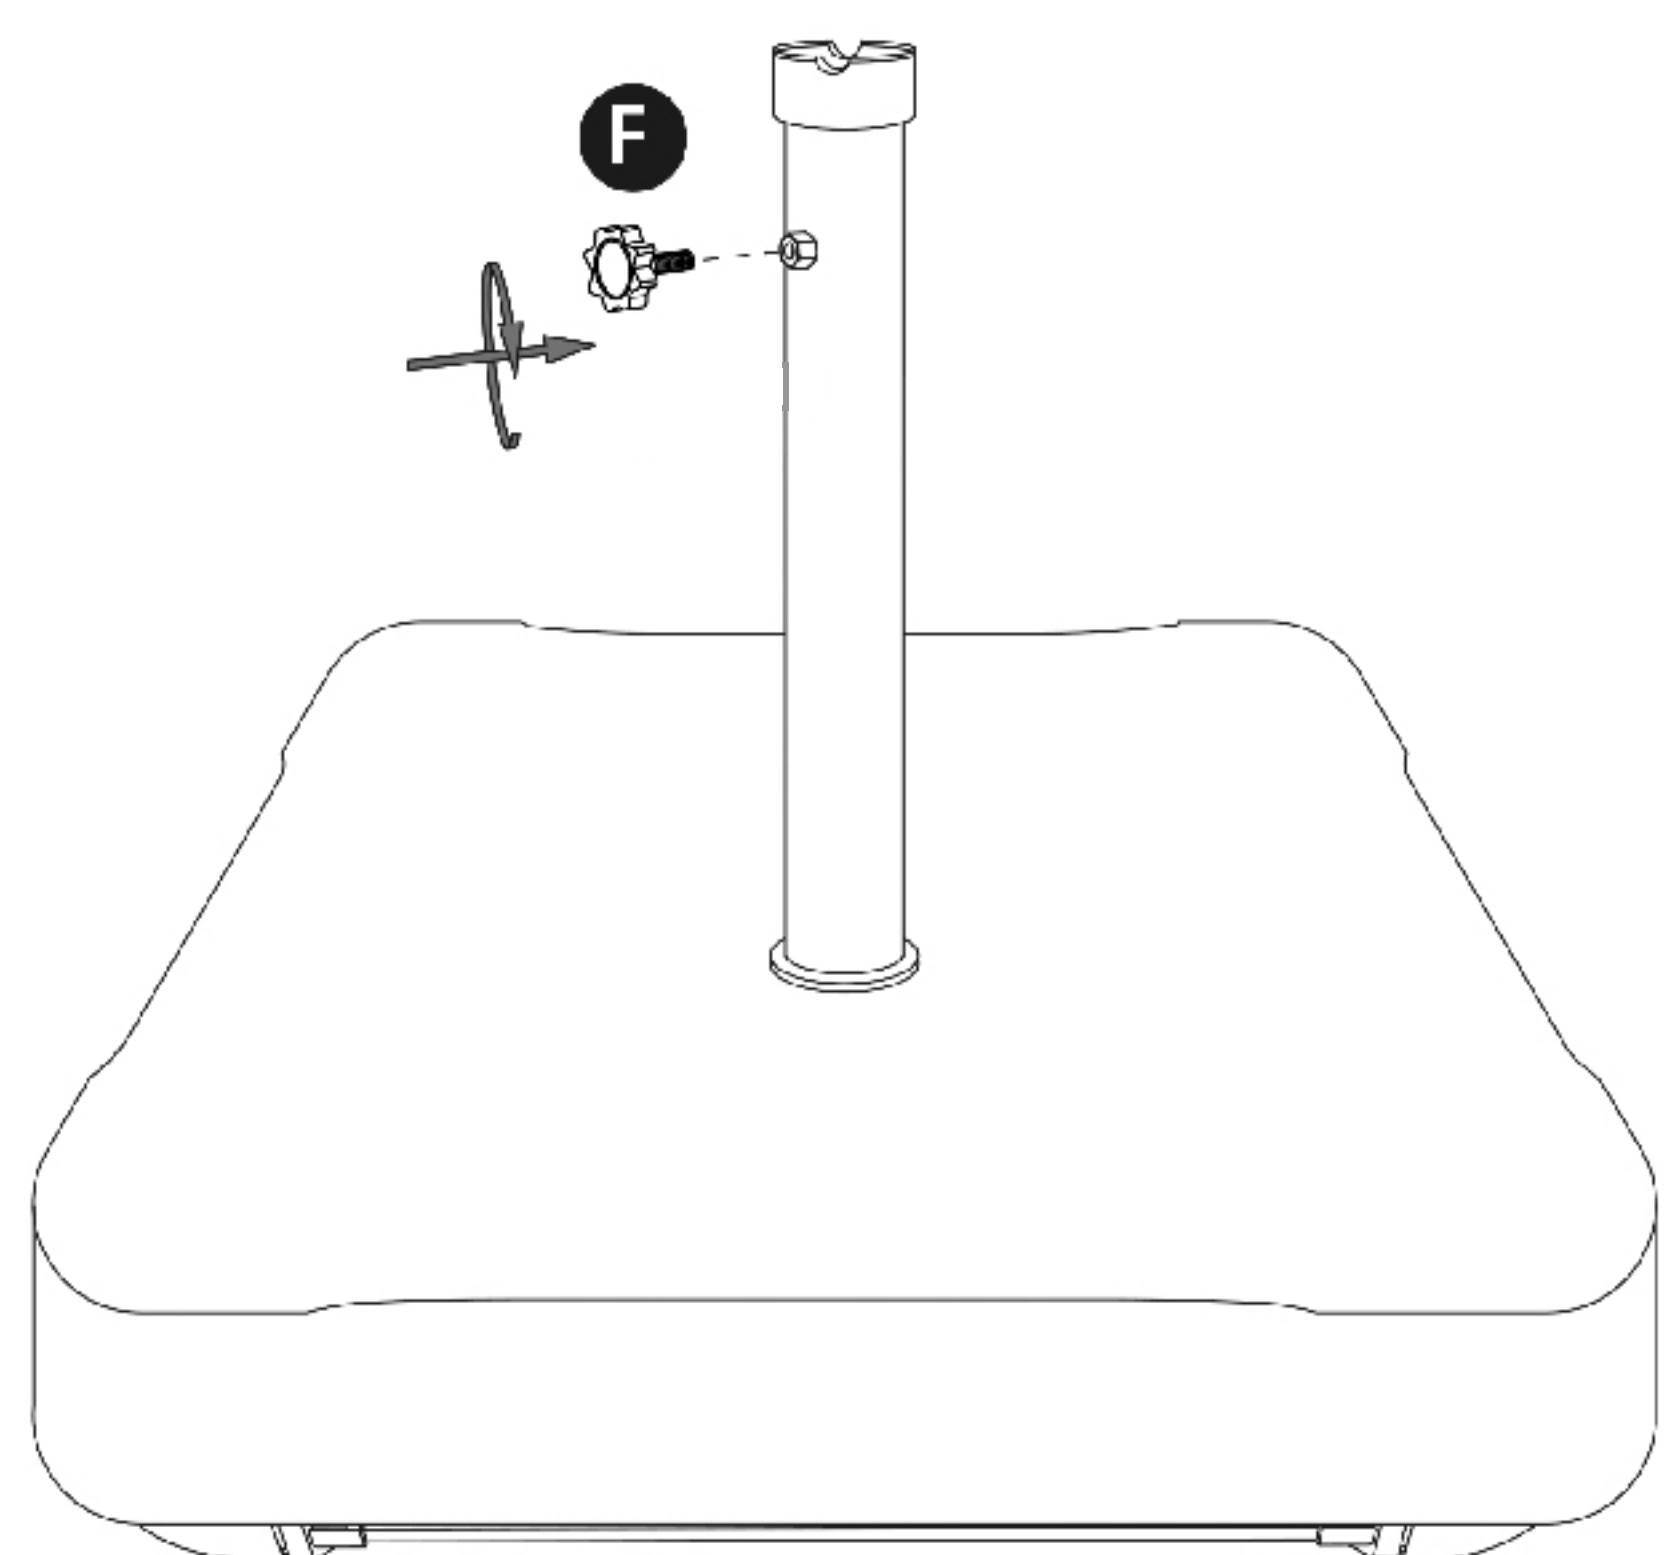


08

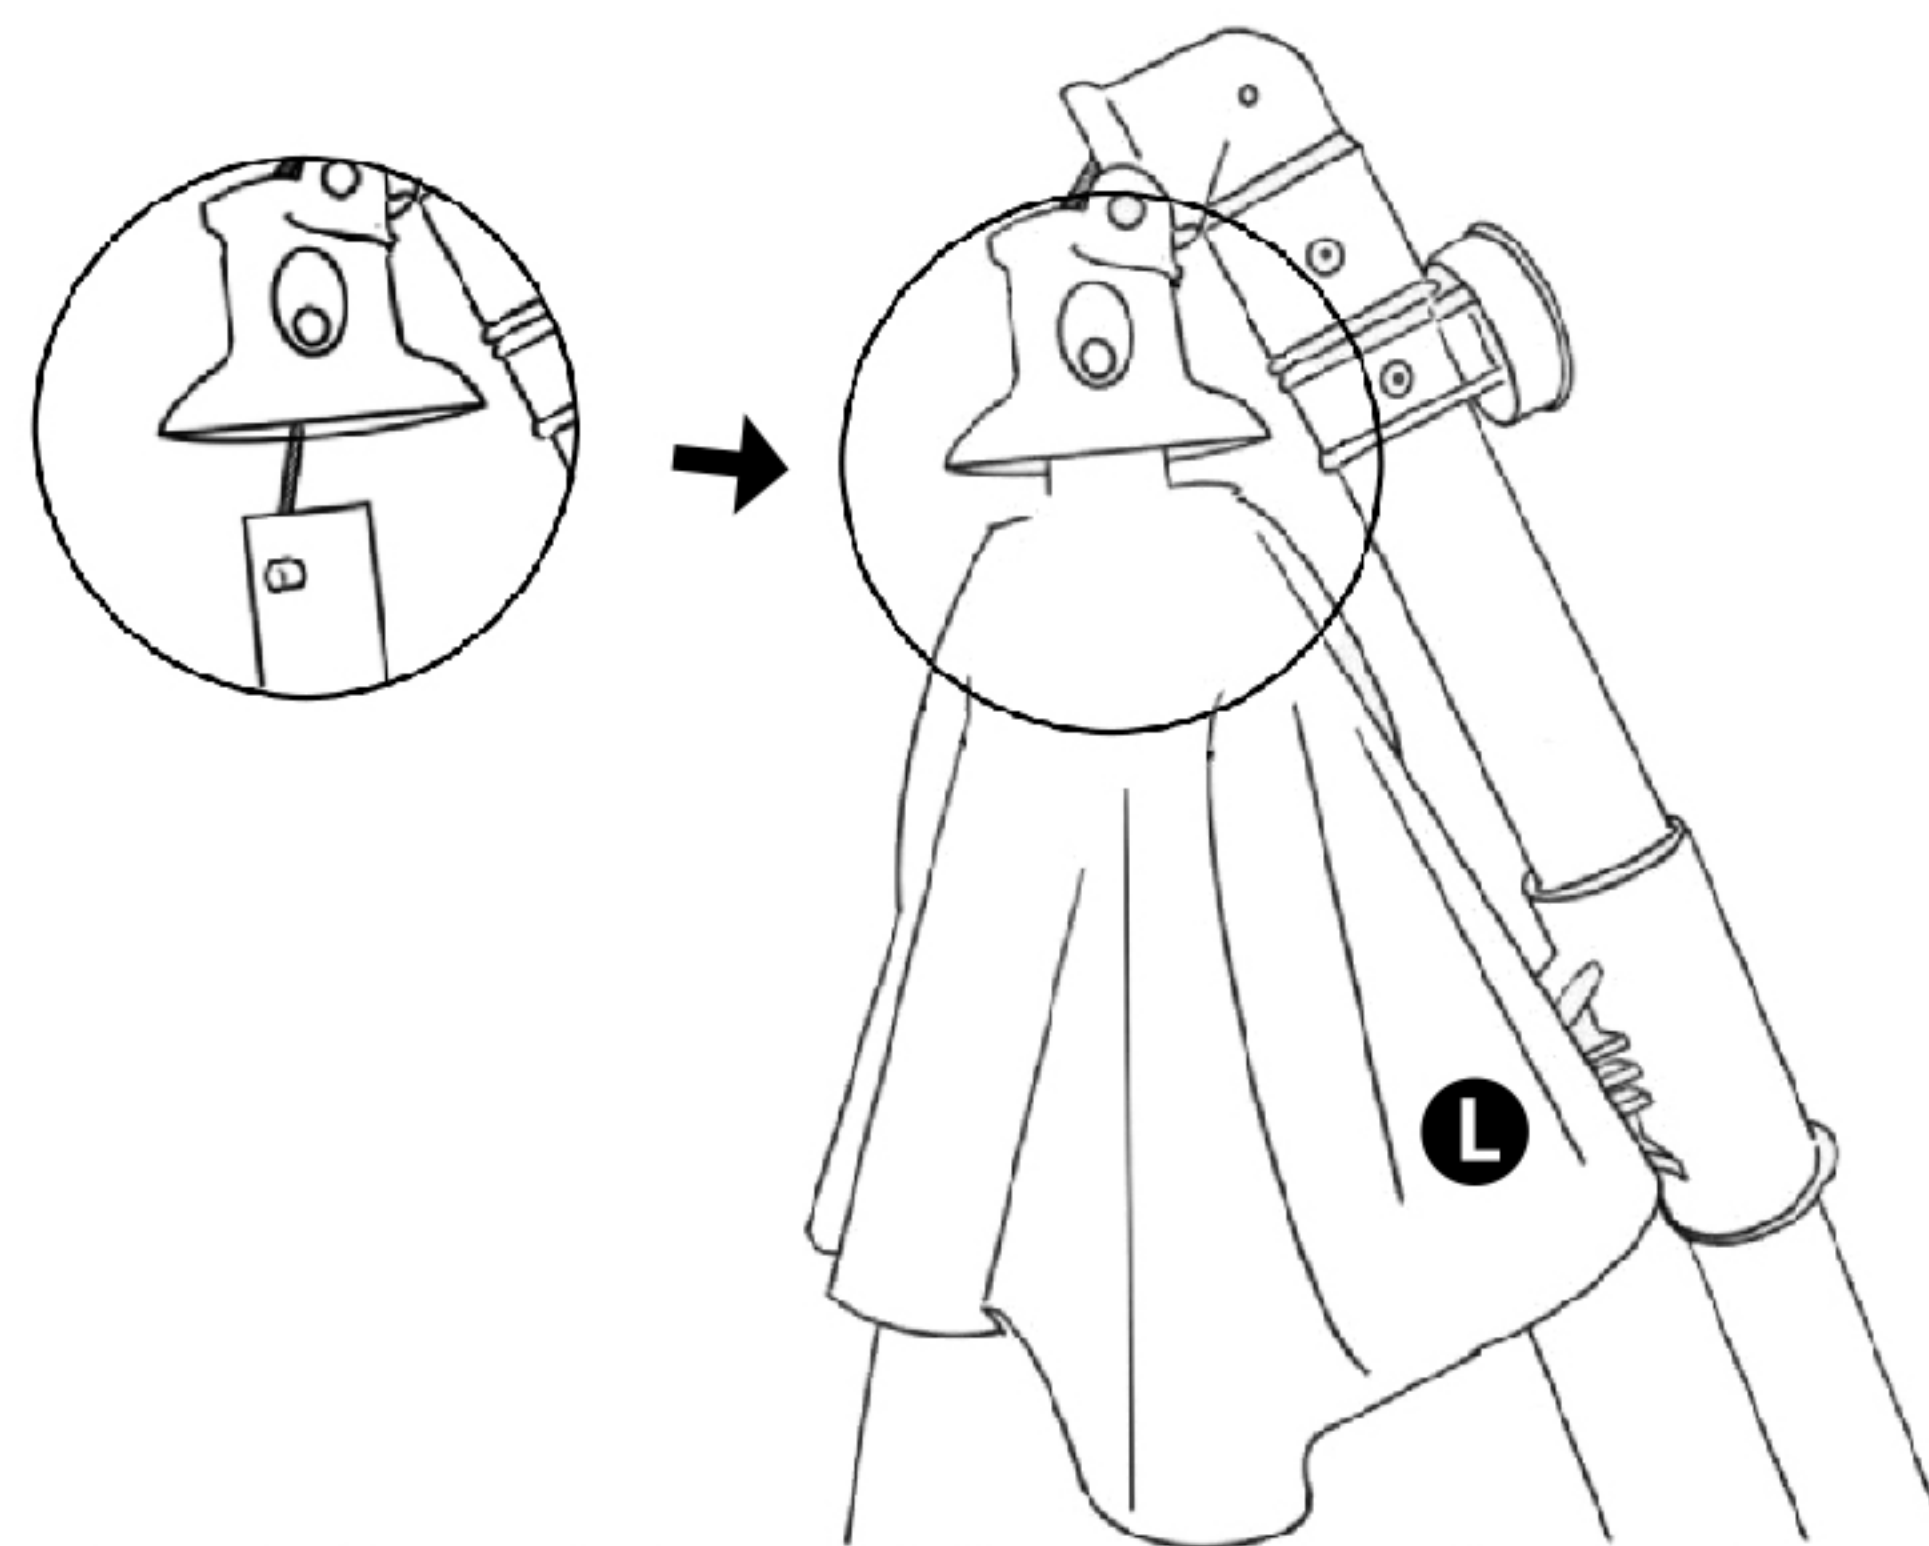


1. Please check the status of the umbrella before assembly.
2. Press the button on the umbrella and install the umbrella to the top of the cantilever.

09

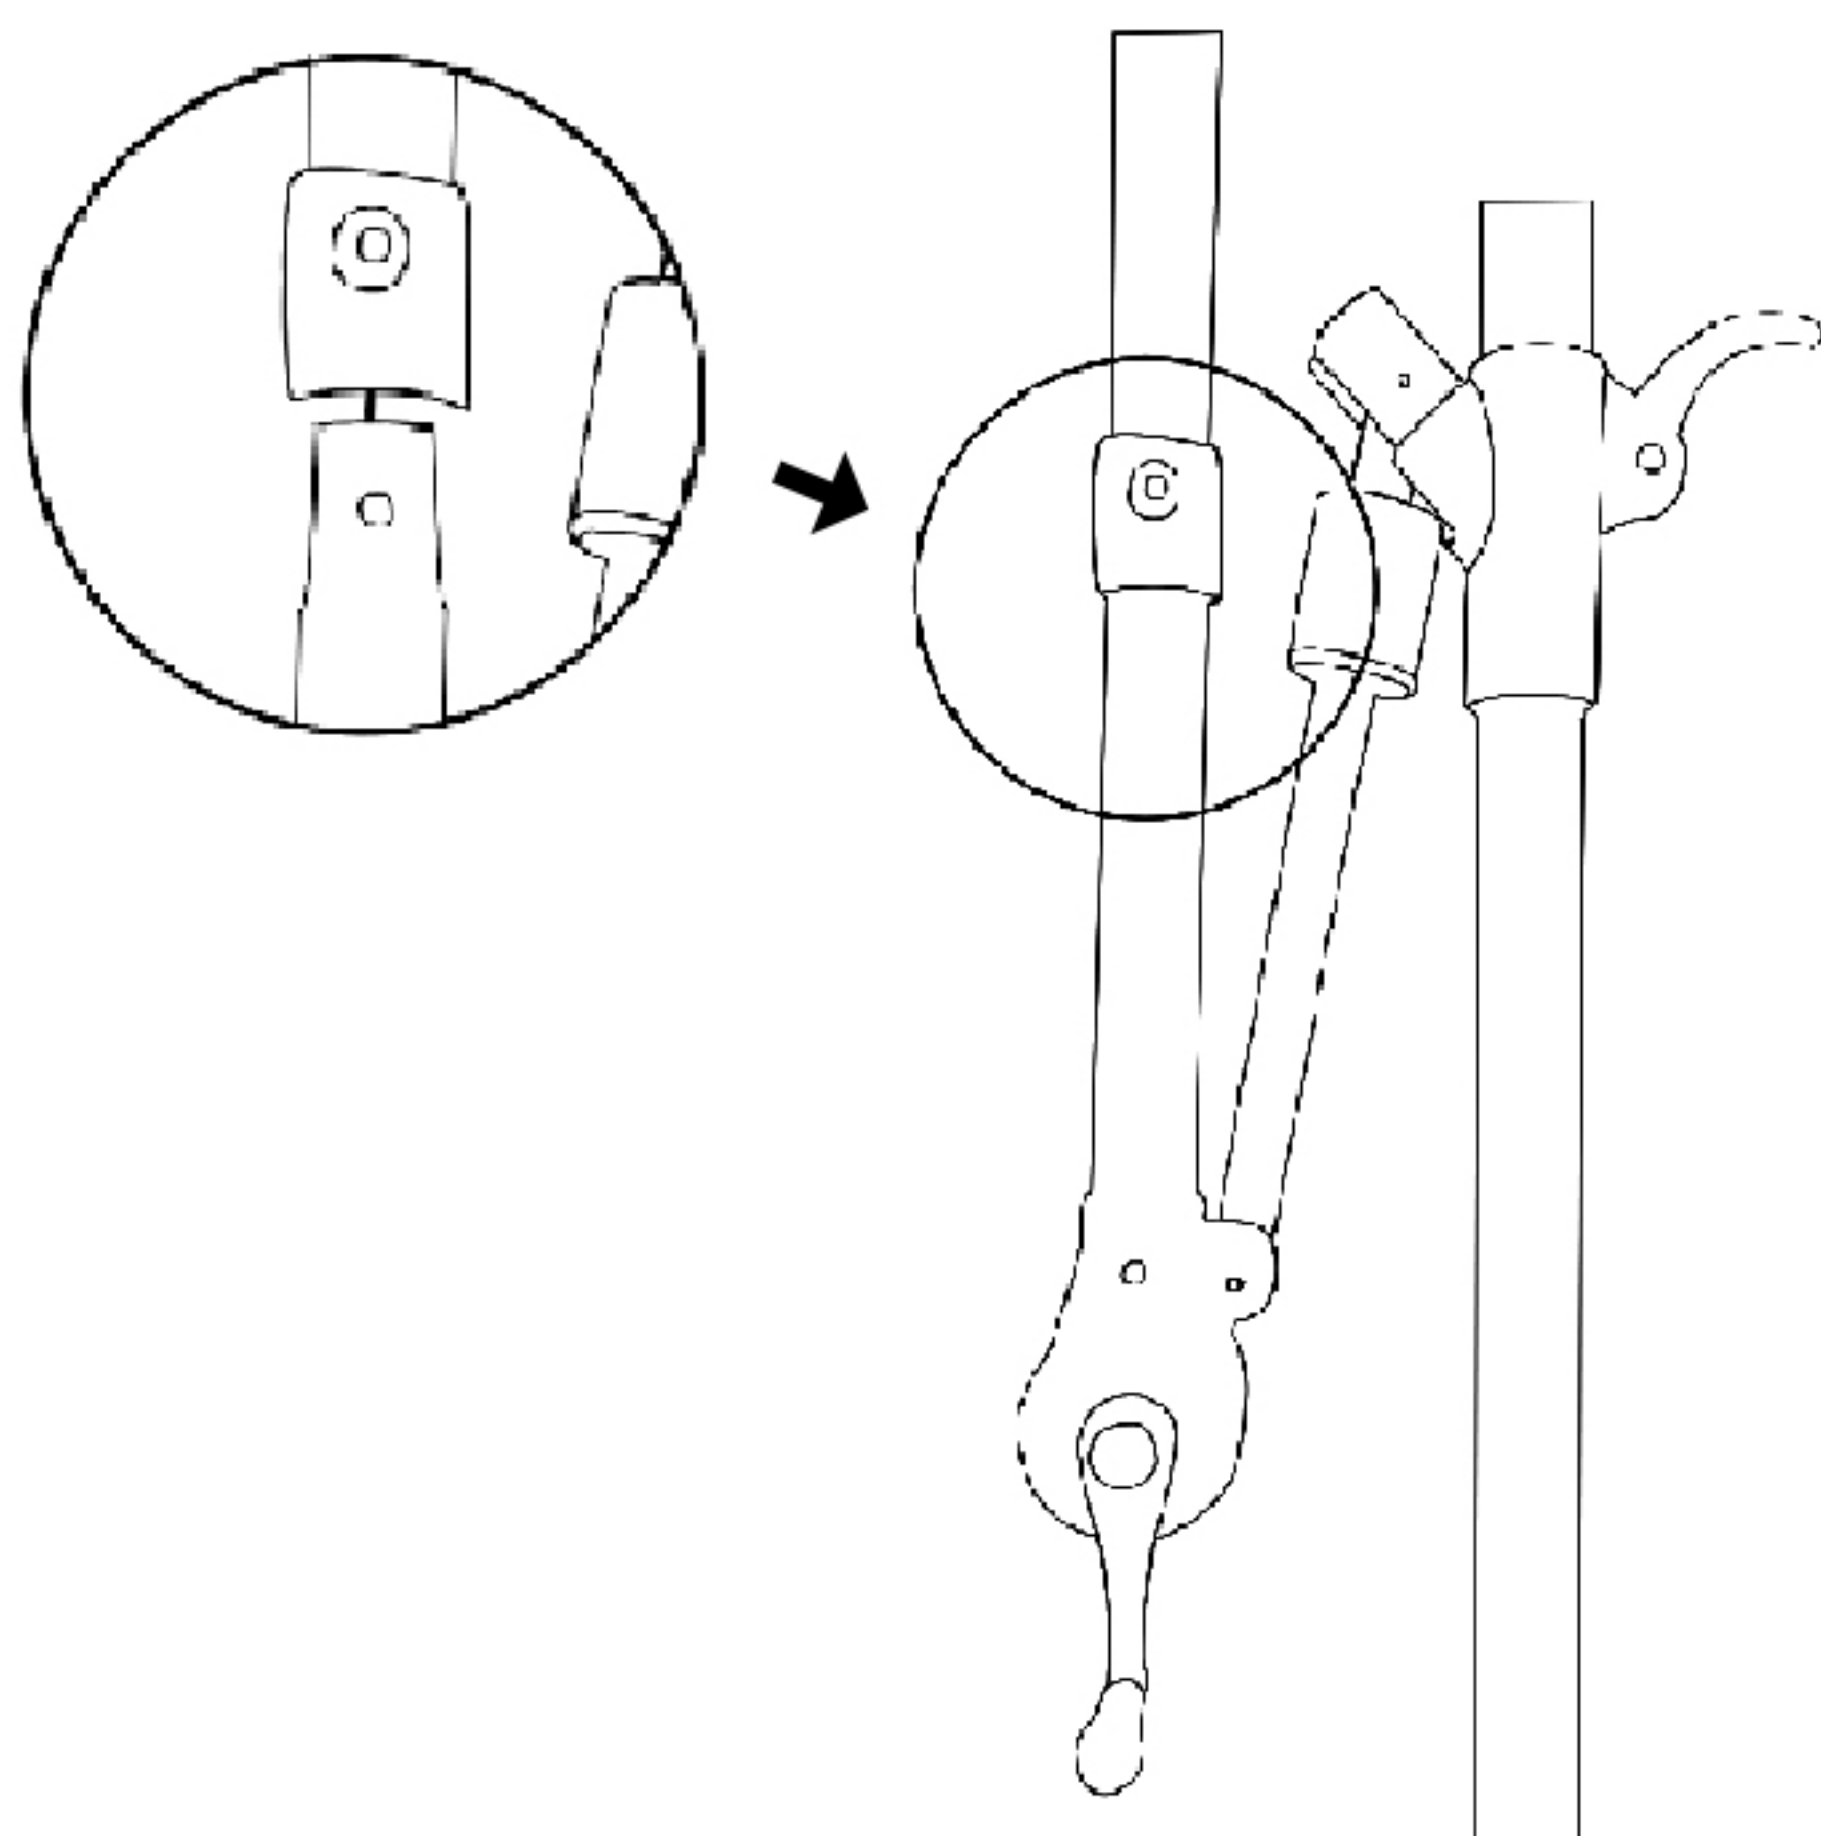


Press the button and install the two tubes together

10

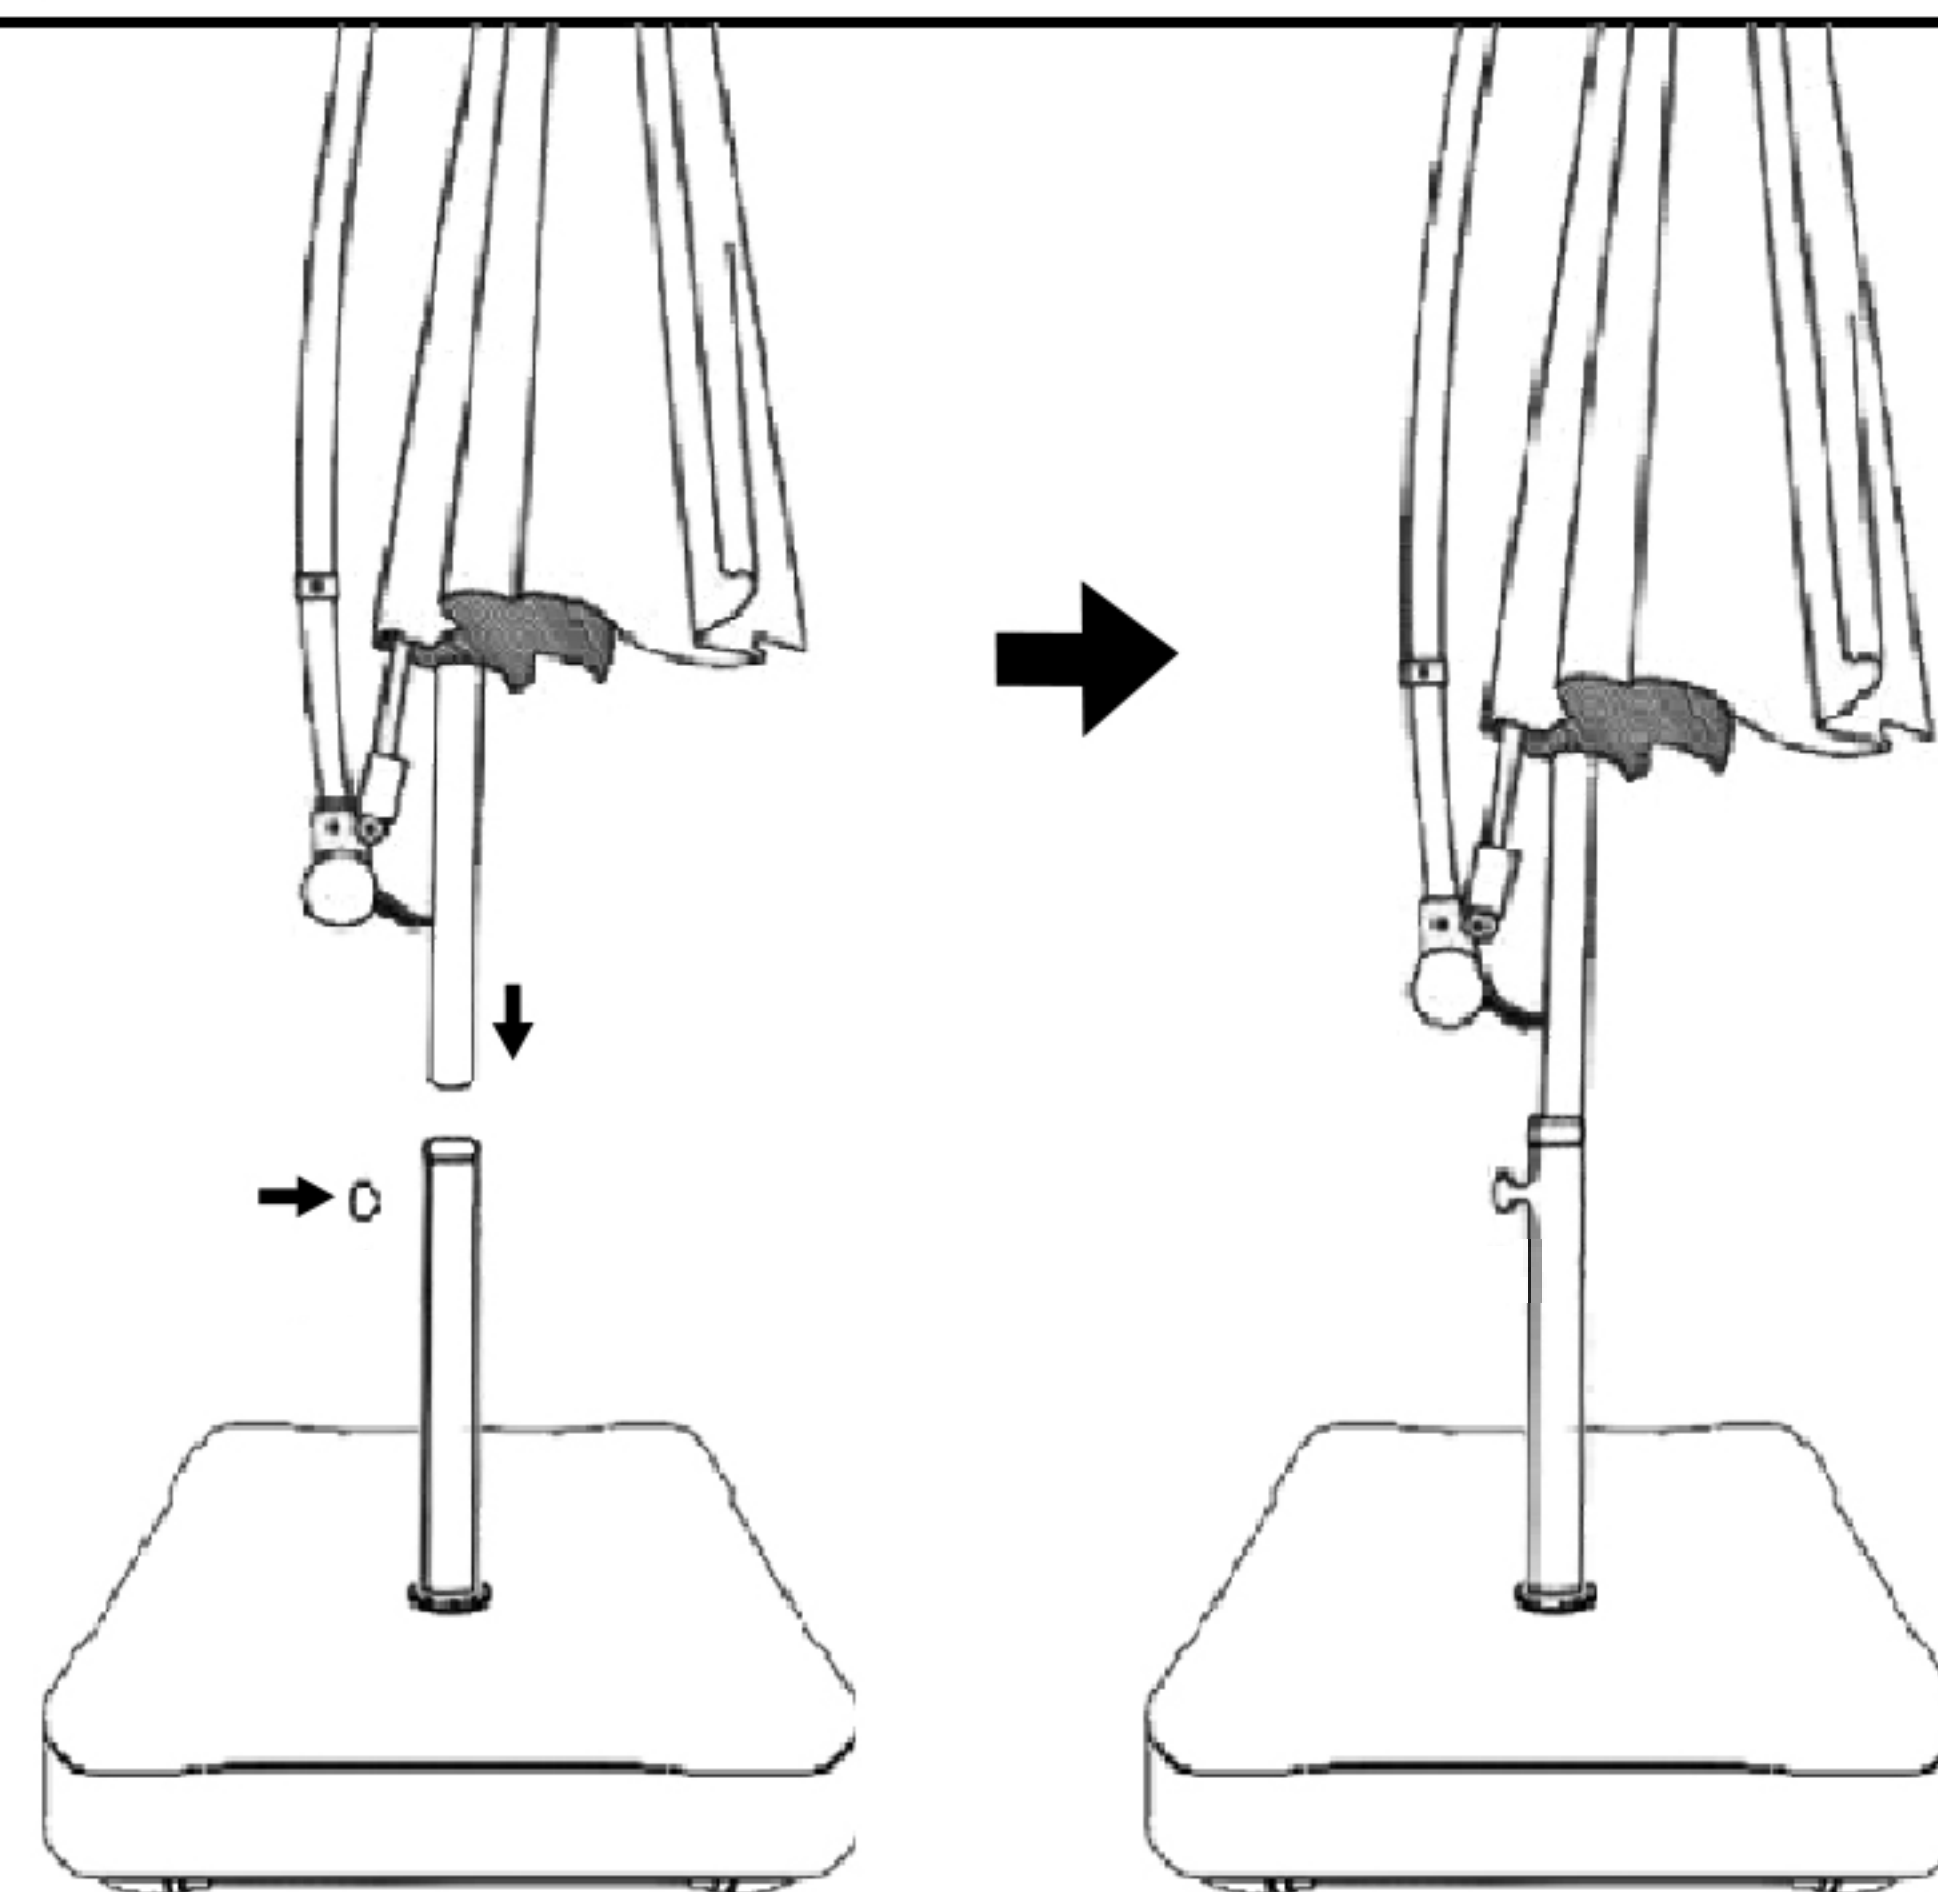


1. Please install the base tube (C) to a compatible umbrella base
2. Install the umbrella body (A) to the base tube (C) with 2 thumb screws (D) before opening the umbrella.

11

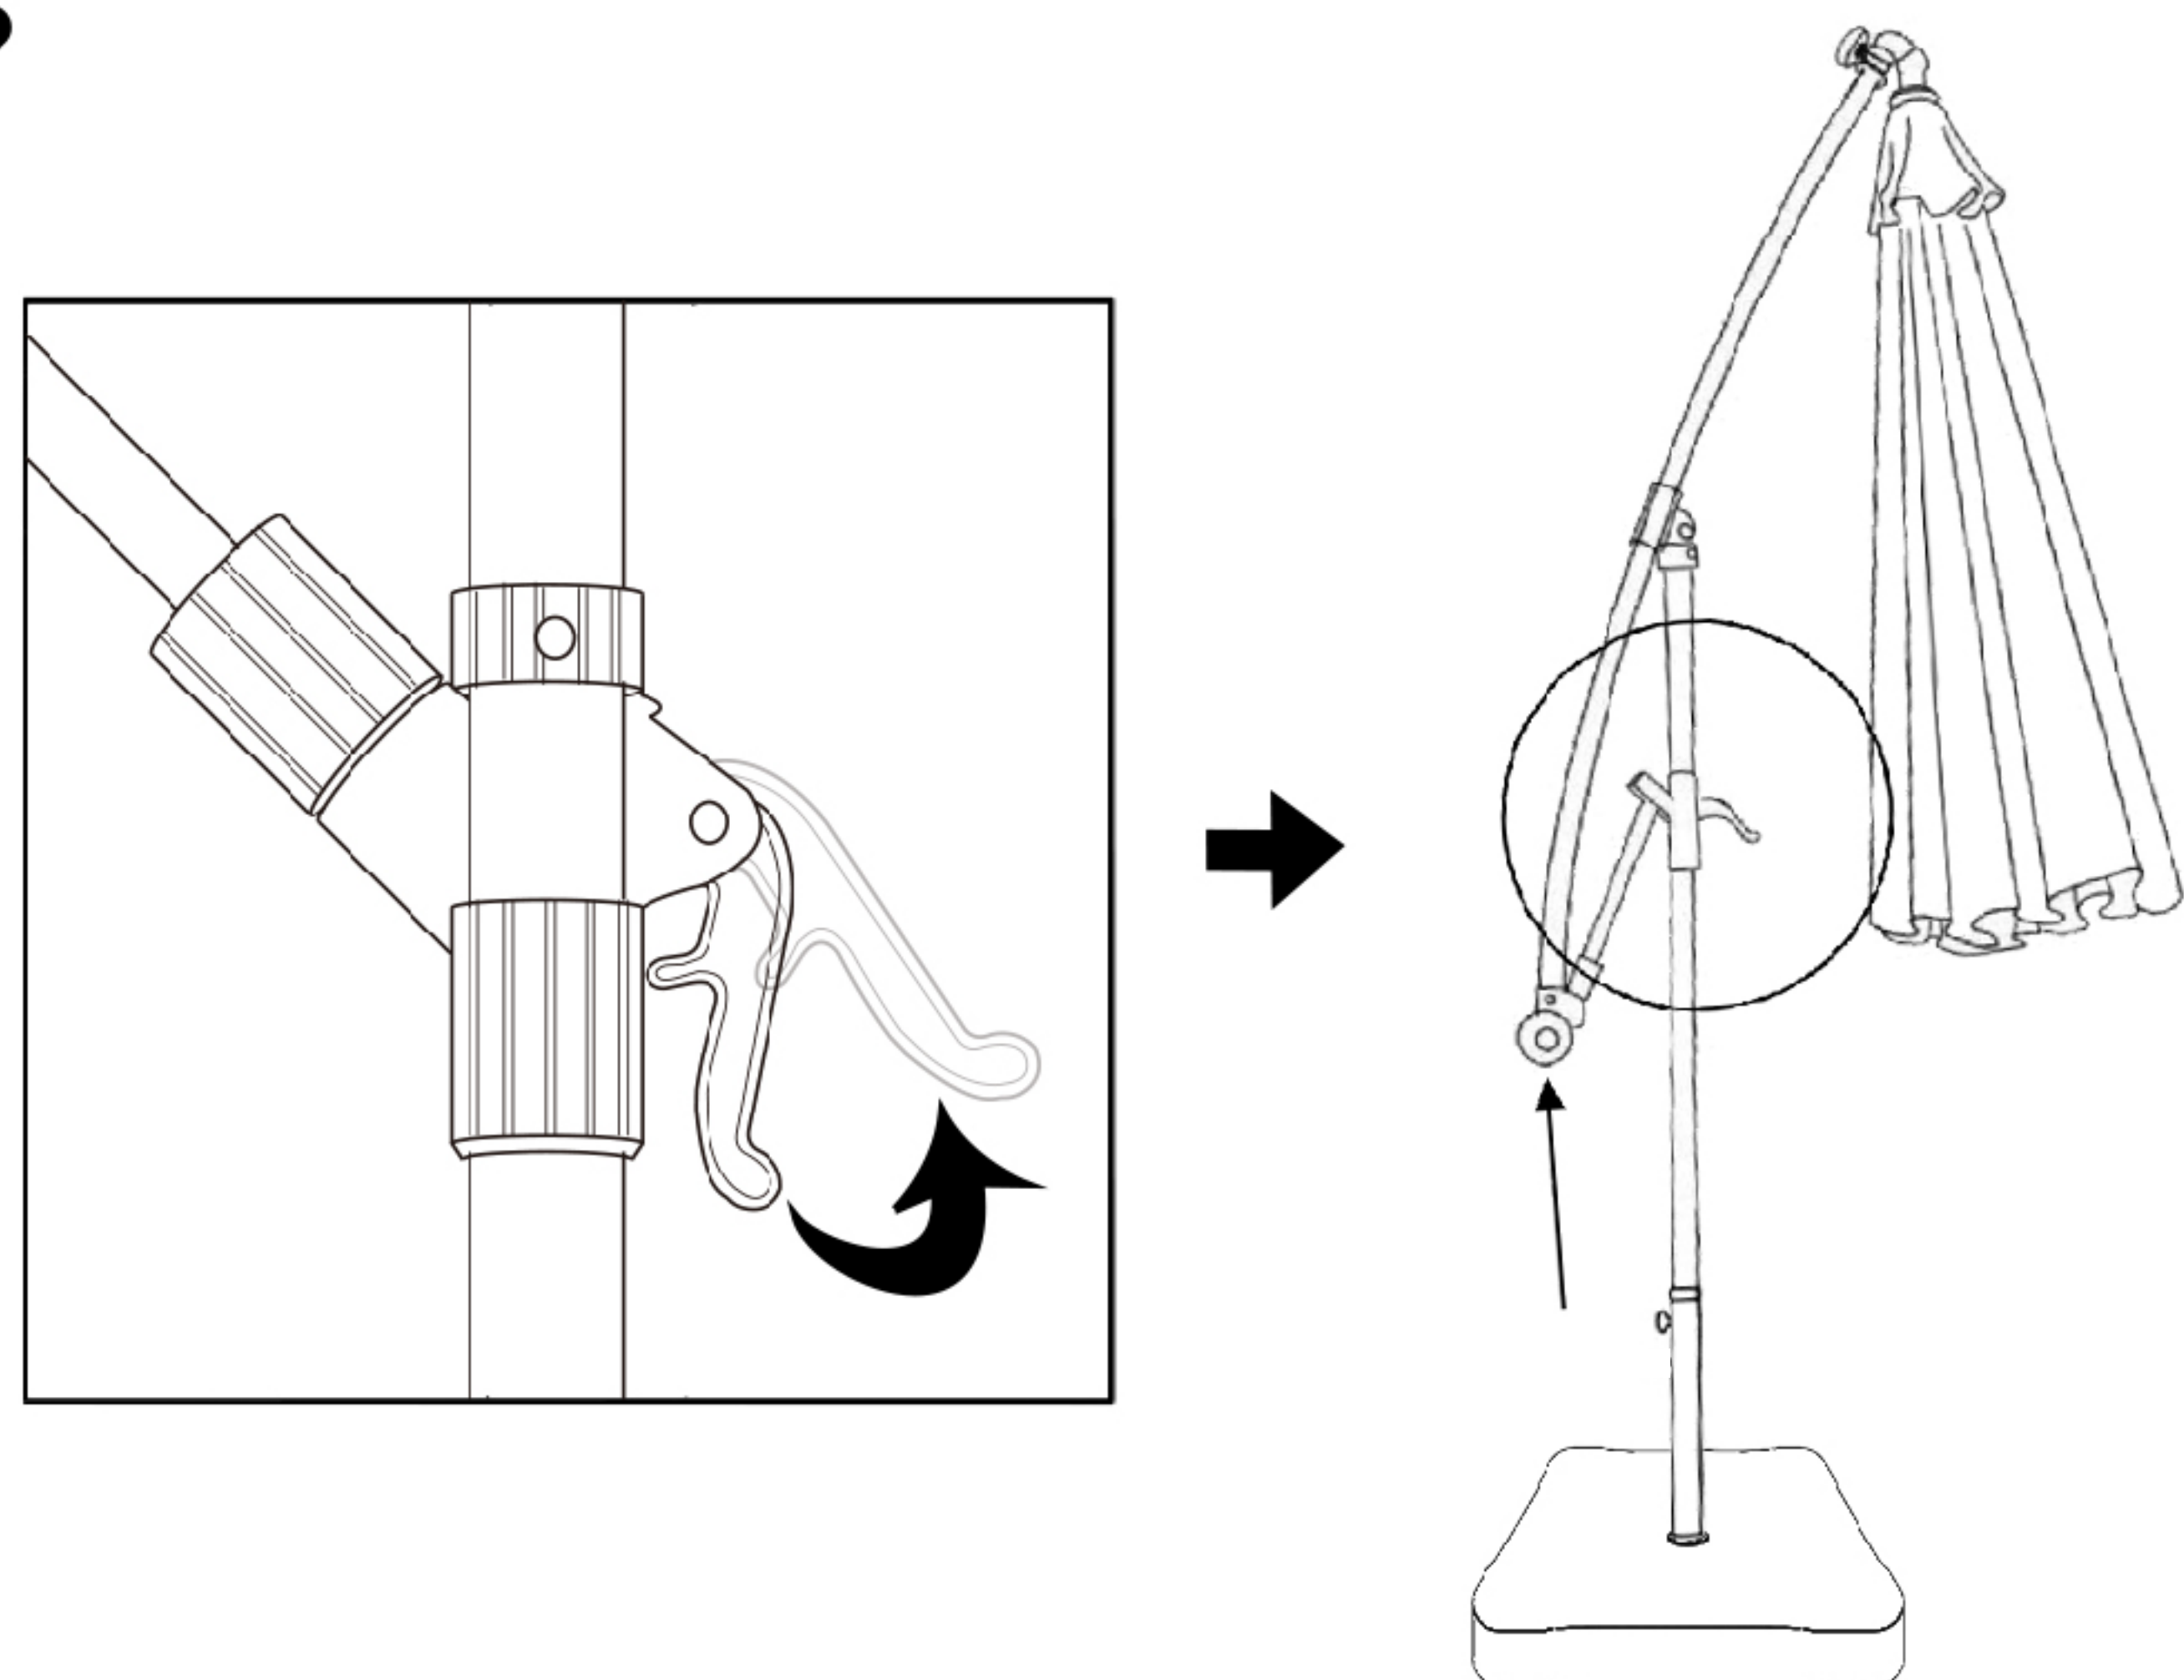


Push the handle to its highest point, then lock it.

12

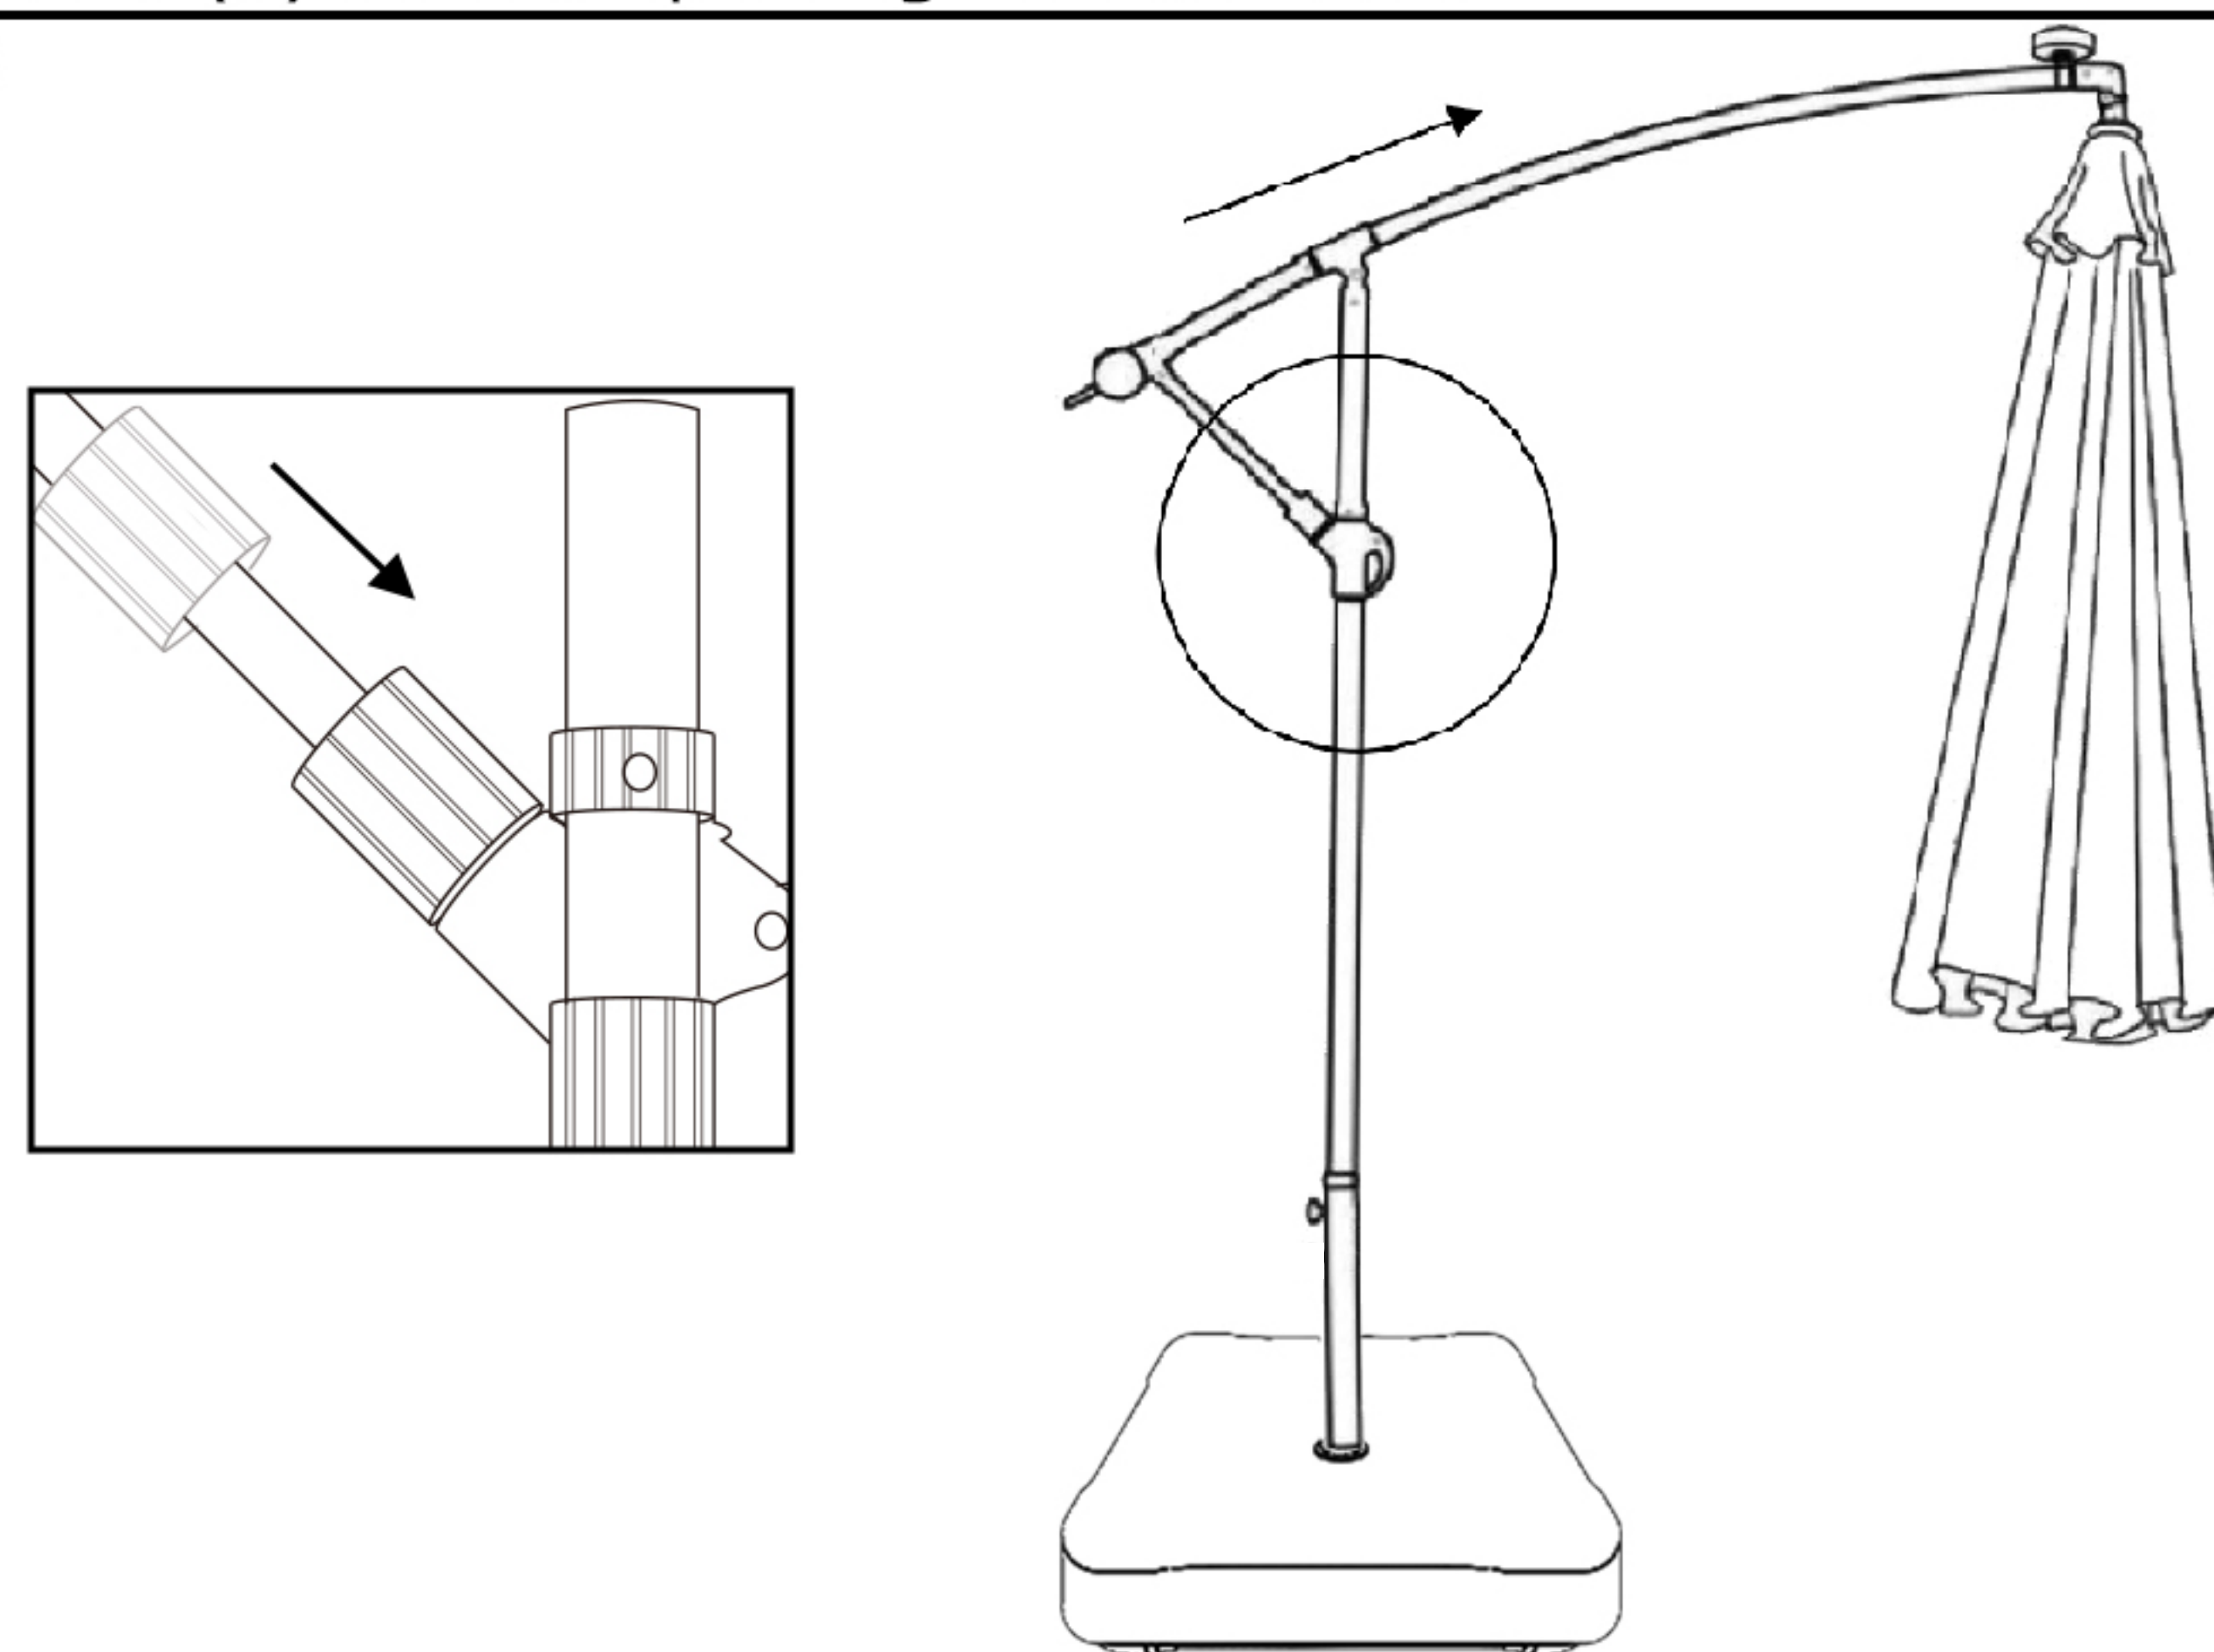


Push the cantilever forward, then push the plastic tube down to hold the cantilever in place.

13

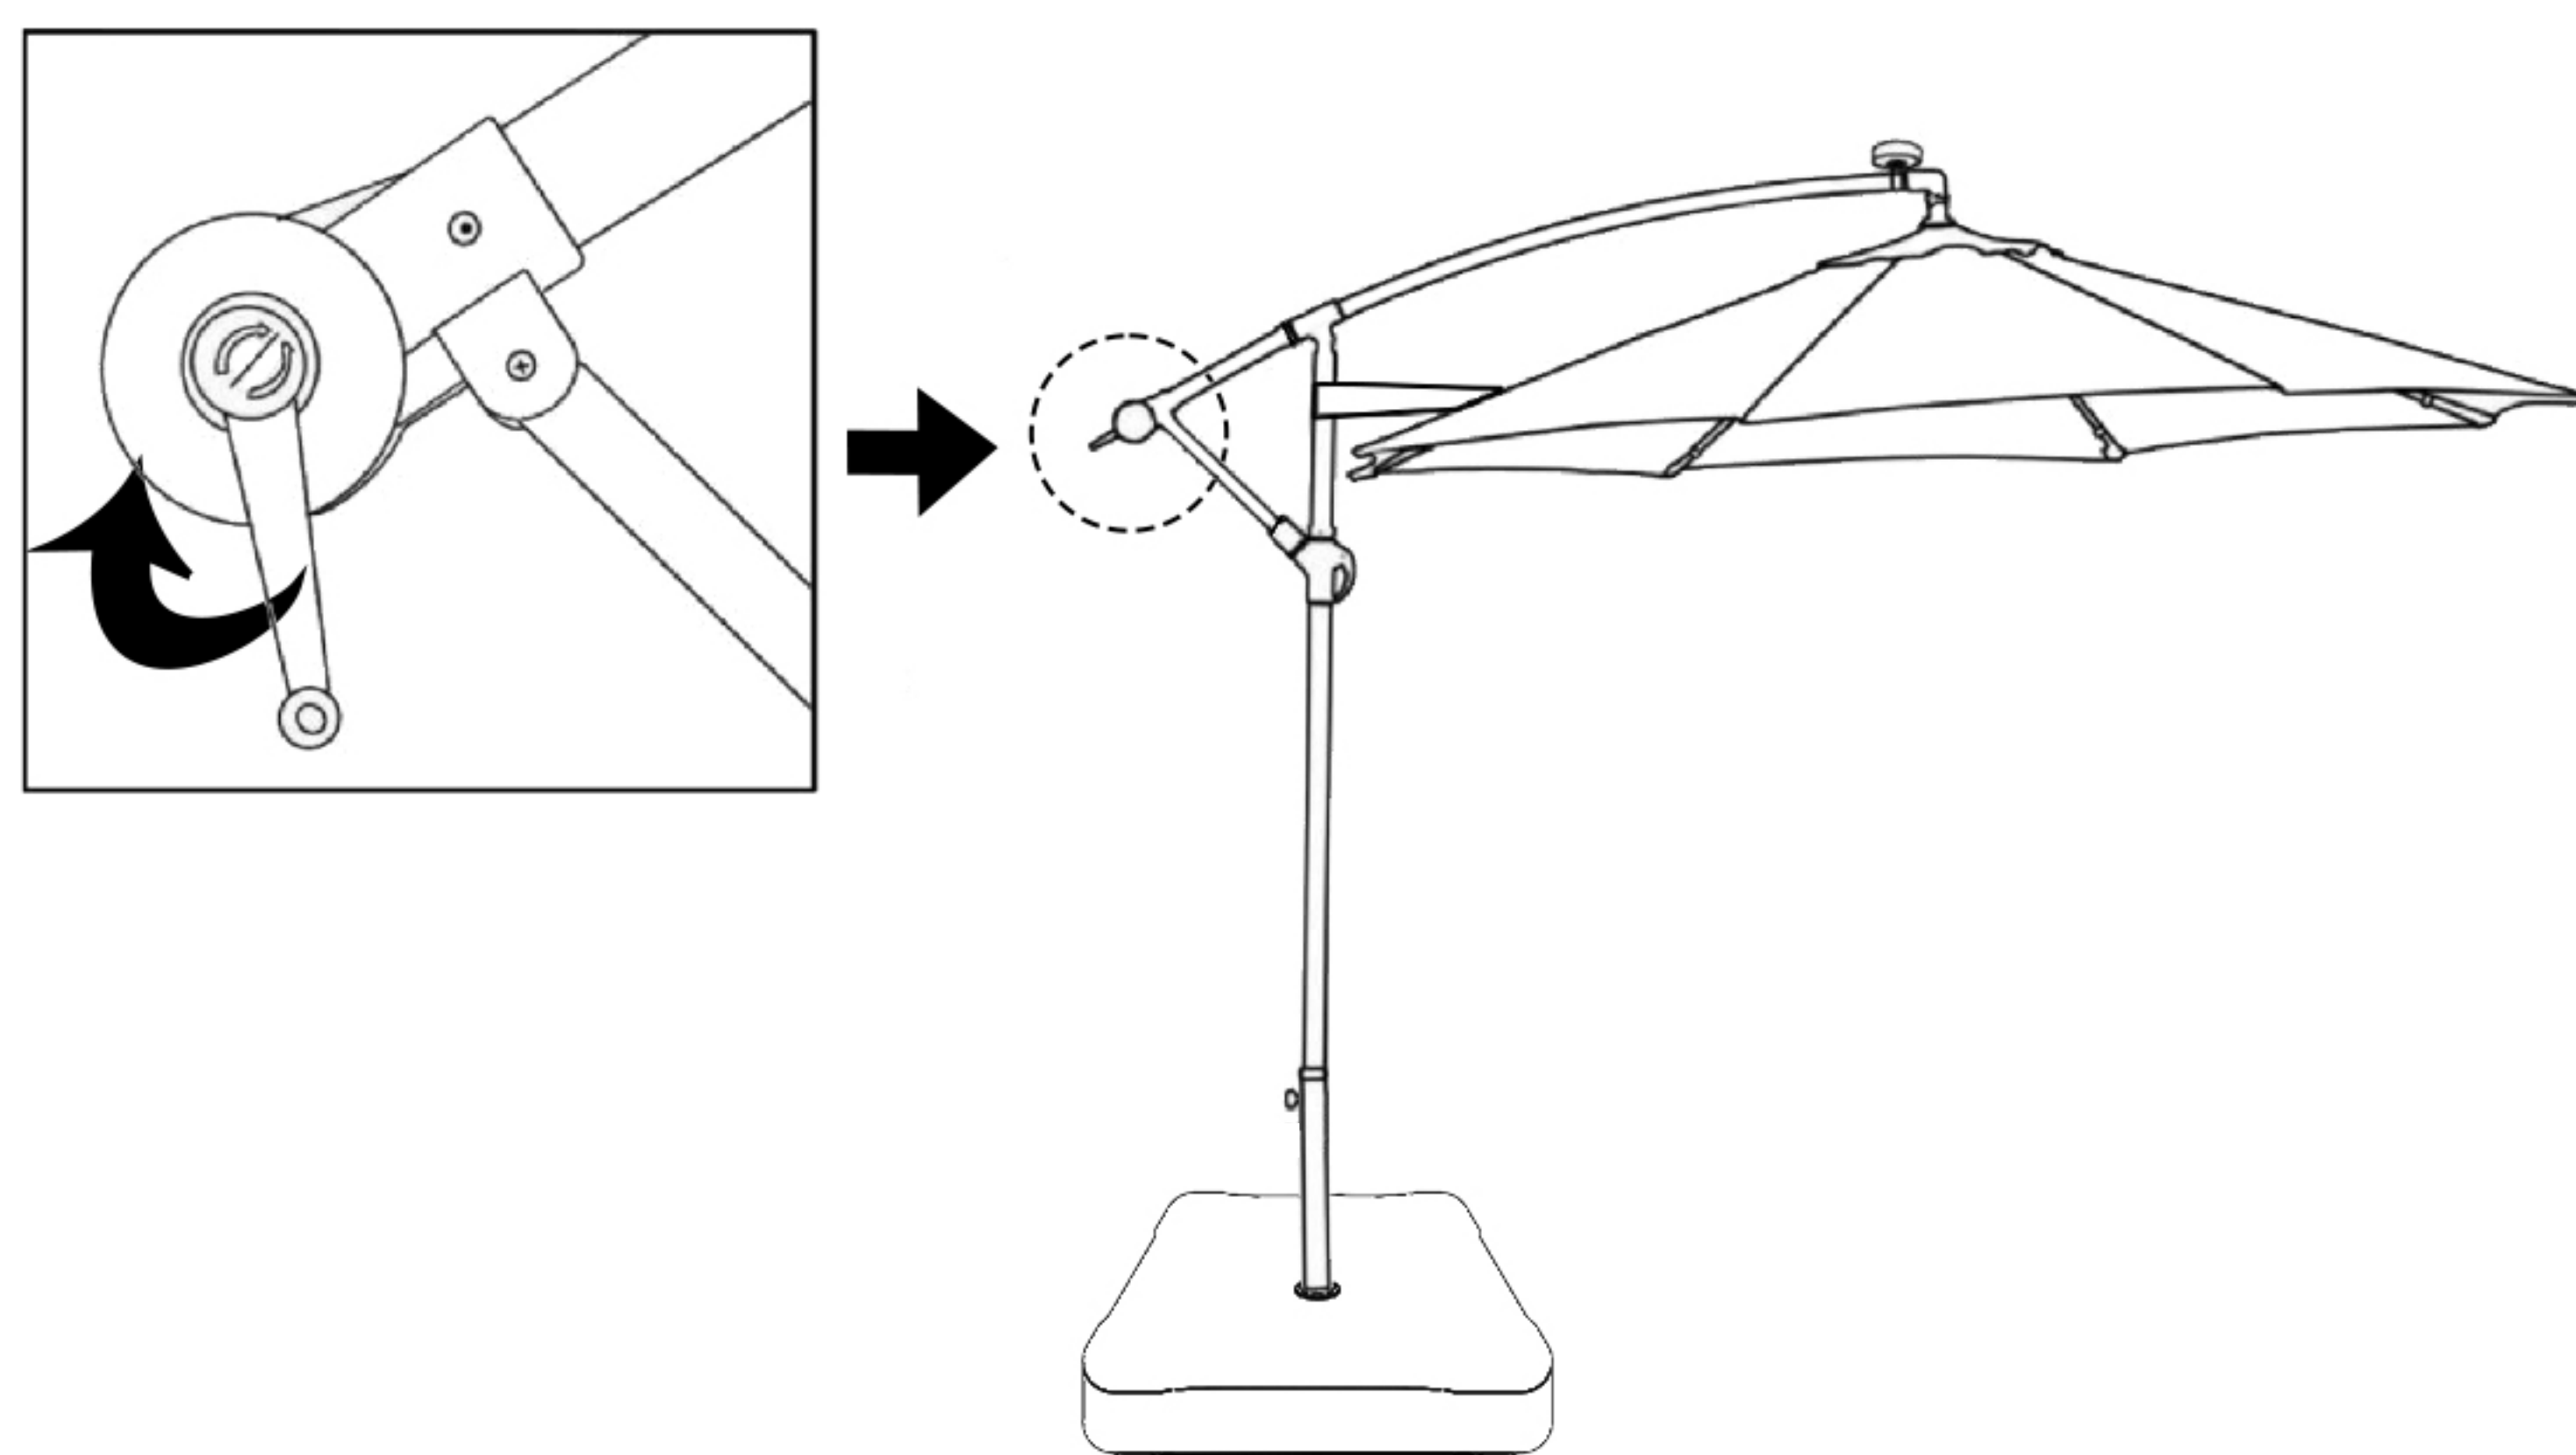

Turn the crank clockwise to open the umbrella, then secure the umbrella with the loop

14

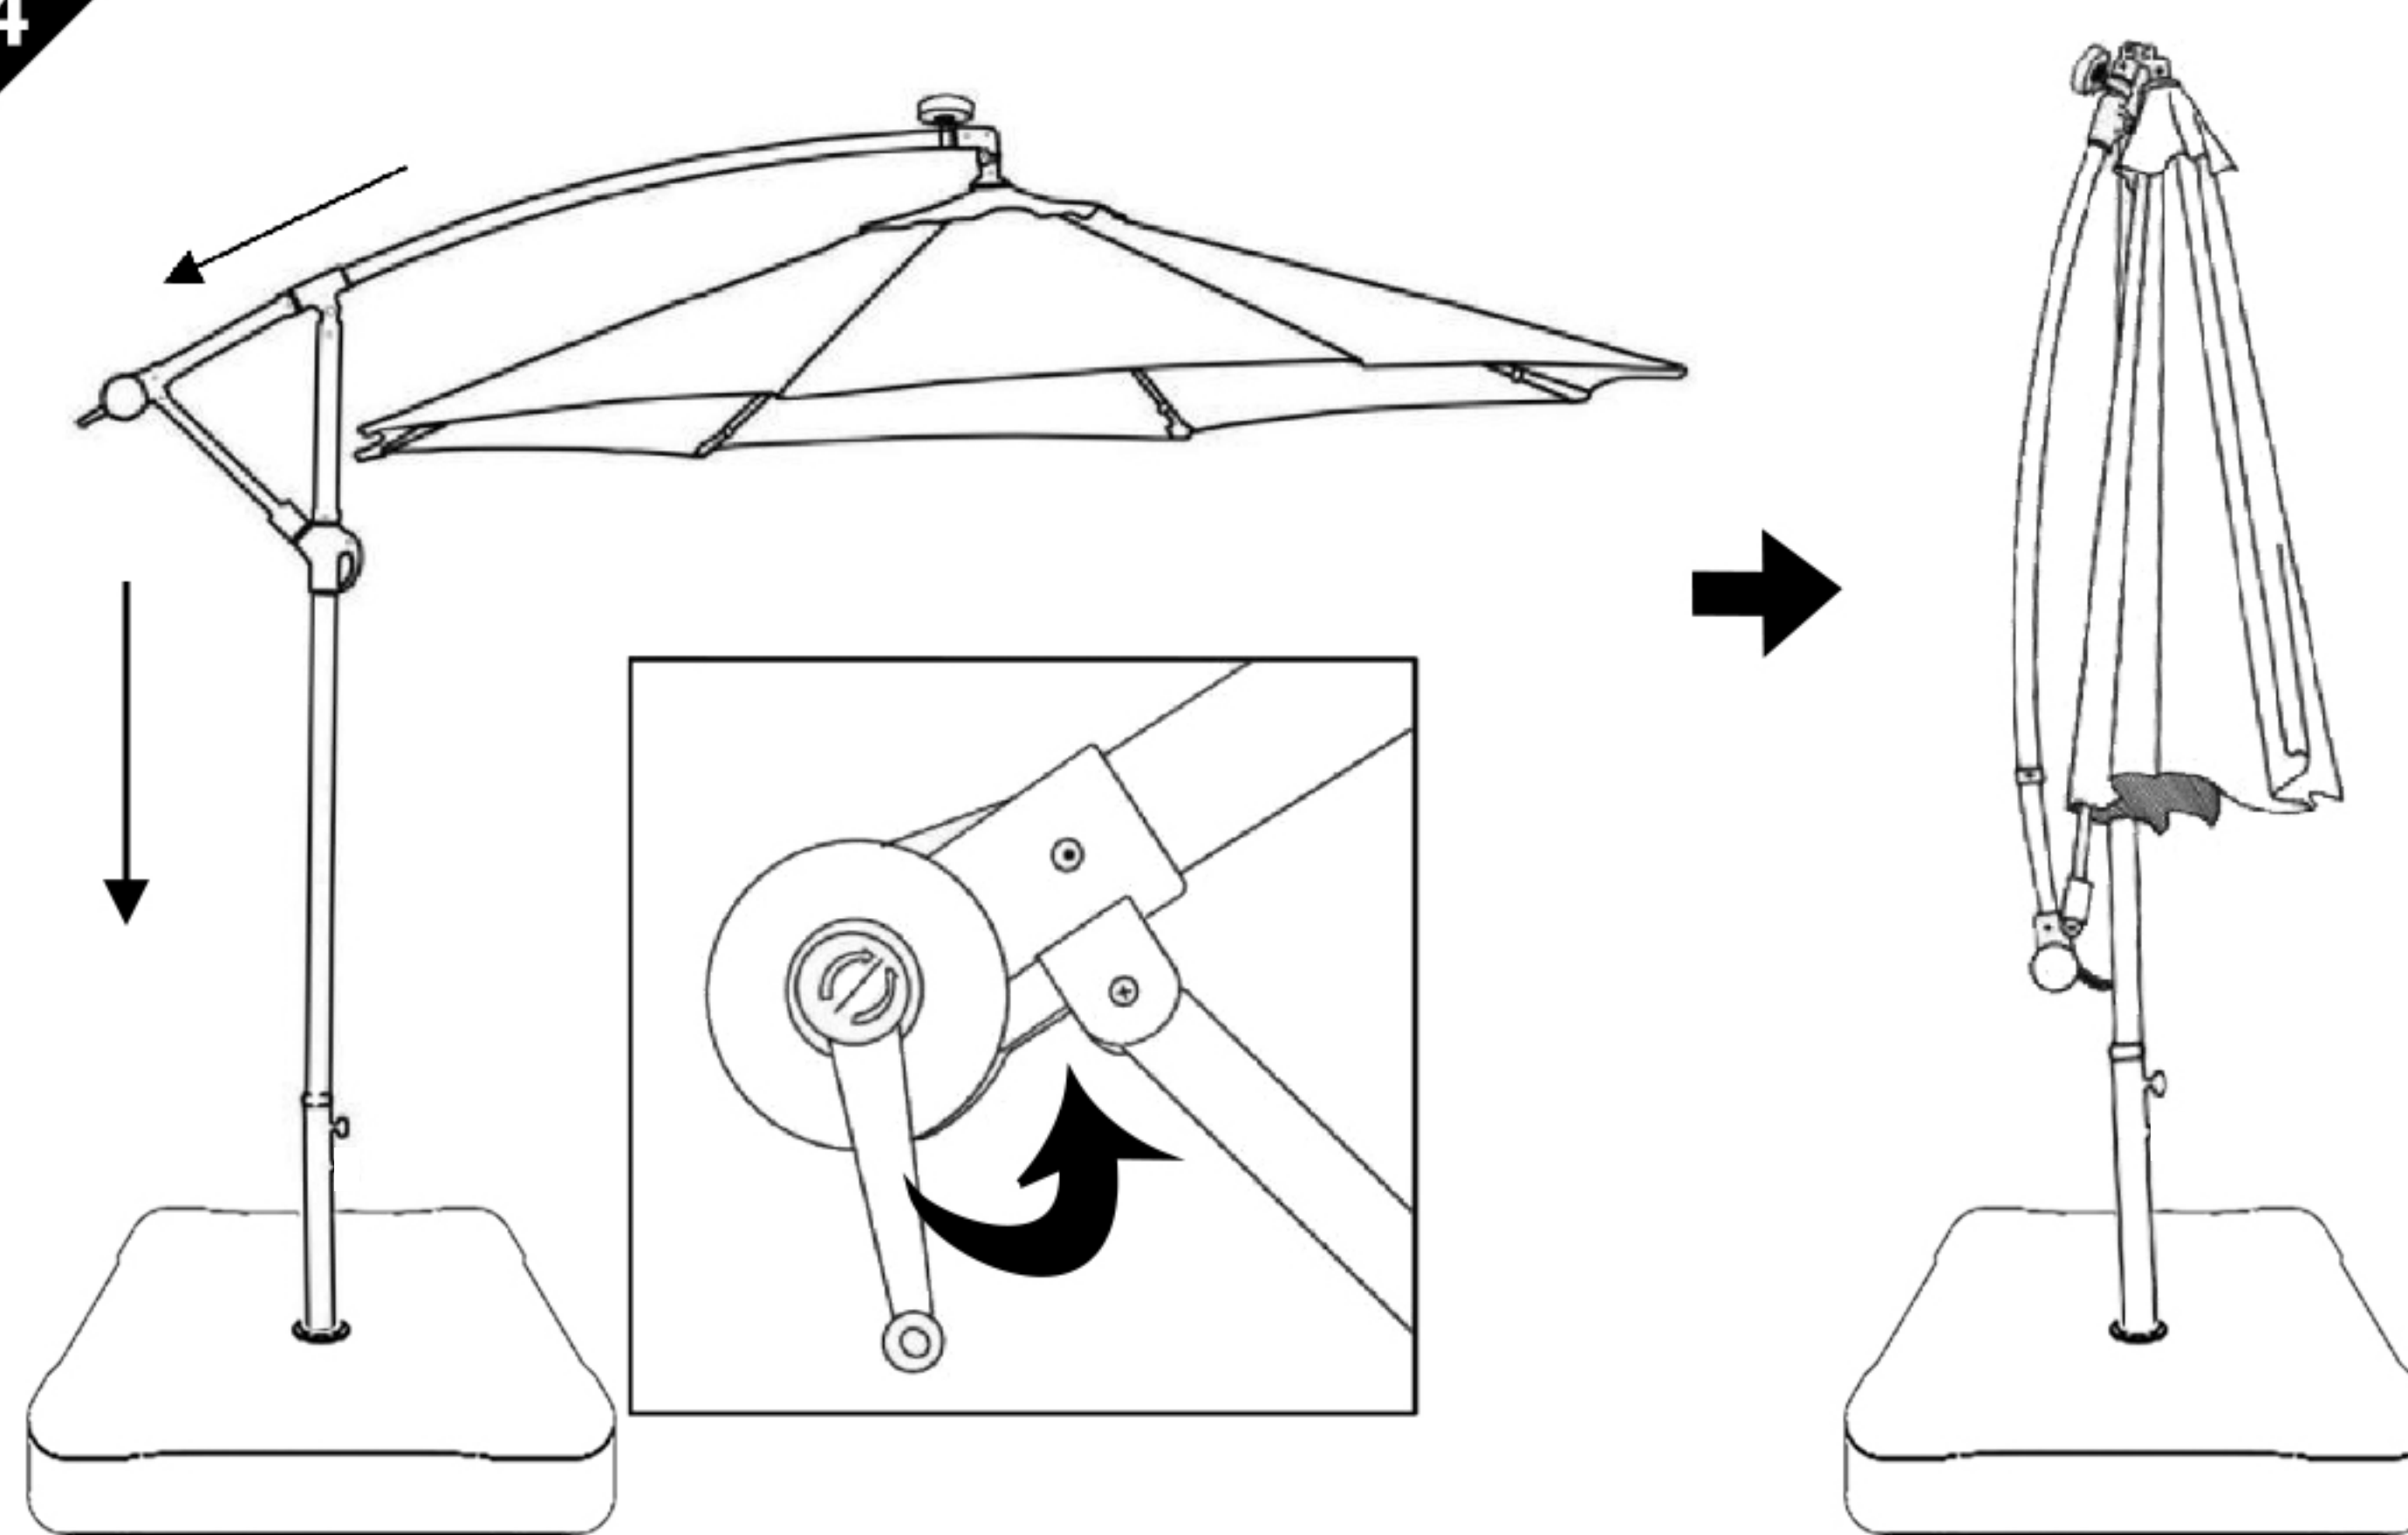

1. Turn the crank counter clockwise to close the umbrella.
2. Push the plastic tube up and then pull the cantilever back.
3. Unlock the handle and pull it to the lowest point.