

CC71 PLASTIC GARDEN SHED 5x3FT

Instructions for Assembly



WARNING

Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instruction.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.

SITE PREPARATION | PRÉPARATION DU SITE | PREPARACIÓN DEL LUGAR | VORBEREITUNG DES AUFSTELLUNGORTES | VOORBEREIDING VAN HET TERREIN | PREPARAZIONE DEL LUOGO DI ASSEMBLAGGIO | PREPARAÇÃO DO LOCAL


Level the ground surface | Nivelez la surface du sol | Nivela la superficie del suelo | Ebnen Sie die Bodenoberfläche | Maak de bodem vlak | Livellare la superficie del terreno | Nivela a superfície do solo



Recommendation: Construct a wooden or concrete base as a foundation | Recommandation: fabriquez une base en bois ou en béton en guise de fondation | Recomendación: construya una base de madera o de cemento a modo de cimiento | Empfehlung: Bauen Sie als Fundament eine Grundfläche aus Holz oder Beton | Aanbeveling: maak een houten of betonnen ondergrond als fundering | Raccomandazione: Costruire una base di legno o di cemento come fondamenta | Recomendação: Construa uma base de madeira ou de cimento como fundação


Option | Opción | optie | opzione | opção

A

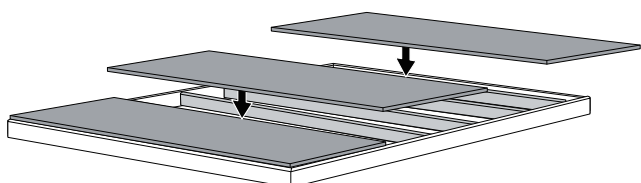

Option | Opción | optie | opzione | opção

B

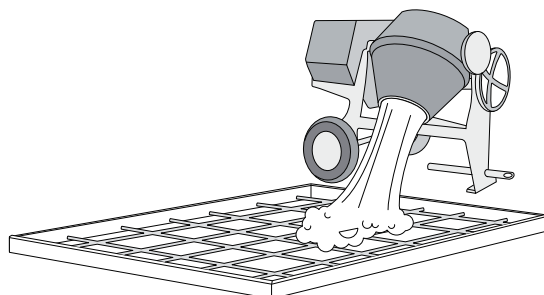

External floor measurements are: | Les mesures externes de la étage sont: | Las medidas del suelo externo son: | Die Außen-Bodenmaße betragen: | De afmetingen van de externe vloer zijn: | Le dimensioni esterne del pavimento sono: | As medidas externas do chão são:



BEFORE STARTING ASSEMBLY | AVANT DE COMMENCER LE MONTAGE | **ANTES DE EMPEZAR EL ARMADO** | VOR MONTAGEBEGINN | **VOORDAT U BEGINT TE MONTEREN** | PRIMA DI INIZIARE L'ASSEMBLAGGIO | **ANTES DE INICIAR A MONTAGEM**

Read the care and safety guidelines at the end of this manual | Check to ensure that there are no missing or damaged parts BEFORE starting or arranging assembly | Remove all parts from the package(s) and spread them out on a clean work surface | Review all assembly instructions | Assemble all the parts according to the directions in this manual. Do not skip any steps.

Lisez les instructions de précaution et de sécurité à la fin de ce manuel | Assurez-vous qu'il n'y a pas de pièces manquantes ou endommagées AVANT de commencer ou d'organiser l'assemblage | Retirez toutes les pièces du/des paquet(s) et étalez-les sur une surface de travail propre | Lisez toutes les instructions de montage | Assemblez toutes les pièces selon les instructions de ce manuel. Ne sautez aucune étape.

Lea las instrucciones de precauciones y seguridad que están al final de este manual | Asegúrese de que no faltan piezas ni están dañadas ANTES de comenzar o disponer el montaje | Saque todas las piezas del paquete o paquetes y póngalas sobre una superficie de trabajo limpia | Revise todas las instrucciones de montaje | Monte todas las piezas según las instrucciones de este manual. No se saltee ningún paso.

Lesen Sie die Sicherheitsrichtlinien am Ende des Benutzerhandbuchs durch | Prüfen Sie bitte VOR dem Zusammenbau, dass keine Teile beschädigt sind oder fehlen | Nehmen Sie alle Teile aus der Verpackung und breiten Sie sie auf einer sauberen Arbeitsfläche aus | Gehen Sie noch einmal die komplette Aufbauanleitung durch | Bauen Sie alle Teile entsprechend der Anleitung in diesem Handbuch zusammen. Lassen Sie dabei keinen Arbeitsschritt aus.

Lees de richtlijnen voor zorg en veiligheid achterin deze handleiding | Controleer dat er geen onderdelen mankeren, of beschadigd zijn, VOORDAT u met de montage begint | Haal alle onderdelen uit het pakket (of uit de pakketten) en leg ze op een schoon werkoppervlak | Bekijk alle montagehandleidingen | Monteer alle onderdelen volgens de aanwijzingen van deze handleiding. Sla geen stappen over.

Leggere le linee guida di assistenza e sicurezza alla fine di questo manuale | Assicurarsi che non ci siano parti mancanti o danneggiate PRIMA di iniziare l'assemblaggio | Estrarre tutti i componenti dall'imballo e posizionarli su una superficie di lavoro pulita | Consultare tutte le istruzioni di montaggio | Assemblare tutti i componenti secondo le istruzioni contenute nel manuale. Non saltare nessuna fase.


Leia as diretrizes de cuidados e segurança que constam da parte final deste manual | Verifique para se assegurar de que não há peças em falta ou danificadas ANTES de começar a preparar a montagem | Retire todas as peças da embalagem e espalhe-as numa superfície de trabalho limpa | Reveja todas as instruções de montagem | Monte todas as peças de acordo com as instruções do manual. Não salte quaisquer passos.

REQUIRED TOOLS | OUTILS EXIGÉS | **HERRAMIENTAS NECESARIAS** | BENÖTIGTE WERKZEUGE | **BENODIGD GEREEDSCHAP** | ATTREZZATURA OCCORRENTE | **FERRAMENTAS NECESSÁRIAS**



SPATULA | SPATULE | **ESPÁTULA** | SPACHTEL | **SPATEL** | SPATOLA | **ESPÁTULA**

- Use spatula (part “SG8”) for easier insertion of panel into profile.
- Utilisez la spatule (partie “SG8”) pour une meilleure insertion du panneau dans le profil.
- Utilice una espátula (pieza “SG8”) para una mejor inserción del panel en el perfil.
- Benutzen Sie den Spachtel (Bezeichnung “SG8”), um die Platten leichter in die Nut einführen zu können.
- Gebruik spatel (onderdeel SG8) voor het gemakkelijk invoeren van het paneel in het profiel.
- Utilizzare la spatola (parte SG8) per inserire il pannello più facilmente nel profilo.
- Utilize uma espátula (peça “SG8”) para facilitar a inserção do painel no perfil.





















SG8 x2











ASSEMBLY REQUIRES TWO PEOPLE | LE MONTAGE DOIT ÊTRE EFFECTUÉ PAR DEUX PERSONNES | **SE NECESITAN DOS PERSONAS PARA ARMARLO** | ZWEI PERSONEN ZUR MONTAGE NOTWENDIG | **MONTAGE VEREIST TWEE PERSONEN** | L'ASSEMBLAGGIO RICHIEDE DUE PERSONE | **A MONTAGEM EXIGE DUAS PESSOAS**

PARTS LIST

A3-B  6 PC	A4-B  1 PC	A5-B  1 PC	A6-B  6 PC	A7-B  1 PC
A8-B  1 PC	A9-B  1 PC	A10-B  1 PC	A13  1 PC	A14  1 PC
A15  1 PC	A33-B  1 PC	A34-B  1 PC	A35-B  1 PC	A36-B  1 PC
A39-B  1 PC	A40-B  1 PC	A16-B  2 PC	A17-B  1 PC	A18  1 PC
A19-B  1 PC	A20  2 PC	A21  1 PC	A22  1 PC	A23  1 PC
A24  1 PC	A26-B  2 PC	A38-B  2 PC	A32  1 PC	AAB  1 PC
A29  1 PC	A30  1 PC	A31  1 PC	SG10  1 PC	SG101  1 PC


PARTS LIST

SG102  1 PC	SG12  1 PC	M01  2 PC	M03-6R  1 PC	SG7-3  1 PC
M03-7  1 PC	M04  1 PC	SG7-2  1 PC	SG8  2 PC	SG14  4 PC
SG2  4 PC	SG6  3 PC	SG9  3 PC	DRILL  1 PC	SG11  1 PC
Z410  49 PC	Z420  86 PC	ZW413  12 PC	LOCK  1 PC	


- Use spatula  (part "SG8") for easier insertion of panel into profile
- Please ensure the panels are all installed on position before screwing
- Please be mindful of the screw size used during installation; using screws that are too long may damage the shed.




Floor Assembly Preview

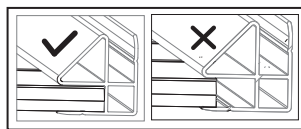

● Fully fit the panel inside the profile

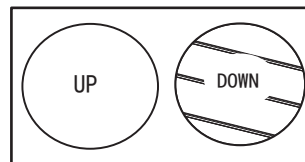

● Note: The crease line of the floor must be underneath

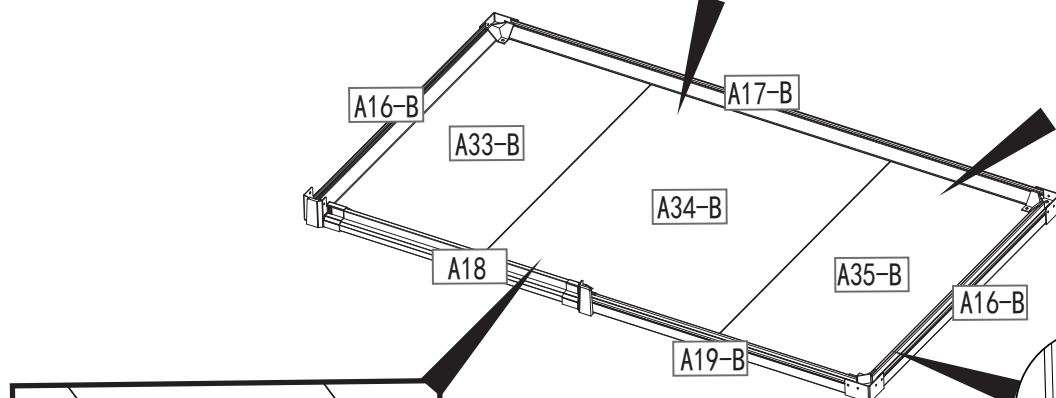


● The floor panels must be straight



● Use spatula (part "SG8") for easier insertion of panel into profile

Step 1

1-1

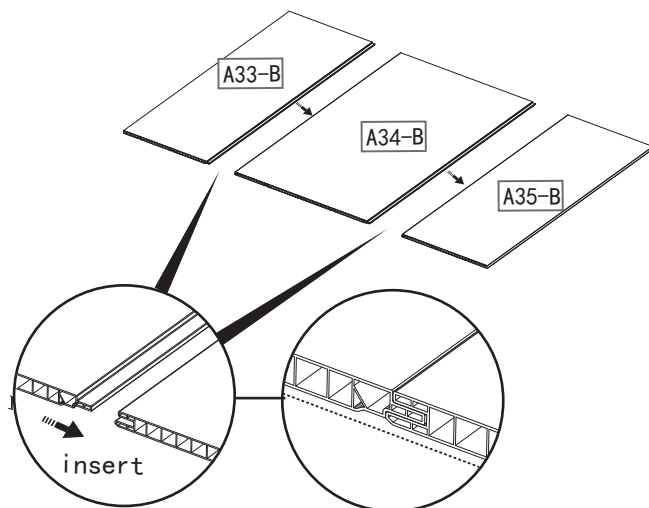

SG6




2 PC

A34-B




1 PC

A16-B




2 PC

A33-B




1 PC

A17-B





1 PC

A35-B




1 PC


1-2

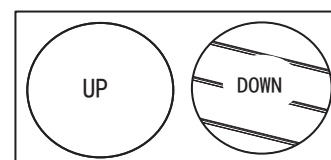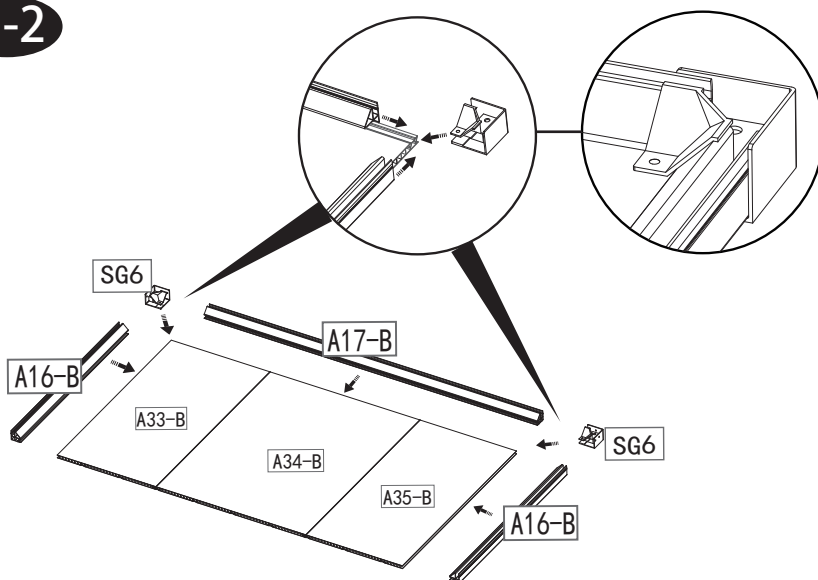

● Grain should be down



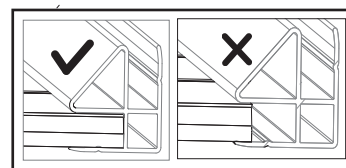


● Fully fit the panel inside the profile




● Panels are in a straight line after installation.

Step 2

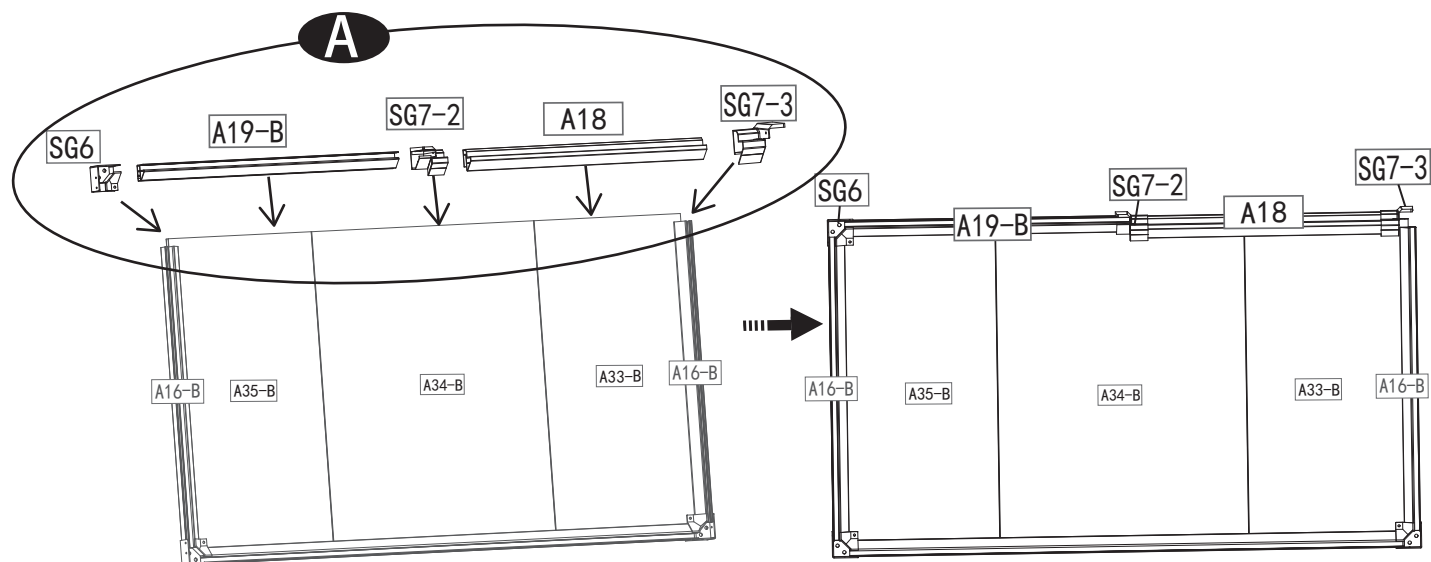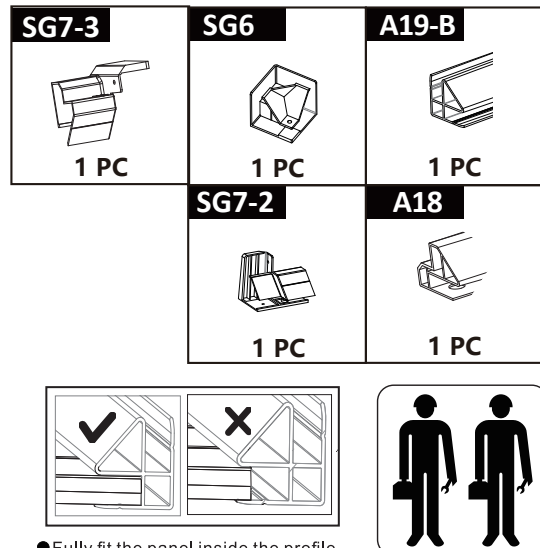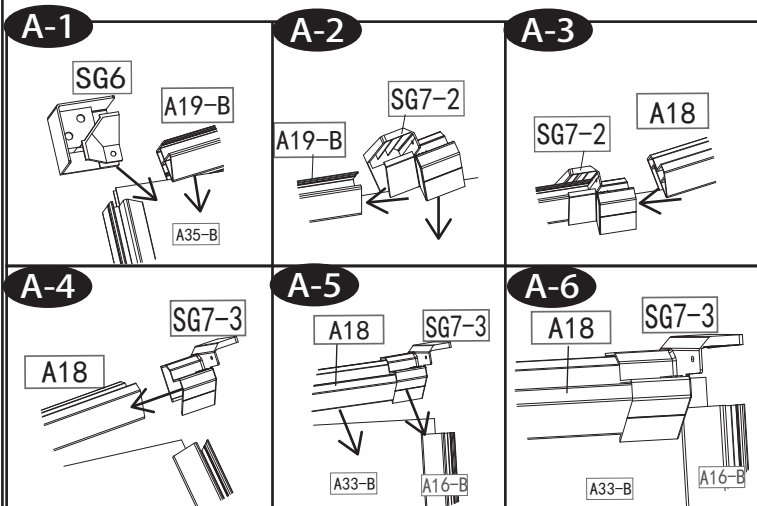

Step 3

3-1

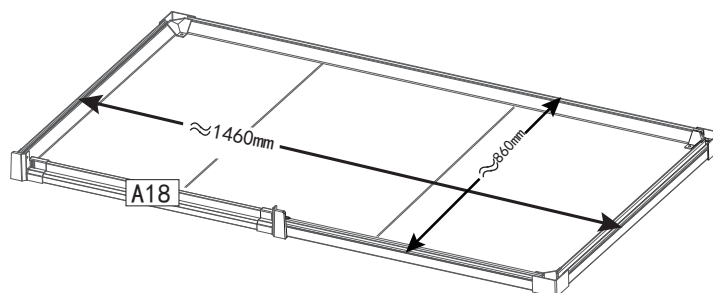


Z410




3 PC

3-2

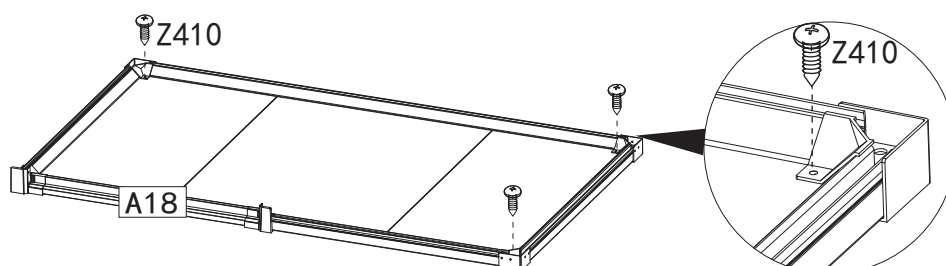


Step 4

4-1

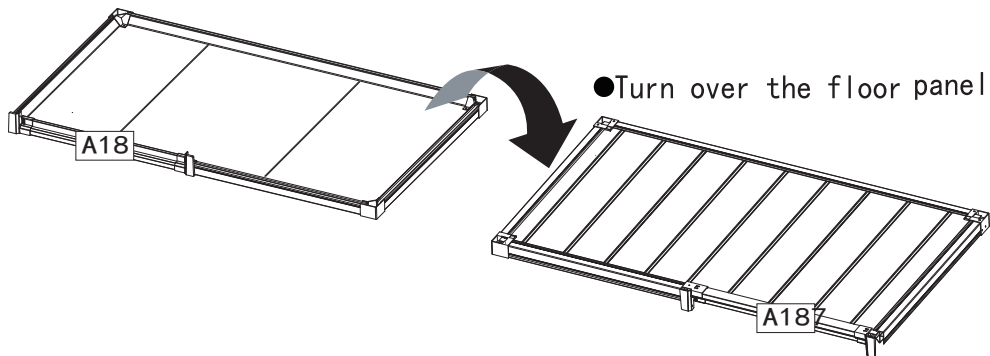


4-2

Caution:
Please use Drill to predrill
a hole at depth 1mm before screw.

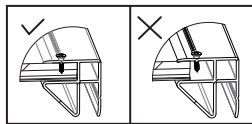

● Fully fit the panel inside the profile ;
then screw on mark line.

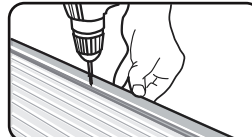


● Nail along the marked line
on profile


Z420



14 PC

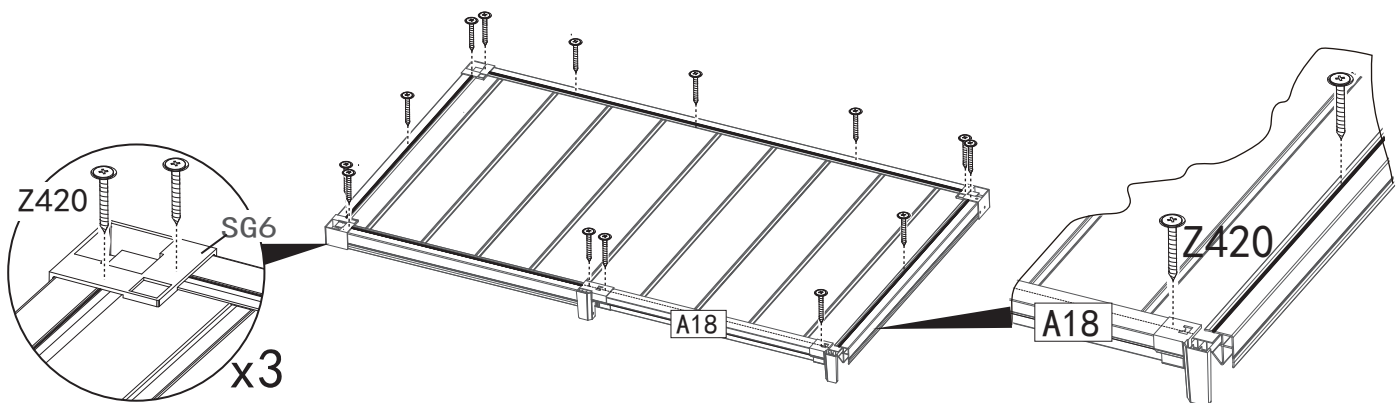

4-3

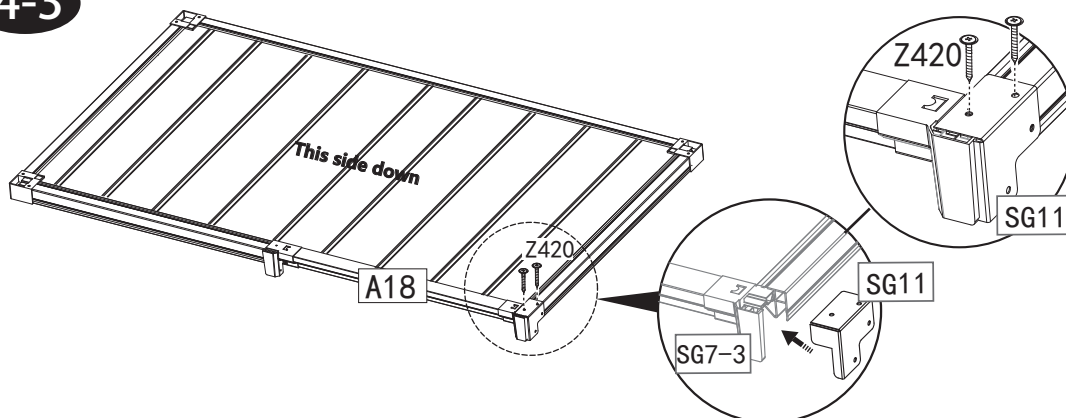

SG11




1 PC

Z420




2 PC

4-4


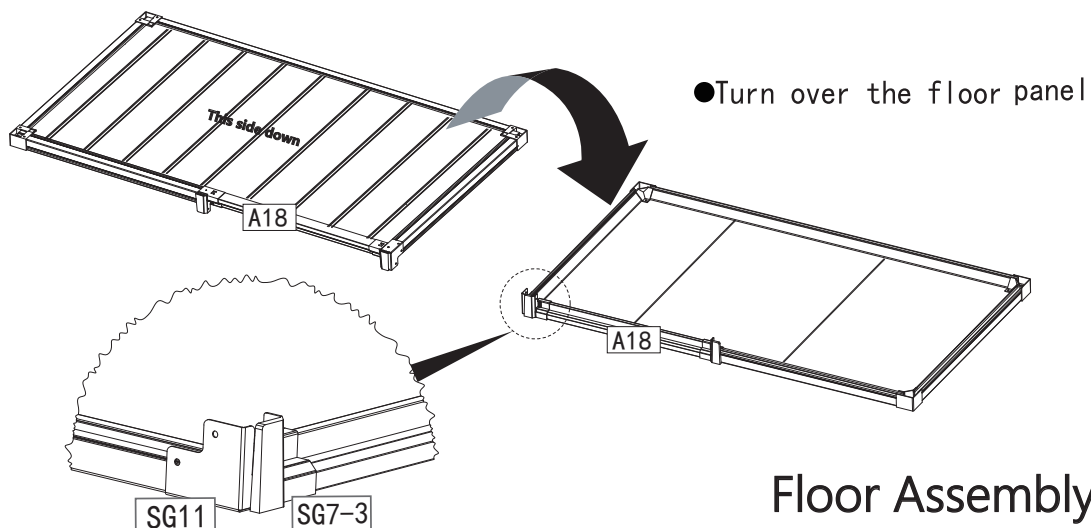


Floor Assembly Done!

Wall Assembly Preview

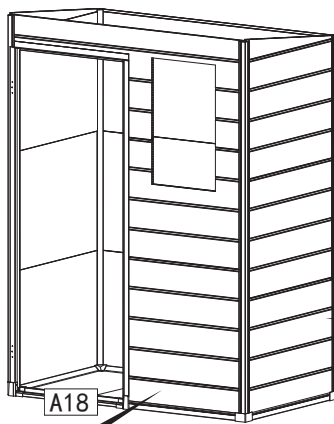

● Use spatula (part "SG8") for easier insertion of panel into profile


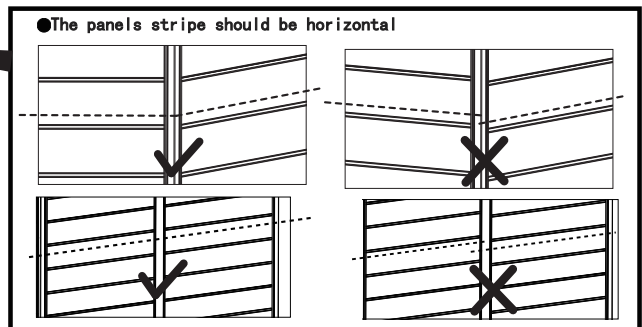
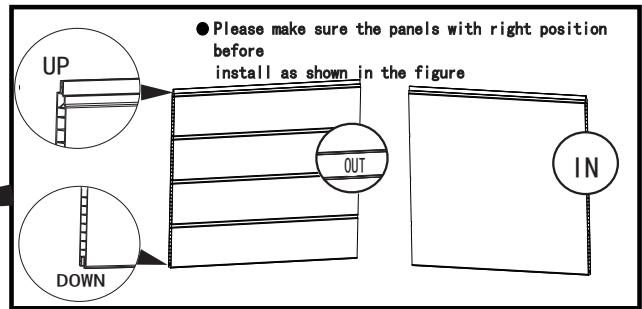


Step 5



A20



1 PC

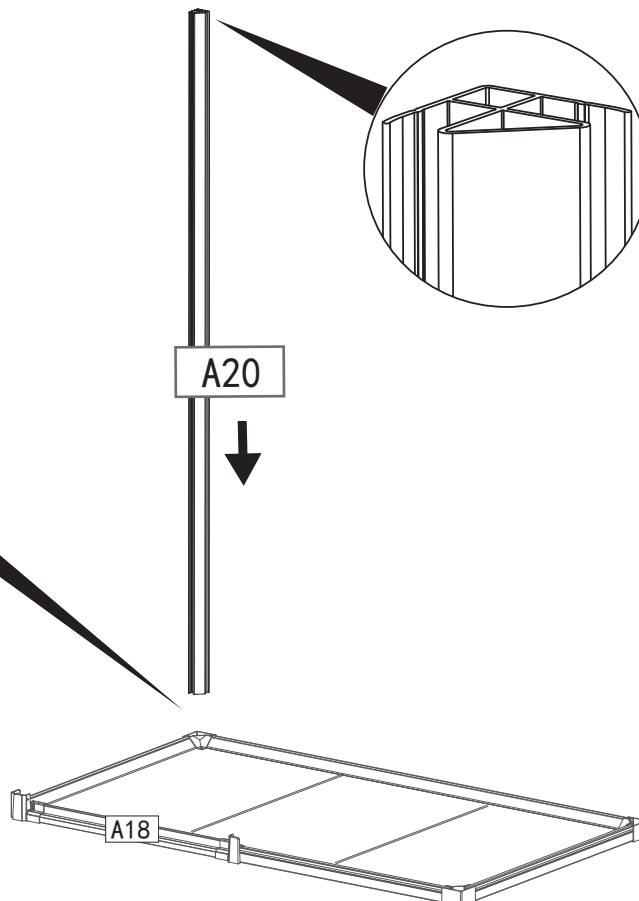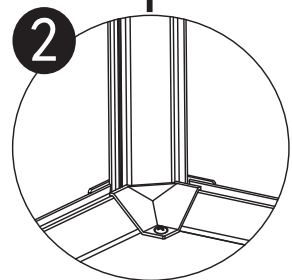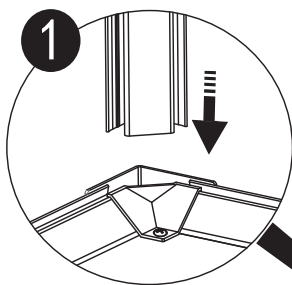

Step 6

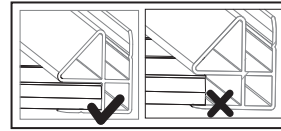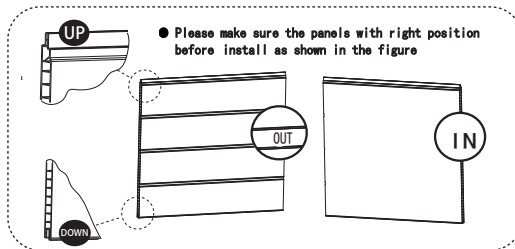

A 3-B



3 PC

A 6-B




3 PC


SG8




6-1

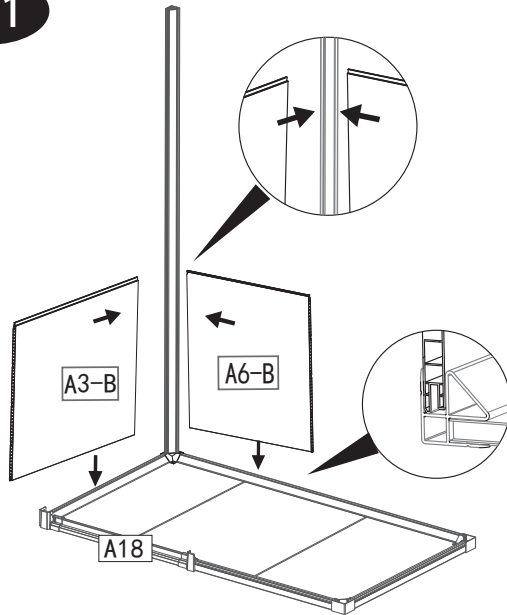


6-2

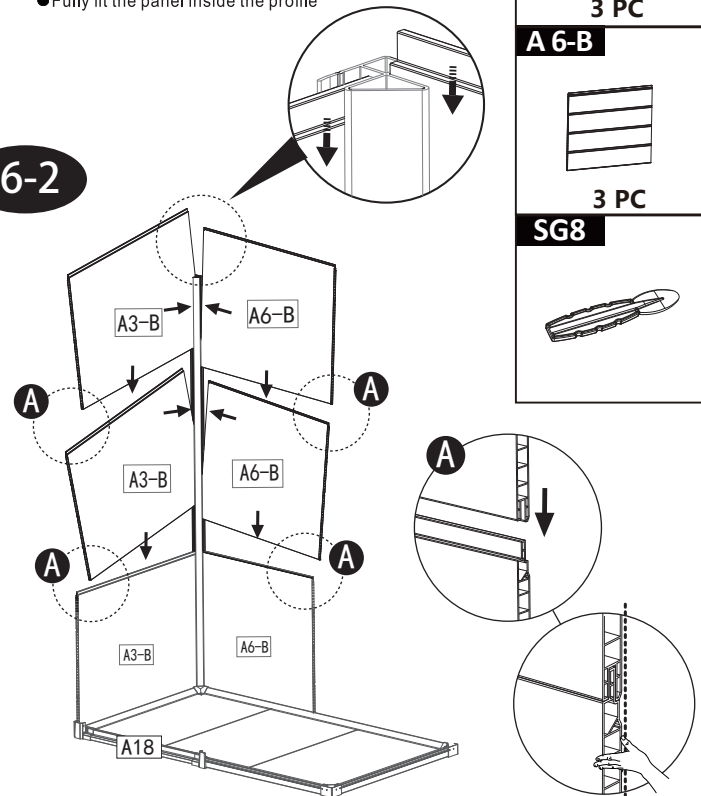


Step 7

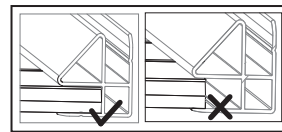


7-1

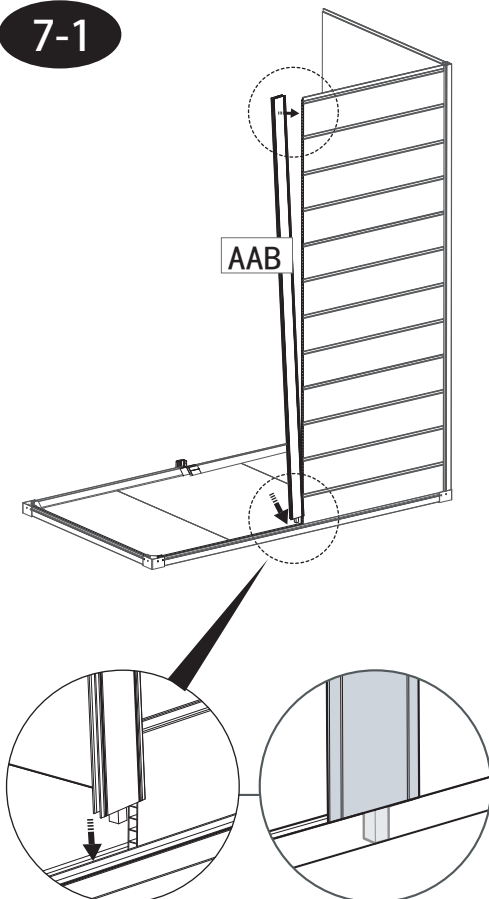

7-2

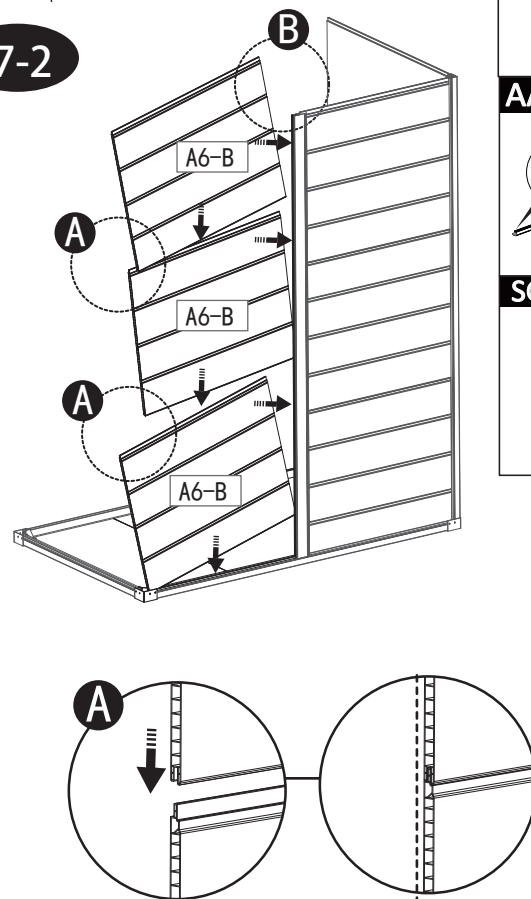


A 6-B

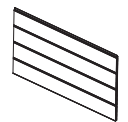


3 PC

AAB





1 PC

SG8




Step 8

8-1

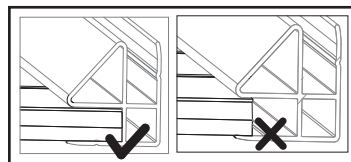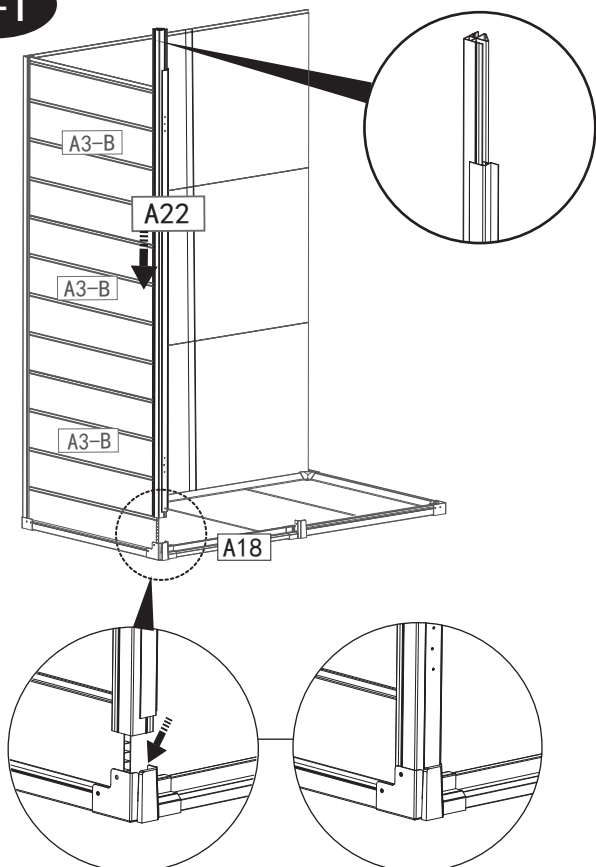


● Fully fit the panel inside the profile

8-2

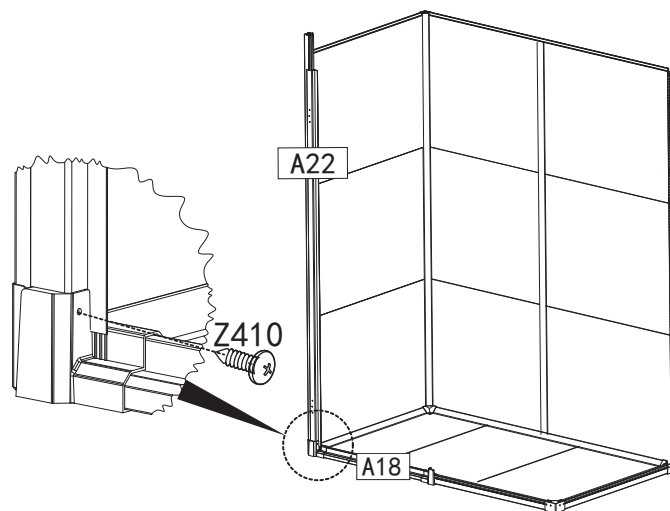

A22



1 PC

Z410




1 PC

Step 9

A20





1 PC

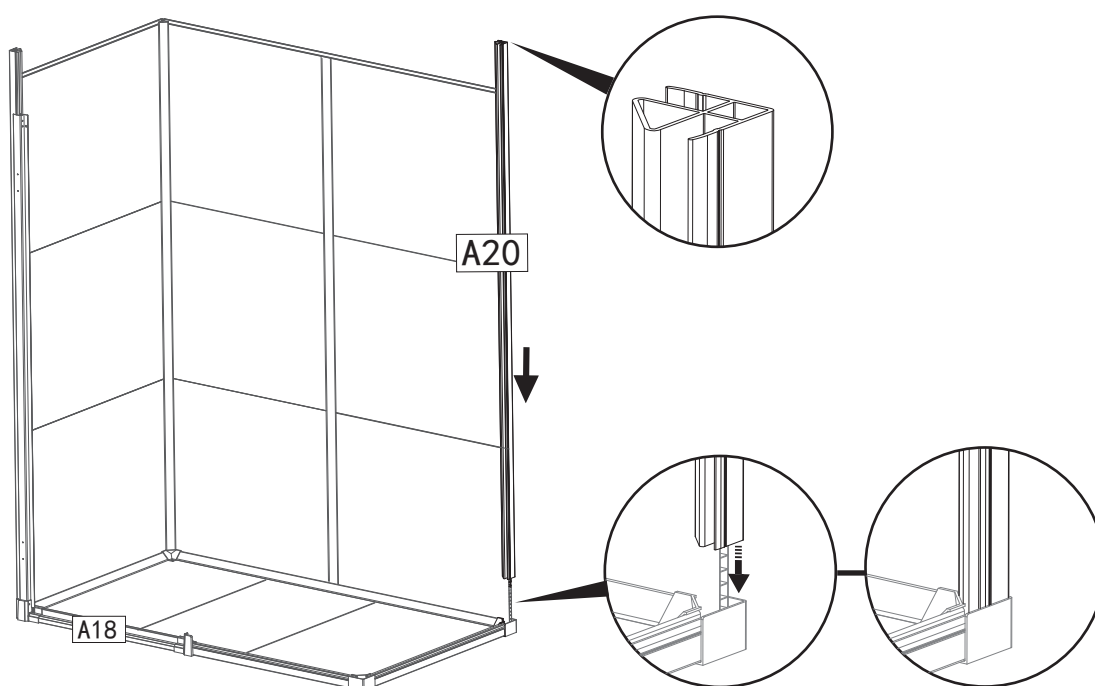


Step 10

10-1

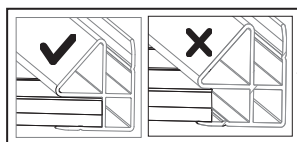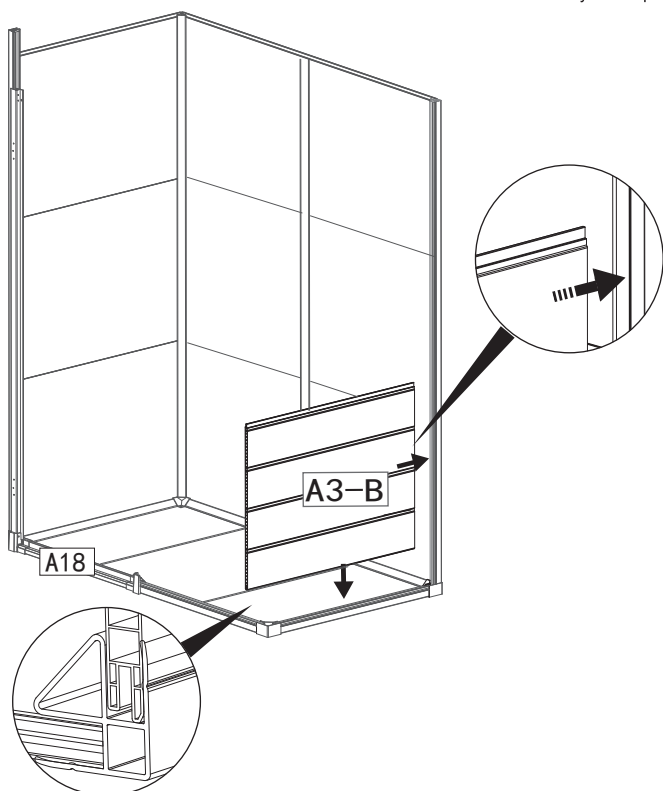

● Fully fit the panel inside the profile

10-2

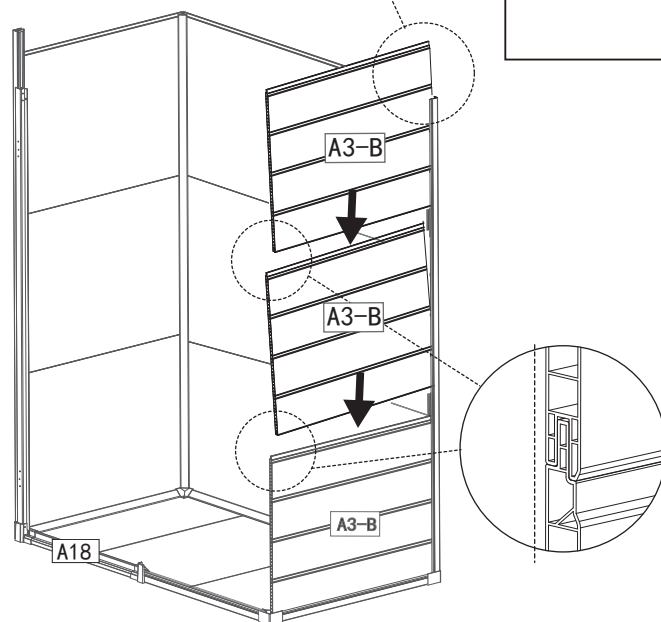

A3-B





3 PC

SG8




Step 11

11-1

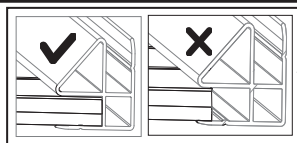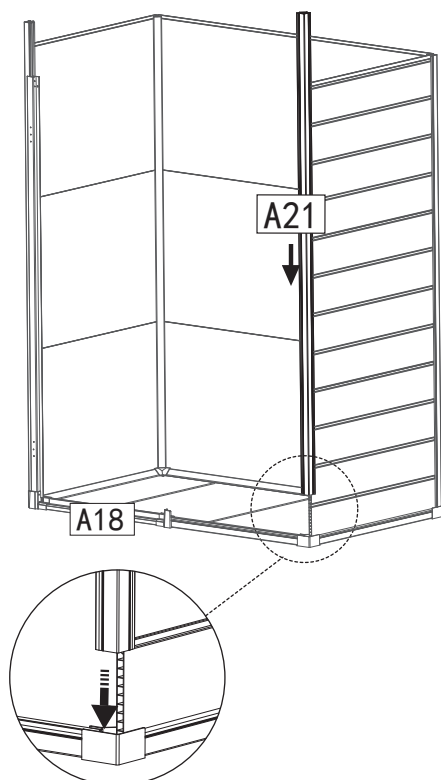

● Fully fit the panel inside the profile

11-2

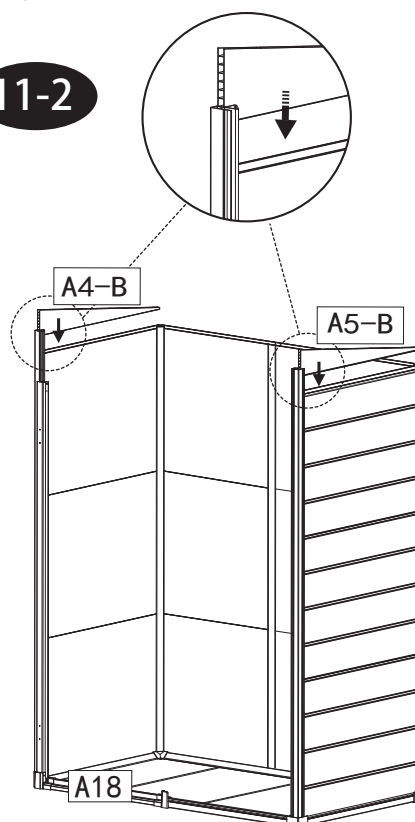

A21



1 PC

A4-B





1 PC

A5-B




1 PC

Step 12

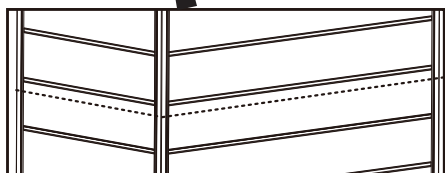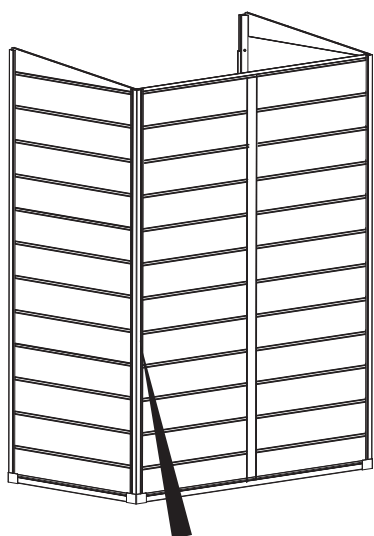


● The panels stripe should be horizontal

$$A B = C D$$

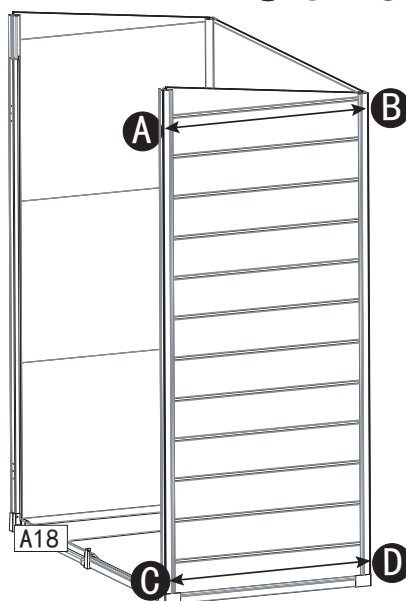




- Ensure AB equal to CD
- This step is crucial, otherwise it may result in incorrect installation.

Step 13

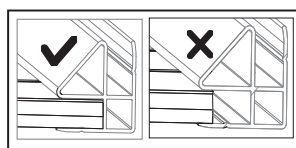


● Fully fit the panel inside the profile

A8-B 1 PC	A7-B 1 PC
A9-B 1 PC	SG8

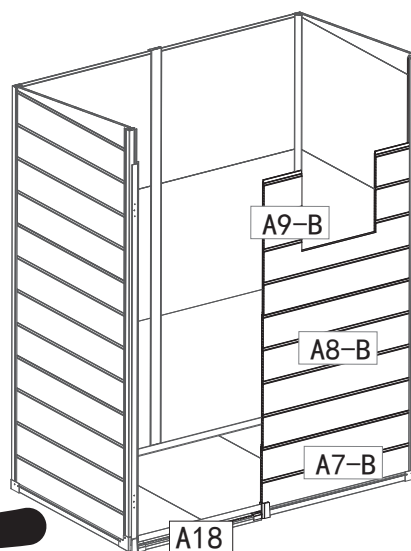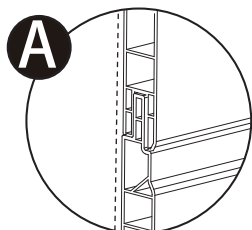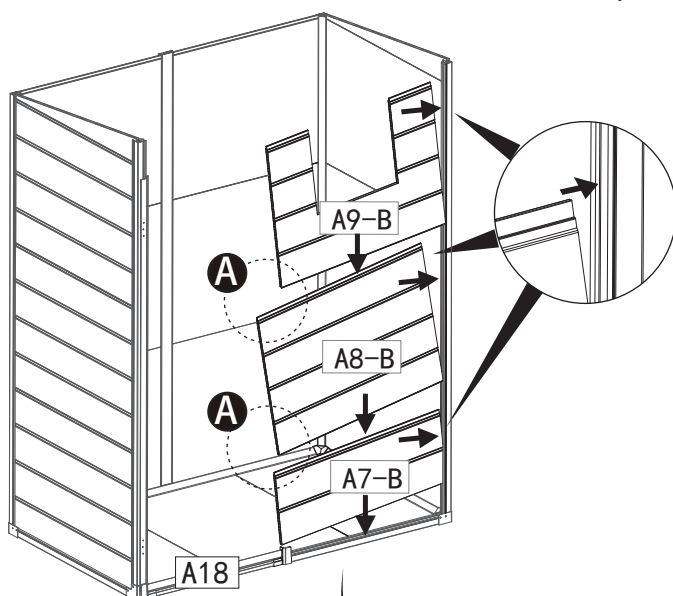

Step 14

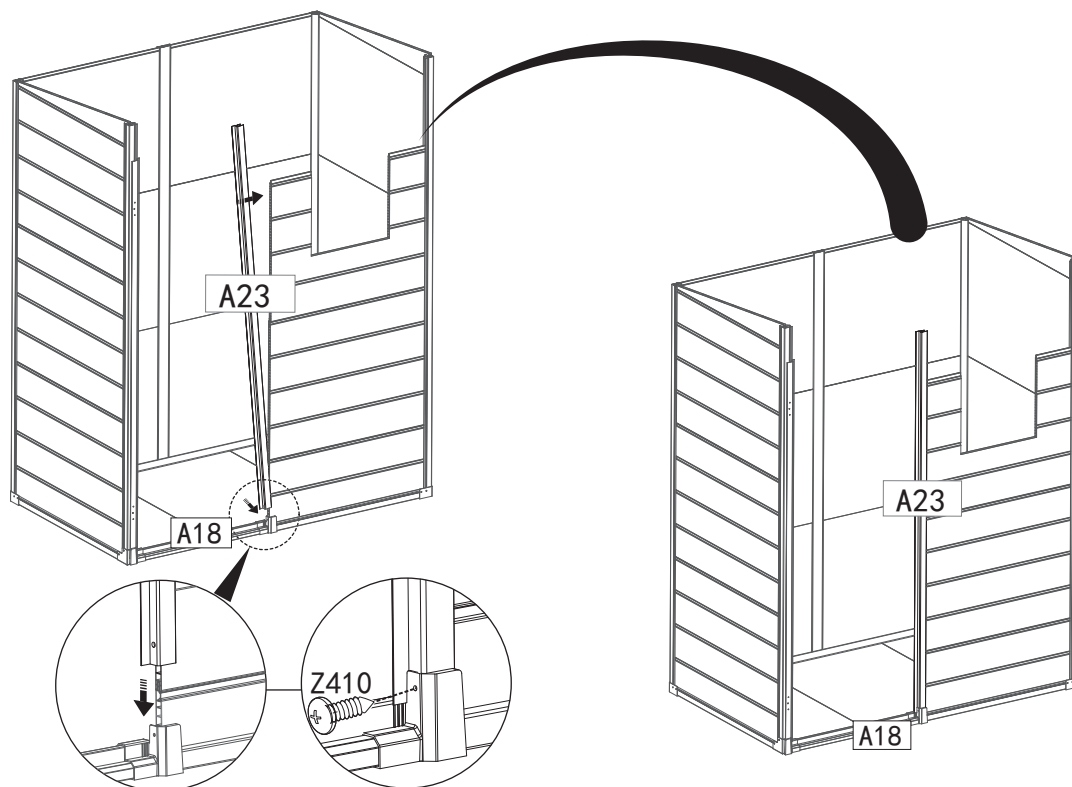

A23




1 PC

Z410




1 PC

Step 15

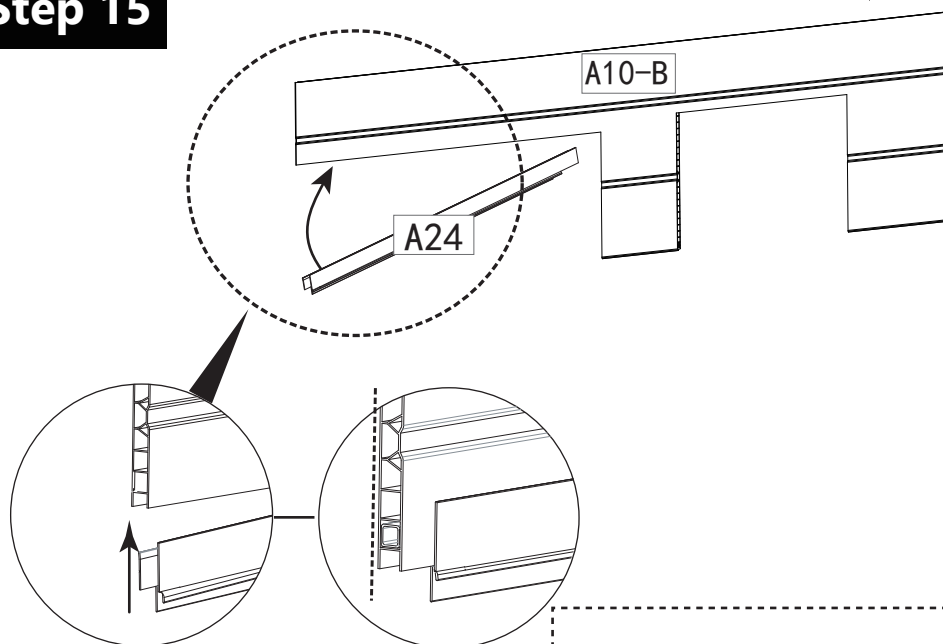

A10-B




1 PC


A24



1 PC

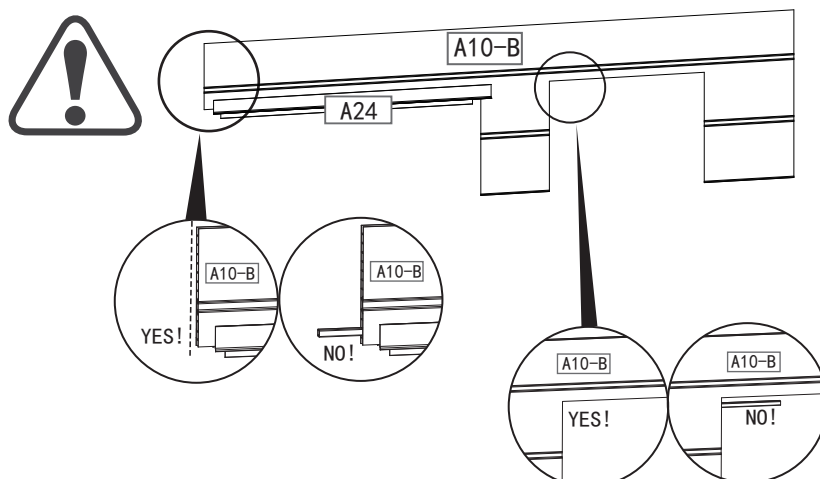


Step 16

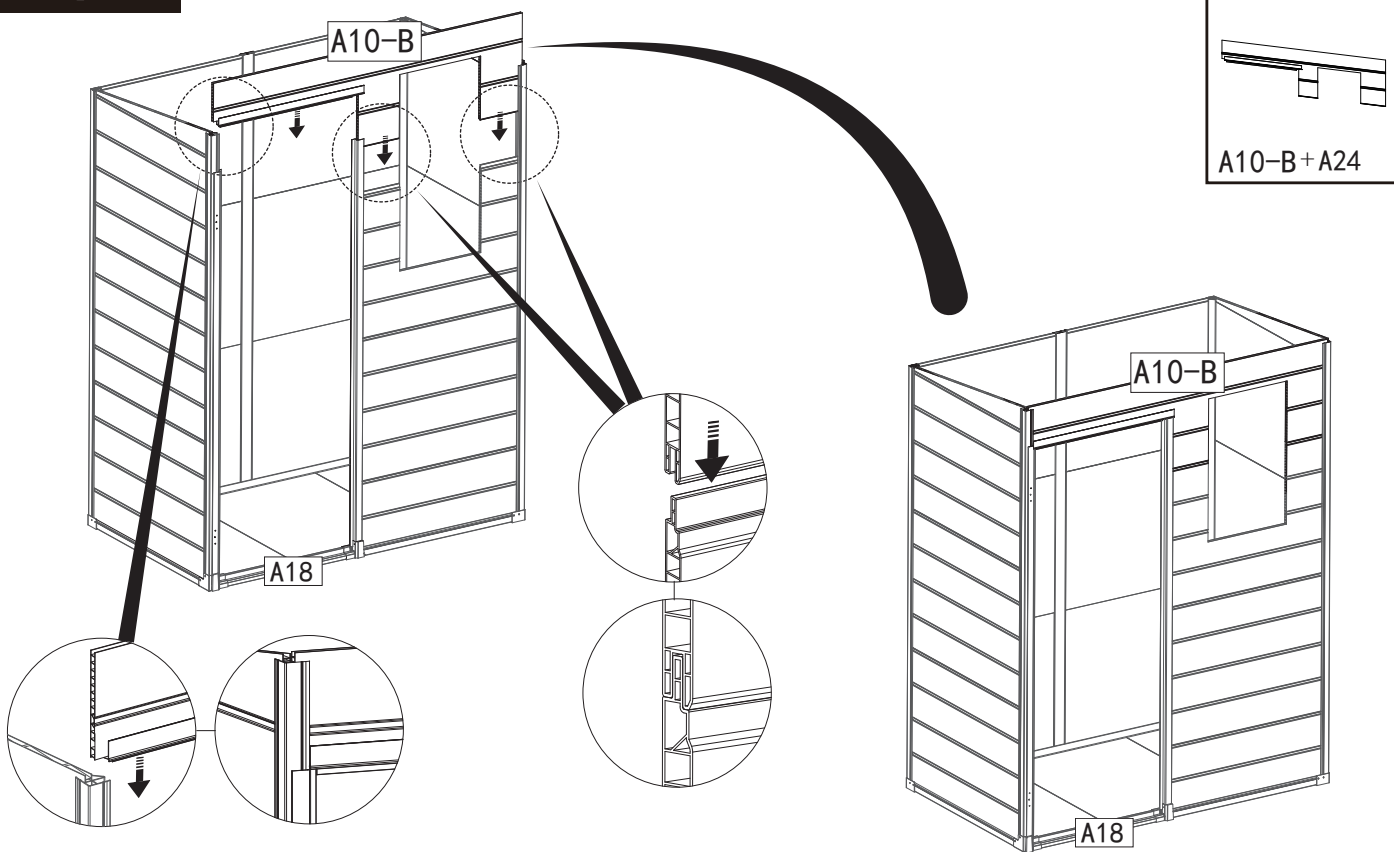


Step 17

Determine seam alignment.

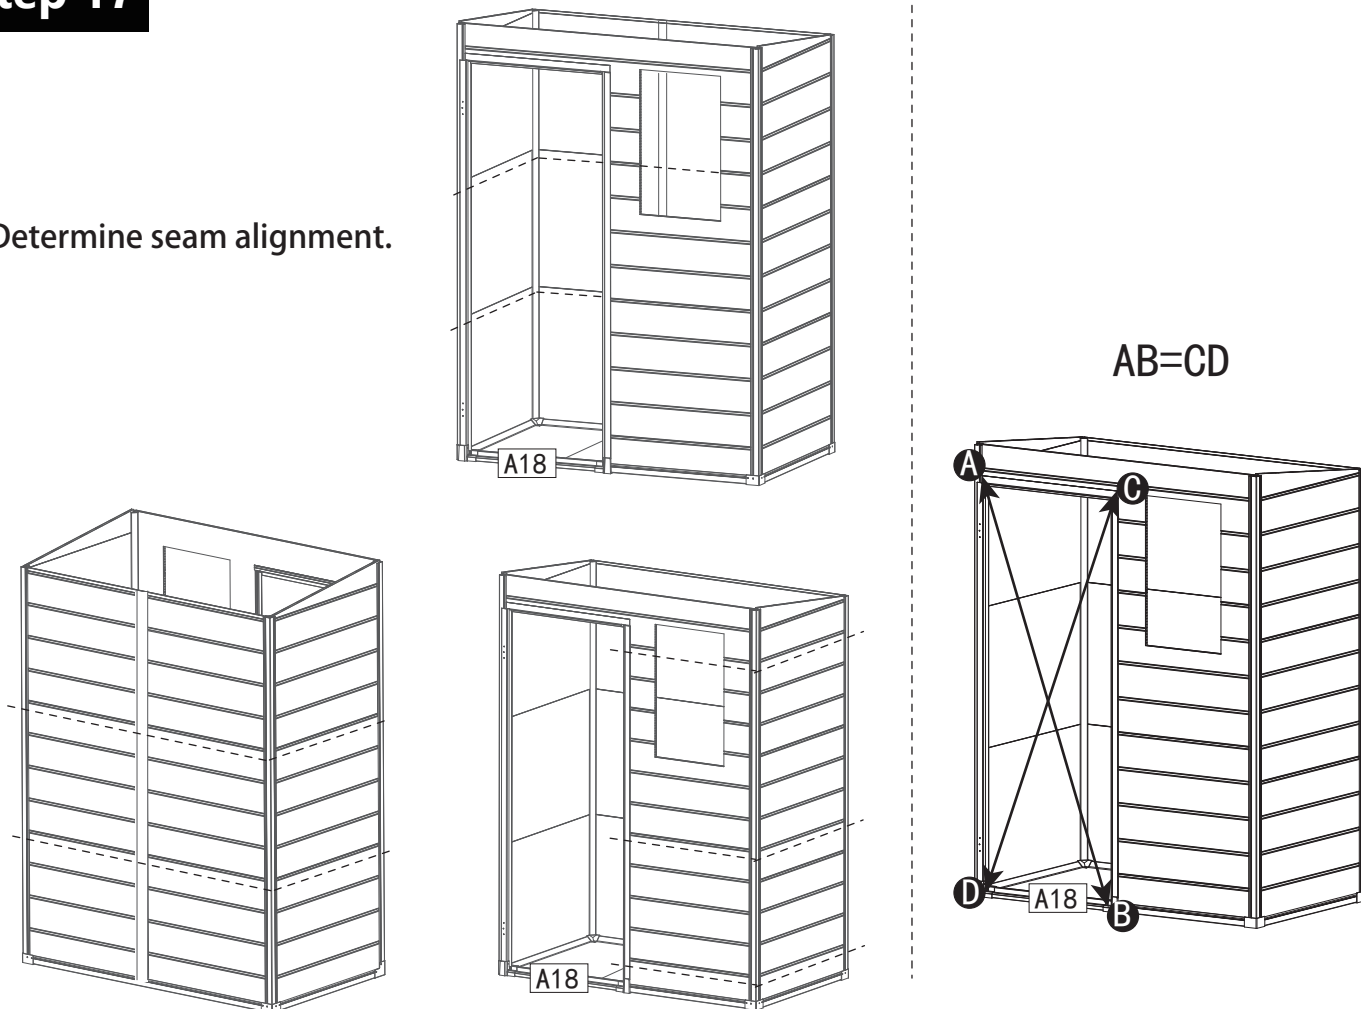

Step 18

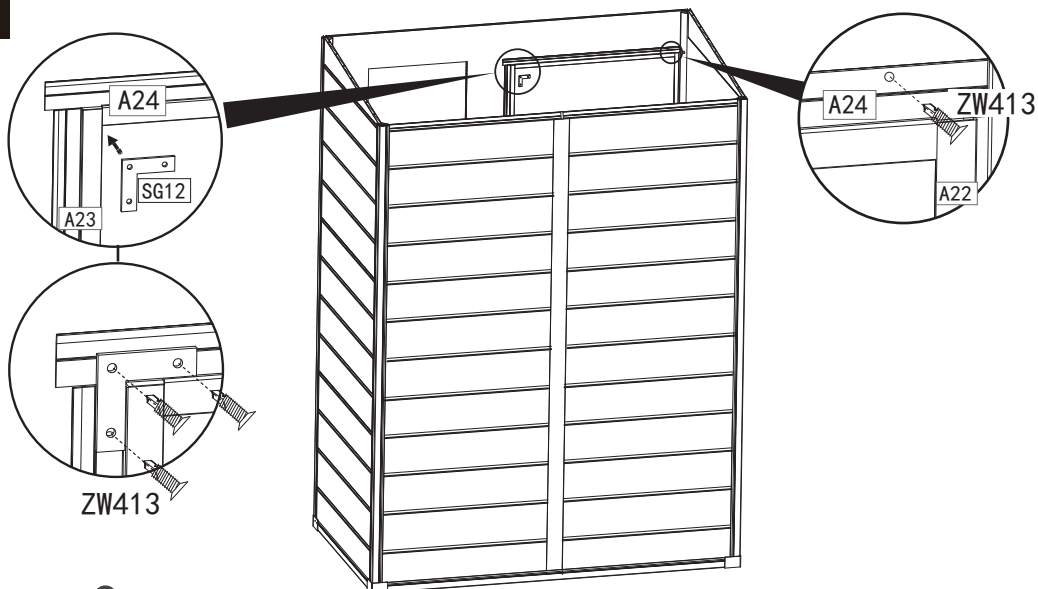

SG12



1 PC

ZW413

4 PC



• fixation after aligning!

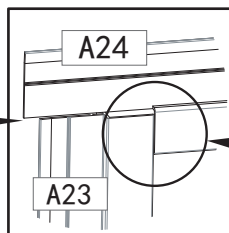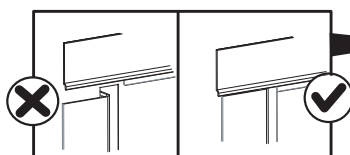



YES!

NO!

Step 19

Caution:

Please use Drill  to predrill a hole at depth 1mm before screw.

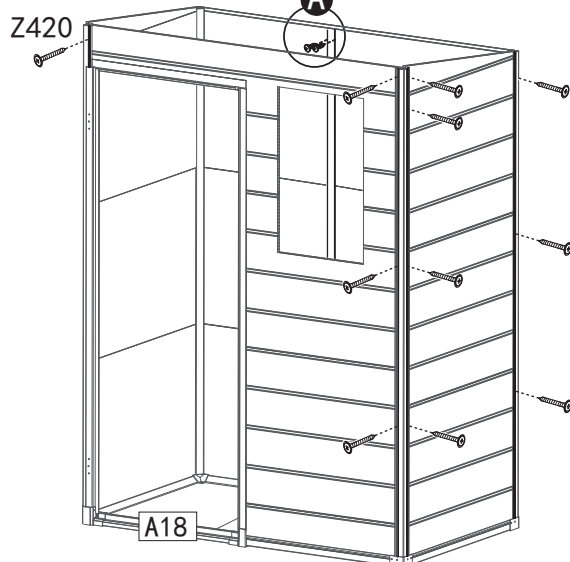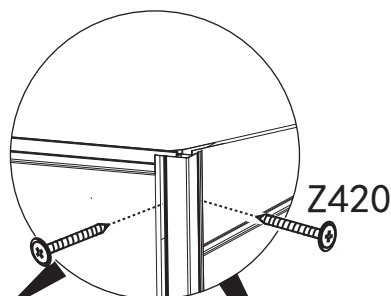

Z410





2 PC

Z420



24 PC

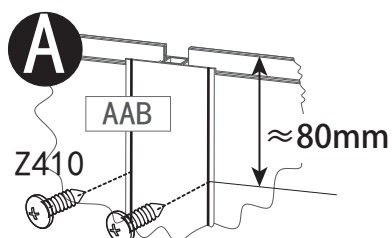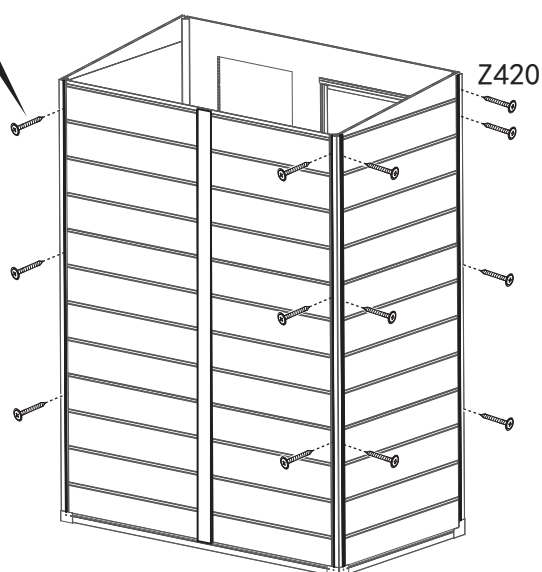

Step 20

- Fully fit the panel inside the profile

Caution:


Please use Drill to predrill a hole at depth 1mm before screw.



Z420




13 PC


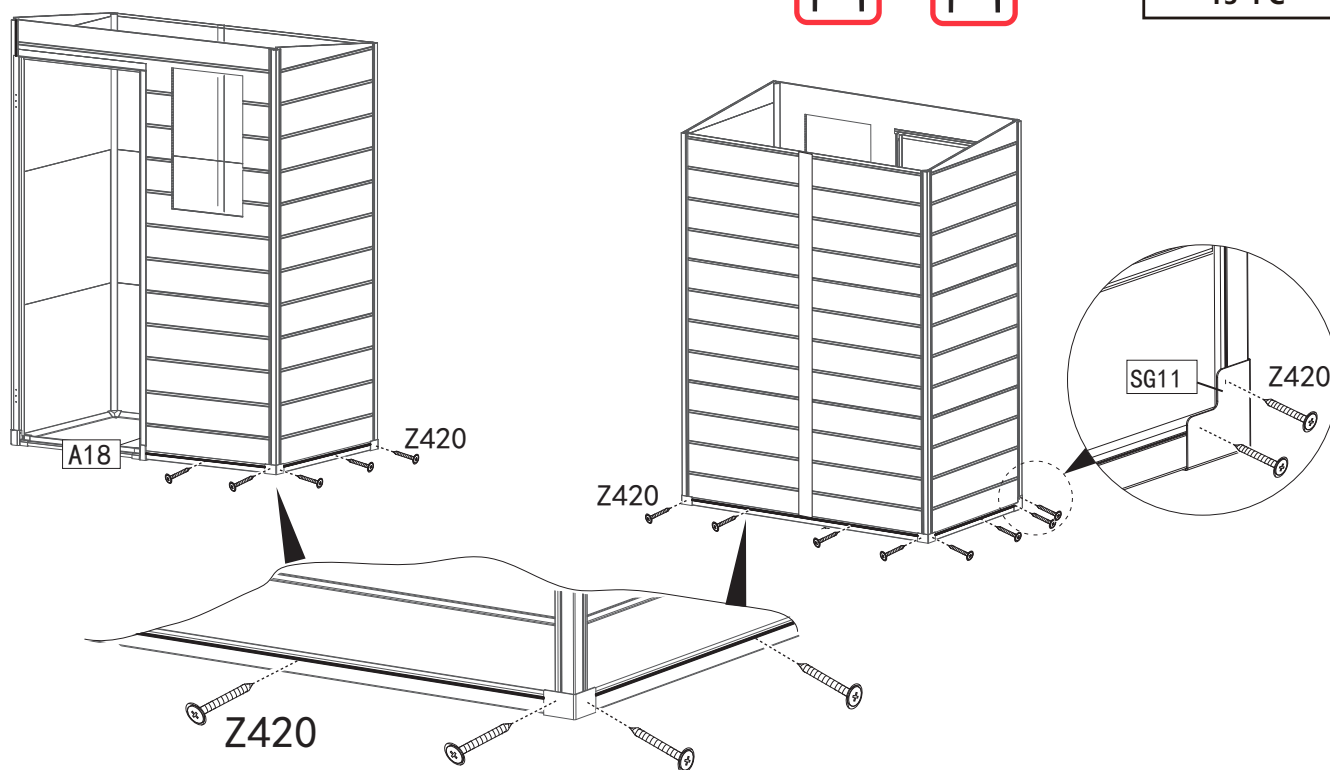


Wall Assembly Done!


Roof Assembly



- The floor panels must be straight

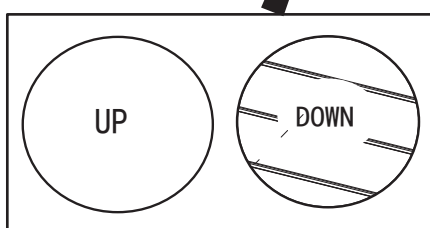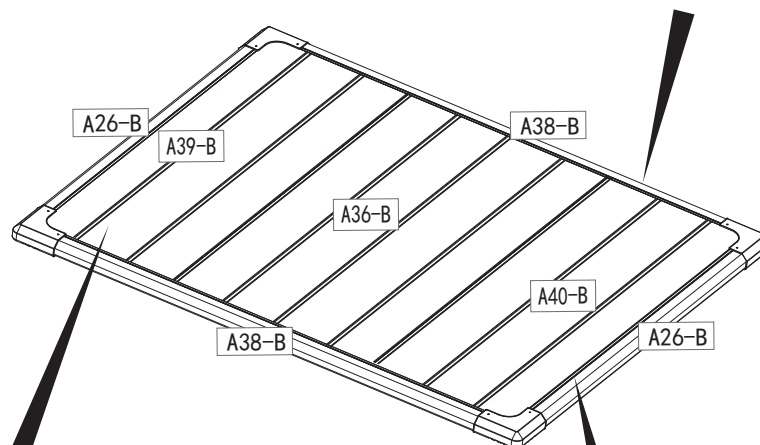


- Note: The crease line of the floor must be underneath

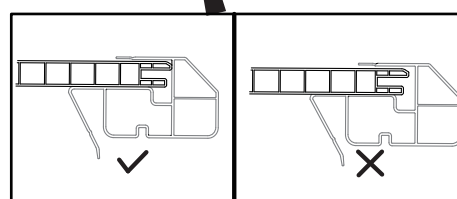


- Fully fit the panel inside the profile


Step 21

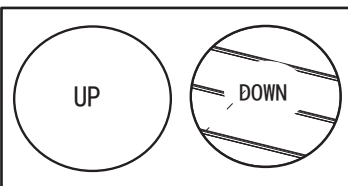

- Note: The crease line of the floor must be underneath

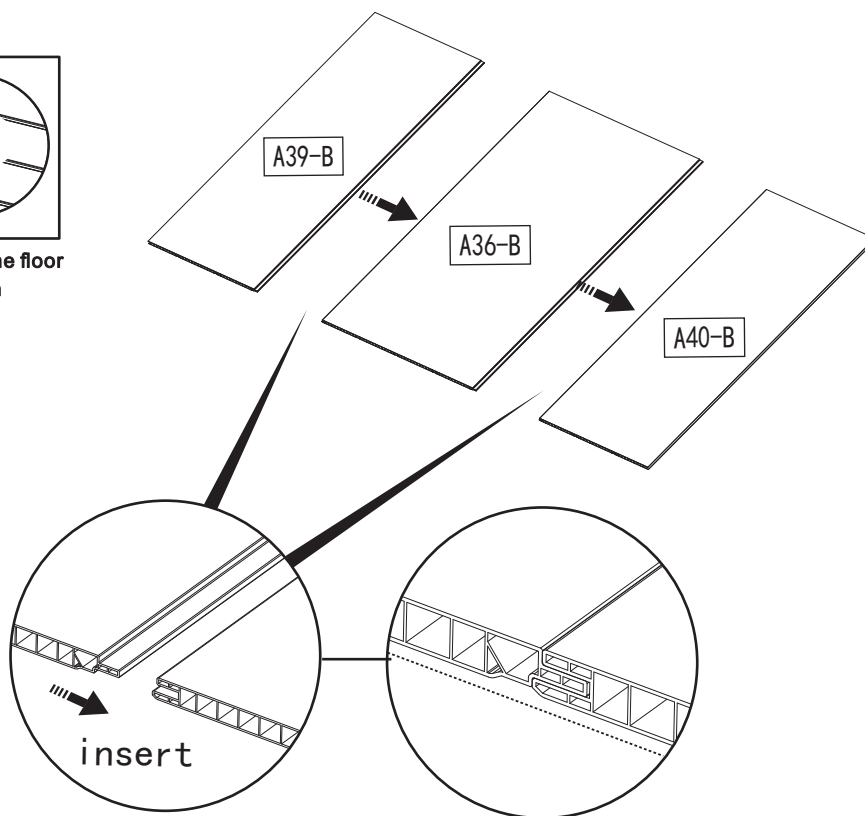

A36-B




1 PC

A39-B



1 PC

A40-B




1 PC

SG8




Step 22

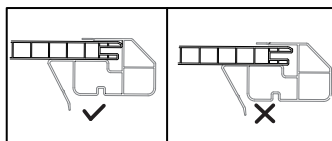

- Fully fit the panel inside the profile

SG8

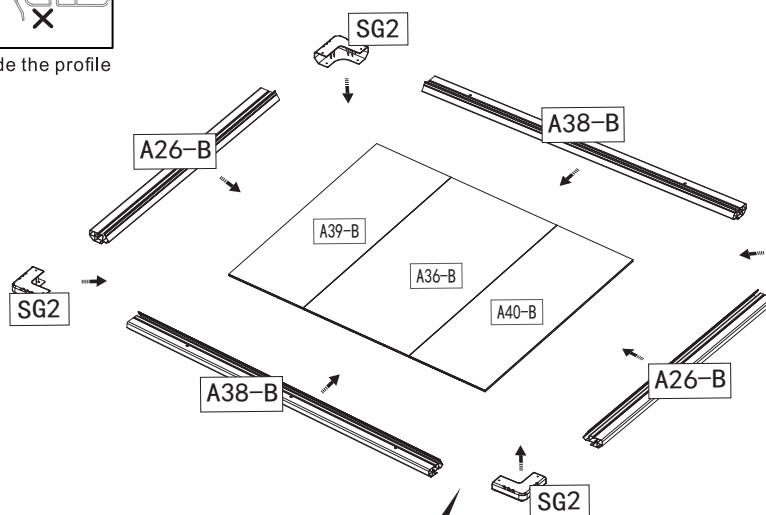

A38-B




2 PC

A26-B




2 PC

SG2




4 PC

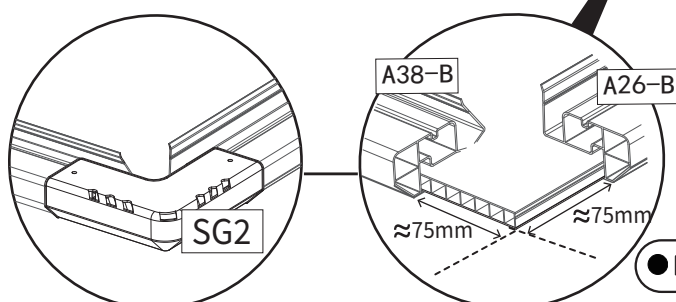

- Please note the measurement dimensions

Step 23



- Ensure AB equal to CD before nailing.

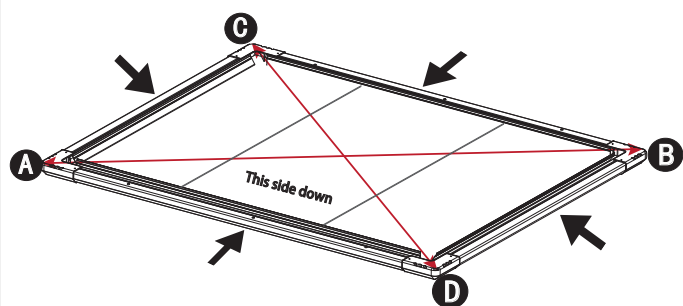

Z410




8 PC

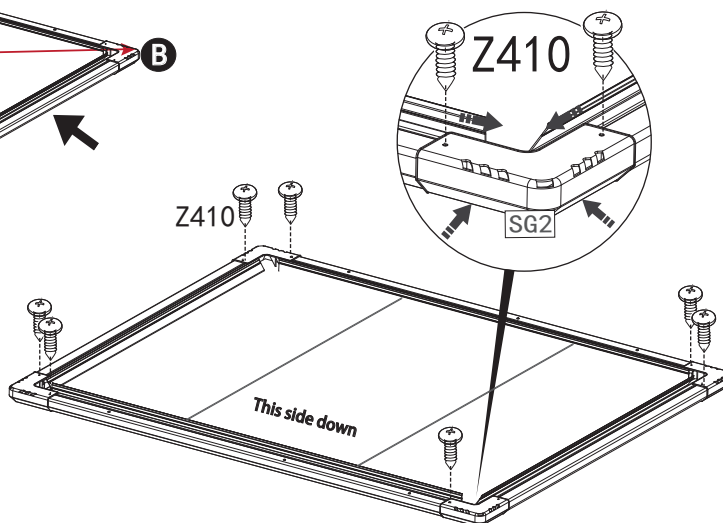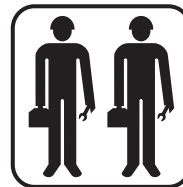

Step 24

24-1

Flip the panel.

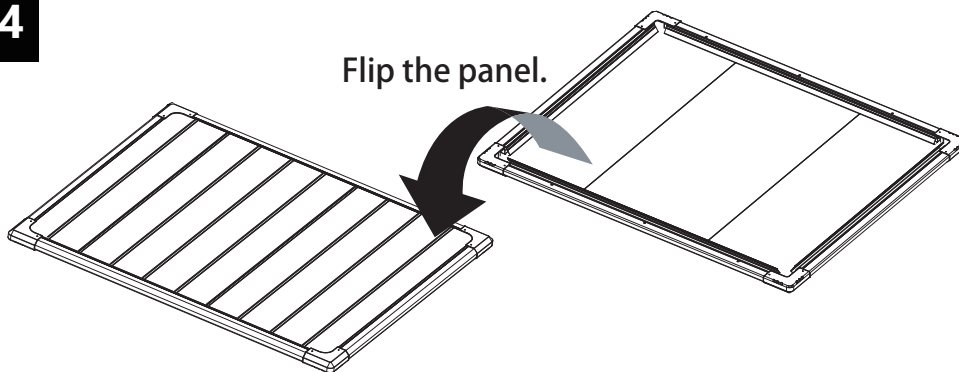


24-2

Z420




16 PC

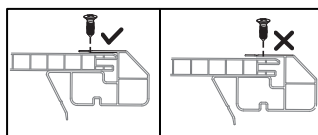

- Nail along the marked line on profile.


Caution:

Please use Drill to predrill a hole at depth 1mm before screw.

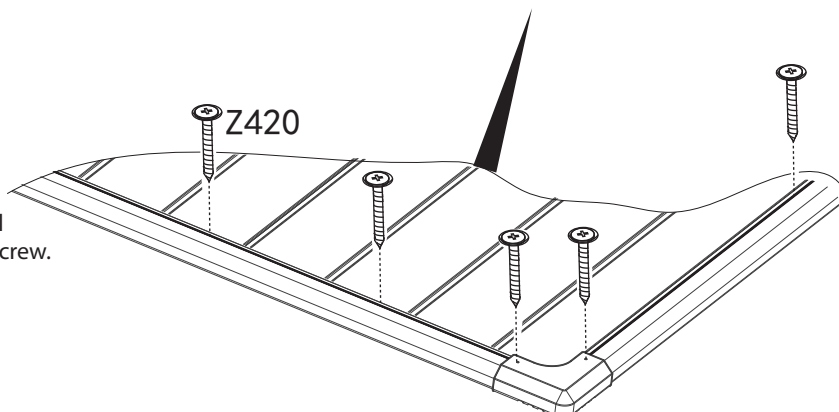

Step 25

25-1


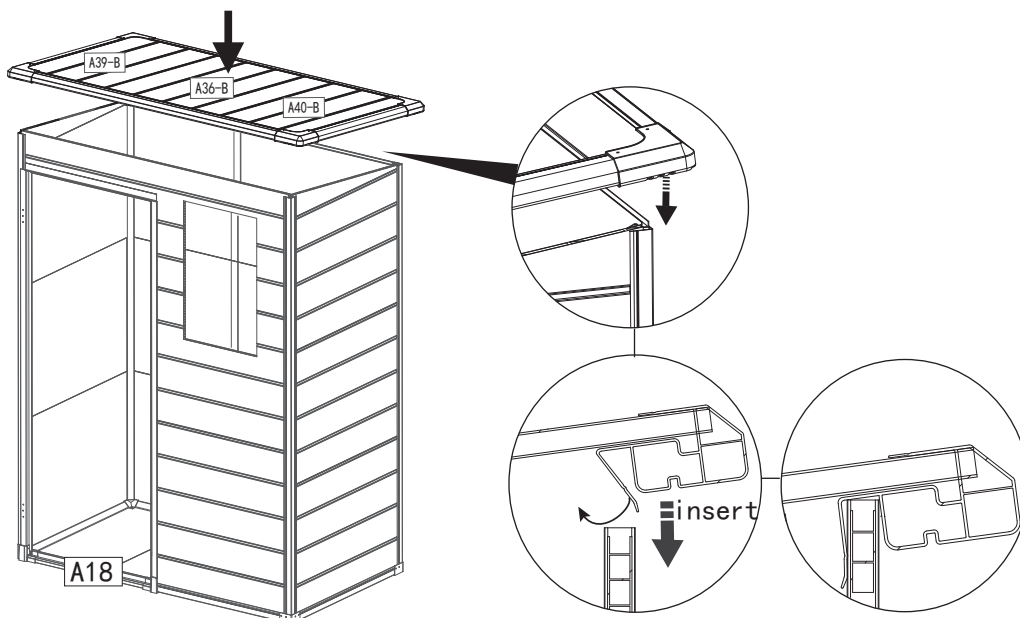


● Fully fit the panel inside the profile

25-2


- Ensuring the correct installation of the shed roof is paramount, as there should be no gaps between the roof and the walls. If any gaps are present, they must be checked and addressed. It's recommended to have one person inside the shed and another person outside to assist with the installation.

SG8

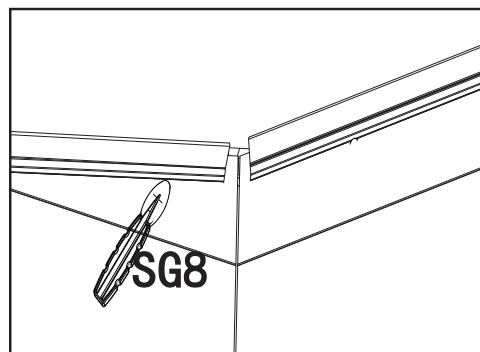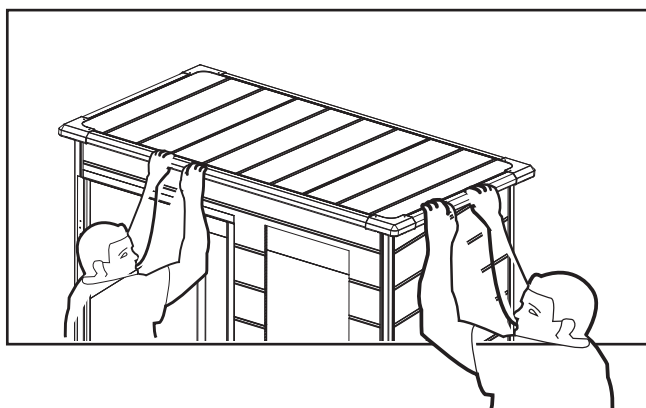

25-3


● Please note the nailing direction.

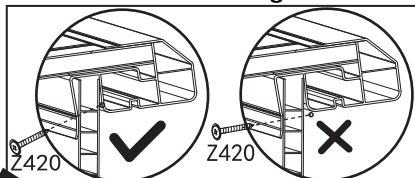

Z420




12 PC

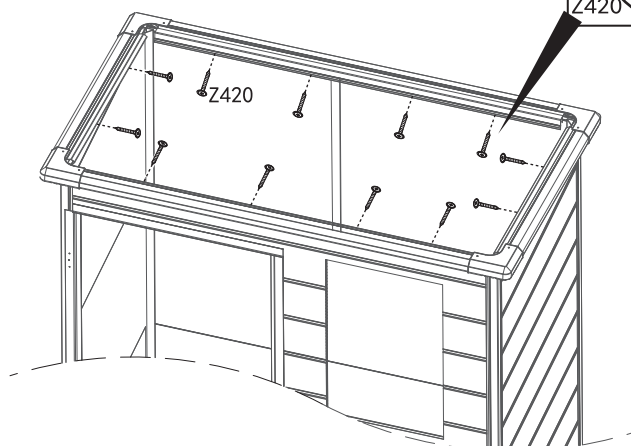

Caution:

Please use Drill to predrill a hole at depth 1mm before screw.




Step 26

Window section




SG10



1 PC

SG101



1 PC

SG102





1 PC

Z410




16 PC

How the Windows look when they are installed

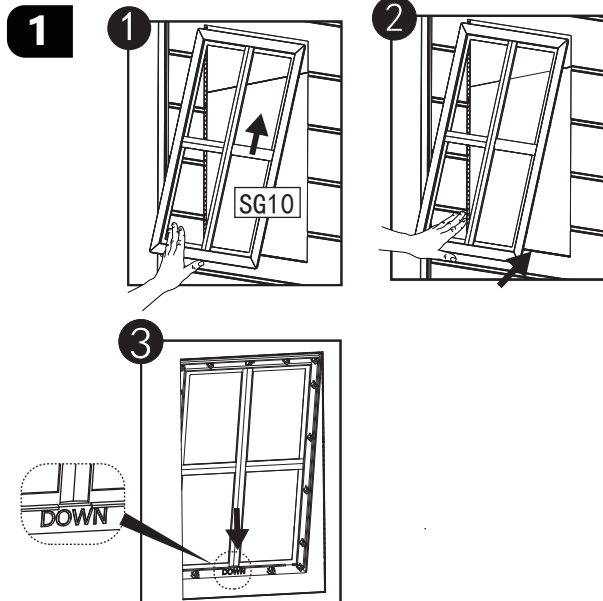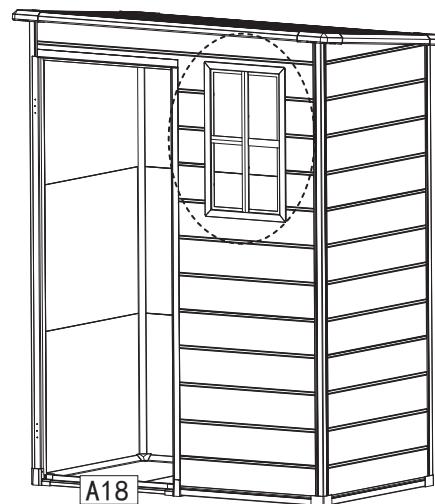


2


- Remove the film before fixing SG101

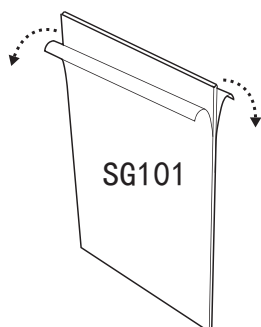


- Two persons are needed for this step, to press SG10 from outside and inside.

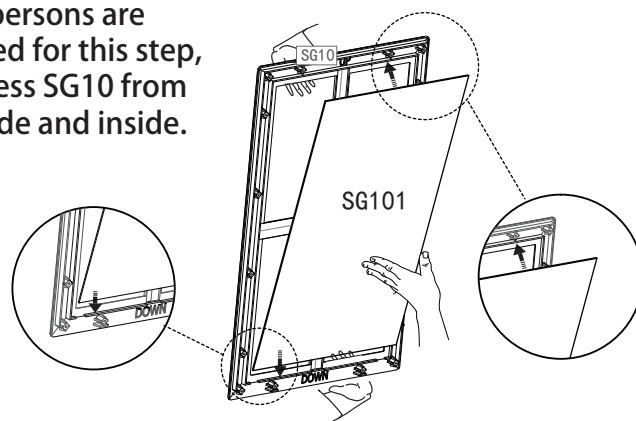

3

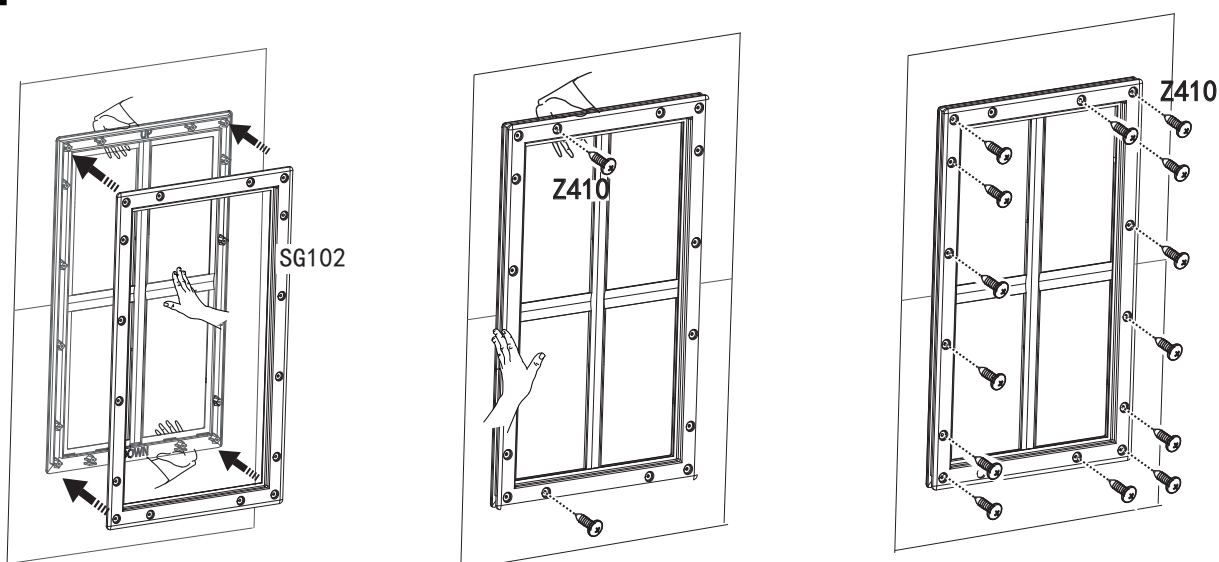

Step 27

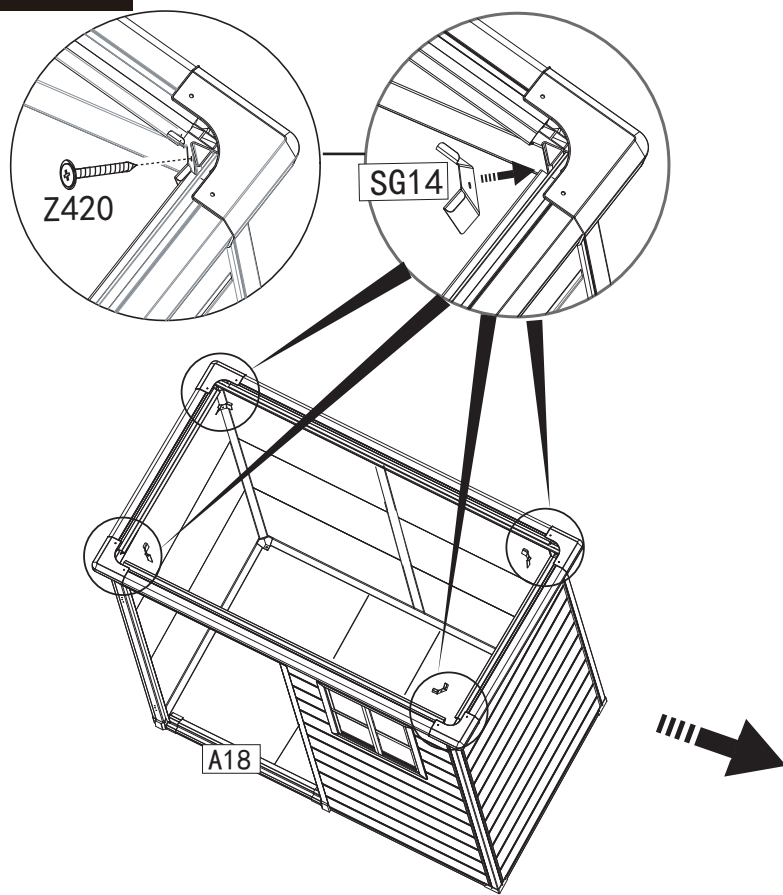

SG14




4 PC

Z420





4 PC

DOOR SECTION

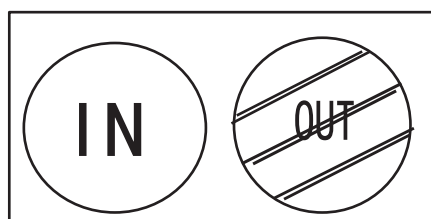

The stripes should be outside


Door mount this is above

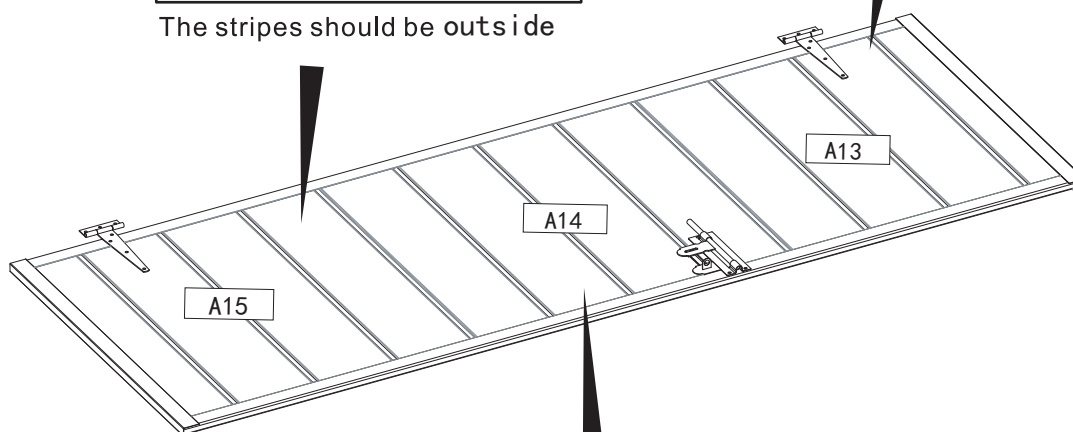


The boards must be straight

Step 28

28-1

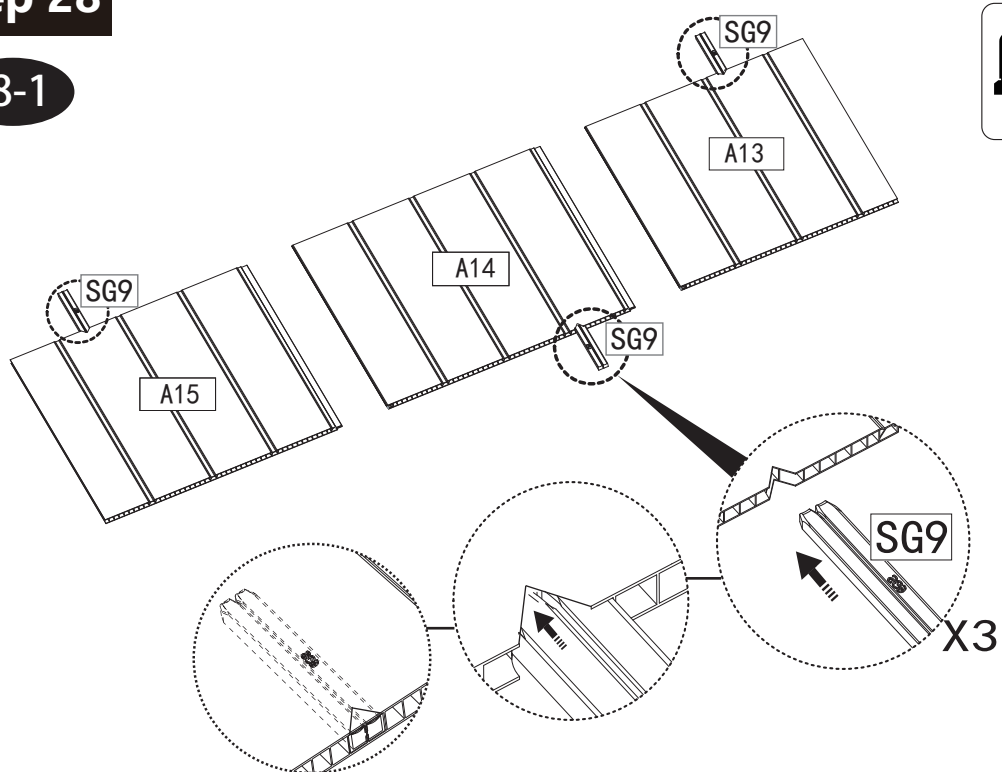



A14

1 PC
A15

1 PC
A13

1 PC
SG9


3 PC

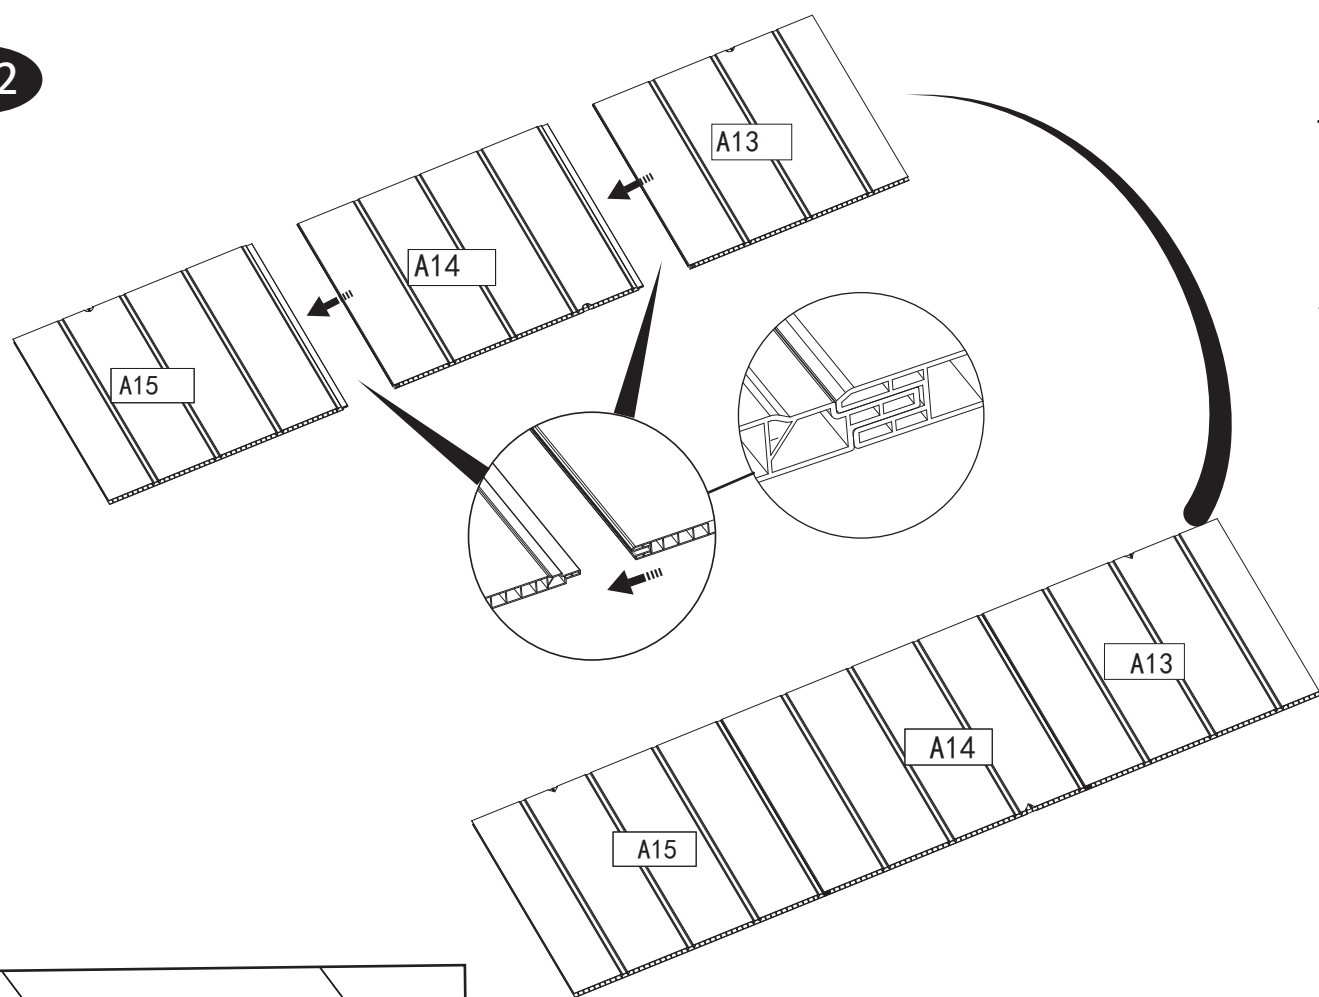28-2




The boards must be straight

Step 29

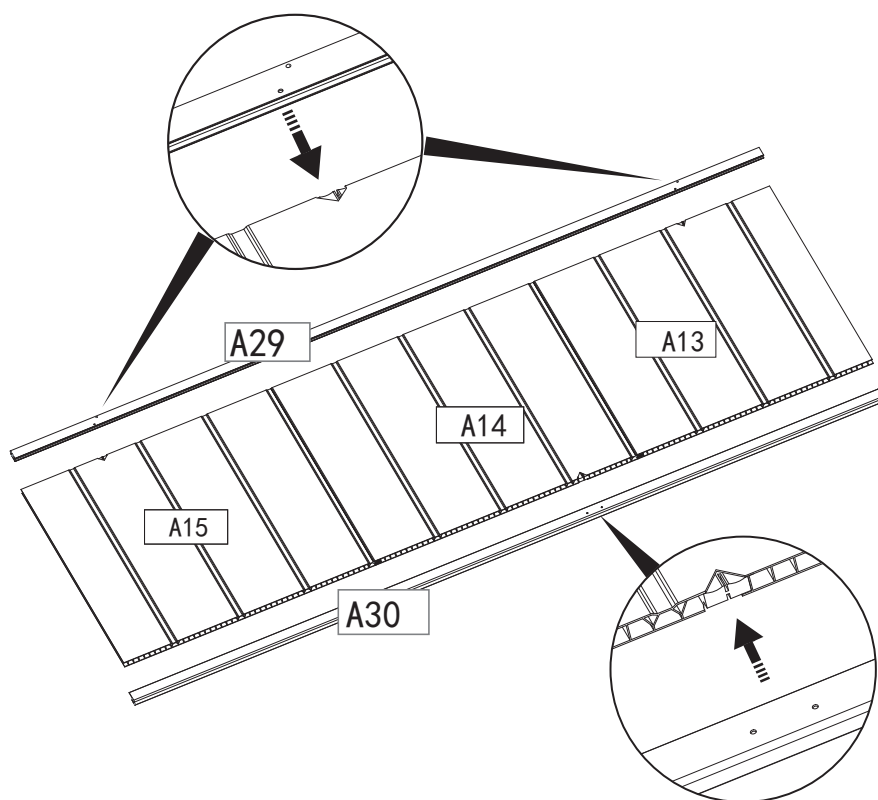

A30




1 PC

A29




1 PC

Step 30

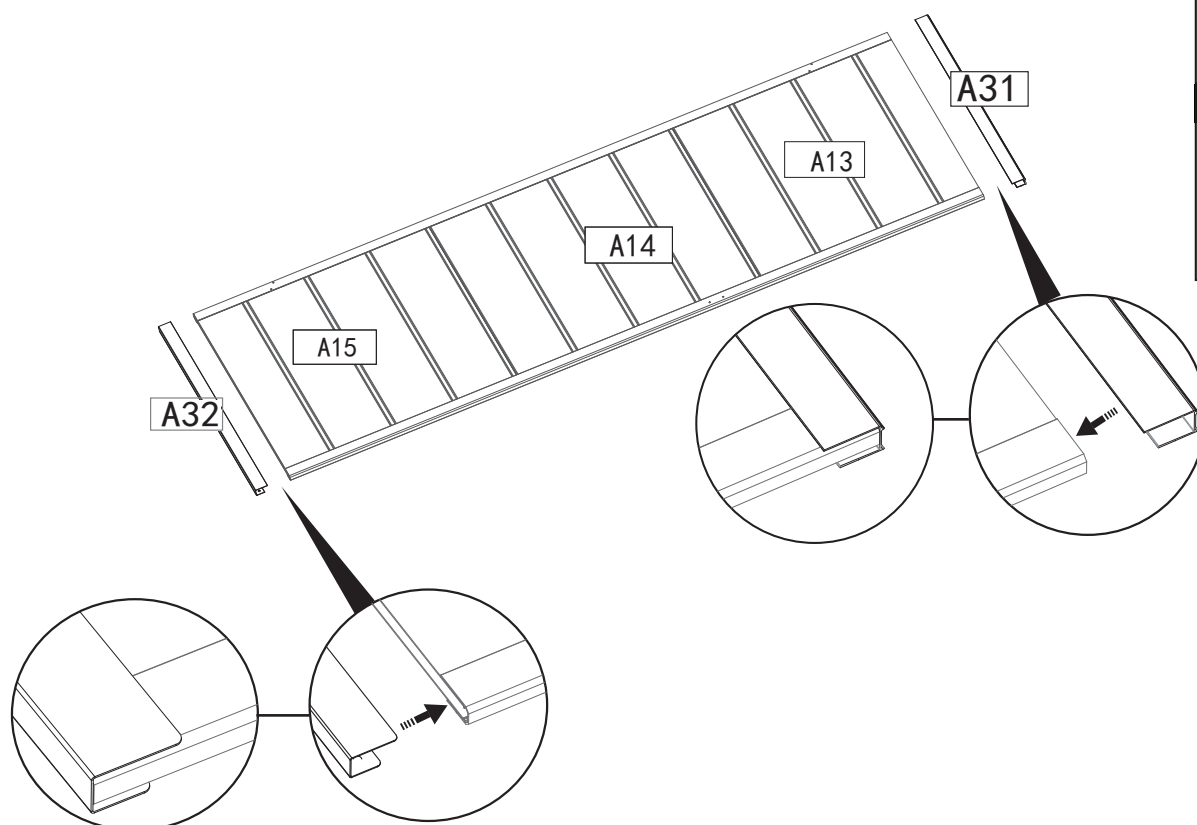


A31



1 PC


A32





1 PC

Step 31

31-1

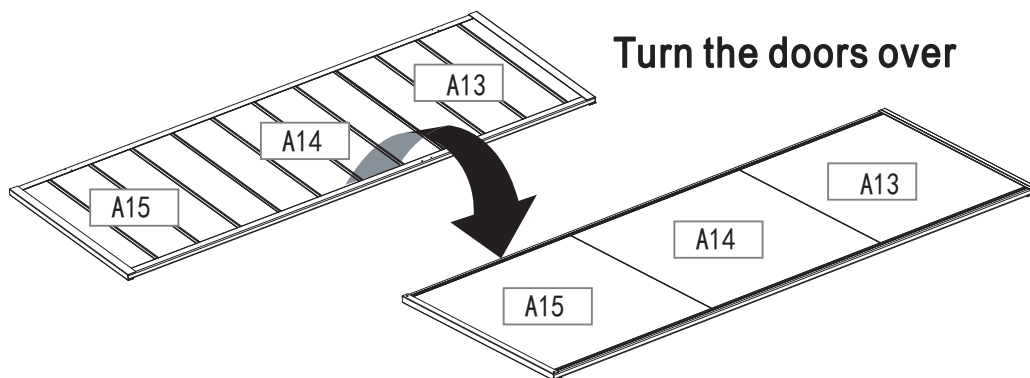

31-2

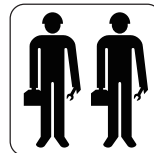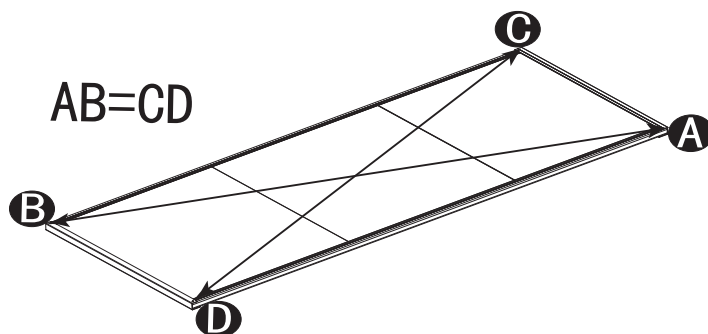


ZW413




6 PC

31-3

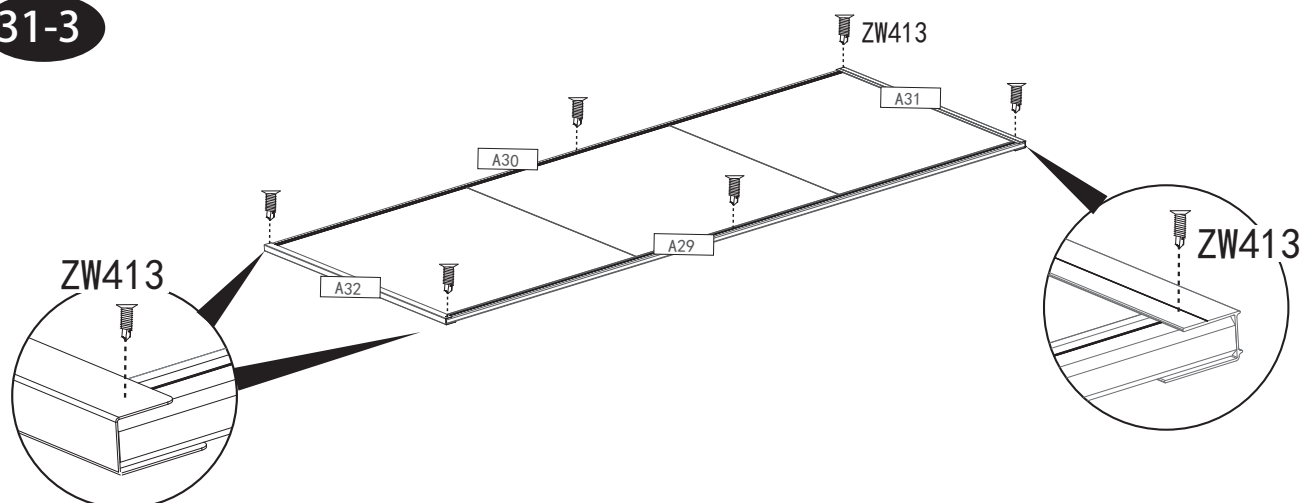


31-4

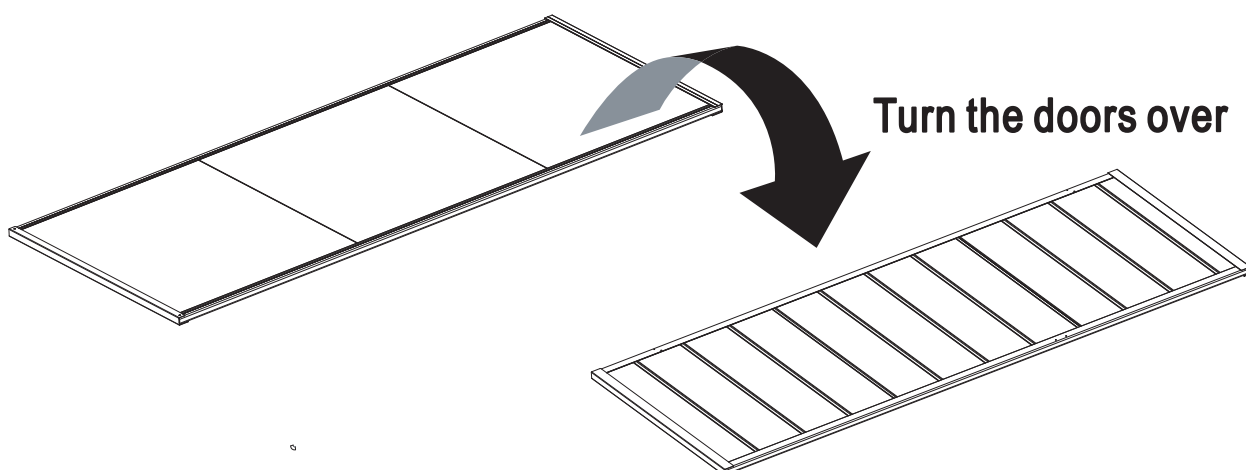

Step 32

32-1

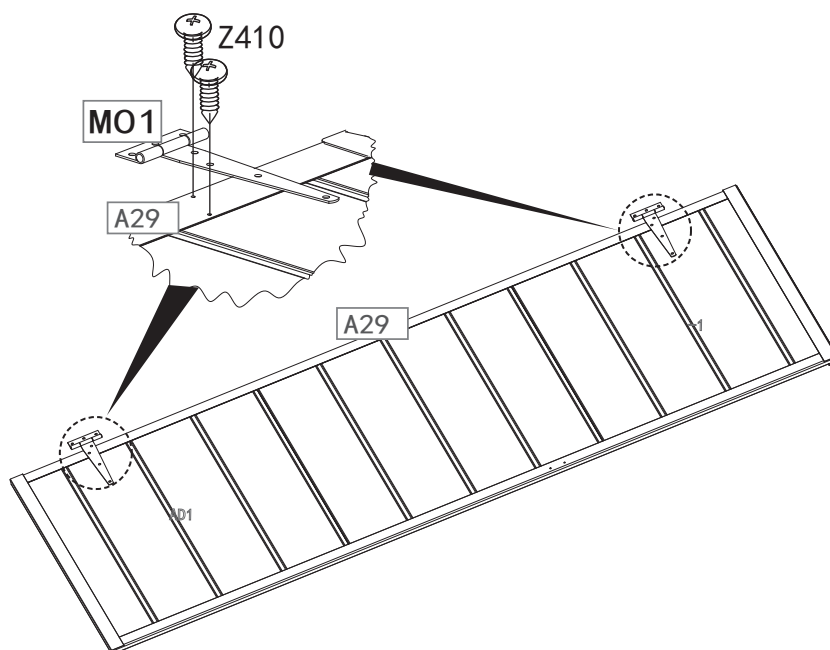


Z410




8 PC

M01




2 PC

M03-6R







1 PC

M03-7




1 PC


32-2

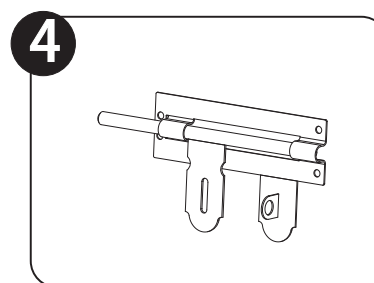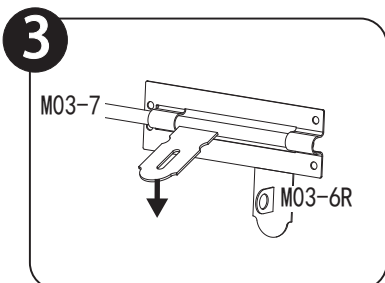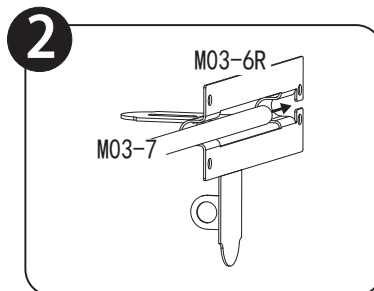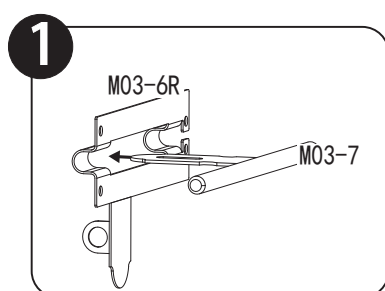

32-3

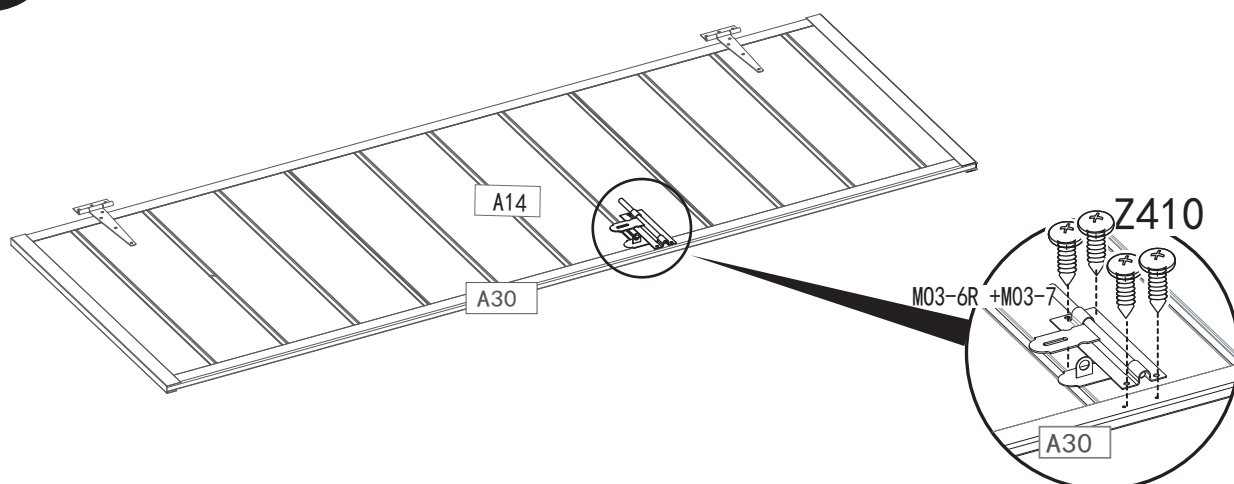

Step 33

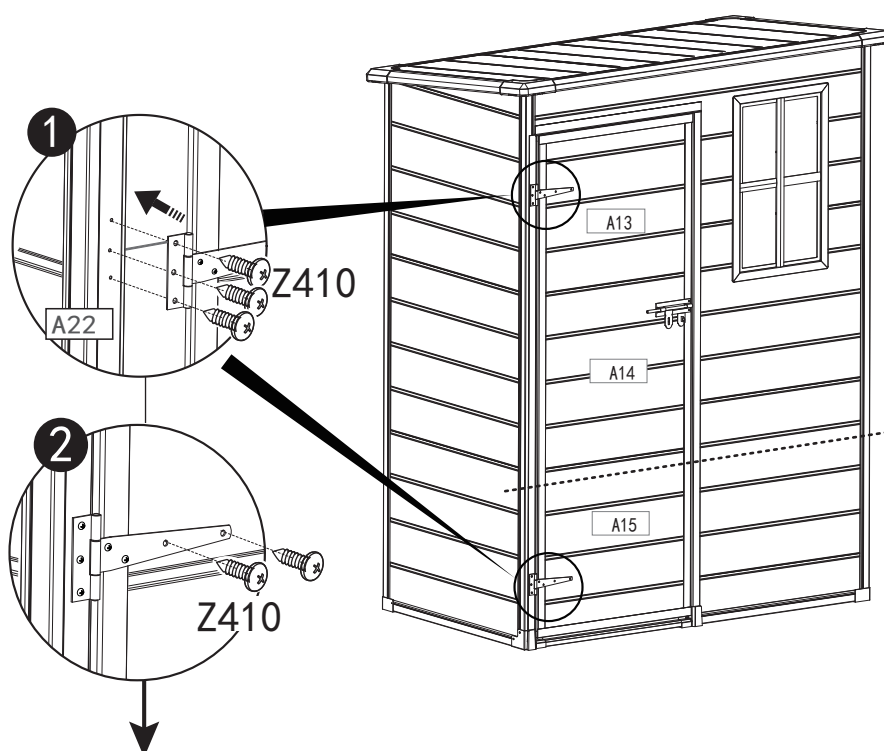

Z410




10 PC



● Grain of the door panels should align with that of the wall panels.

Step 34

Door Assembly Done!

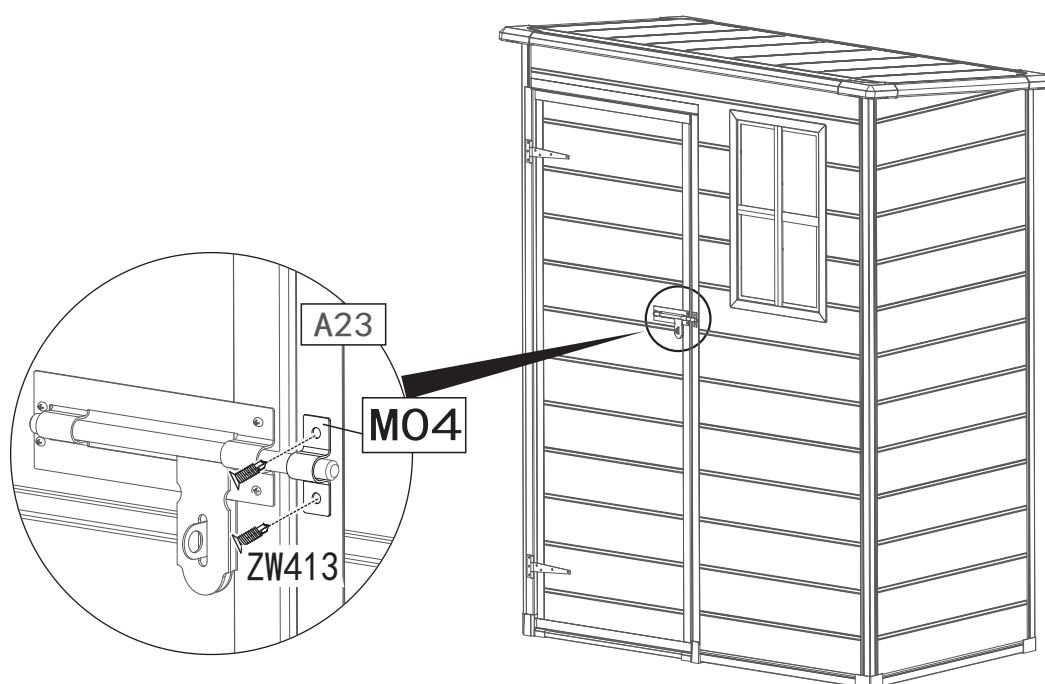

M04



1 PC


ZW413



2 PC

Step 35

Congratulations on completing the installation!

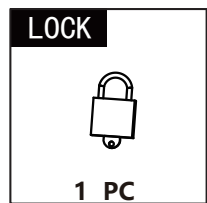

PARTS SCHEMATIC

