


INSTALLATION INSTRUCTIONS


Read these instructions carefully.
Ensure that all parts are complete
before assembling.

- (A)**  Allen Key x1
- (B)**  Flat Washer x10
- (C)**  Spring Washer x10
- (D)**  M6*50 Bolt x6
- (E)**  M6*80 Bolt x4
- (F)**  Chair Back x1
- (G)**  Chair Seat x1
- (H)**  Front Leg x2



Scan the QR code,
search for installation instruction


Please contact us at
customerservice@subrtex.com
for any auestions



Lay a clean cloth before
assembly to prevent
scratches, dents and
stains on the bar stool.




Always install flat washer
and spring washers with
all screws.

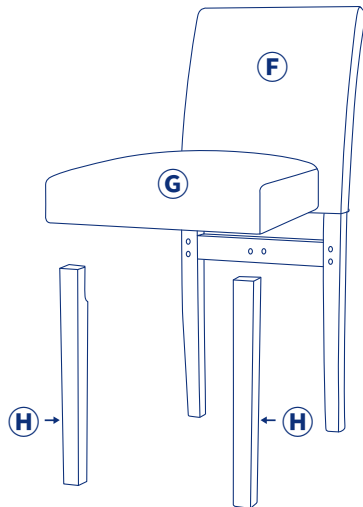

Step 1



Tighten to 50%

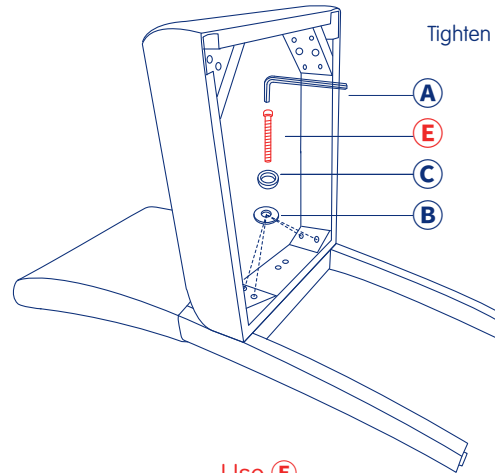


Use **(E)**
The longest screw


Step 2



Tighten to 50%

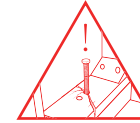

Warning: Do not use
the longest screw,
Risk of cracking or breaking
the backrest crossbar.

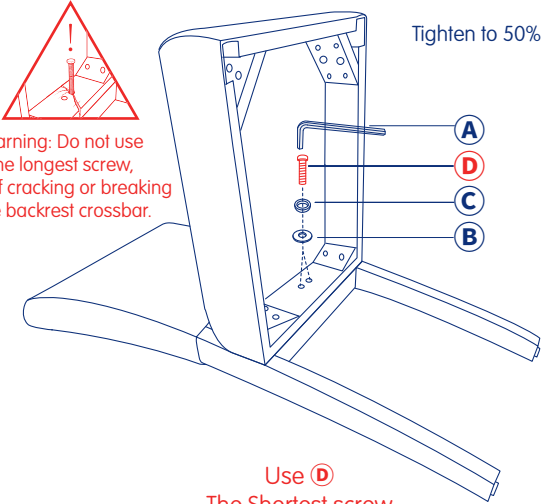


Use **(D)**
The Shortest screw

Step 3



Tighten to 50%

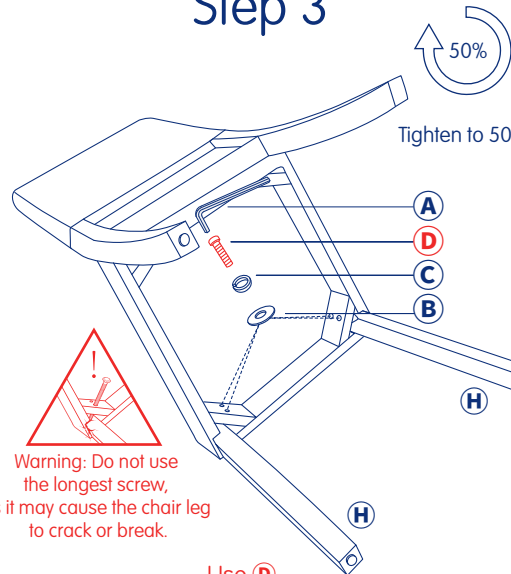


Warning: Do not use
the longest screw,
as it may cause the chair leg
to crack or break.

Use **(D)**
The Shortest screw

Step 4



Tighten to 100%

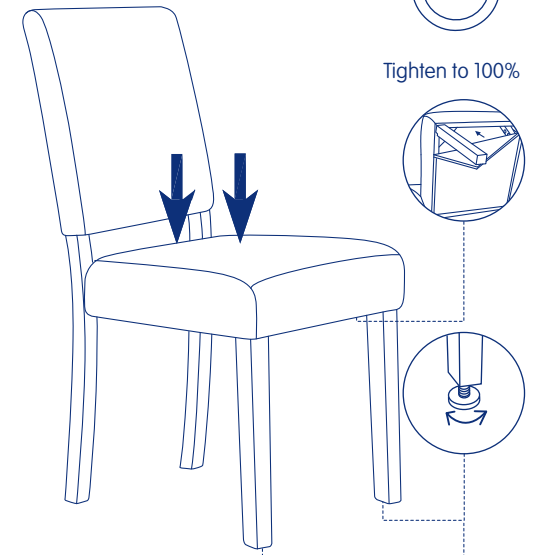

Make Your House a Home

Simon