

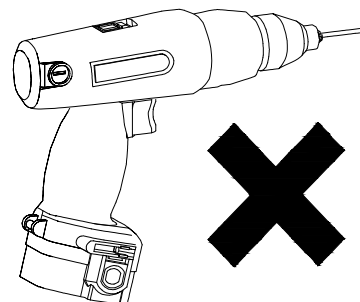
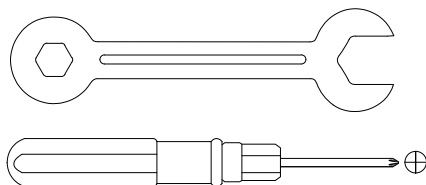


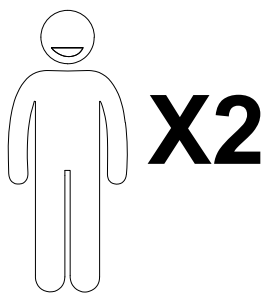



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

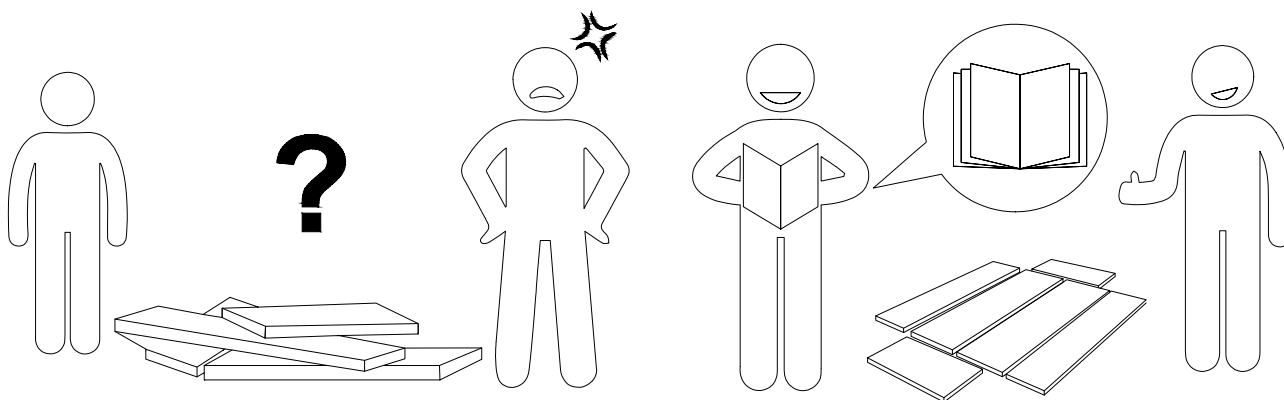

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.










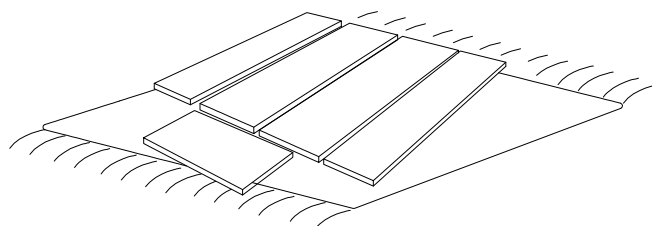
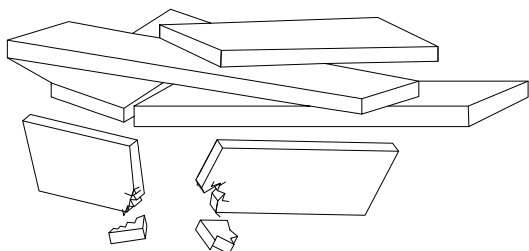


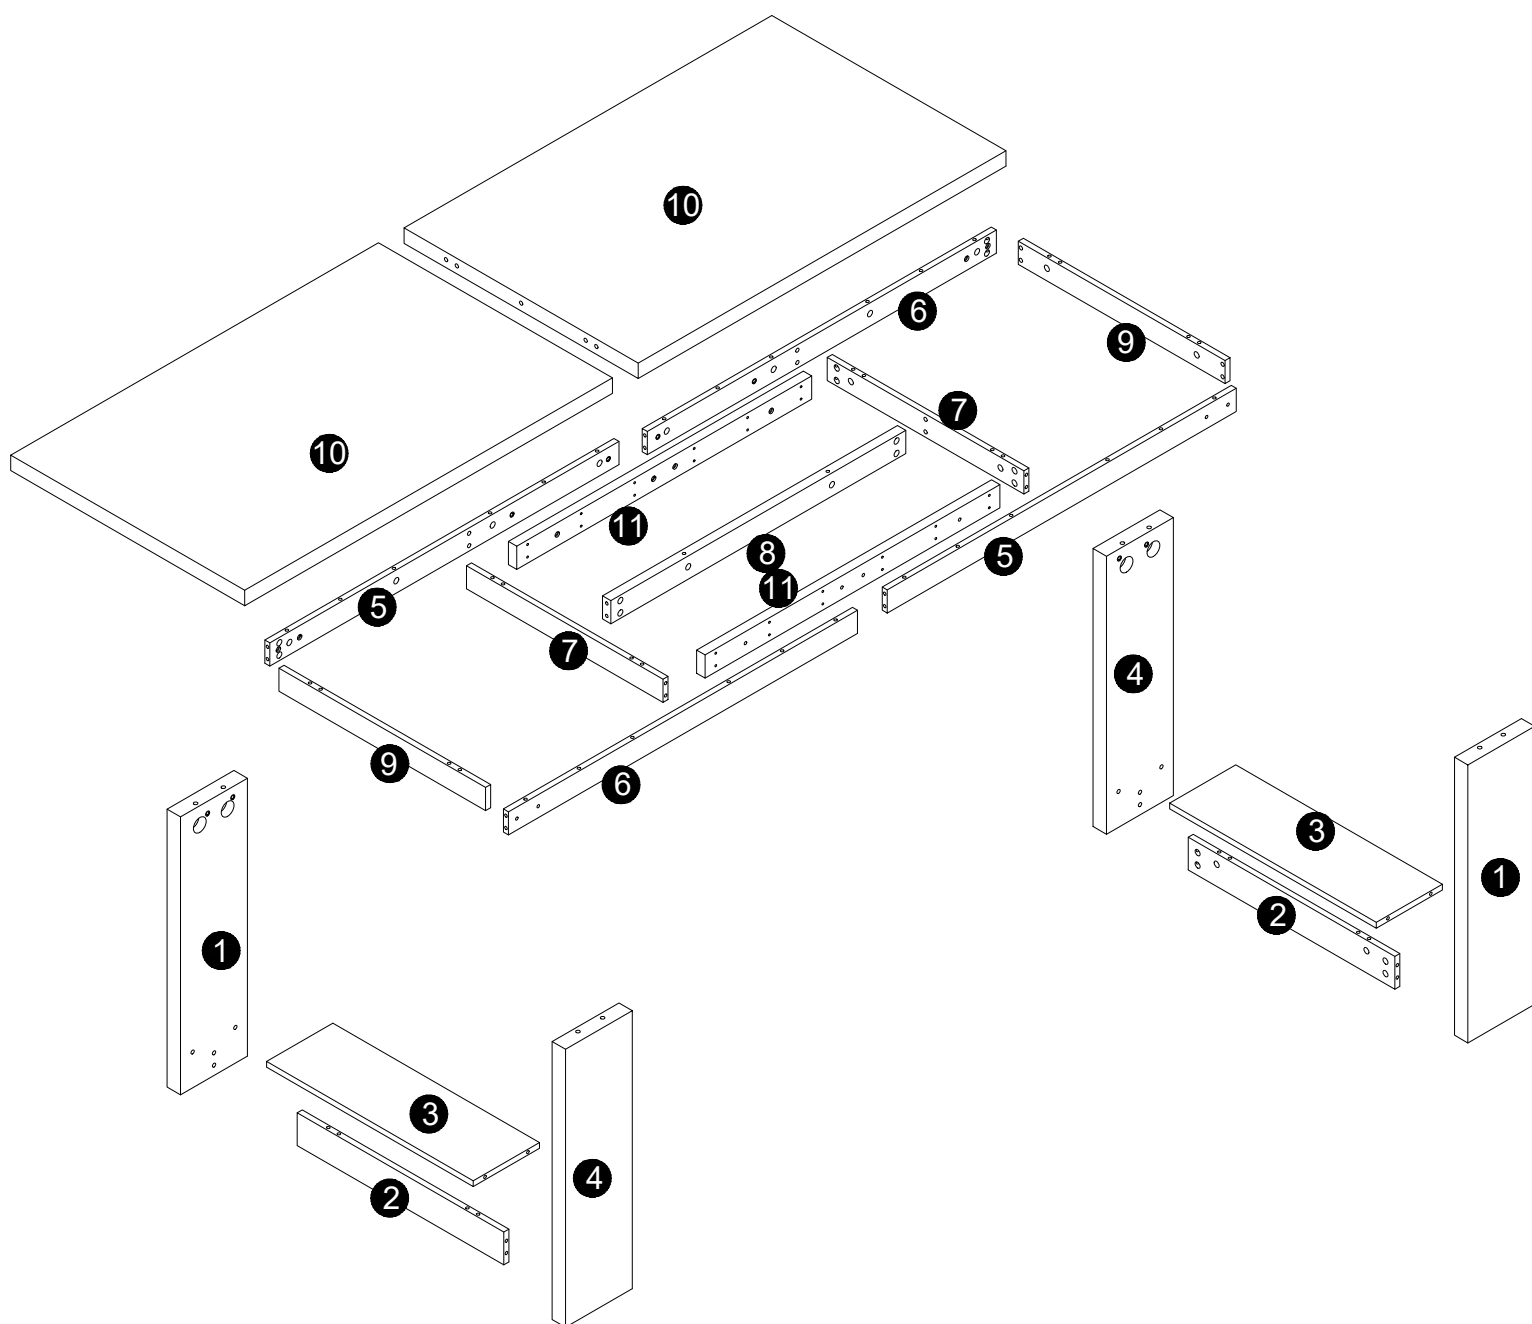











⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

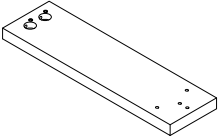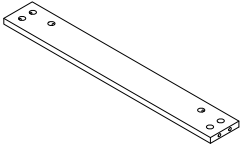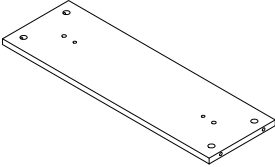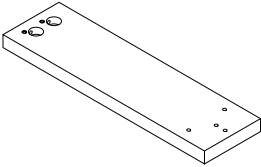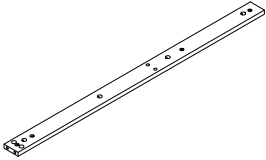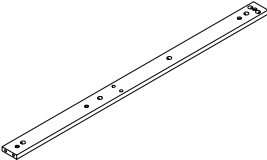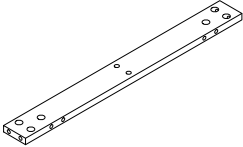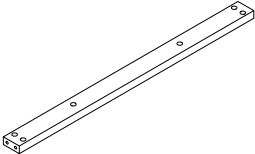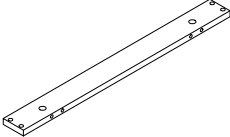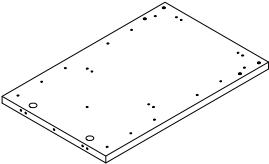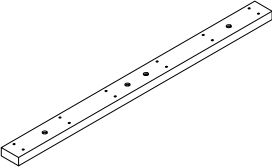
1  2 pcs	2  2pcs	3  2 pcs	4  2 pcs	5  2 pcs
6  2 pcs	7  2 pcs	8  1 pc	9  2 pcs	10  2 pcs
11  2 pcs				

Hardware List

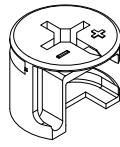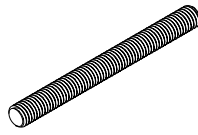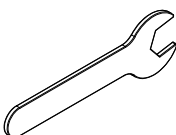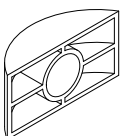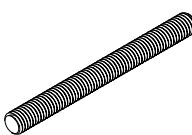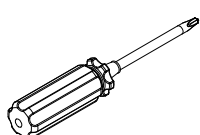
A	B	C	D	E	F
					
M6X35mm	Ø8x30mm	Ø15x12mm	Ø8x40mm	M8x75mm	
66 pcs	20 pcs	66 pcs	4 pcs	8 pcs	2 pcs
G	H	I	J	K	L
					
		M6x25mm	M8x100mm	Ø3. 5x35mm	M6x20mm
12 pcs	12 pcs	16 pcs	2 pcs	24 pcs	8 pcs
M	N				
					
Screwdriver	Ø10x40mm				
1 pc	3 pcs				

Installation of Cams and Pins



Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

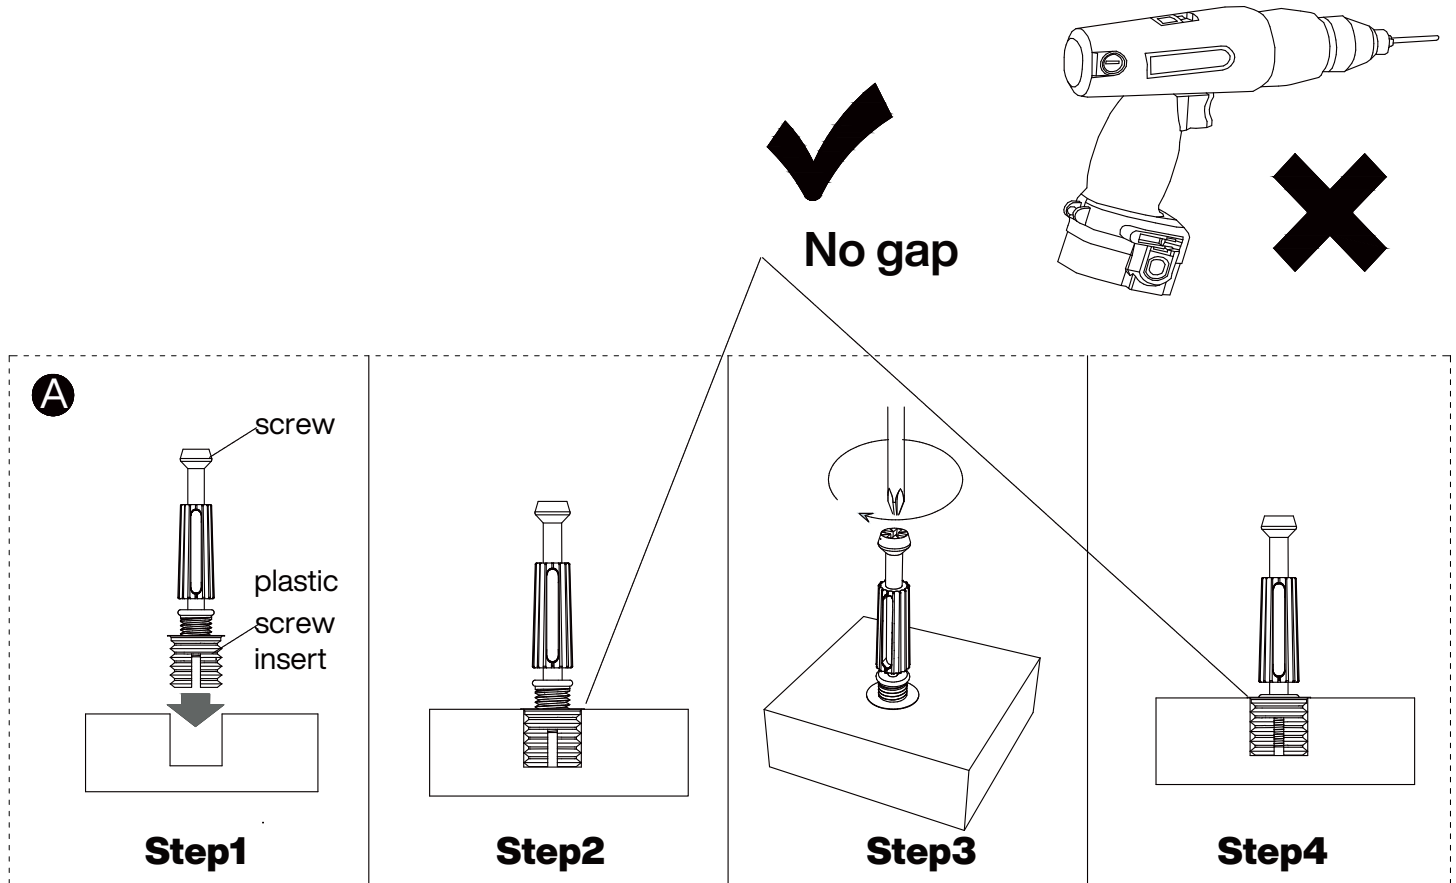




Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

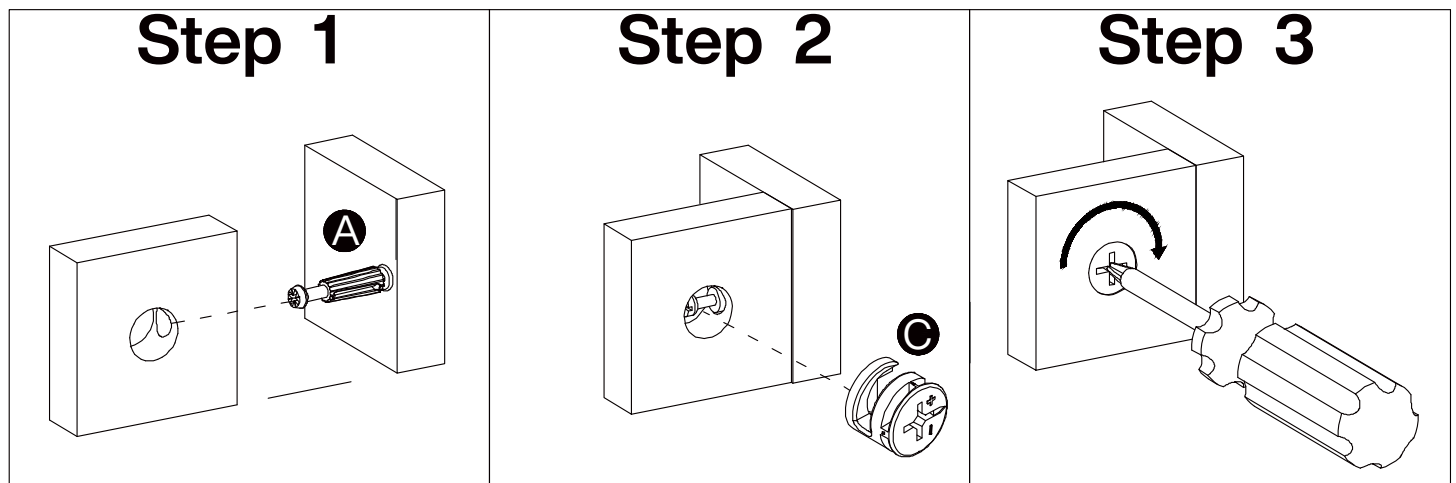


1

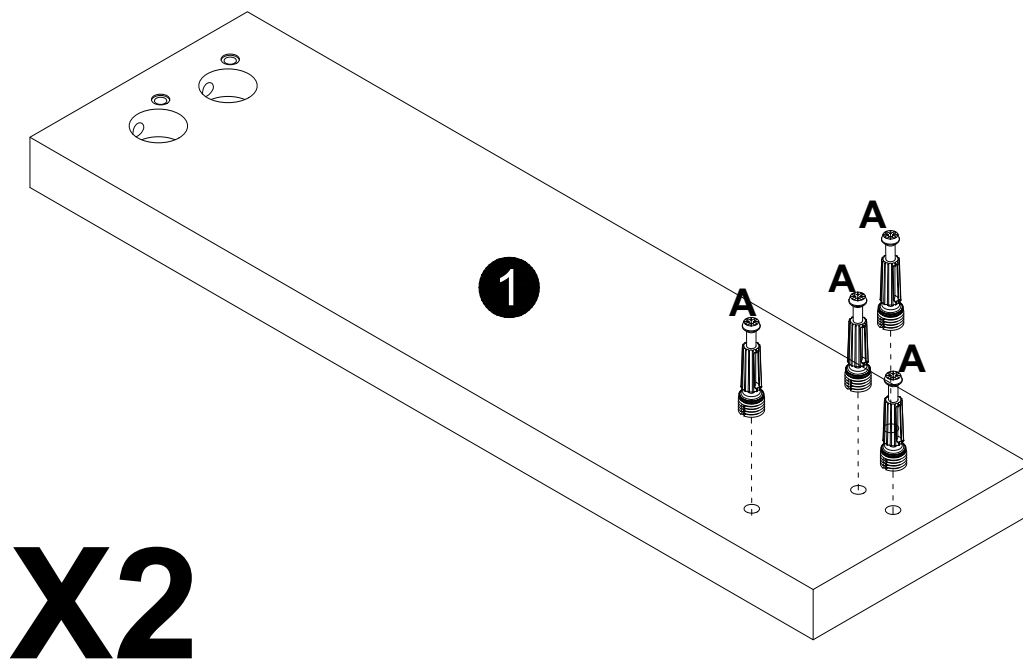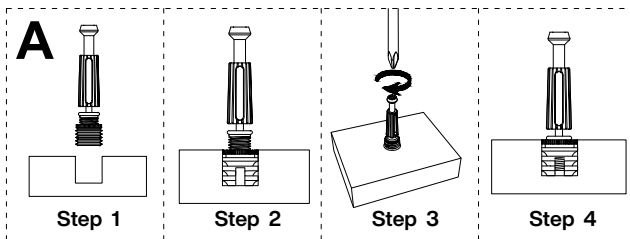



2

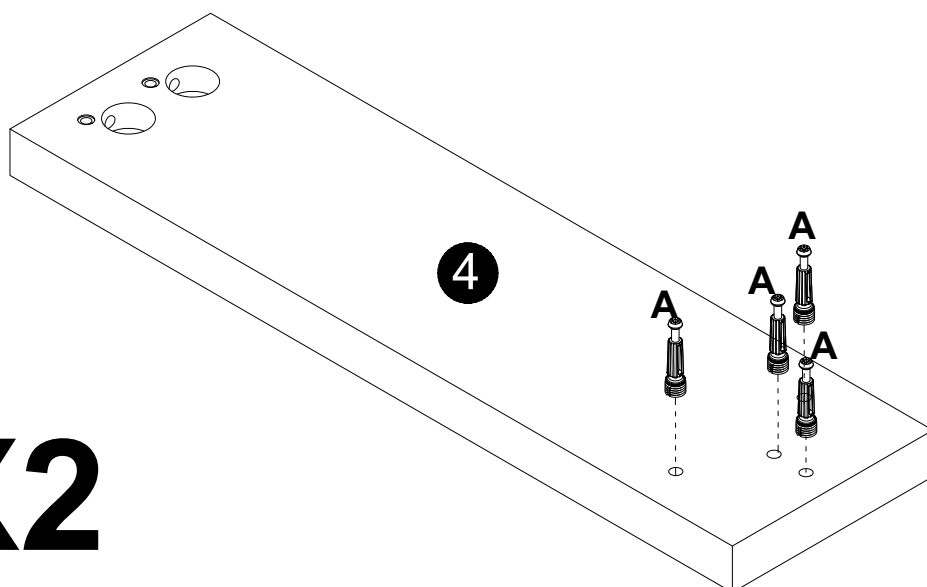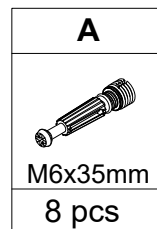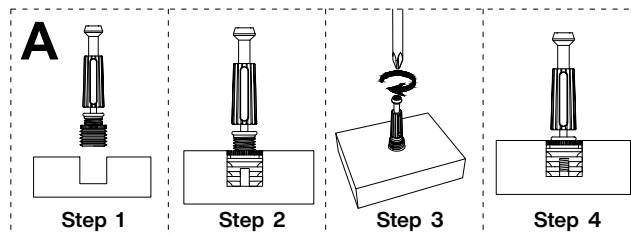


3

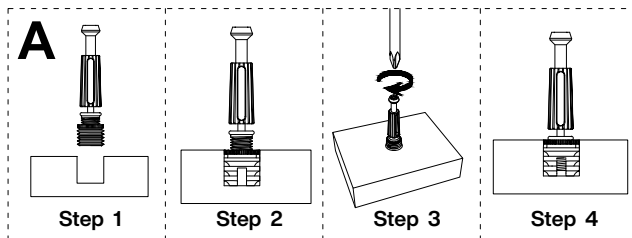

A	B
	
M6x35mm	Ø8x30mm
4 pcs	4 pcs

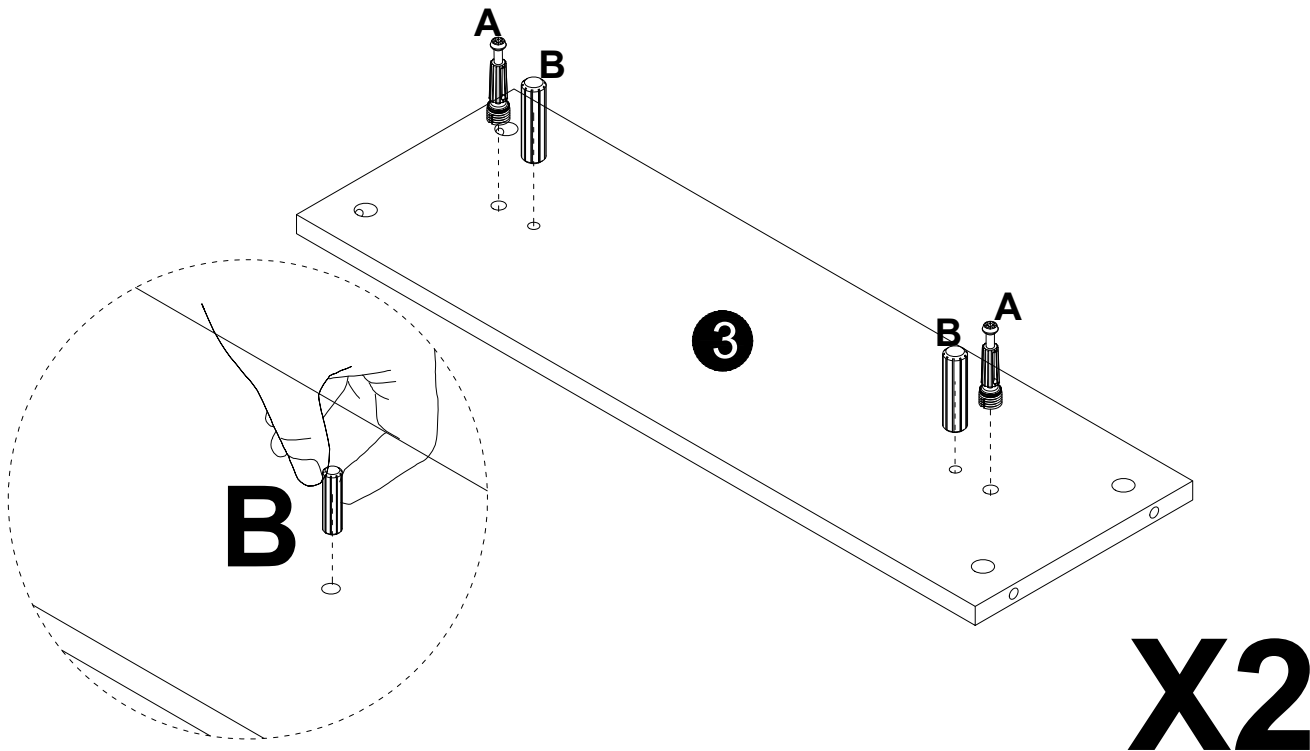


4


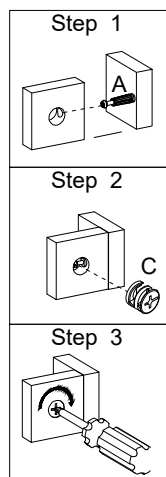


C

Ø15x12mm
4 pcs

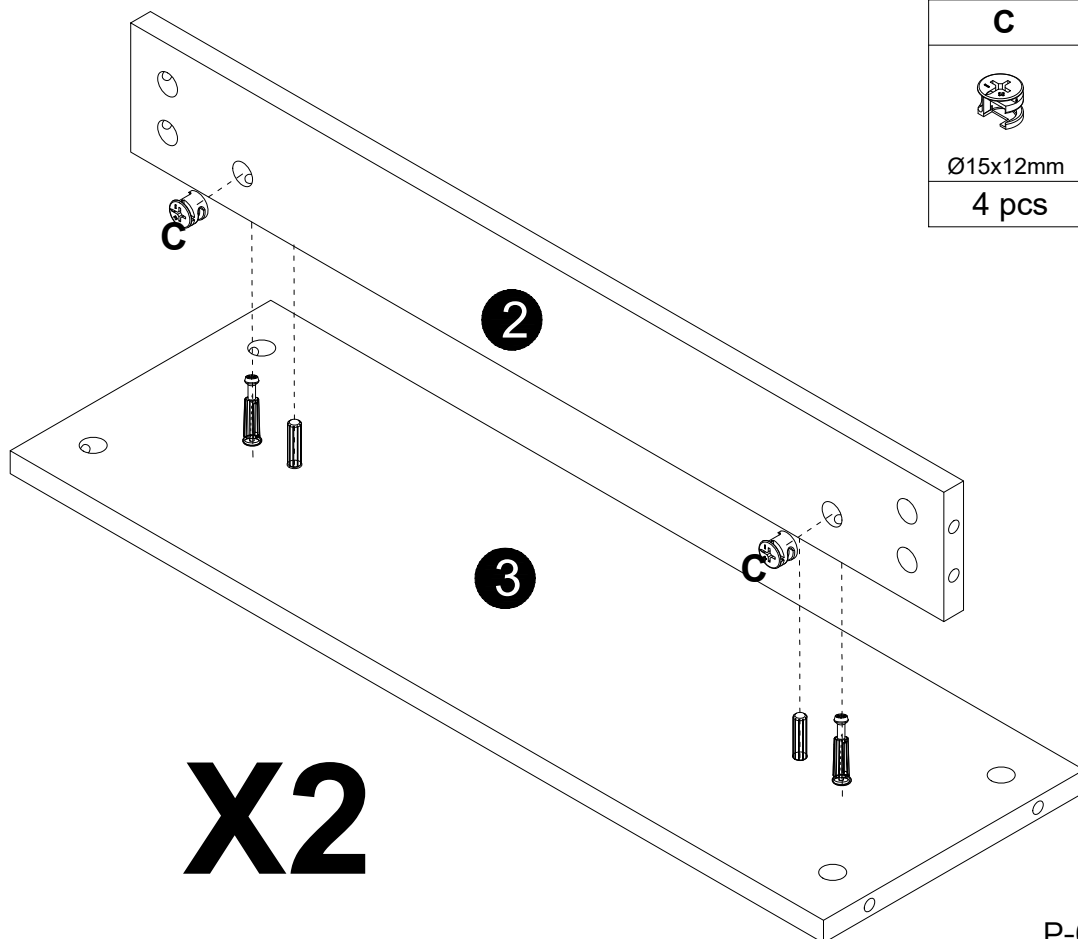

5

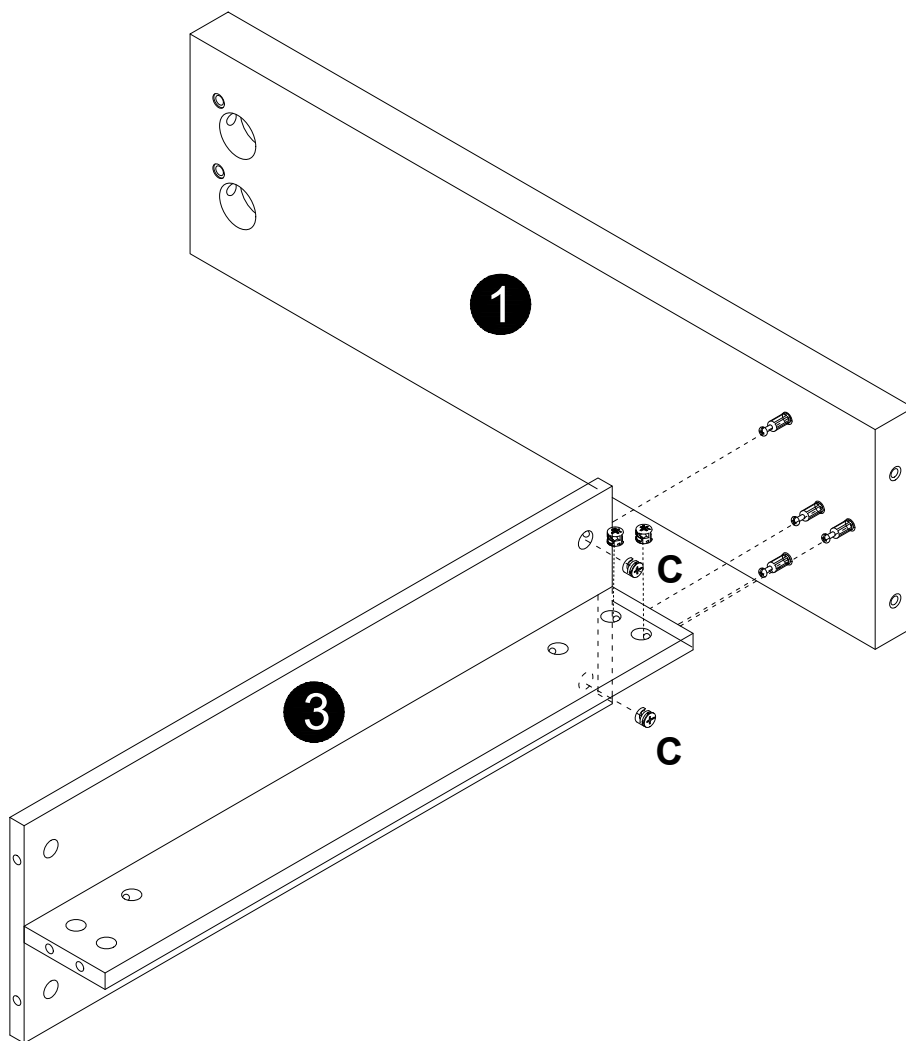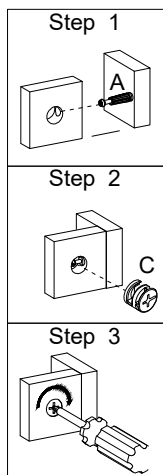


C

Ø15x12mm
8 pcs


X2

6

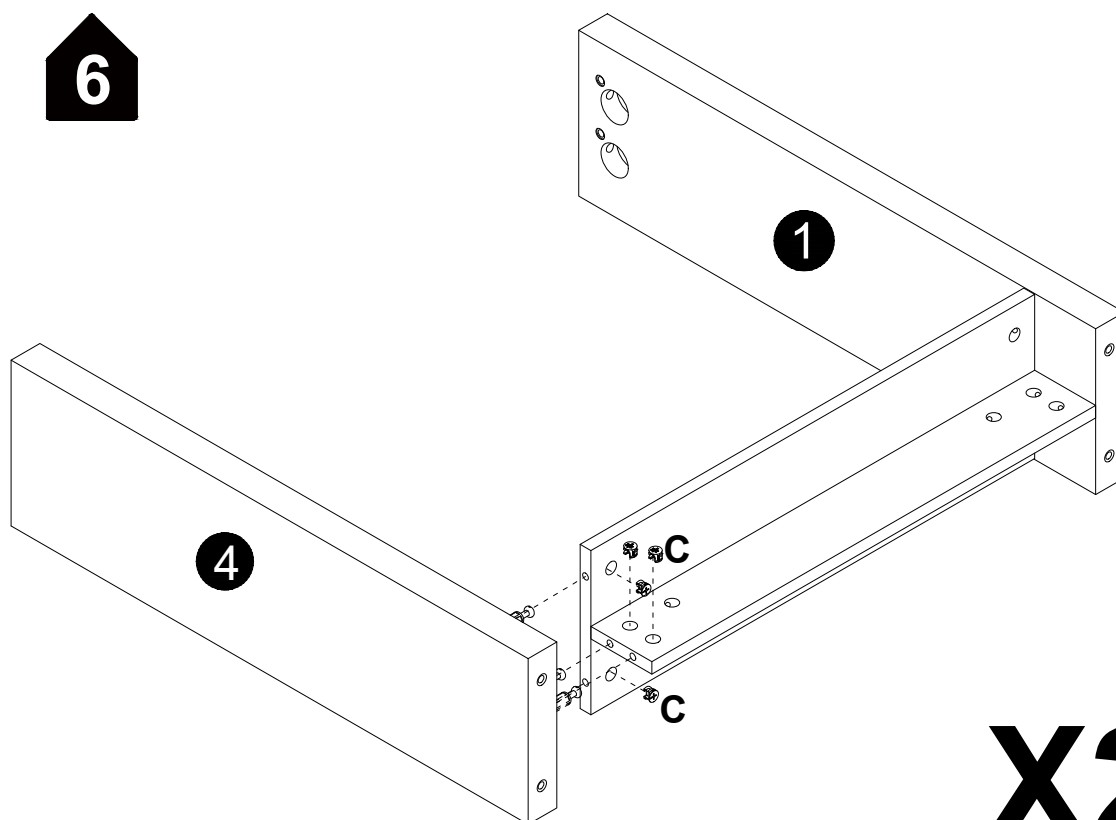


C

Ø15x12mm
8 pcs

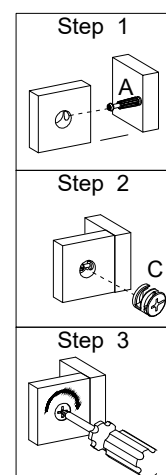


X2


7

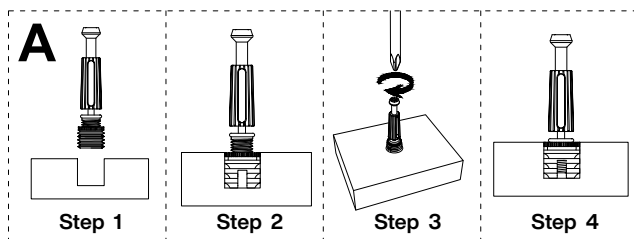


A
M6x35mm
8 pcs

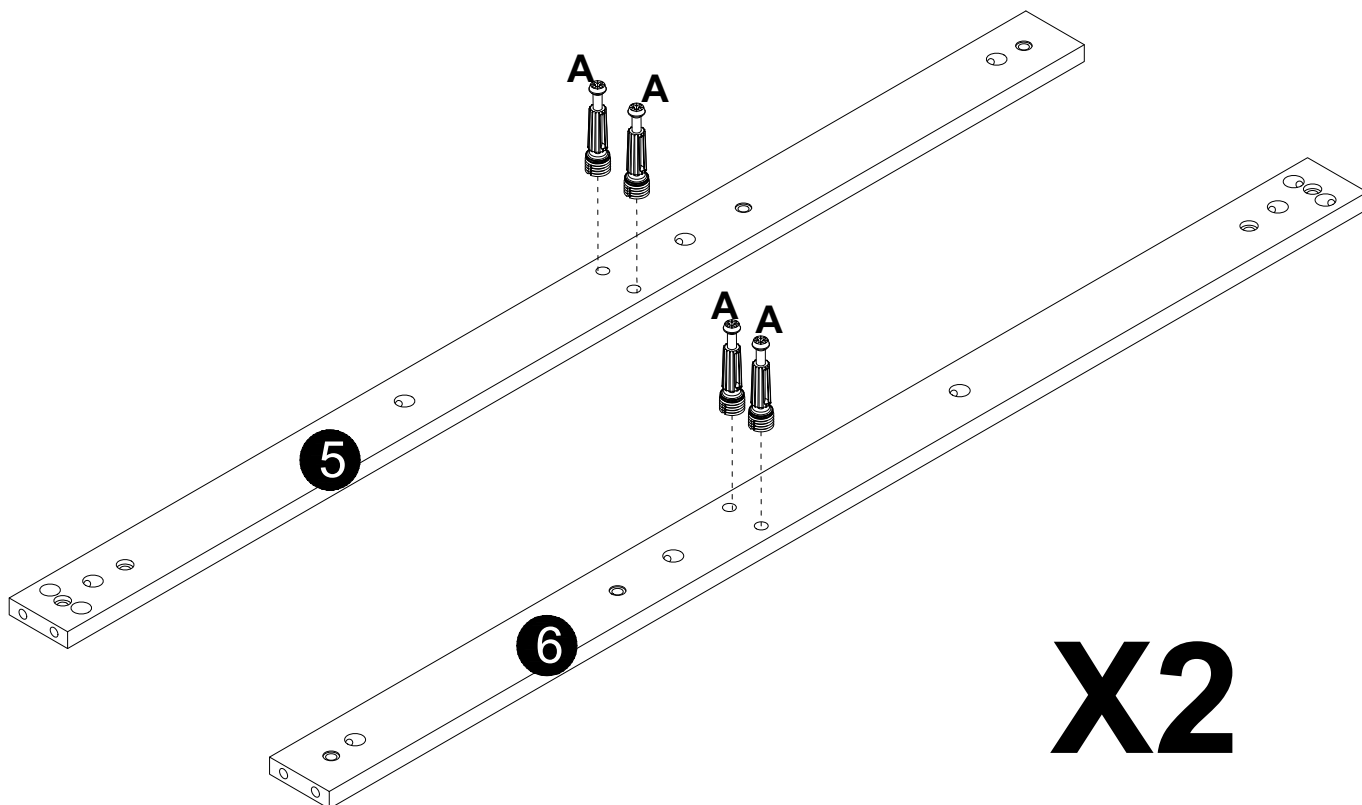


8

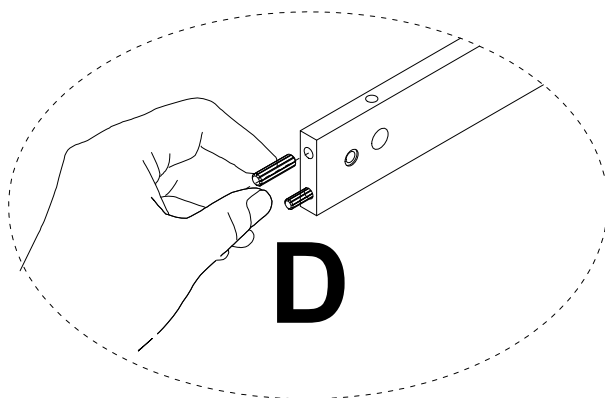

D
Ø8x40mm
4 pcs

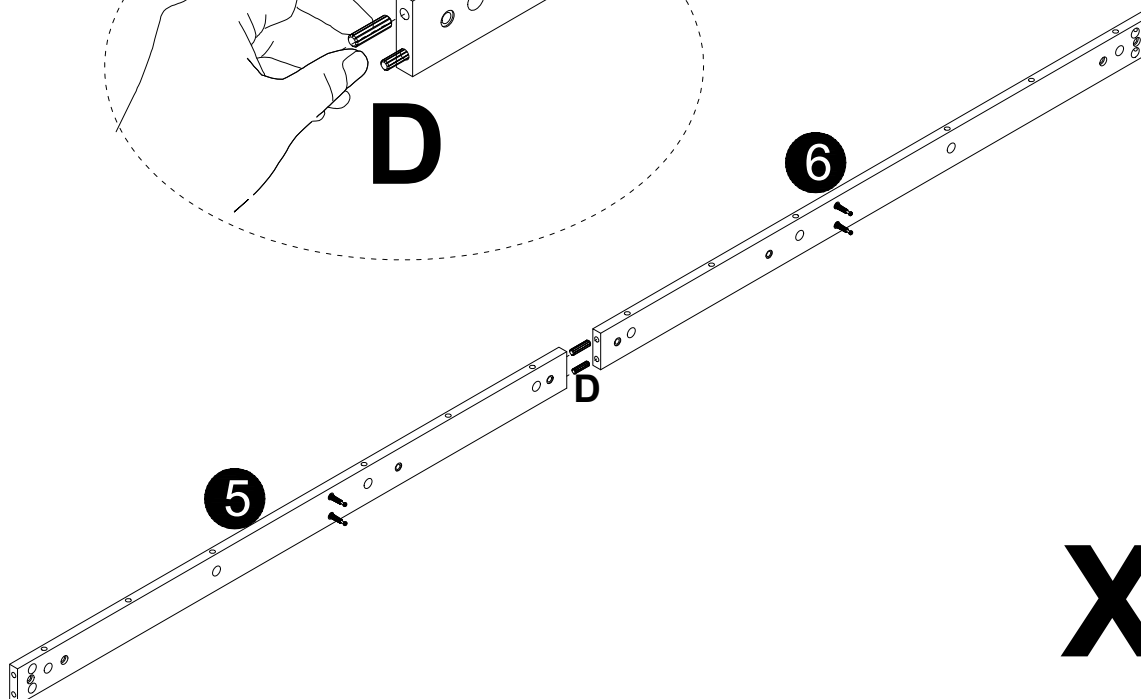


9

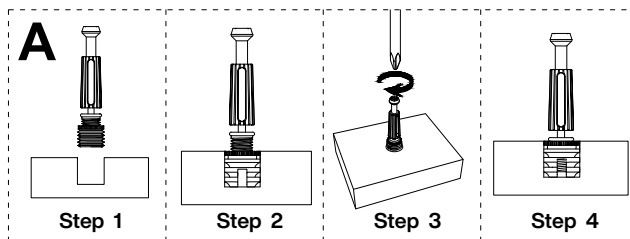


A

M6x35mm
4 pcs

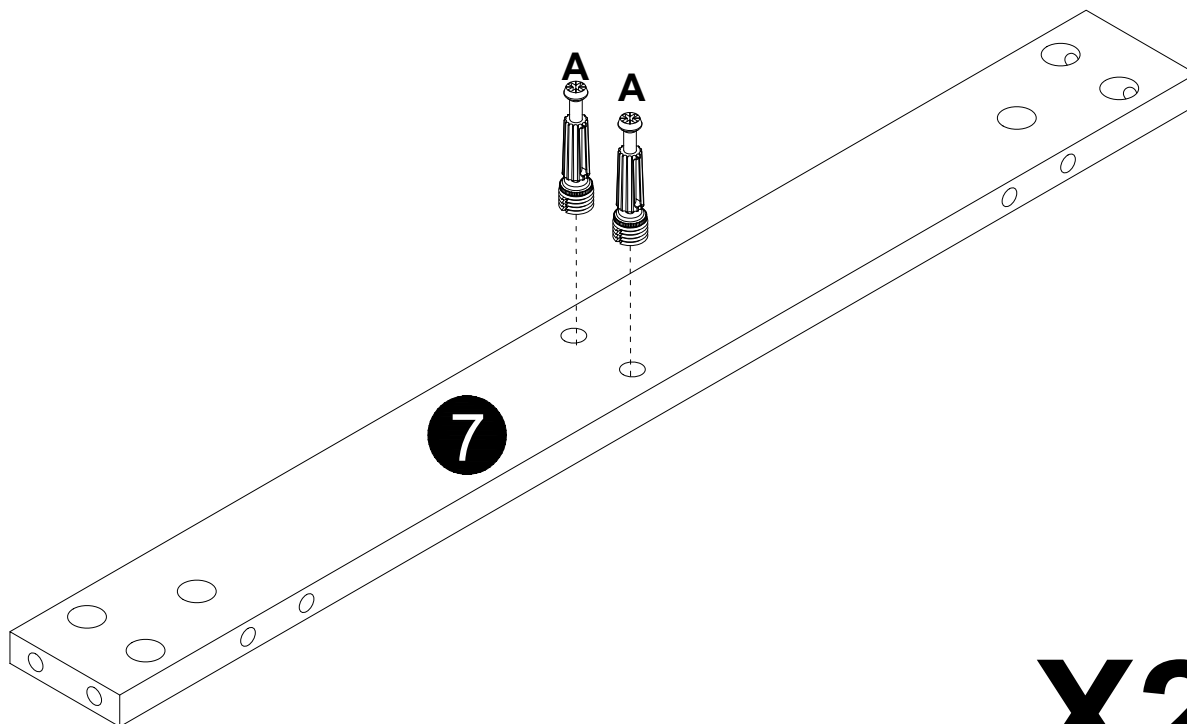


X2

10

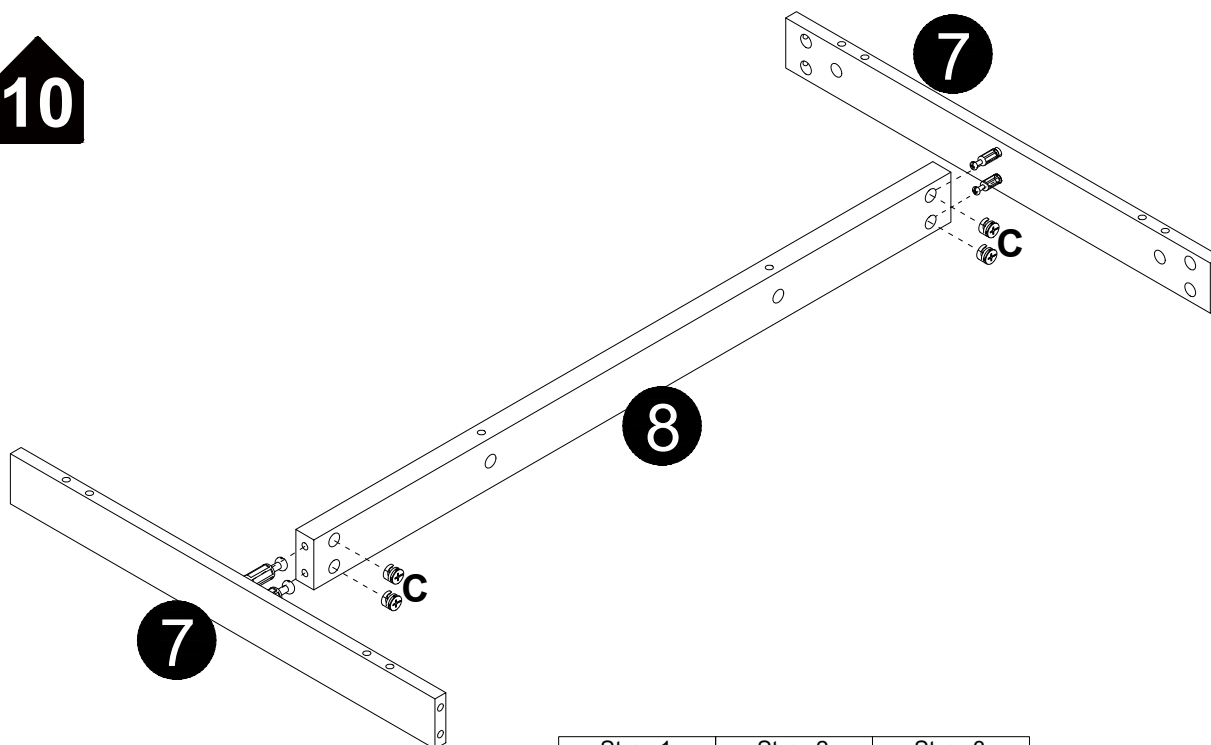


C

Ø15x12mm
4 pcs

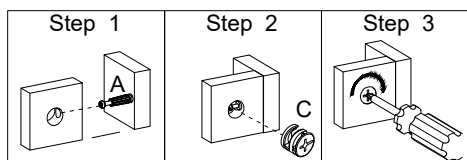


11

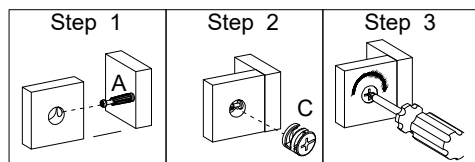


C

Ø15x12mm
4 pcs

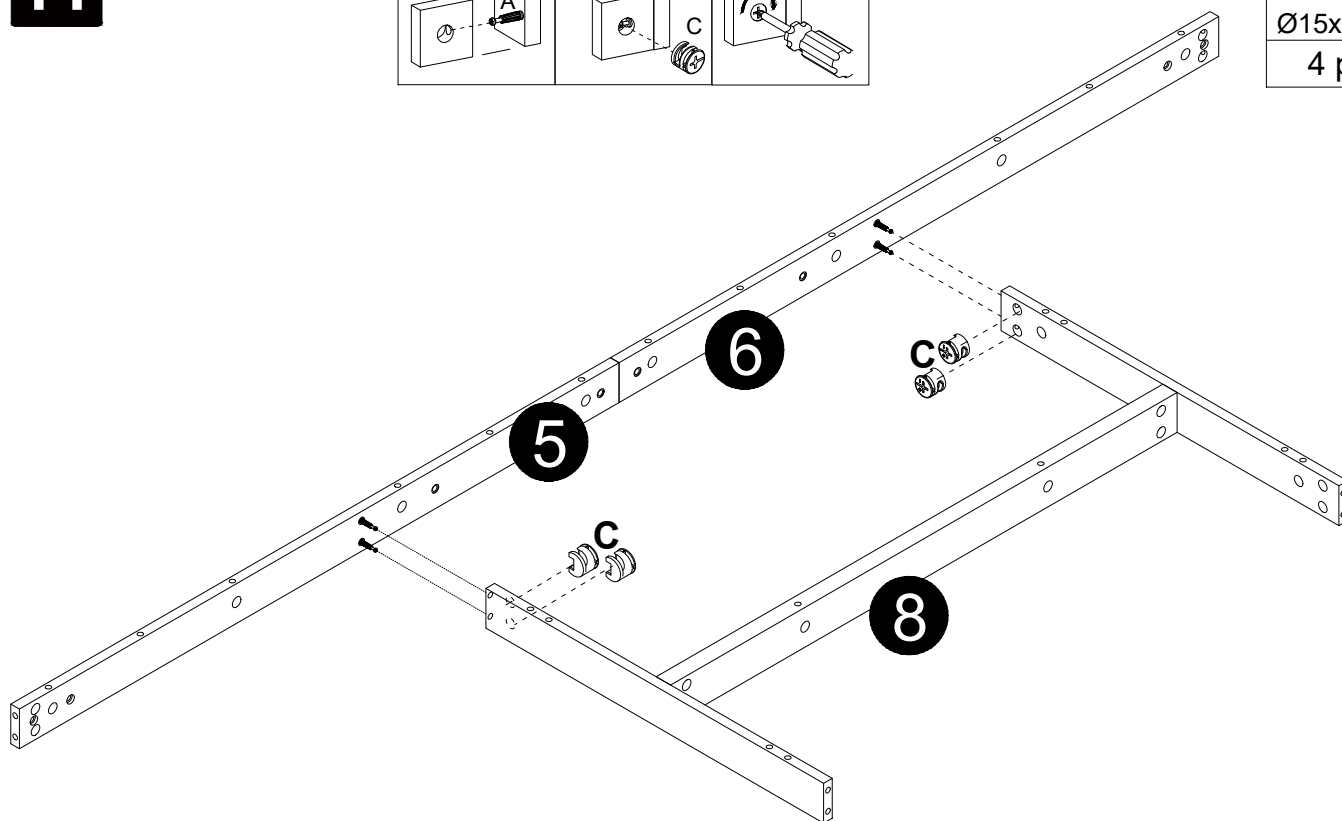


12



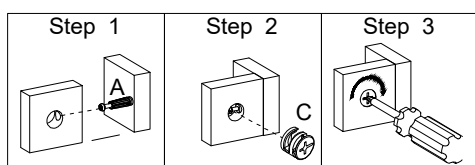


C




Ø15x12mm
4 pcs

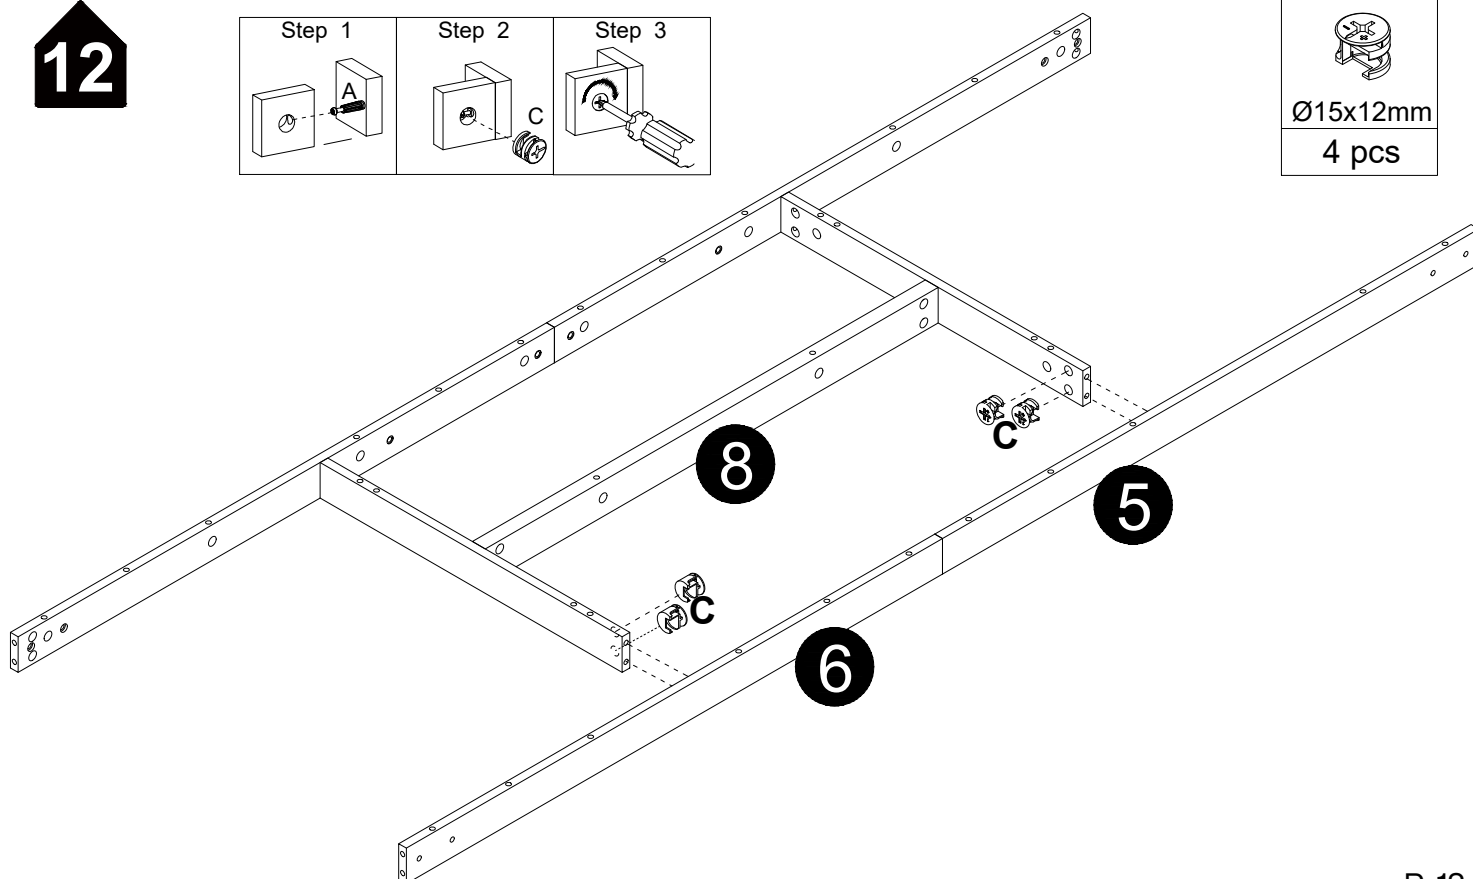

13

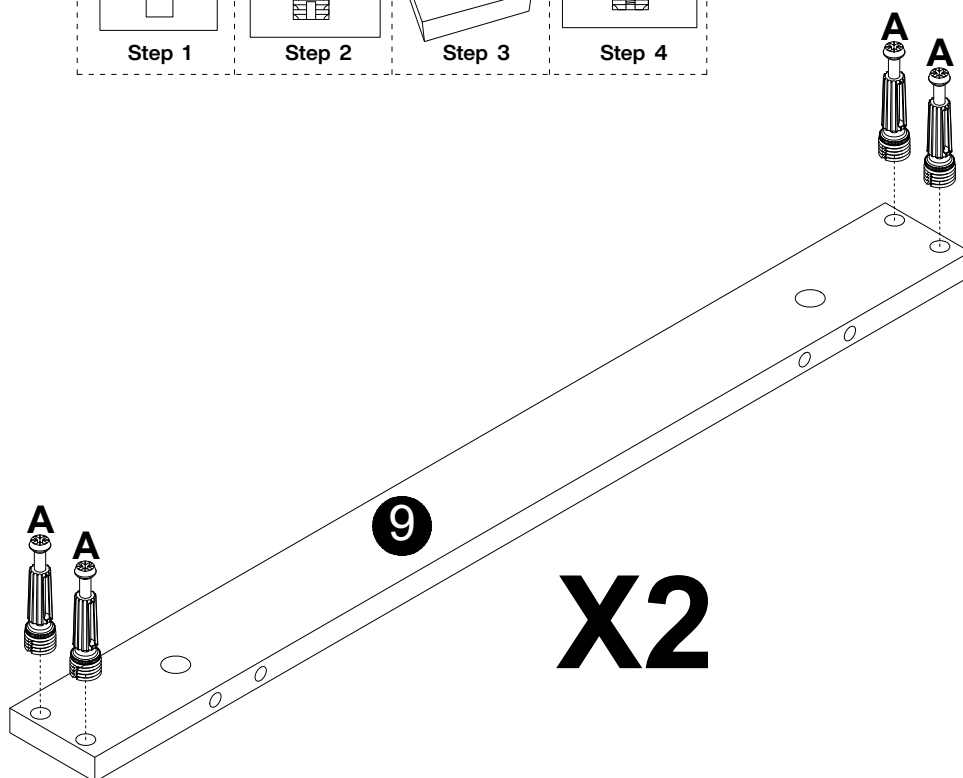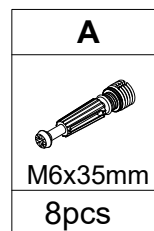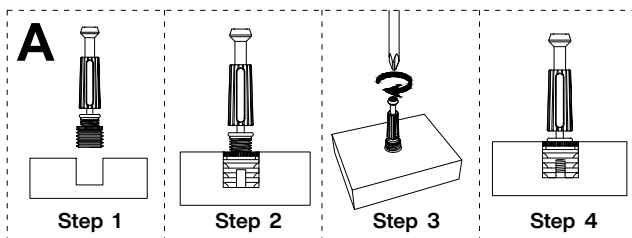


14

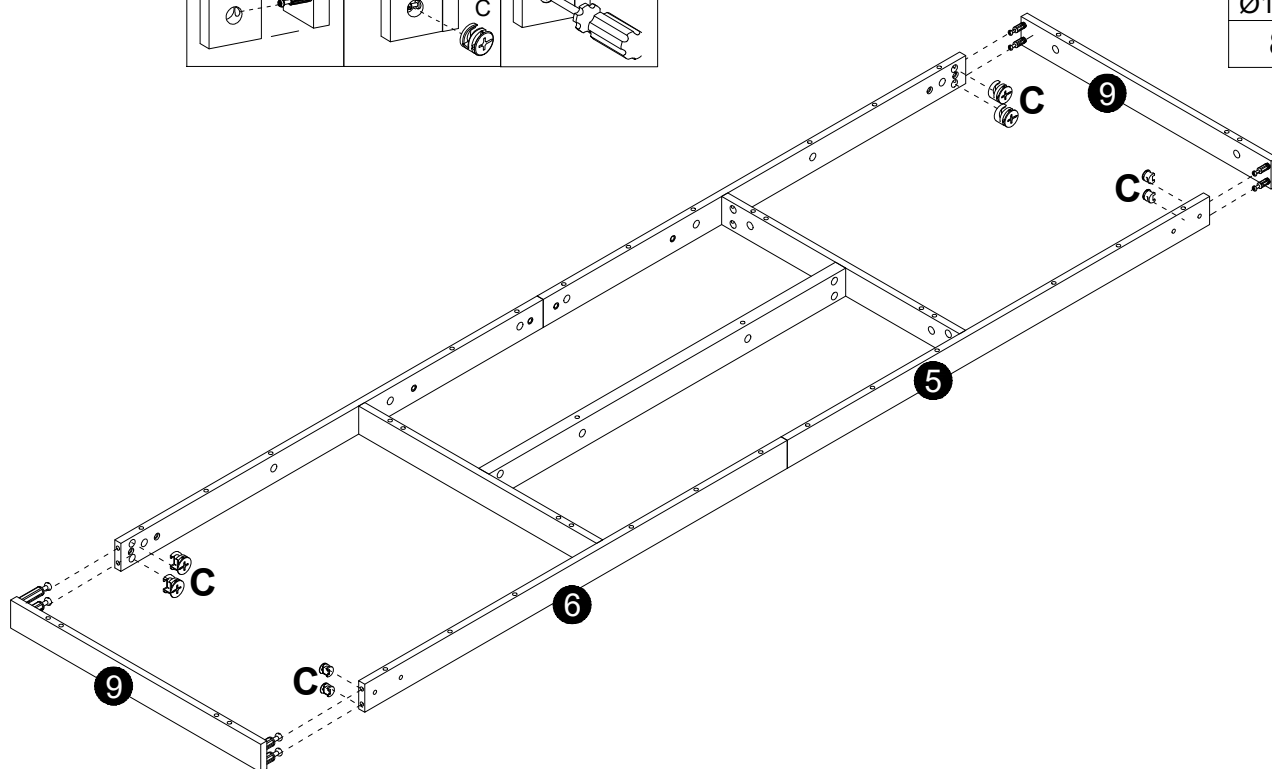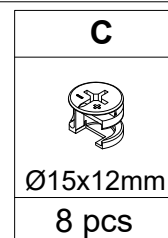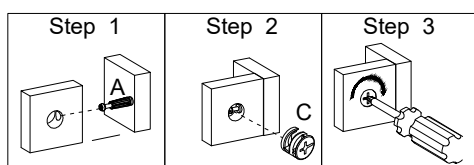



15



F	G	H	N	J
			 Ø10x40mm	 M8x100mm
2 pcs	4 pcs	4 pcs	3 pcs	2 pcs

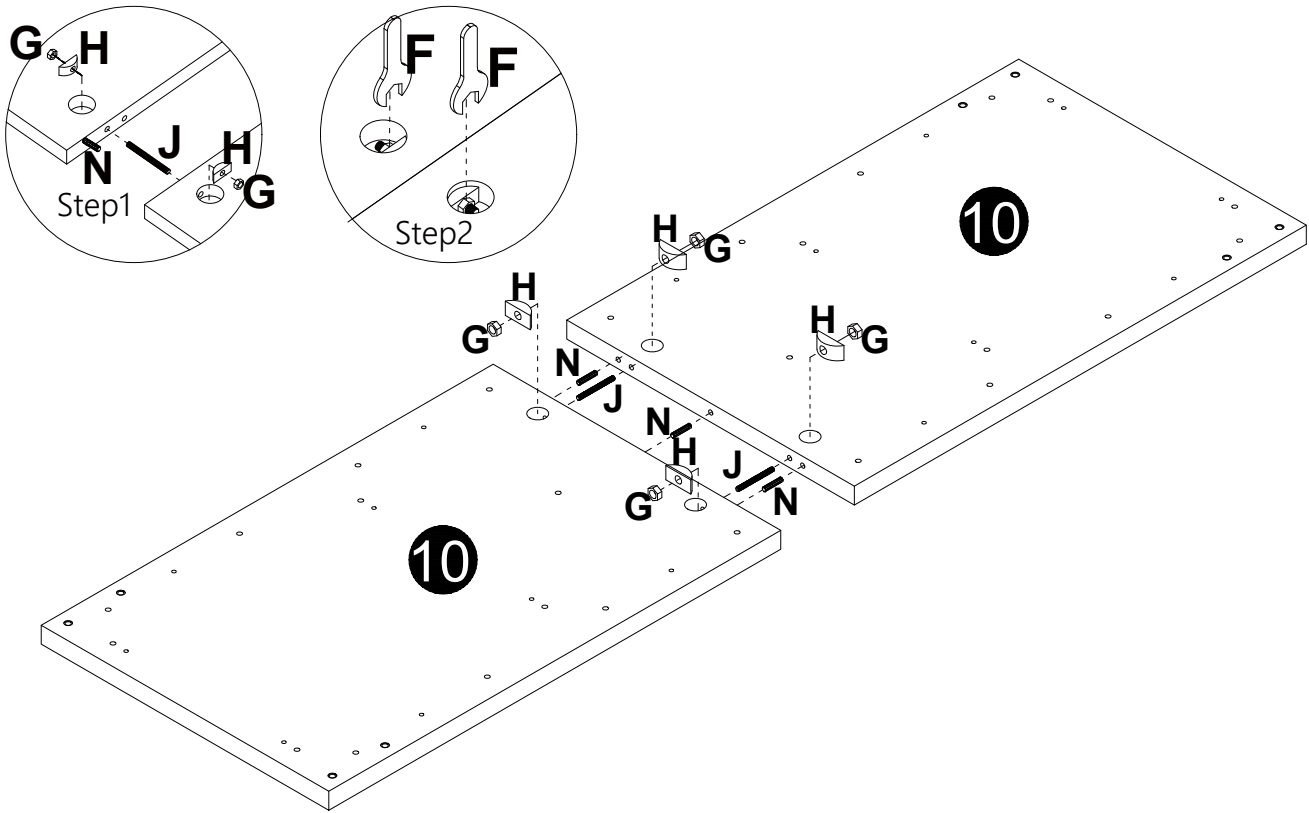


16

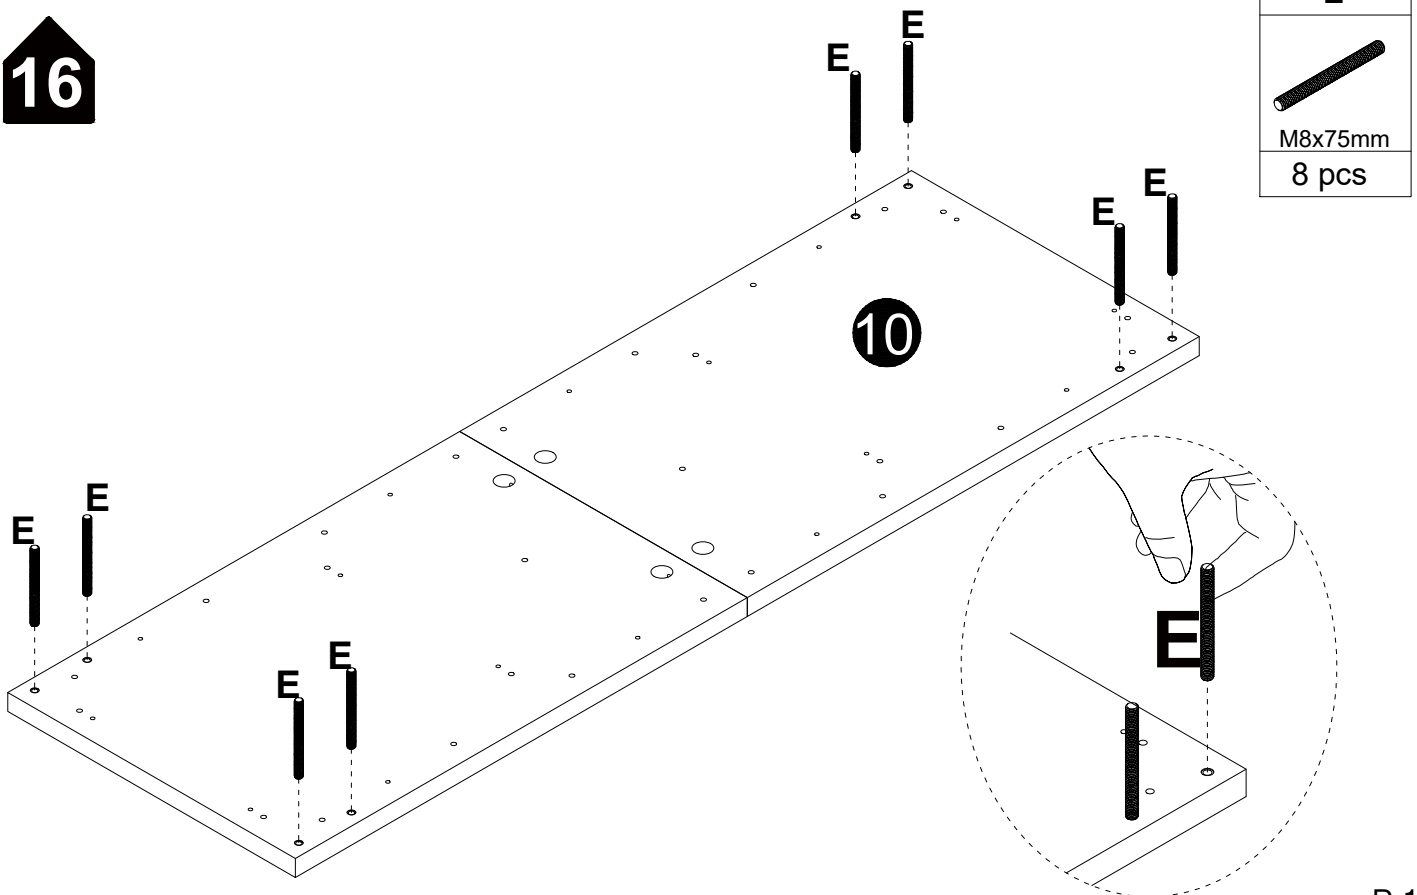


A	B
	
M6x35mm	Ø8x30mm
26 pcs	16 pcs

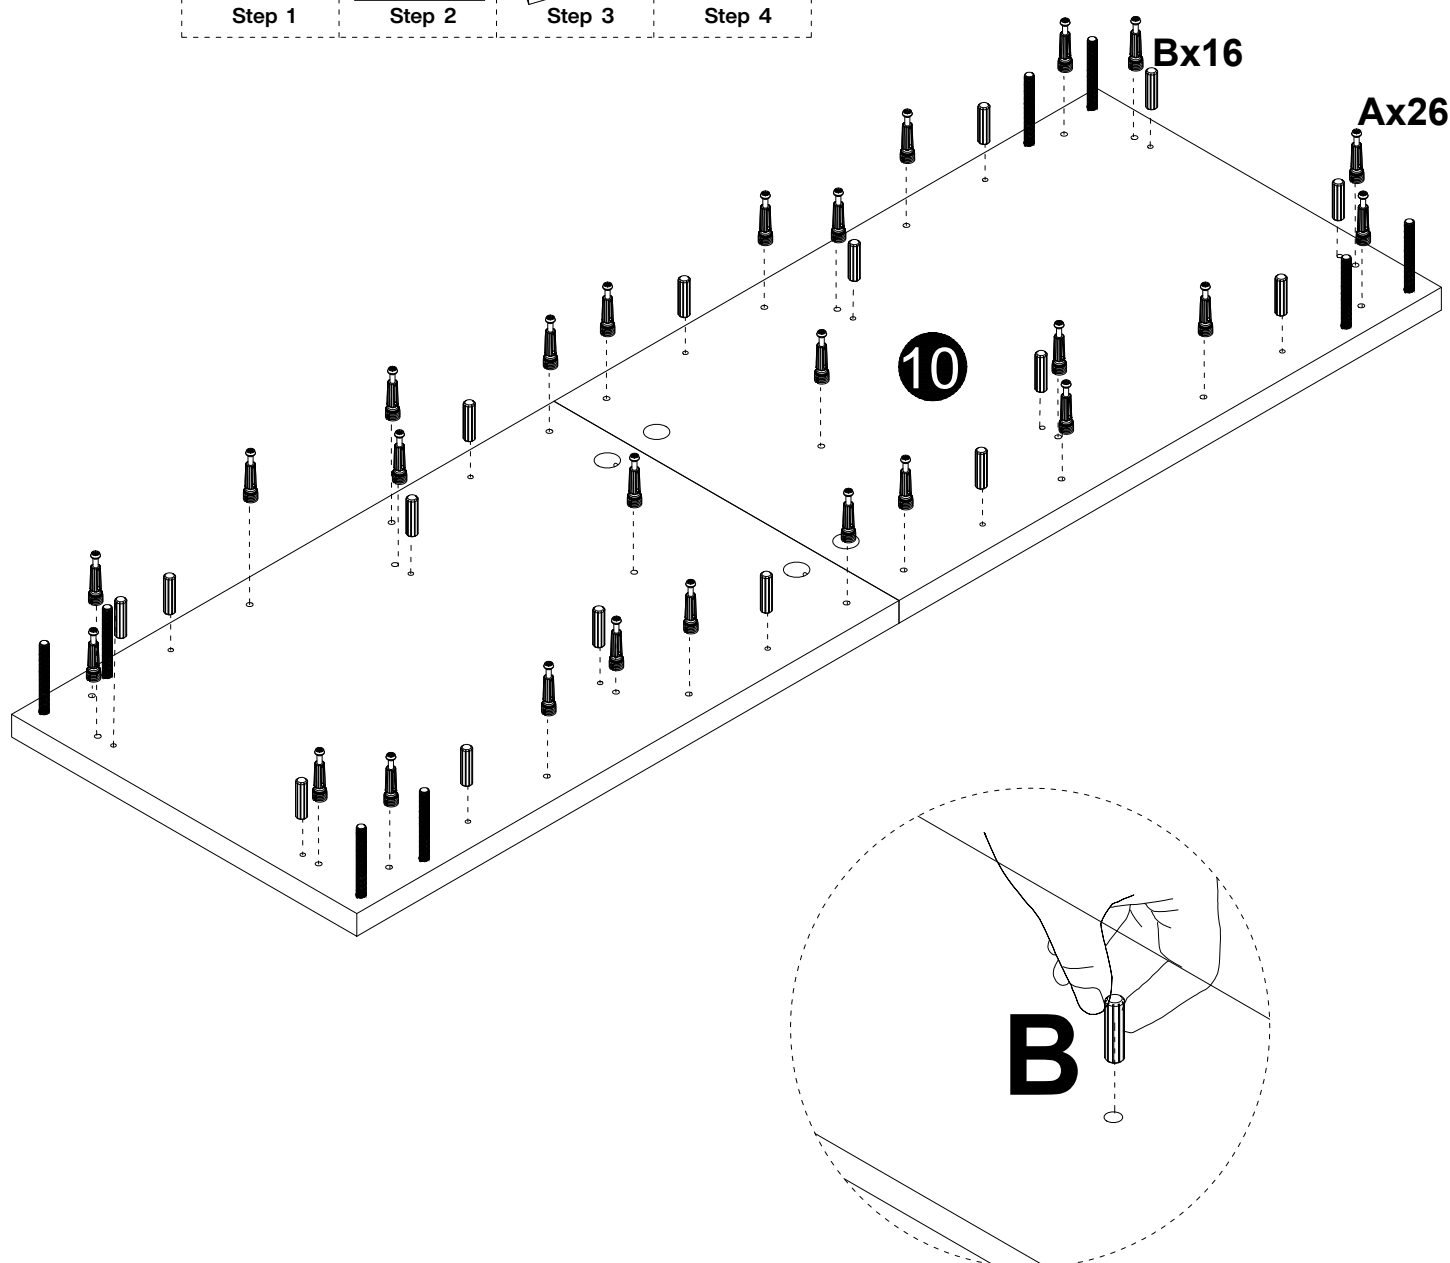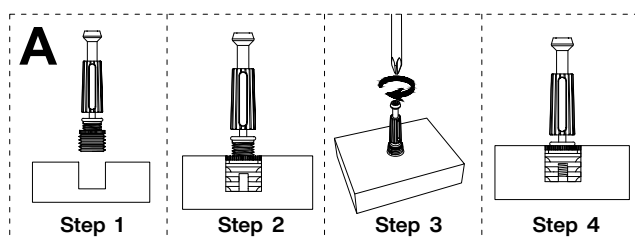


18

F	G	H
		
1 pcs	8 pcs	8 pcs


Step 1

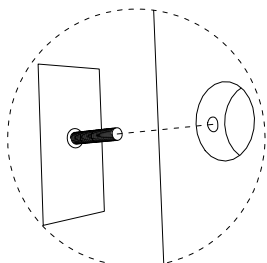


Step 2

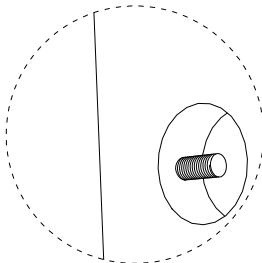




Step 3

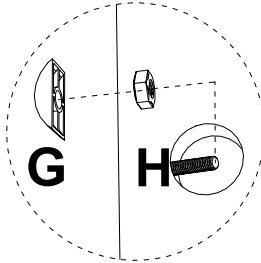


Step 4

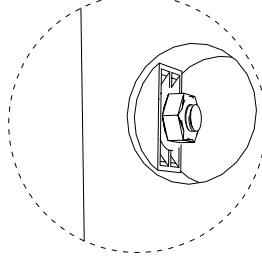

Step 5

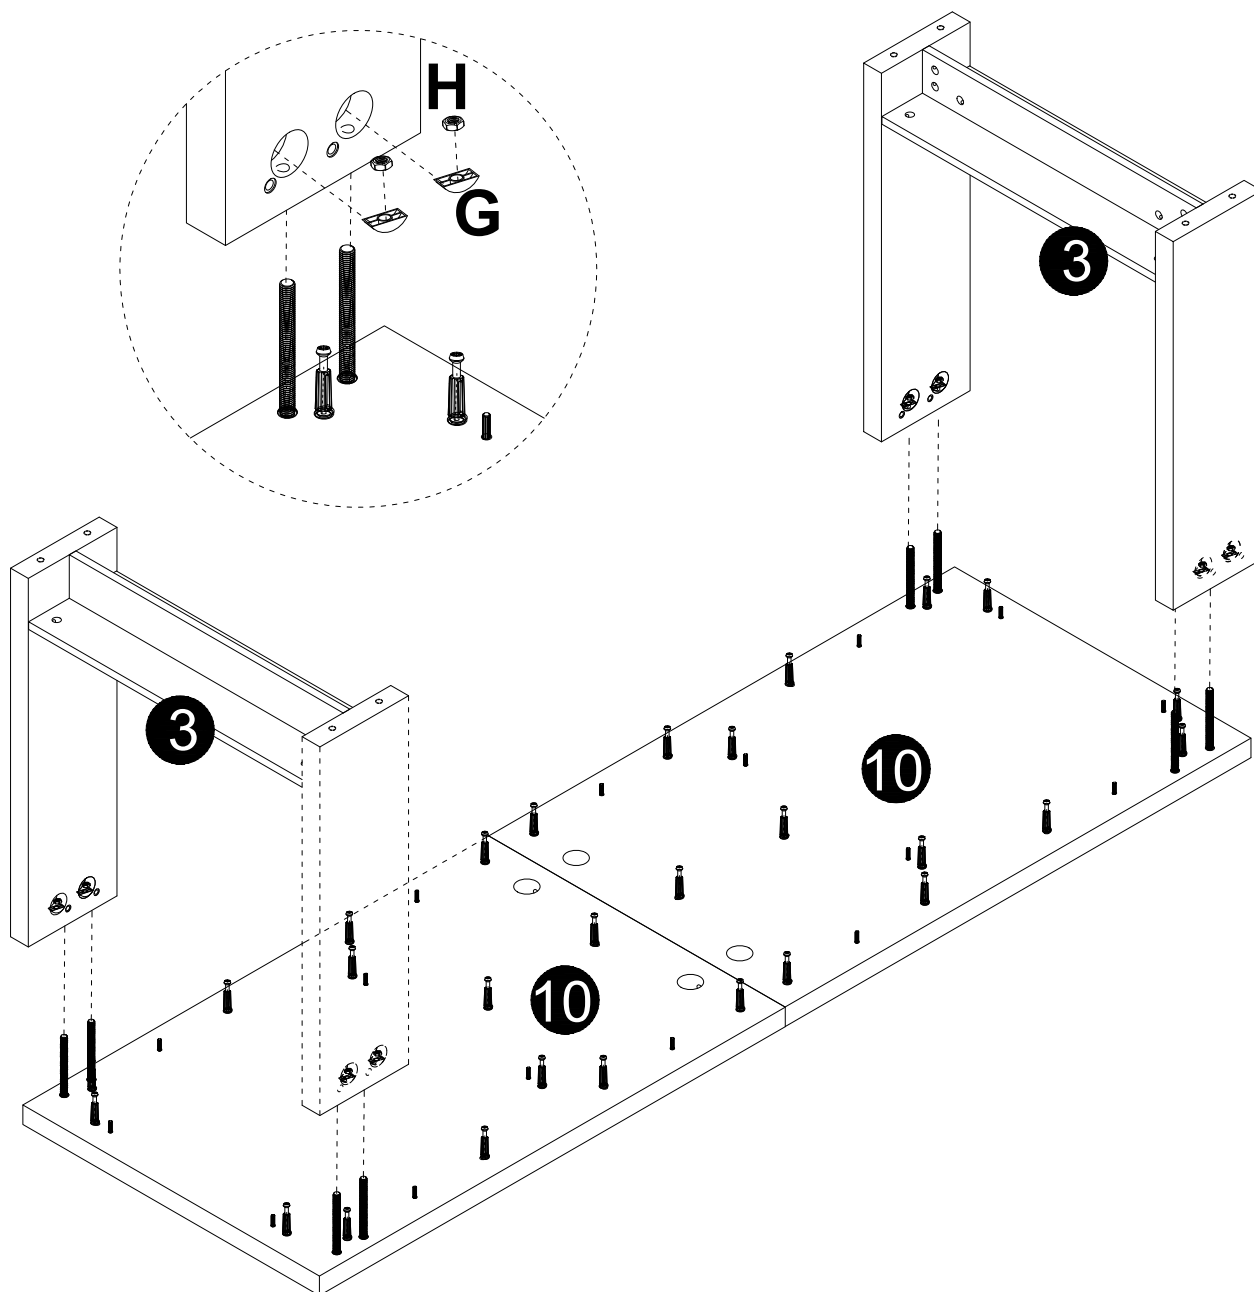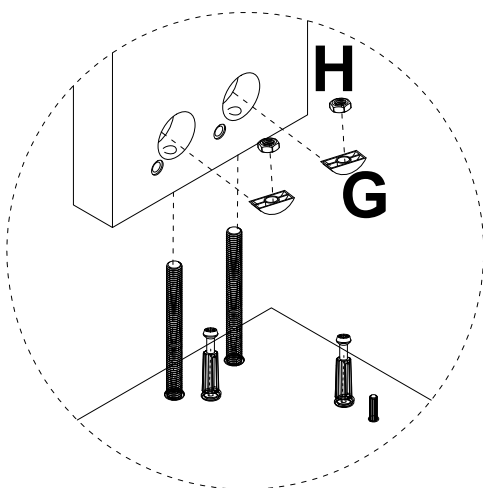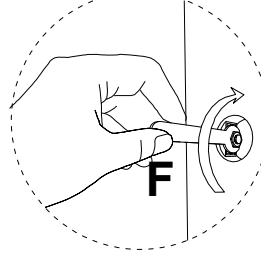


19

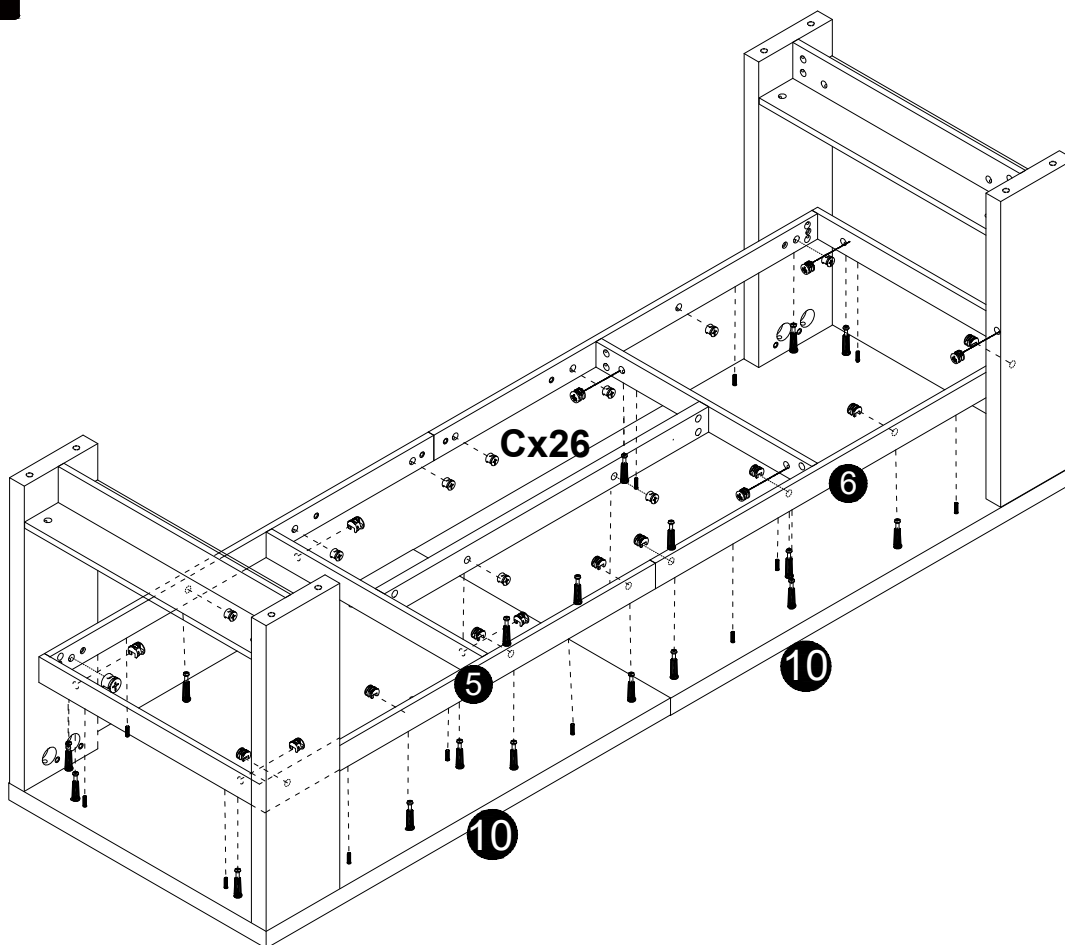


C

Ø15x12mm
26 pcs

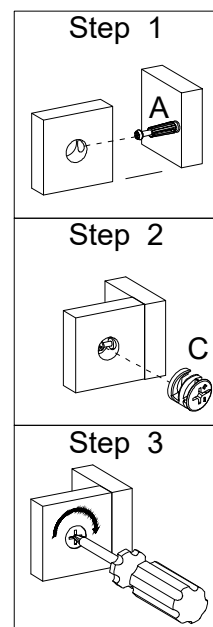


20

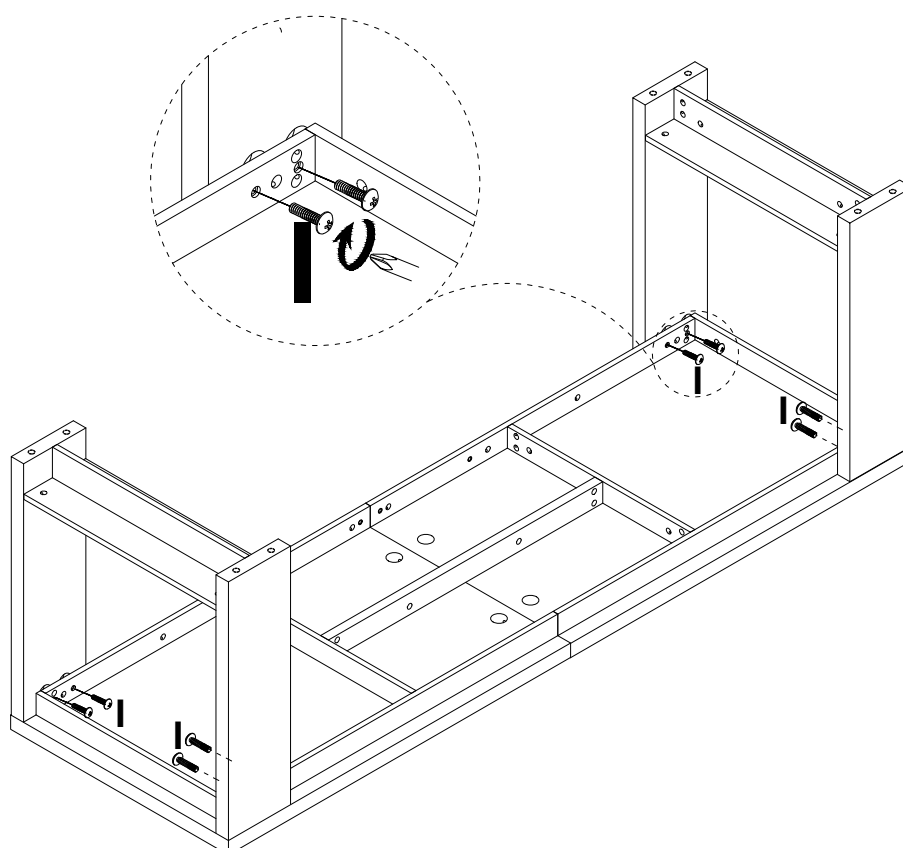


I


M6x25mm
8 pcs

21

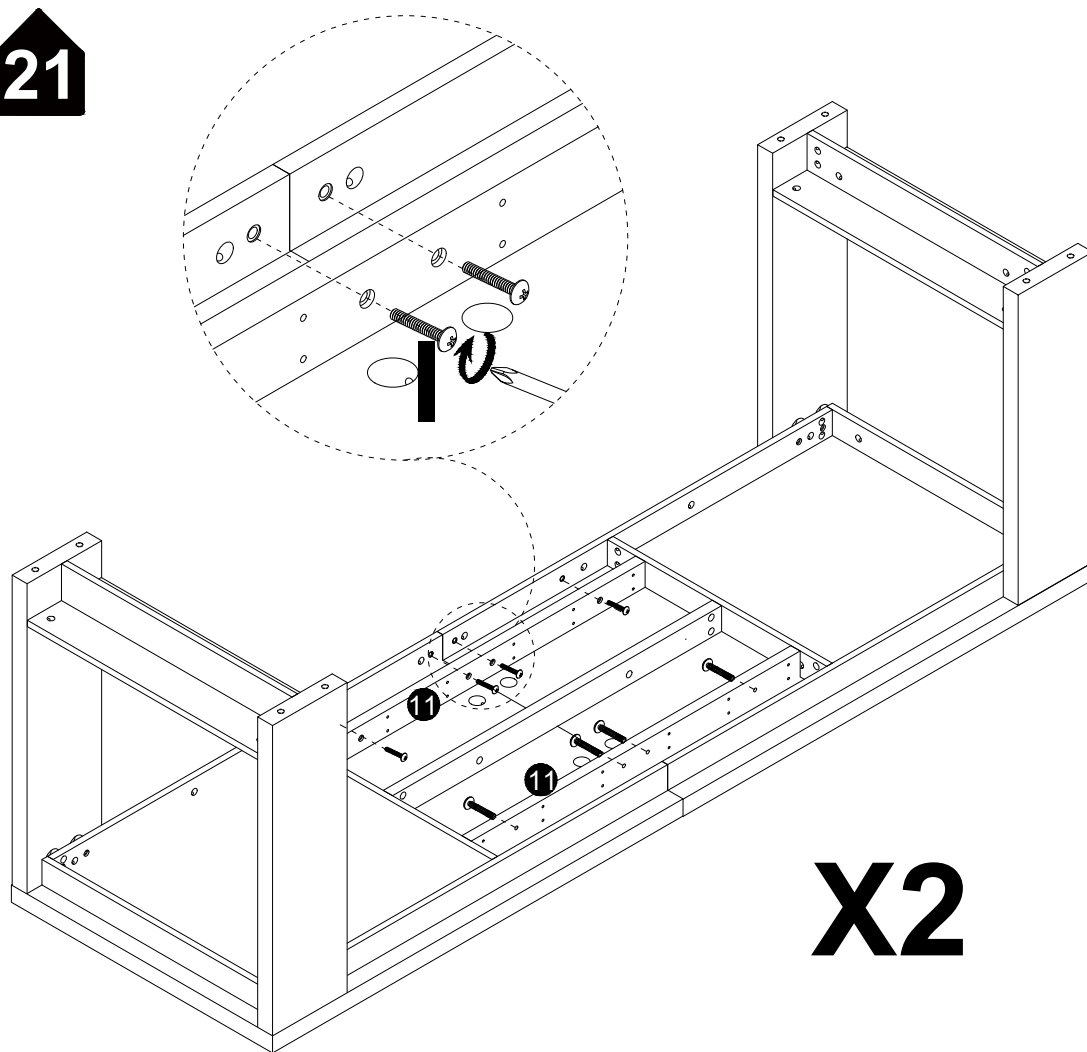

I

M6x25mm
8 pcs

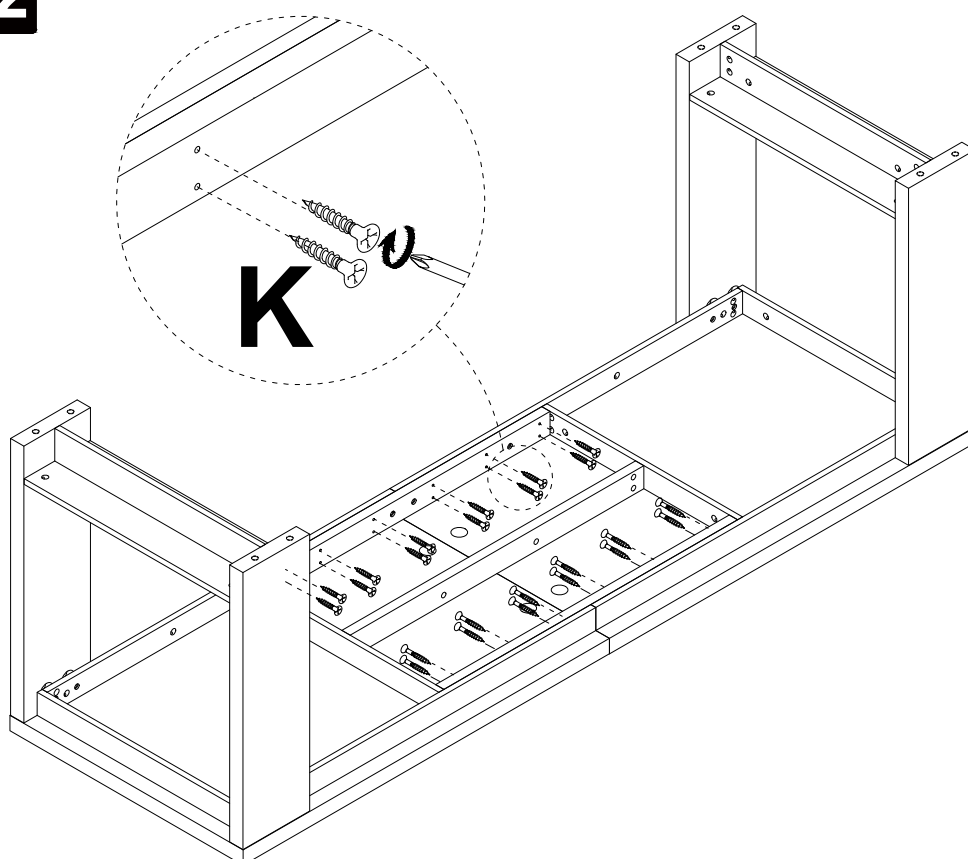
22



K

Ø3.5x35mm
24 pcs


23

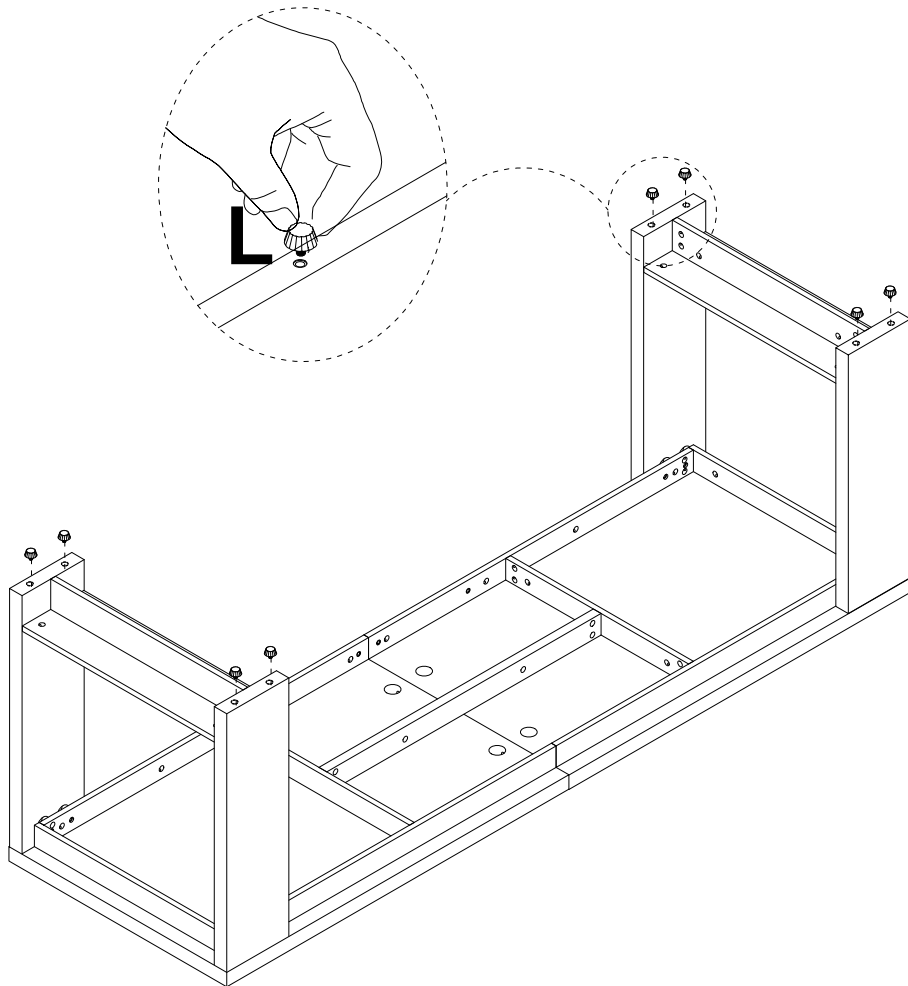

L

M6x20mm
8 pcs

24

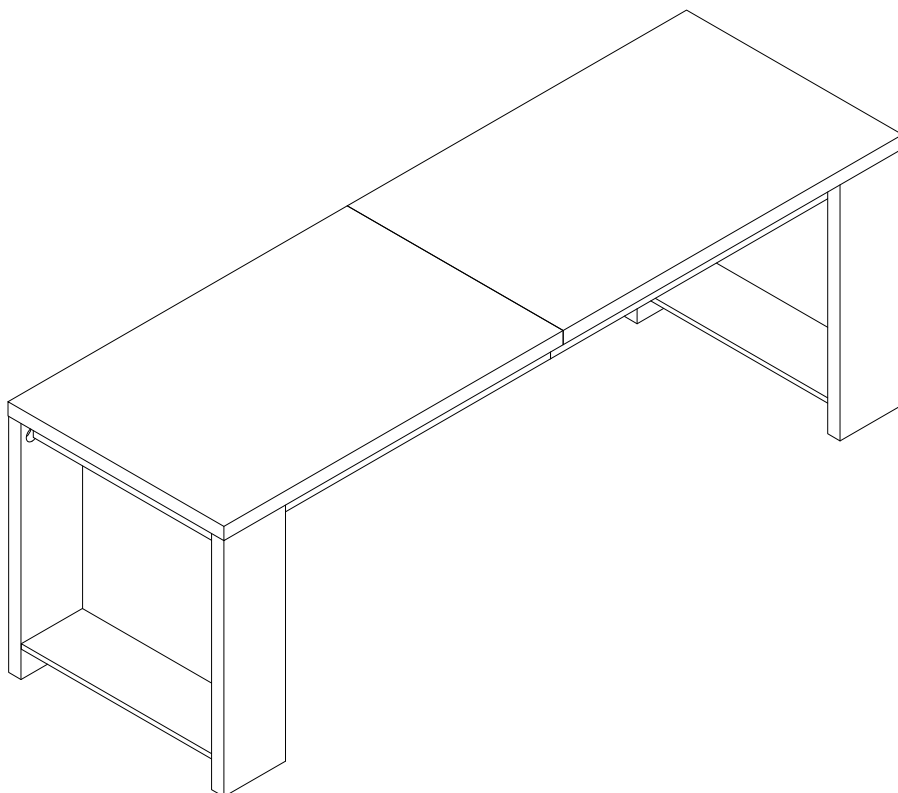

Thank you for your support!

