
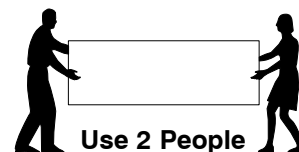


0046-1 Daybed Trundle

Assembly Instructions

WII-0120

1 Assembled View

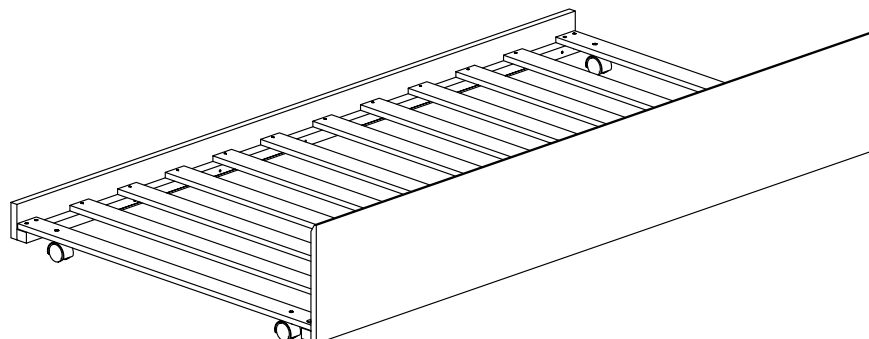


Use 2 People



Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

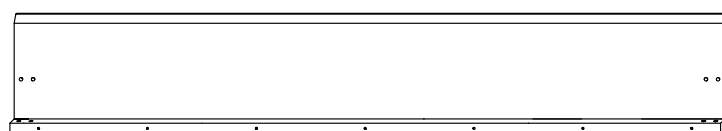


A Trundle Front Panel x 1



B Trundle Rear Panel x 1



C Trundle Support Rail x 2

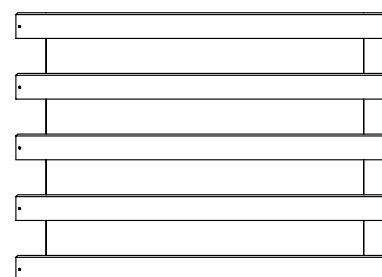

D Set of Slats x 2


3 Hardware List



1 M6 x 40mm JCB x 8




2 M6 x 15mm JCB x 4




3 Wood Screw (M4 x 32mm) x 20



4 Allen Key x 1



5 Metal Bracket x 2




6 Wheels x 4

0046-1 Daybed Trundle

Assembly Instructions

WII-0120

- 4** Fit the Wheels (6) to the Trundle Support Rail (C).

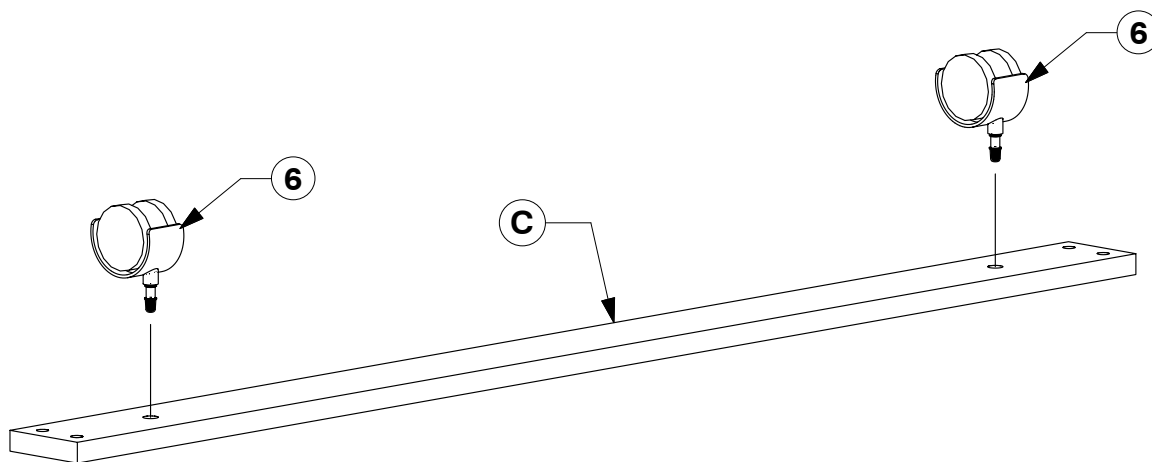

- 5** Assemble the Set of Slats (D) & Trundle Support Rail (C) to the Trundle Front Panel (A) & Trundle Rear Panel (B).

