
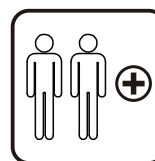
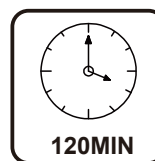
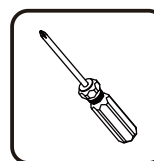
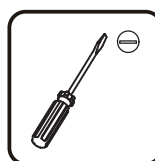


HLG056

Version: 1.0

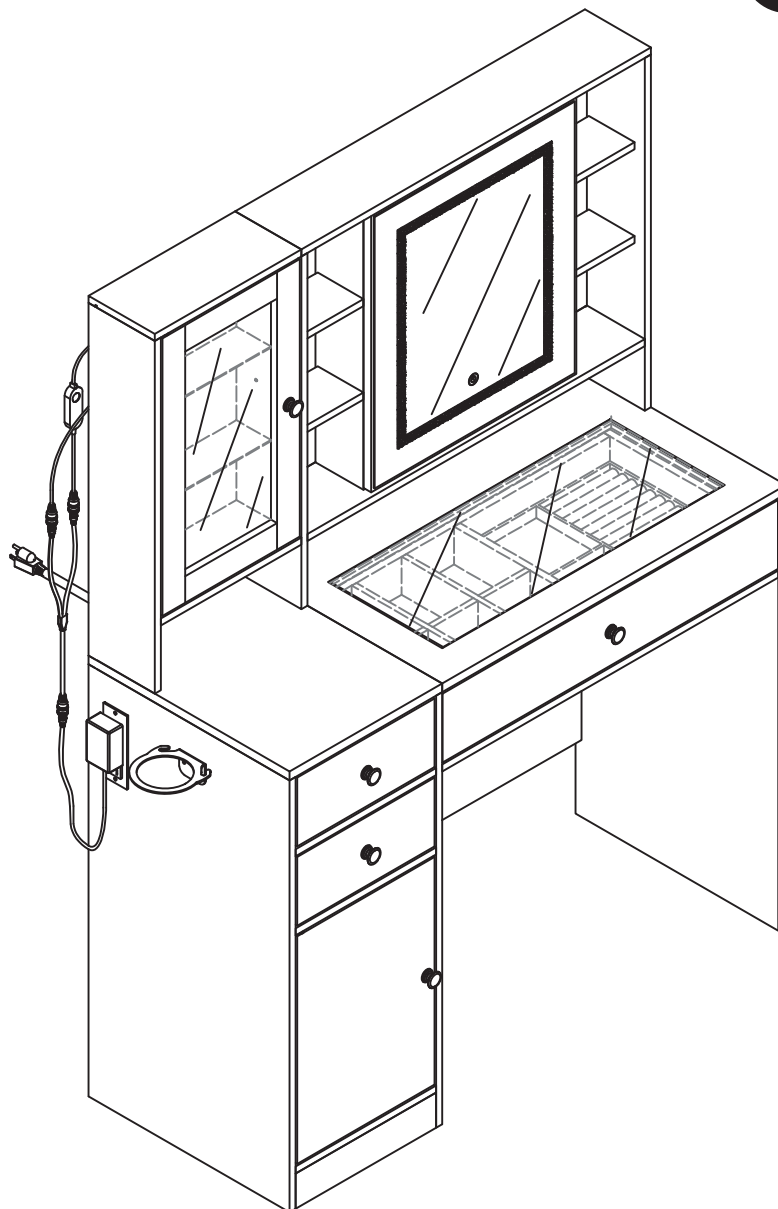

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!



---NEED HELP WITH YOUR FURNITURE?---

Scan the QR code to contact us!



If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.

For any damaged or missing components, we're happy to provide FREE replacement parts.




WhatsApp

Email: service@furnlog.com


WANT TO CONTACT US THROUGH AMAZON?

- ▶ Log in to your Amazon account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

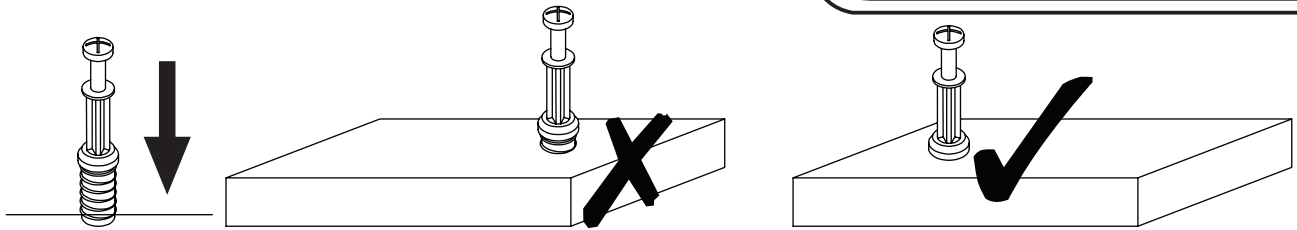


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

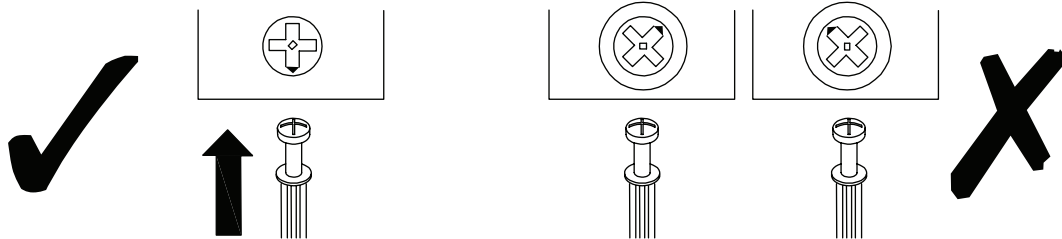








EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.









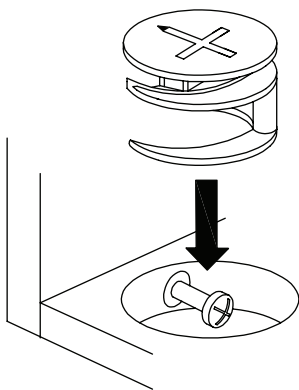









EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.








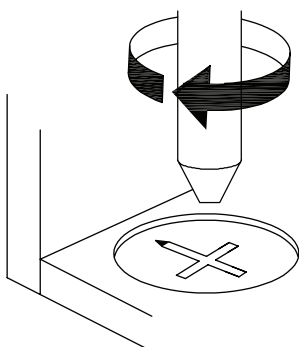


EN_Turn cam lock clockwise to tighten.

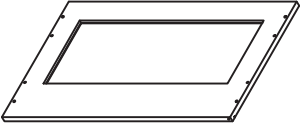


NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x2	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x2	

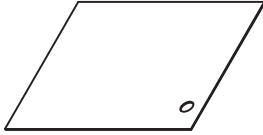

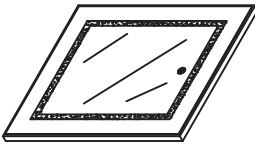
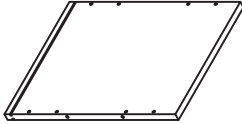
NO.	PARTS	QTY	SPARE
⑪		x4	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x1	
⑱		x1	
⑲		x1	
⑳		x1	


NO.	PARTS	QTY	SPARE
21		x1	
22		x1	
23		x1	
24		x1	
25		x3	
26		x1	
27		x1	
28		x1	
29		x1	
30		x1	







NO.	PARTS	QTY	SPARE
31		x1	
32		x1	
33		x1	
34		x2	
35		x3	
36		x3	
37		x2	
38		x2	
39		x1	
40		x1	

[illegible]

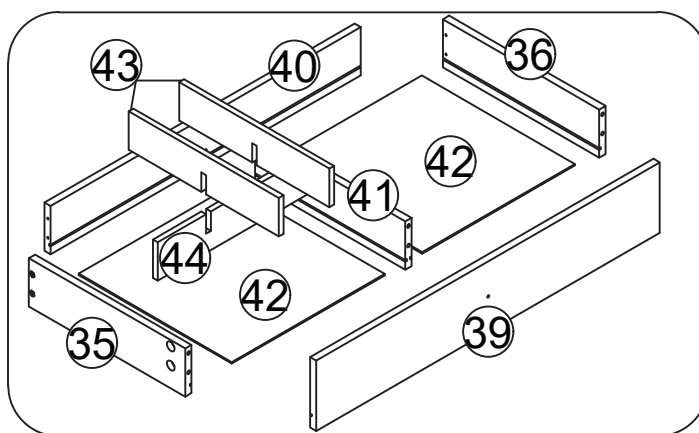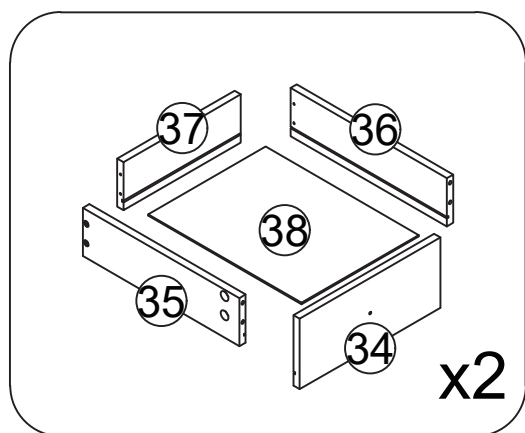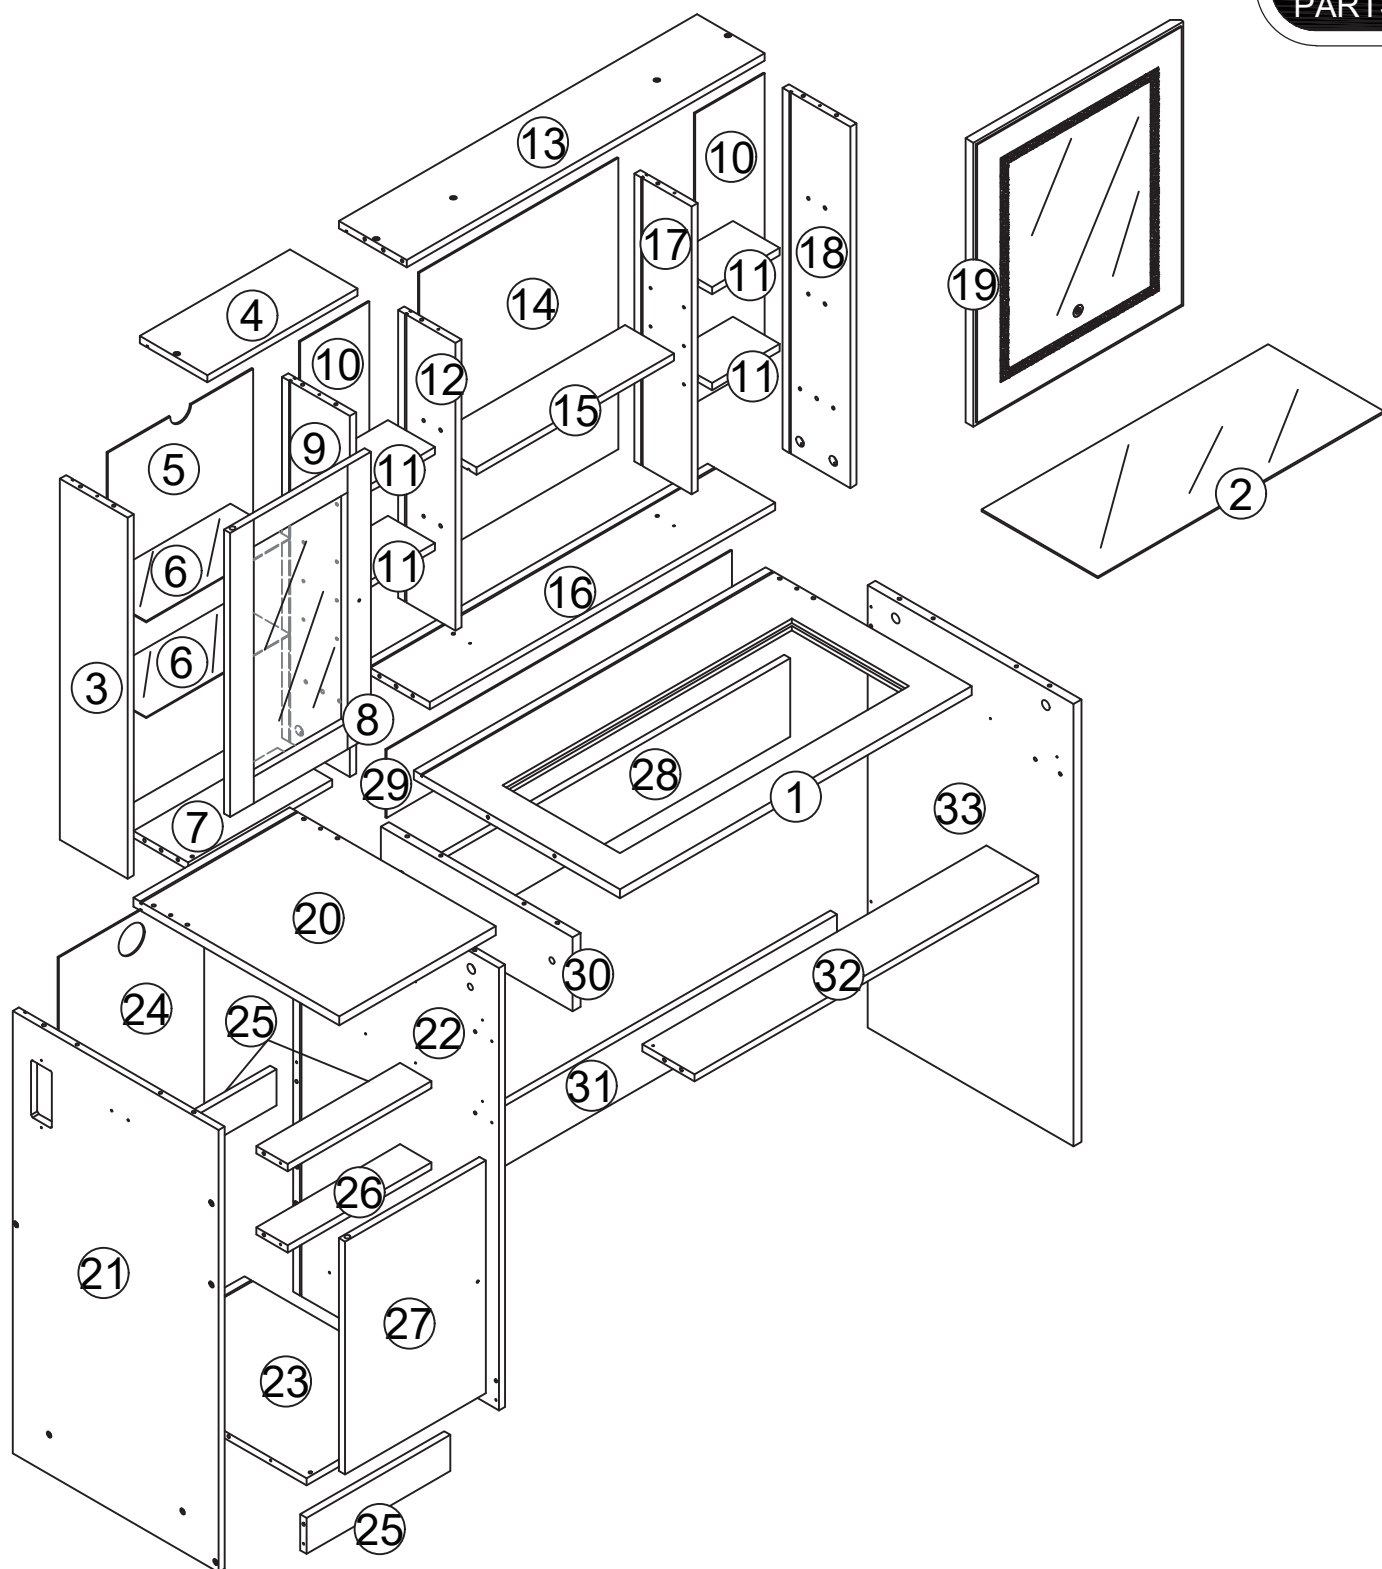

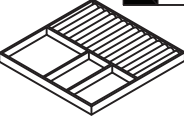
 A x44 Ø6x35mm +2(spare)	 B x45 Ø15x10mm +2(spare)	 C x57 Ø6x30mm +3(spare)	 D x45 Ø4x35mm +3(spare)	 E x36 Ø3x12mm +2(spare)	 F x5
 G x1	 H x28 +2(spare)	 I x2 Ø3x14mm	 J x1	 K x2 Ø3x12mm	 L x26 +2(spare)
 M x2 Ø6x30mm	 N x2	 O x2	 P x12 Ø3.5x12mm +2(spare)	 Q x2	 S x2
 T x2 Ø6x15mm	 U x4	 V x1	 W x1	 X x1	 Y x1
 Z x2	 AA x8	 BB x4	 CC x1	 DD x1	
 CL x3 L300mm	 CR x3 L300mm	 DL x3 L300mm	 DR x3 L300mm		

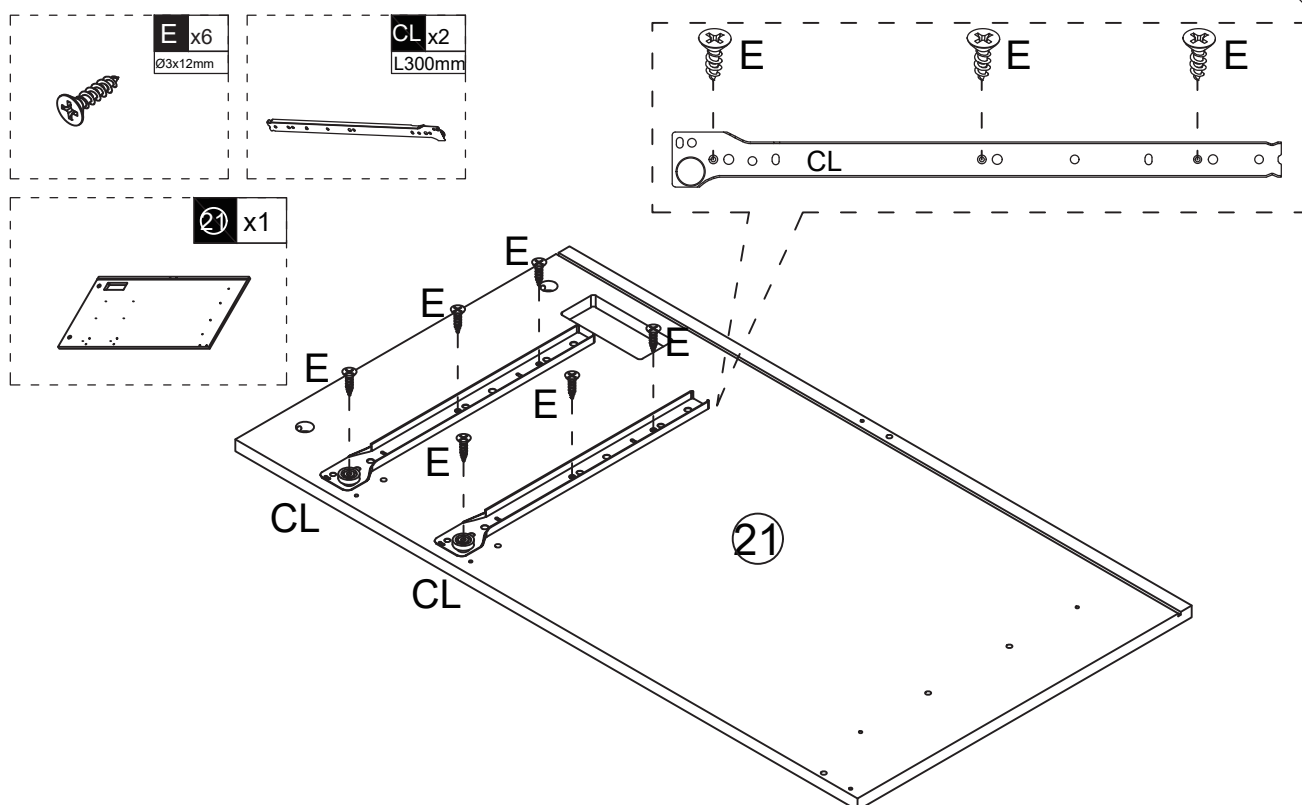

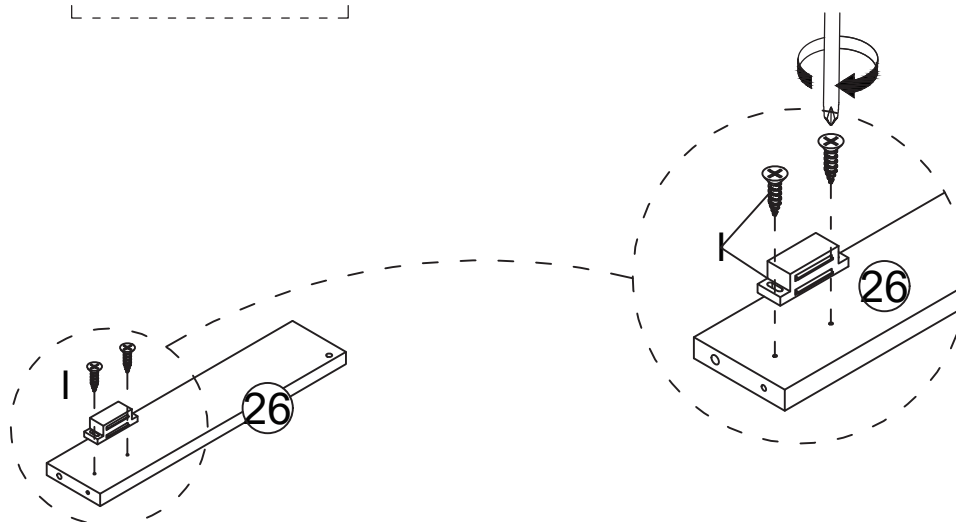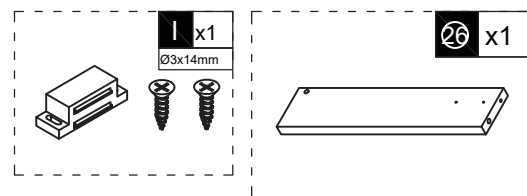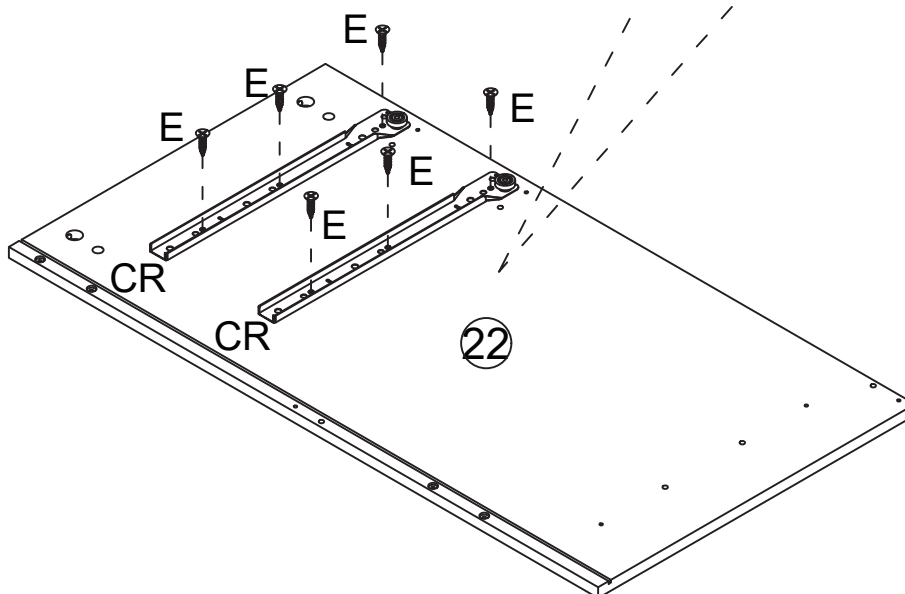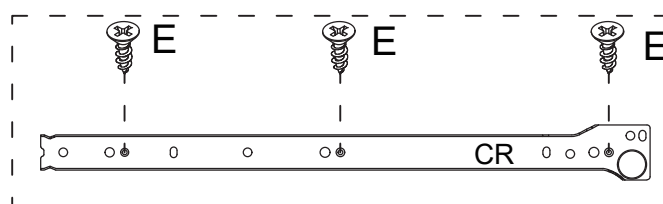
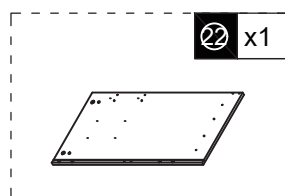
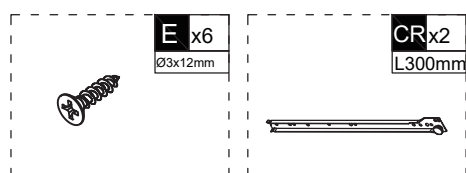


C x6
Ø6x30mmD x6
Ø4x35mm




25 x3



23 x1

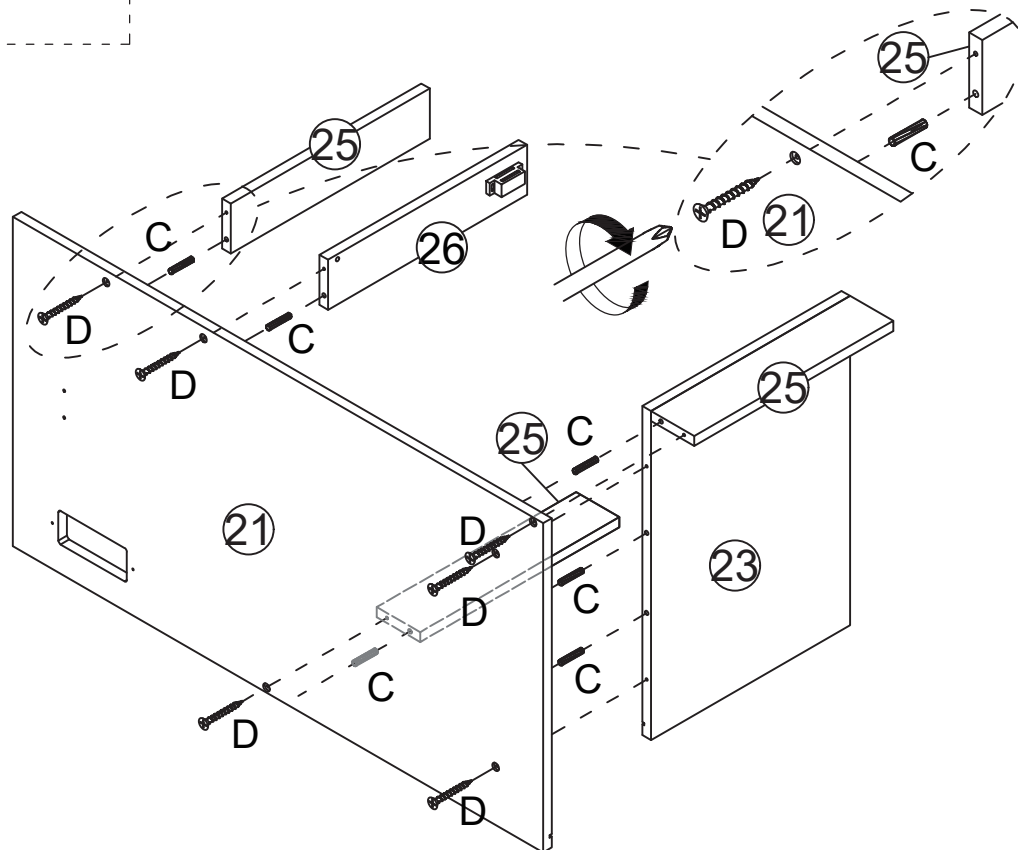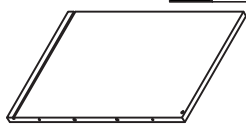
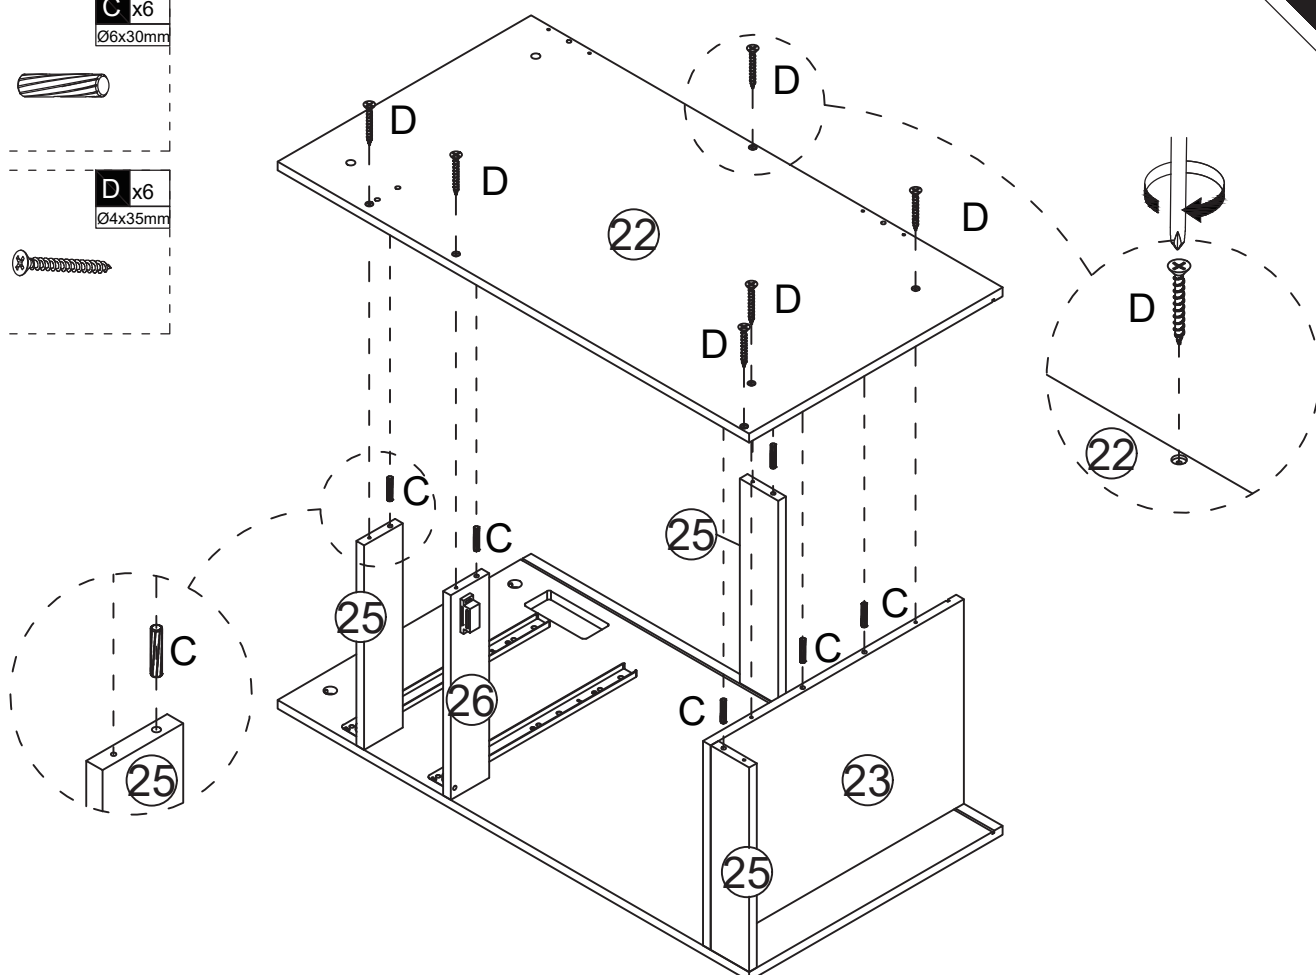
C x6
Ø6x30mmD x6
Ø4x35mm


6

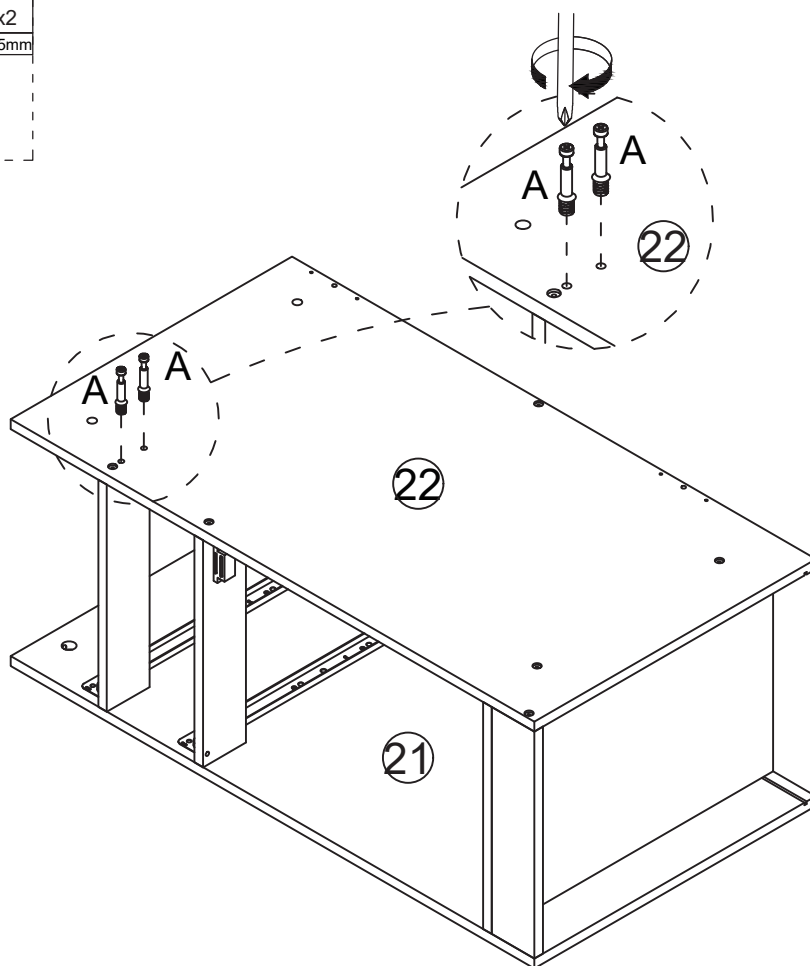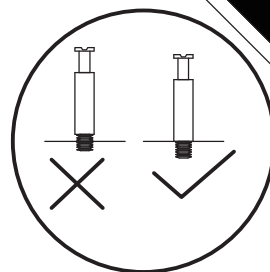A x2
Ø6x35mm







7

24 x1

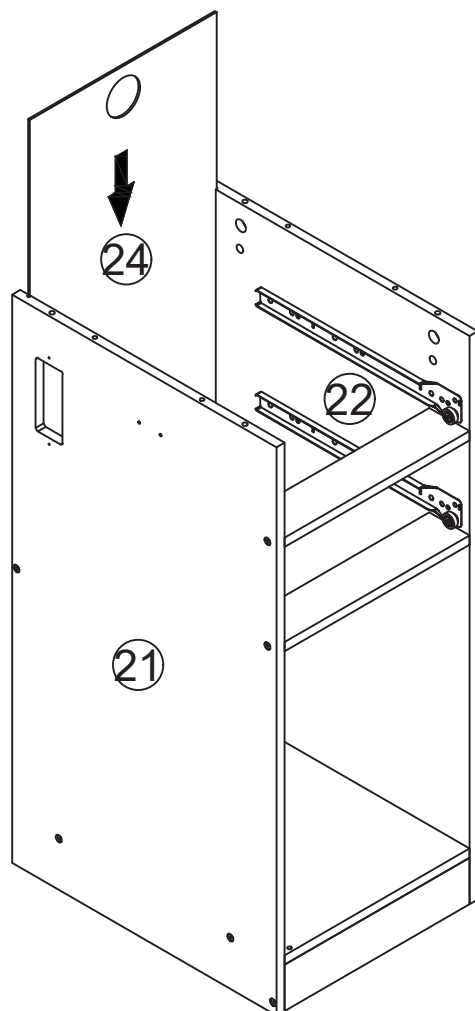



A x4
Ø6x35mmB x4
Ø15x10mmC x4
Ø6x30mm

20 x1

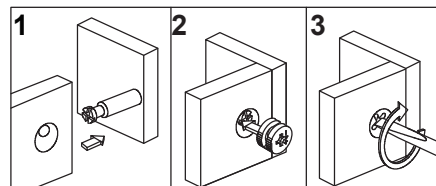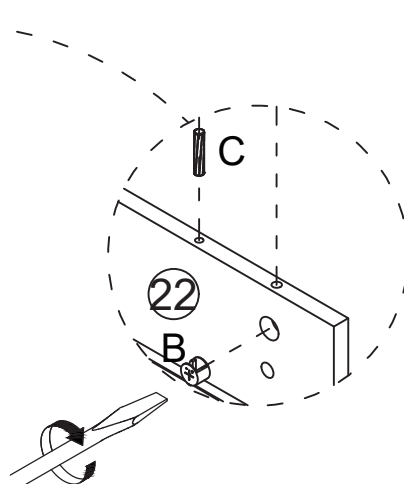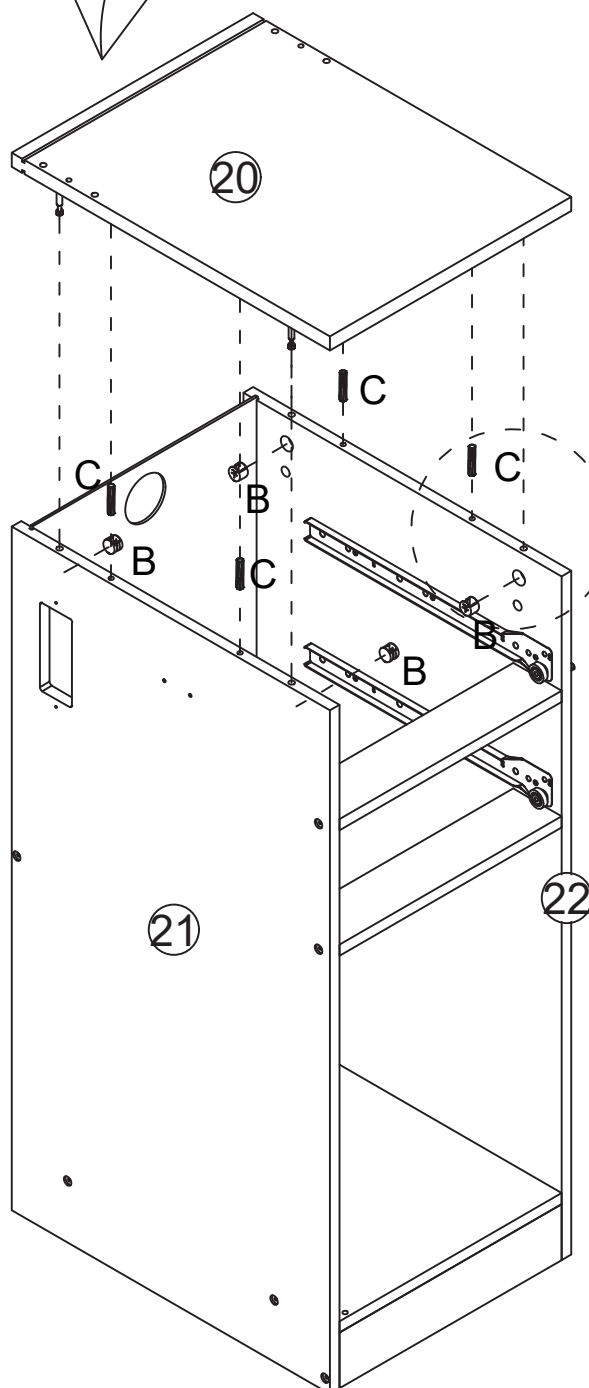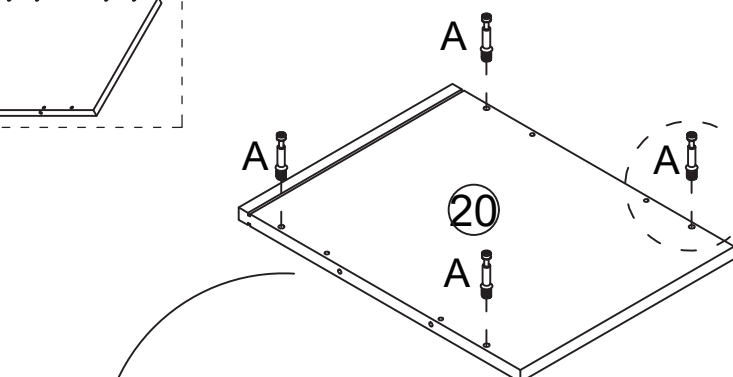
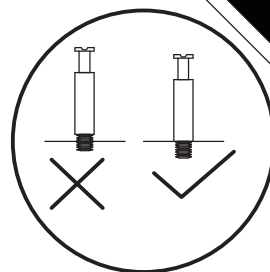
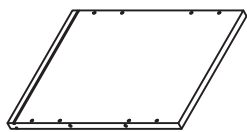


E x3
Ø3x12mmCL x1
L300mm



30 x1

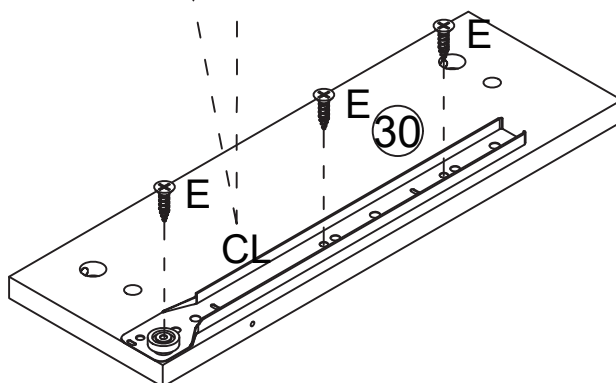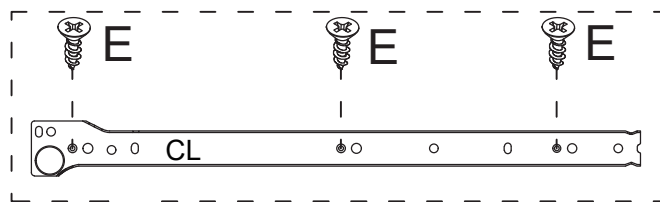E x3
Ø3x12mmCR x1
L300mm

33 x1

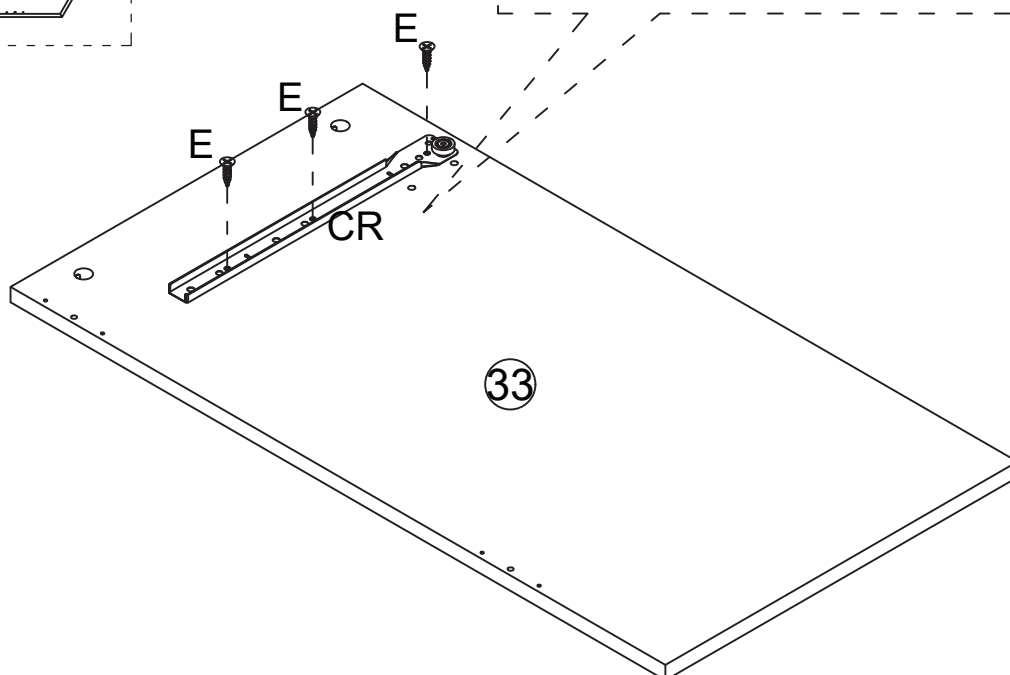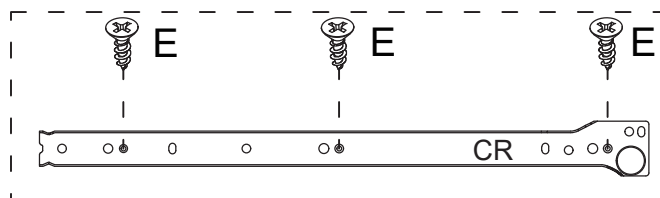



11

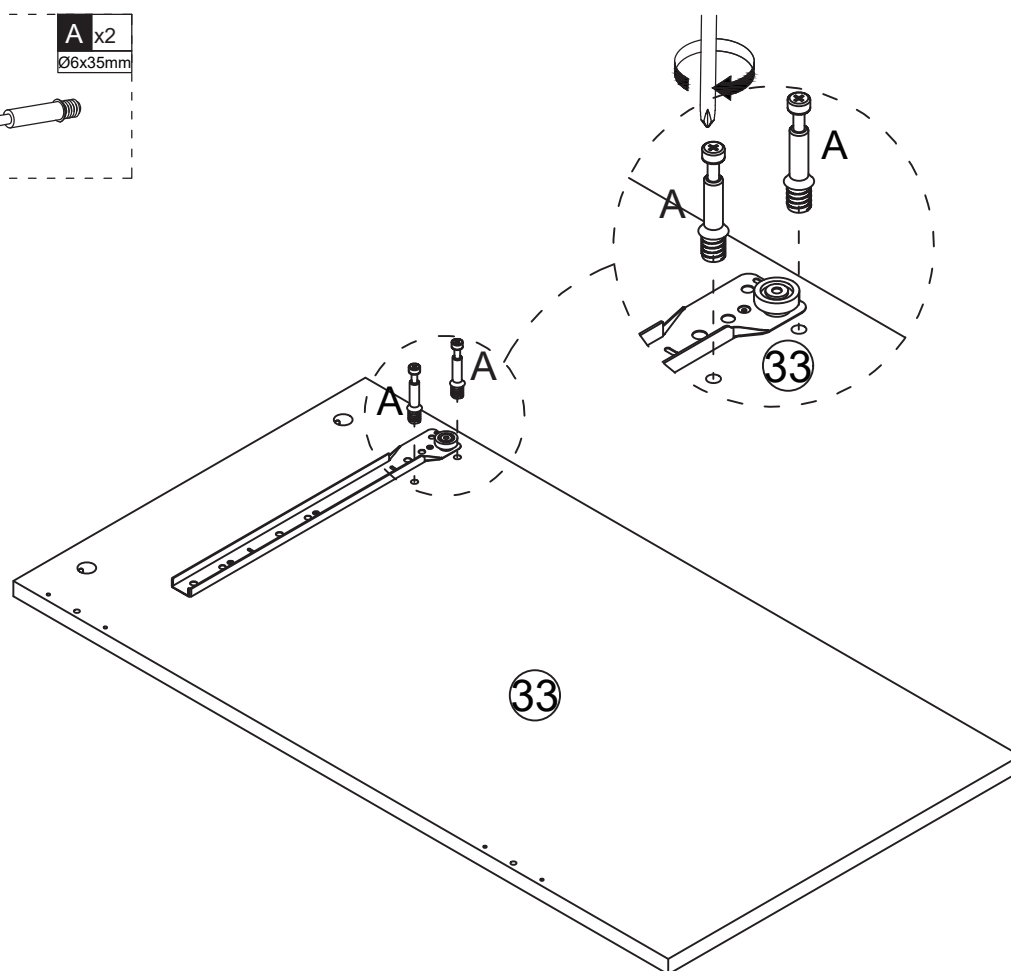A x2
Ø6x35mm


12

D x1
Ø4x35mm


28 x1


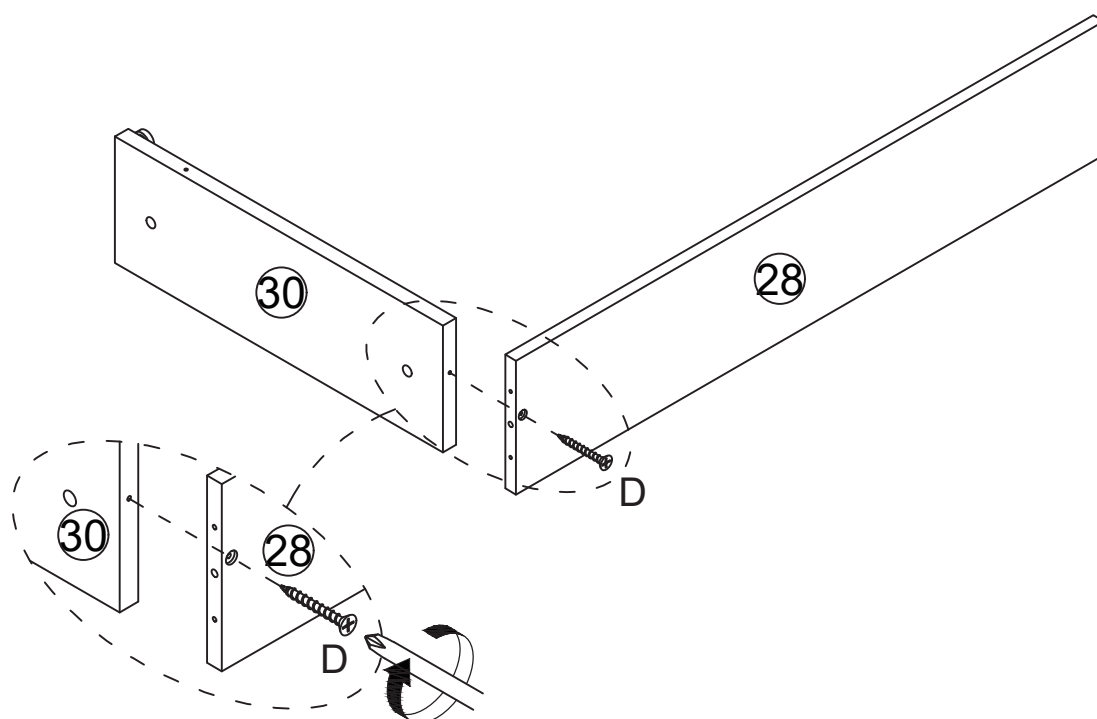






13

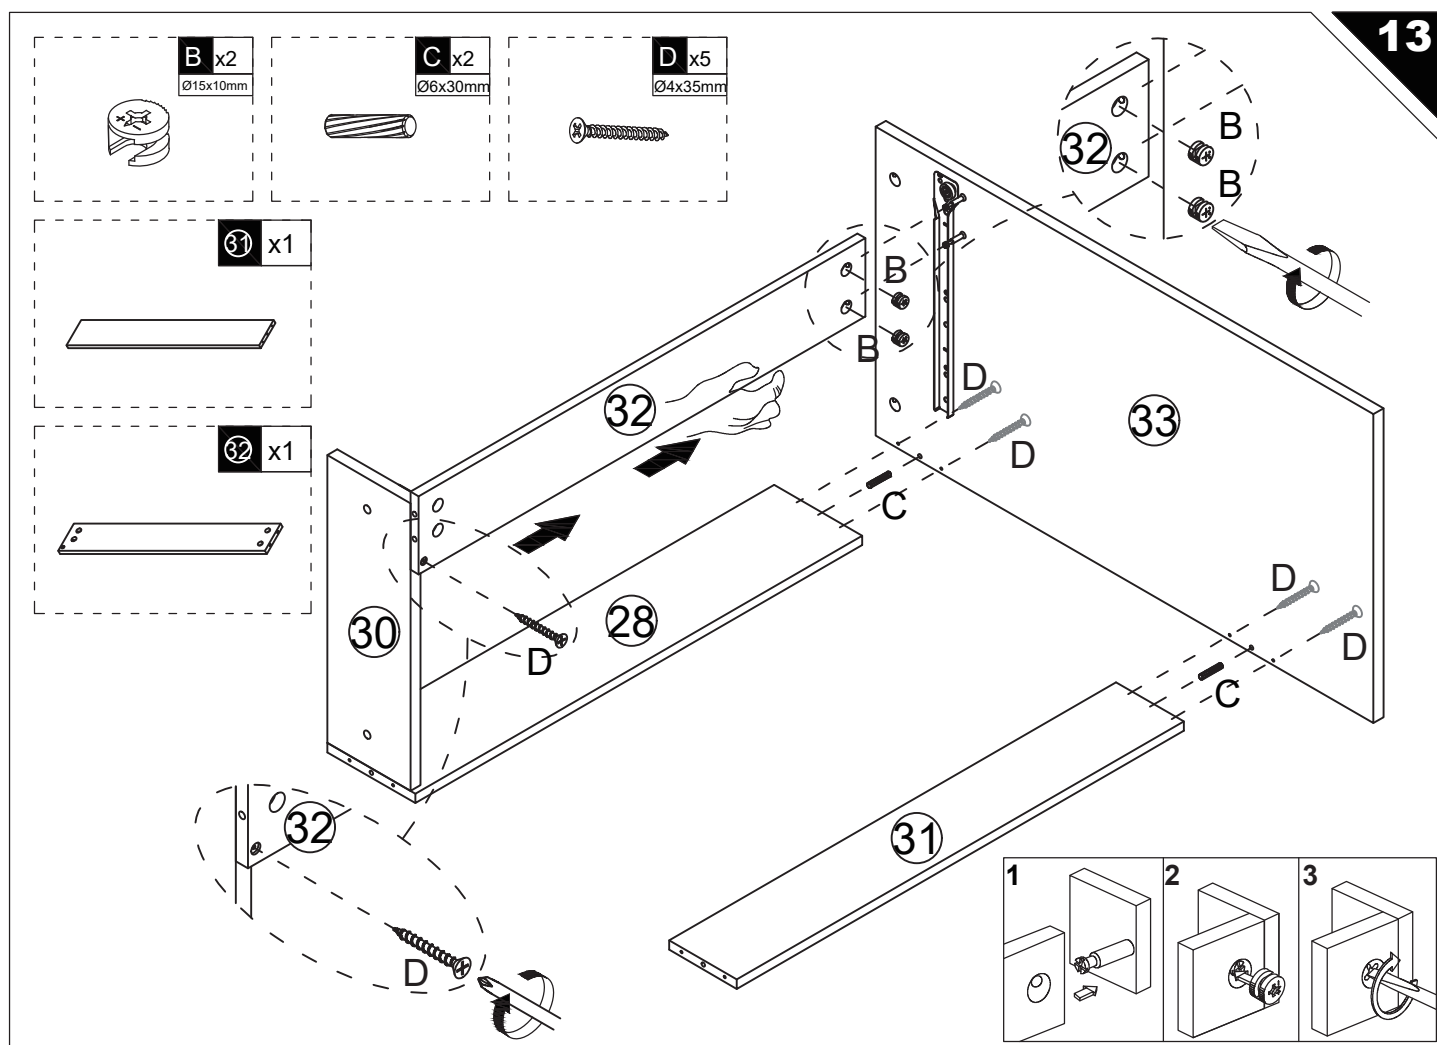

14

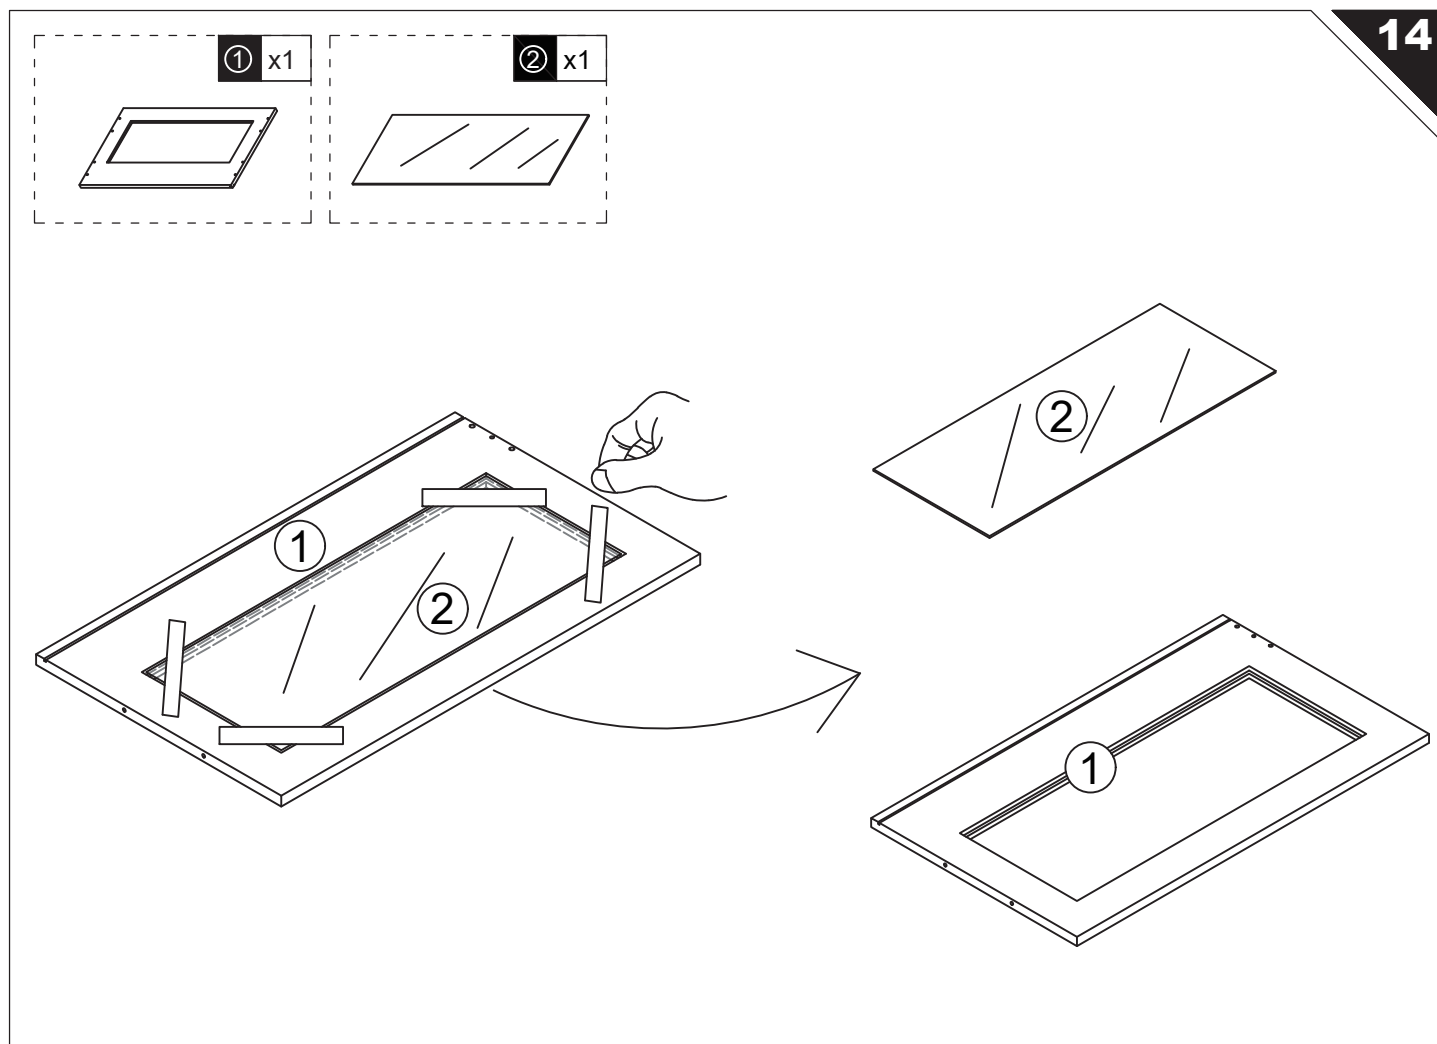

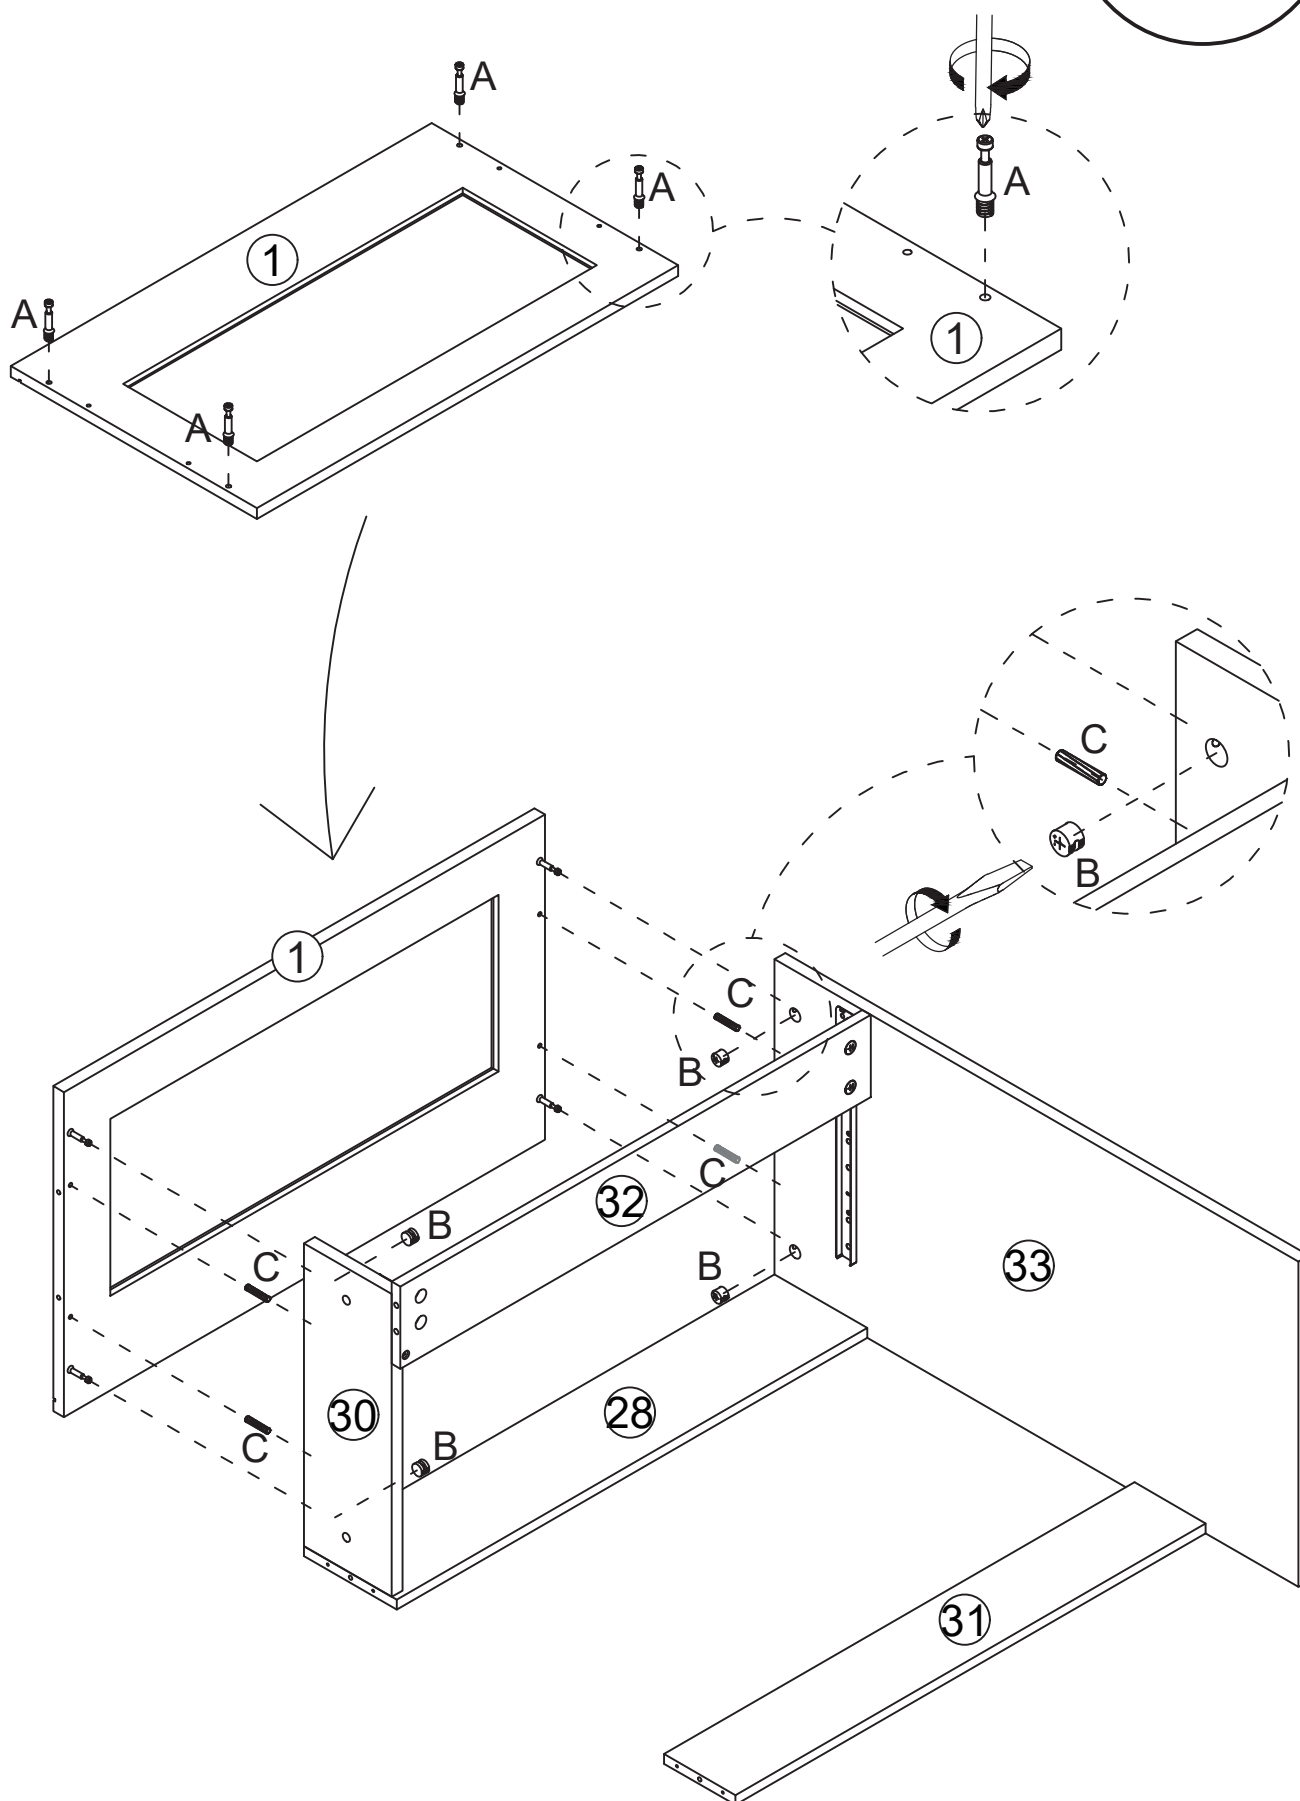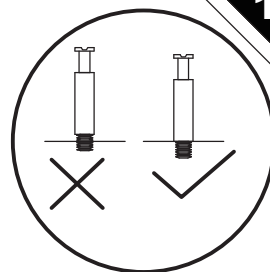
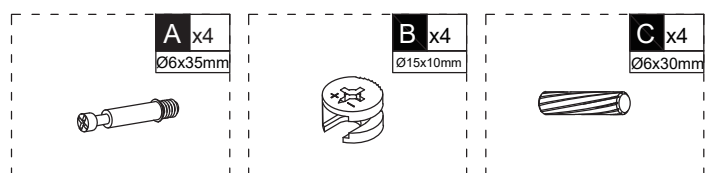


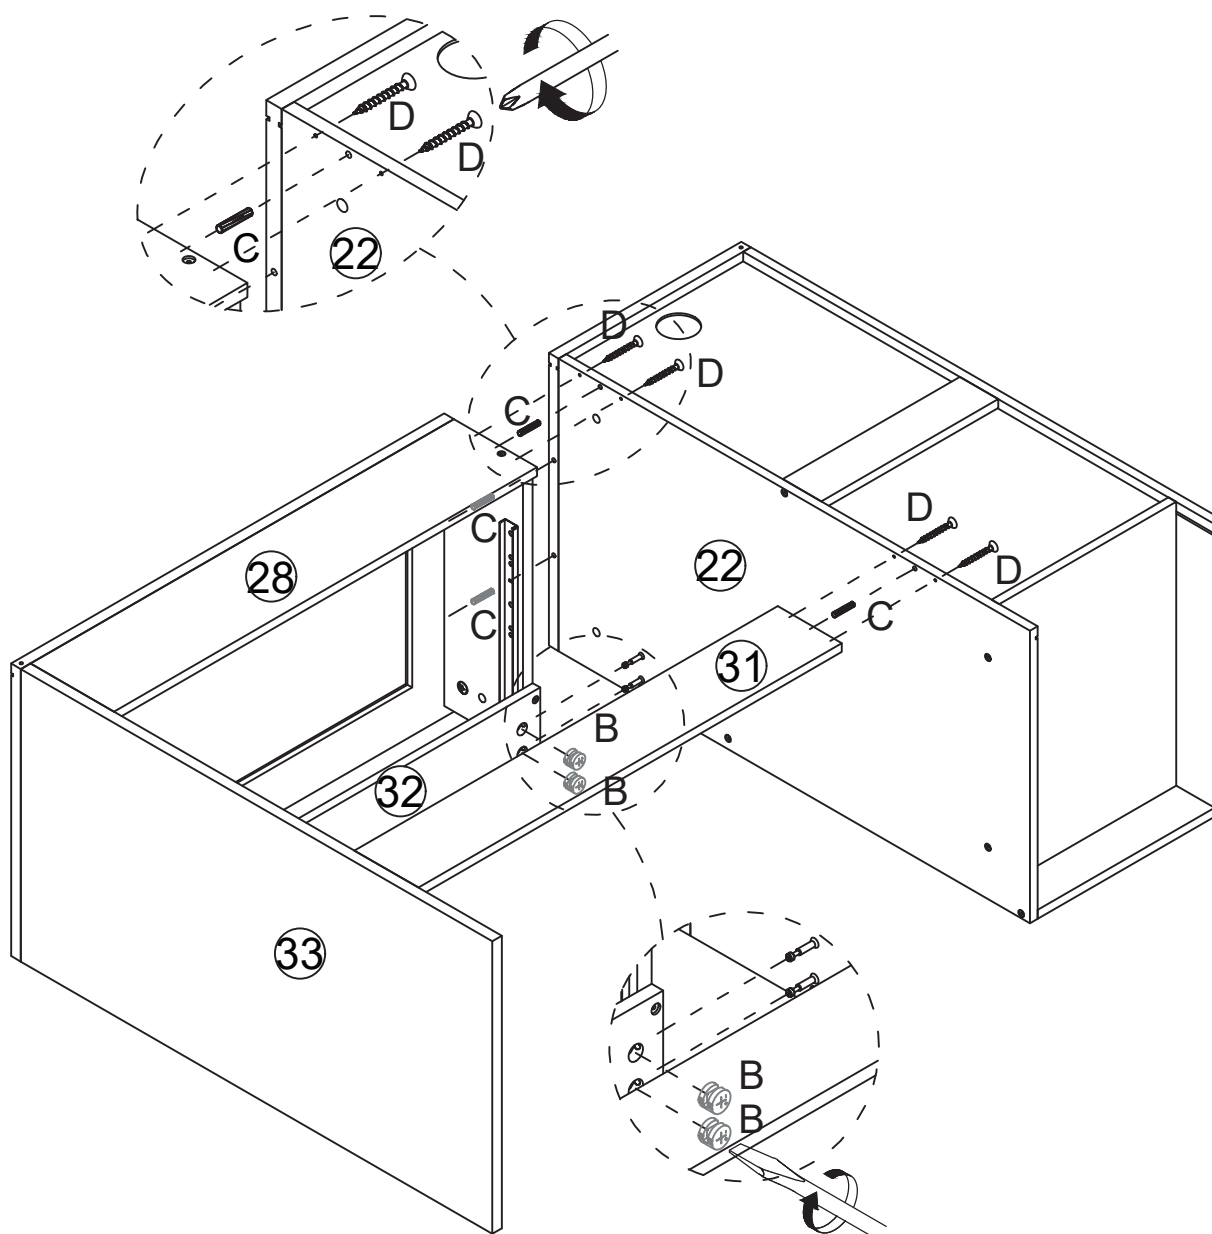
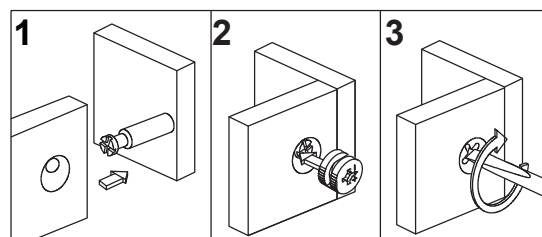
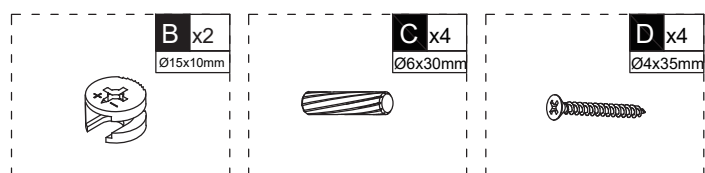


S x2



T x2




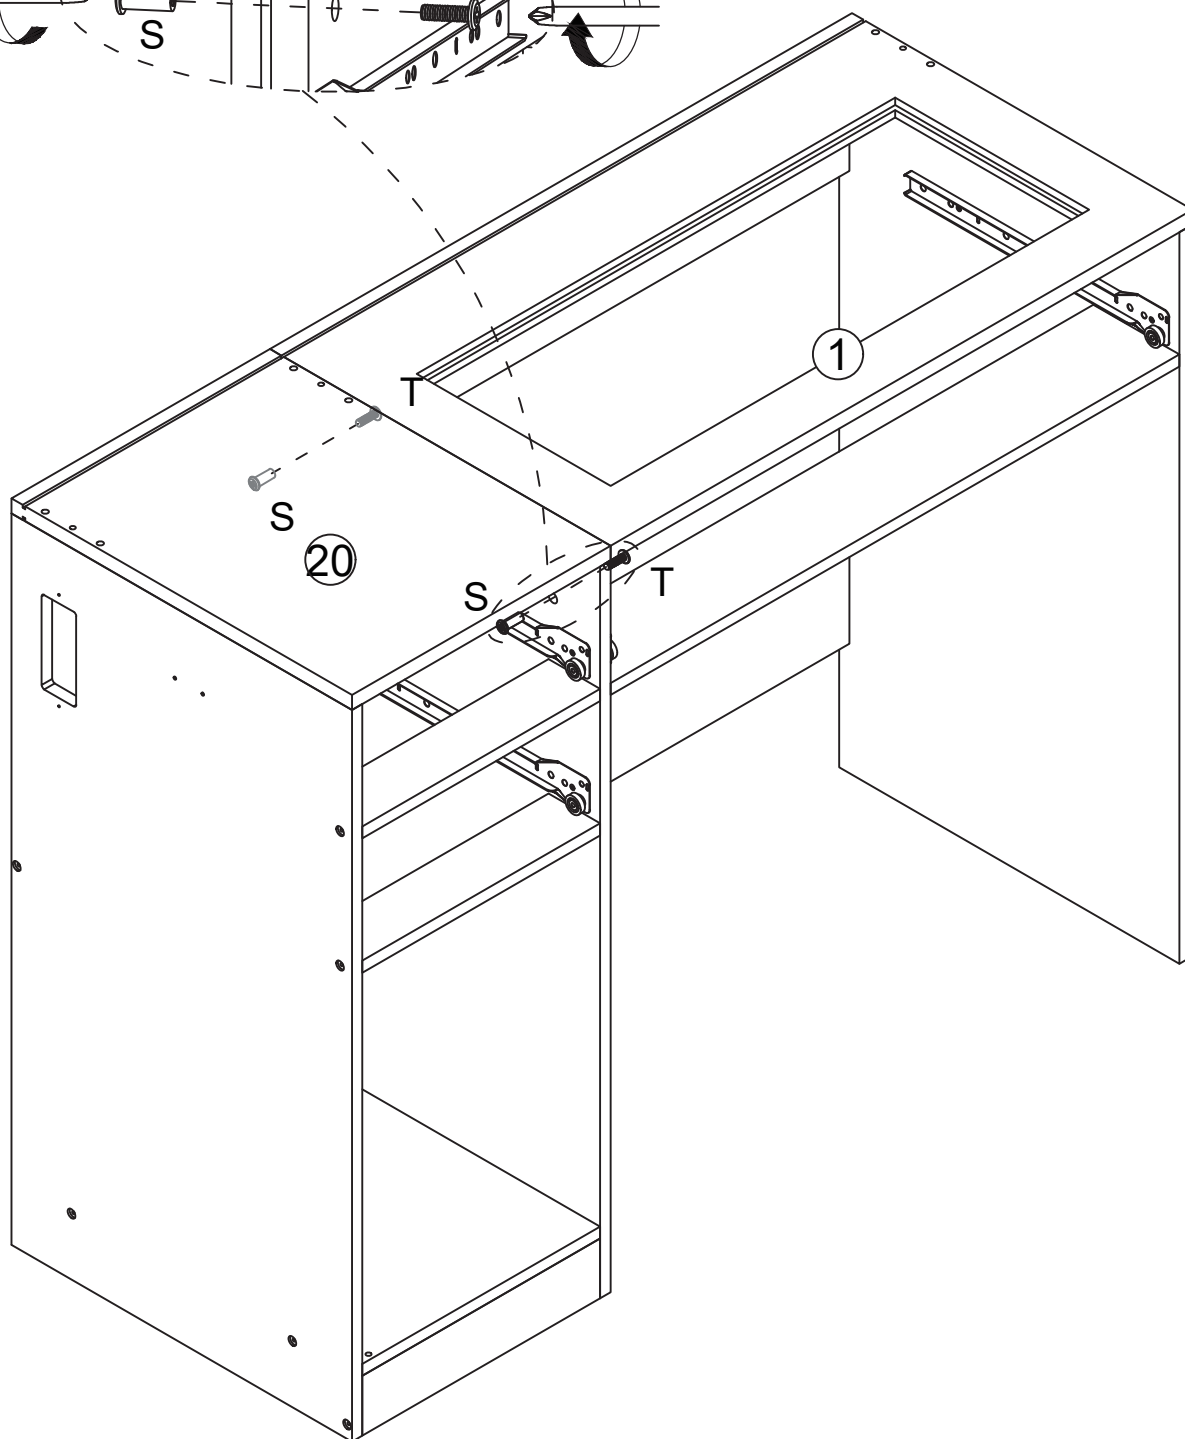
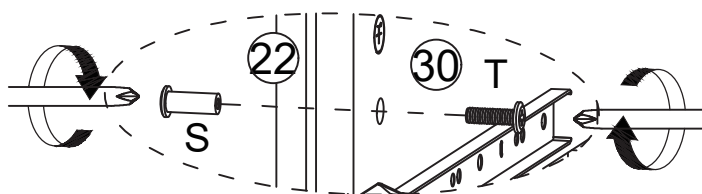


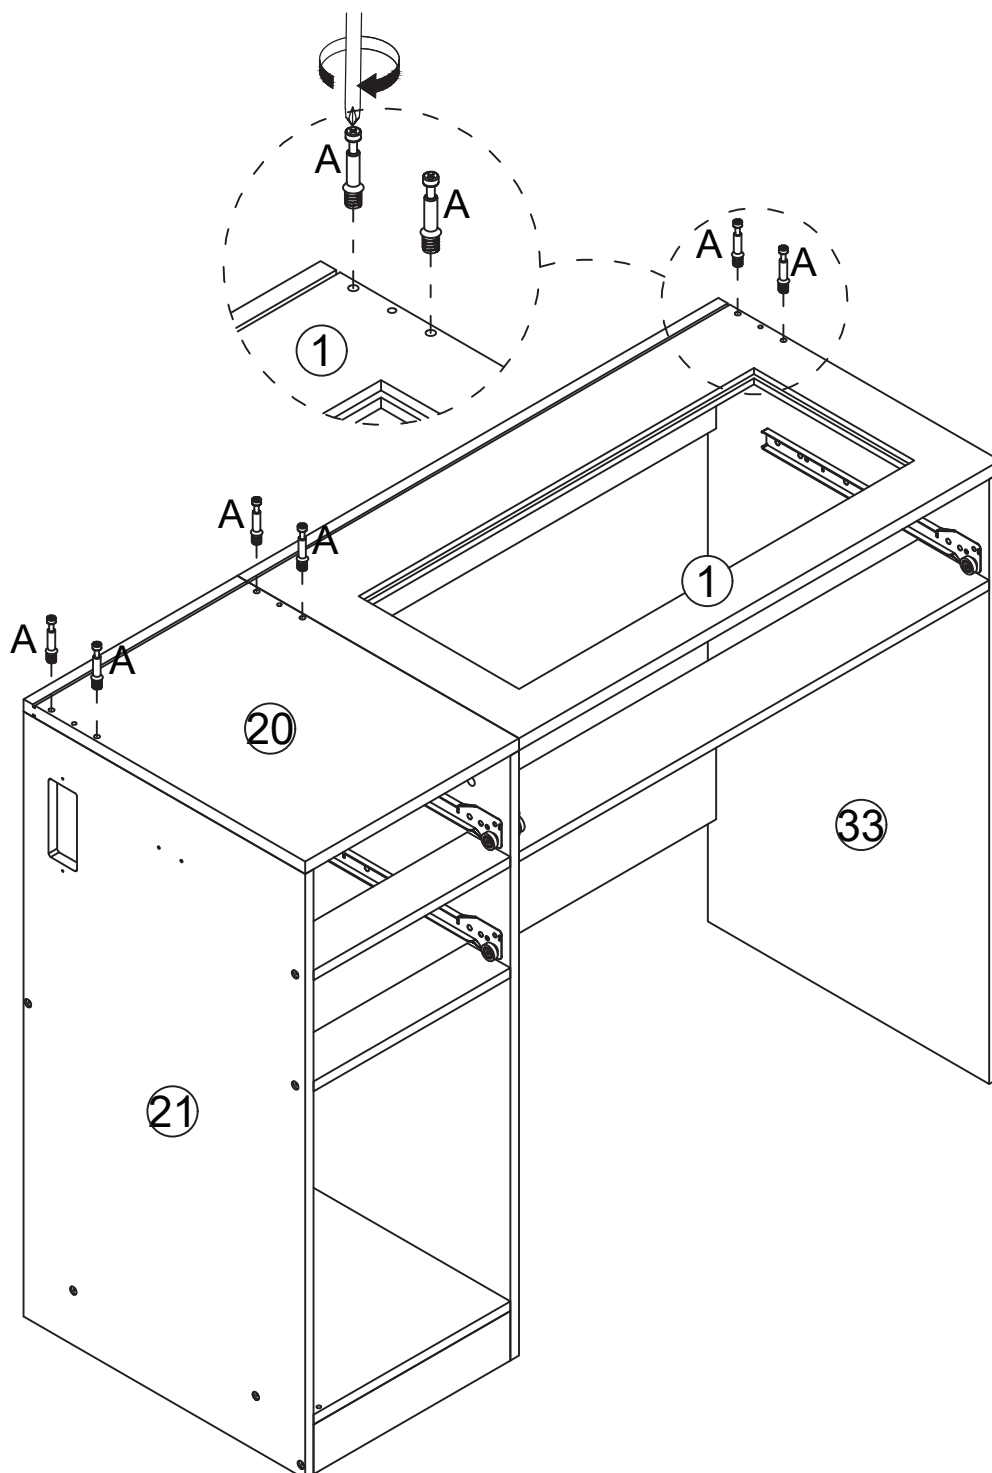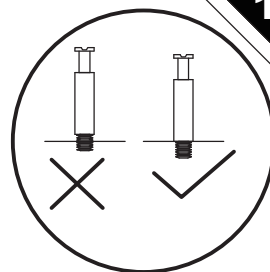A x6
Ø6x35mm




A x4
Ø6x35mm









12 x1





17 x1

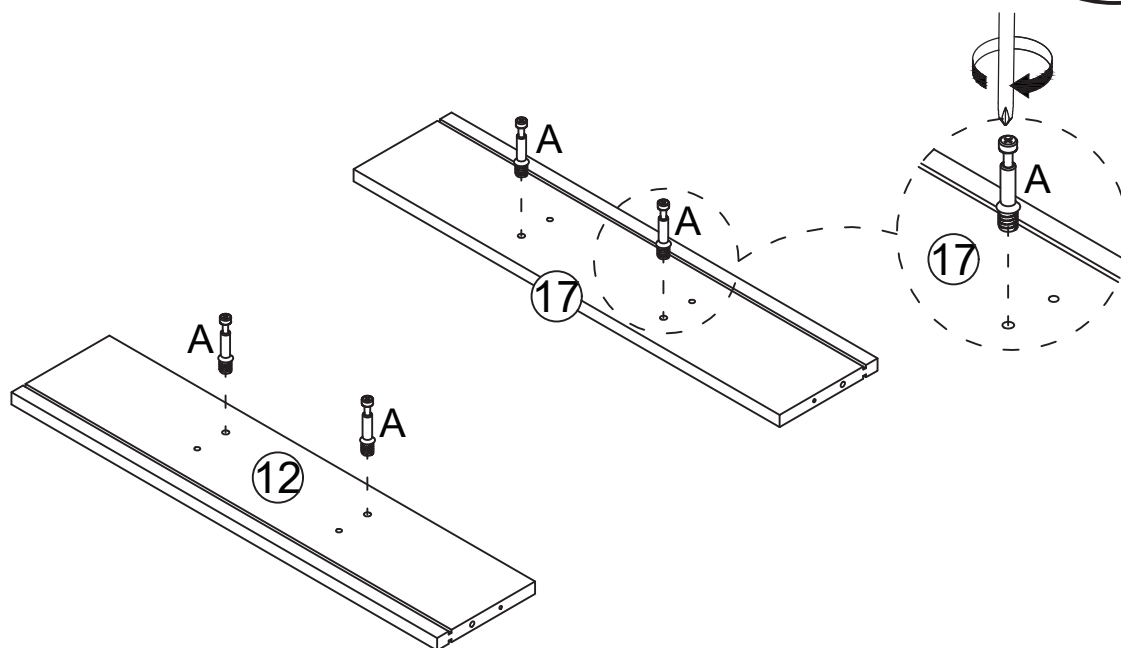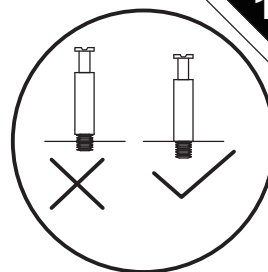



B x4
Ø15x10mmC x4
Ø6x30mm

11 x4

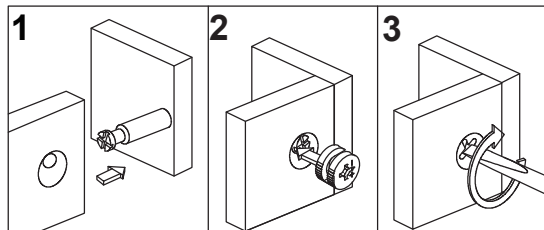
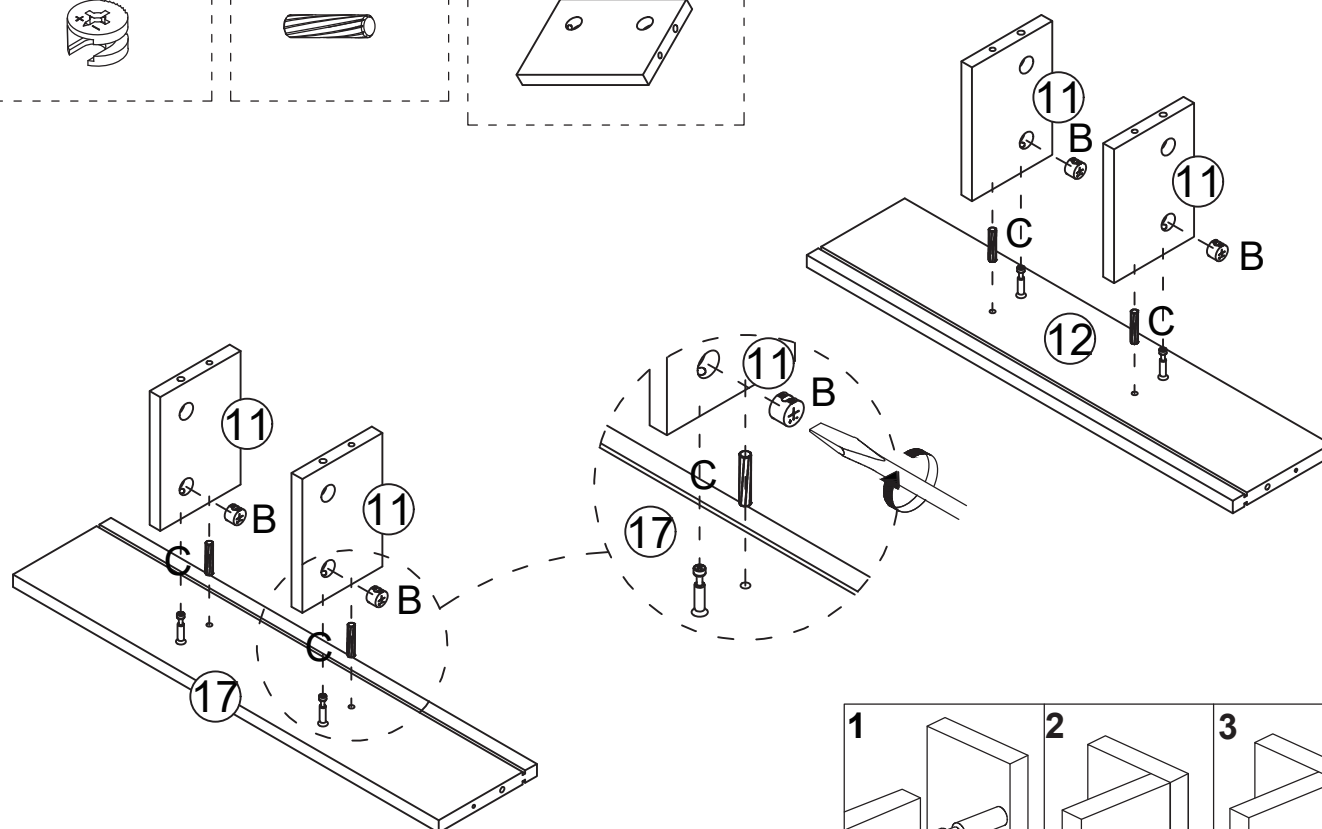



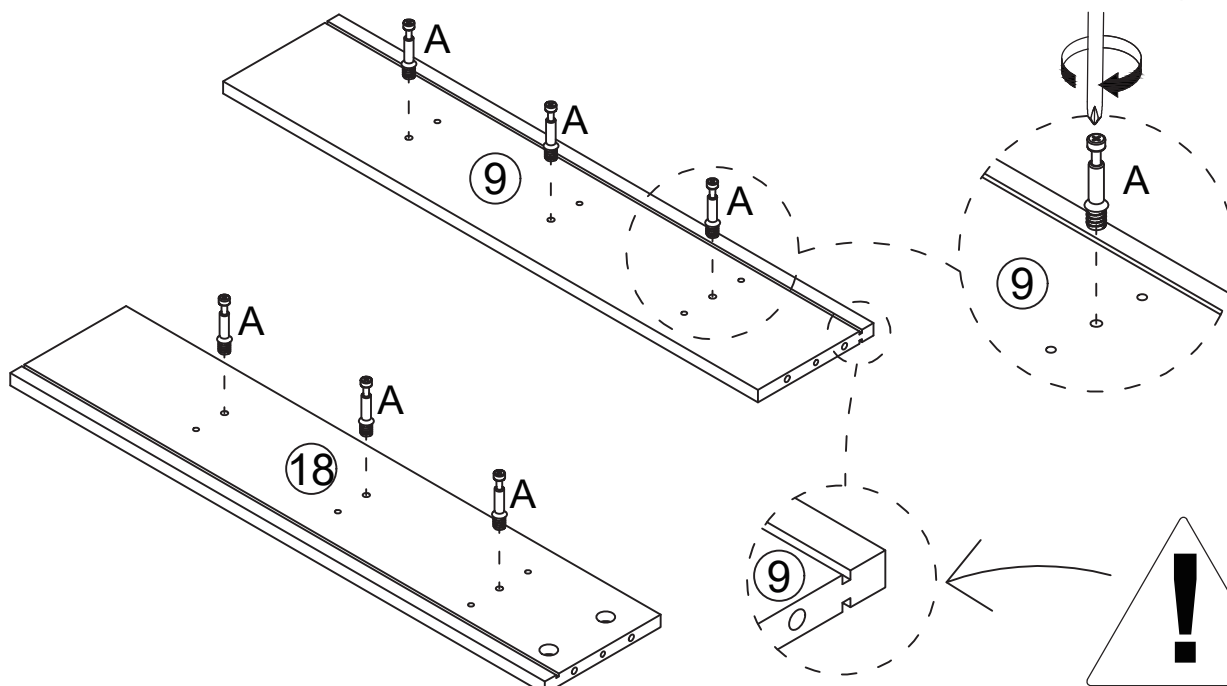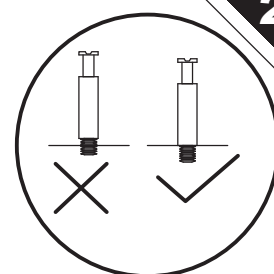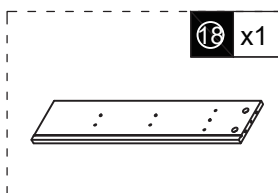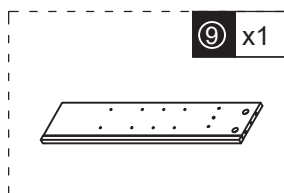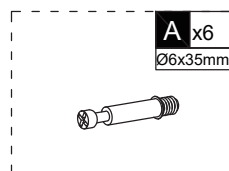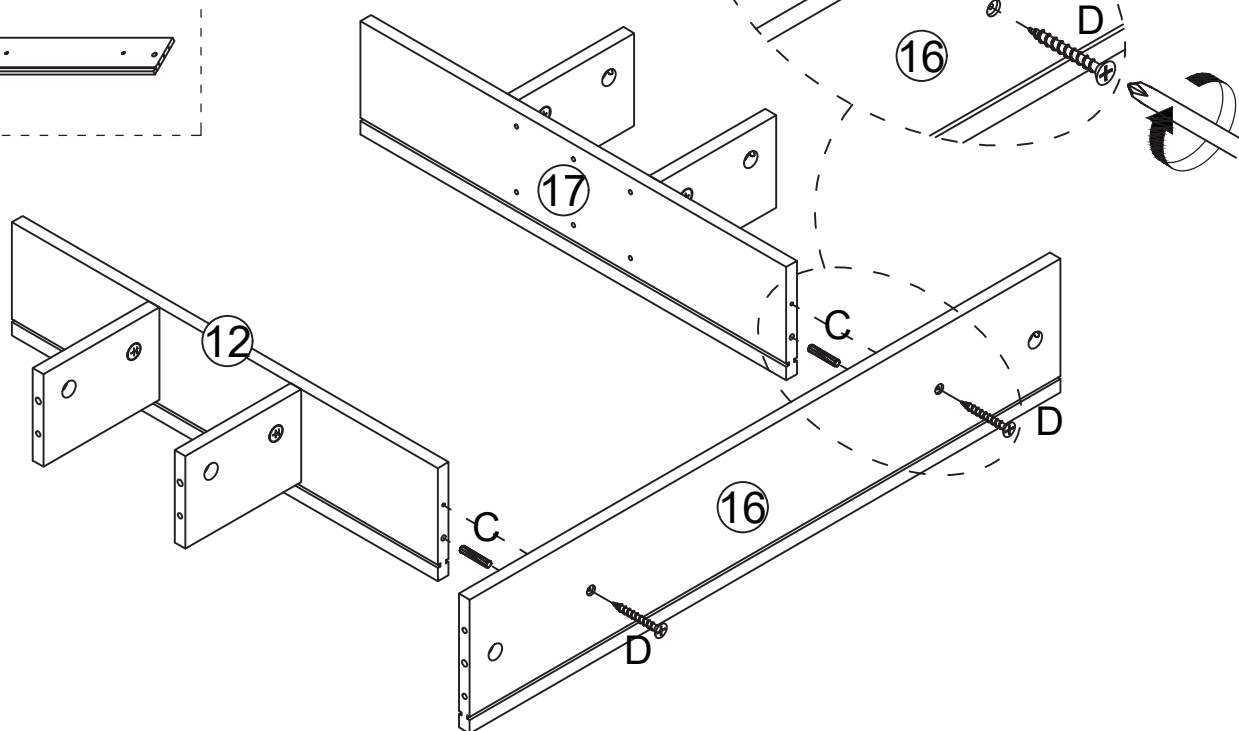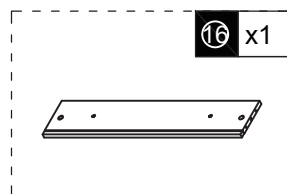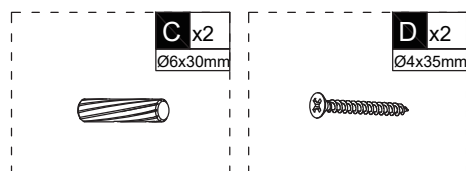

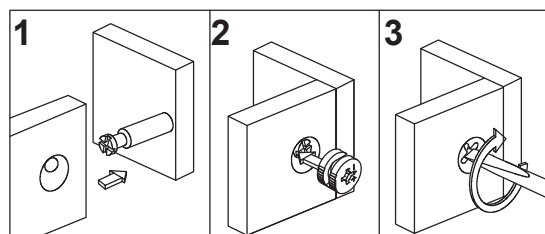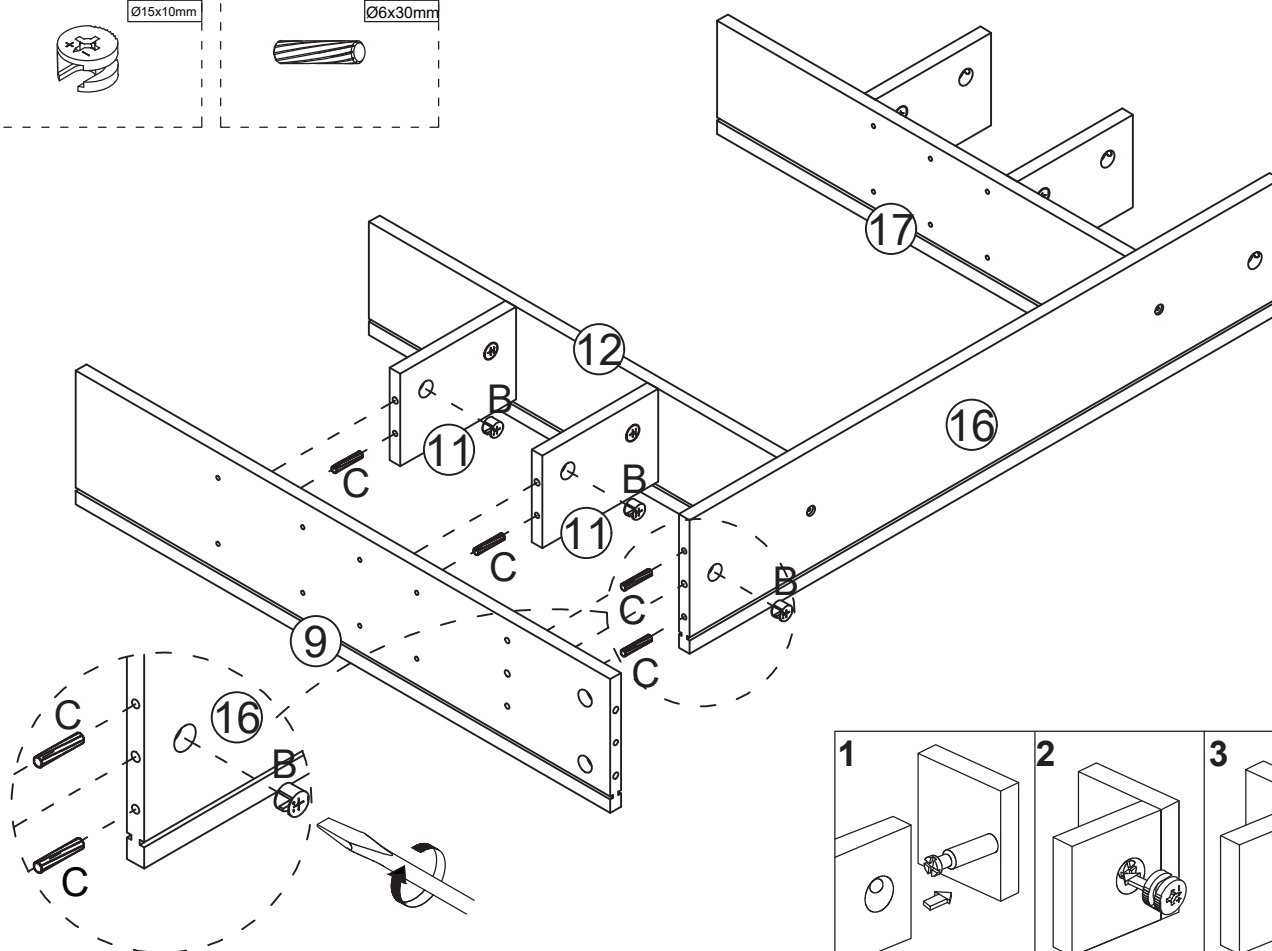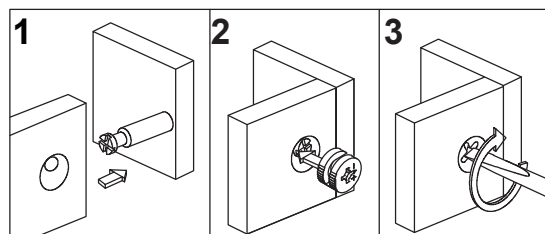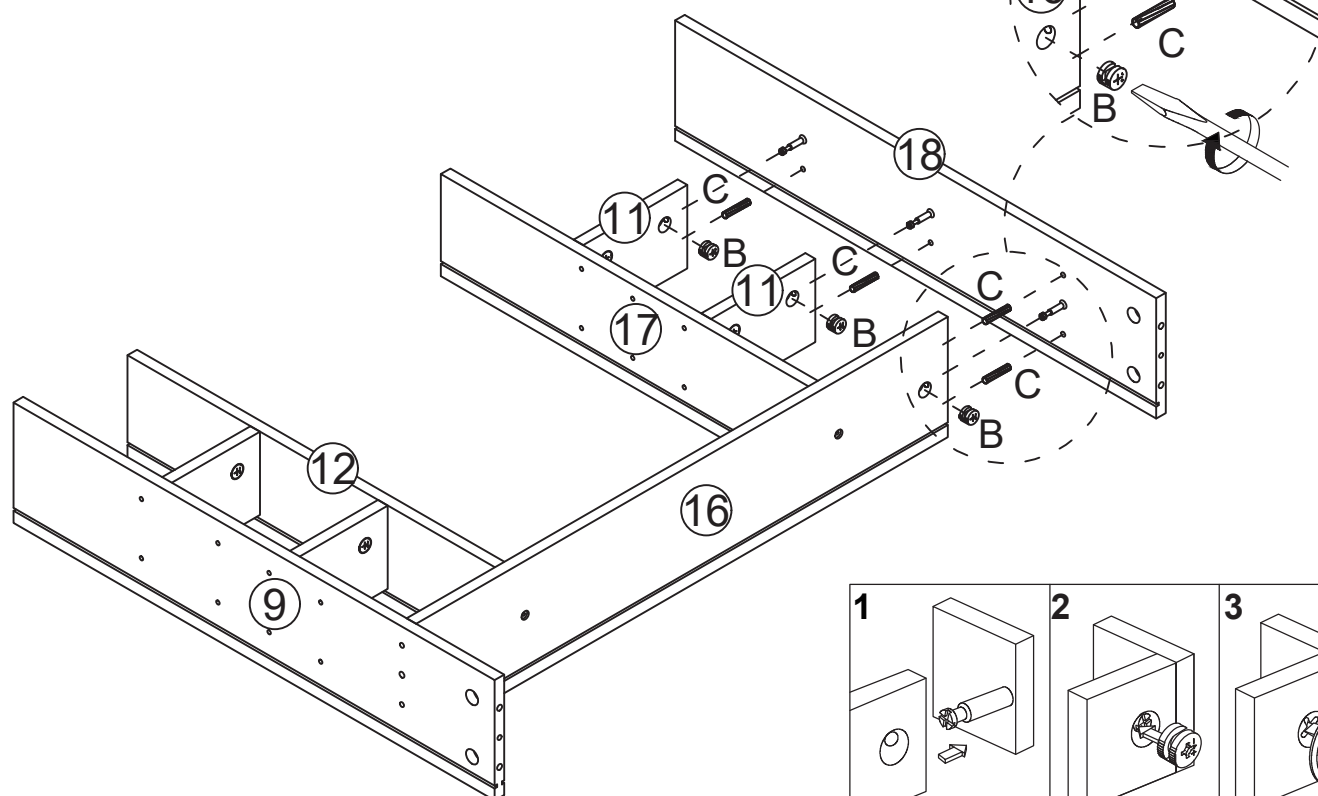B x3
Ø15x10mmC x4
Ø6x30mmB x3
Ø15x10mmC x4
Ø6x30mm

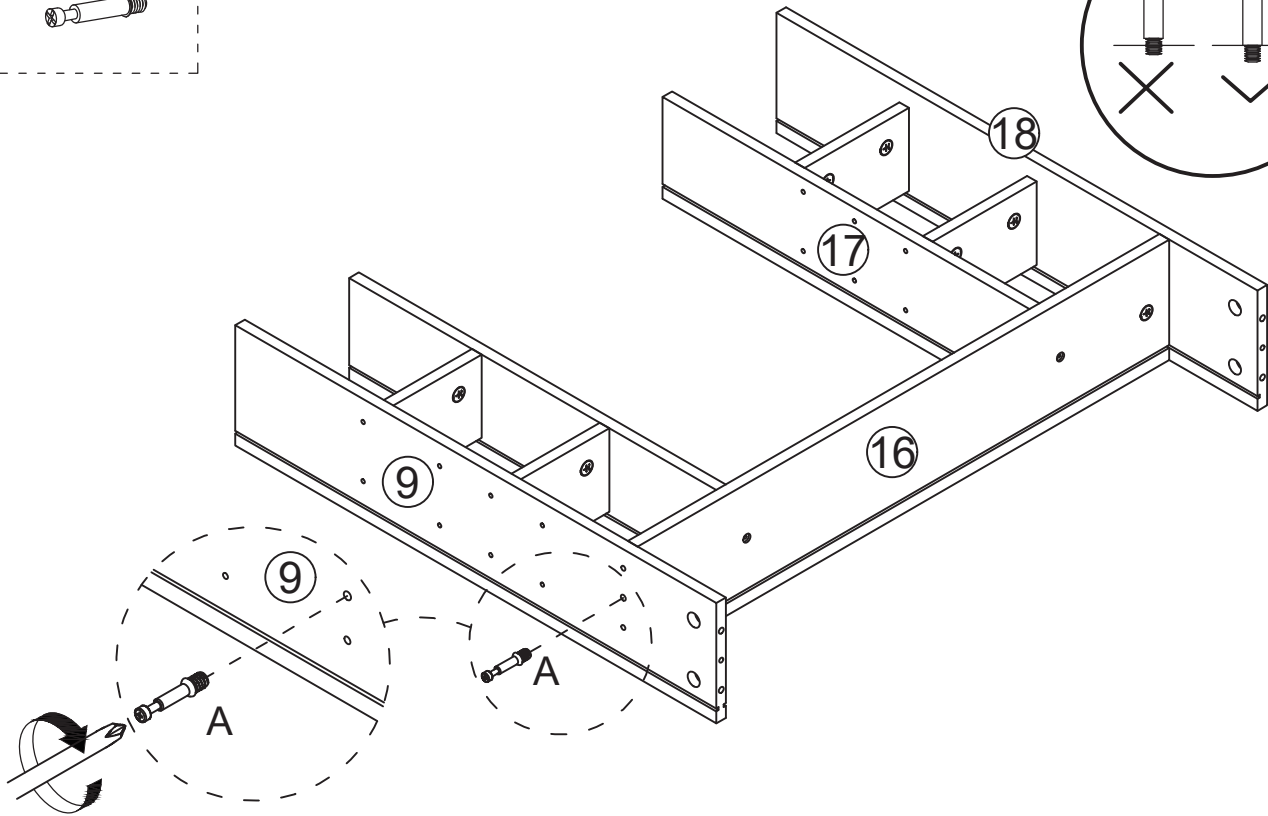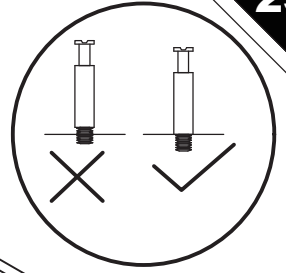

A x1
Ø6x35mmA x1
Ø6x35mm

③ x1

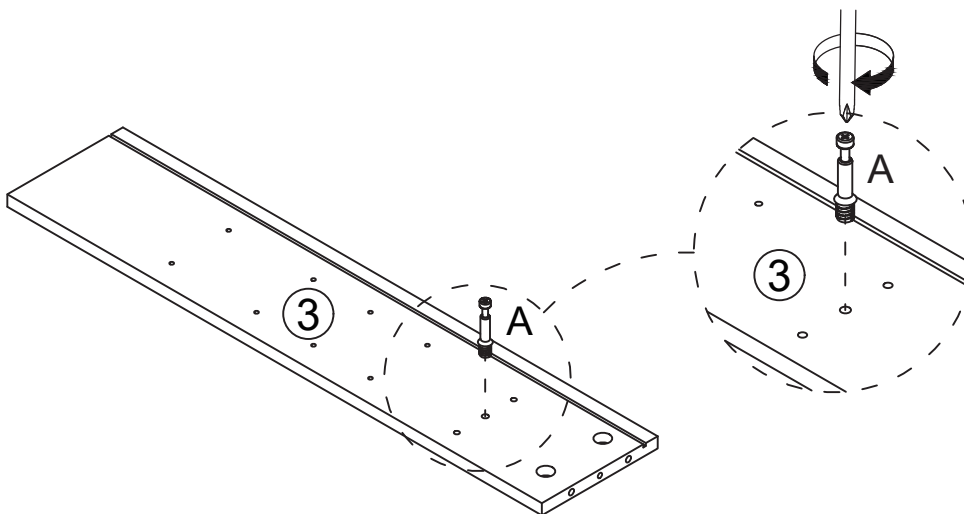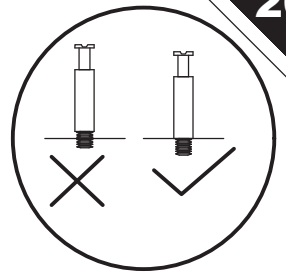



B x2
Ø15x10mmC x4
Ø6x30mm


7 x1

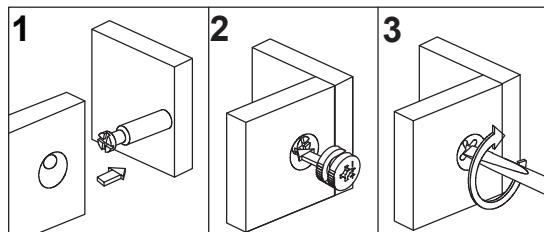
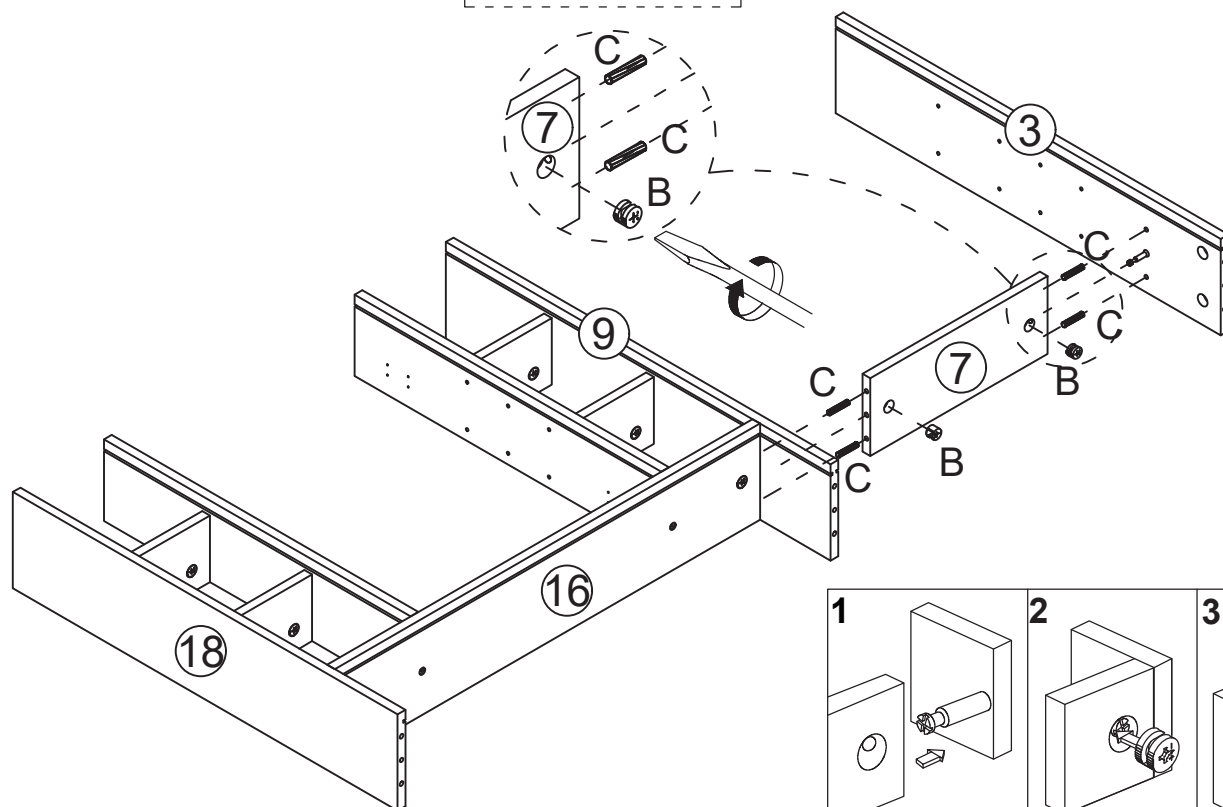


29 x1

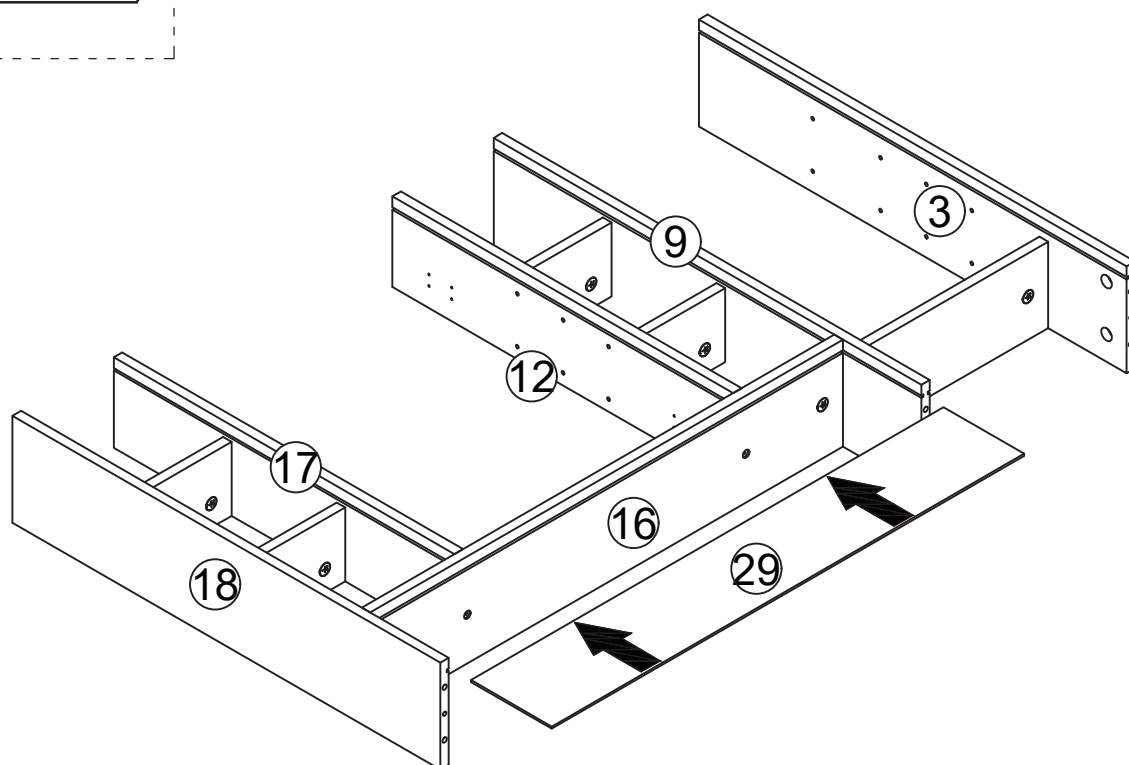






H x2



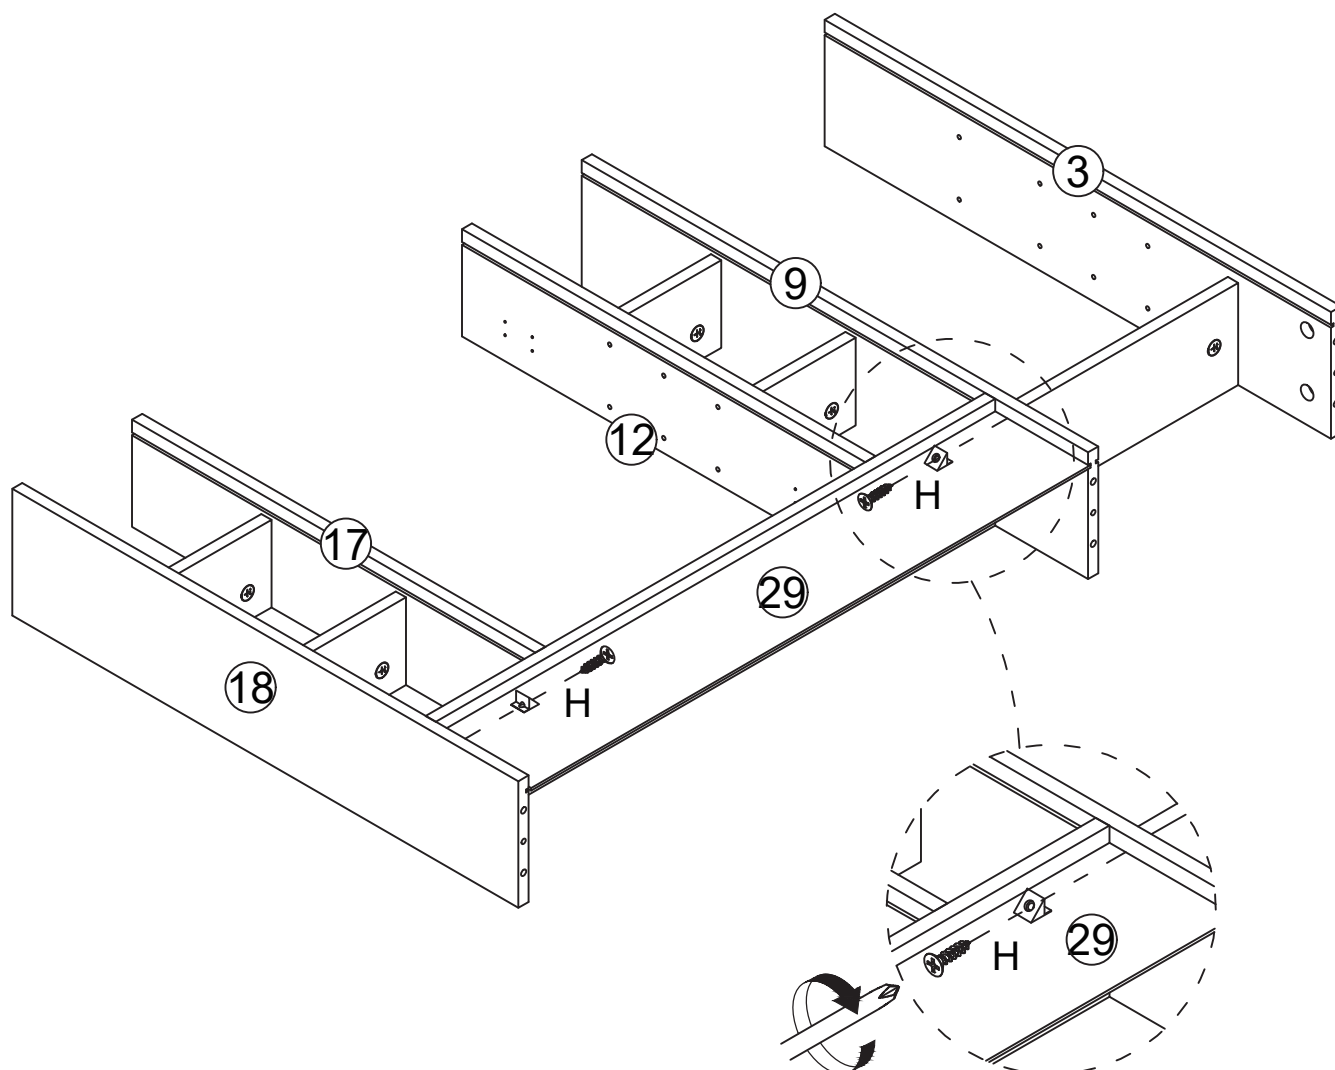


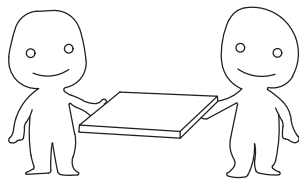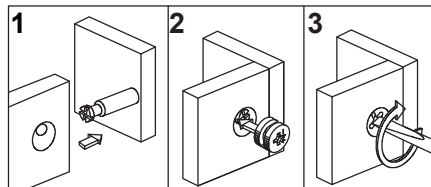
B x6
Ø15x10mm**C** x3
Ø6x30mm

Need Two or More
People To Complete

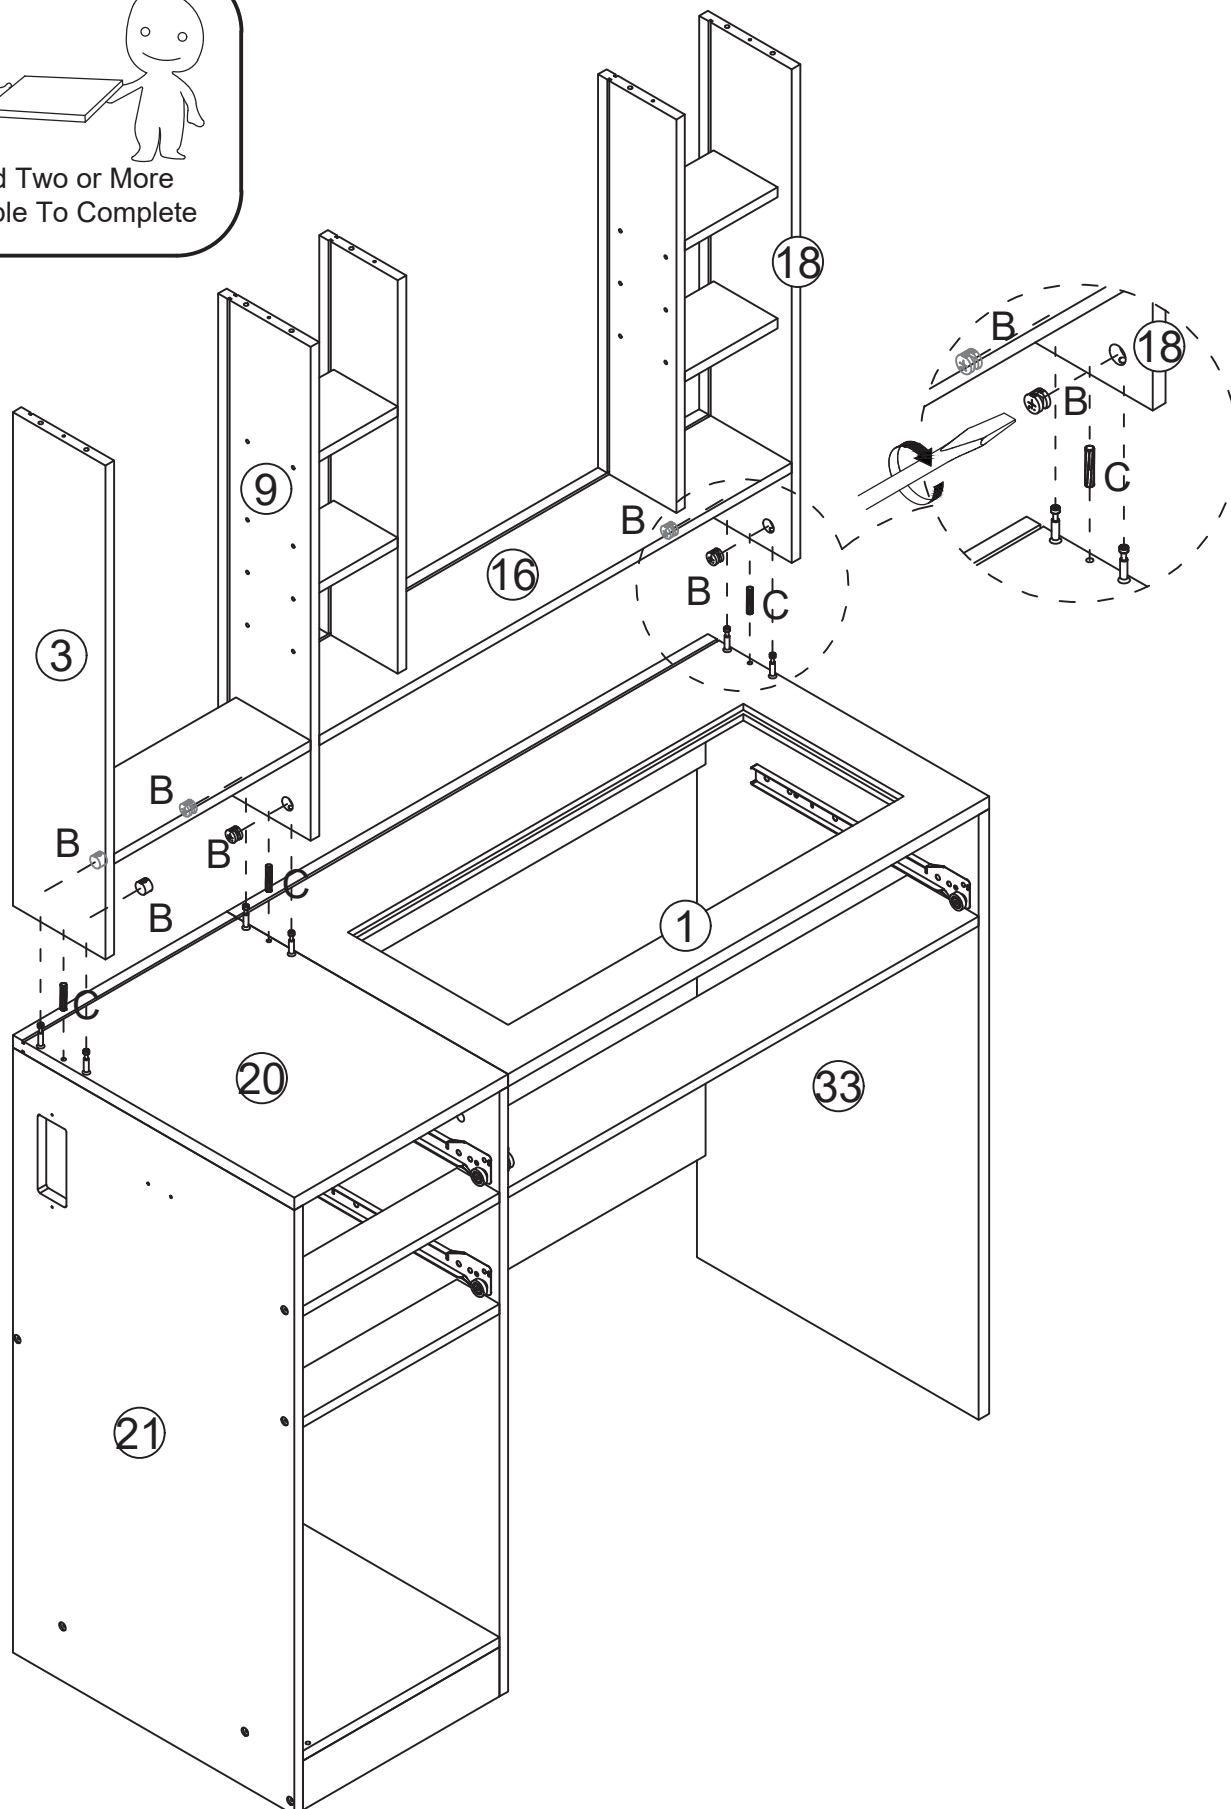

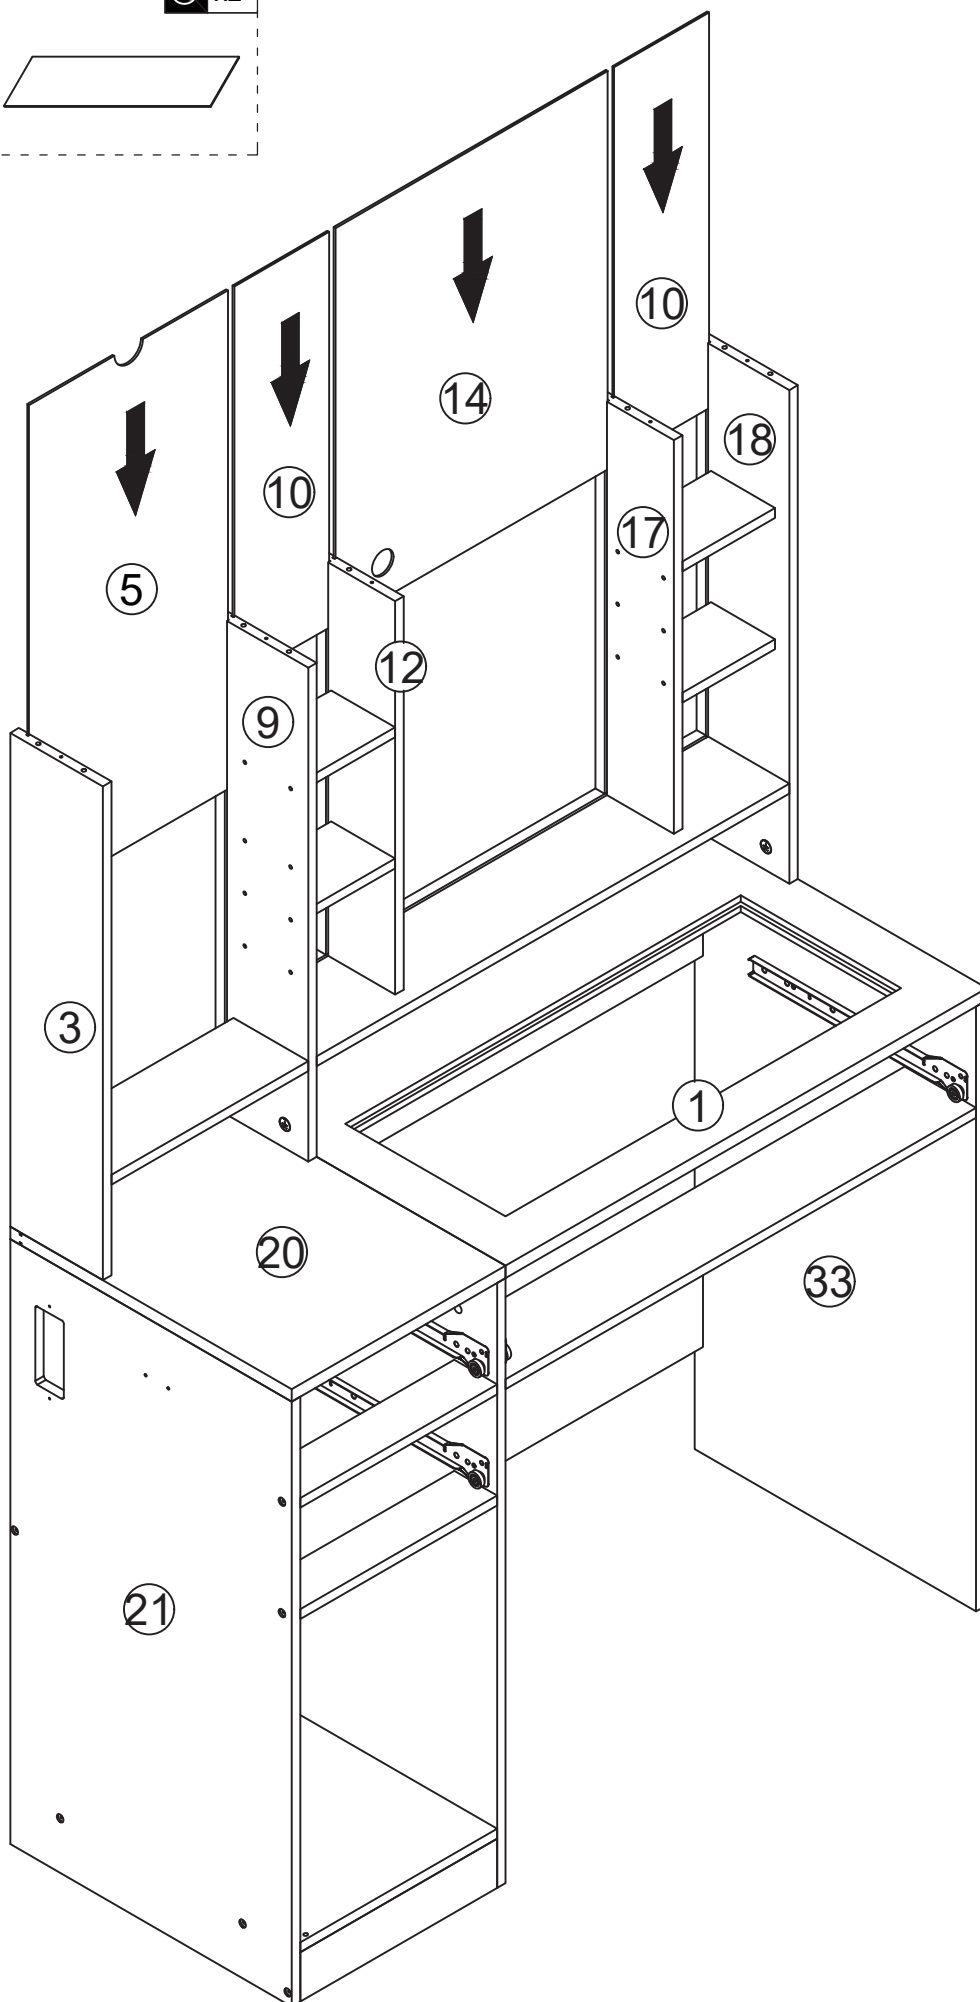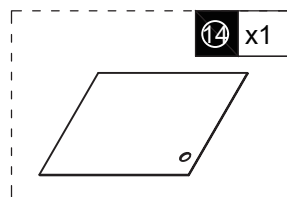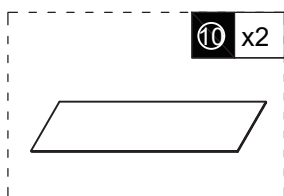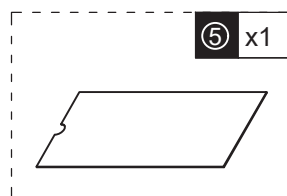

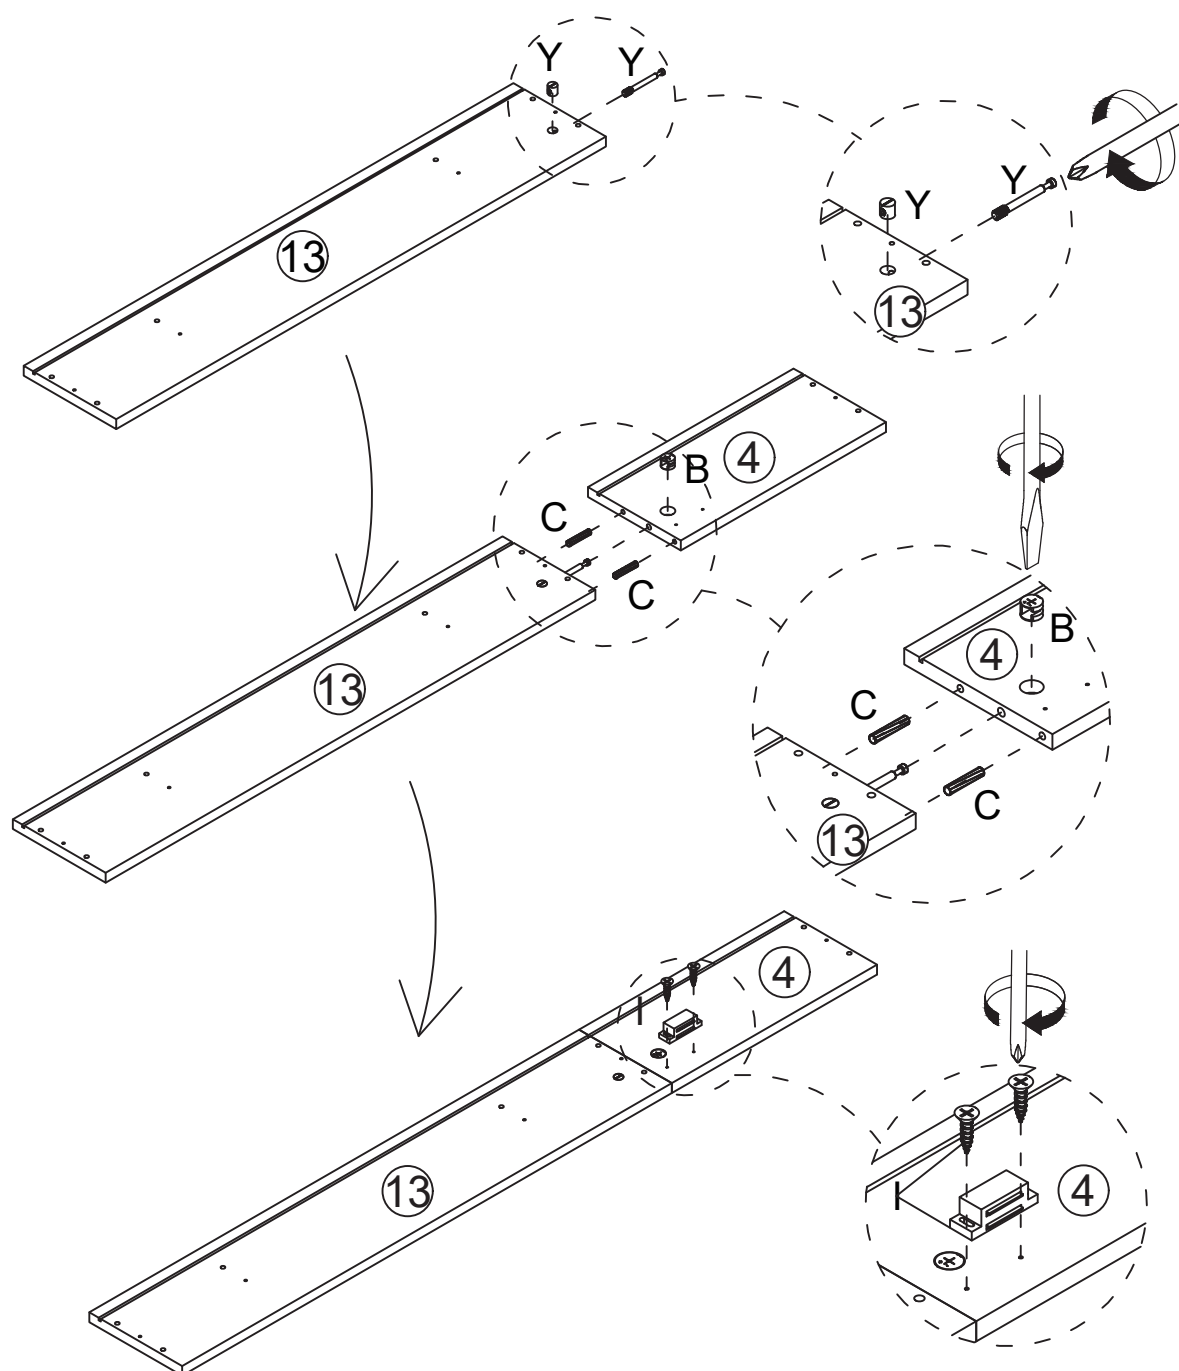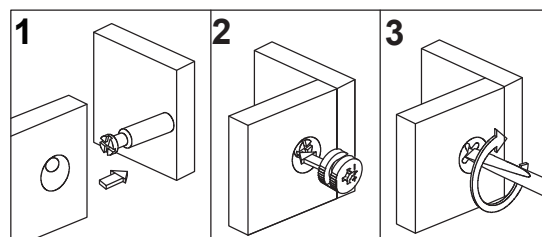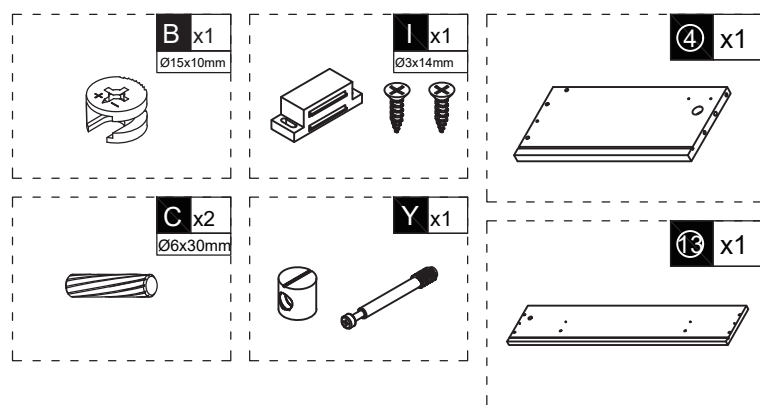



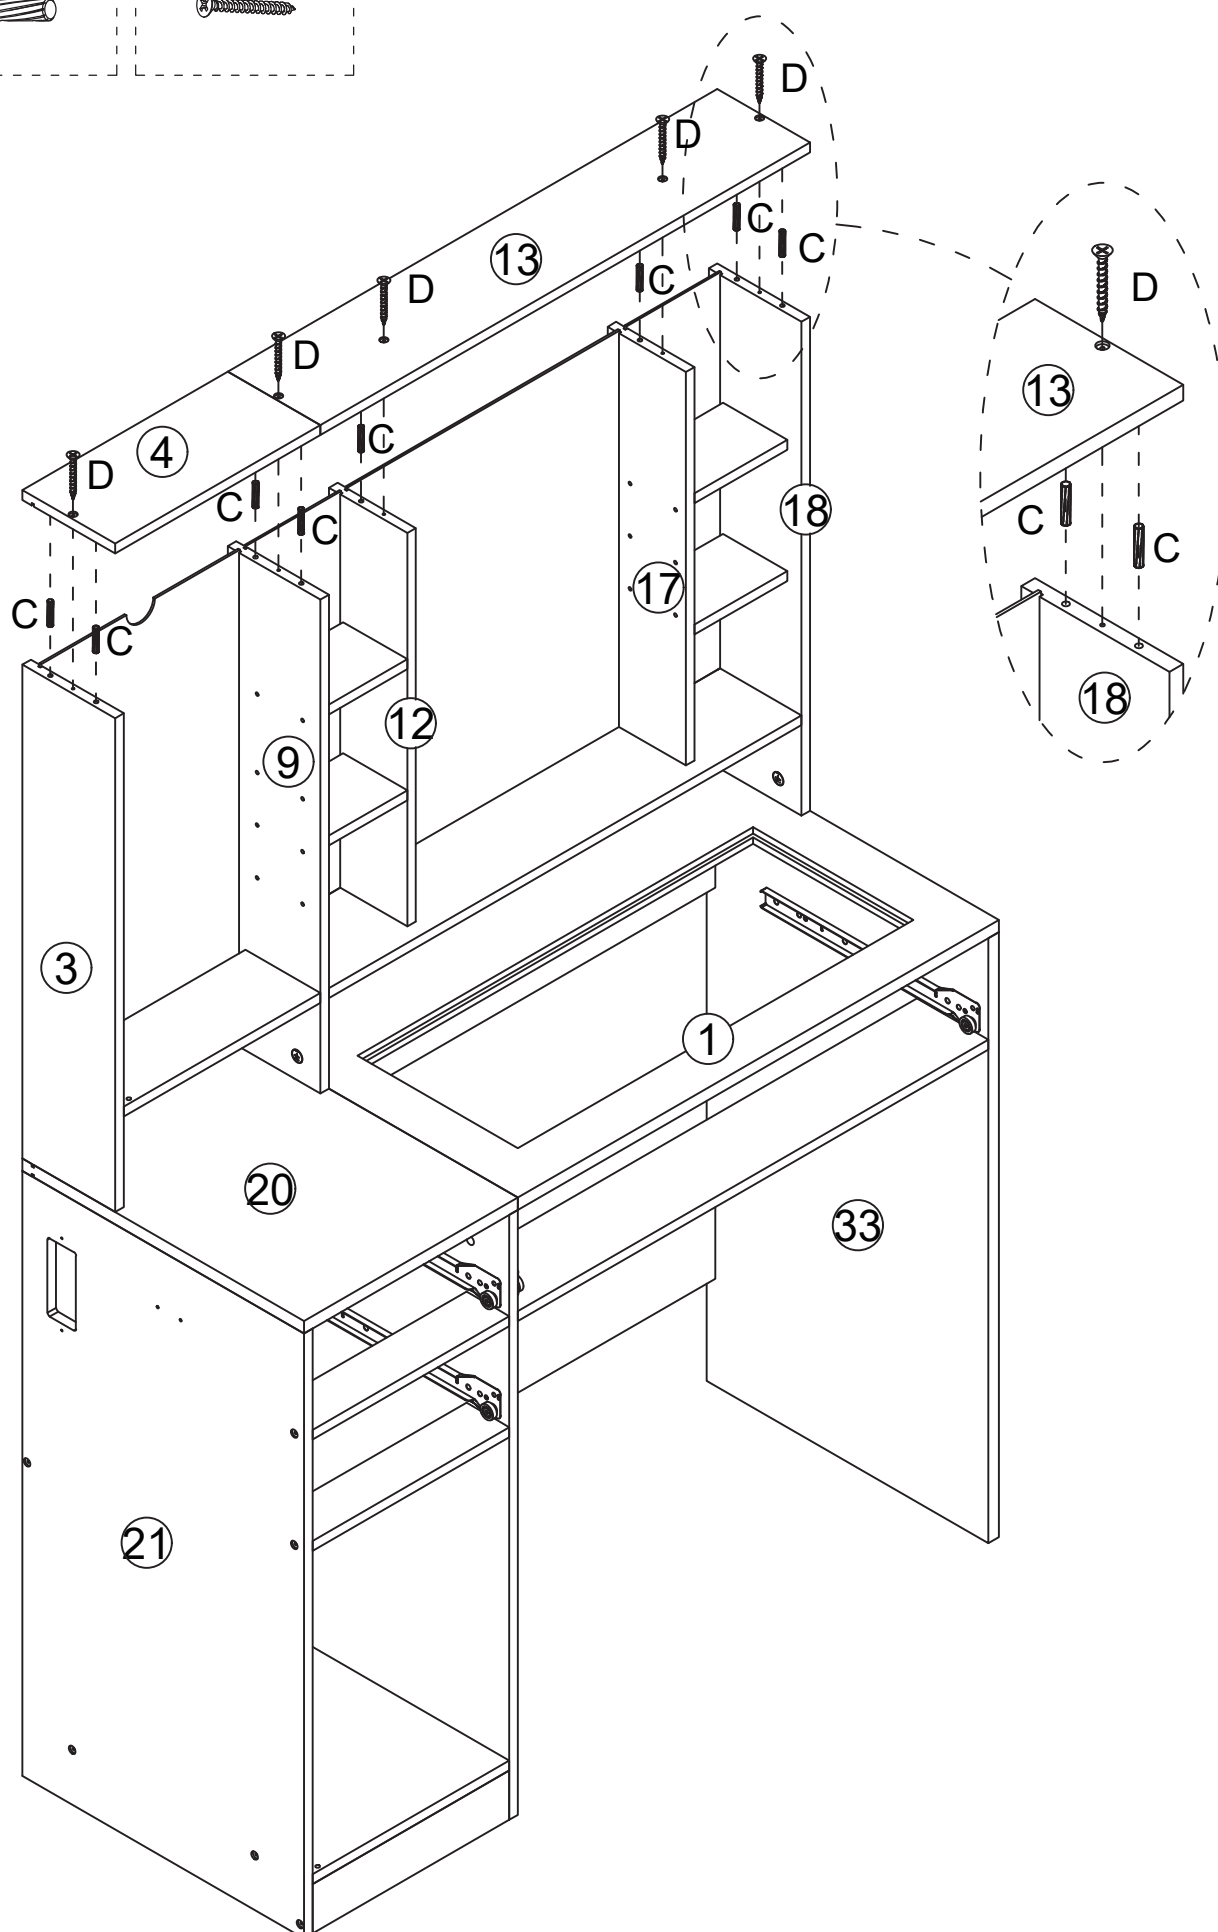
C x8
Ø6x30mmD x5
Ø4x35mm





G x1






J x1

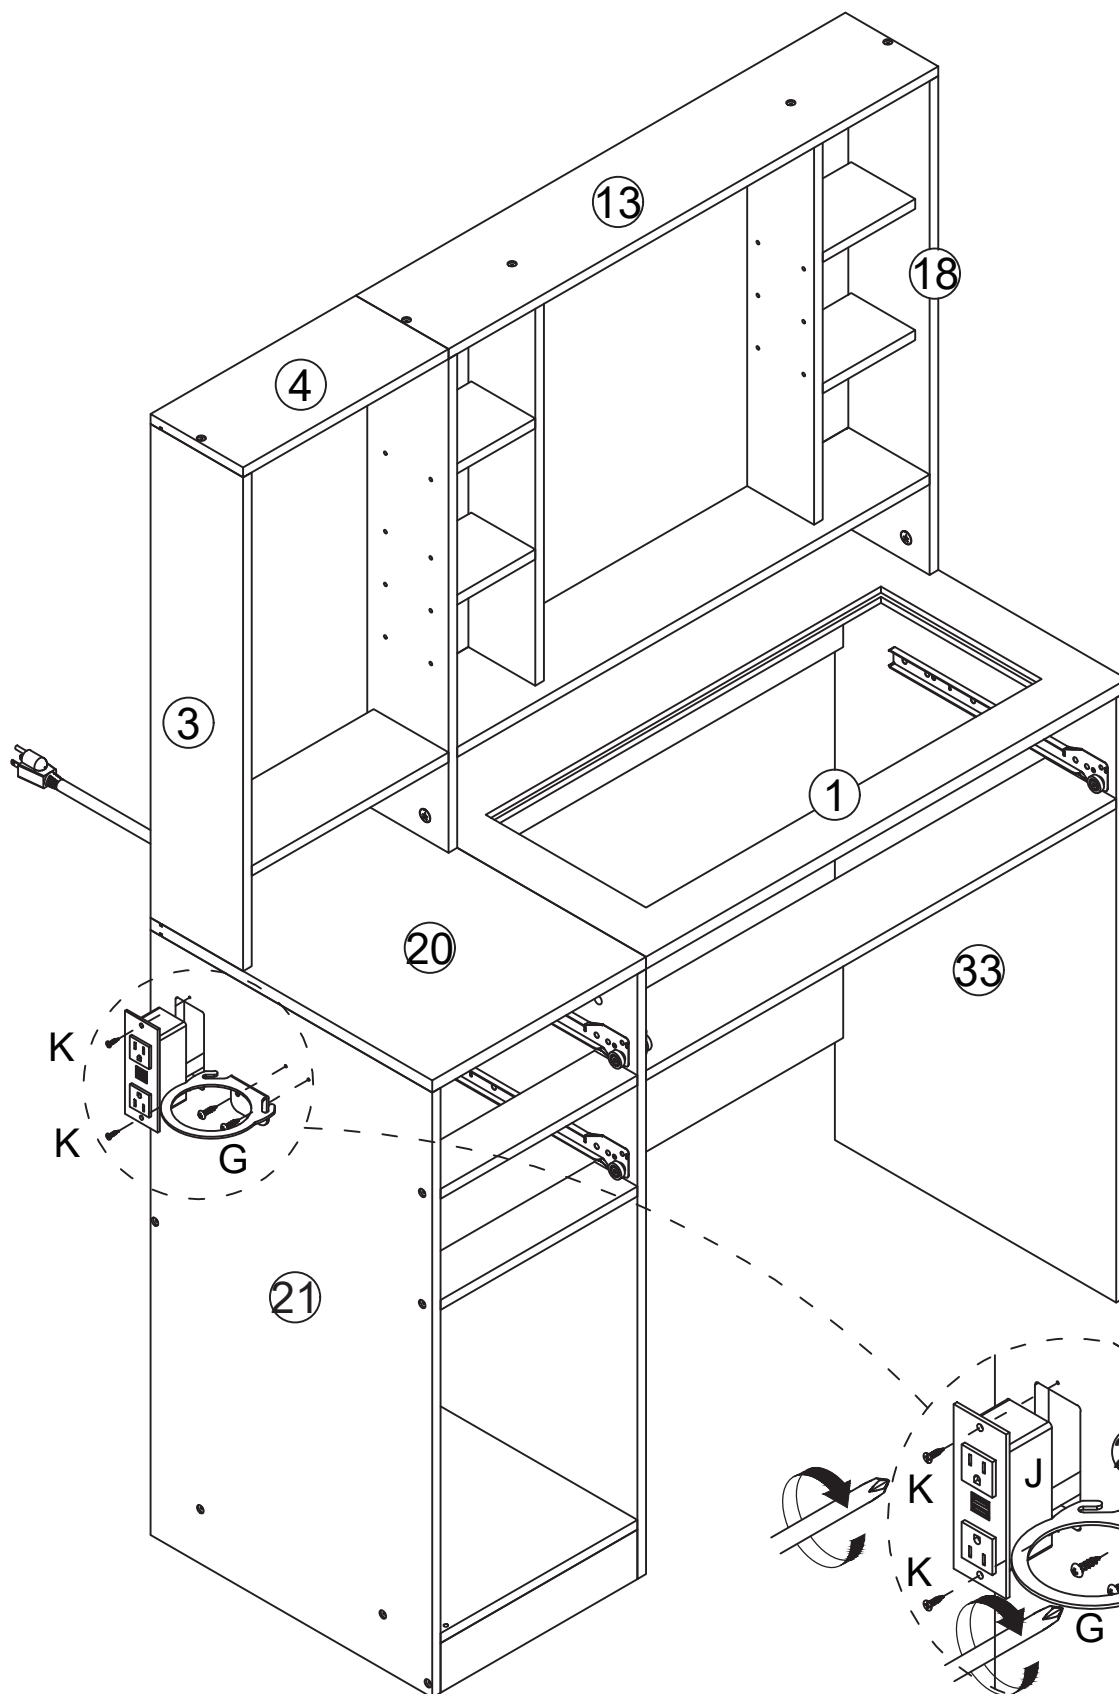K x2
Ø3x12mm

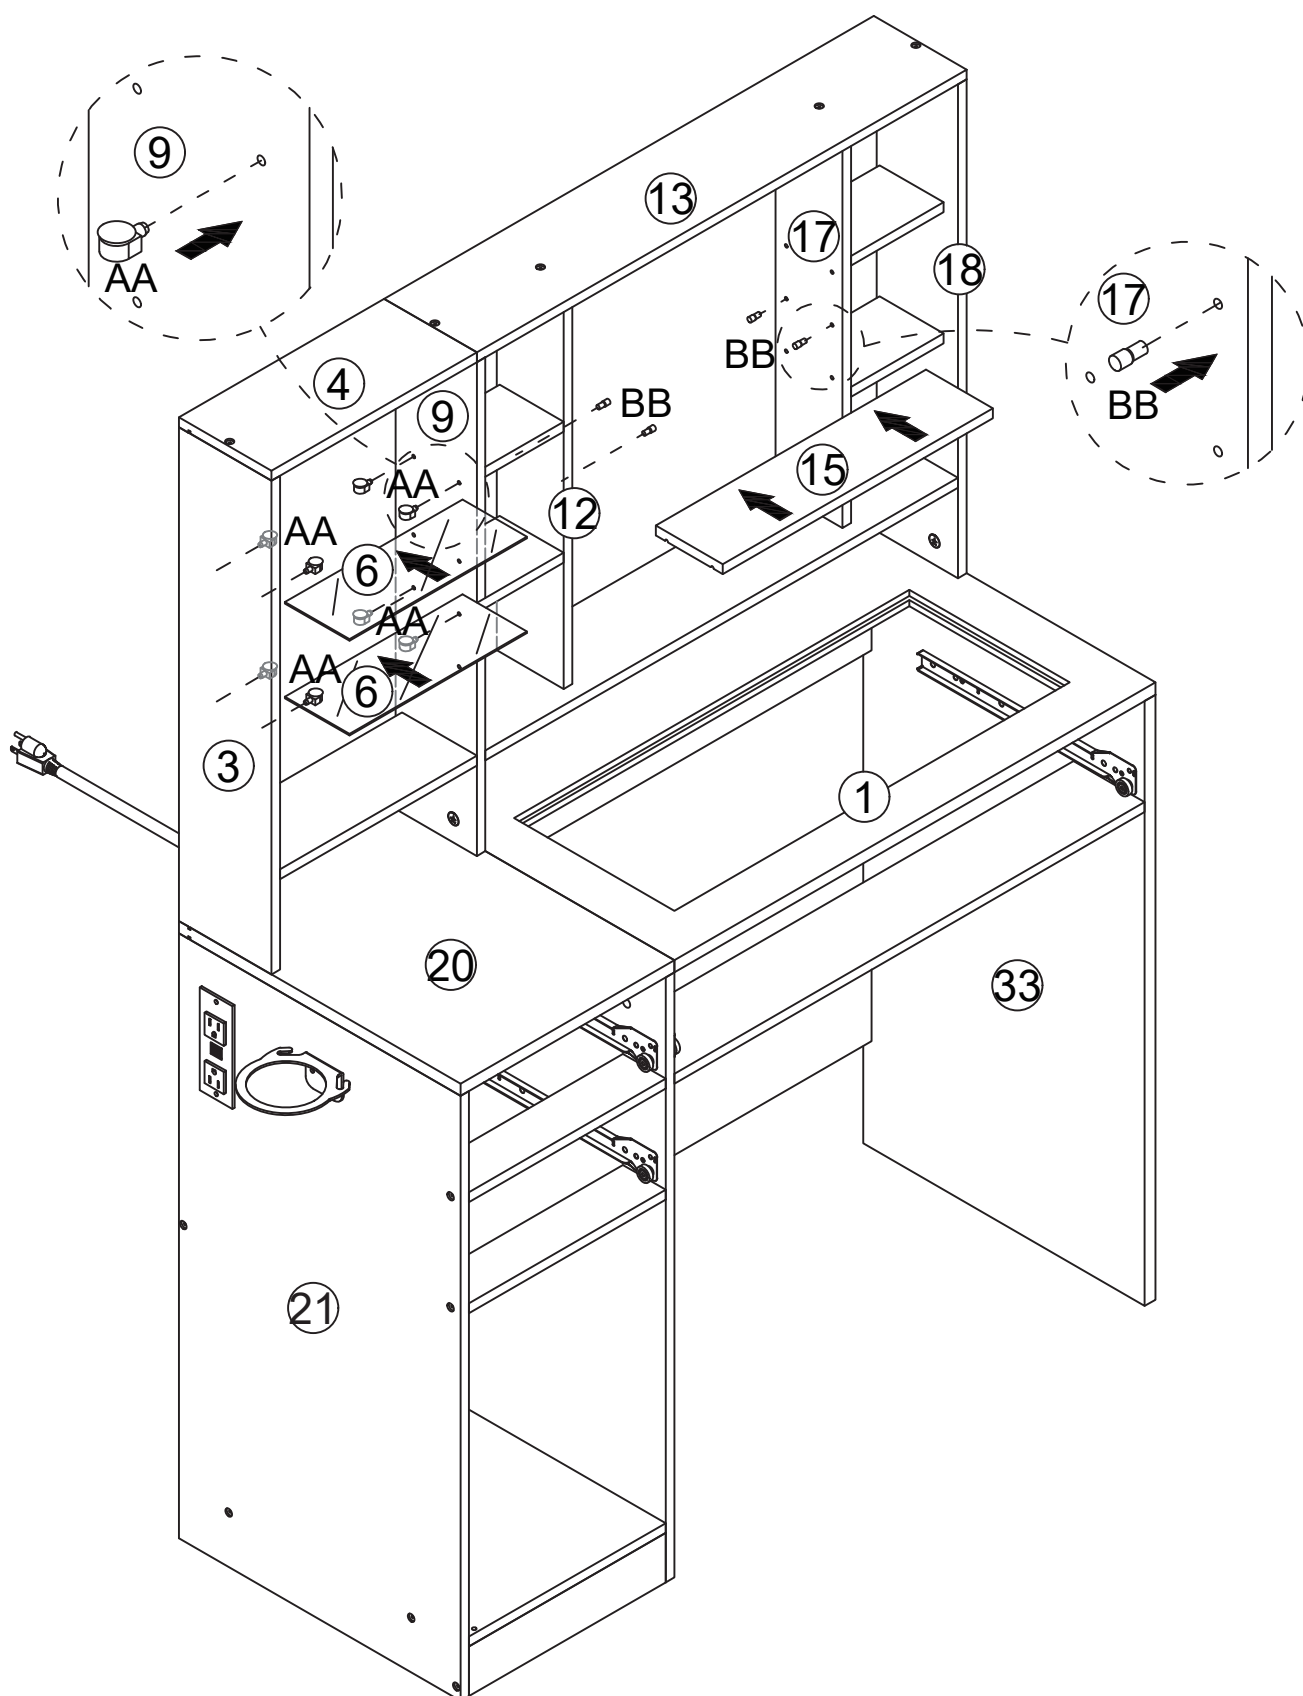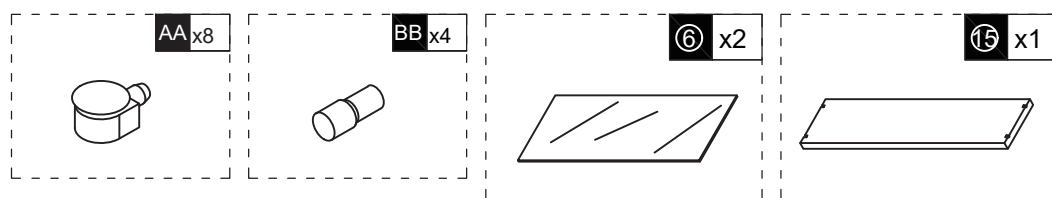

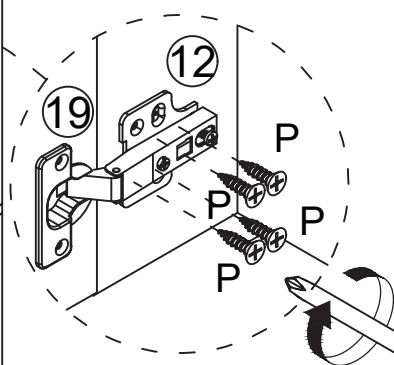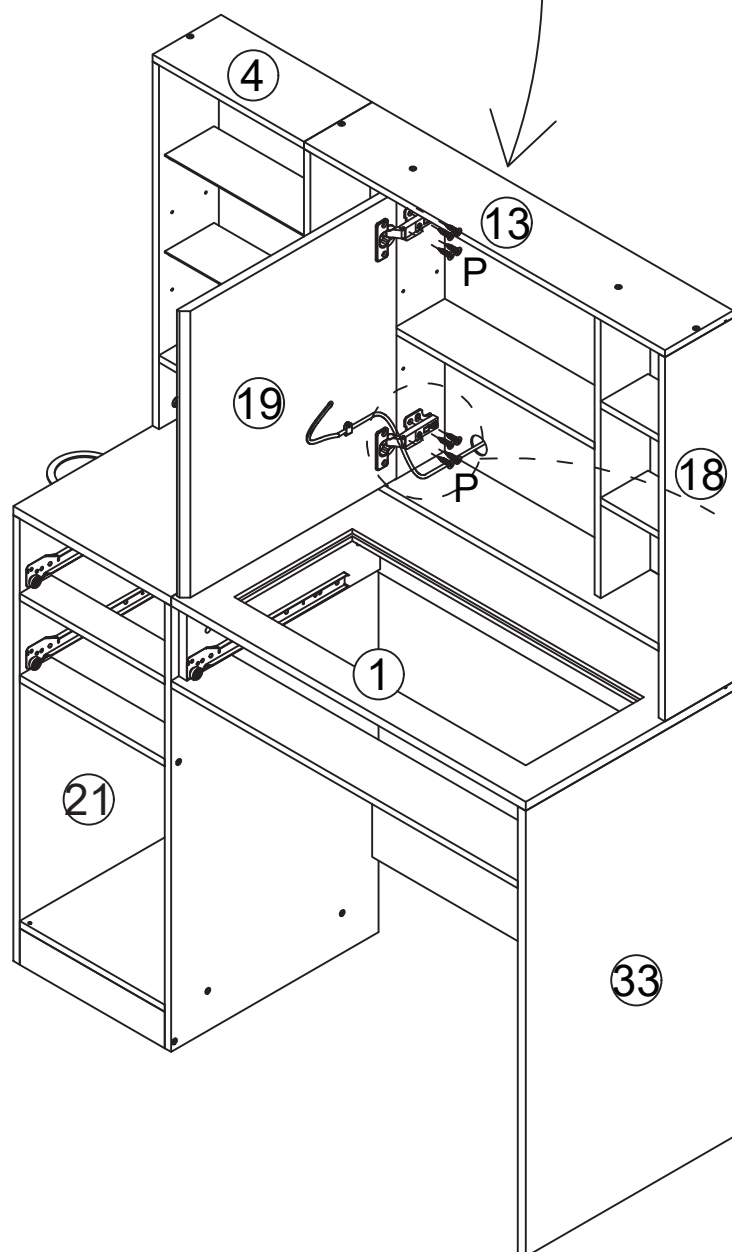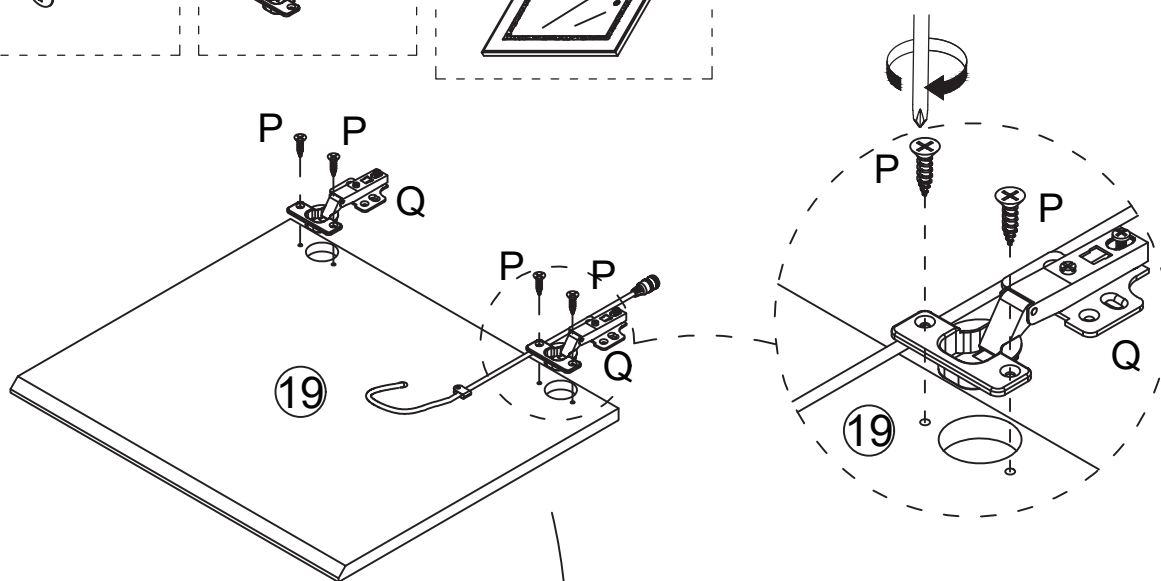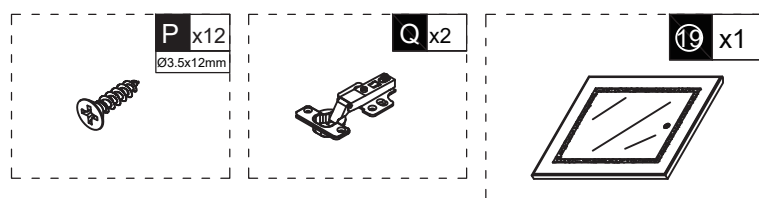

V x1

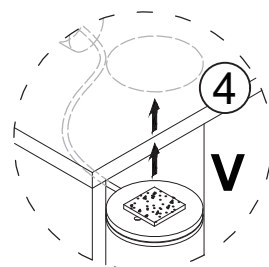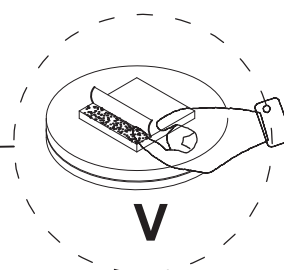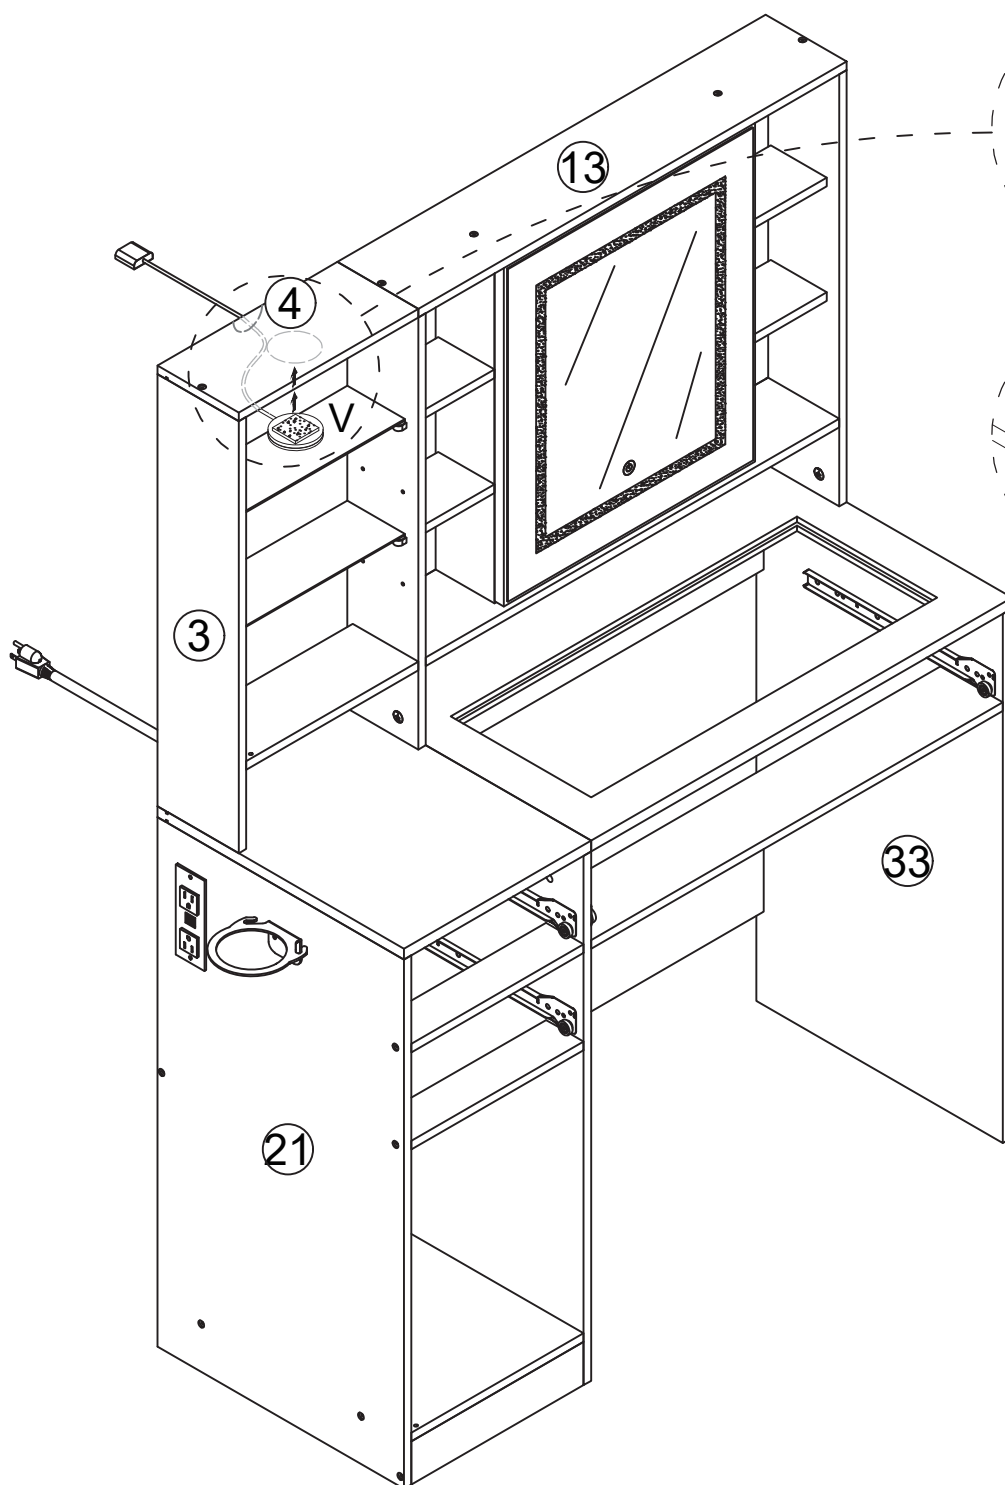


H x26





N x2



O x2

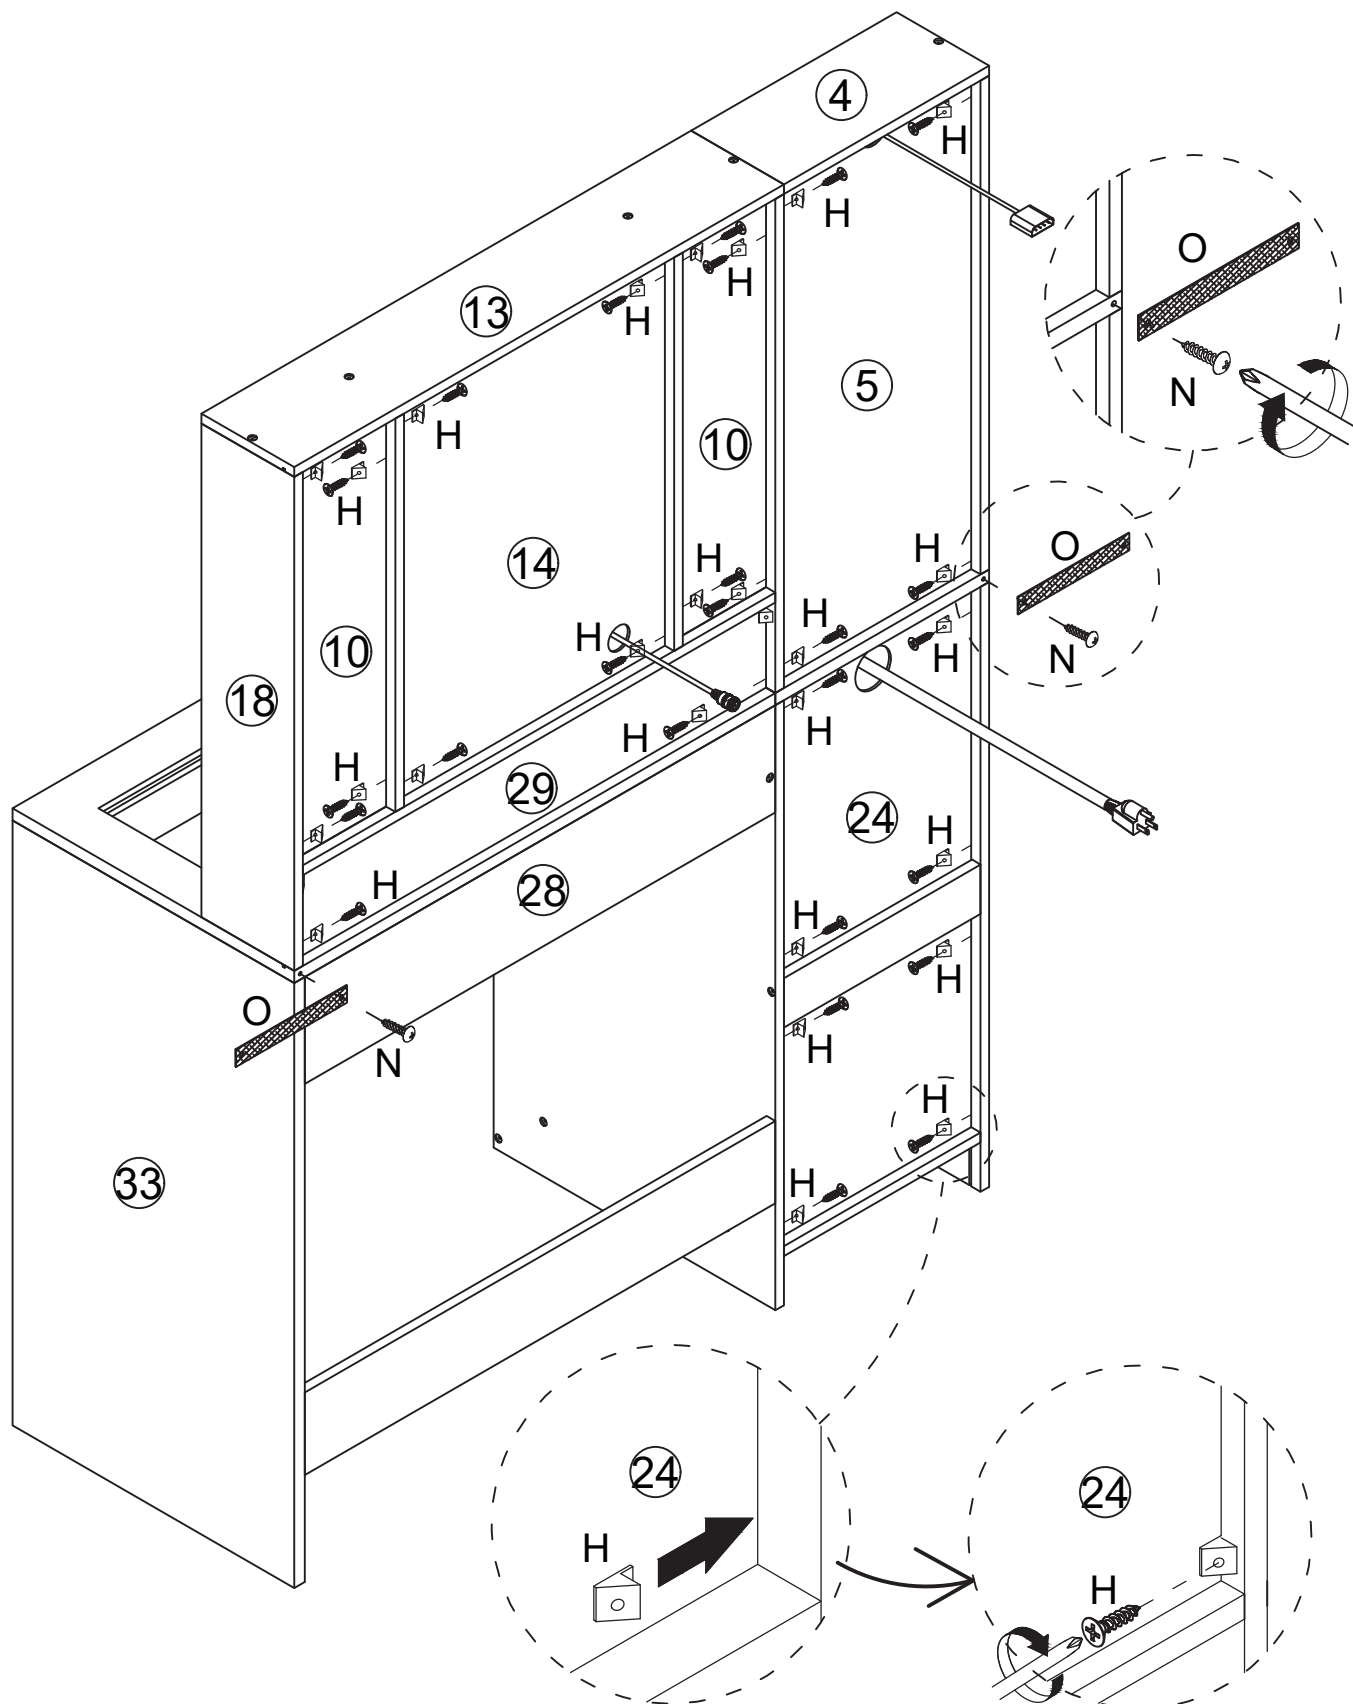

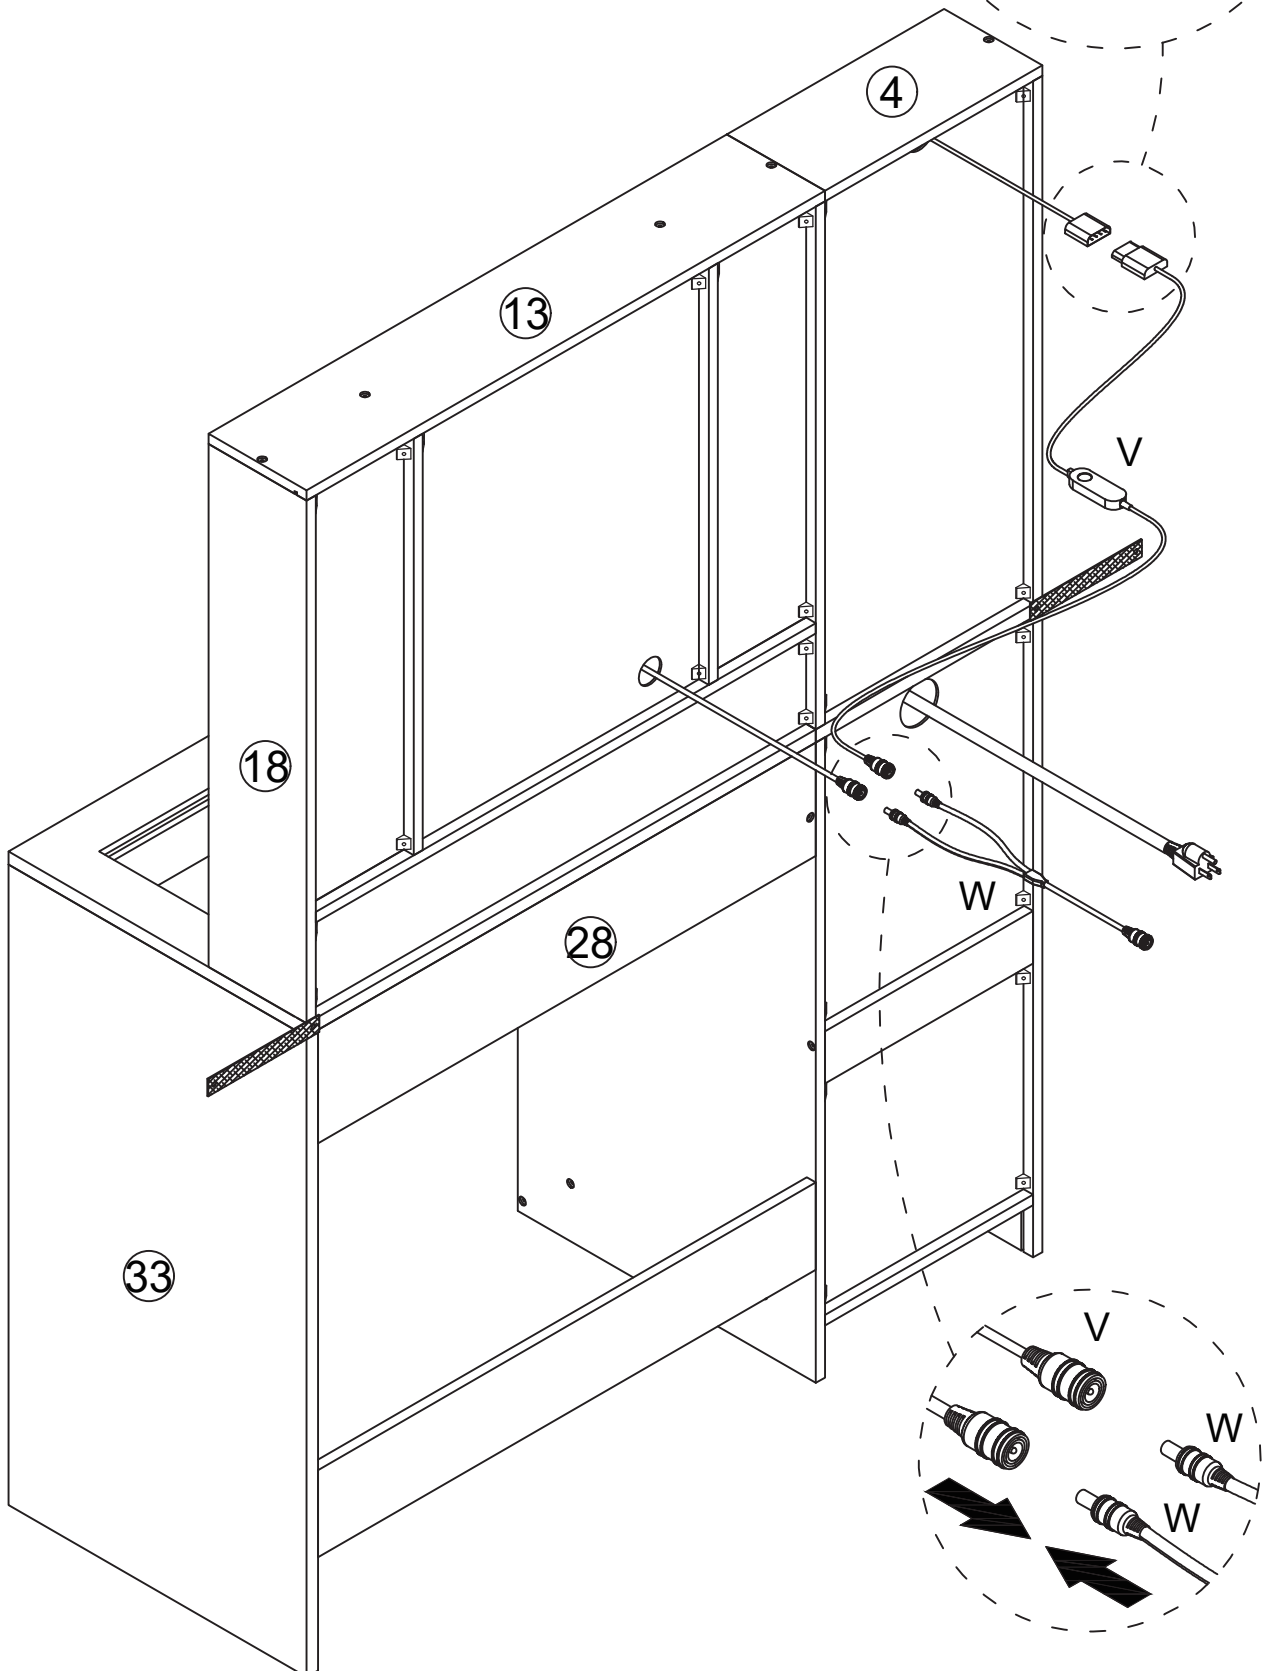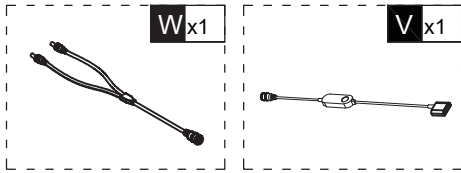

F x2




U x4









Z x2





⑧ x1










27 x1

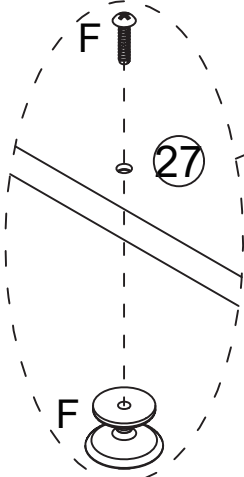
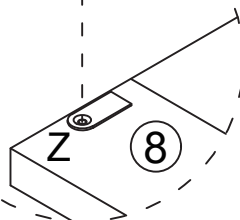
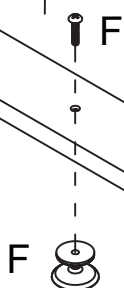

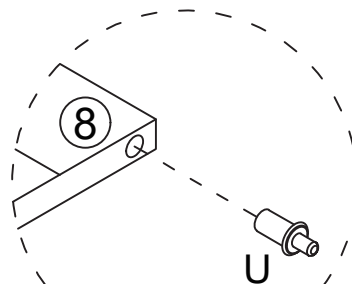



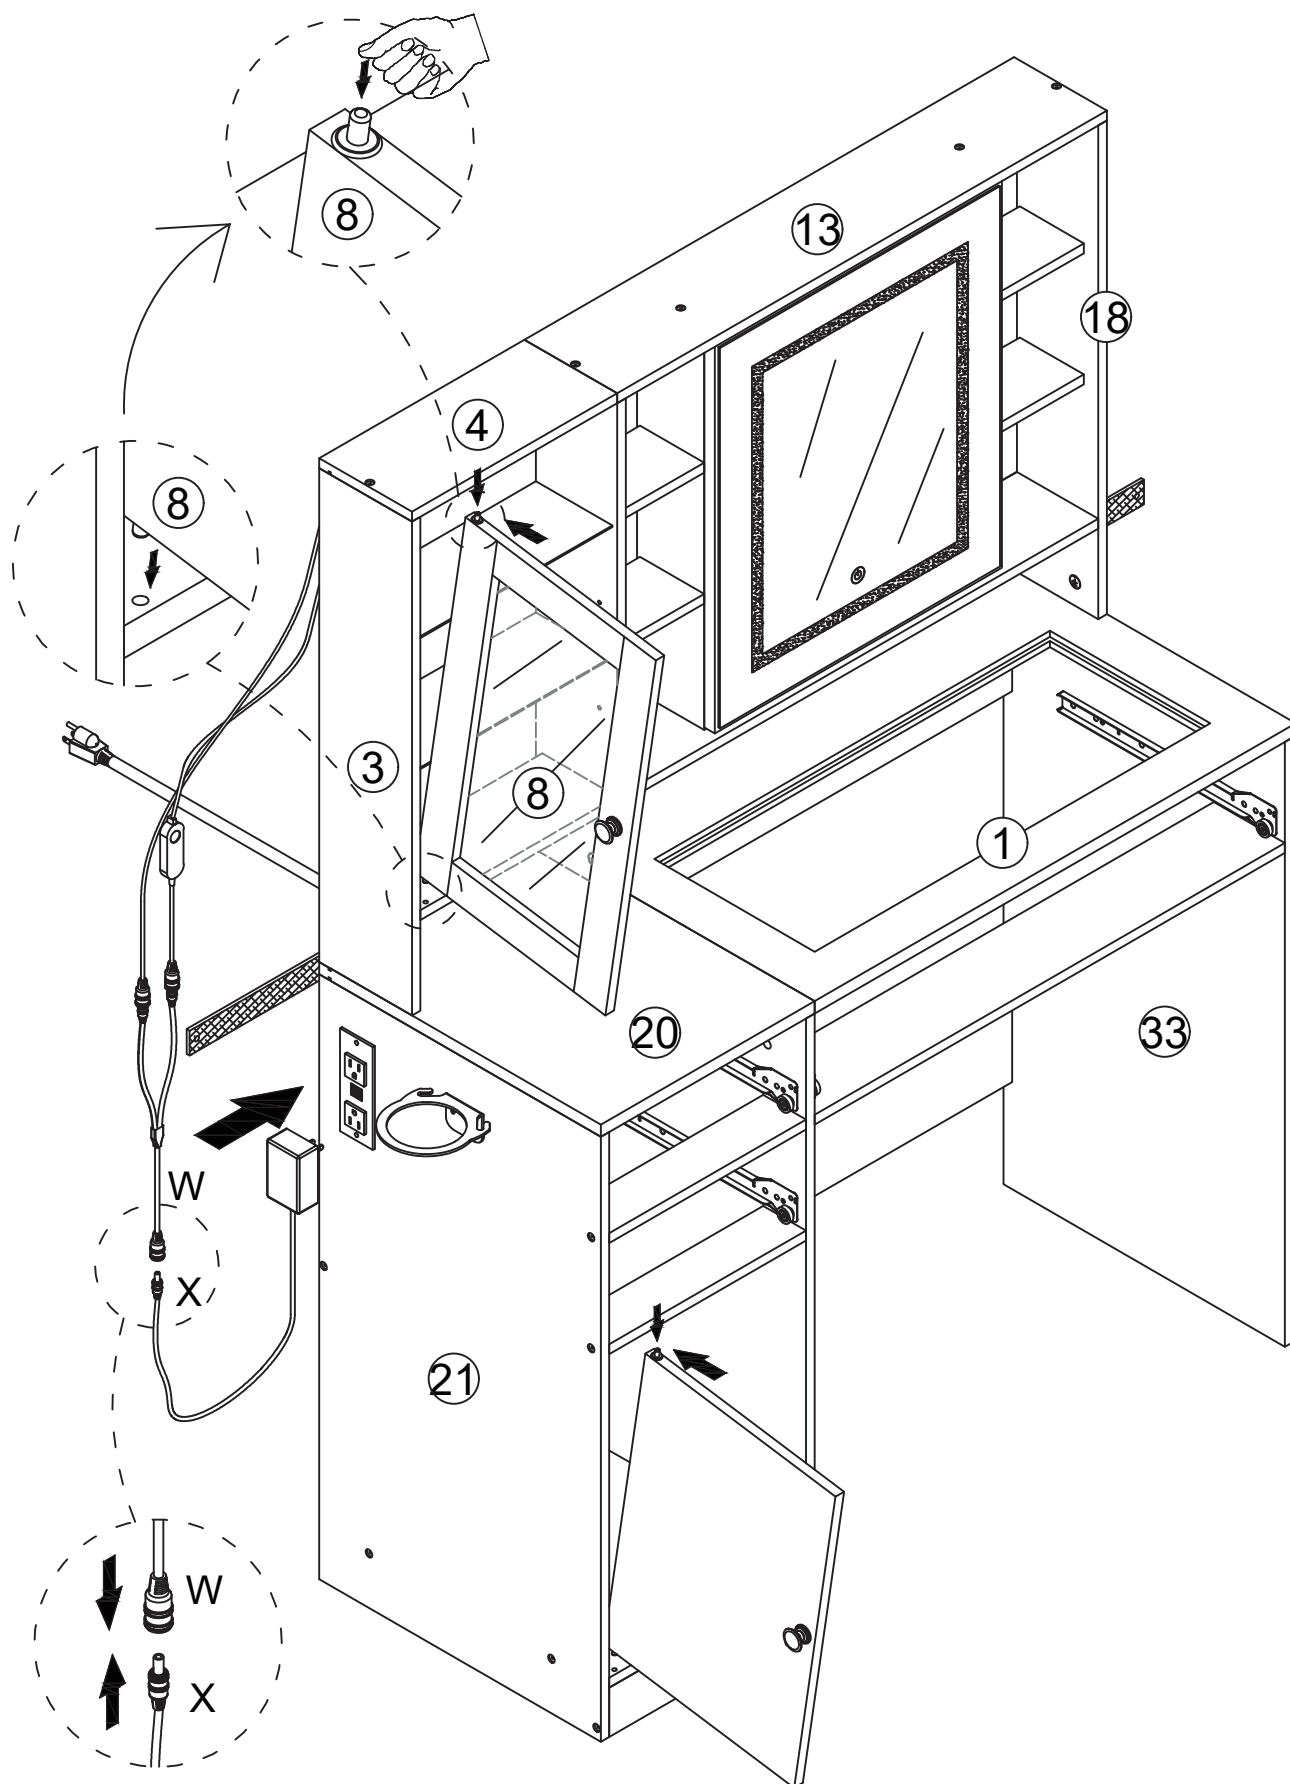




DD x1



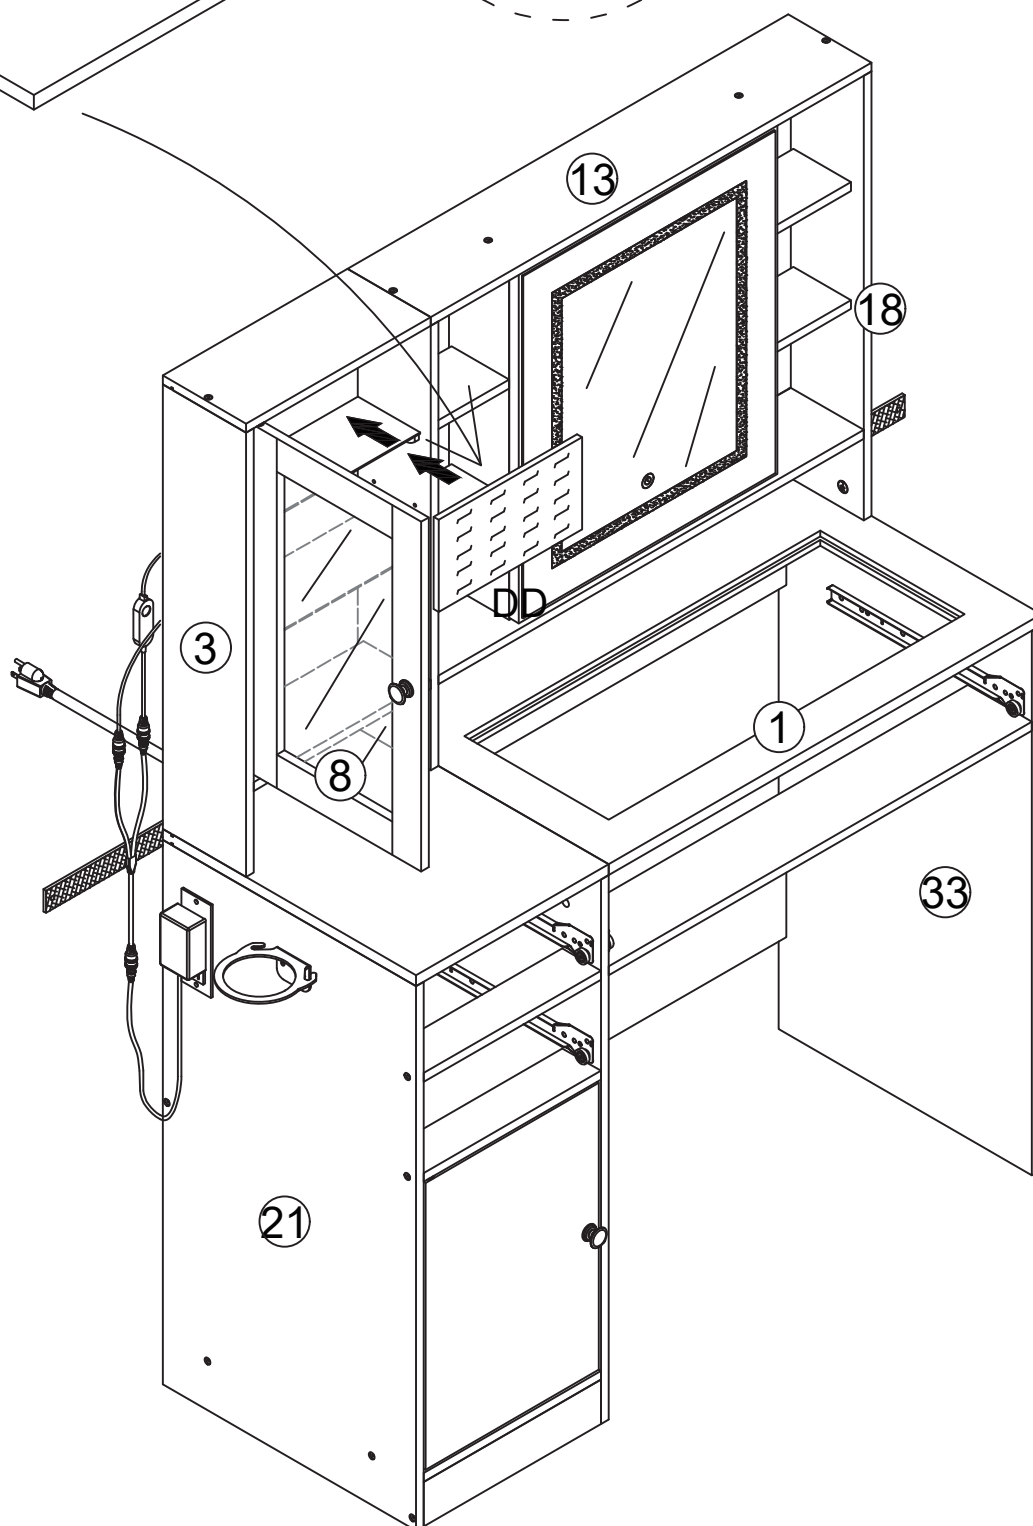
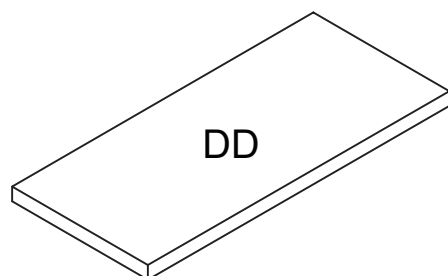
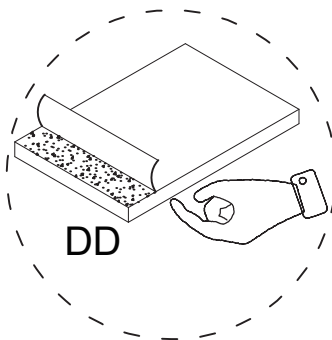




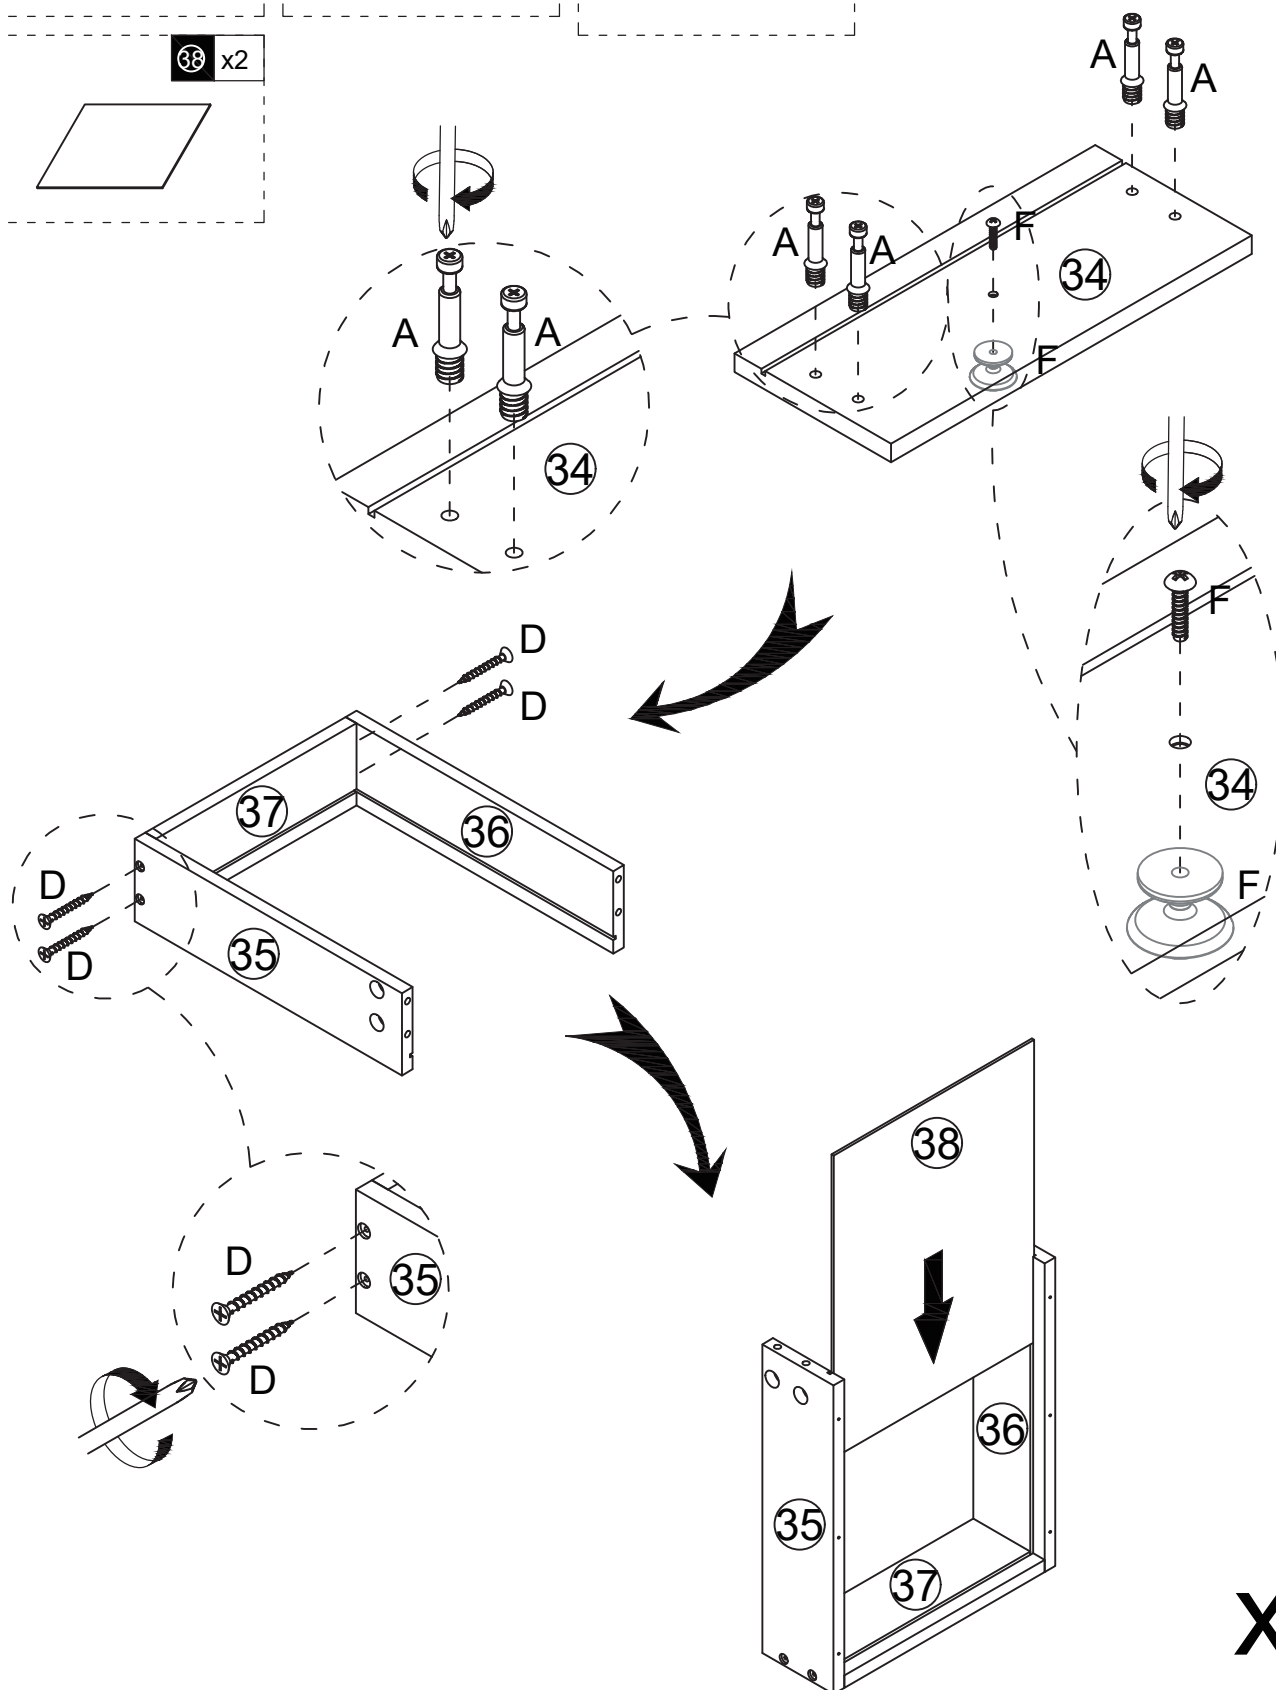
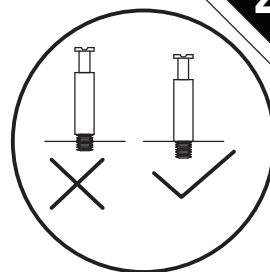
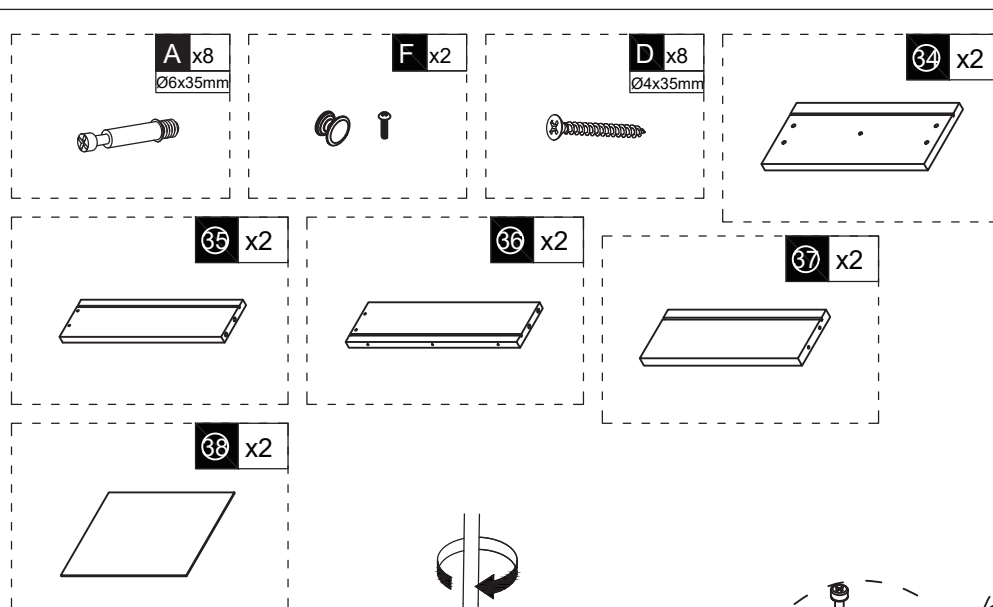


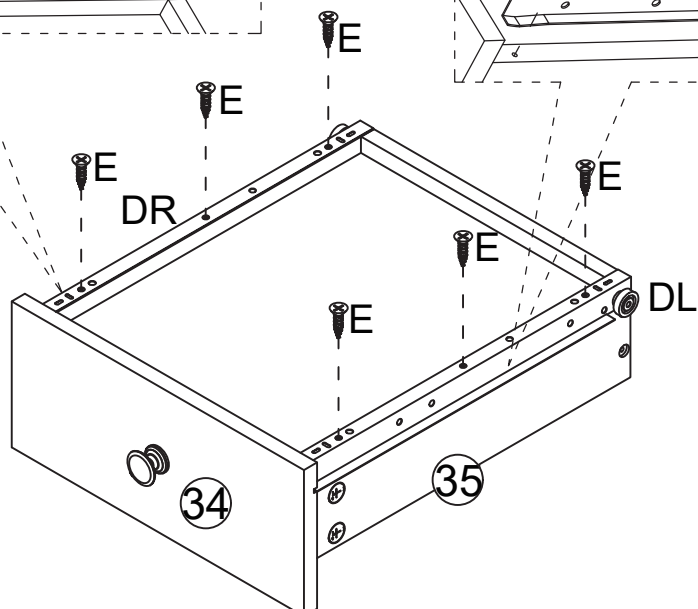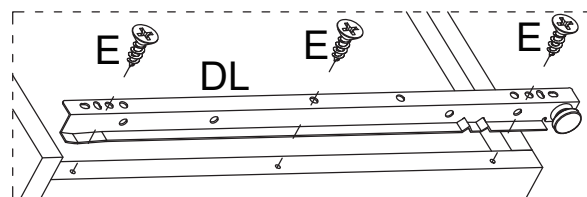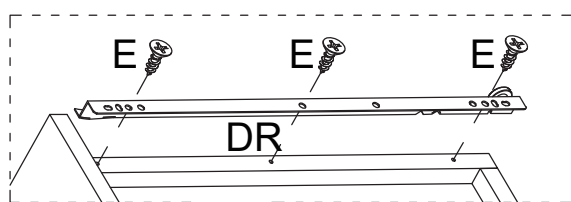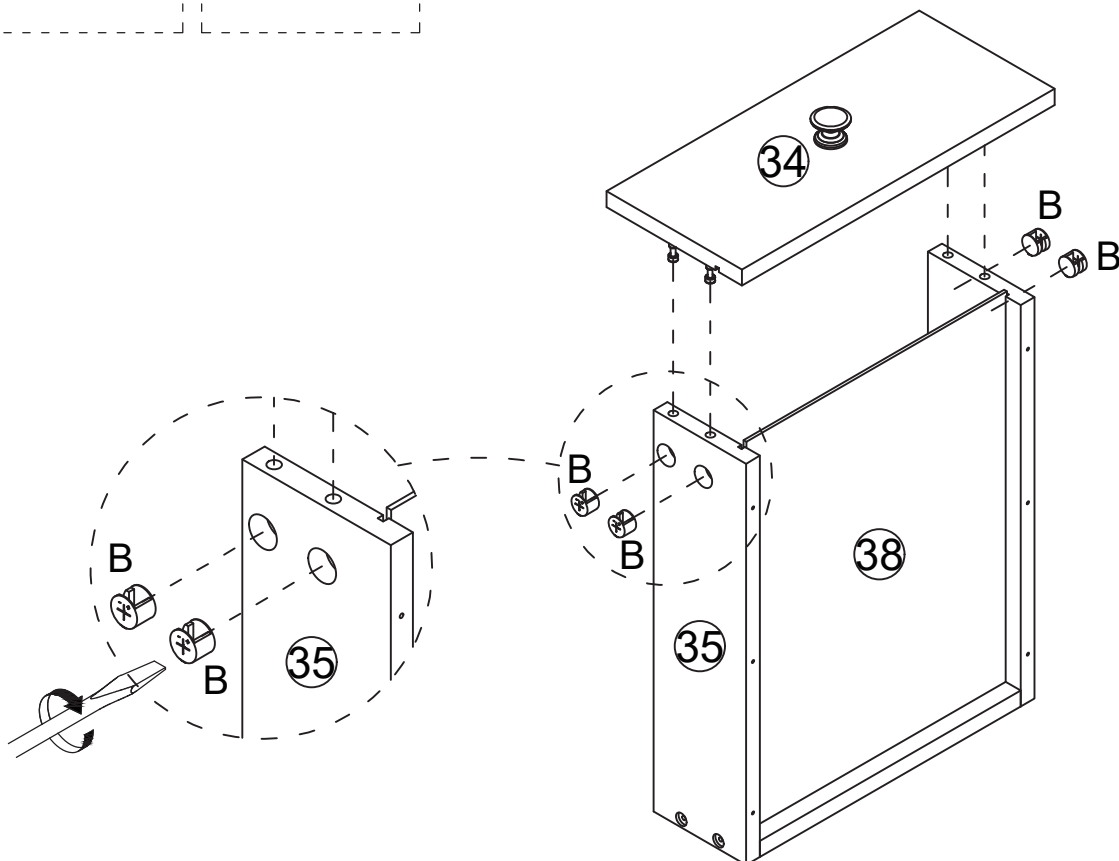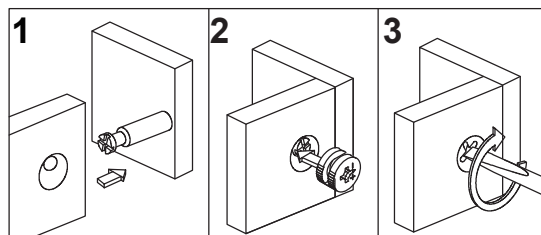
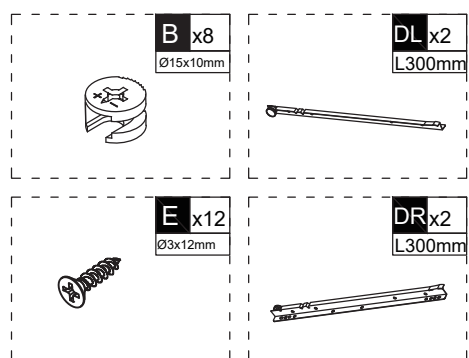


x2

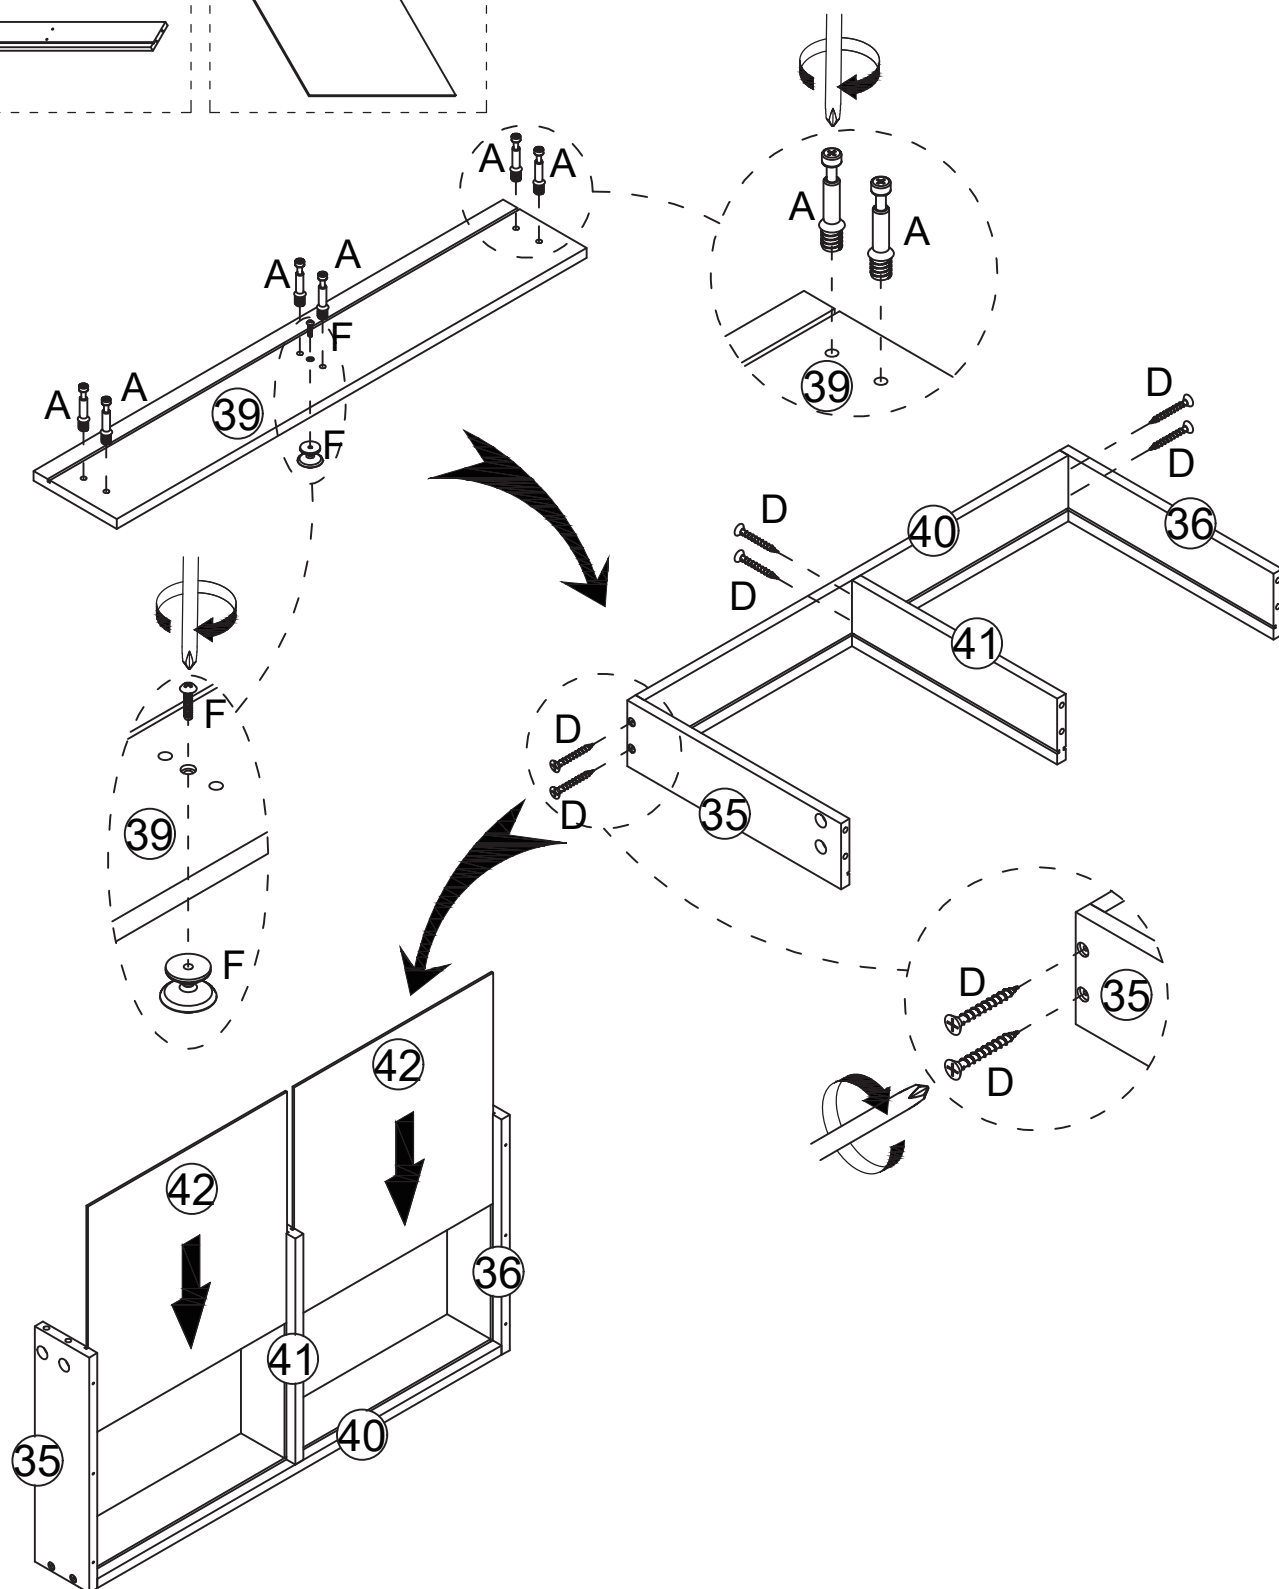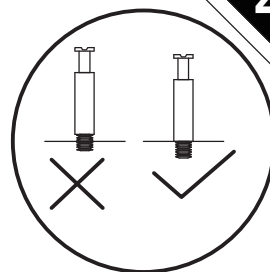
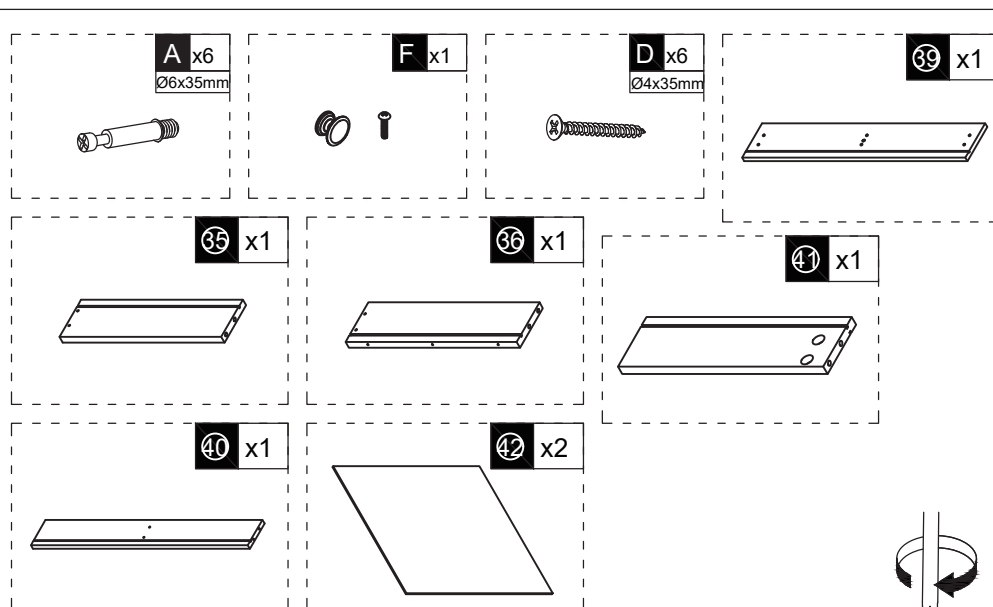


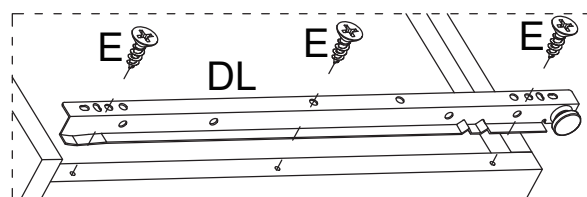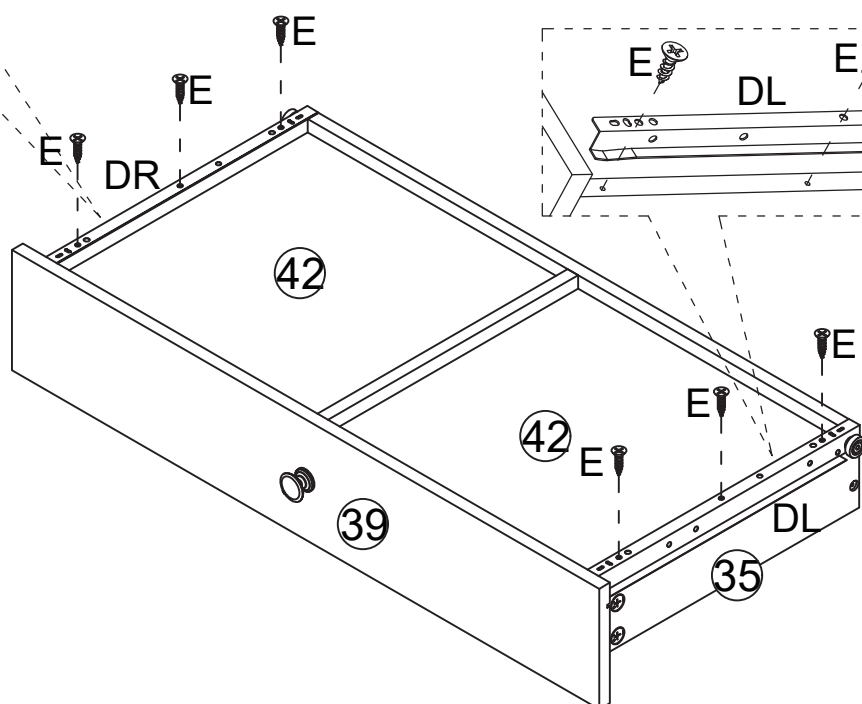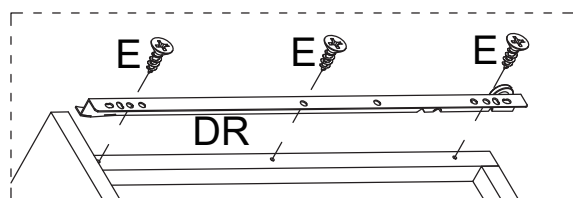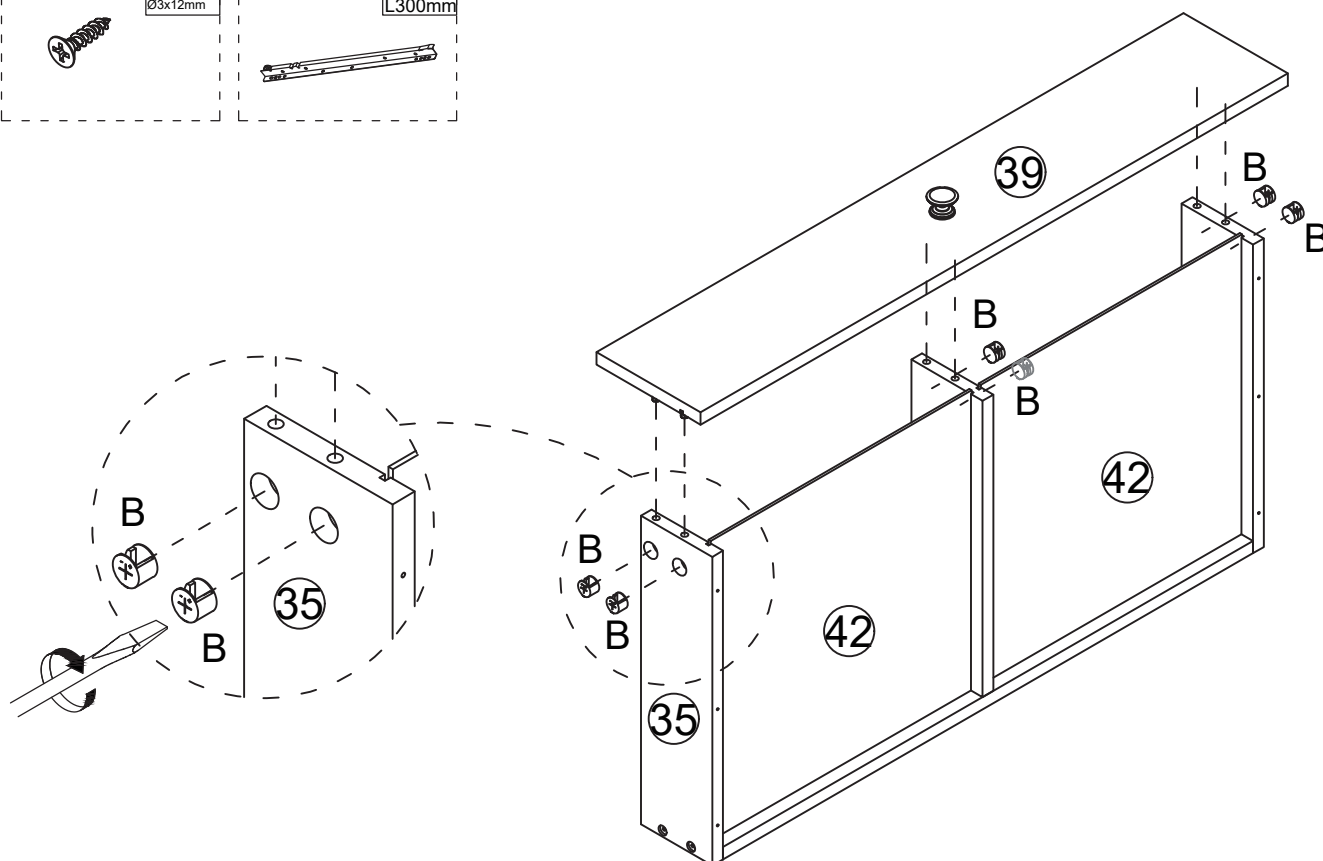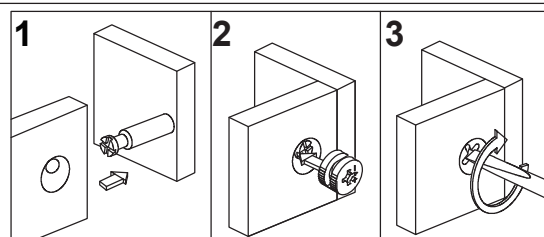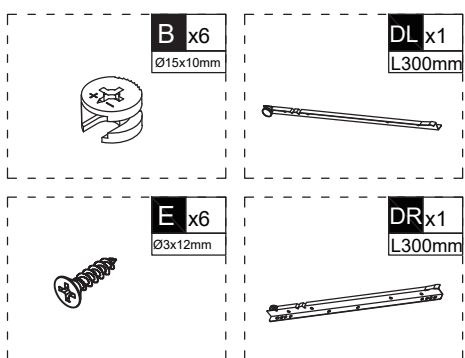

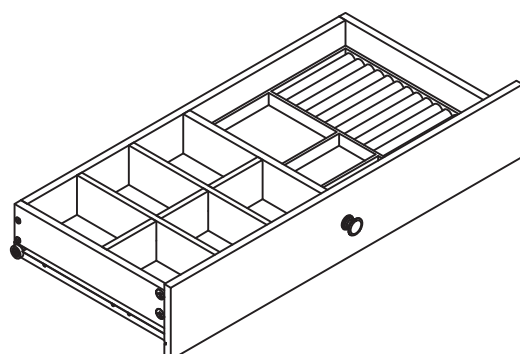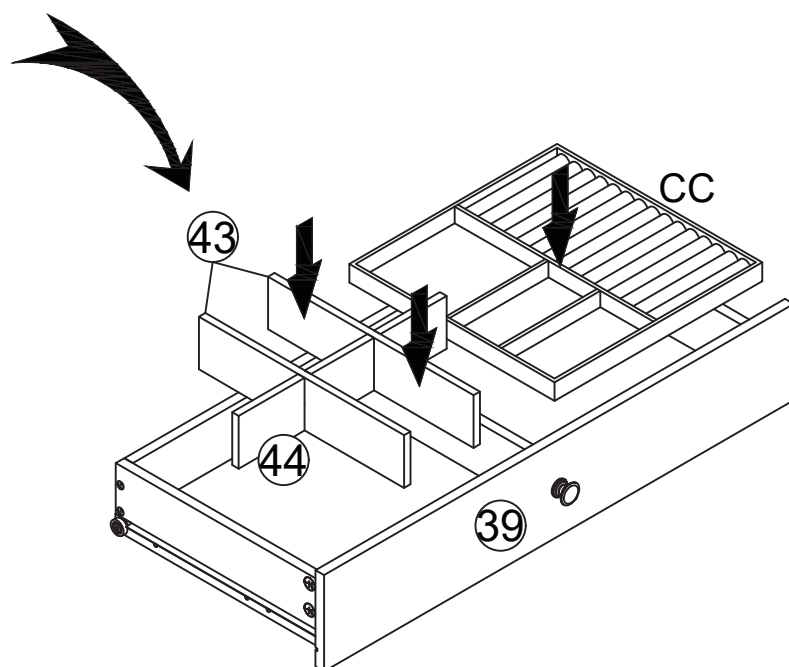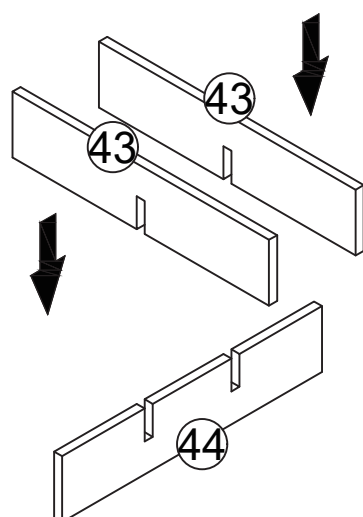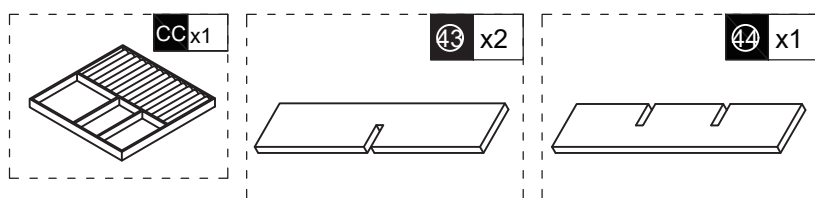

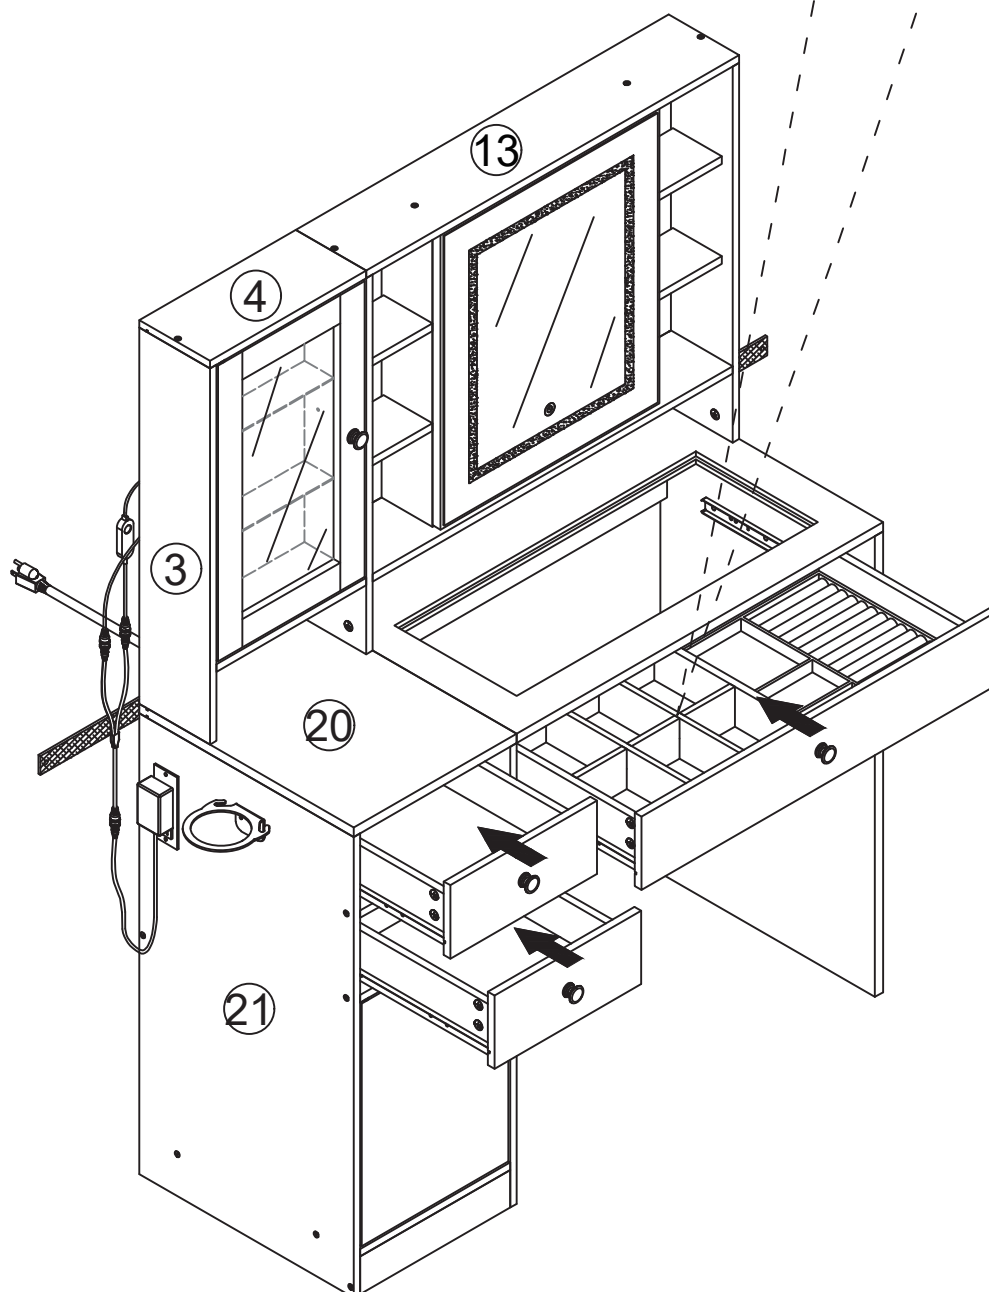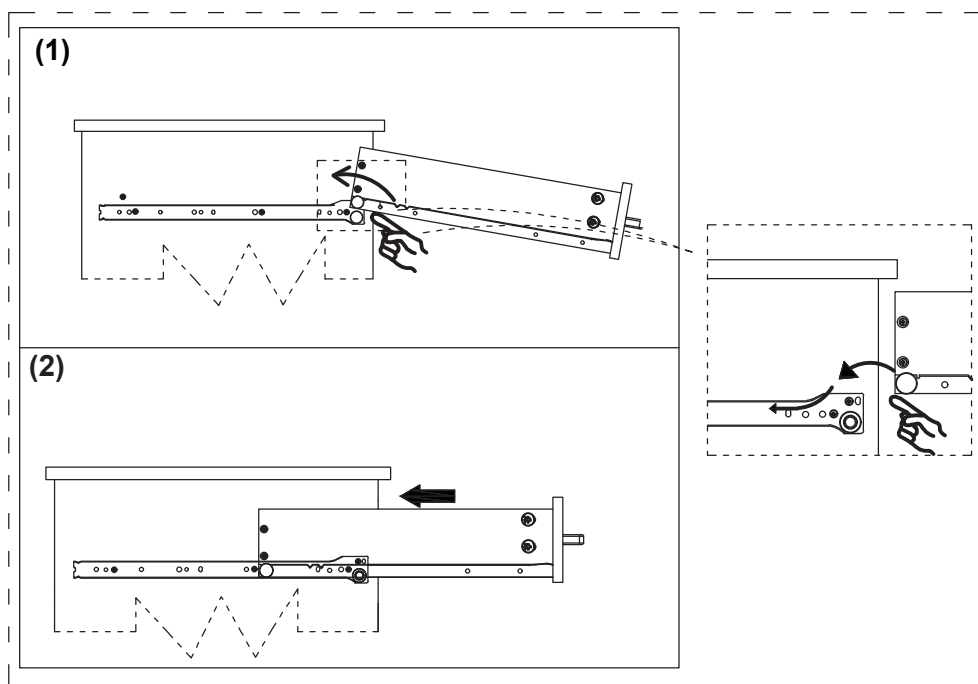


② x1

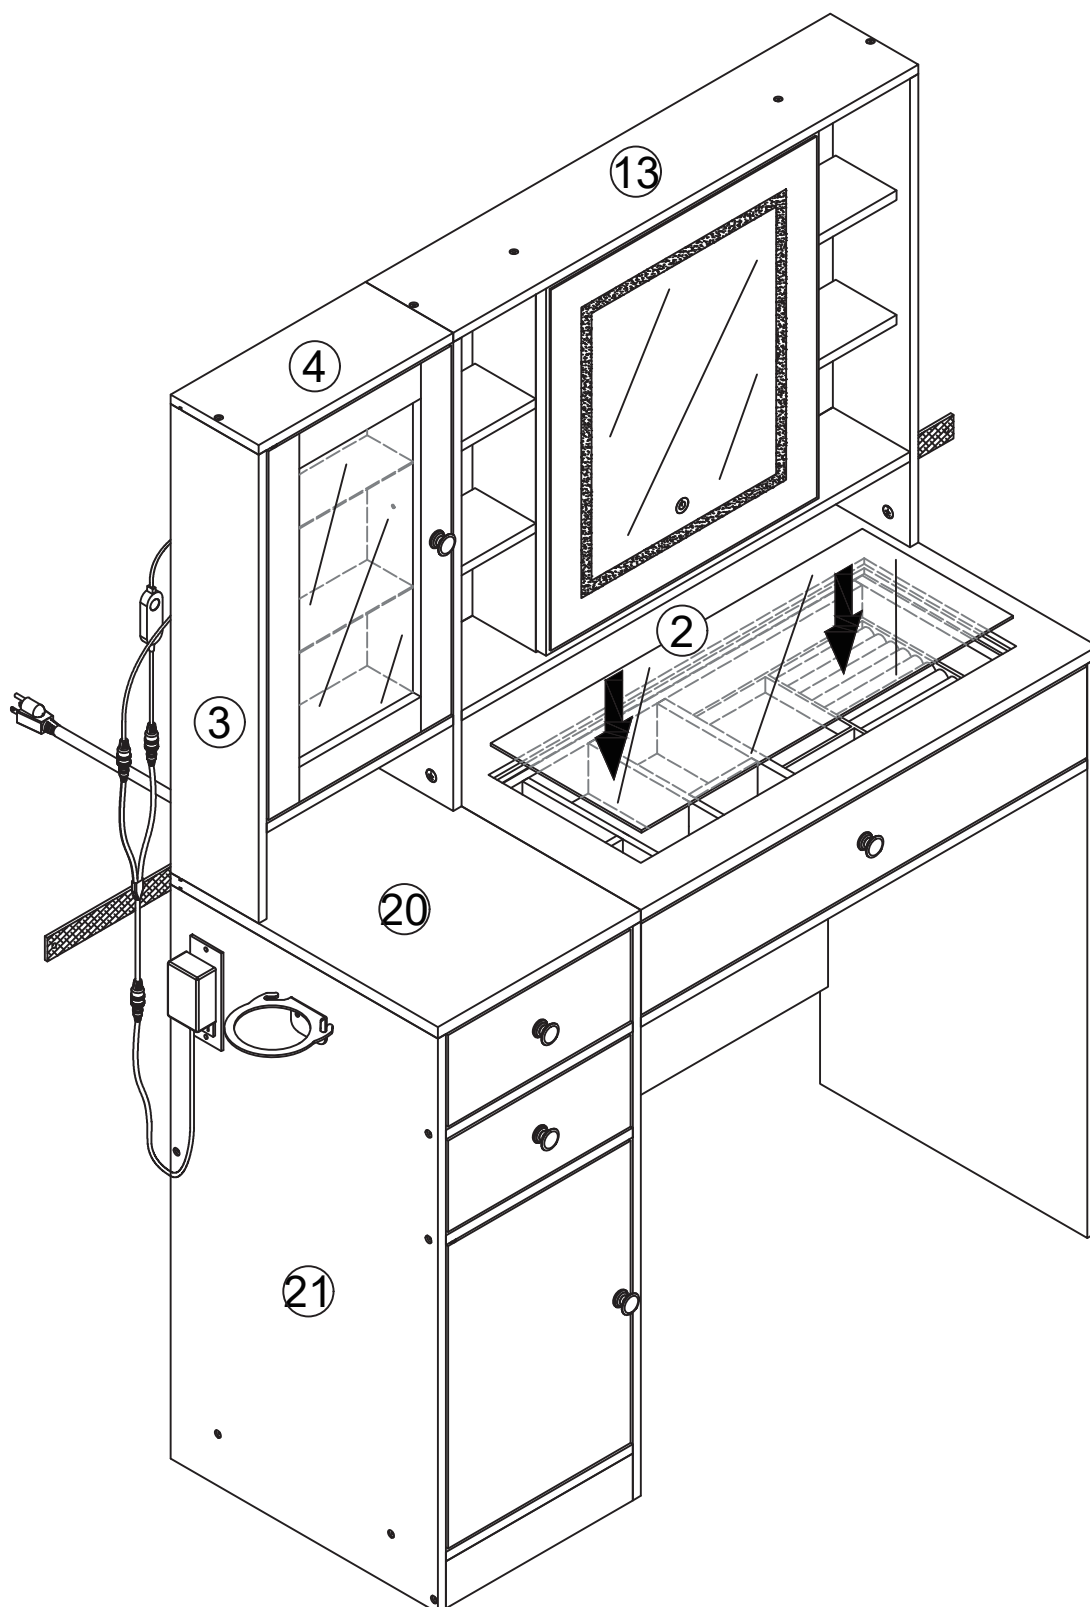

D x2
Ø4x35mmM x2
Ø6x30mm

WALL

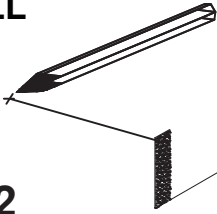


I x2

WALL


drilling hole
Ø6x30mm

II x2


WALL

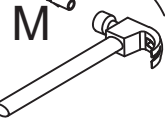

III x2

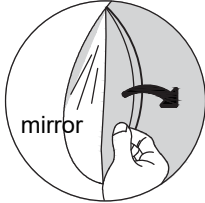


Please tear off the film on
the outside of the mirror.

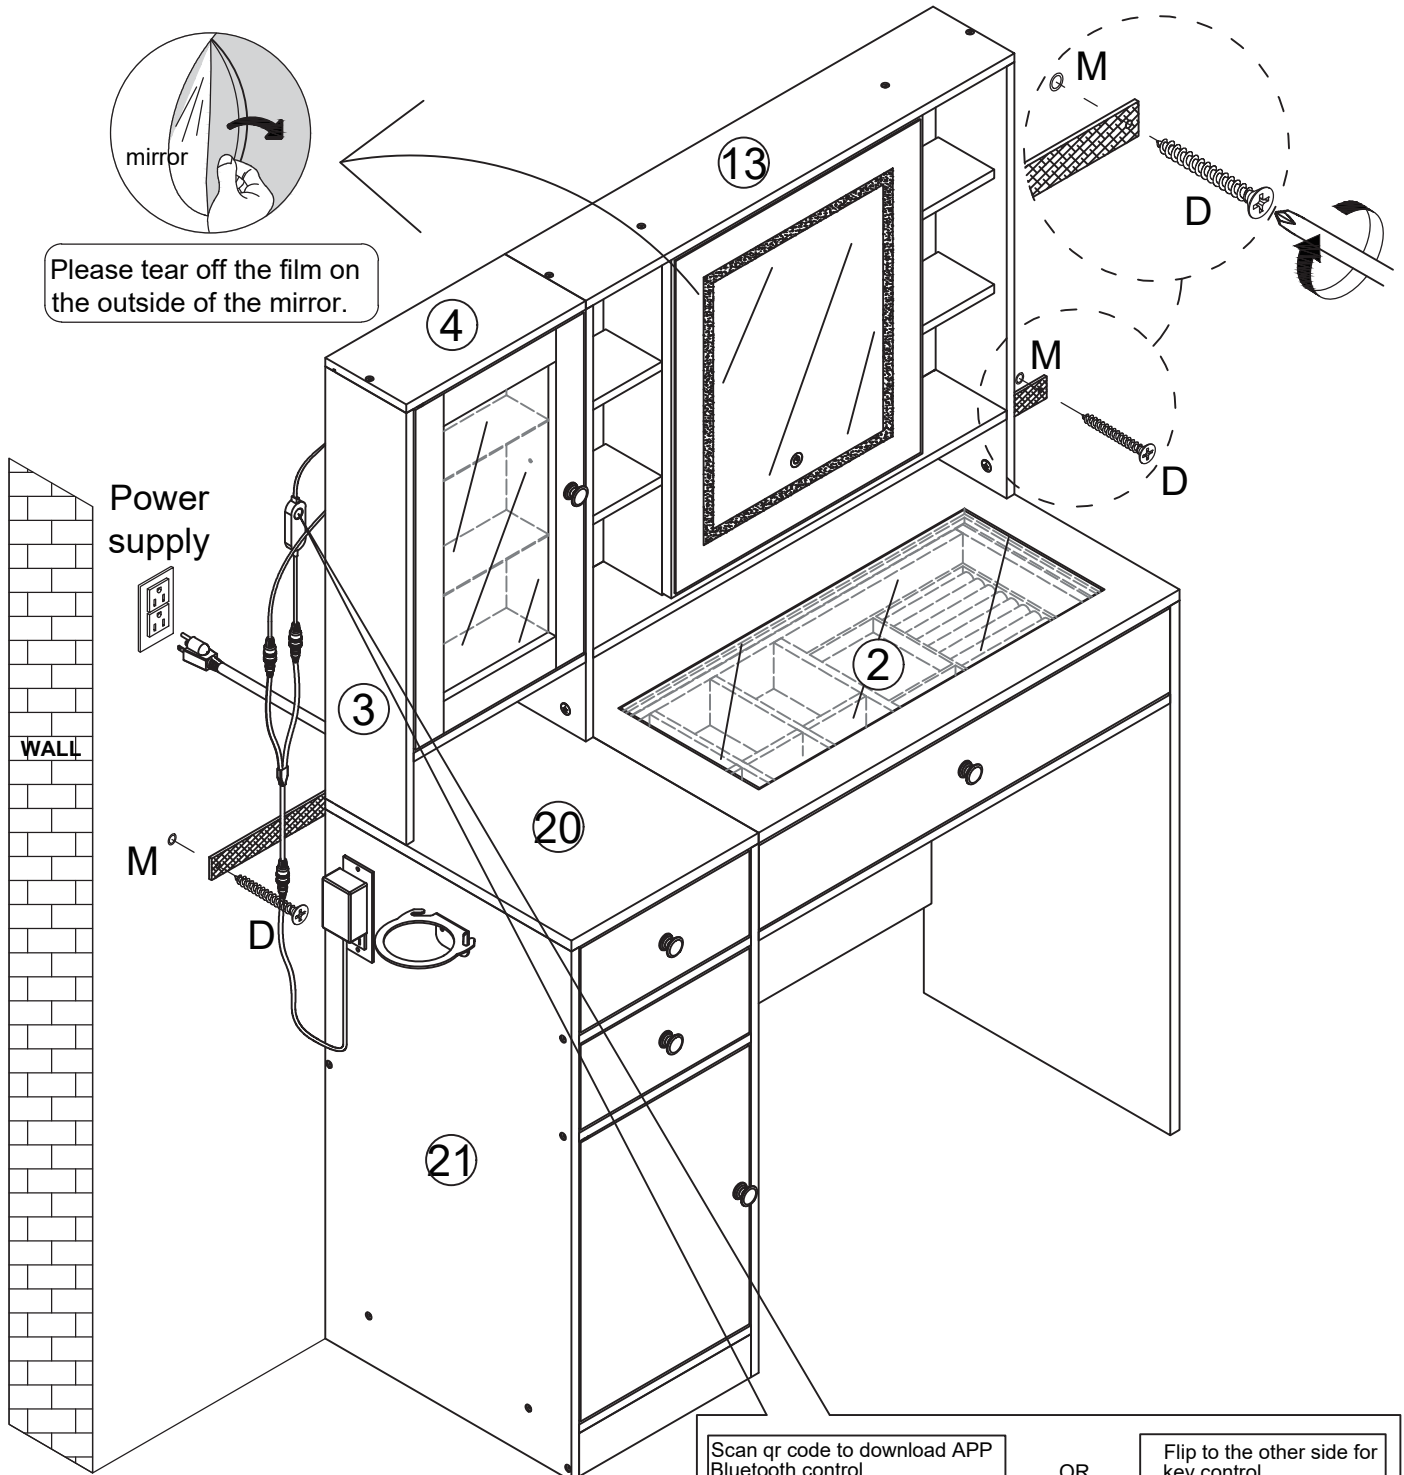

Scan qr code to download APP
Bluetooth control

OR

Flip to the other side for
key control



L x26

