

Assembly Instructions


High Back Office Chair



A (1 pc)



B (1 pc)



C (1 pc)



D (1 pc)



E (1 pc)



F (1 pc)



G (2 pcs)



H (4 pcs)



I (2 pcs)

M8 x 14mm 1/4" x 5/8"



J (4 pcs)
M8 x 40mm



K (4 pcs)










L (1 pc)
5mm



M (1 pc)
4mm

IMPORTANT NOTE:

Parts H are screwed into the underside of part B. Remove screws and washers from frame and then use to attach to part C, as shown in step 1.

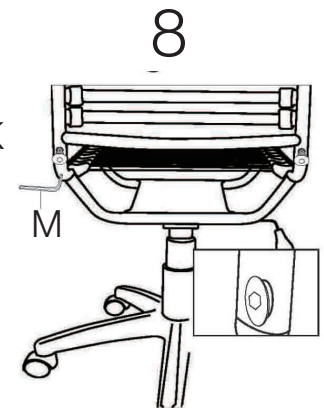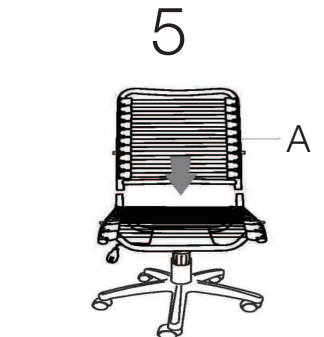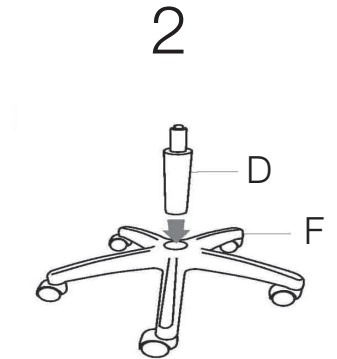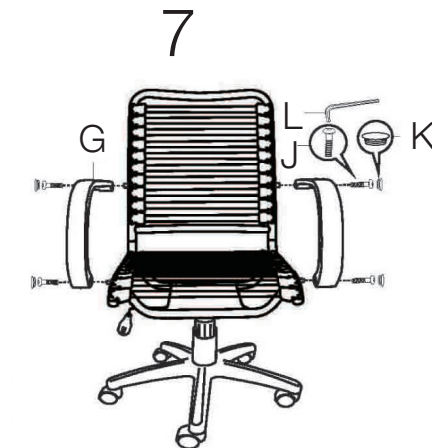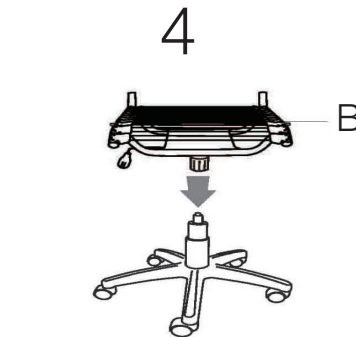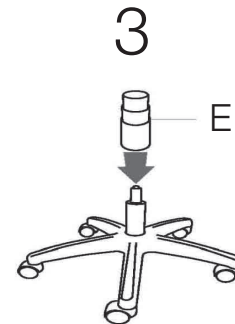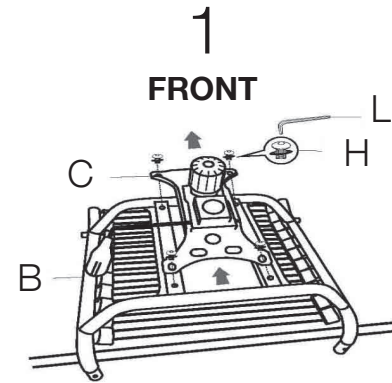

PLEASE NOTE: Check that you have received all components and hardware before assembling.

During assembly, hand tighten screws only. When the screws are in place, tighten completely.