
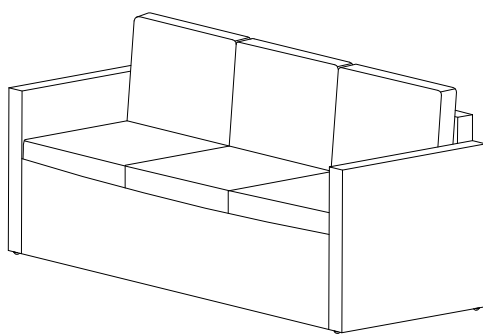

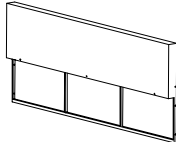






Outdoor Wicker Sofa






PART LIST

A		B		C		D		E	
Arm Panel 2 PCS		Back Panel 1 PC		Seat Panel 1 PC		Lower Front 1 PC		Cover of Seat Cushion * 3 PCS	
F		G		H		*Please note cushion covers will ship separately.			
Core of Seat Cushion 3 PCS		Cover of Back Cushion * 3 PCS		Core of Back Cushion 3 PCS					

HARDWARE LIST


#1	#2	#3	#4	#5
				
M6*25mm	M6*40mm	M6*50mm	M6mm	M6mm
Short Bolt 3 PCS	Medium Bolt 4 PCS	Long Bolt 11 PCS	Nut 15 PCS	Washer 33 PCS
#6	#7	#8		
				
M6mm	M6mm			
Wrench 1 PC	Allen Key 1 PC	Adjustable Leveler 6 PCS		

EXTRA HARDWARE LIST

#1	 M6*30mm Short Bolt 1 PC	#2	 M6*40mm Medium Bo It 1 PC	#3	 M6*50mm Long Bo It 3 PCS	#4	 M6mm Nut 3 PCS	#5	 M6mm Washer 3 PCS
#8	 M6mm Adjustable Leveler 2 PCS								


Step 1. Lay arm panel (part A) down on a soft flat surface, such as carpet, as shown below. Attach back panel (part B) to arm panel (part A) using medium bolts (part #2), washers (part #5), nuts (part #4), wrench (part #6) and allen key (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

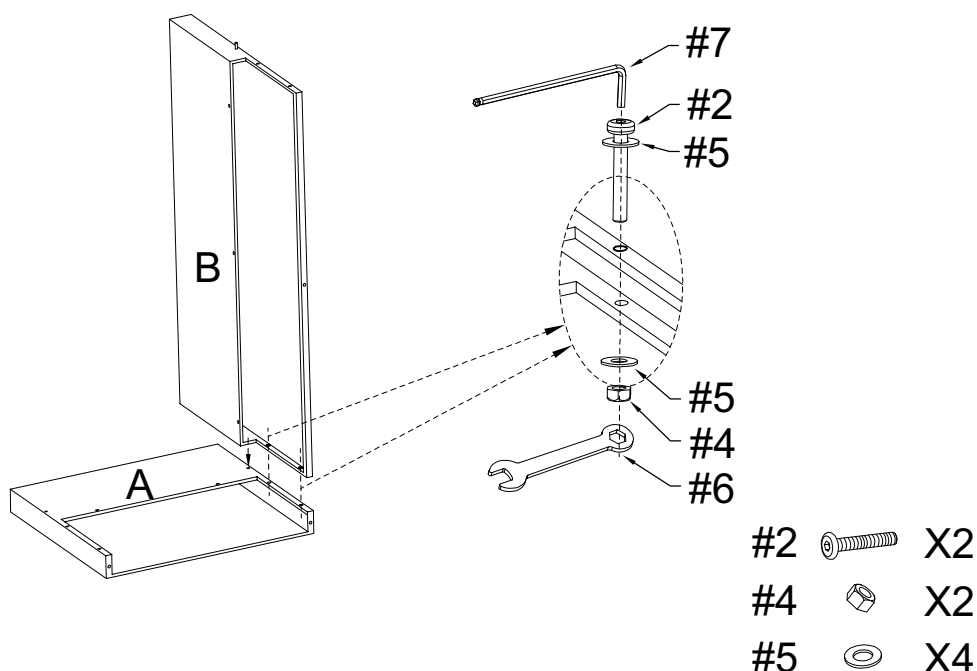


Step 2. Attach seat panel (part C) to arm panel (part A) and back panel (part B) using long bolts (part #3), washers (part #5), nuts (part #4), wrench (part #6) and allen key (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

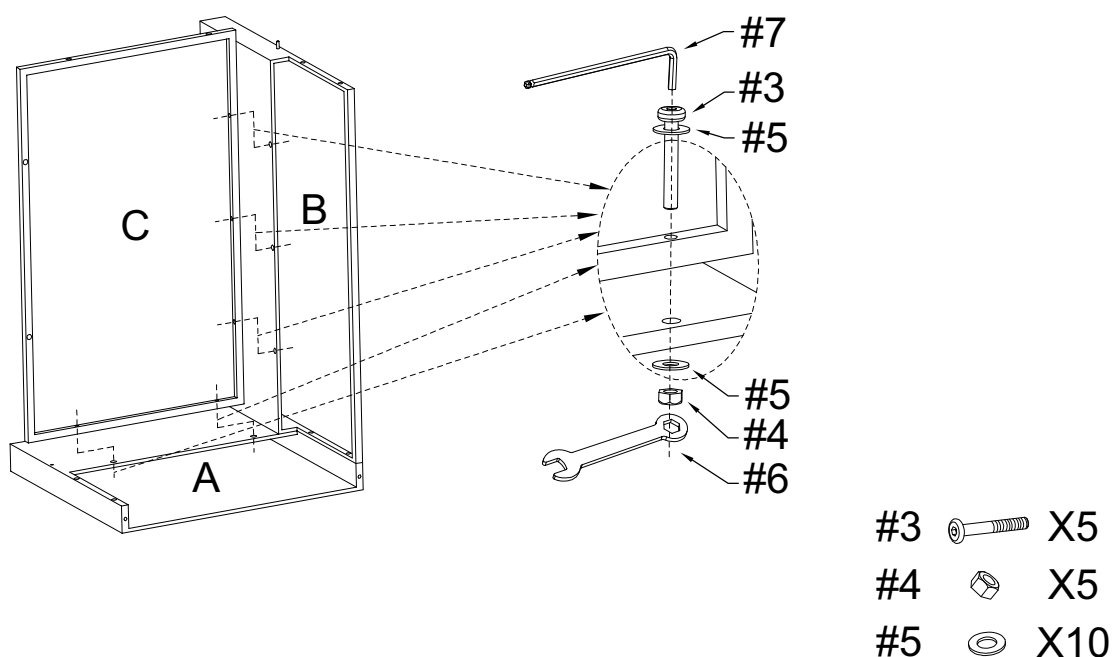


Step 3. Attach lower front (part D) to arm panel (part A) and seat panel (part C) using short bolts (part #1), long bolts (part #3), washers (part #5), nuts (part #4), wrench (part #6) and allen key (part #7).

NOTE: Please do not fully tighten bolts until unit is fully assembled.

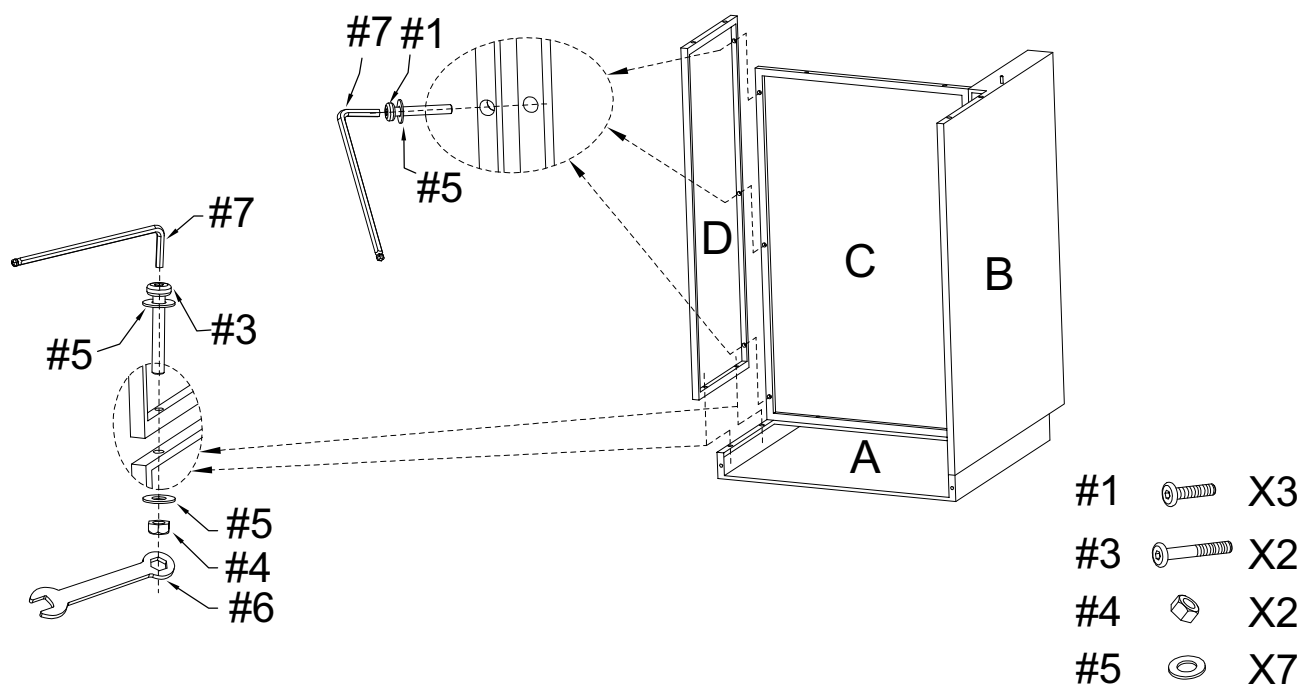


Step 4. Attach arm panel (part A) to assembled unit (parts A,B,C&D) using medium bolts (part #2), long bolts (part #3), washers (part #5), nuts (part #4) wrench (part #6) and allen key (part #7) as shown.

NOTE: Please fully tighten all bolts at this time.

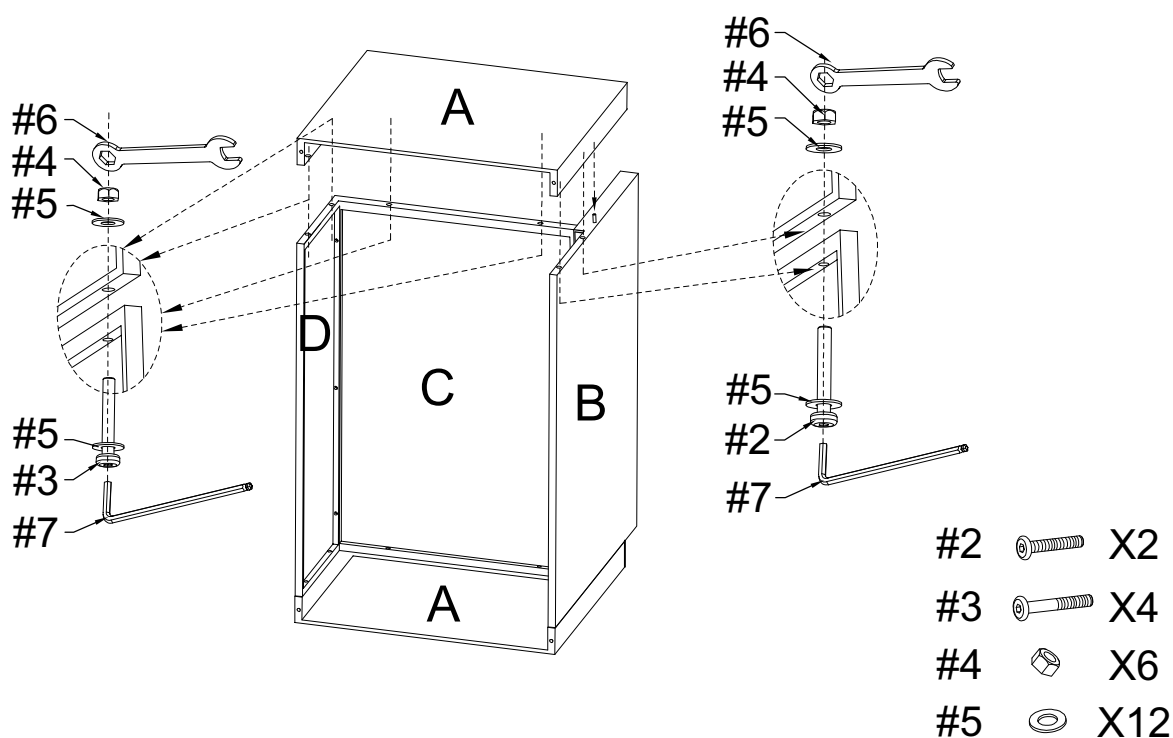


Step 5. Screw adjustable levelers (part #8) to desired position in the pre-drilled holes on the bottom of the sofa where shown.

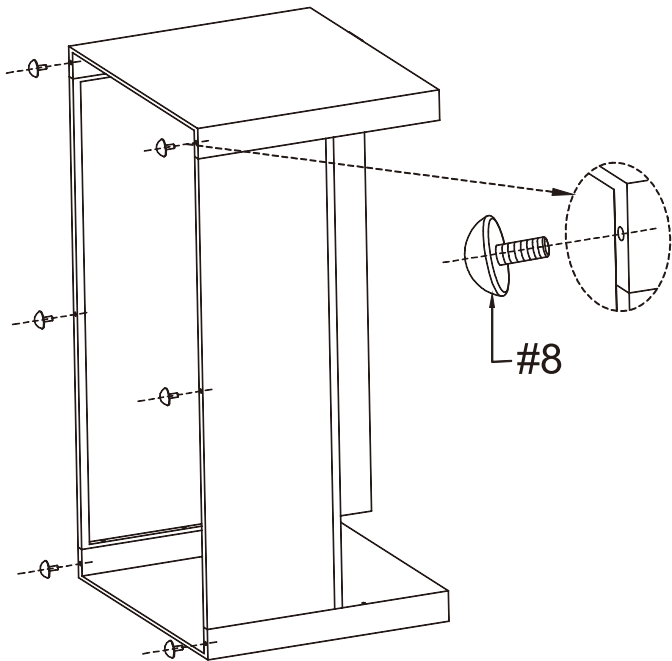

#8  X6

Step 6. Insert core of seat cushion (part F) into cover of seat cushion (part E).
Insert core of back cushion (part H) into cover of back cushion (part G).

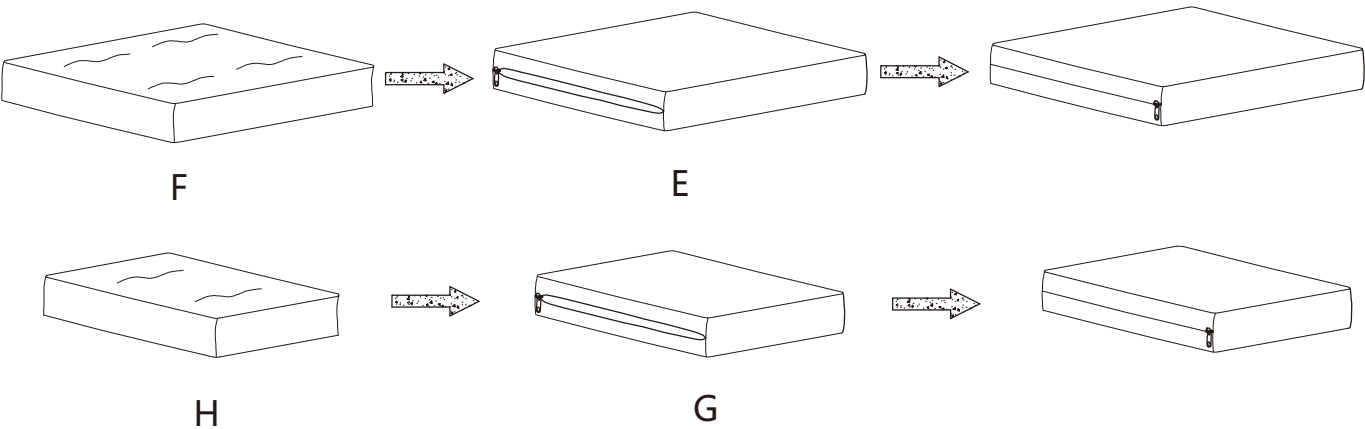

Step 7. Carefully turn the assembled sofa upright and add cushions as shown below.

