

Item # : LCMLBAWHAG26 / LCMLBAWHPB26 Melindra 26" Swivel Barstool LCMLBAWHAG30 / LCMLBAWHPB30 Melindra 30" Swivel Barstool

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment . Please identify and count all parts and compare with the HARDWARE LIST below.

Caution : Please read instructions carefully before unpacking assembly parts. Sharp , exposed staples can cause injury , therefore , for your protection , please remove any exposed staples used in packing.

*** Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. ***

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process , and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolt until the assembly is completed.
3. Please put all parts on a smooth , flat surface before assembly , and carefully follow the assembly steps to assemble your newly purchased correctly and efficiently.




PARTS LIST			
NO.	COMPONENT		QTY.
A	Chair Back		1 pc
B	Seat Frame		1 pc
C	Upper Leg		1 pc
D	Lower Leg		1 pc
E	Footrest Ring		1 pc
F	Seat Cushion		1 pc

HARDWARE LIST			
NO.	COMPONENT		QTY.
1	JCBC Bolt M6 x 45mm		14 pcs
2	Spring Washer		14 pcs
3	Flat Washer		10 pcs
4	CB Screw M4 x 32mm		4 pcs
5	Allen Wrench		1 pc


* Phillips screwdriver not included *

Step 1

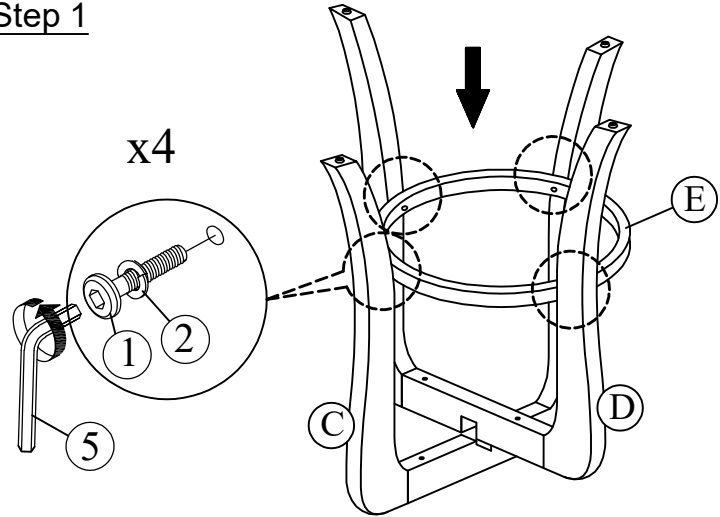


Do not fully tighten bolts from this step

- 1) Attach Lower Leg (D) across Upper Leg (C) to complete the half-lap joint.
- 2) Attach Footrest Ring (E) to the Legs by using 4pcs JCBC bolts (1) and 4pcs Spring Washers (2). Tighten all bolts using the provided Allen Wrench (5).

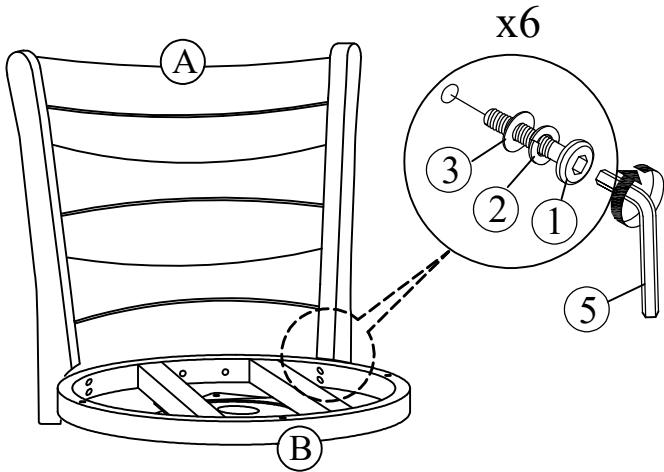


- 1) Attach Seat Frame (B) into the Chair Back (A) by using 6pcs JCBC bolts (1) , 6pcs spring washers (2) and 6pcs flat washers (3). Use Allen Wrench (5) to secure . Fully tighten all the bolt.

Step 3

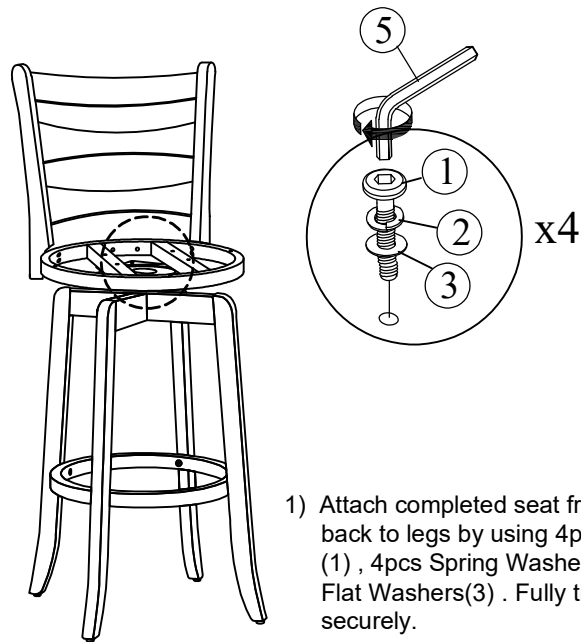

- 1) Attach completed seat frame and chair back to legs by using 4pcs JCBC bolts (1) , 4pcs Spring Washers (2) , 4pcs Flat Washers(3) . Fully tighten all bolts securely.


Step 4

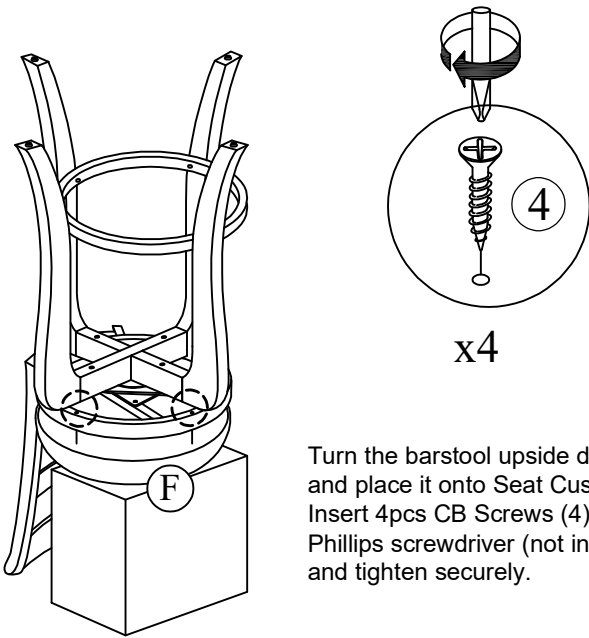

Turn the barstool upside down and place it onto Seat Cushion (F). Insert 4pcs CB Screws (4) with Phillips screwdriver (not included) and tighten securely.

Step 5

Adjustment Step

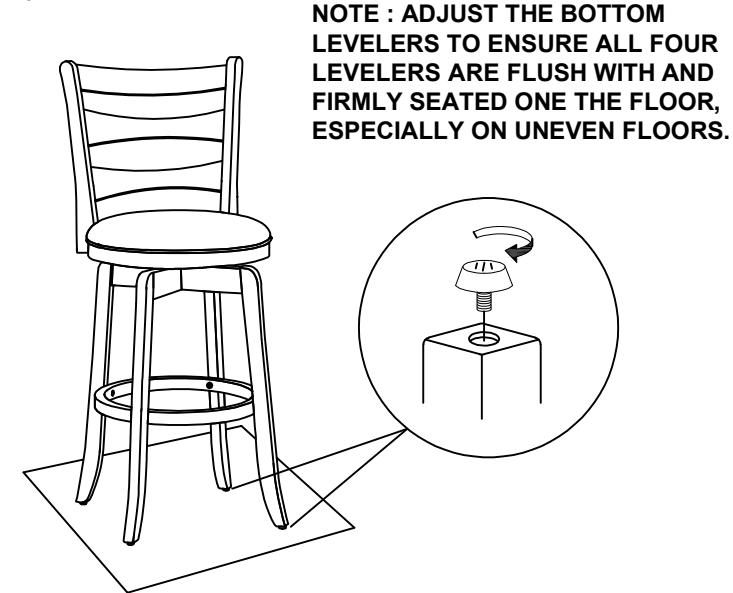

NOTE : ADJUST THE BOTTOM LEVELERS TO ENSURE ALL FOUR LEVELERS ARE FLUSH WITH AND FIRMLY SEATED ONE THE FLOOR, ESPECIALLY ON UNEVEN FLOORS.

