

印刷制作说明

(非印刷页)

SKU	SKU4/SKU5
叶子类目	侧遮阳棚
厂家型号	H088-1/H088-2
子 SKU	KSSCP180X600E4JC6001V0 KSSCP180X6009ZUKD001V0

技术要求:

- 1.内容正确，图文清晰，位置准确；
- 2.成品不准有破损、裂纹污迹等影响美观缺陷；
- 3.具体页数、尺寸、内容、字体、字号、按设计图纸；
- 4.A5 版面双面黑白印刷，80g 以上铜版纸或者双胶纸。
- 5.装订方式骑马订/折页或者胶装，。
- 6.打样确认后方可批量印制。



Upgrade · The Home Creator Way

SIDE AWNING

Model: H088-1/H088-2

VEVOR Support Center




H088-1



H088-2

MODEL: H088-1/H088-2

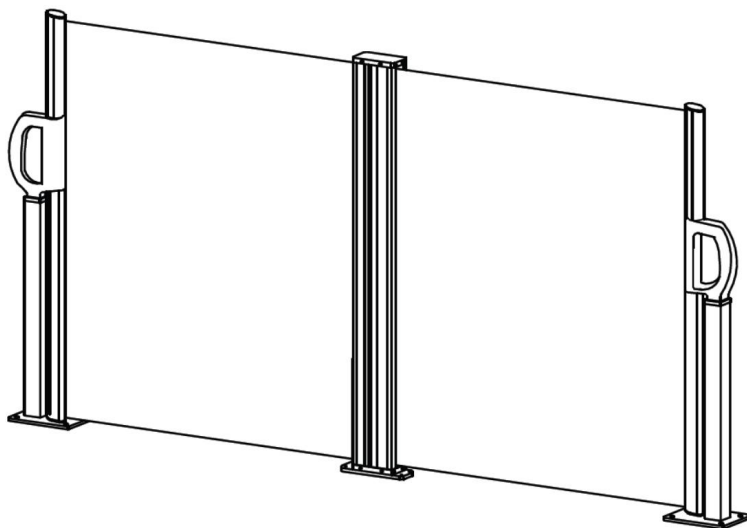

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

WARNING

⚠ Warning-To reduce the risk of injury, user must read instructions manual carefully.

⚠ The product complies with relevant standards and regulations.
Installation of this device must comply with all applicable regulations, and it should only be operated in well-ventilated areas. Please read the user manual before installing and using this equipment.

SAFETY INSTRUCTIONS


WARNING

1. Do not attempt to set up the Awning in serious windy condition.
2. Keep all flame and heat sources away from the Awning materials. Under no circumstance should any naked flame sources, fuel burning devices or heating devices be used under or near.
3. Keep a fire extinguisher or water bucket nearby.


NOTICE

1. Clean with cold water and a soft brush-do not use soap or detergent.
2. Do not expose to petrol, oil or solvents.
3. Avoid creases and seams when rolling up the Awning.



TOOLS

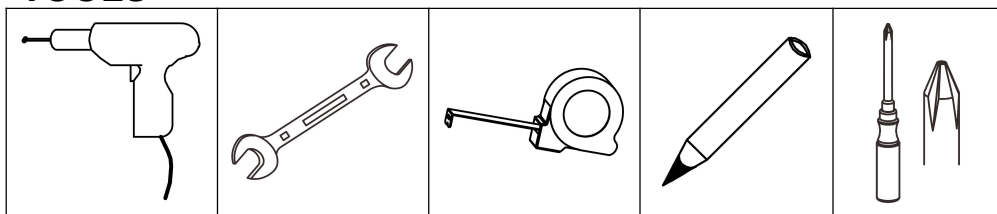


People needed for installation


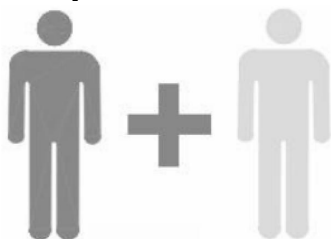


PARTS LIST


A	 Cassette X 1	B	 Support Post X 2
C	 Expansion Screw X 12	D	 Wood Thread Screw X 12 (ST8*50)
E	 Plastic Anchor X 12 (ST8)	F	 Washer X 12

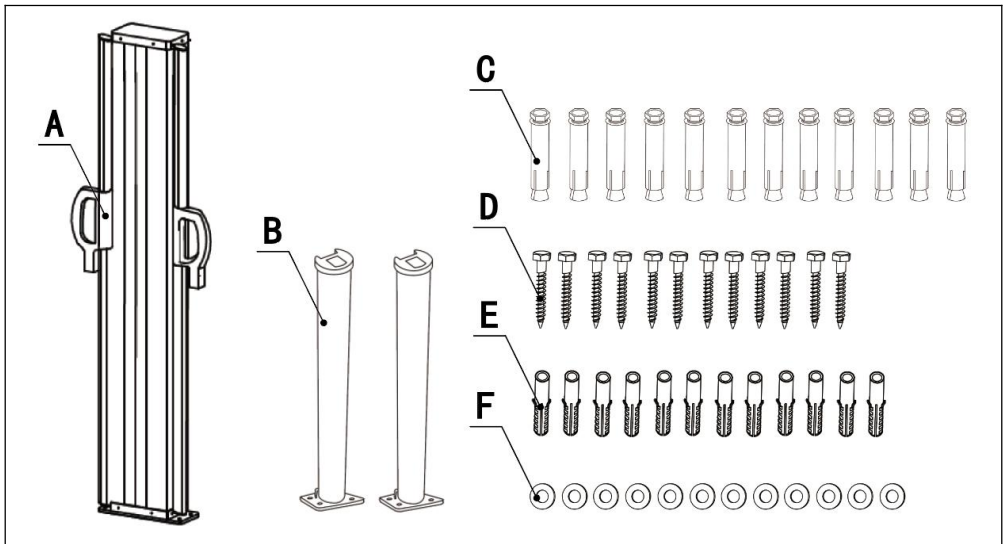

ASSEMBLY STEP

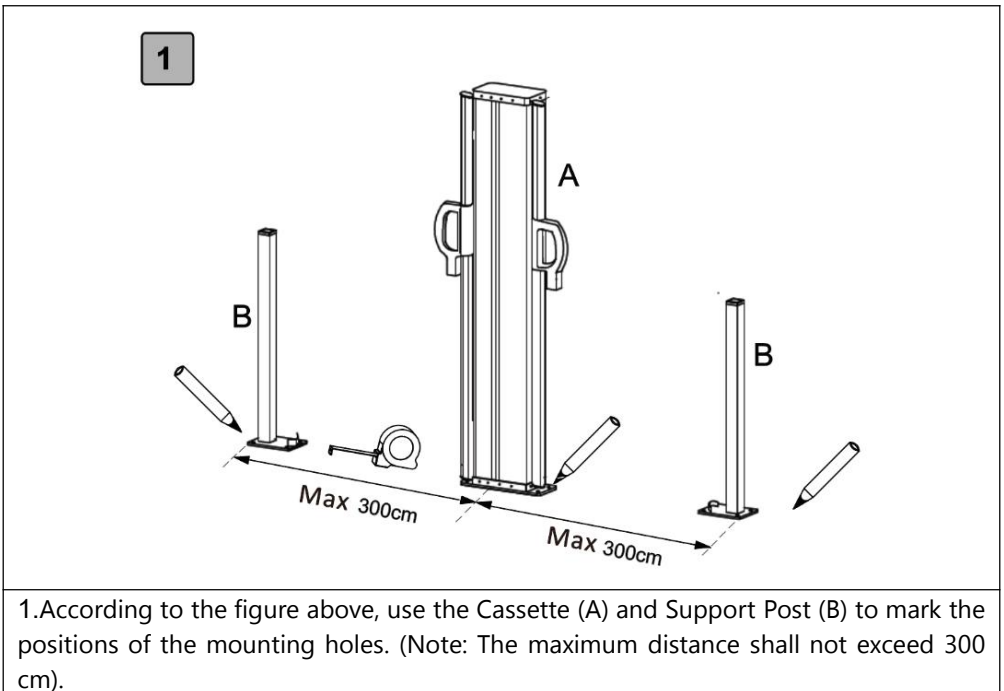
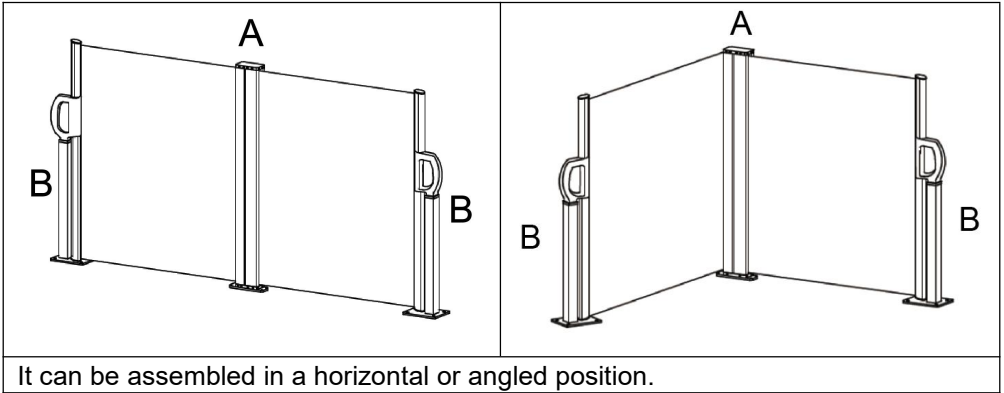


Installed on the concrete floor as shown in the figure 2.
Installed on the wooden floor as shown in the figure 3.


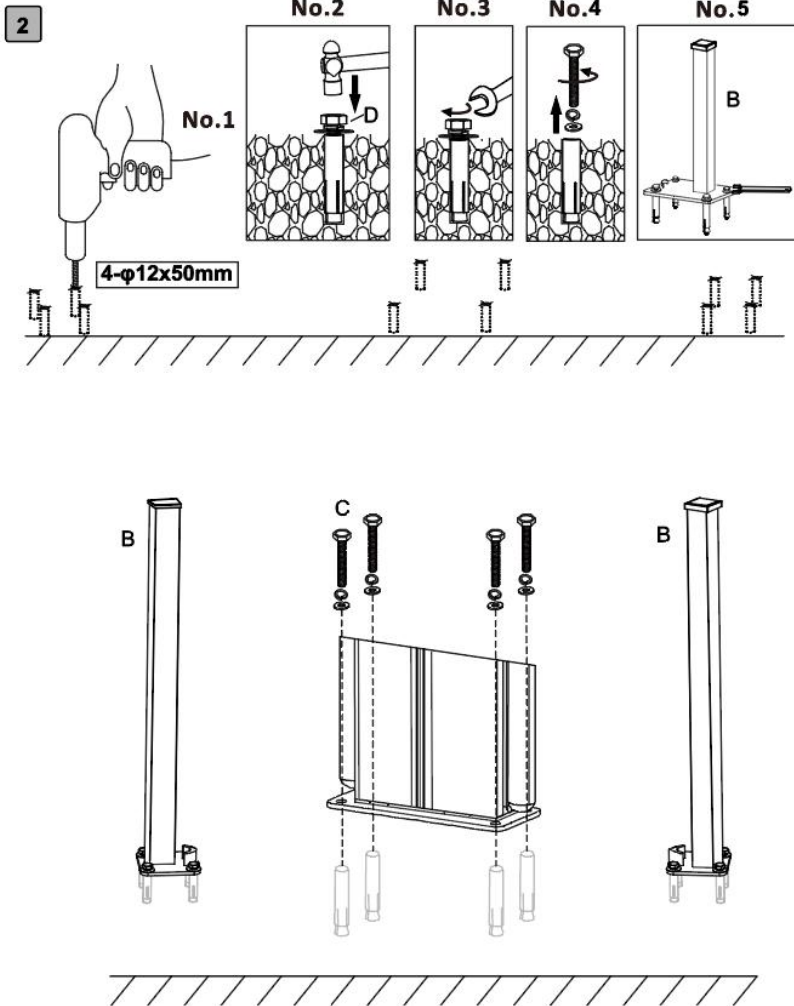


2.As shown in the figure: ① Drill 4 holes (12mm in diameter and 50mm in depth) on the concrete floor.② Use a hammer to drive the Expansion Screws (D) into the holes.③ Use a wrench to loosen the screws.④ Remove the screws.⑤ Use the previously removed screws to fix the Cassette (A) and Support Post (B).

3

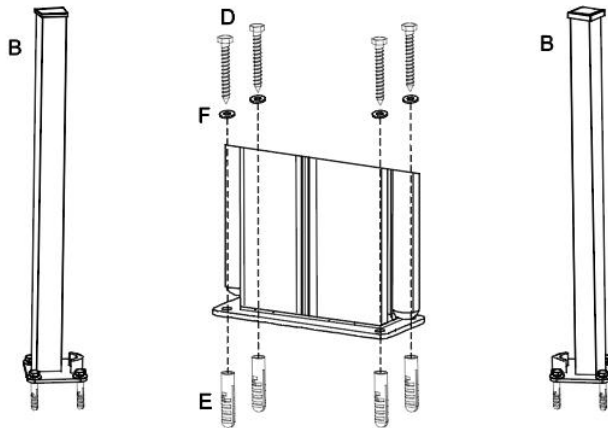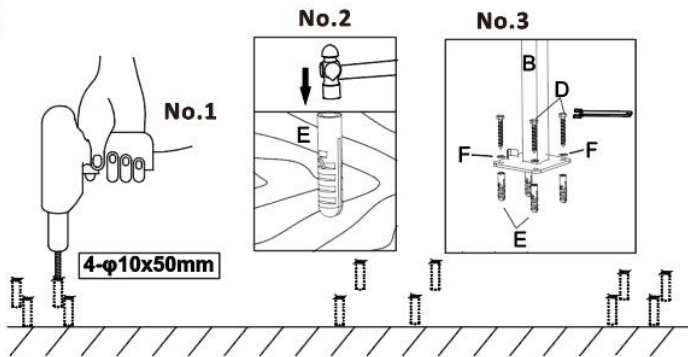

3. As shown in the figure:① Drill 4 holes (10mm in diameter and 50mm in depth) on the wooden floor.② Use a hammer to drive the Plastic Anchors (I) into the holes.③ Use the Washers (J) and Wood Thread Screws (H) to fix the Cassette (A) and Support Post (B).

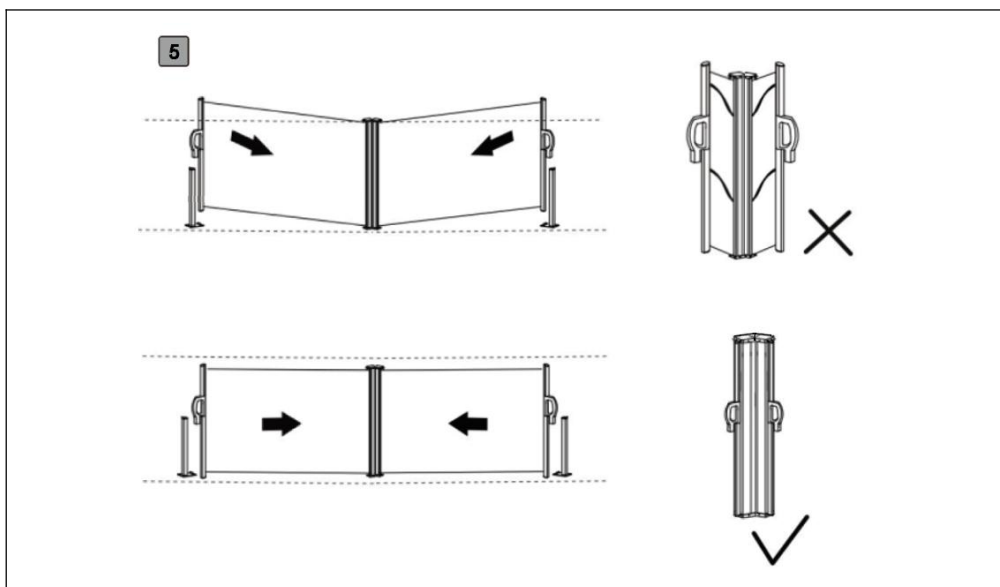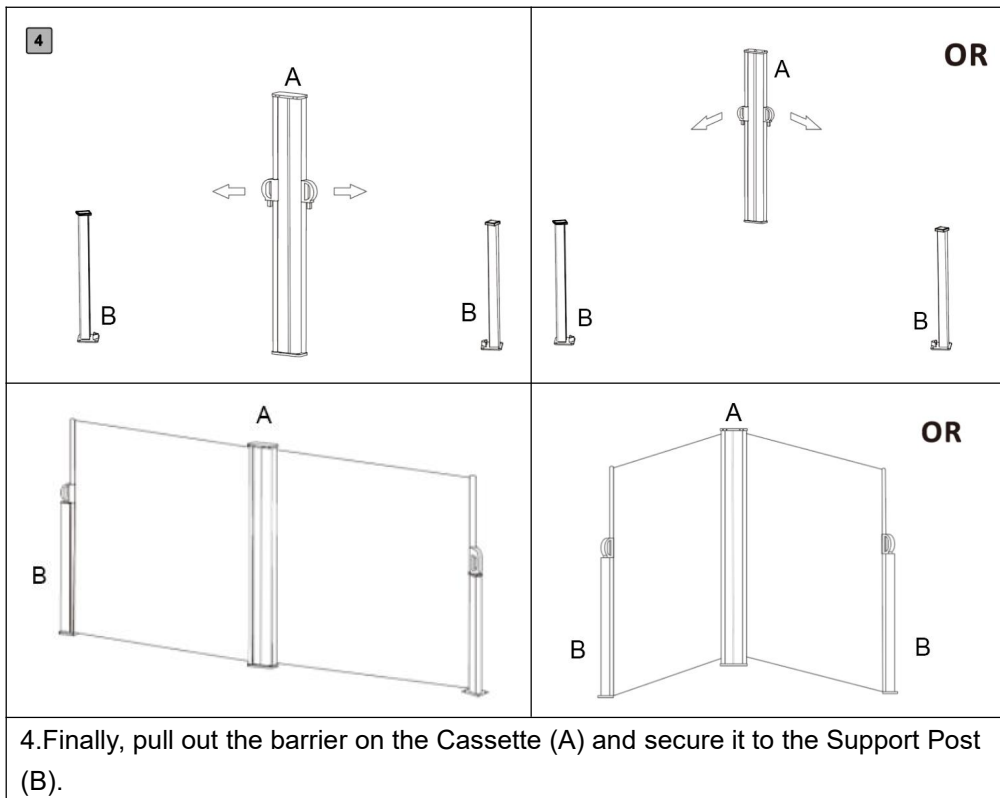

5.Note: There is an automatic cloth recycling device inside the product.If the cloth needs to be closed, please hold the handle tightly and keep the cloth always parallel to the ground plane and slowly recycle the cloth.If you find wrinkles on the cloth surface and the folding is not smooth,please stop recycling the cloth surface immediately. Pull out the cloth surface again and the folds are smoothed. Try to close again.

PRODUCT PARAMETER

Model	Product Size	Color
H088-1	180X600cm	Gray
H088-2	180X600cm	Beige



