
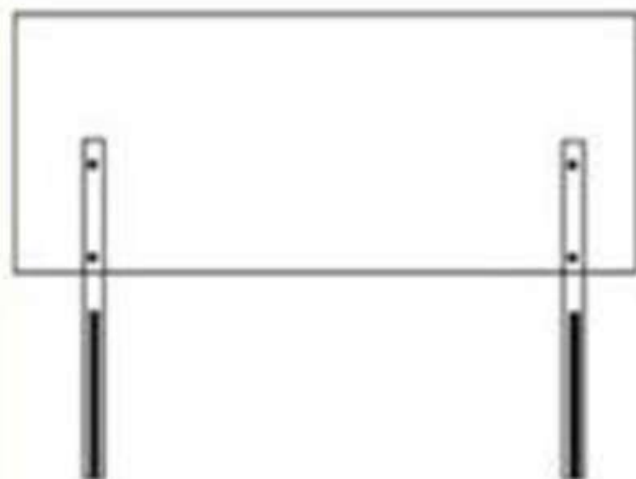


HEADBOARD ASSEMBLING INSTRUCTIONS

Remove Headboard From Box
Unpack Polythene Cover

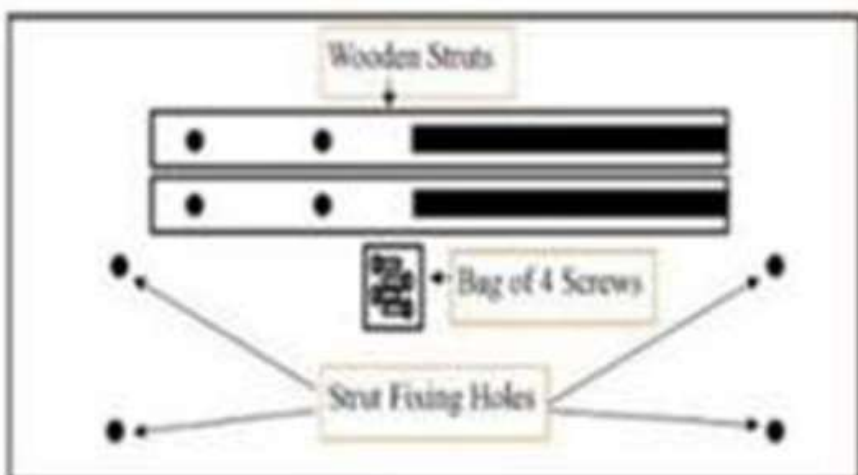

Locate Two Screw Holes On The End Of The Bed
Fix Assembled Headboard To The Bed With Screws Provided By Your Bed Supplier

Align Strut fixing Holes Over Headboard Fixing Holes
Insert Screws Provided Tighten First by Hand And Then By Screwdriver

