



NH417484-WBD 4'6" LFE Bedframe Assembly Instructions


Step 1

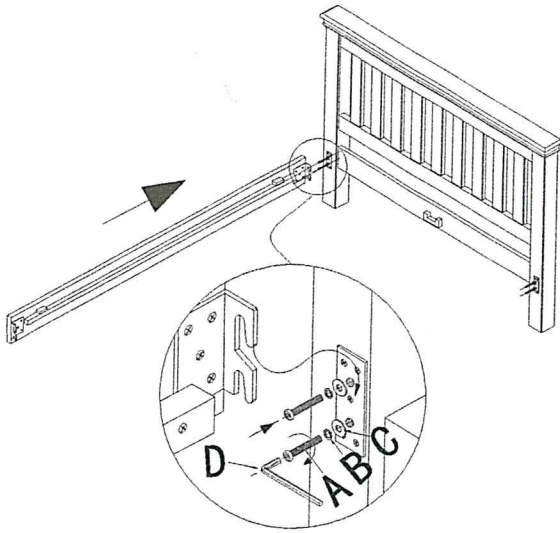


Step 2

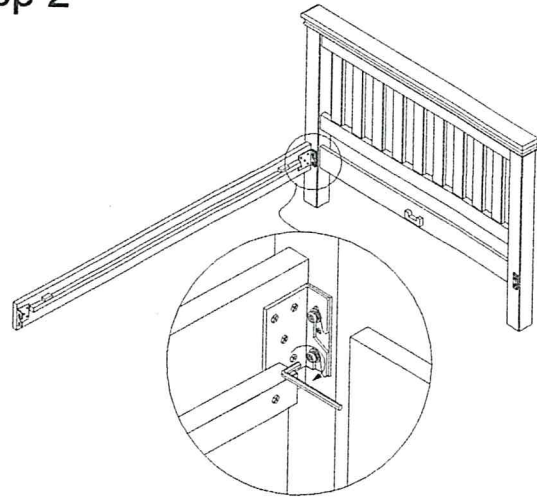


Step 3

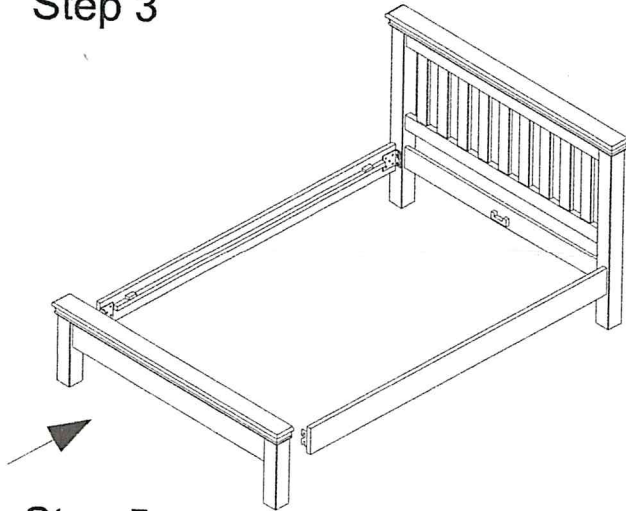


Step 4

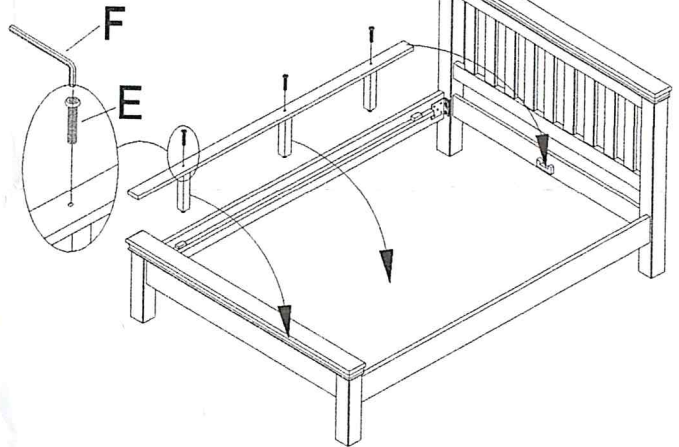



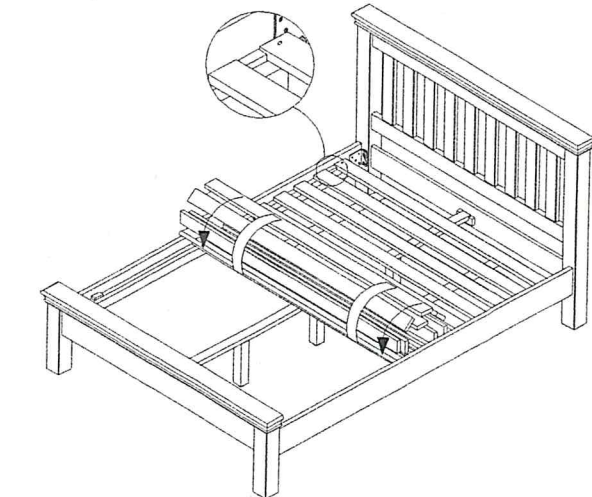

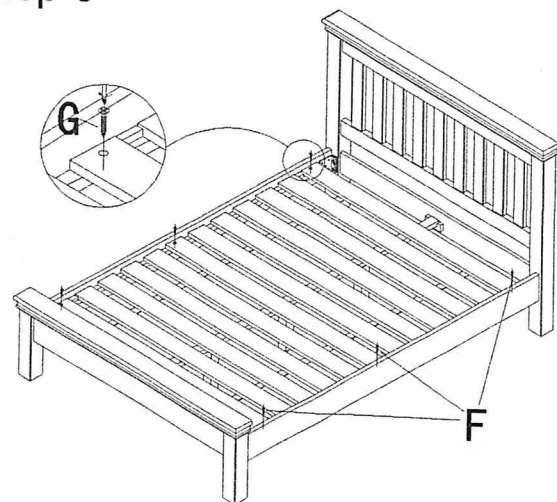


Step 5



Step 6



A  8PCS M8	B  8PCS	C  8PCS	D  1PC 5mm	E  3PCS M6
F  1PC 4mm	G  6(+2)PCS			