


Type 3

This product is different from previous type 1 and 2. It comes with different installation hardware. It is free standing privacy fence. It can be relocated and anchored to the ground when necessary (anchor stake is not included)

3pcs Free Standing Privacy Fence Installation

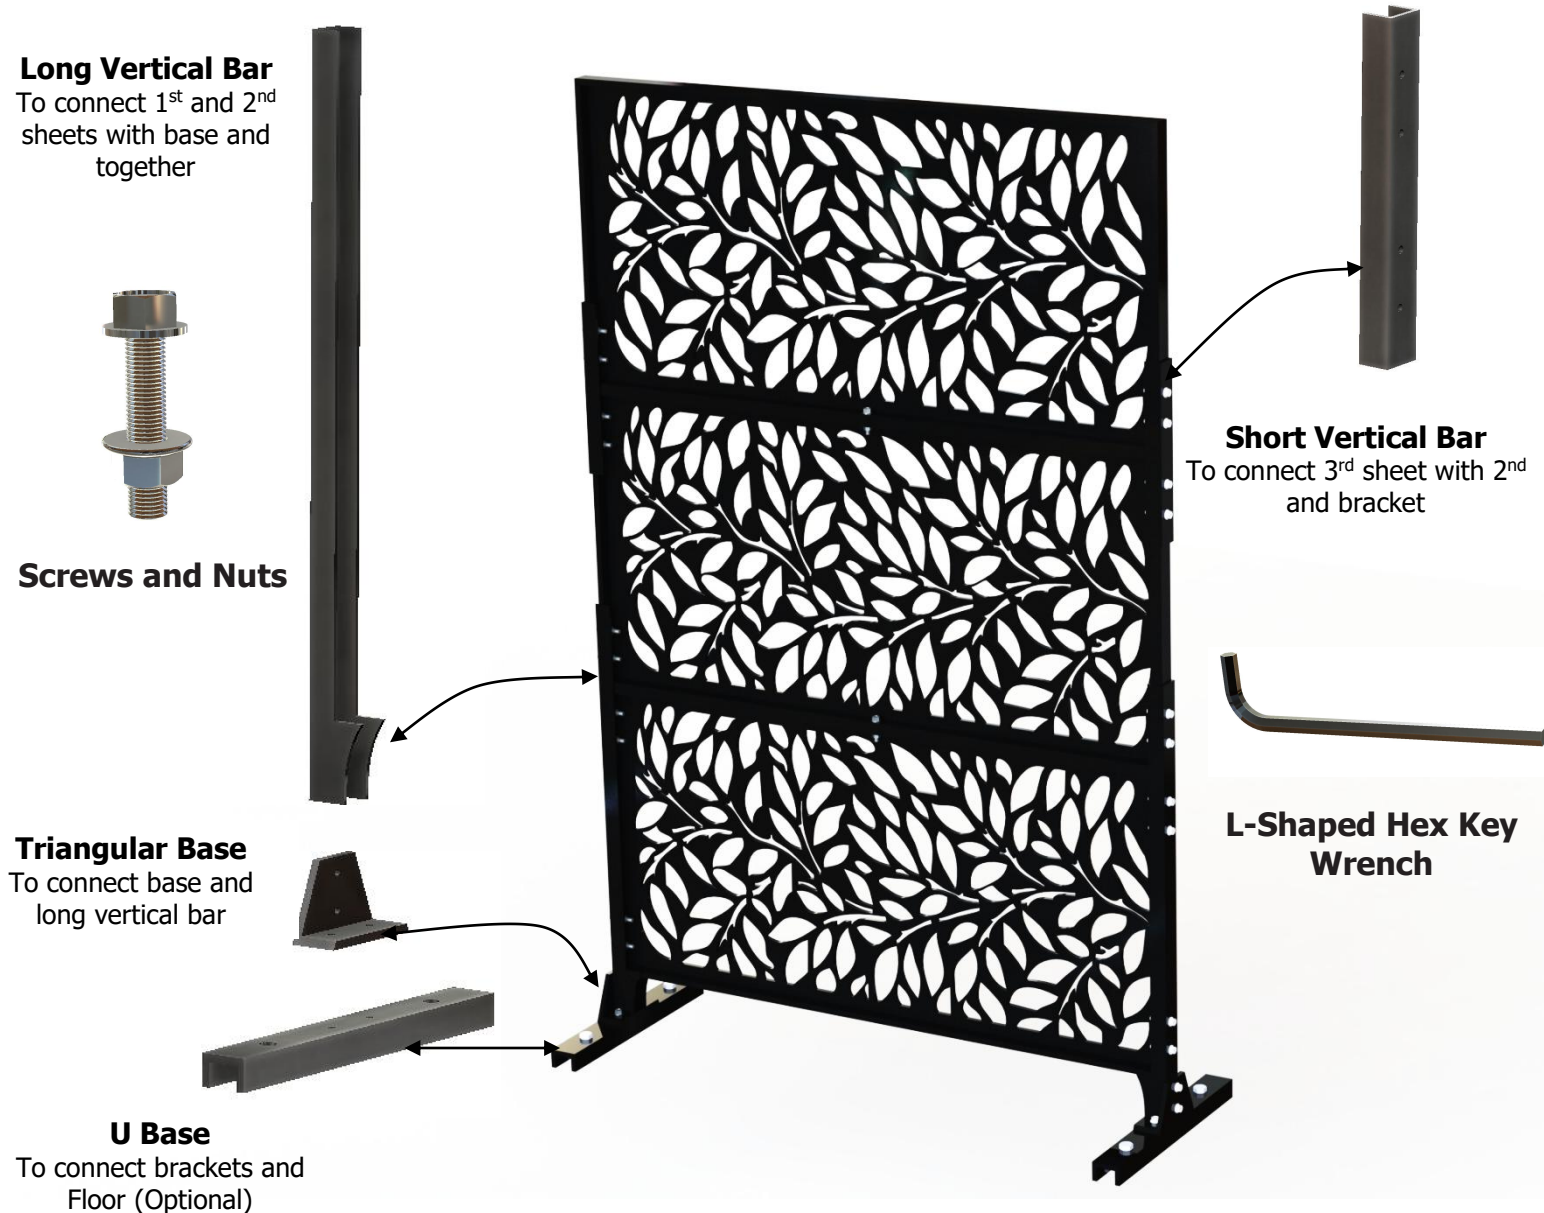

- The following pages will show how to install the privacy screen in 3pc free stand module. If you wish to install the screen with the provided single brackets, please refer to page 6

Scan to play installation Video for 3pc free stand module. Or you can type in the following address to get the video

<https://youtu.be/BLfNYnIJ8cAok>



INSTRUCTIONS

Step 1 - Choose a desired location and measure




1. Have adequate space for installation

Begin Step One by choosing a desired location and gather the required tools to assist you in measuring the **specifications and dimensions to set up your privacy screen** installation.




2. Install the posts Base and secure them (OPTIONAL)

Once your desired location has been determined, Place the posts to the location, mount (OPTIONAL) and install them at appropriate distance.

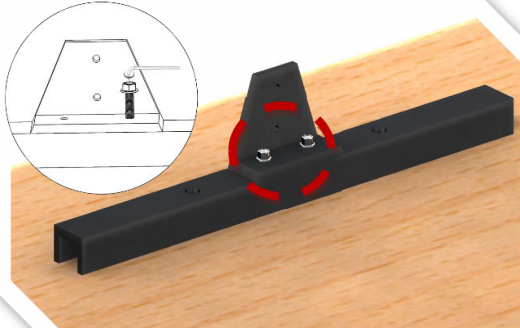

3. Secure the Base with triangular Part

Align the parts according to the holes and install Triangular part with the base using the L key, two on each corner of the post Bases, as shown. Take care not to over tighten the bolts.

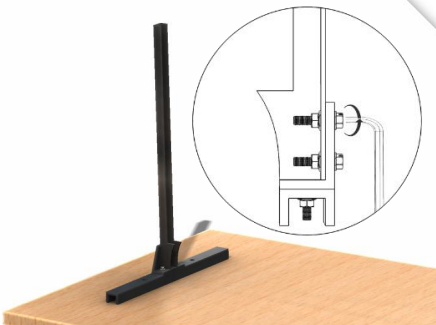

4. Install the Vertical Bracket and secure them

Locate the two Brackets and align them to the top of the triangular part. Secure the bracket to the posts base by Screws using the L key again.

INSTRUCTIONS

privacy screen

1. Locate the brackets and line up into place

Begin Step Two by locating the privacy screen to the inner sections of the post and line up the brackets to the holes, as shown. Have another person assist you and keep the screen intact.

2. Secure the privacy screen using screws

Secure the privacy screen using a total of ten screws, **five for each side. Tighten the screws using L key.**

3. Use the short bracket bar for 3rd sheet and repeat these steps for the remaining hardware

Add short expansion bars with installed panel Insert 3rd panel and secure with screws. Tighten the screws using the L key again. Repeat these steps for the remaining screws and sheets.

4. Repeat the entire procedure for each additional privacy screen, if desired

For each additional privacy screen, simply repeat the entire procedure until the total amount of privacy screens installed **is sufficient.**