




















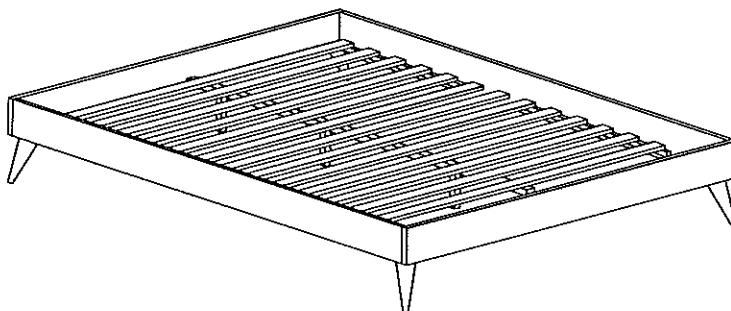


# ASSEMBLY INSTRUCTION


TWIN BED / FULL BED / QUEEN BED / EASTERN KING BED

<b>A</b> HEADBOARD & FOOTBOARD PANEL	<b>B</b> SIDE RAILS	<b>C</b> CENTER SUPPORT	<b>D</b> SUPPORT LEG
 2PCS	 2PCS	 1PC	 3PCS
<b>E</b> BED LEG	<b>F</b> BED LEG SUPPORT	<b>G</b> BED SLATS	<b>H</b> JCBB M8 X 50MM
 4PCS	 4PCS	 1SET (13PCS)	 8PCS
<b>I</b> JCBB M8 X 25MM	<b>J</b> JCBC M6 X 50MM	<b>K</b> JCBC M6 X 15MM	<b>L</b> JCBC M6 X 90MM
 8PCS	 28PCS	 4PCS	 3PCS
<b>M</b> SPRING WASHER M8	<b>N</b> FLAT WASHER M8	<b>O</b> SPRING WASHER M6	<b>P</b> FLAT WASHER M6
 16PCS	 16PCS	 16PCS	 16PCS
<b>Q</b> ALLEN KEY M4	<b>R</b> ALLEN KEY M5	<b>S</b> ADJUSTER M6	<b>T</b> L/BACKET
 1PC	 1PC	 3PCS	 2PCS
<b>U</b> CSK M4 X 32MM			
 18PCS			

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on the carpeted or padded area to protect them from damage.




- 1** Insert JCBB M8 X 50mm (H) Flat Washer M8 (N) Spring Washer M8 (M) to Bed Leg Support (F) connection Bed Leg (E) by Allen Key M5 (R).  
\*Use hardware pack "STEP 1".\*

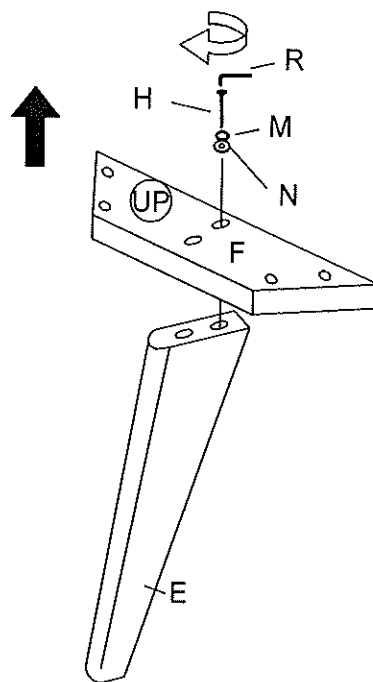

- 2** Insert JCBB M8 X 25mm (I) Flat Washer M8 (N) Spring Washer M8 (M) to Side Rail (B) connection Hb/Fb panel (A) by Allen Key M5 (R).


\*Use hardware pack "STEP 2".\*

\*For Allen Key M5 (R) please took from hardware pack "STEP 1".\*

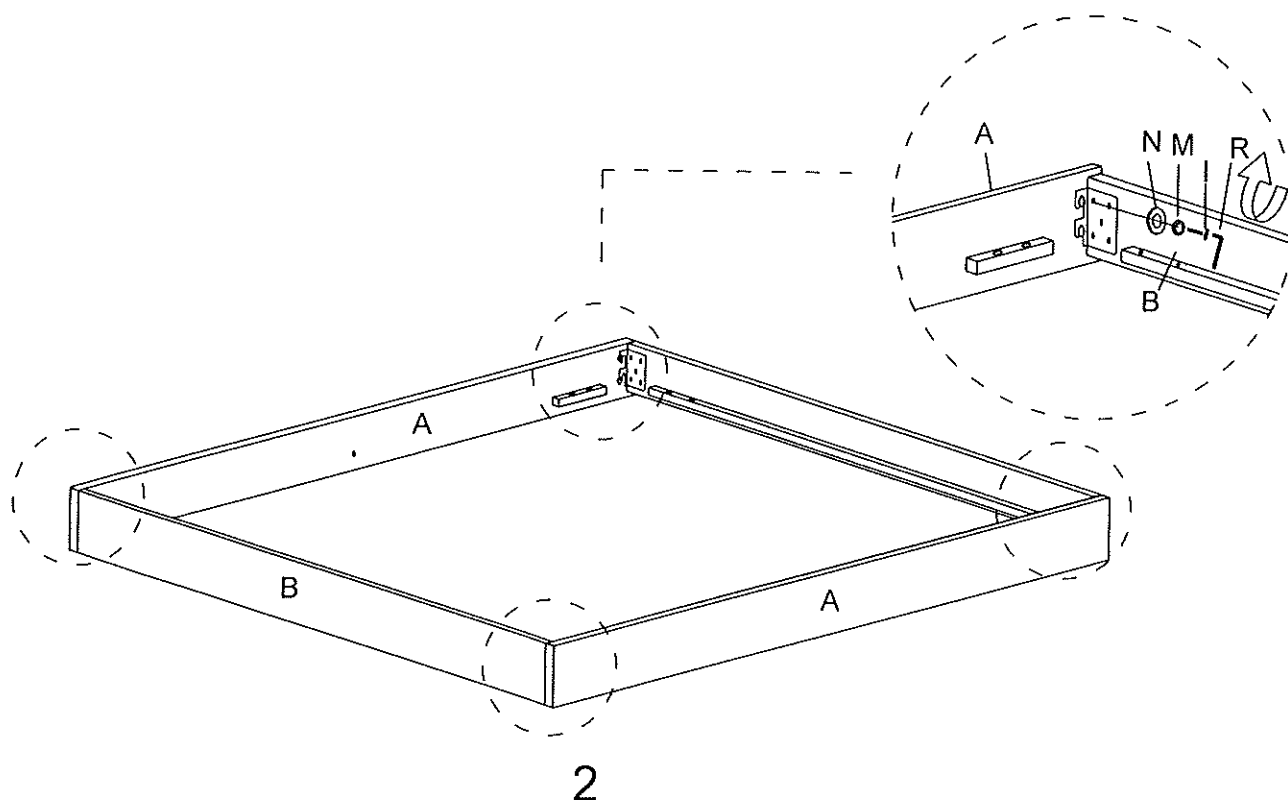

- 3** Level up the Footboard Panel (A) by putting on object/box to fix the Bed Leg (E) with the Bed Leg Support (F). Insert JCBC M6 X 50mm (J) Flat Washer M6 (P) Spring Washer M6 (O) to Footboard panel (A) connection Bed Leg Panel by Allen Key M4 (Q).


\*Use hardware pack "STEP 3 & 4".\*

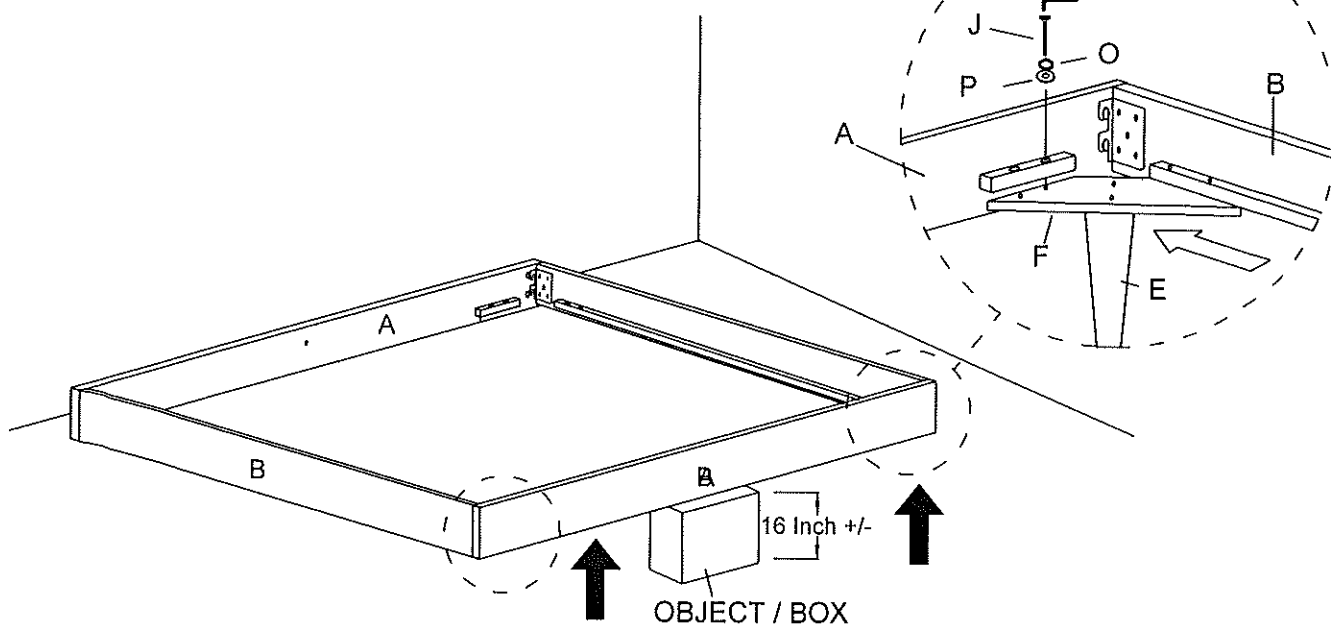

- 4** Level up the Headboard Panel (A) by putting on object/box to fix the Bed Leg (E) with the Bed Leg Support (F). Insert JCBC M6 X 50mm (J) Flat Washer M6 (P) Spring Washer M6 (O) to Headboard panel (A) connection Bed Leg Panel by Allen Key M4 (Q).


\*Use hardware pack "STEP 3 & 4".\*

\*For Allen Key M4 (Q) please took from hardware pack "STEP 3 & 4".\*

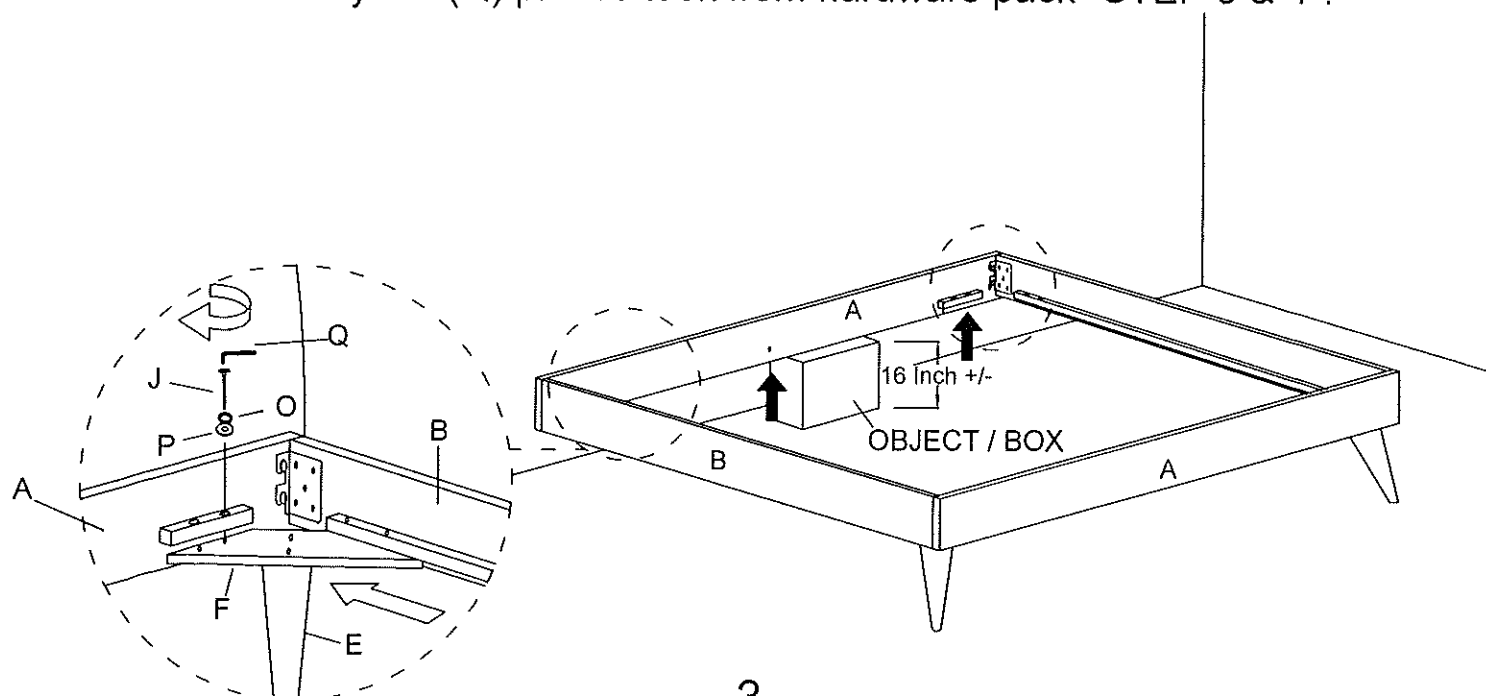

- 5** Insert JCBC M6 X15mm (K) to L/Bracket (T) to connection Center Support (C) by Allen Key M4 (Q).


\*For Allen Key M4 (Q) please took from hardware pack "STEP 3 & 4".\*

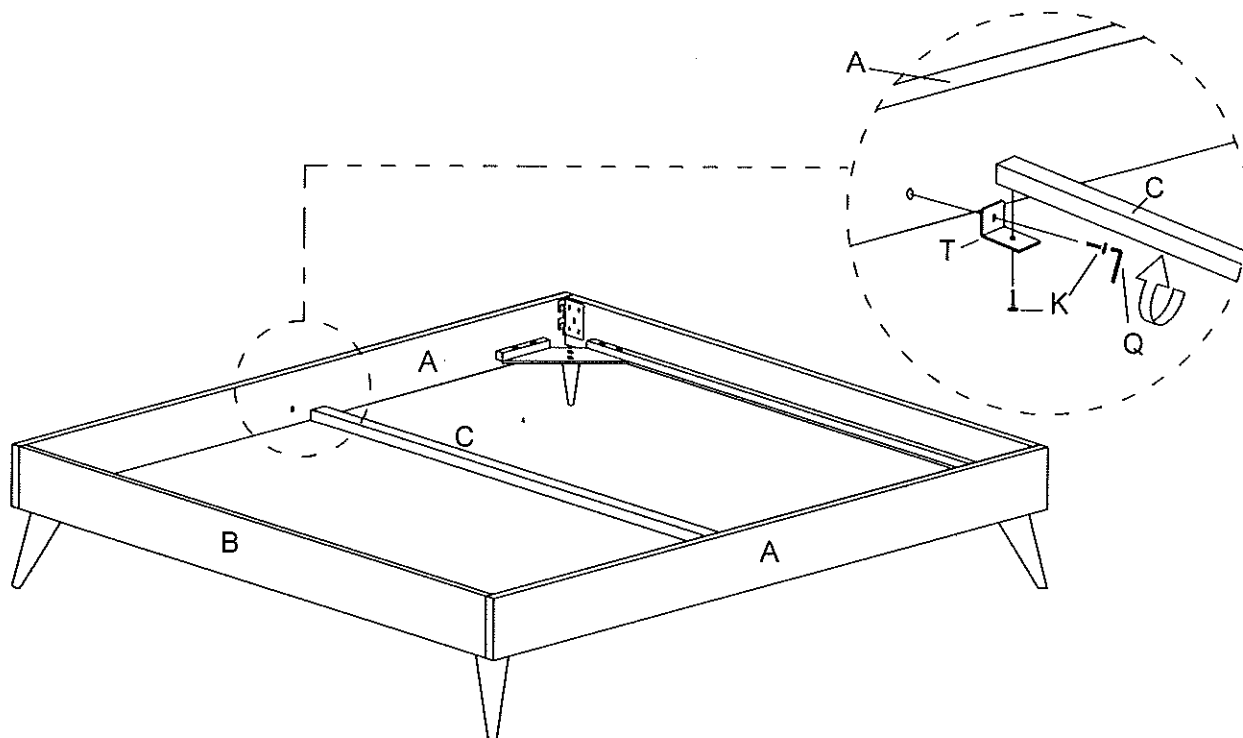

- 6** Insert JCBC M6 X 70mm (L) into the Center Support (C) by Allen Key M4 (Q), into the Support Leg (D), and turn the Adjuster M6 (S) into the bottom of the Support Leg (D)

\*Use hardware pack "STEP 6".\*


\*For Allen Key M4 (Q) please took from hardware pack "STEP 3 & 4".\*

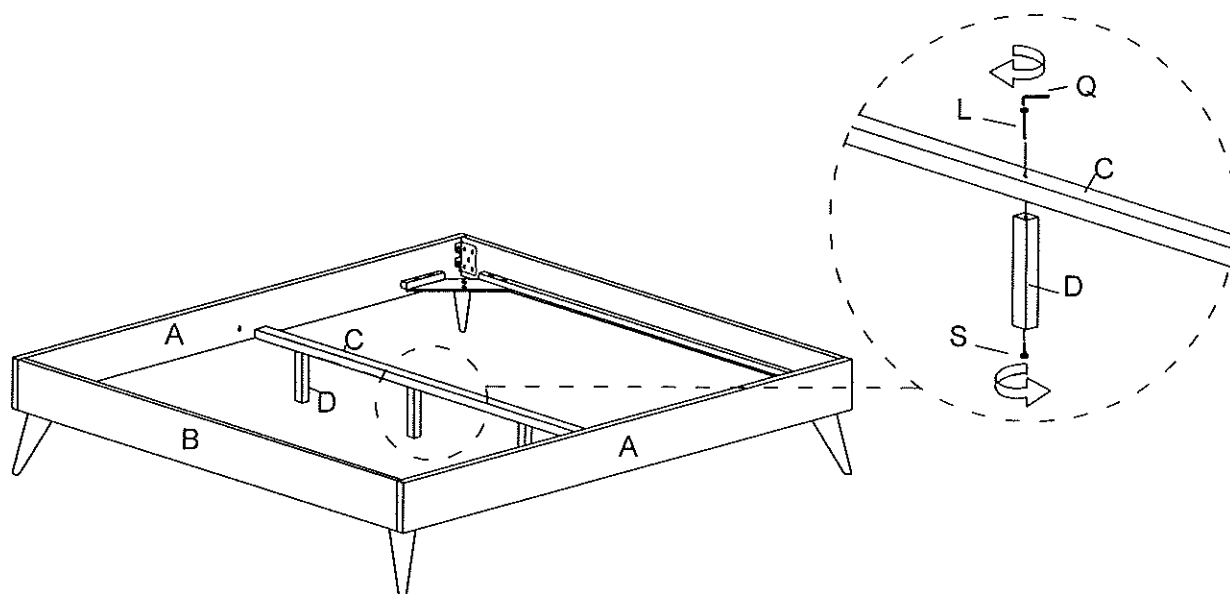

- 7** Insert the JCBC M6 X 50mm (J) to 1st, 6th, 8th, 13th Bed Slat (G) connection Side Rail Cleat (B) and Insert CSK M4 X 32mm (U) to 2nd, 3rd, 4th, 5th, 7th, 9th, 10th, 11th, 12th Bed slat (G) connection Side Rail Cleat (B).

\*Use hardware pack "STEP 7".\*


\*For Allen Key M4 (Q) please took from hardware pack "STEP 3 & 4".\*

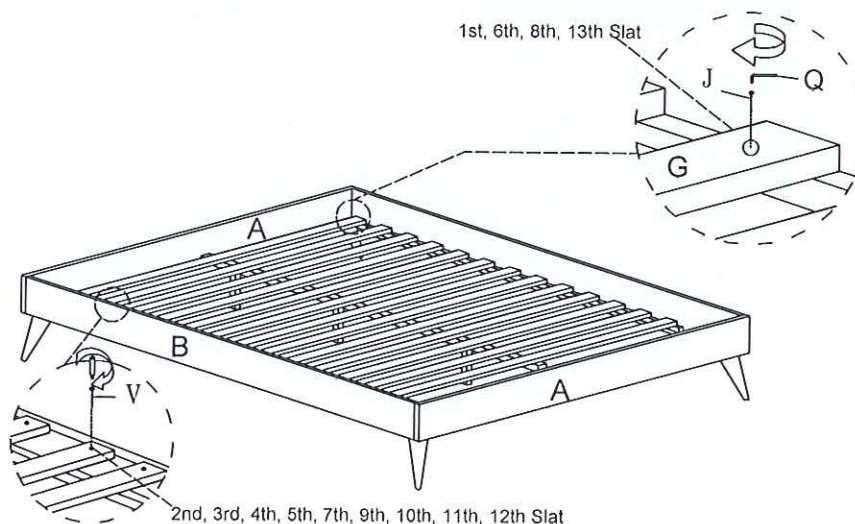

- 8** Insert JCBC M6 X 50mm (J) to Bed slat (G) connection Center Support (C) by Allen Key M4 (Q).

\*Use hardware pack "STEP 8".\*

\*For Allen Key M4 (Q) please took from hardware pack "STEP 3 & 4".\*

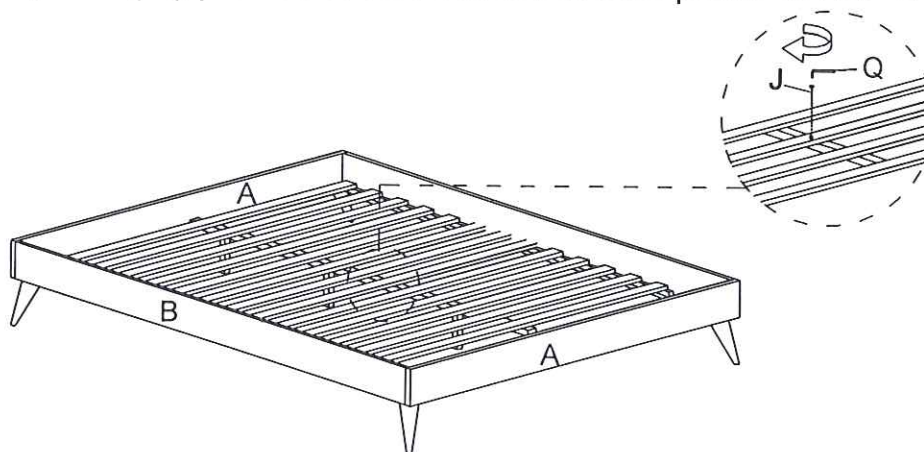

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.