

OUTDOOR LIVING SOLUTIONS




WEATHER
RESISTANT



INTEGRATED
NETTING























EASY
ASSEMBLY


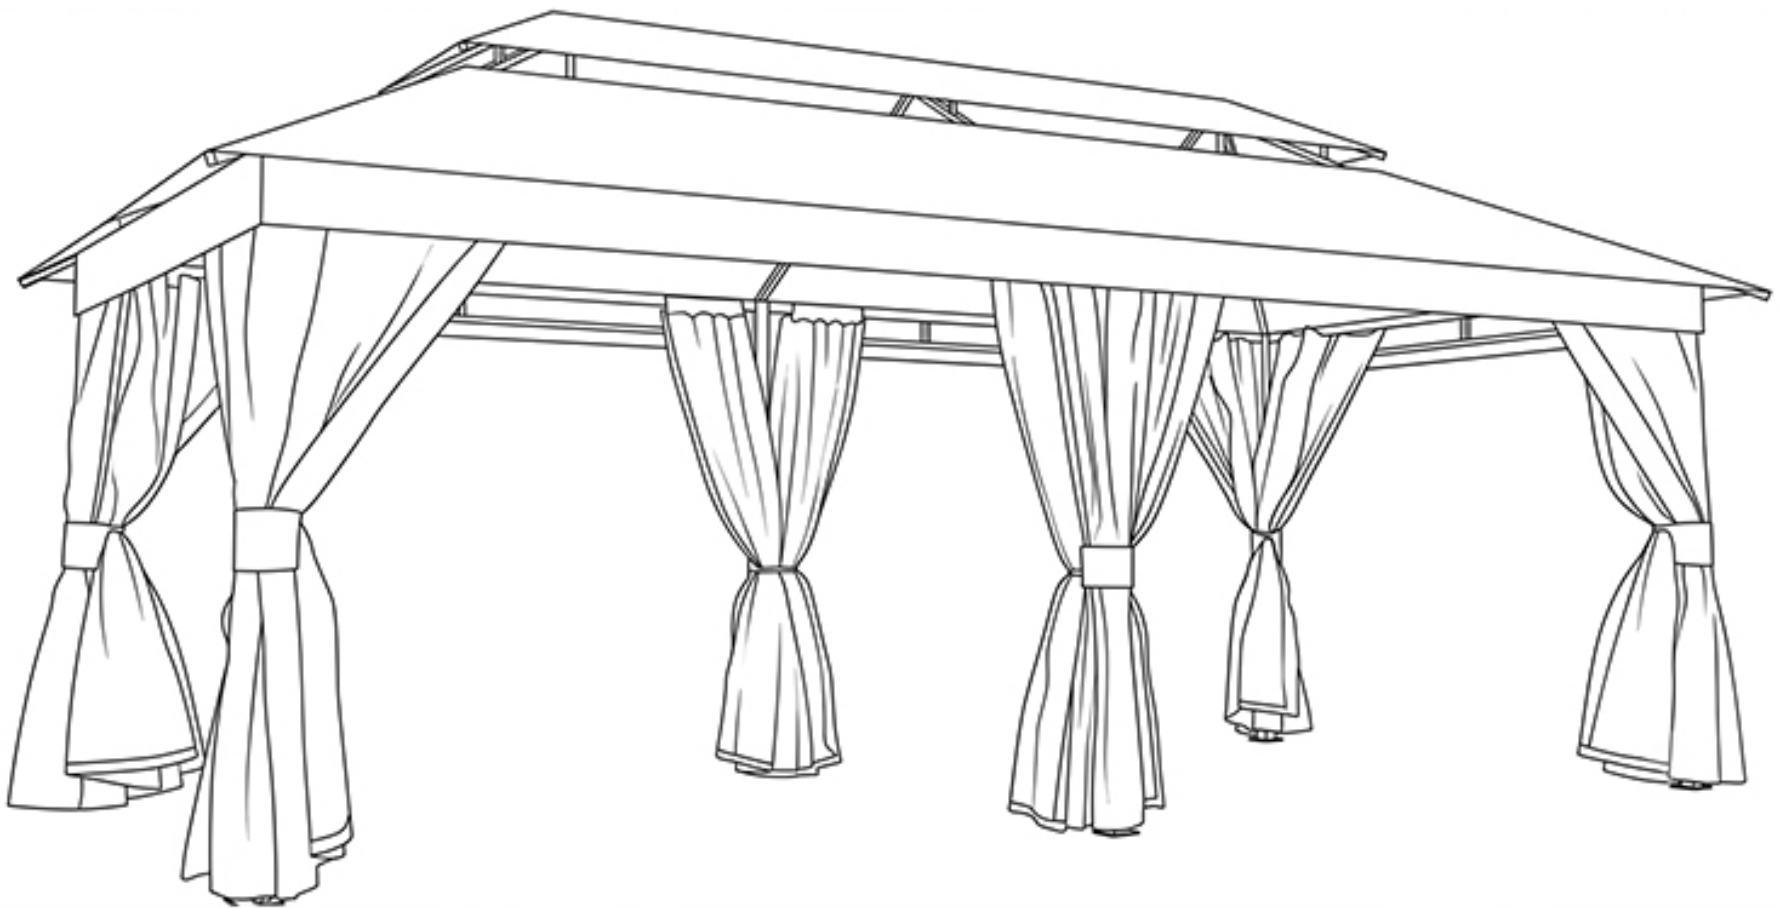


PREMIUM GARDEN GAZEBO WITH NETTING & CURTAINS

10FT×20FT // Assembly & User Manual

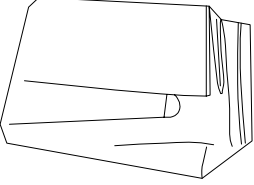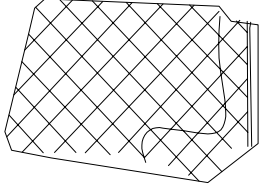
PARTS#	QTY	DESCRIPTION	PARTS#	QTY	DESCRIPTION
A	4		AA	72	 6x12
B1	12		BB	12	 6x28
A2	2		CC	8	 6x23
C1	4		GG	6	 6x35
D3	6		DD	26	 M6
G	4		S	6	 3M
H	12		R	6	
D2	12		Q	12	
F	2		T	18	
U	6		FF	1	
L	1		EE	1	
K	1		HH	1	 Rope cleat
M	4	 Privacy Curtain	V	8	
			C2	4	
N	4	 Mosquito Mesh	M1	2	
			M2	2	
V1	2		F1	1	
C3	4		D1	2	
M5	1		M3	1	
F2	1				

01

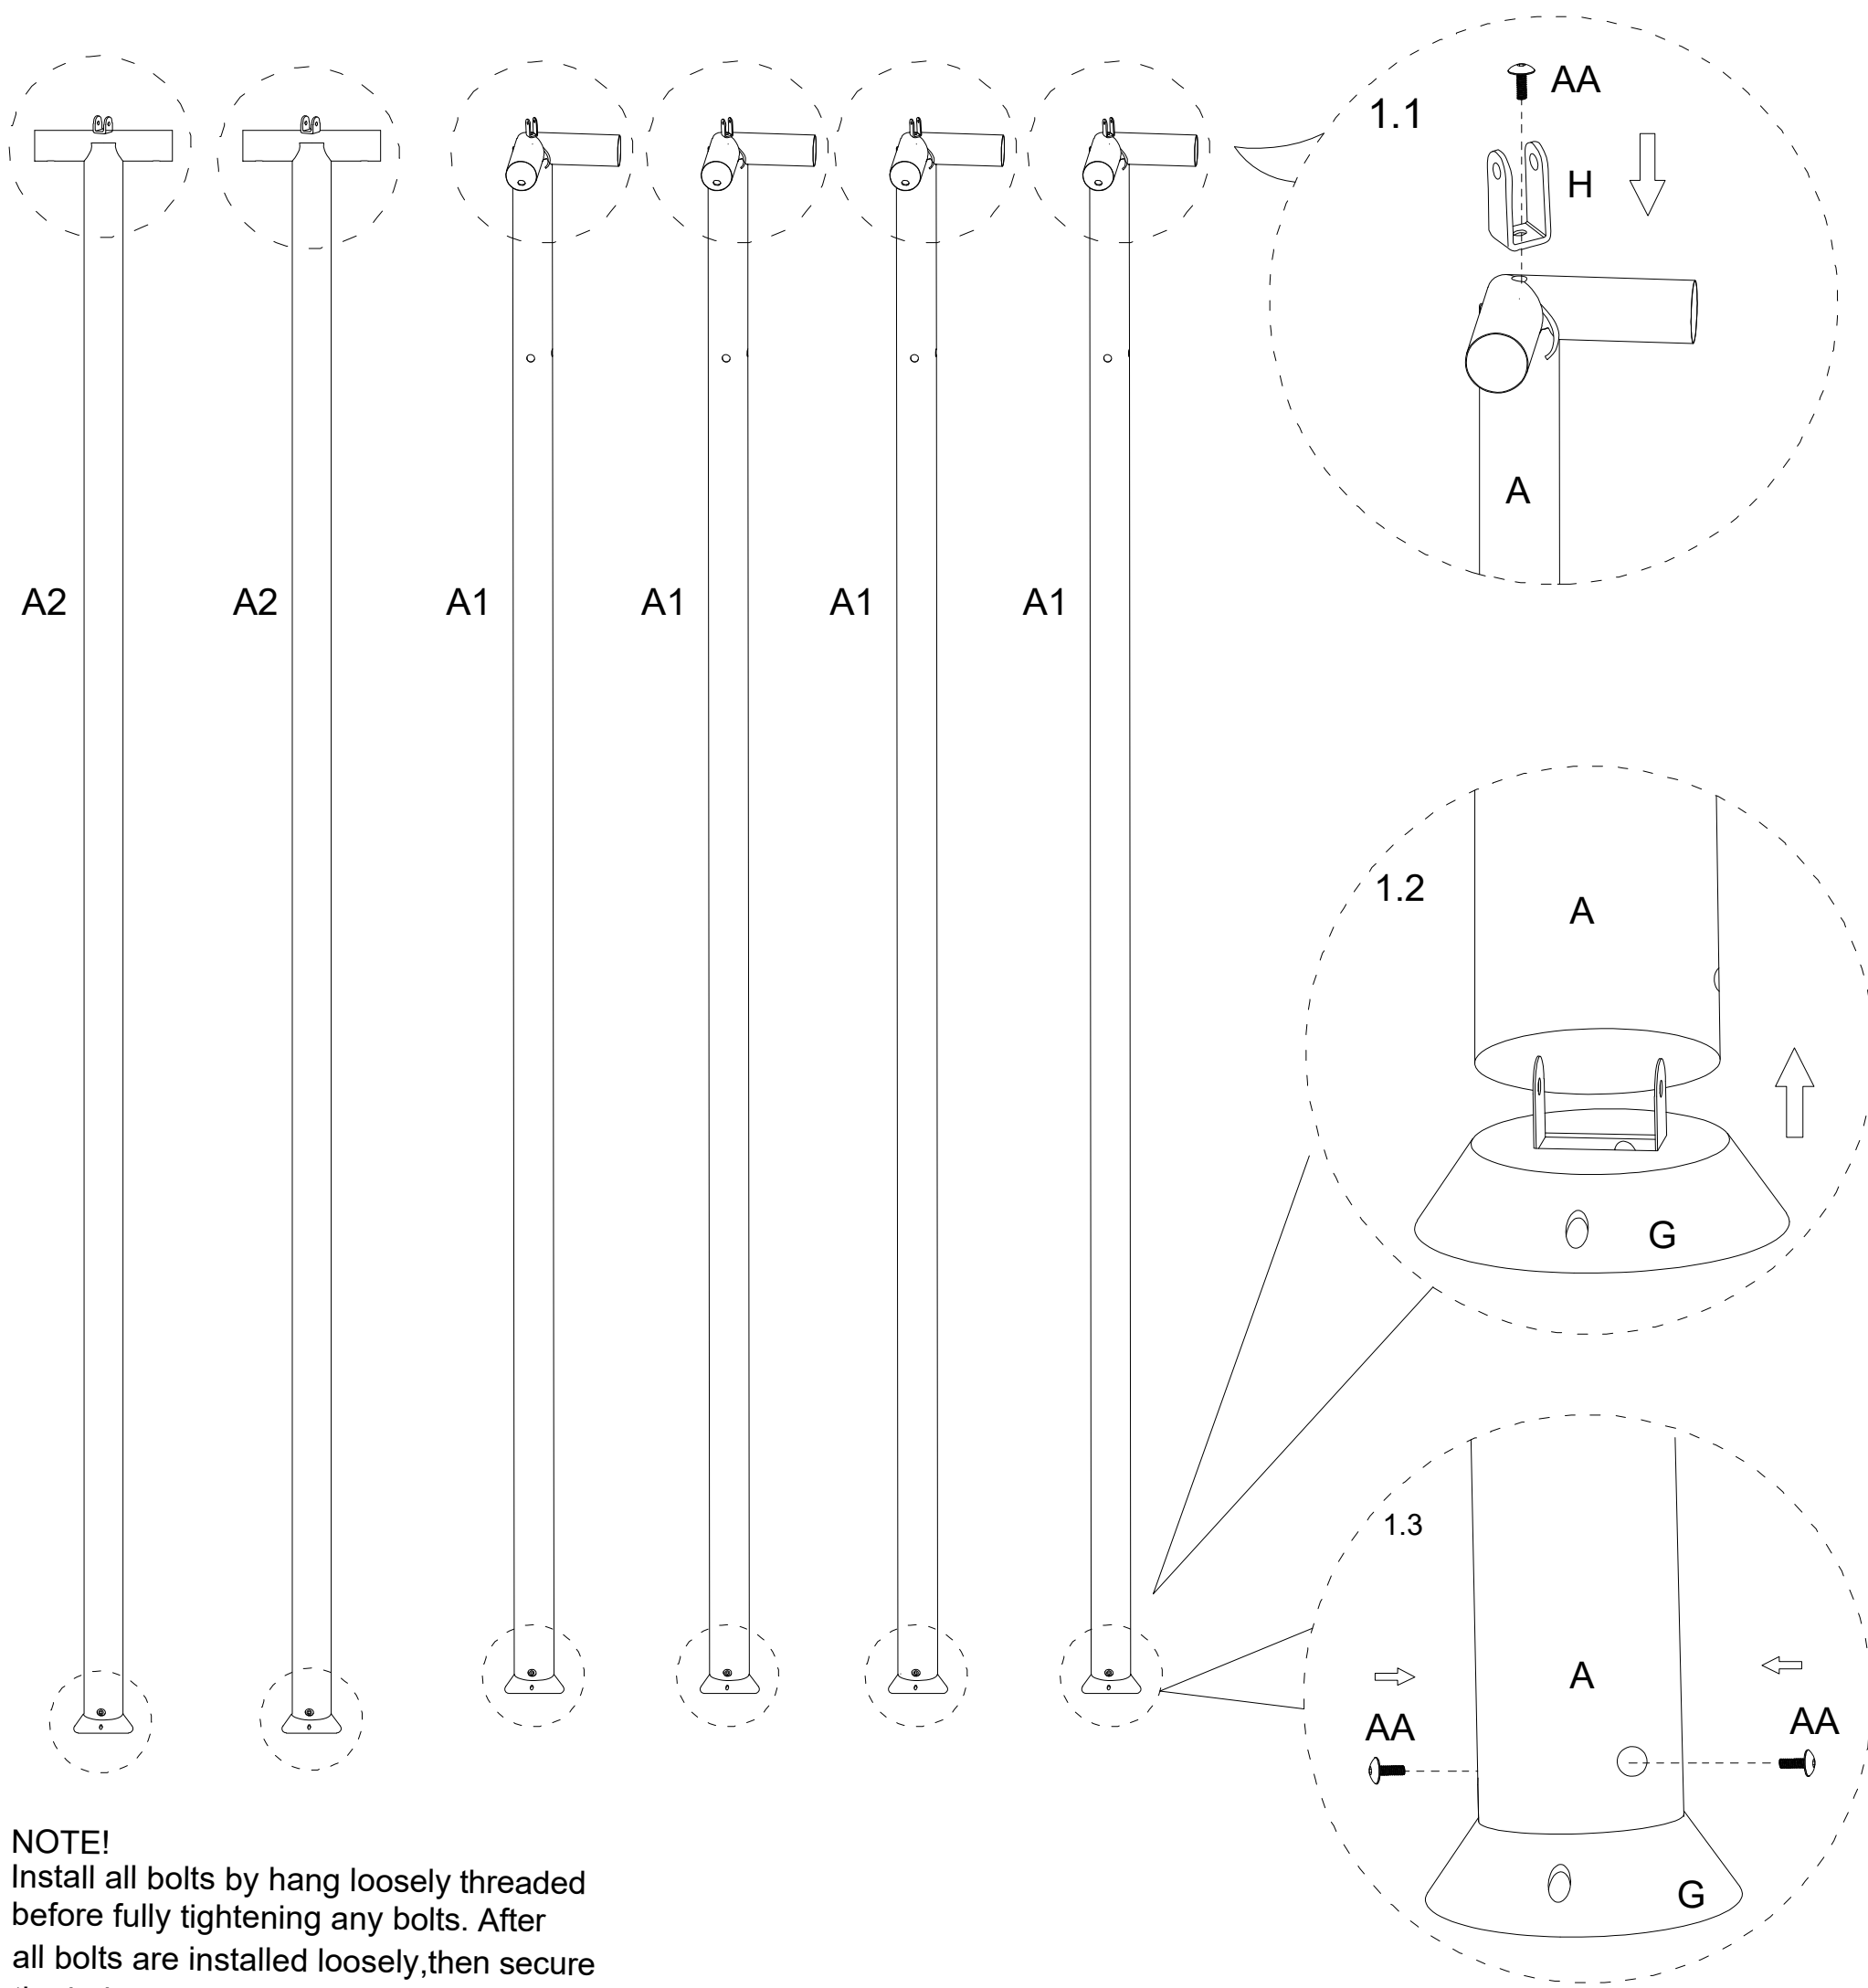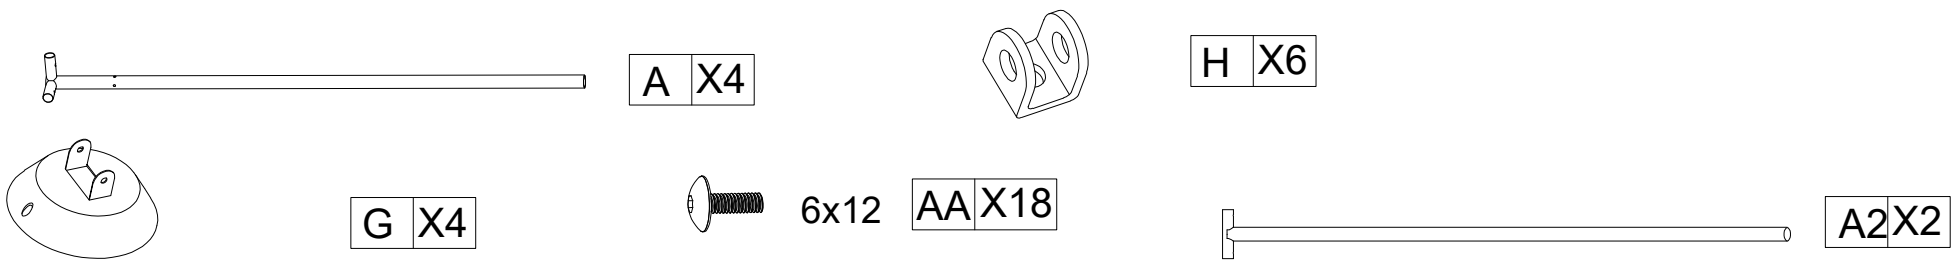


NOTE!
Install all bolts by hand loosely threaded before fully tightening any bolts. After all bolts are installed loosely, then secure the bolts before moving on to the next step.


02



B1 X4

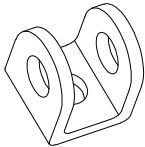


H X6





6x12 AA X18




U X6



B2 X4

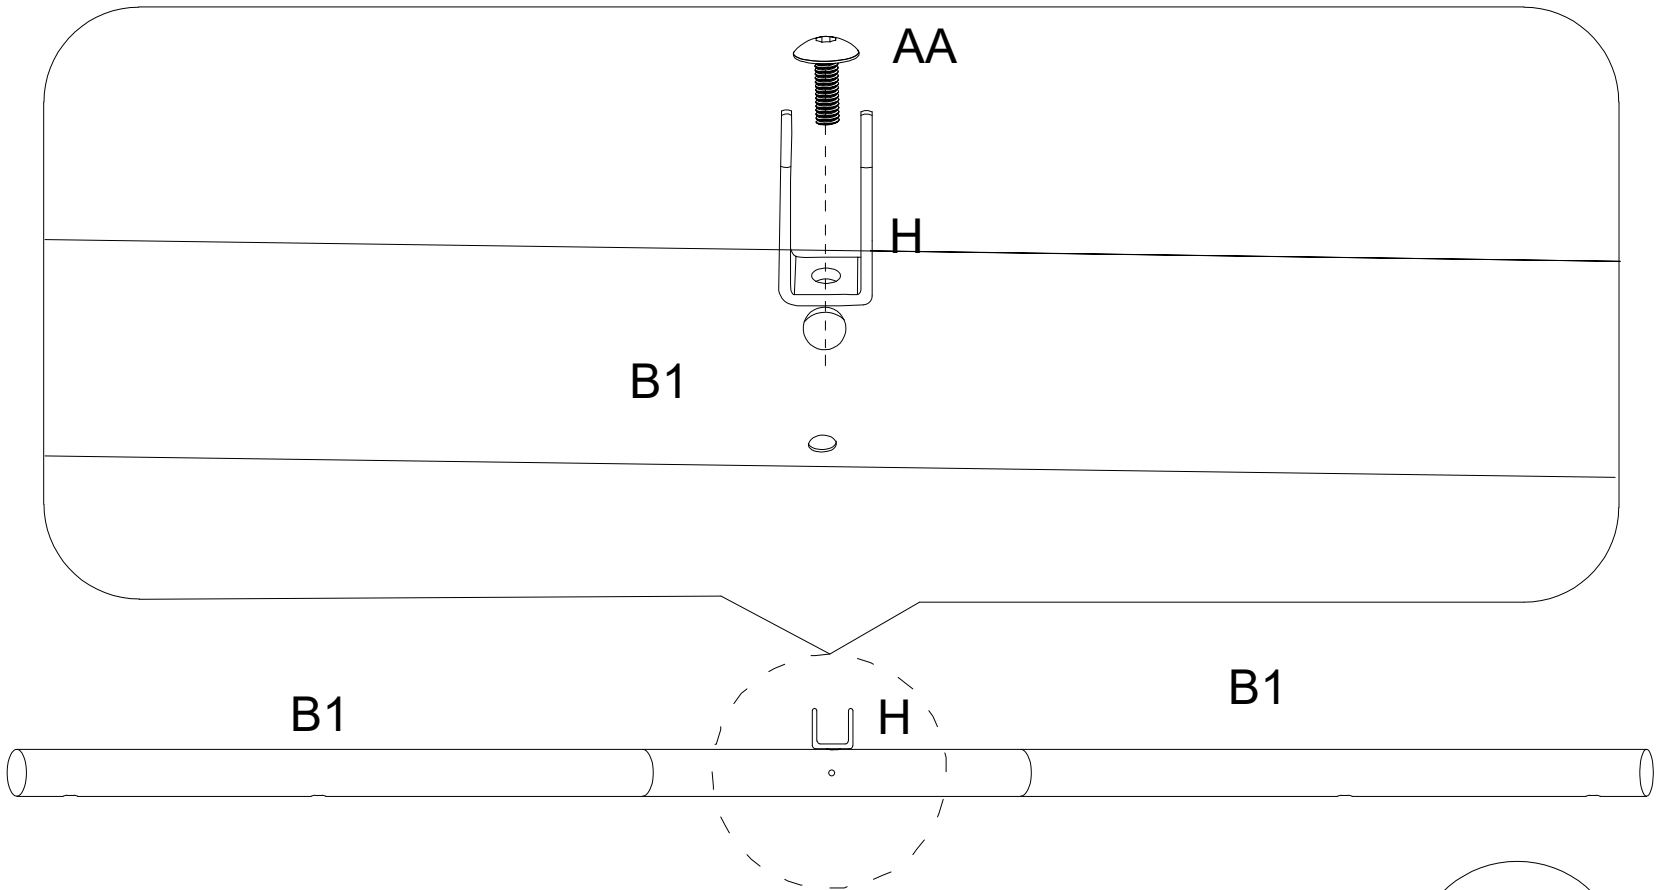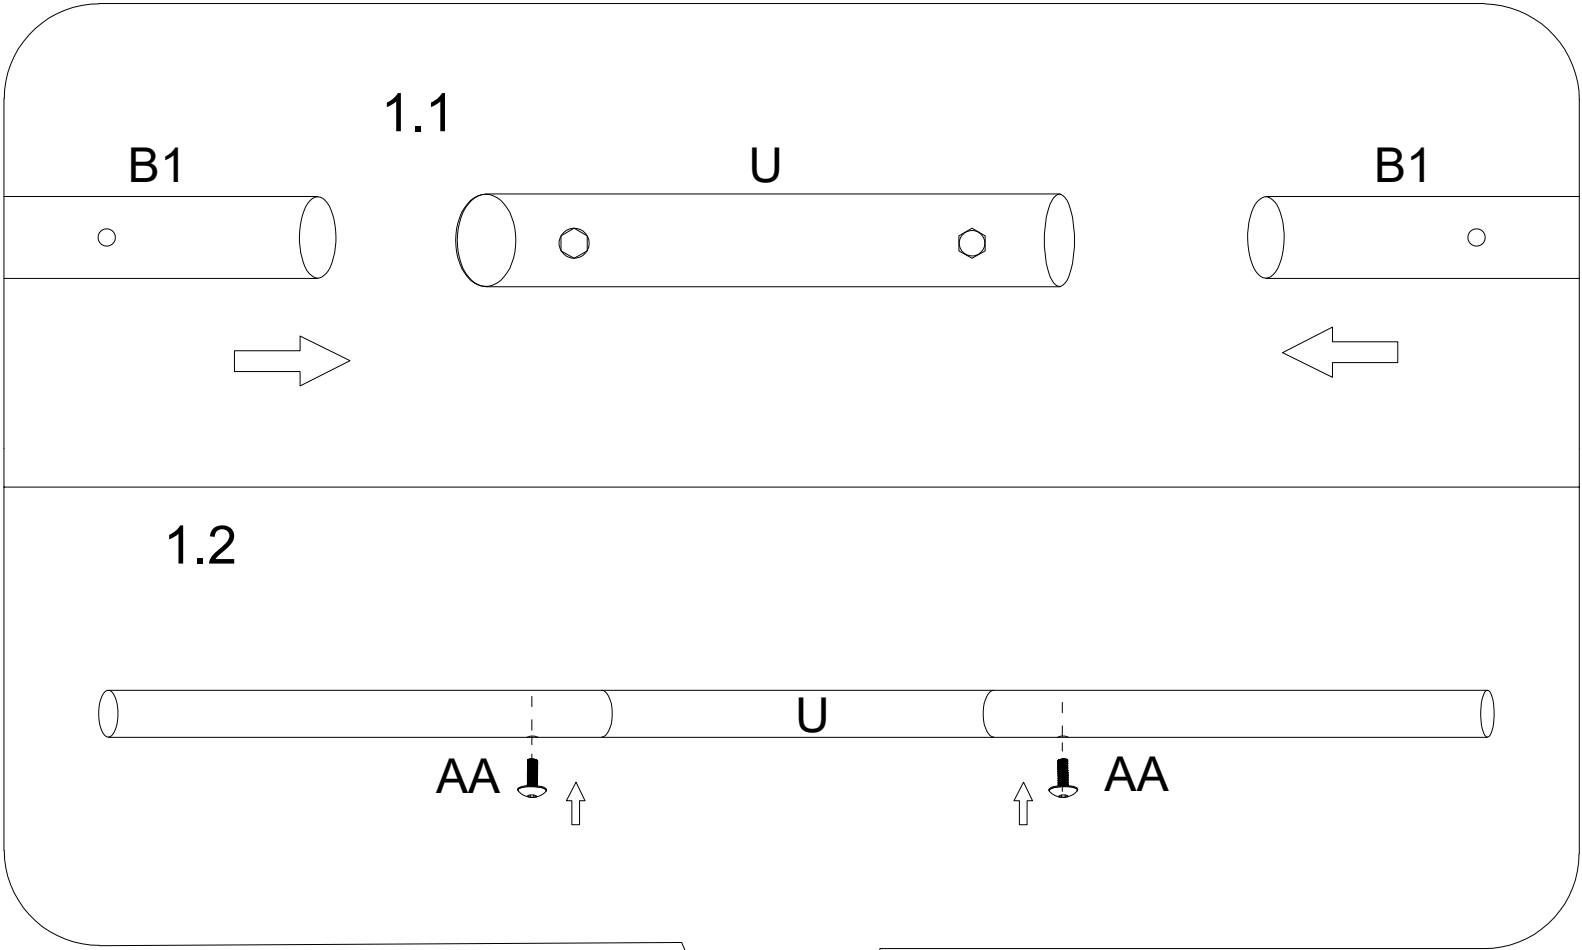

03



D2

X4




6x12


AA

X12


1.1

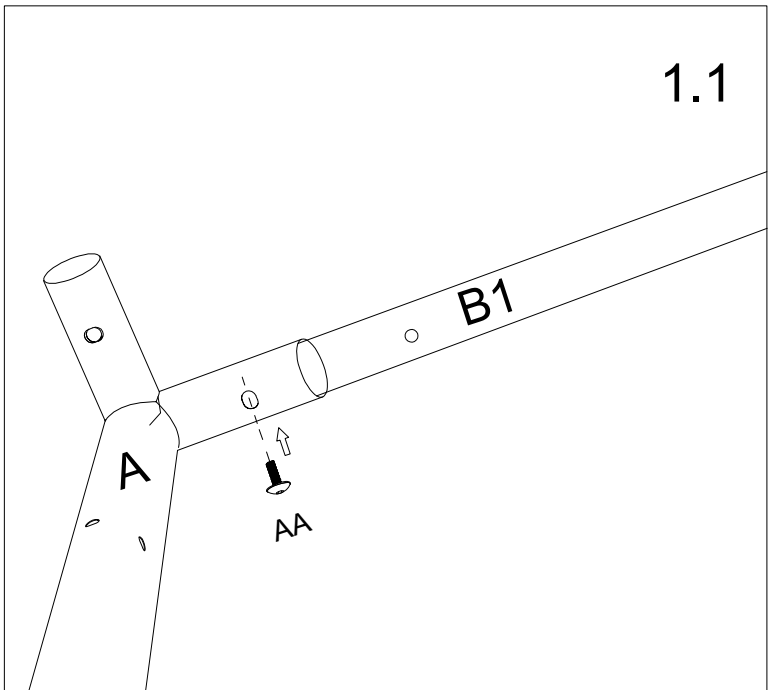




1.2

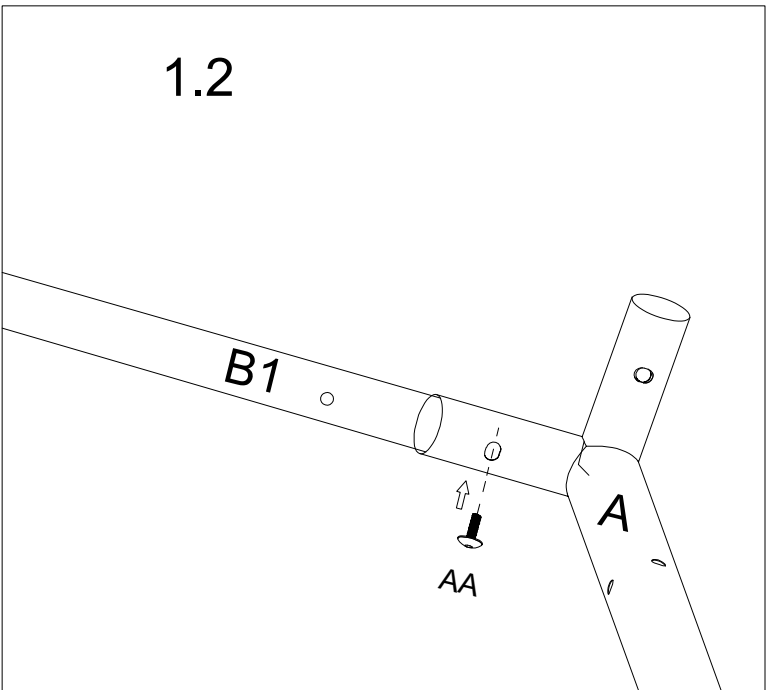


1.3

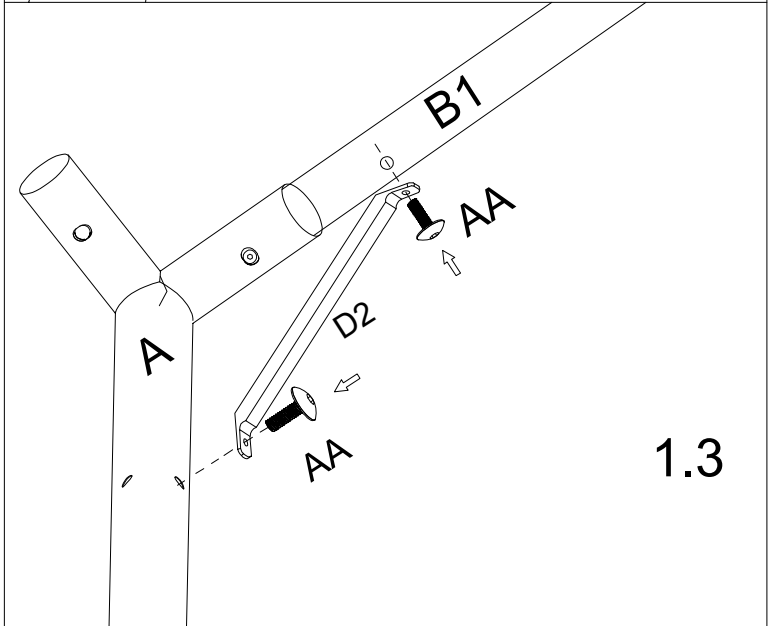

1.4

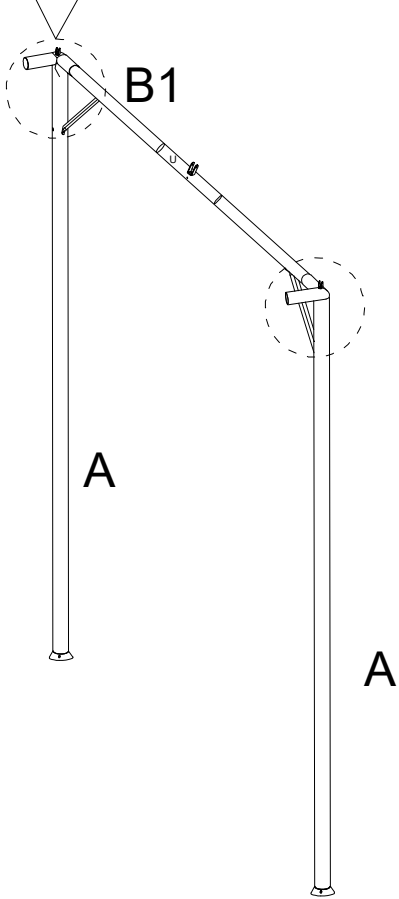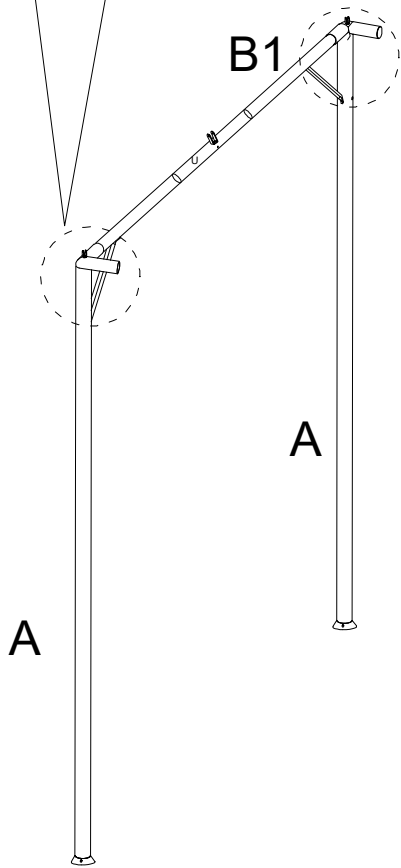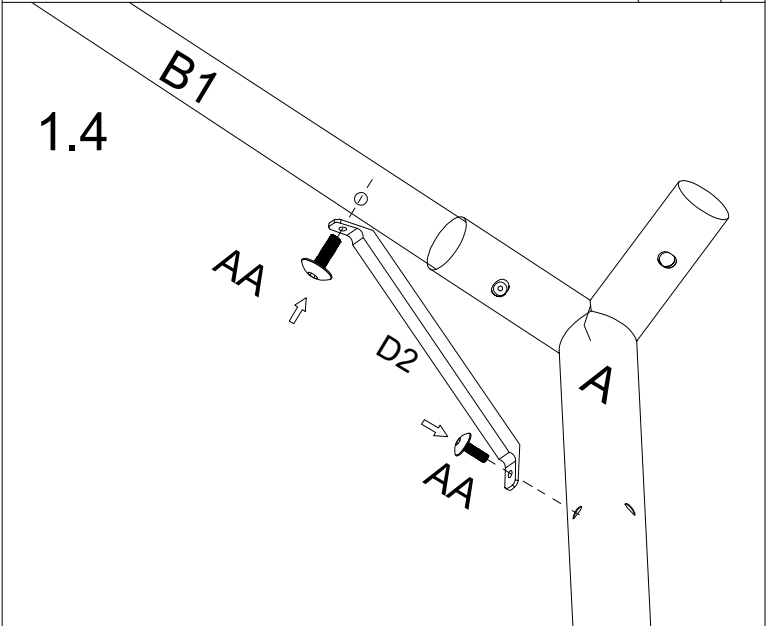

04




D2 X2





6x12


AA X6

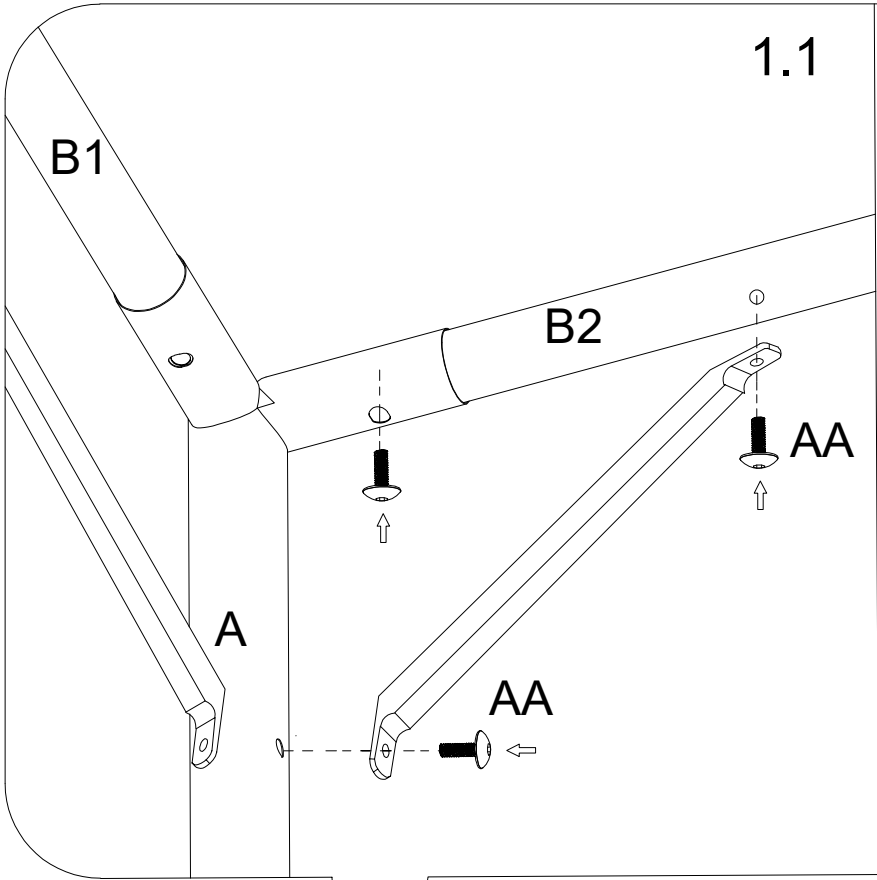

1.2

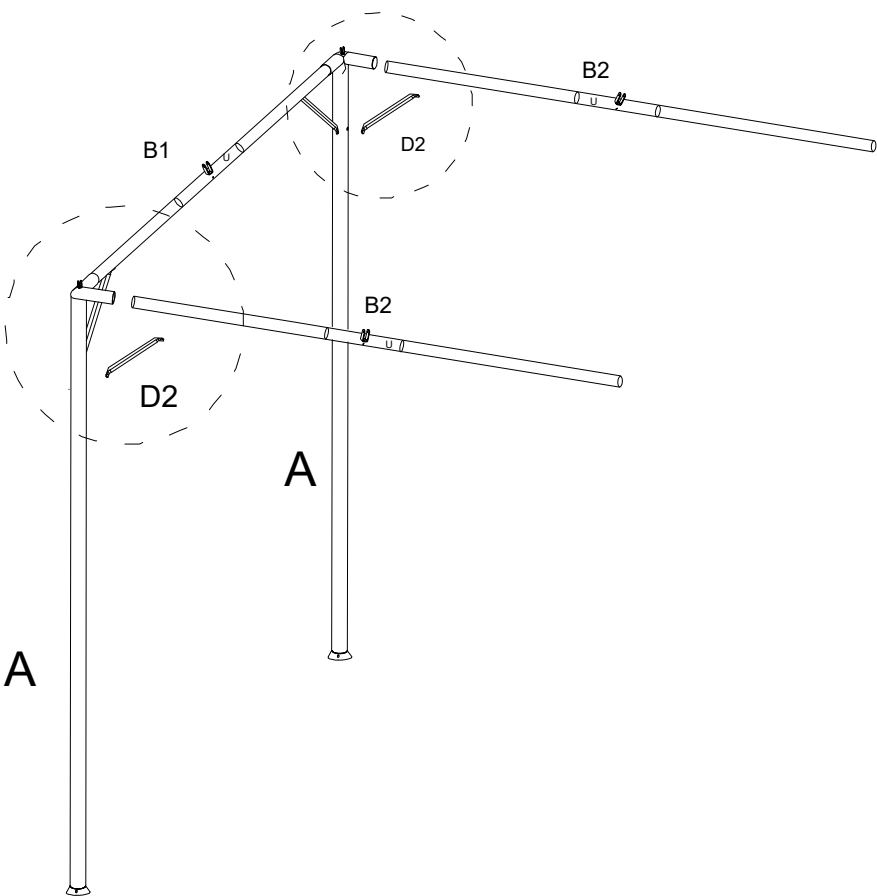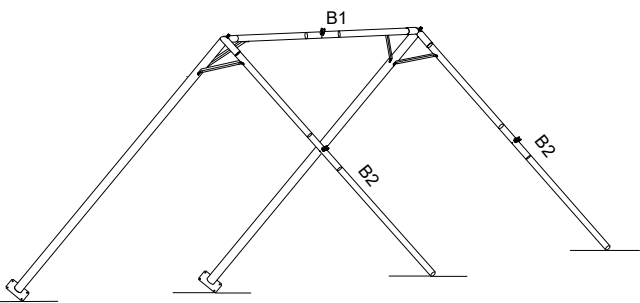

05





D2 X2




6x12


AA X6

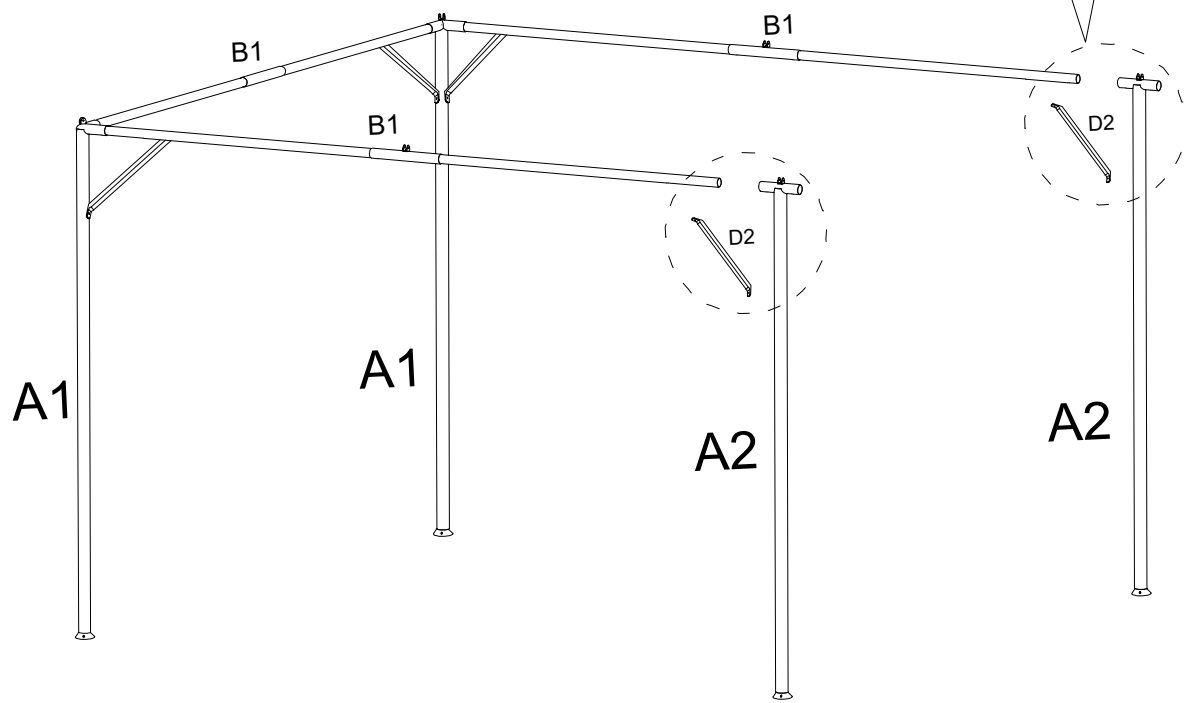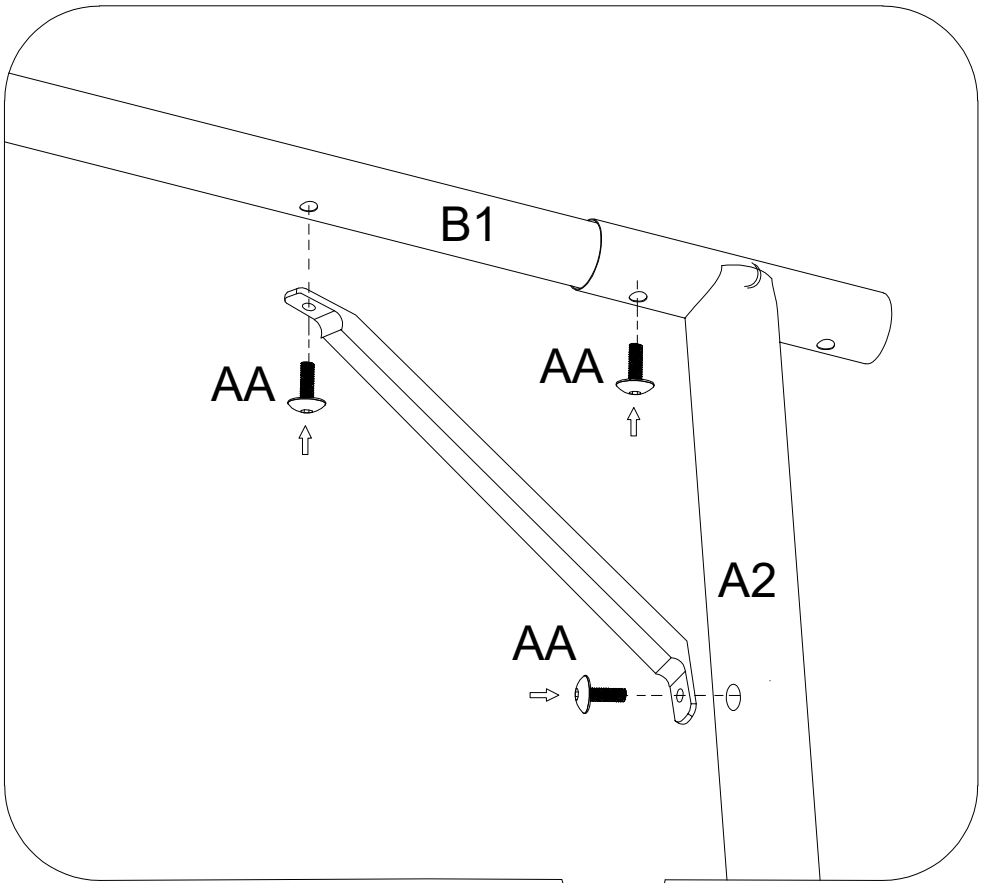

This Step needs 2-3 people

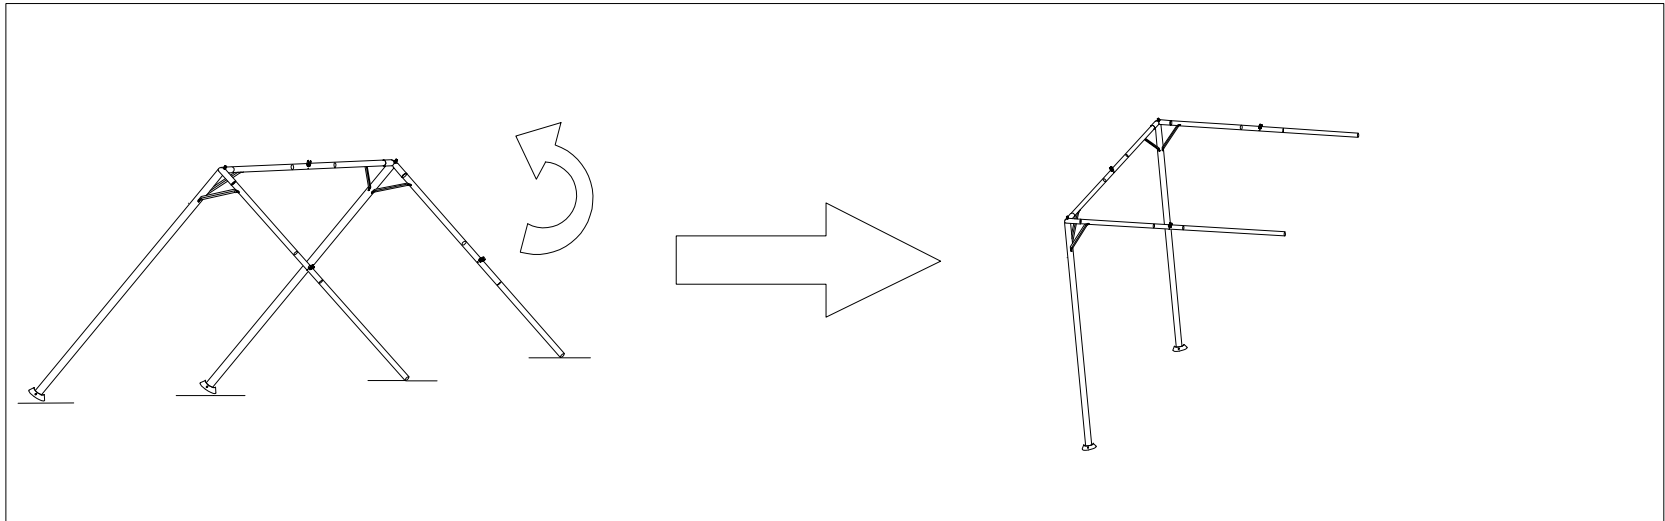

06






D2 X2







6x12

AA X6

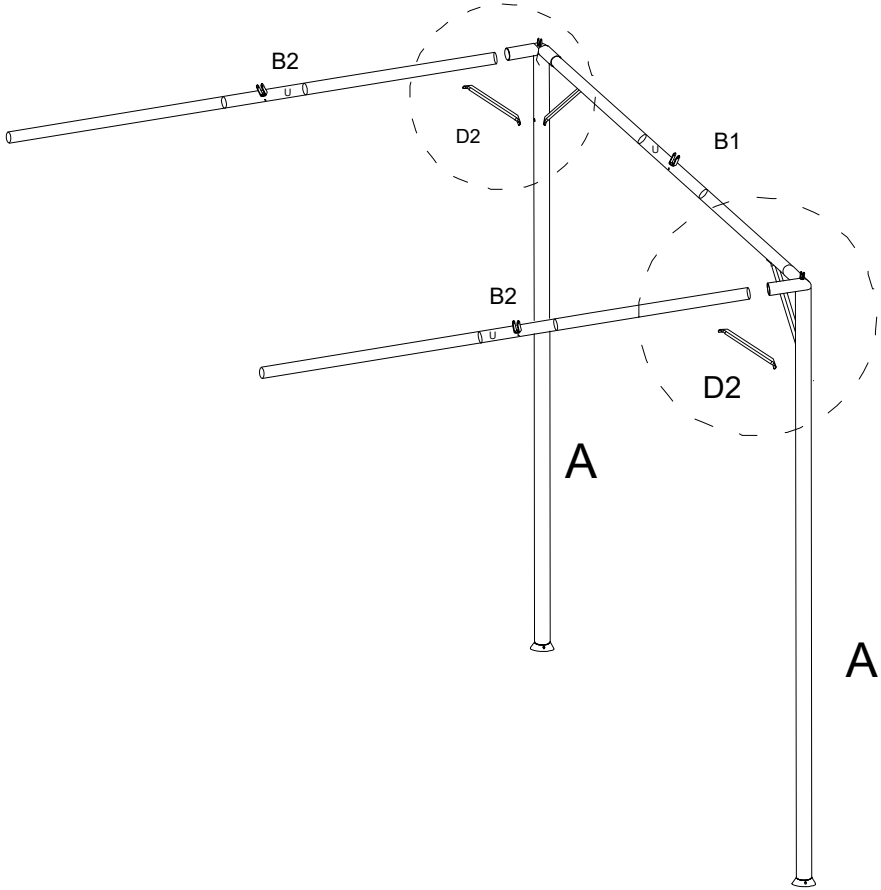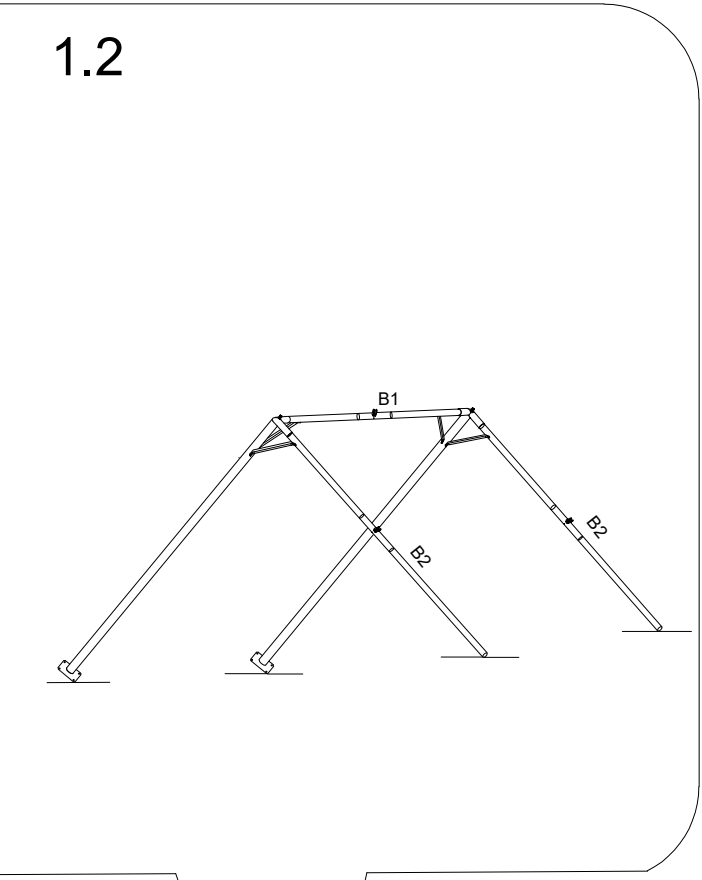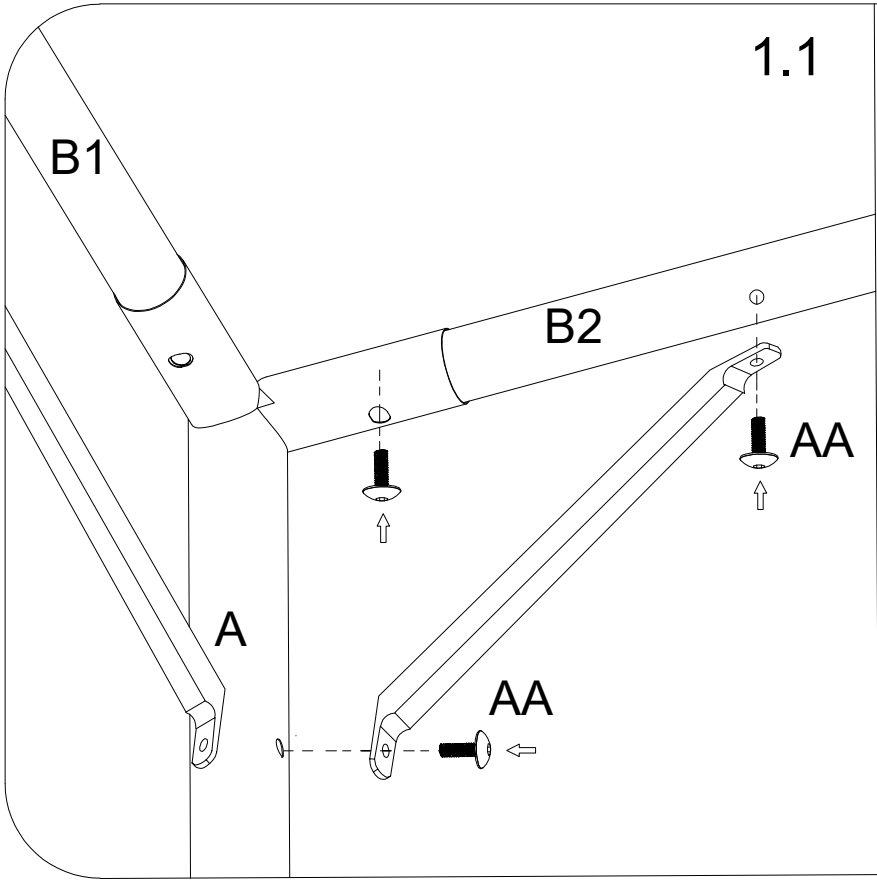


07

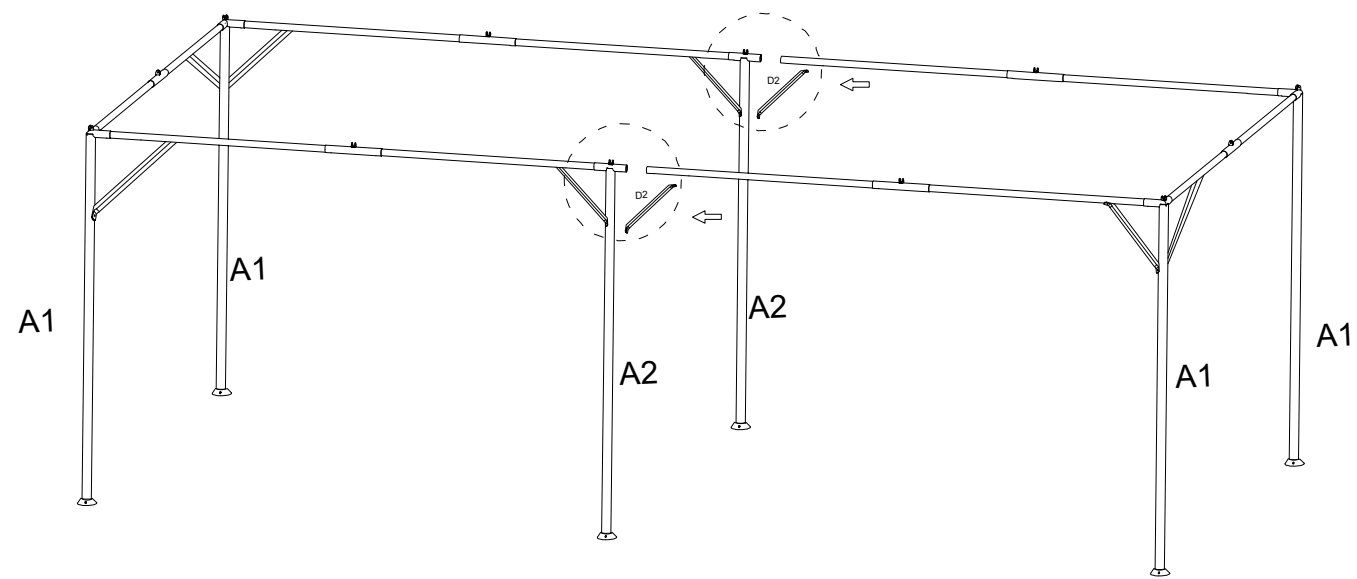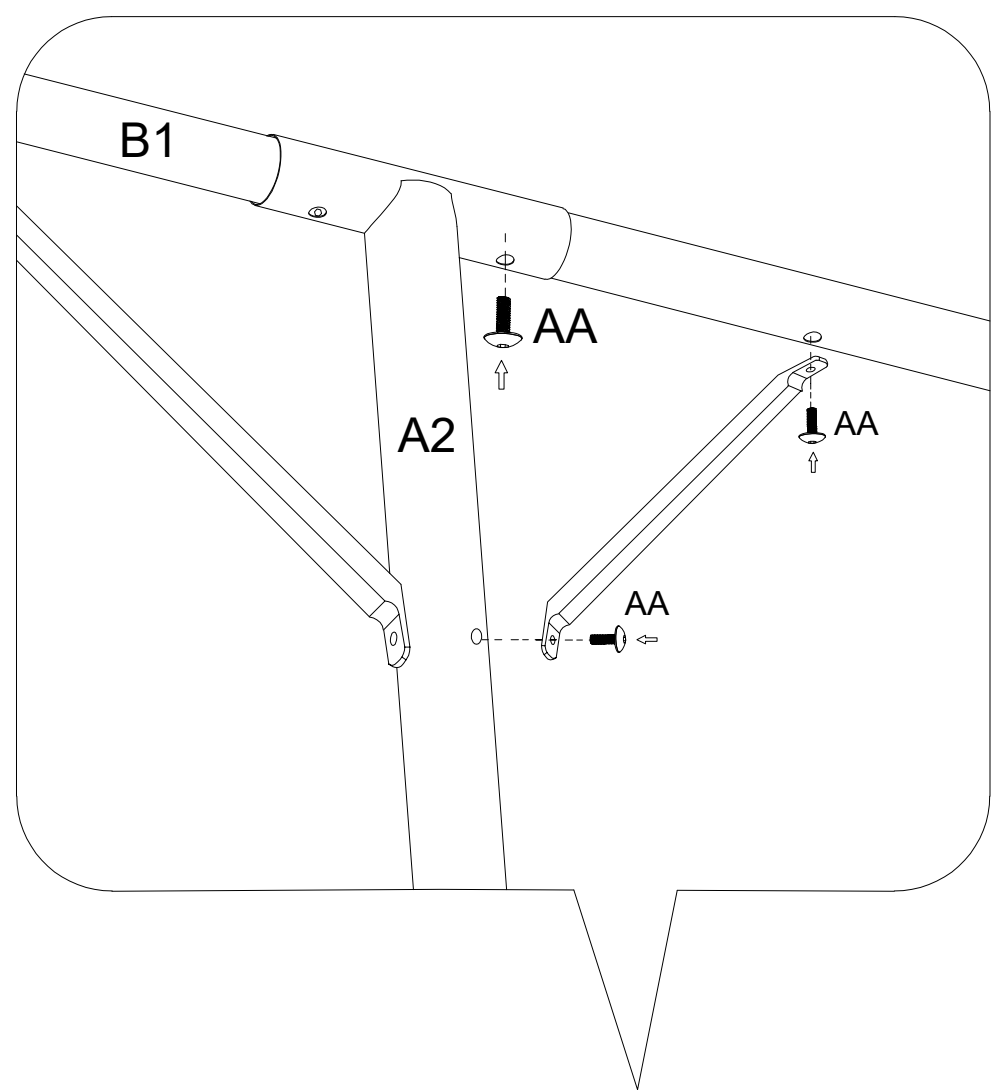


This Step needs 2 people

08




V X8







HH X1


Rope cleat

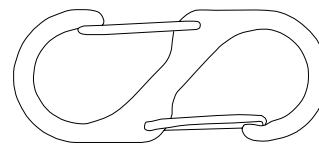

M5 X1

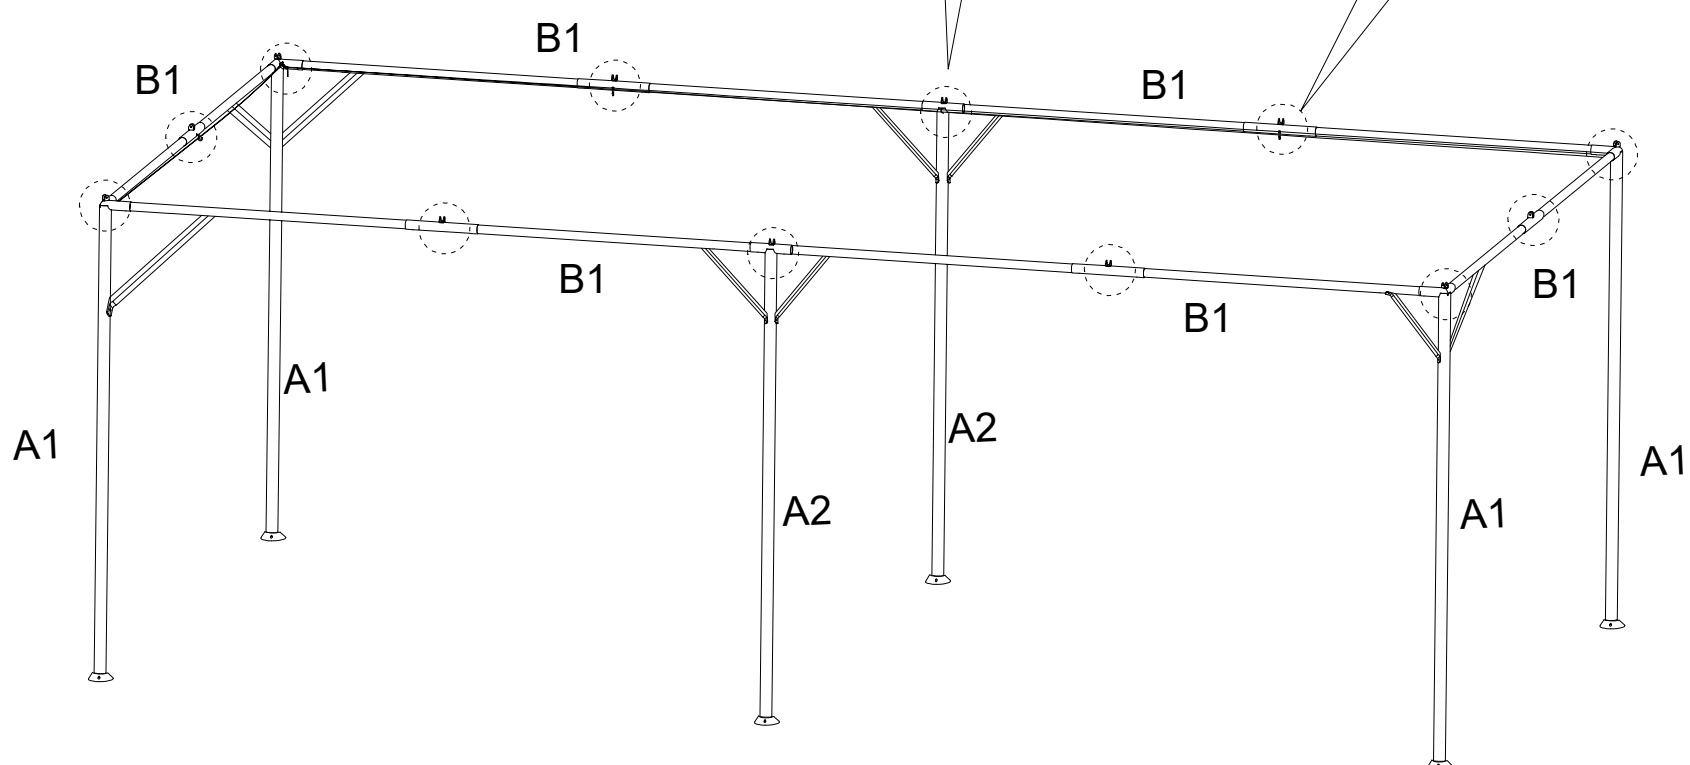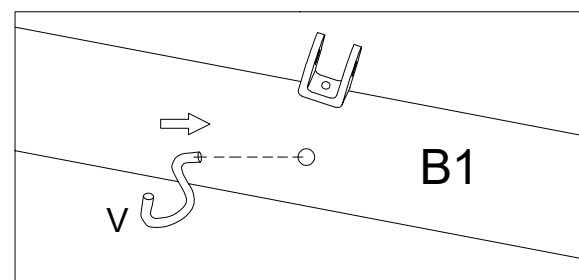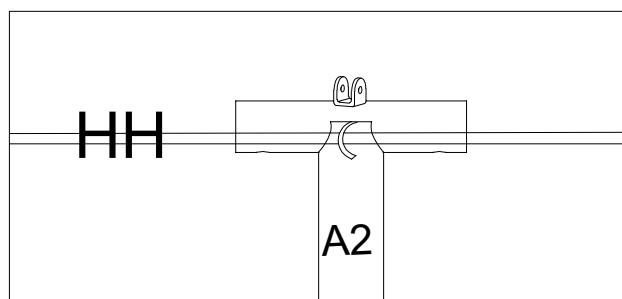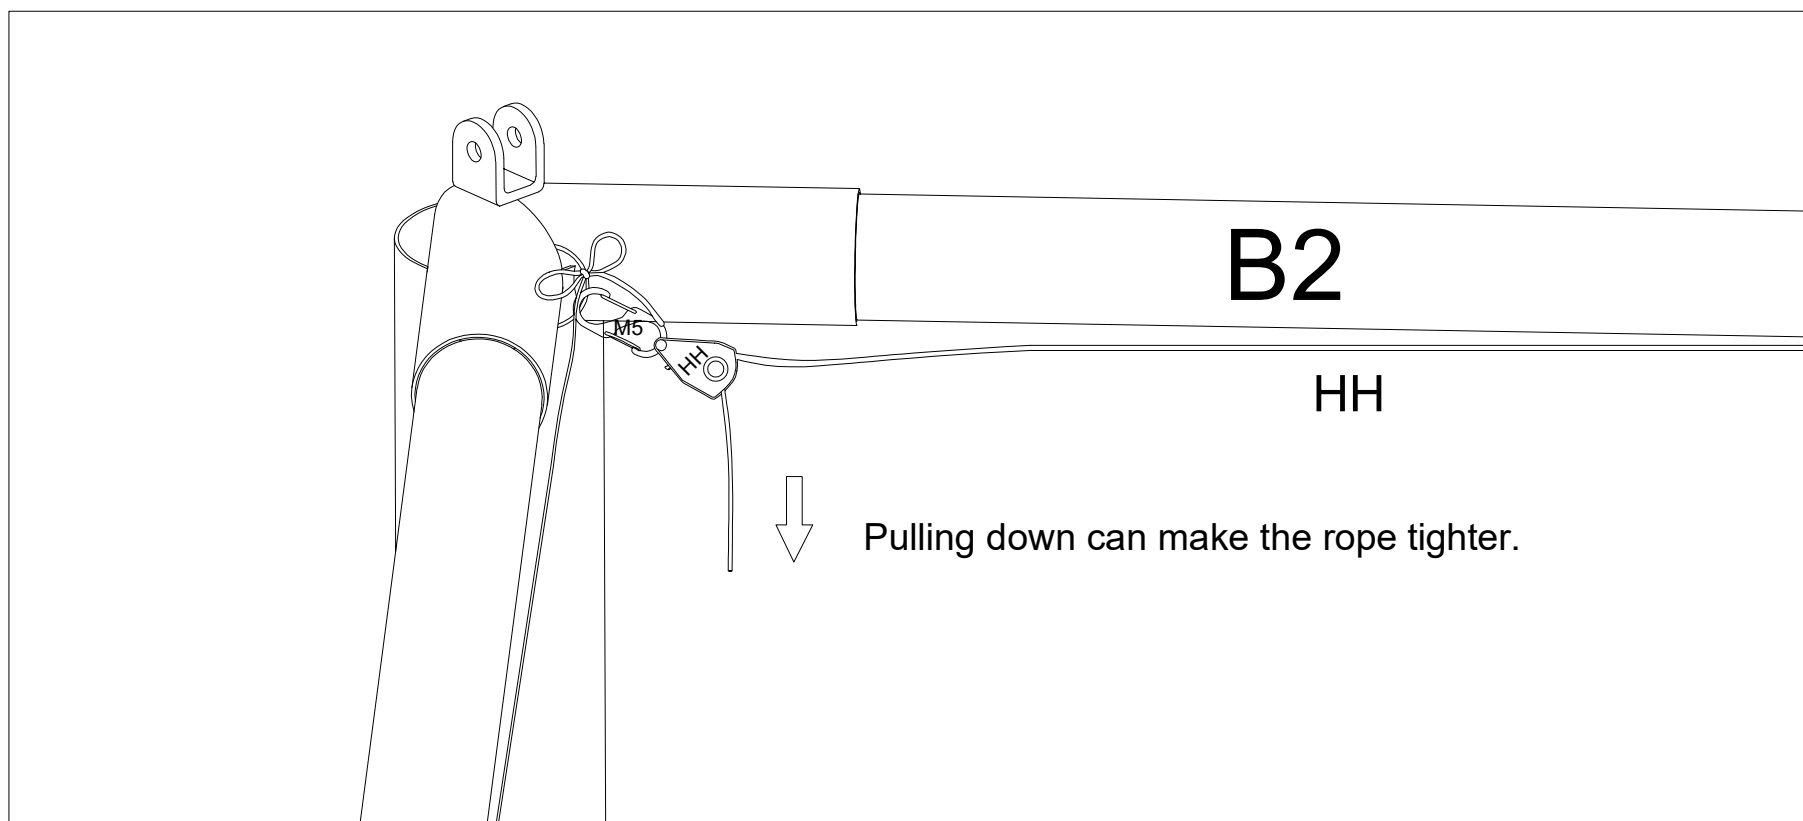

09




6x28

BB X2



M6

DD X6




6x35


GG X4



M1 X2



F1 X1




F2 X1



M2 X2



D1 X2




F X2




V1 X2


1.1

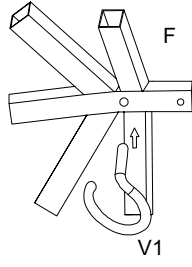


1.3

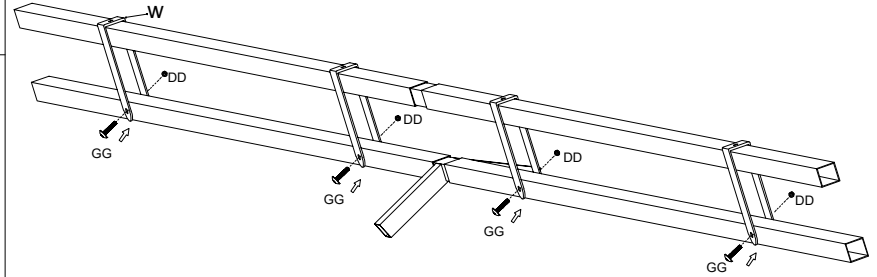


1.2

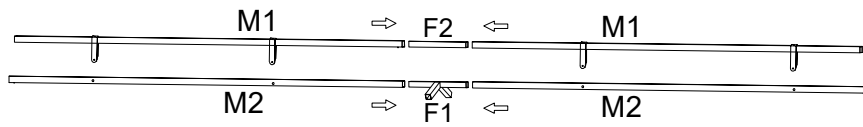


1.4

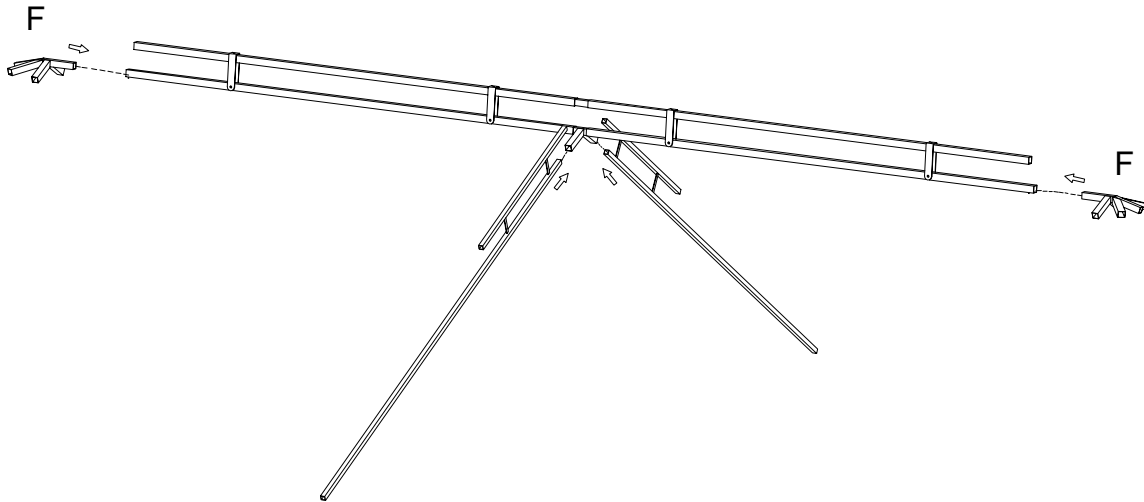


1.5

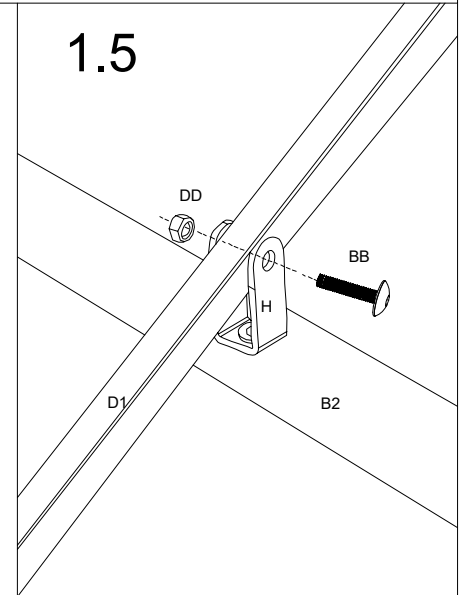

Need 2 people to set up the ladder operation

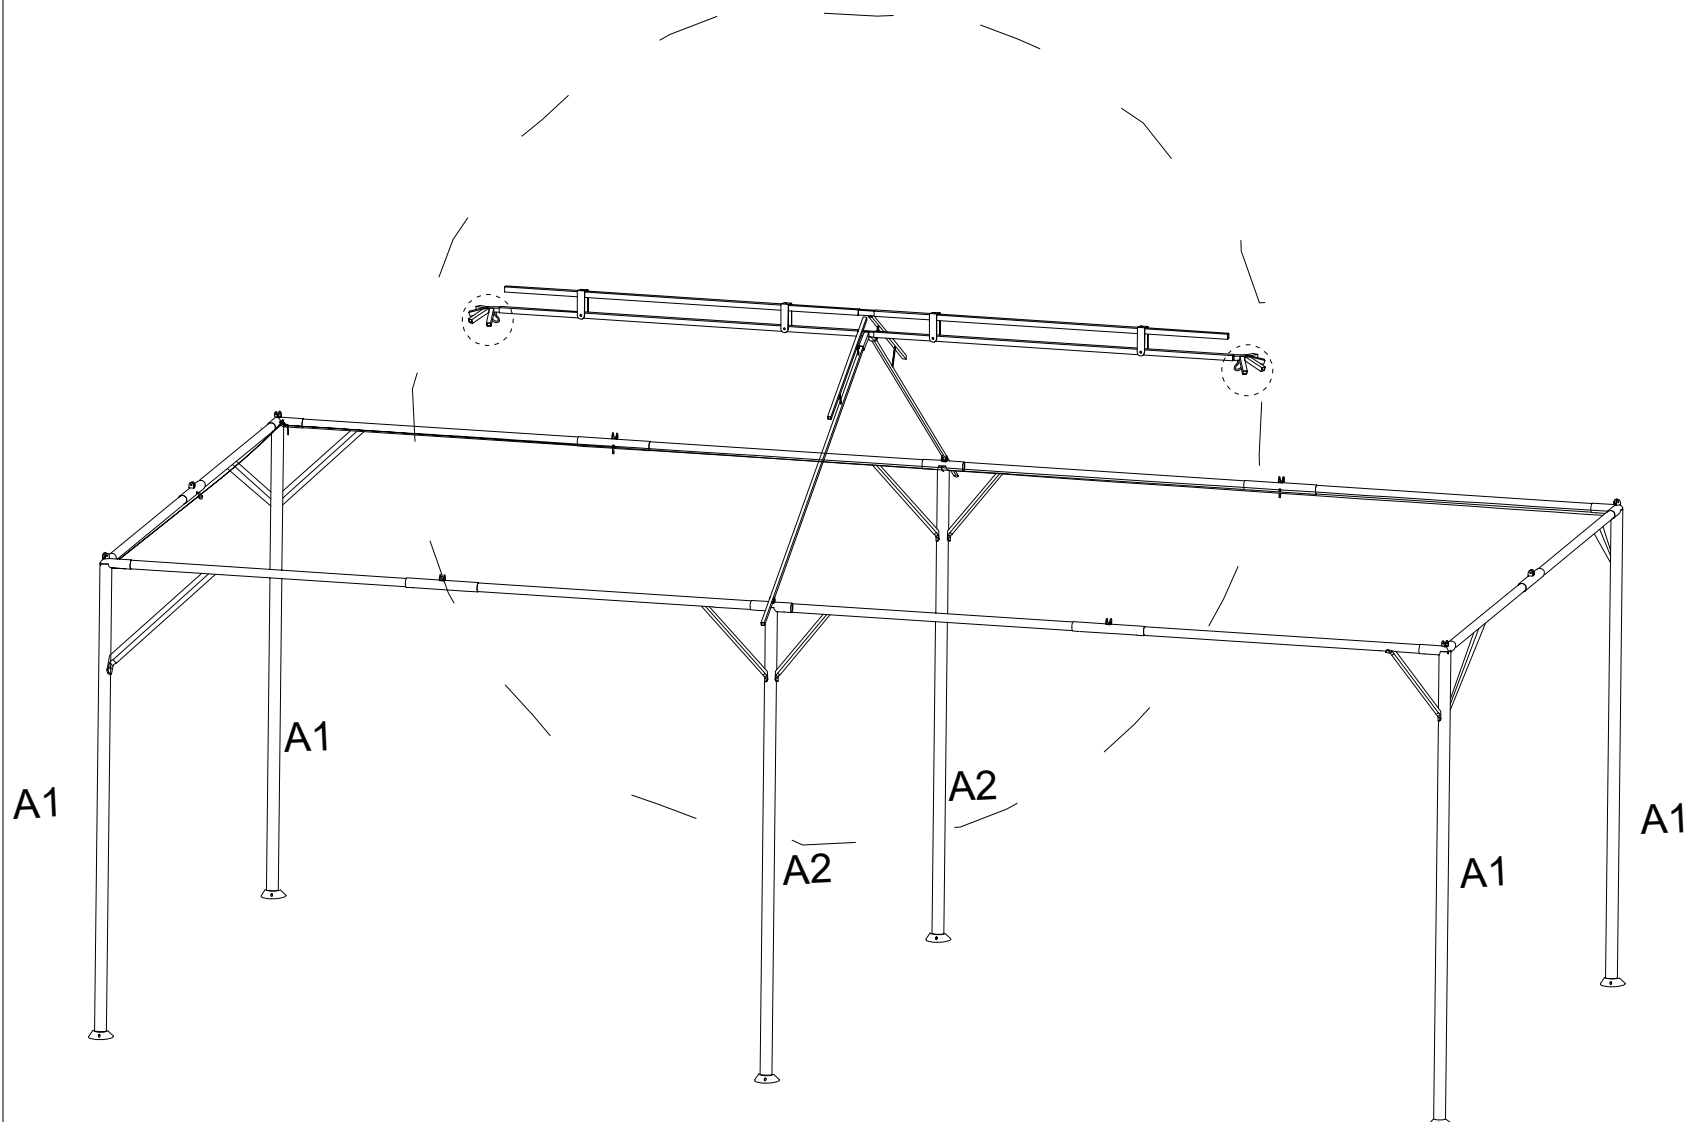


10

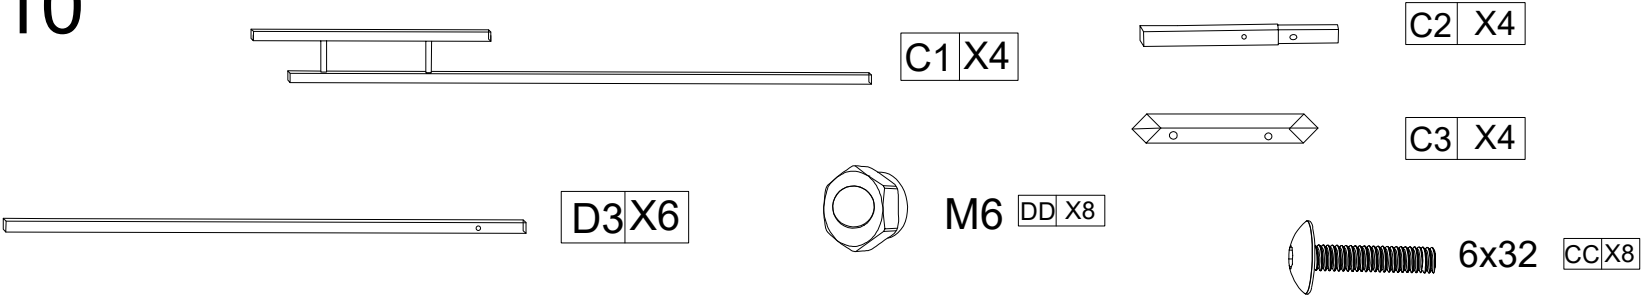

1.1












1.2

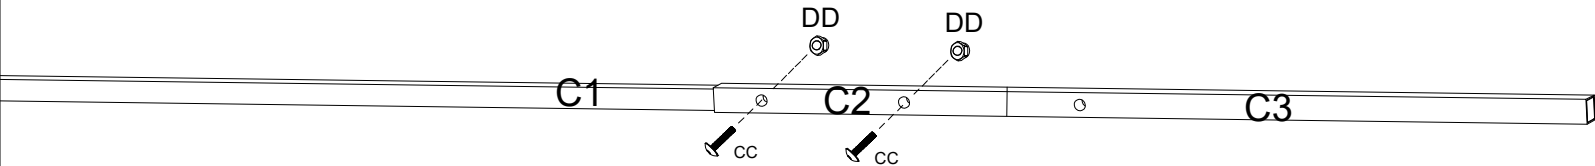


1.3

Need 2 people to set up the ladder operation

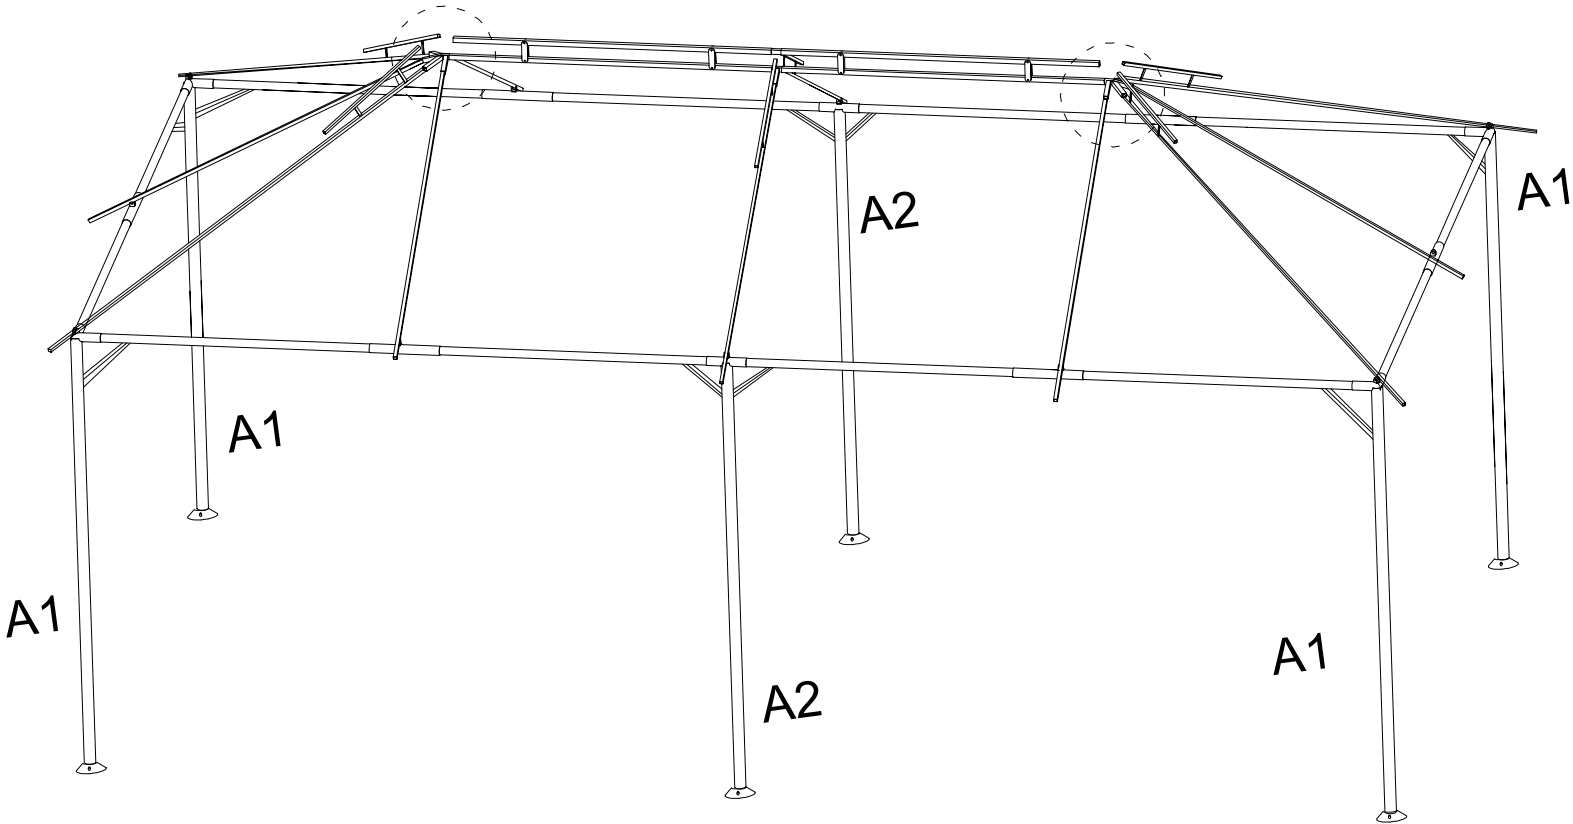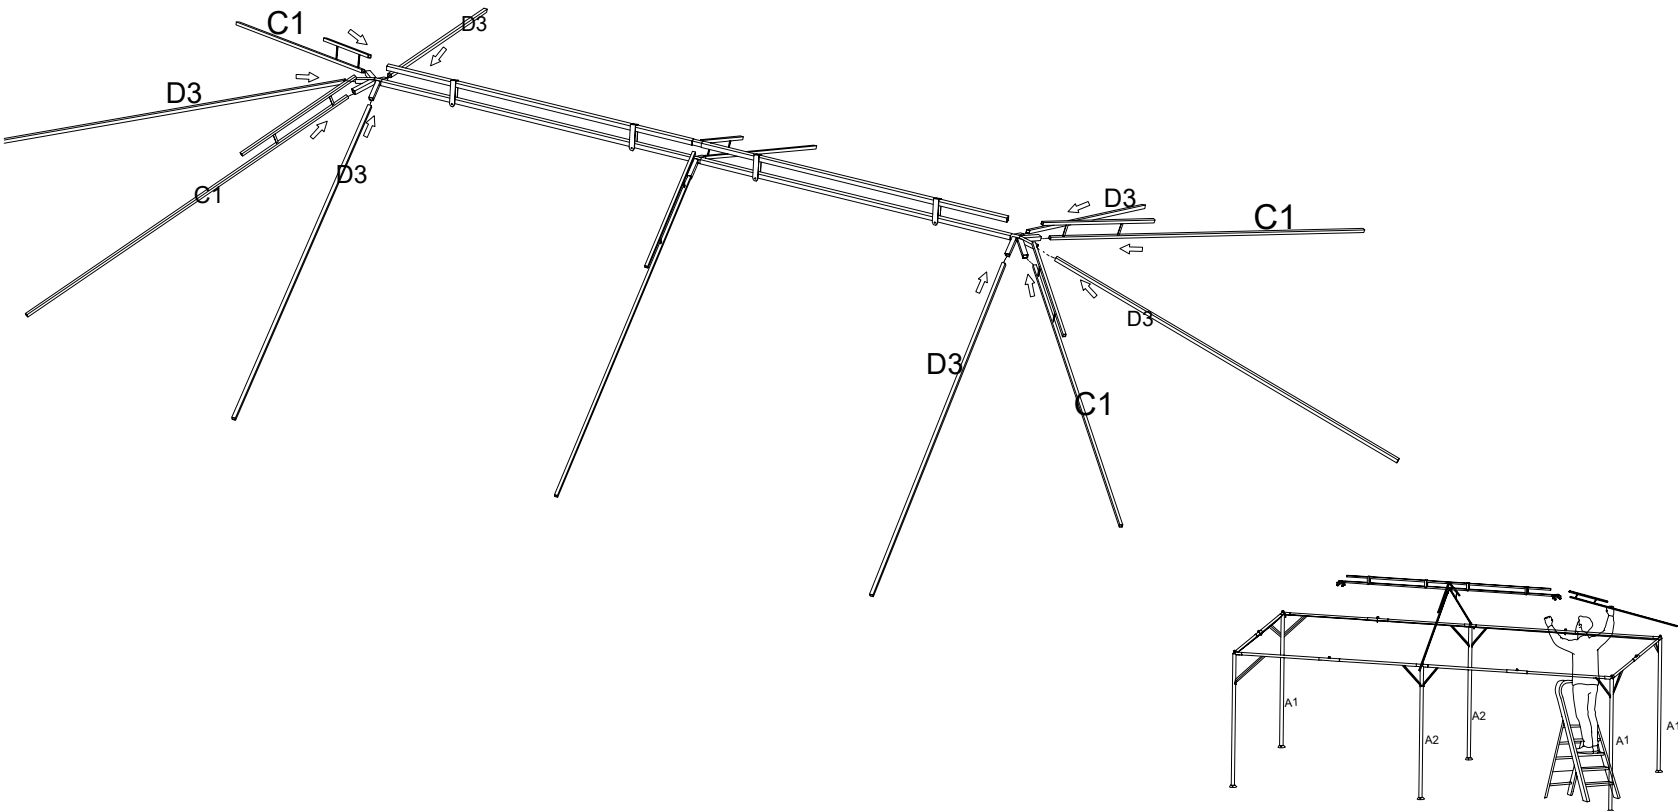


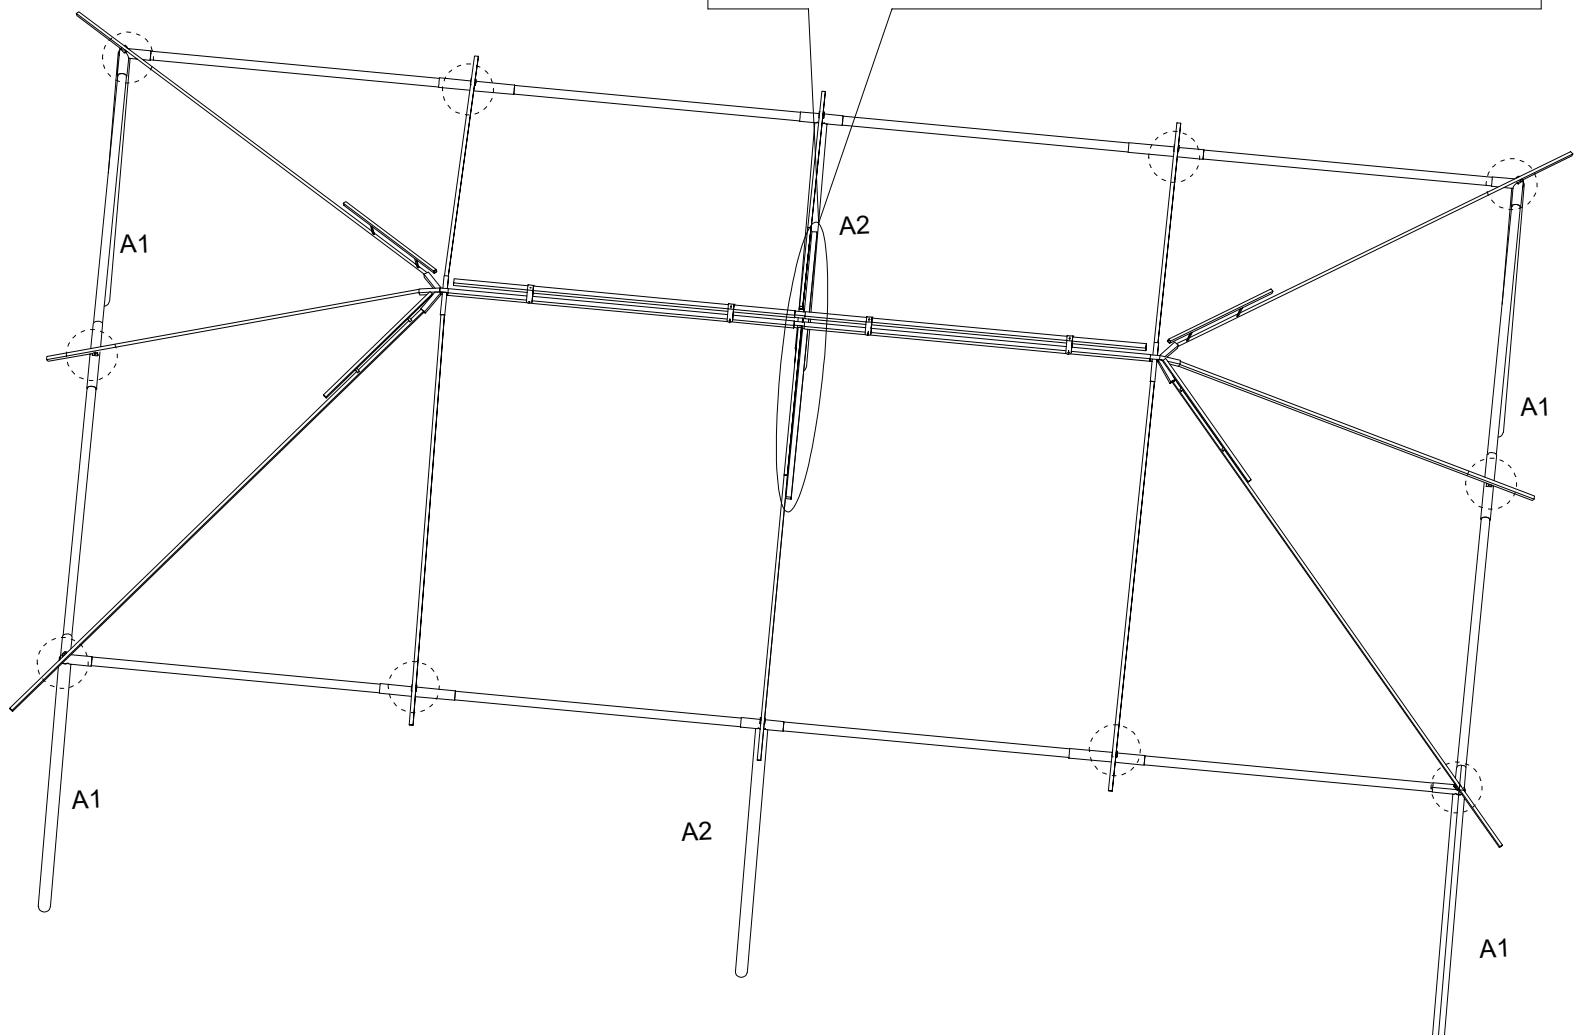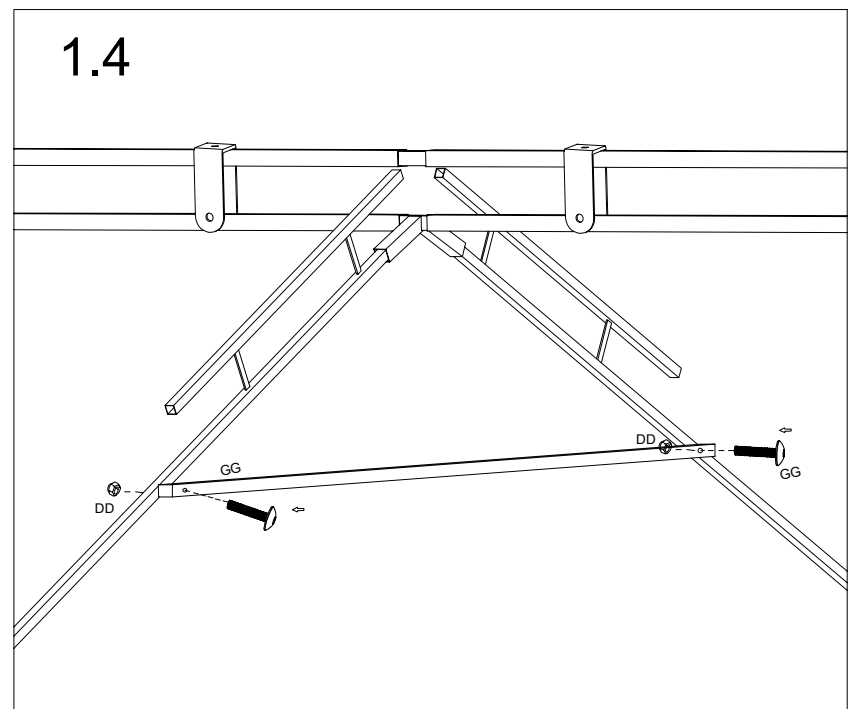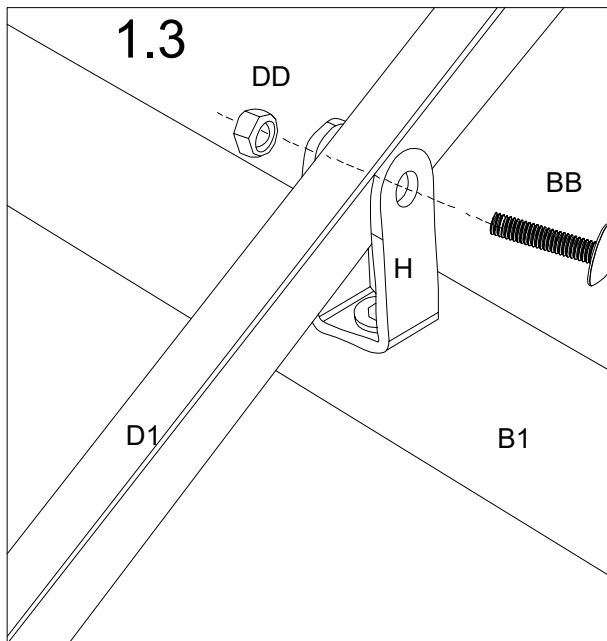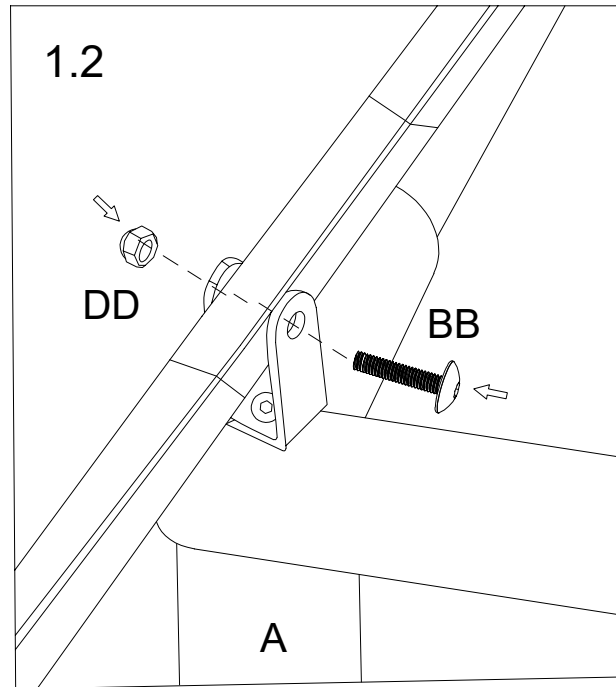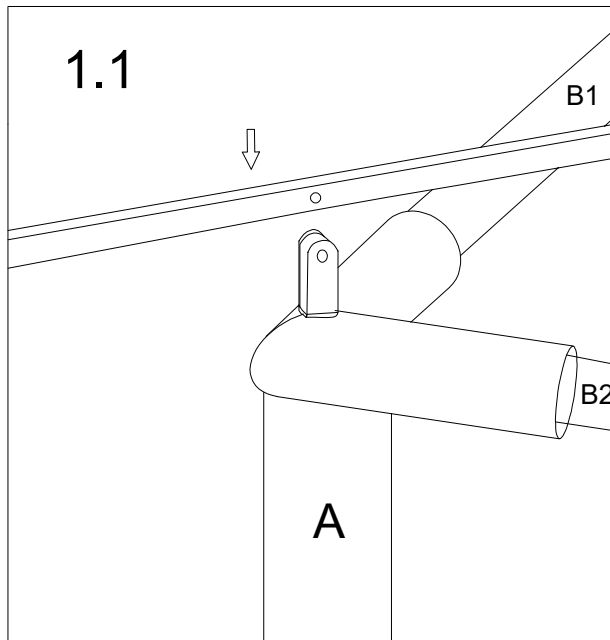



12

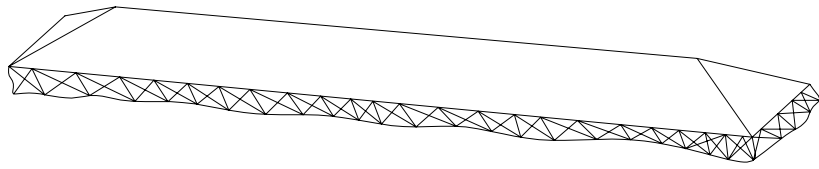


K X1

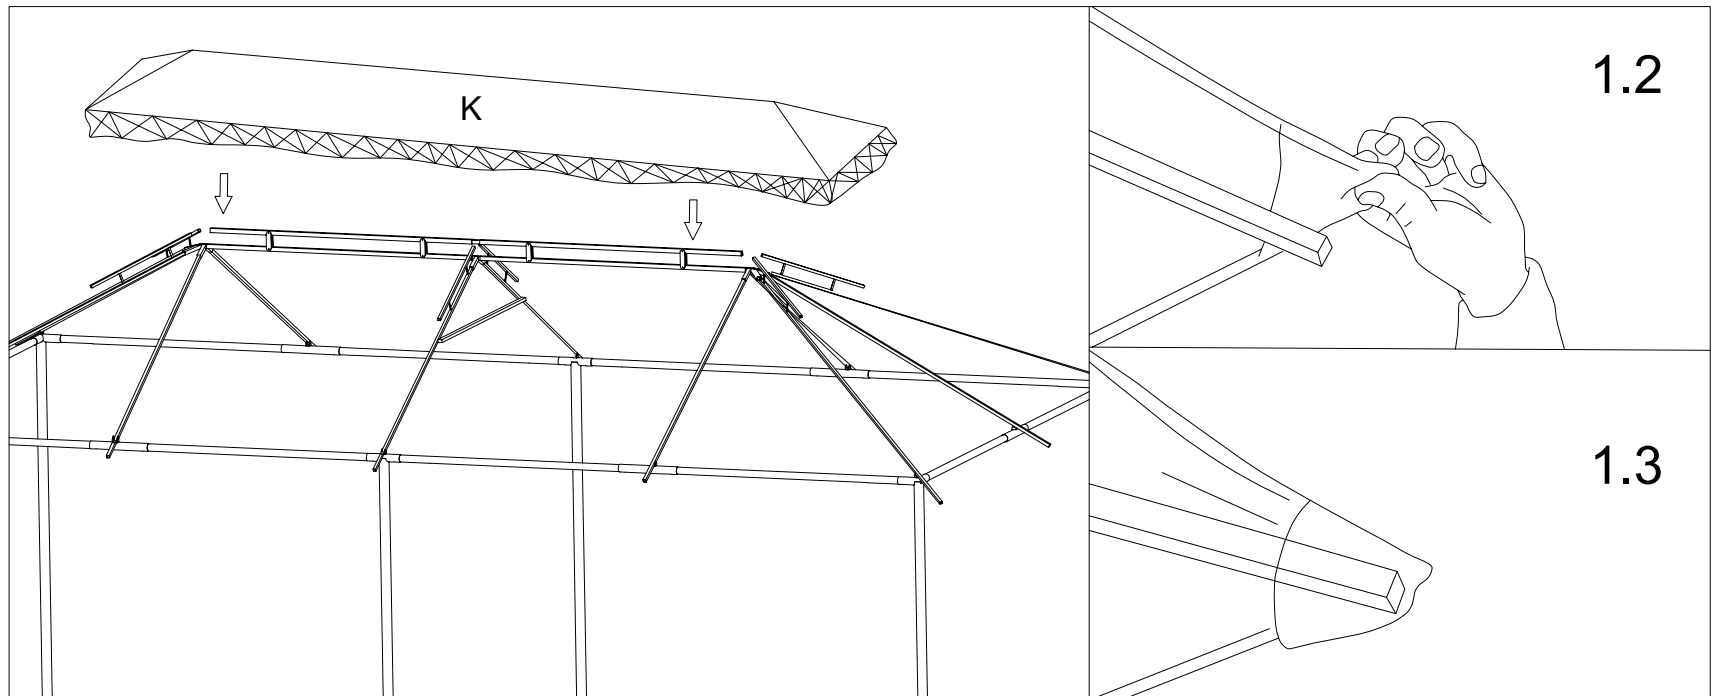

Set the small top cover K over the top frame.

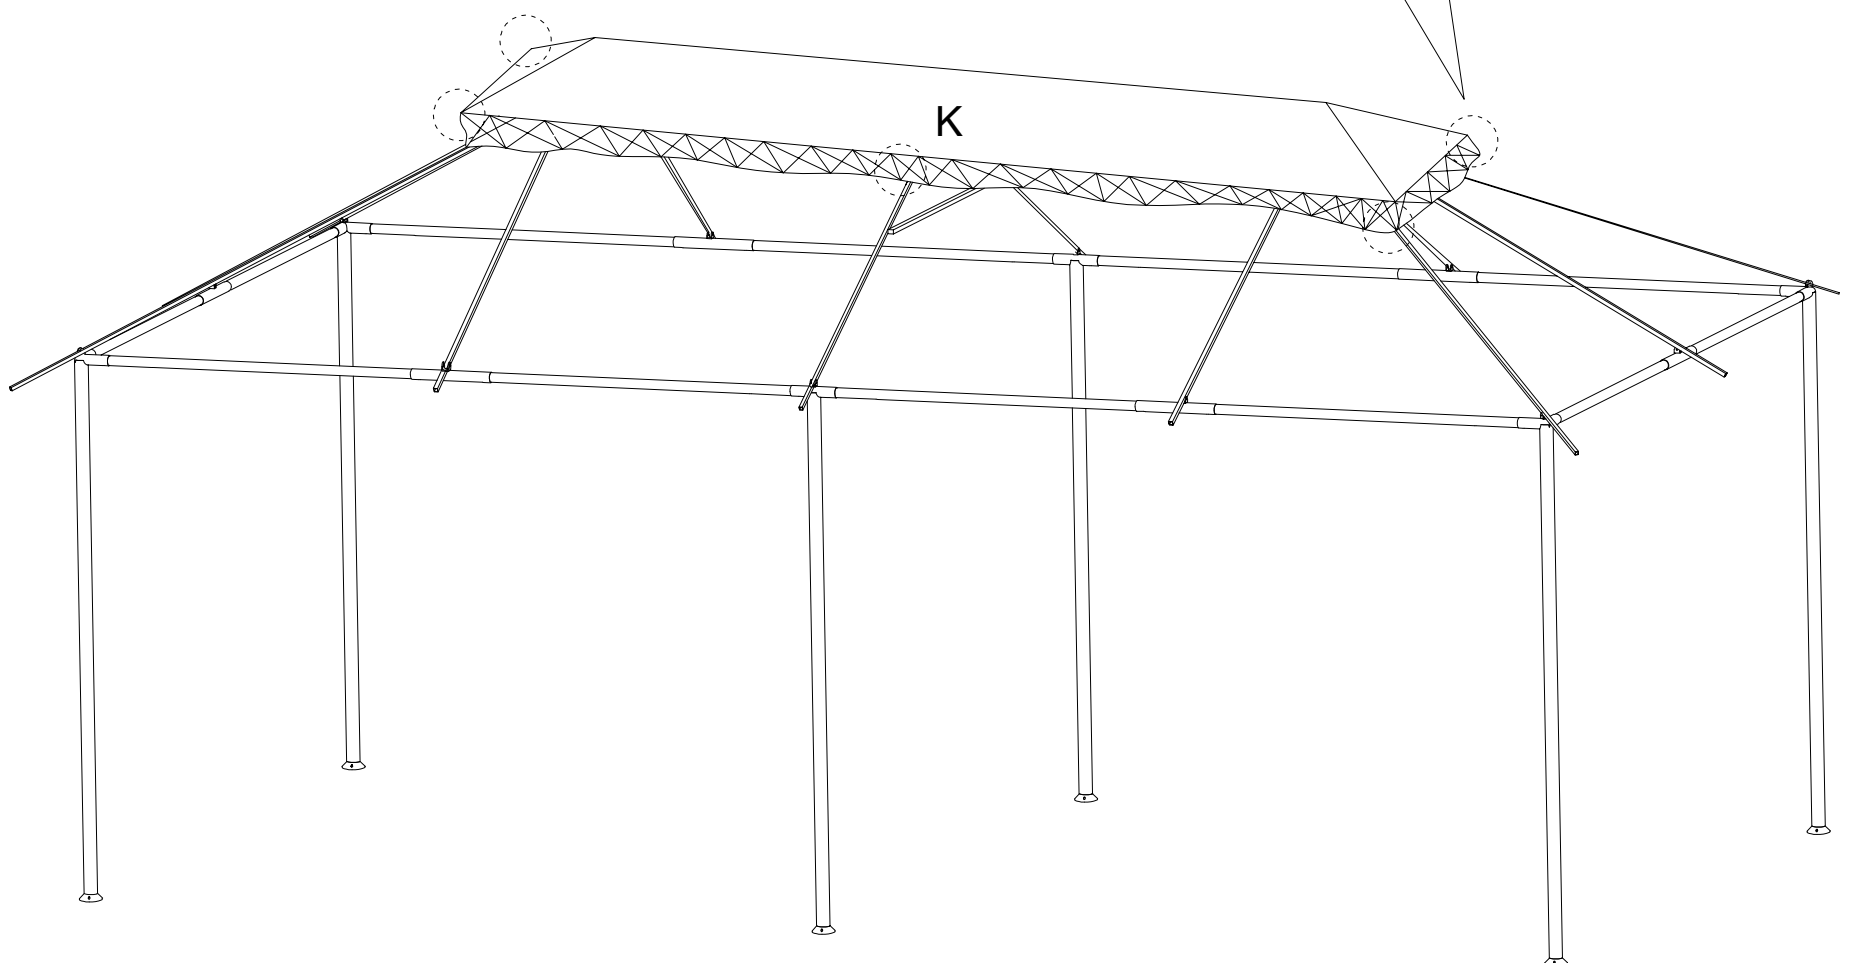


13

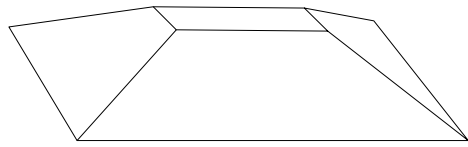



L	X1
---	----

Loose set of top cover L on the top frame.

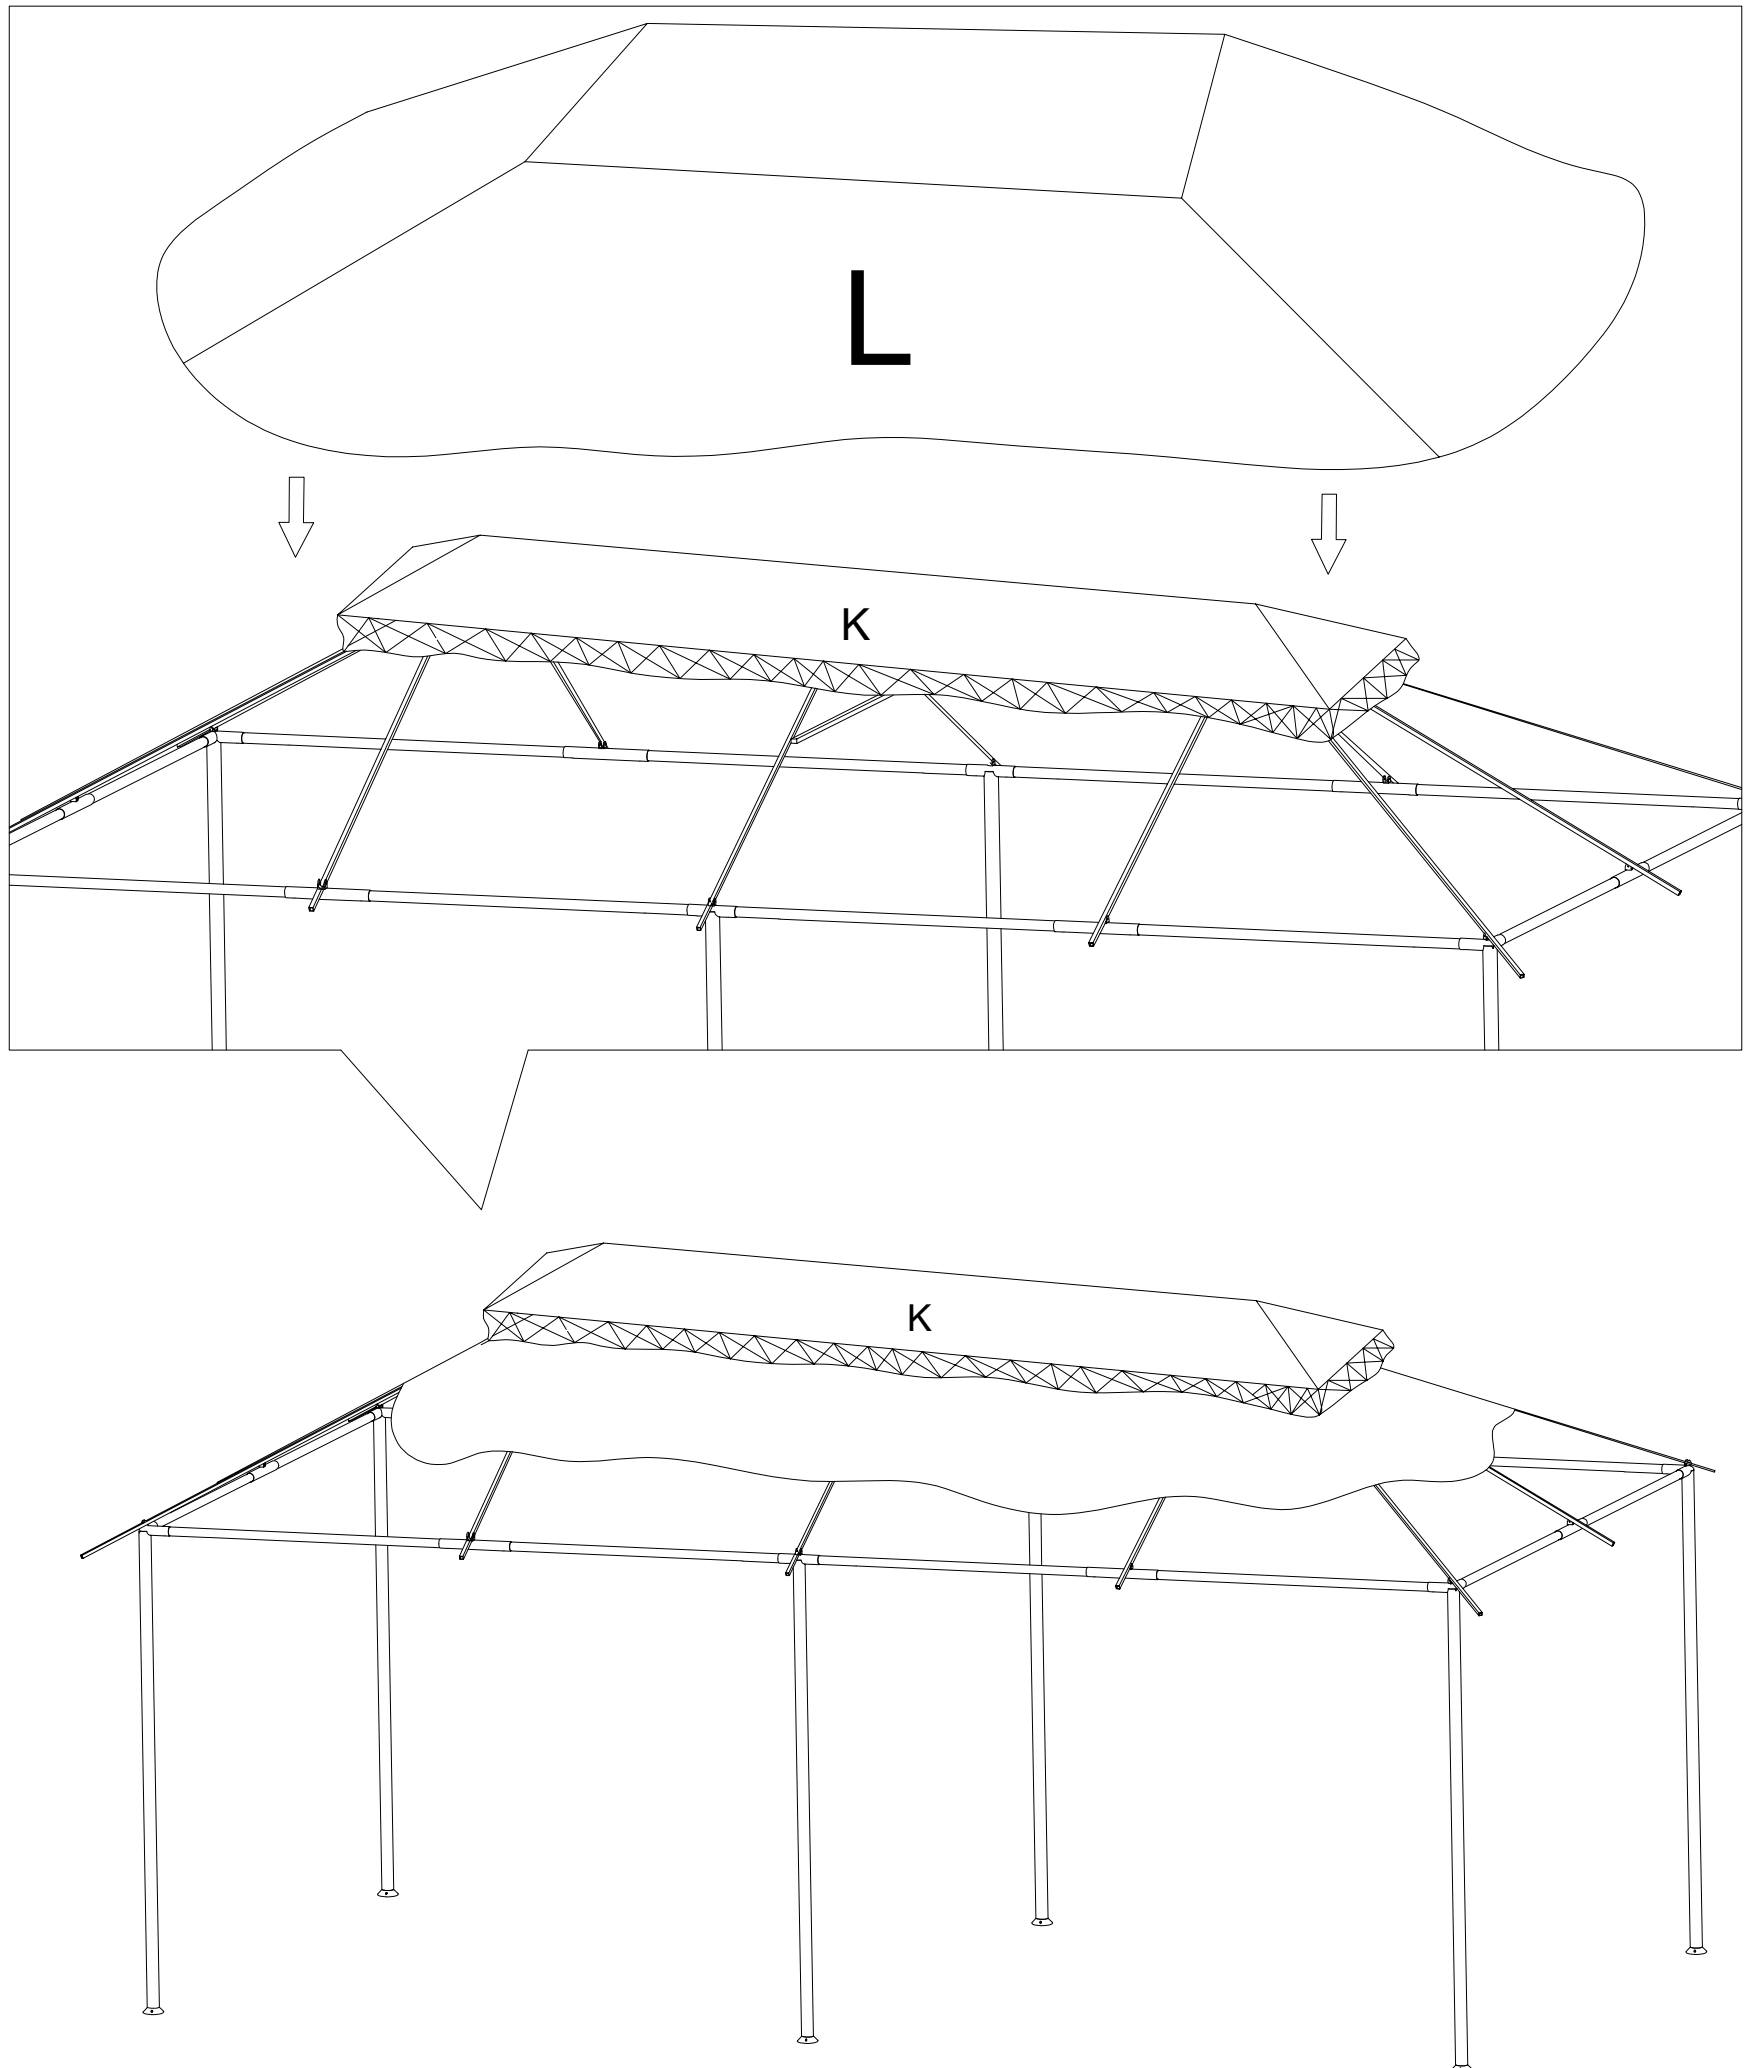




Set the top 4 sides fixed to the frame.

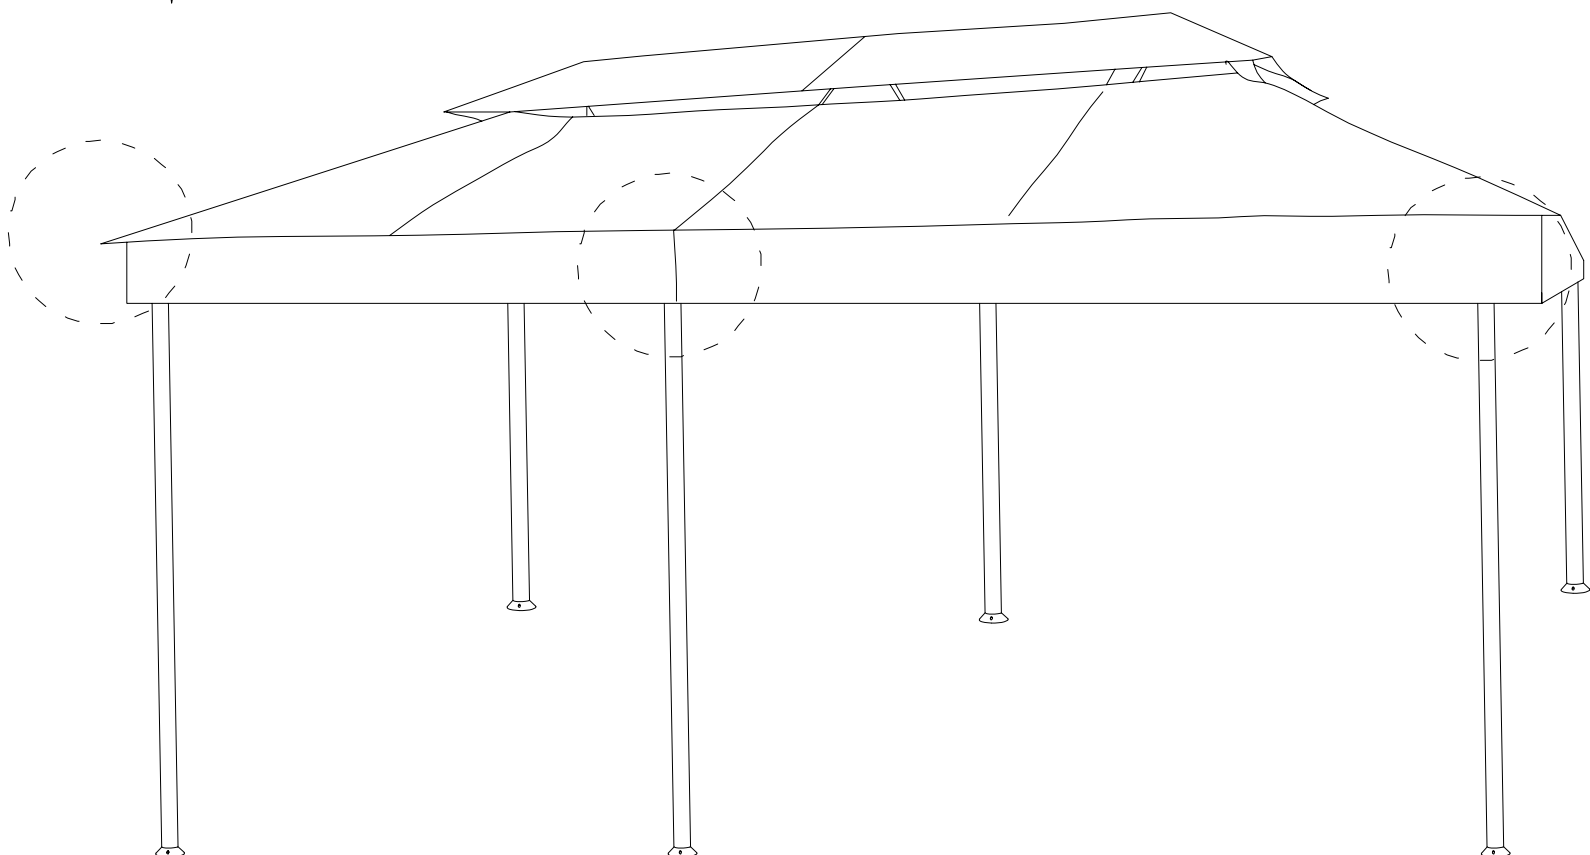

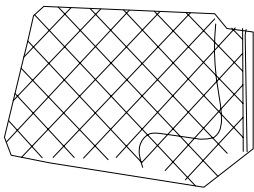


N	X4
---	----

Mosquito Mesh

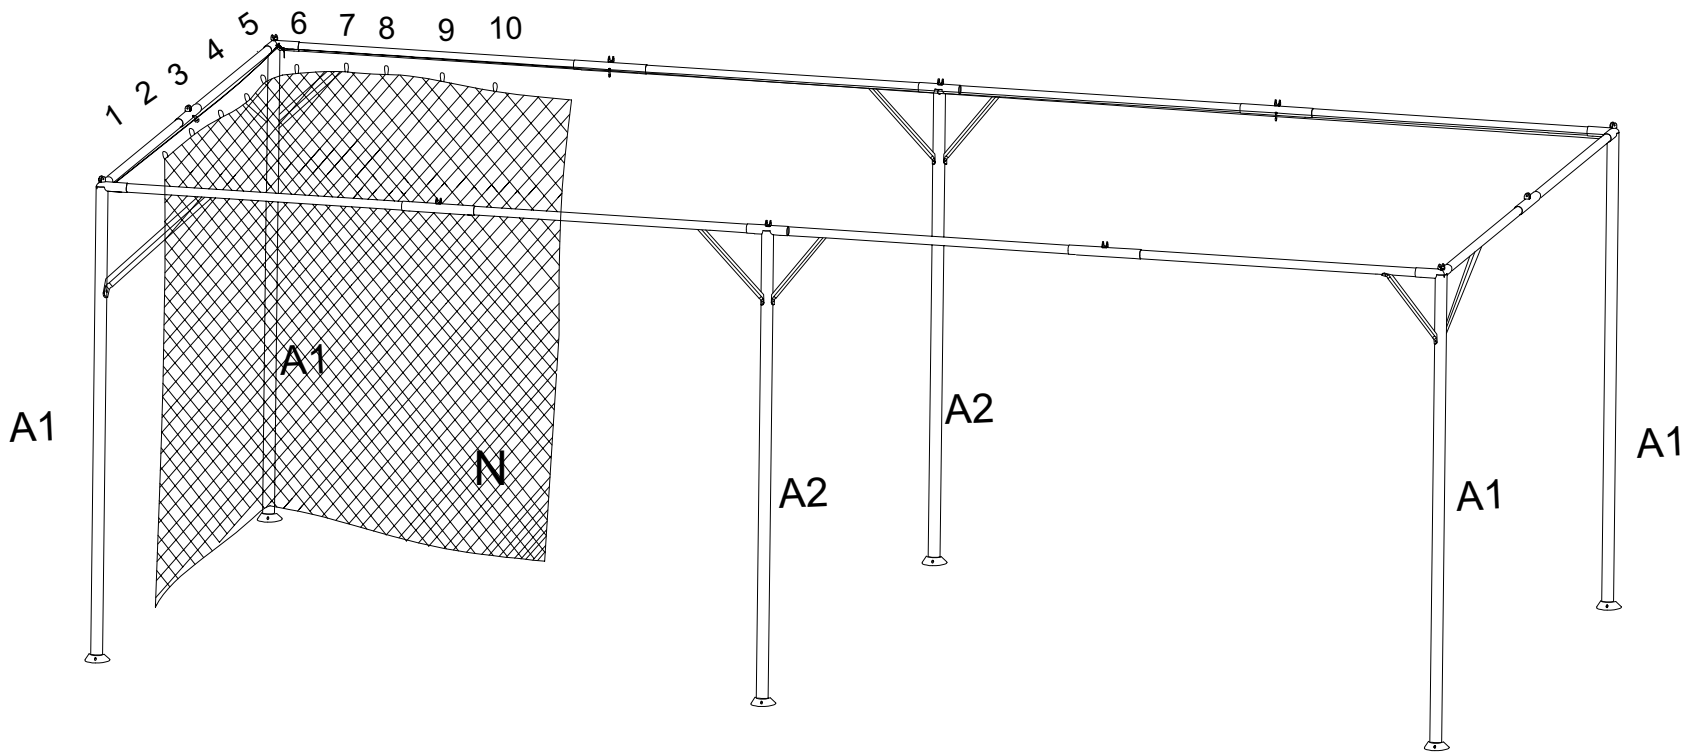
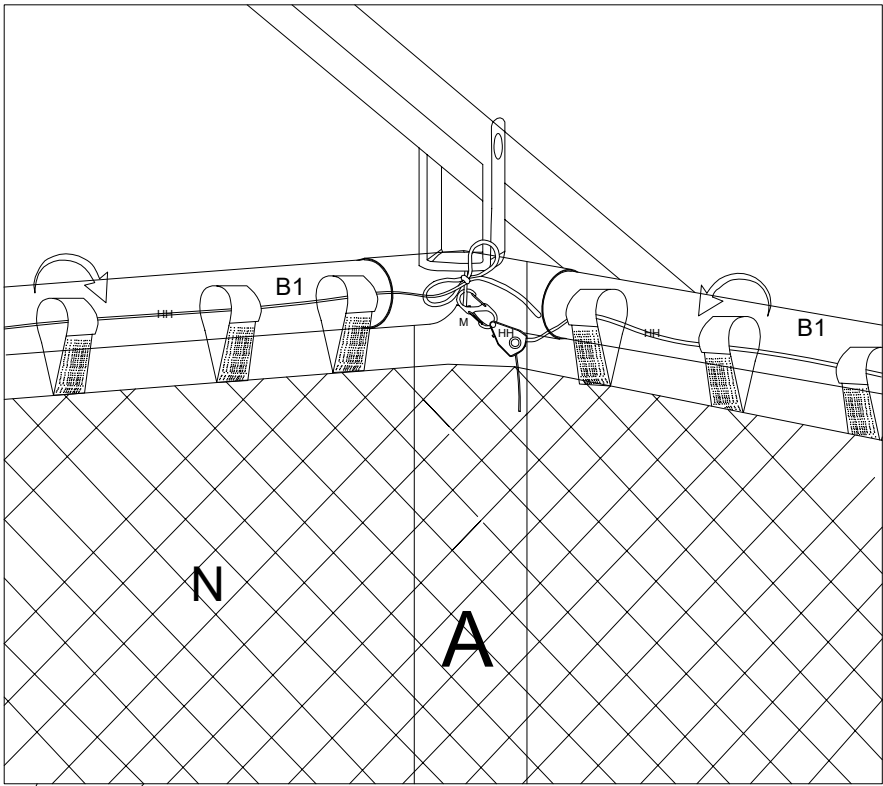
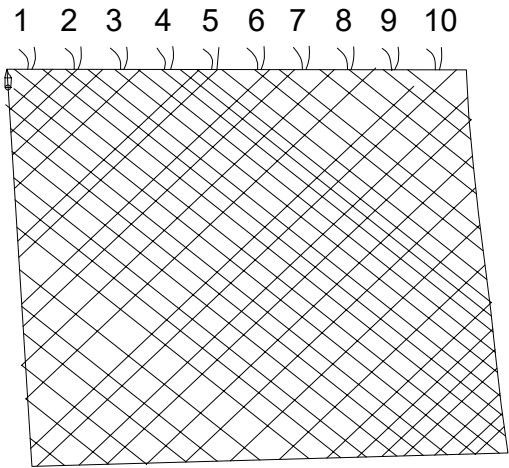


Fix it on the rope with the strap on the mosquito net.



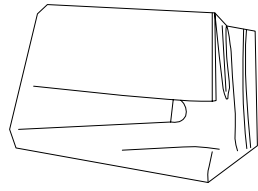



M X4

Privacy Curtain

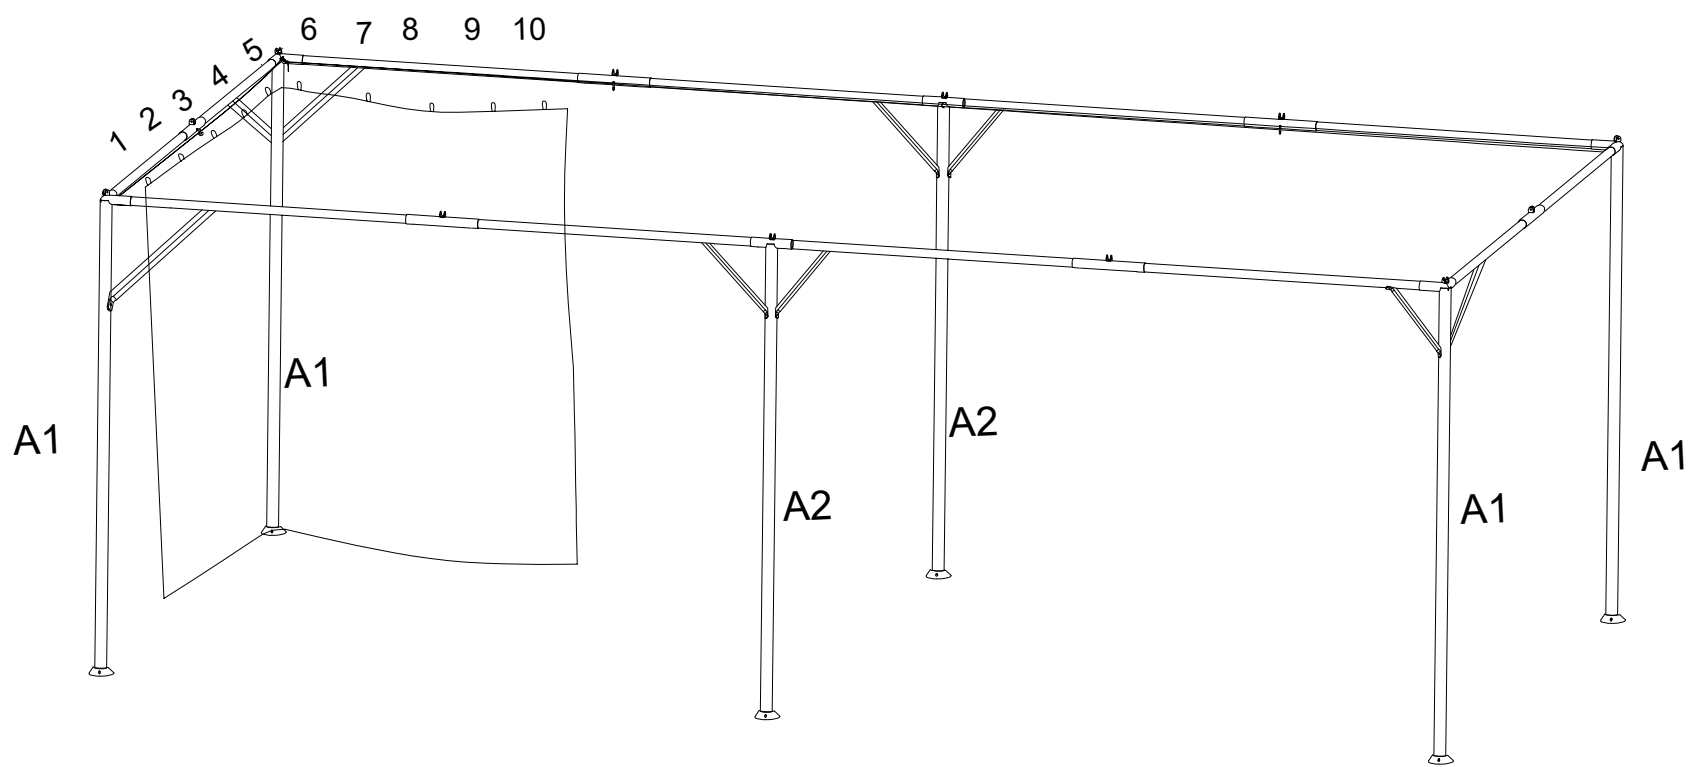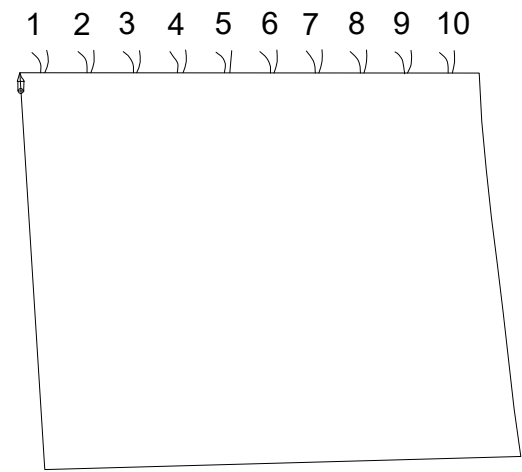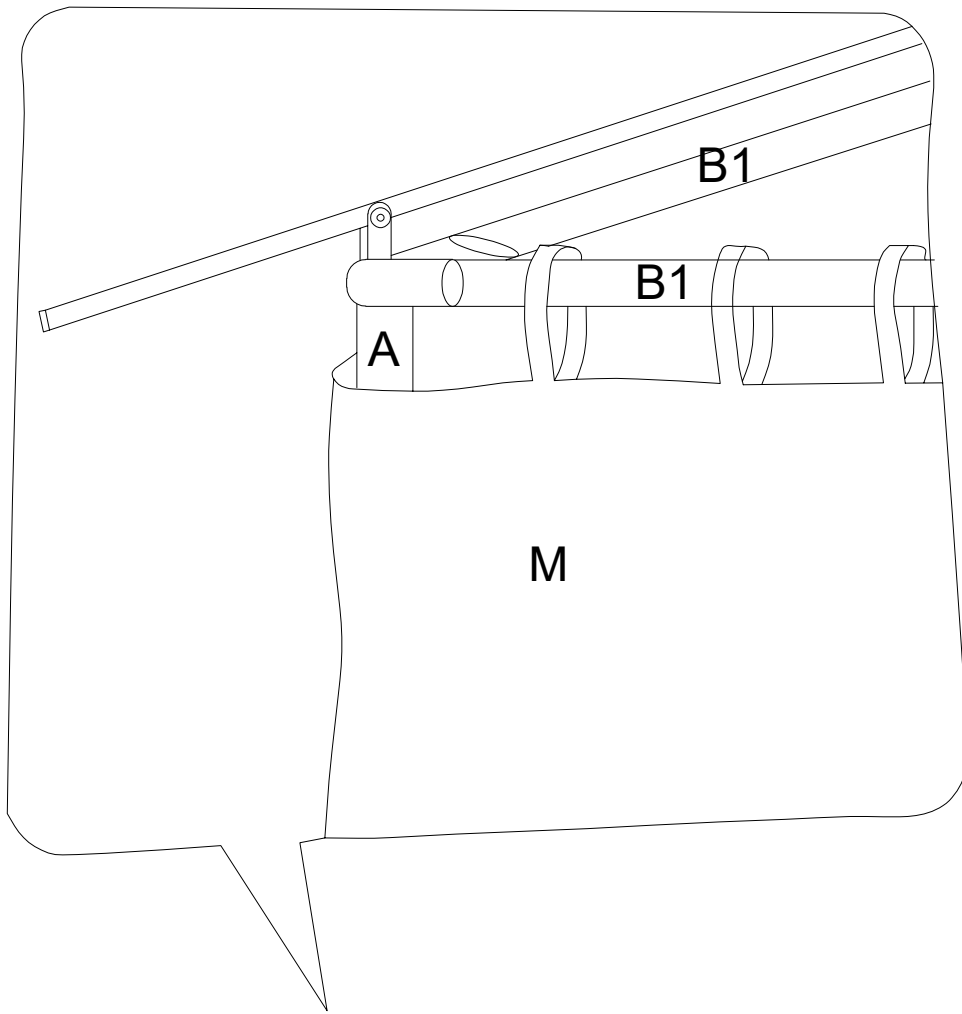

The netting N and the curtains M can be fixed to the frame A by the straps when net/curtains are not using.


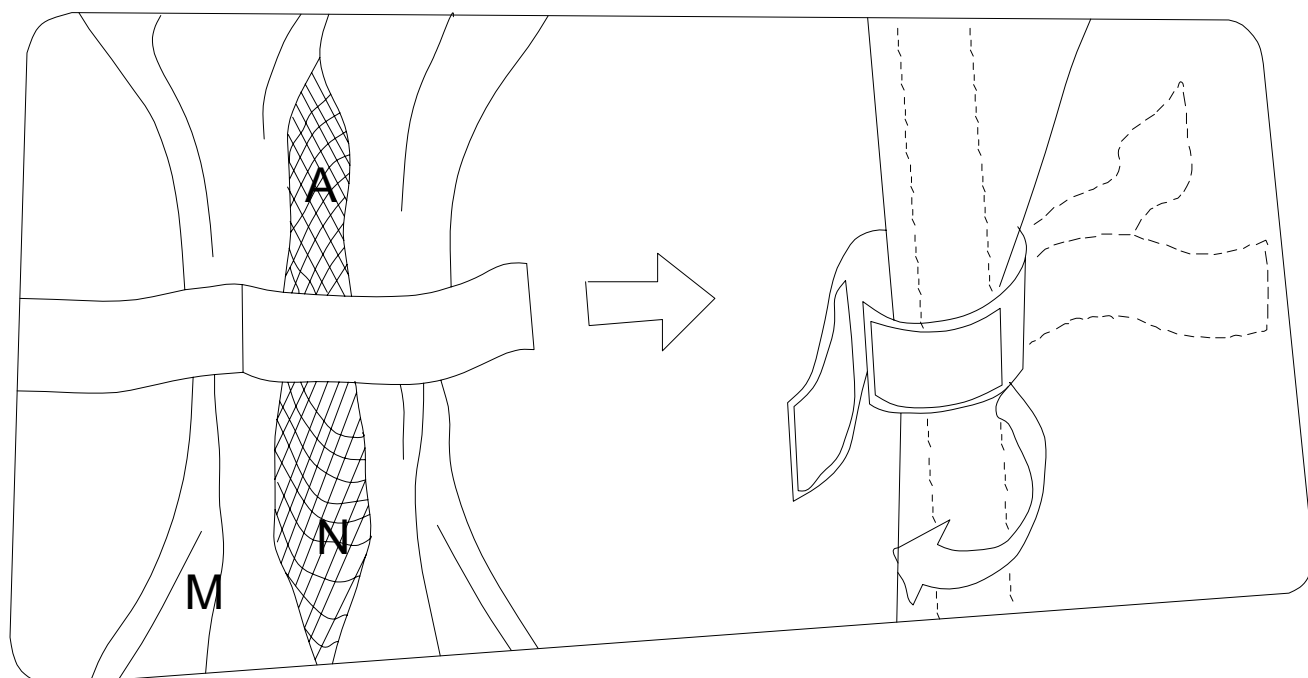
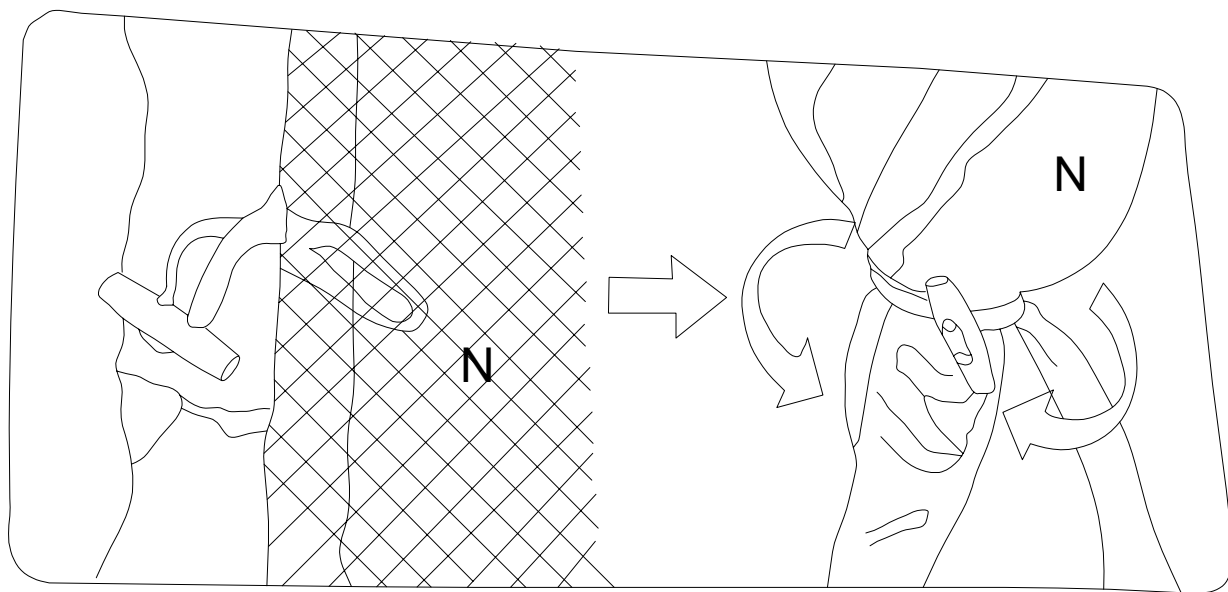
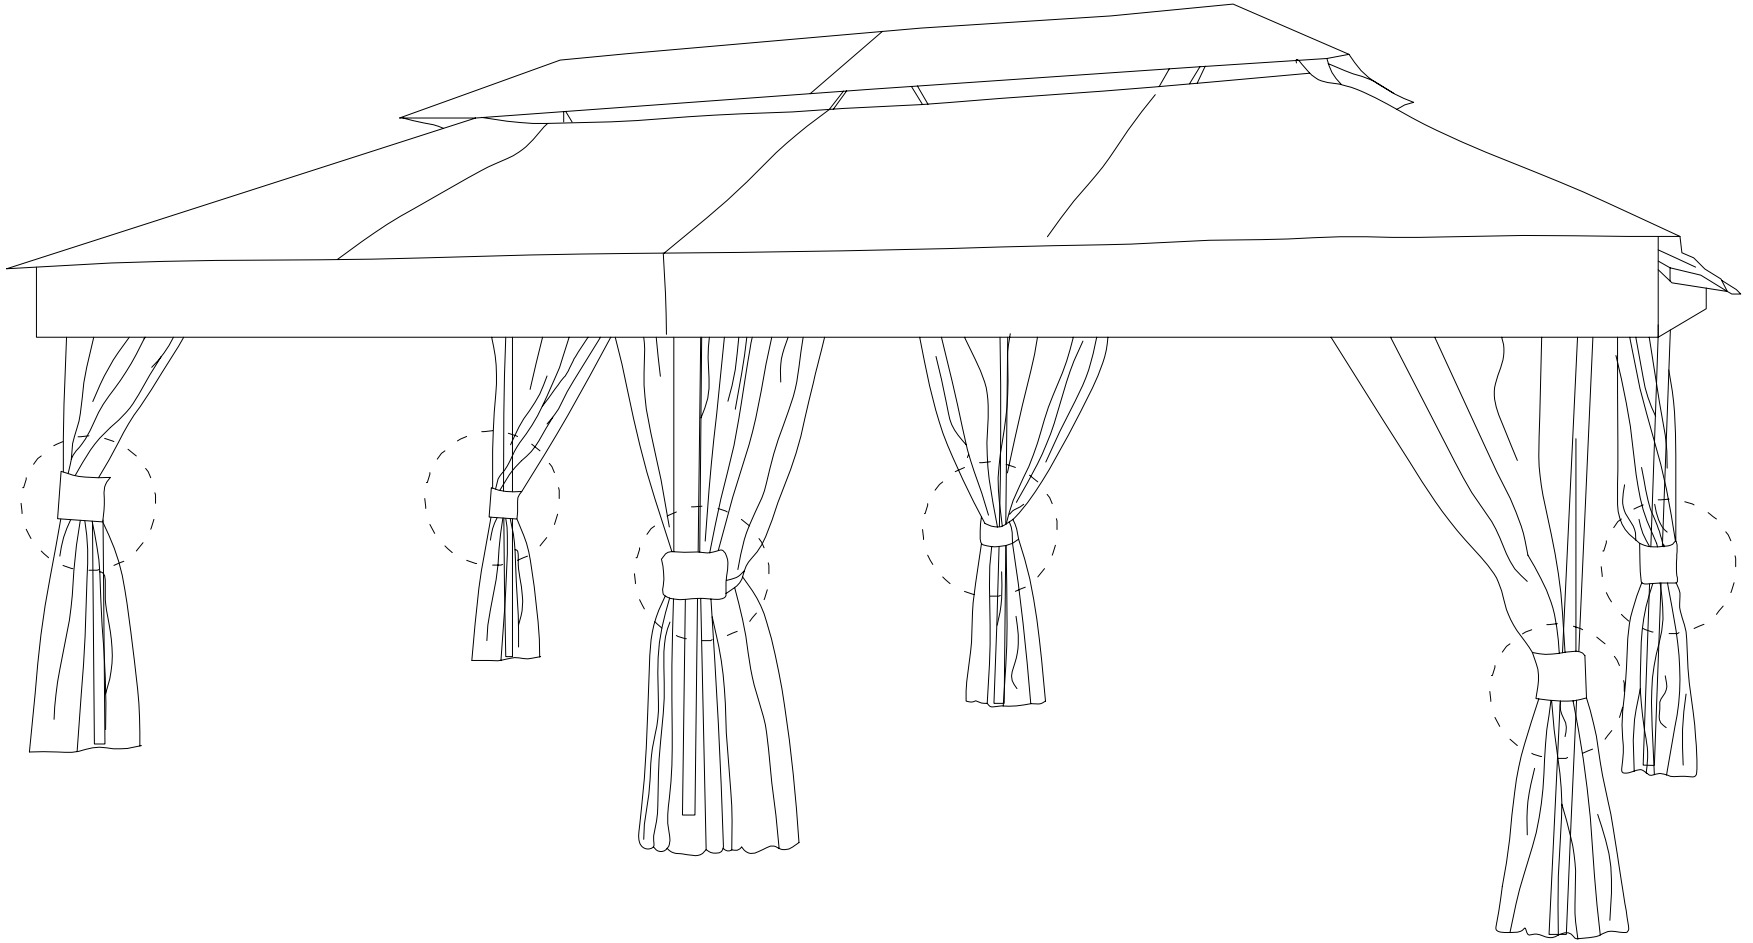





S X6




T X18

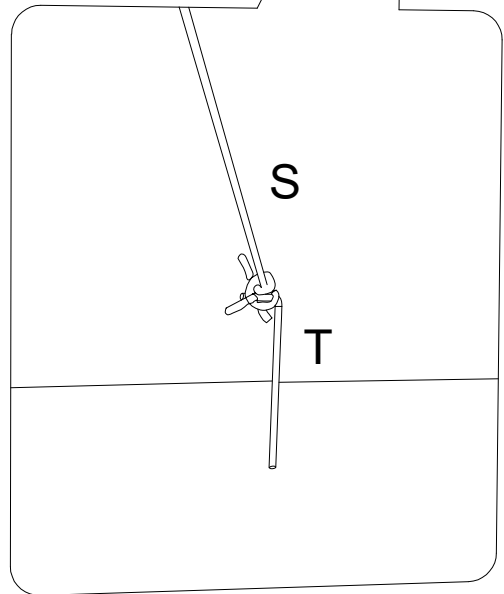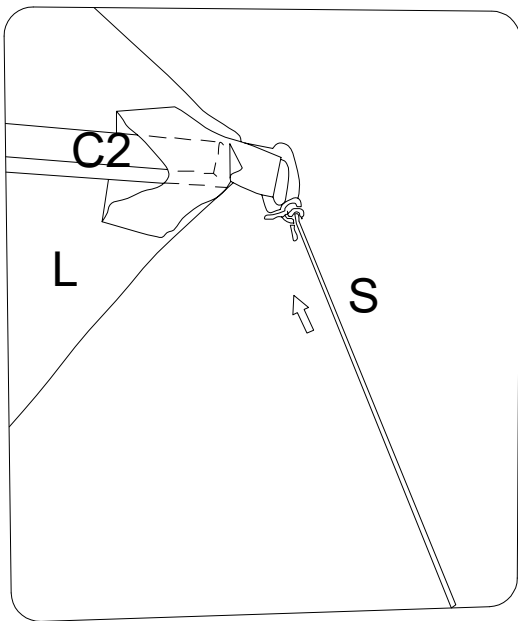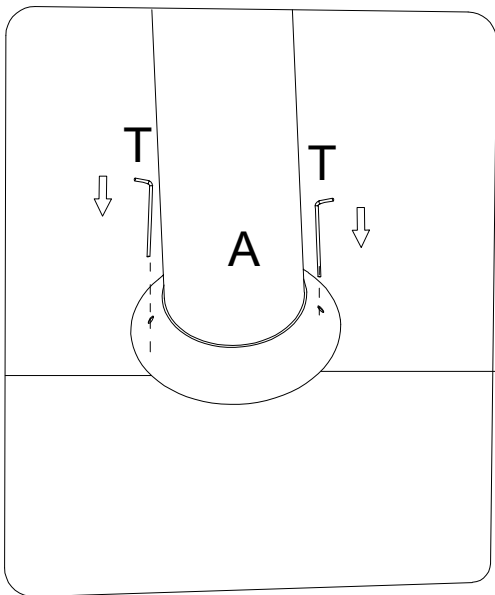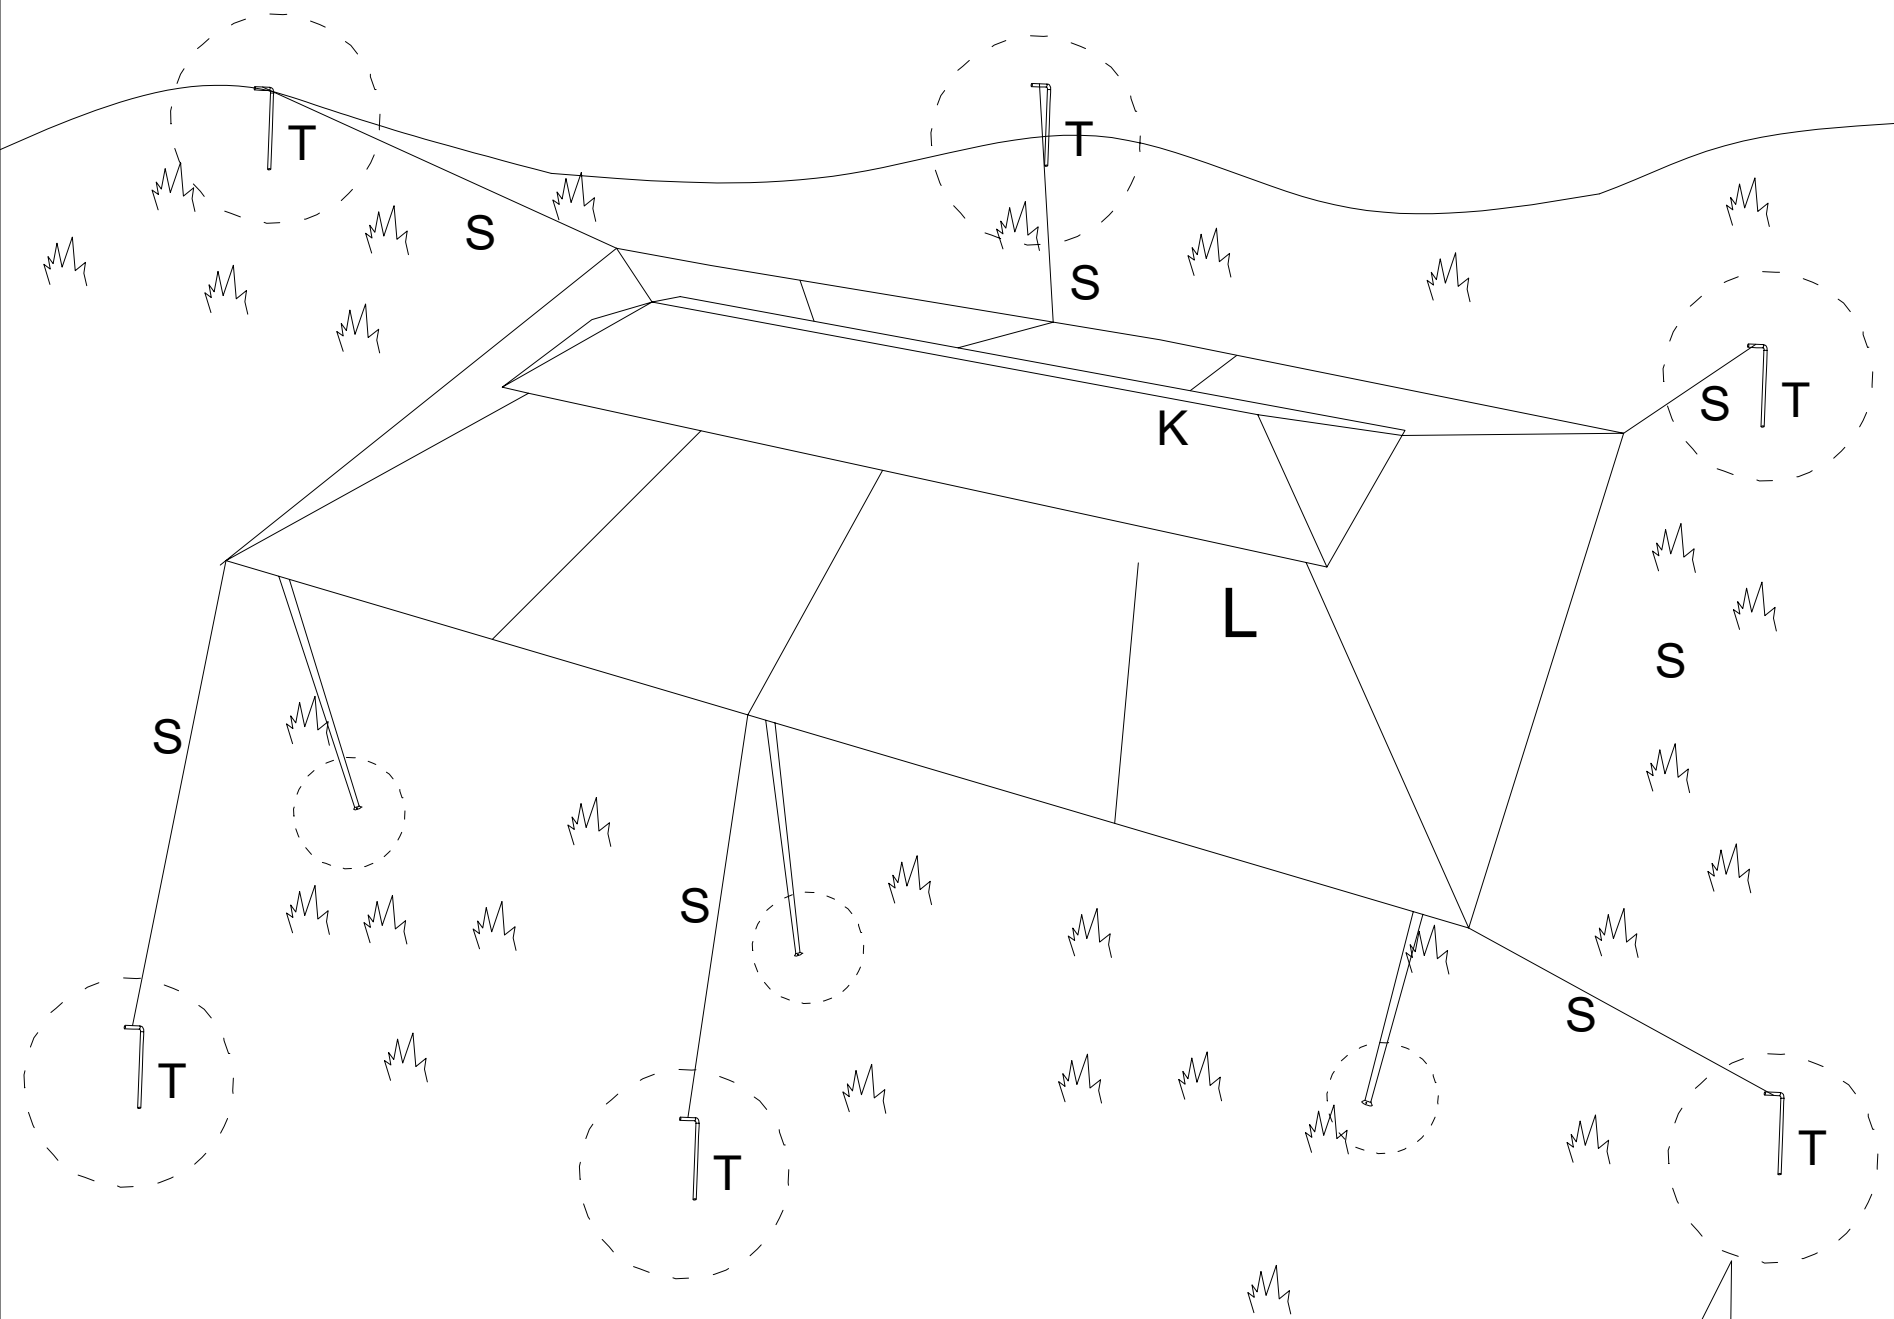

Suitable for soft ground such as grass




Q X12

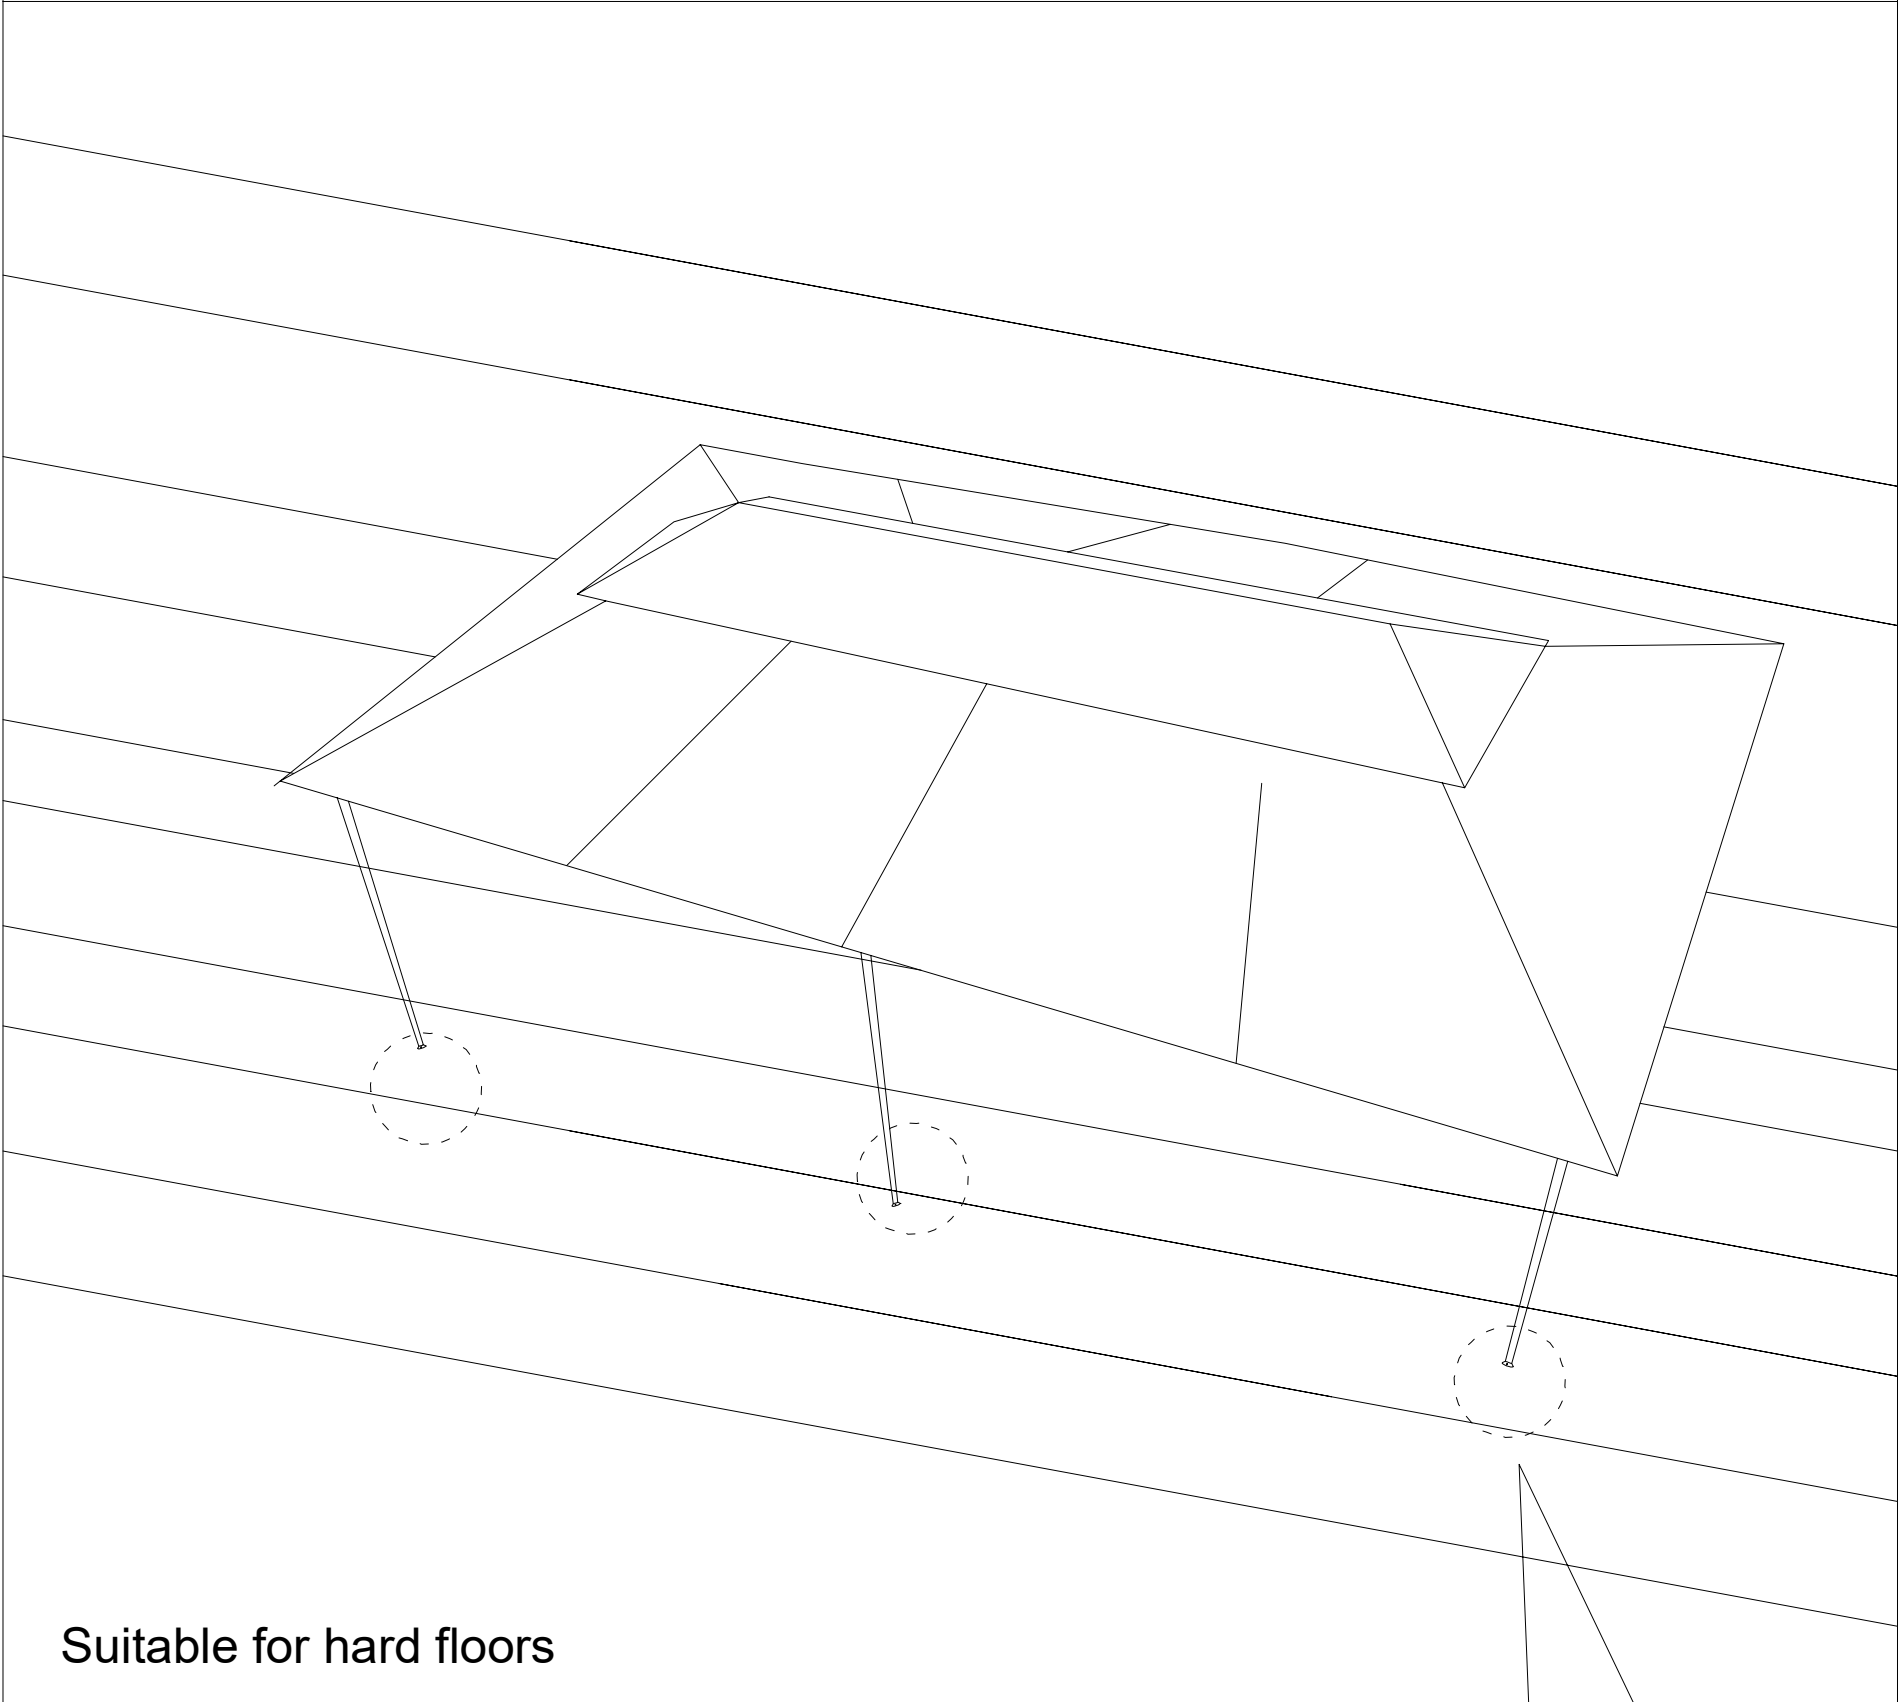


Suitable for hard floors

1.1 Ø10*70mm	1.2	1.3
------------------------	------------	------------


1.4	1.5
------------	------------



S X6



R X6

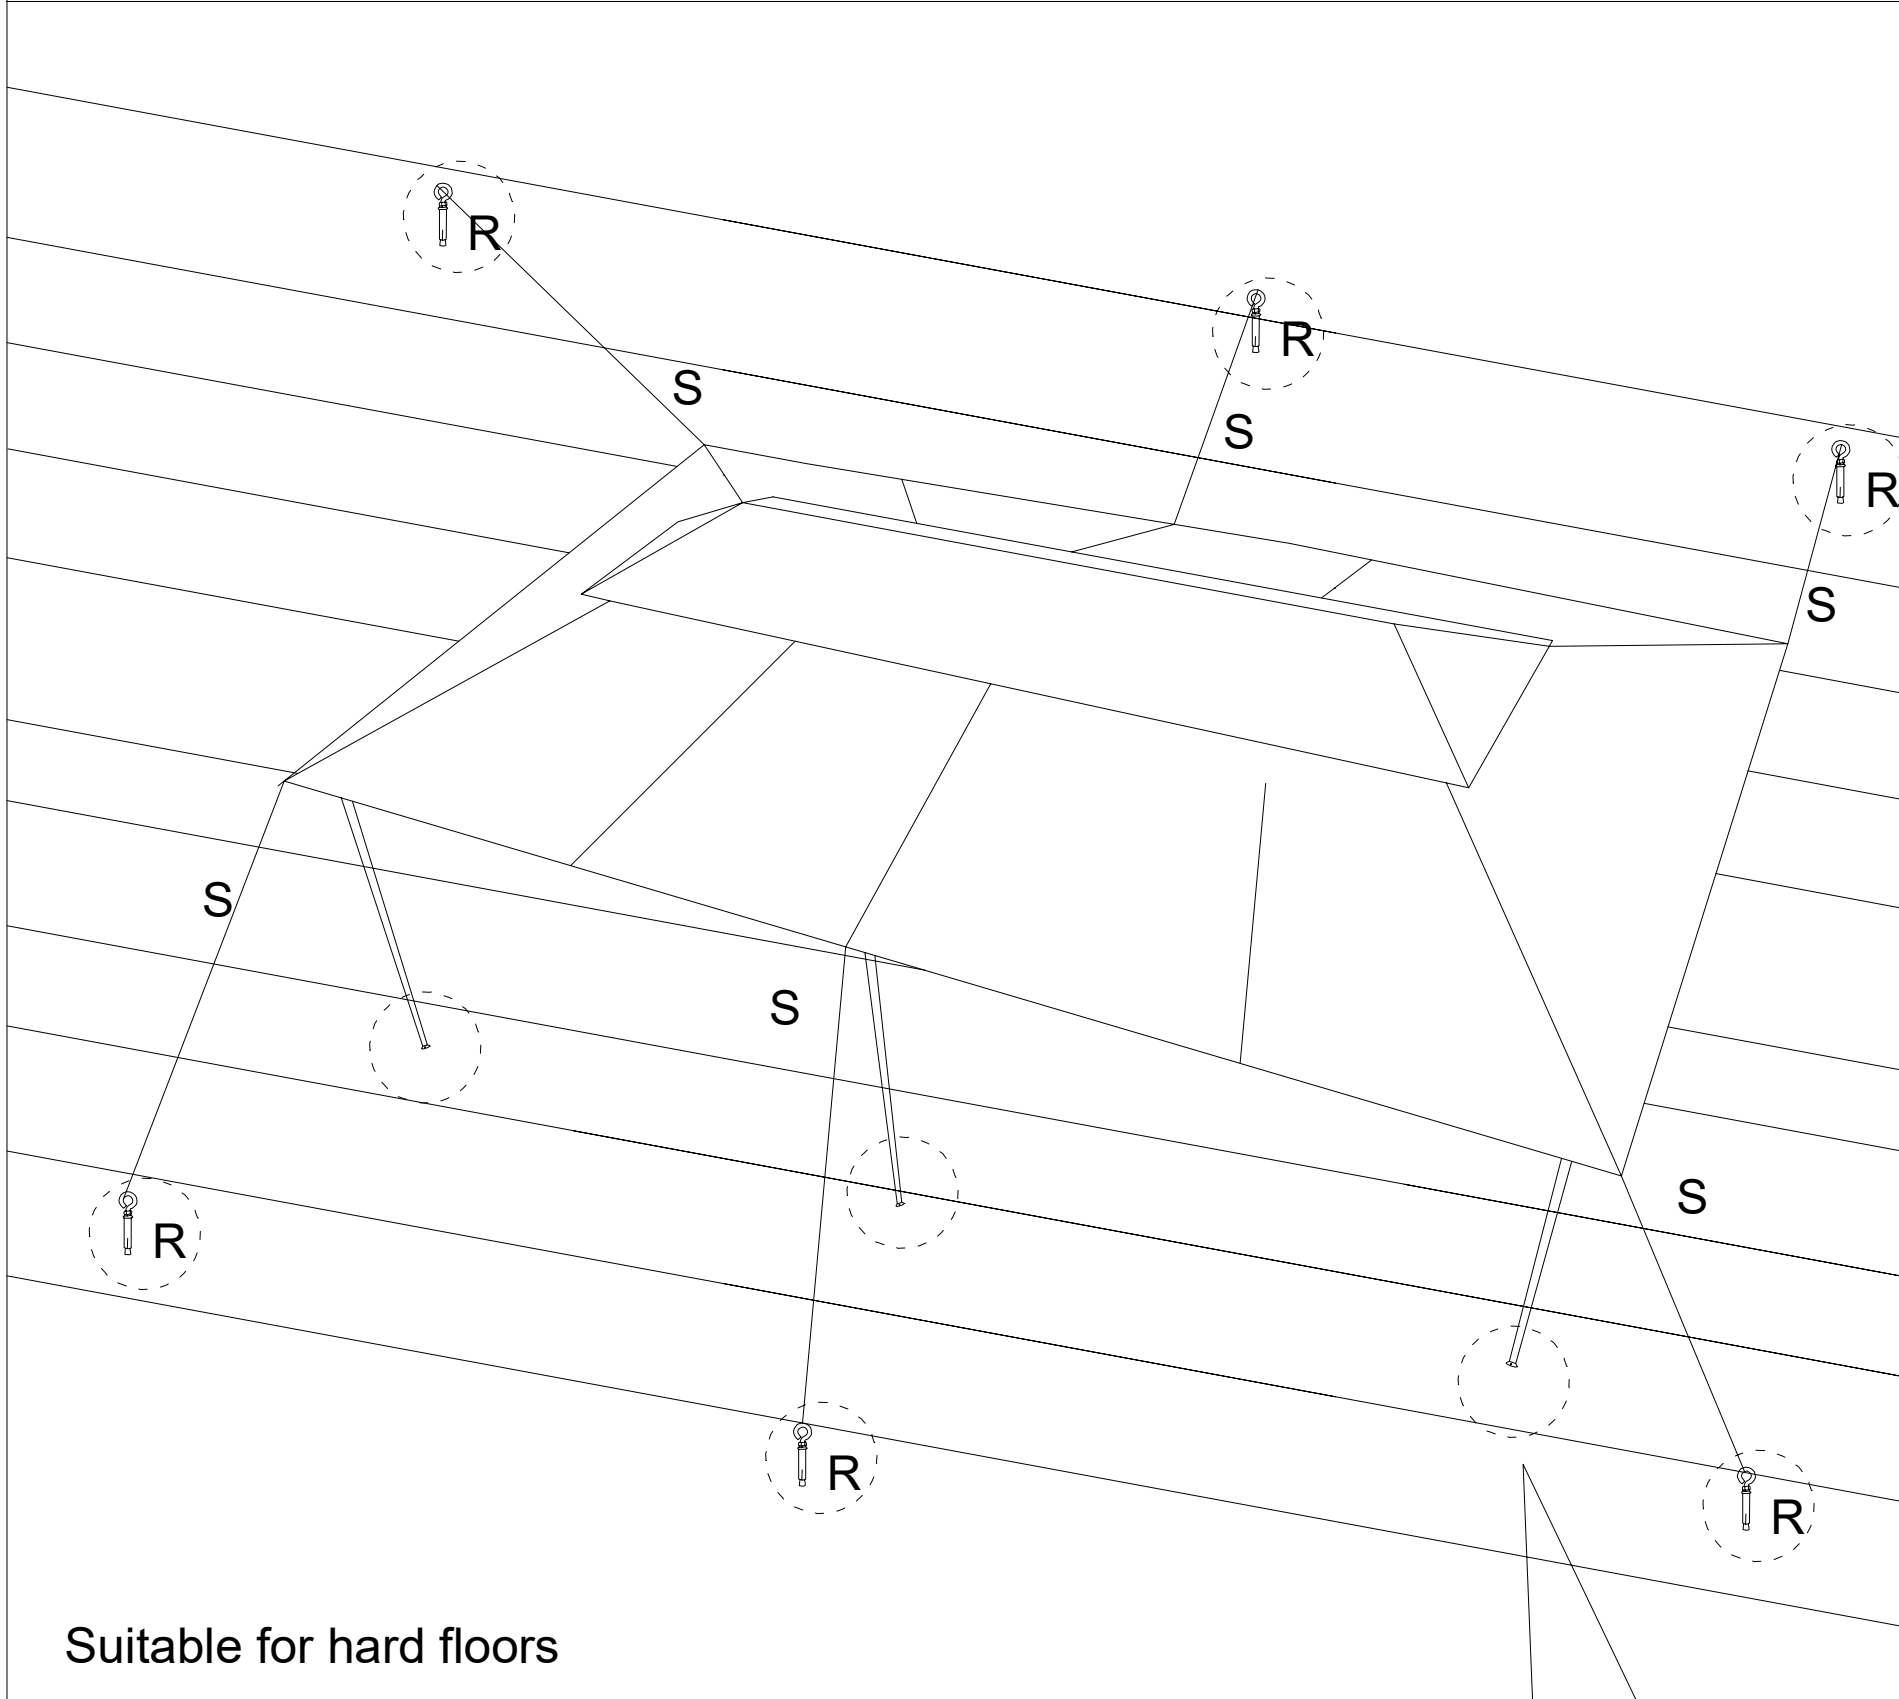

Suitable for hard floors

