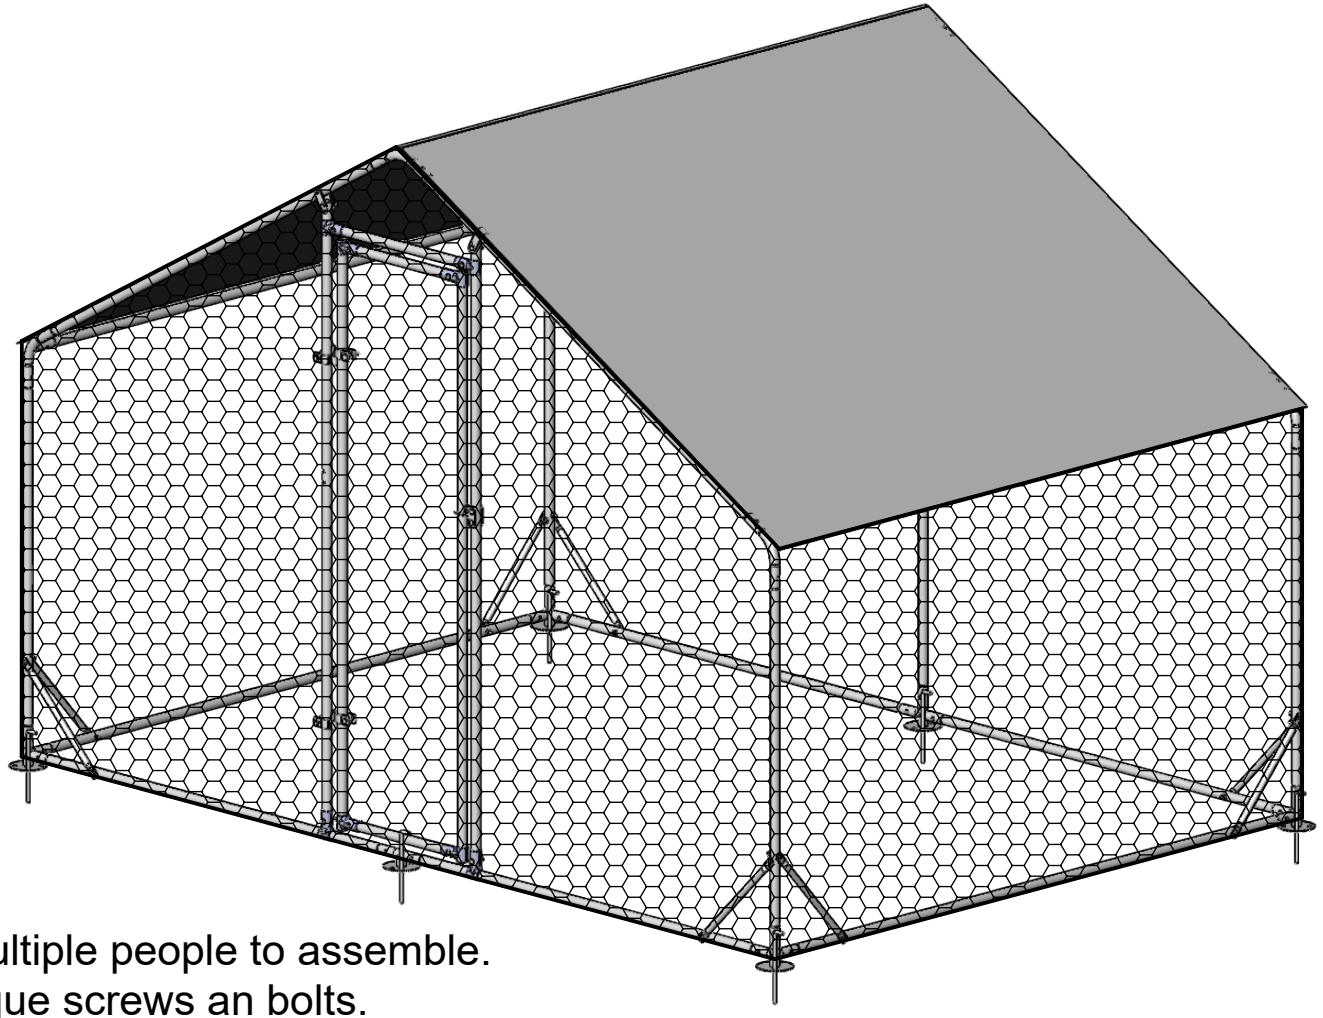
CHICKEN COOPS INSTRUCTIONS












SKU:ZYPC001101




1.Recommend multiple people to assemble.
2.Do not over torque screws an bolts.
3.Do not install on flammable place in case of fire.
4.Use on a flat ground.
5.Gloves must be worn during assembly.

IMPORTANT.RETAIN FOR FUTURE REFERENCE


NO.	PIC	TYB	PCS
1		1364mm	4
2		1919mm	3
3		1919mm	2
4		1049mm	4
5		1505mm	4
6		1715mm	2
7		515mm	1
8		1881mm	1
9		1620mm	2
10		407mm	2
11		385mm	8

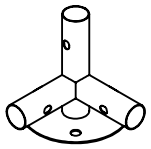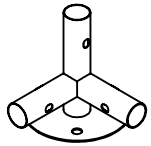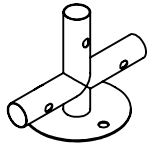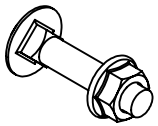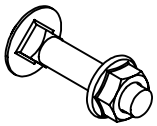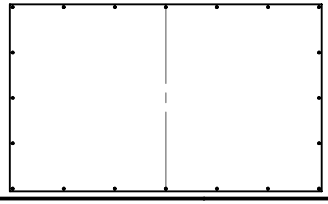	A1 2		A2 2		A3 1		A4 1
	B1 5		B3 1		C 16		D 2
	E1 2		E2 2		F1 1		F2 2
	G 6	 M8*40	L 6	 M6*40	K 26		R 12
	S 1		JP 1		U 1		
	Z 1						

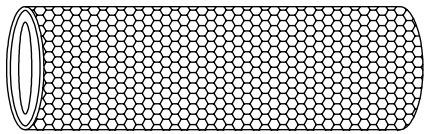


W

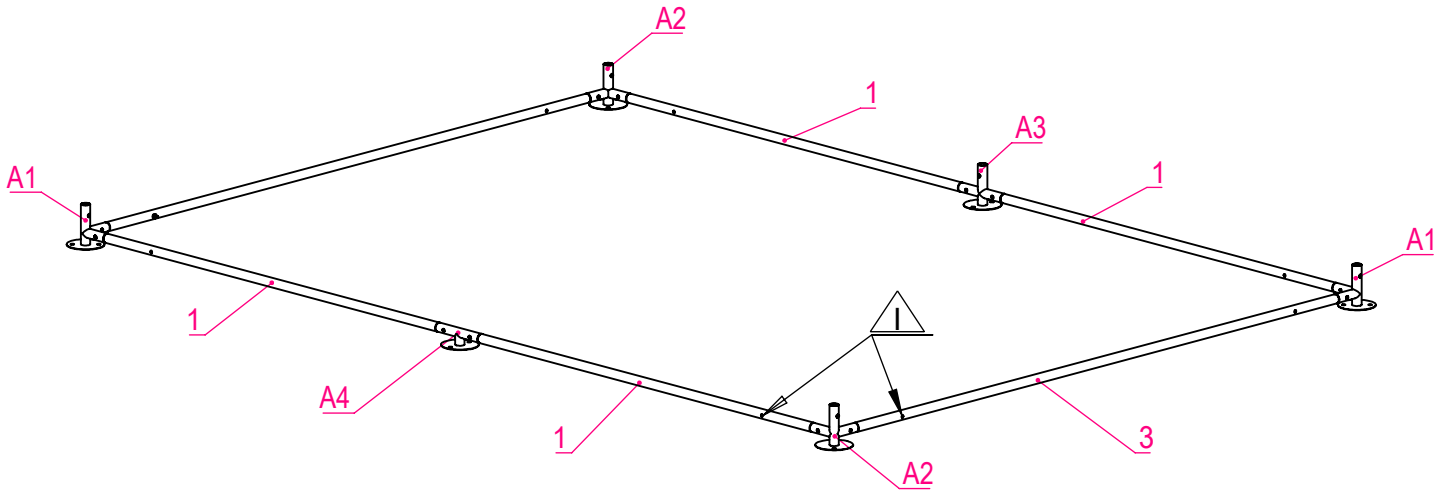
1




NO.	PCS
A1	2
A2	2
A3	1
A4	1
1	4
3	2

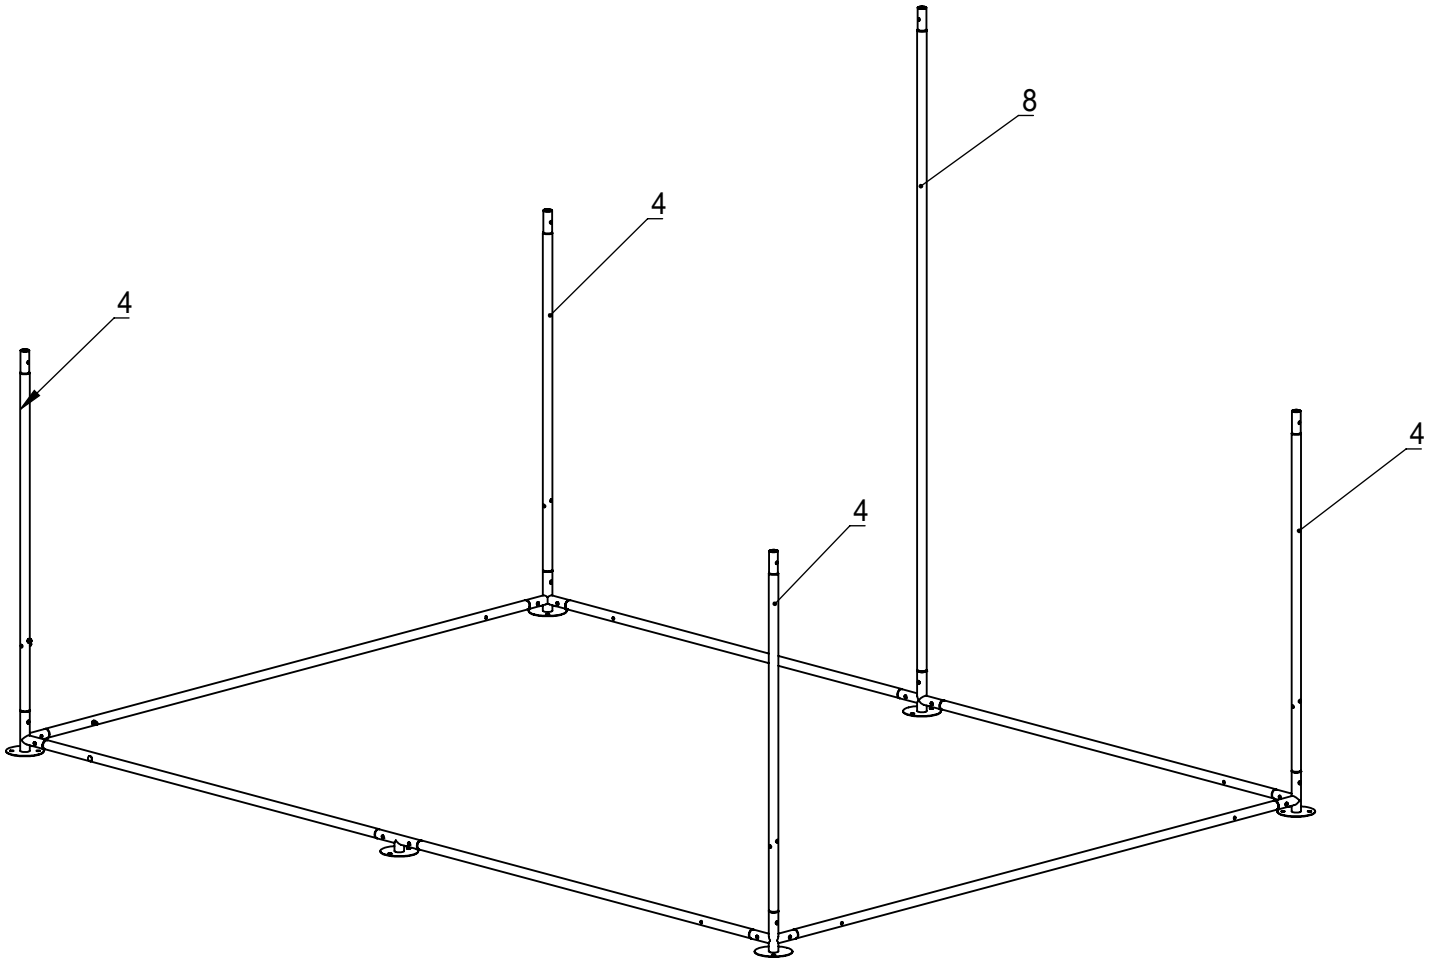


NO.	PCS
4	4
8	1

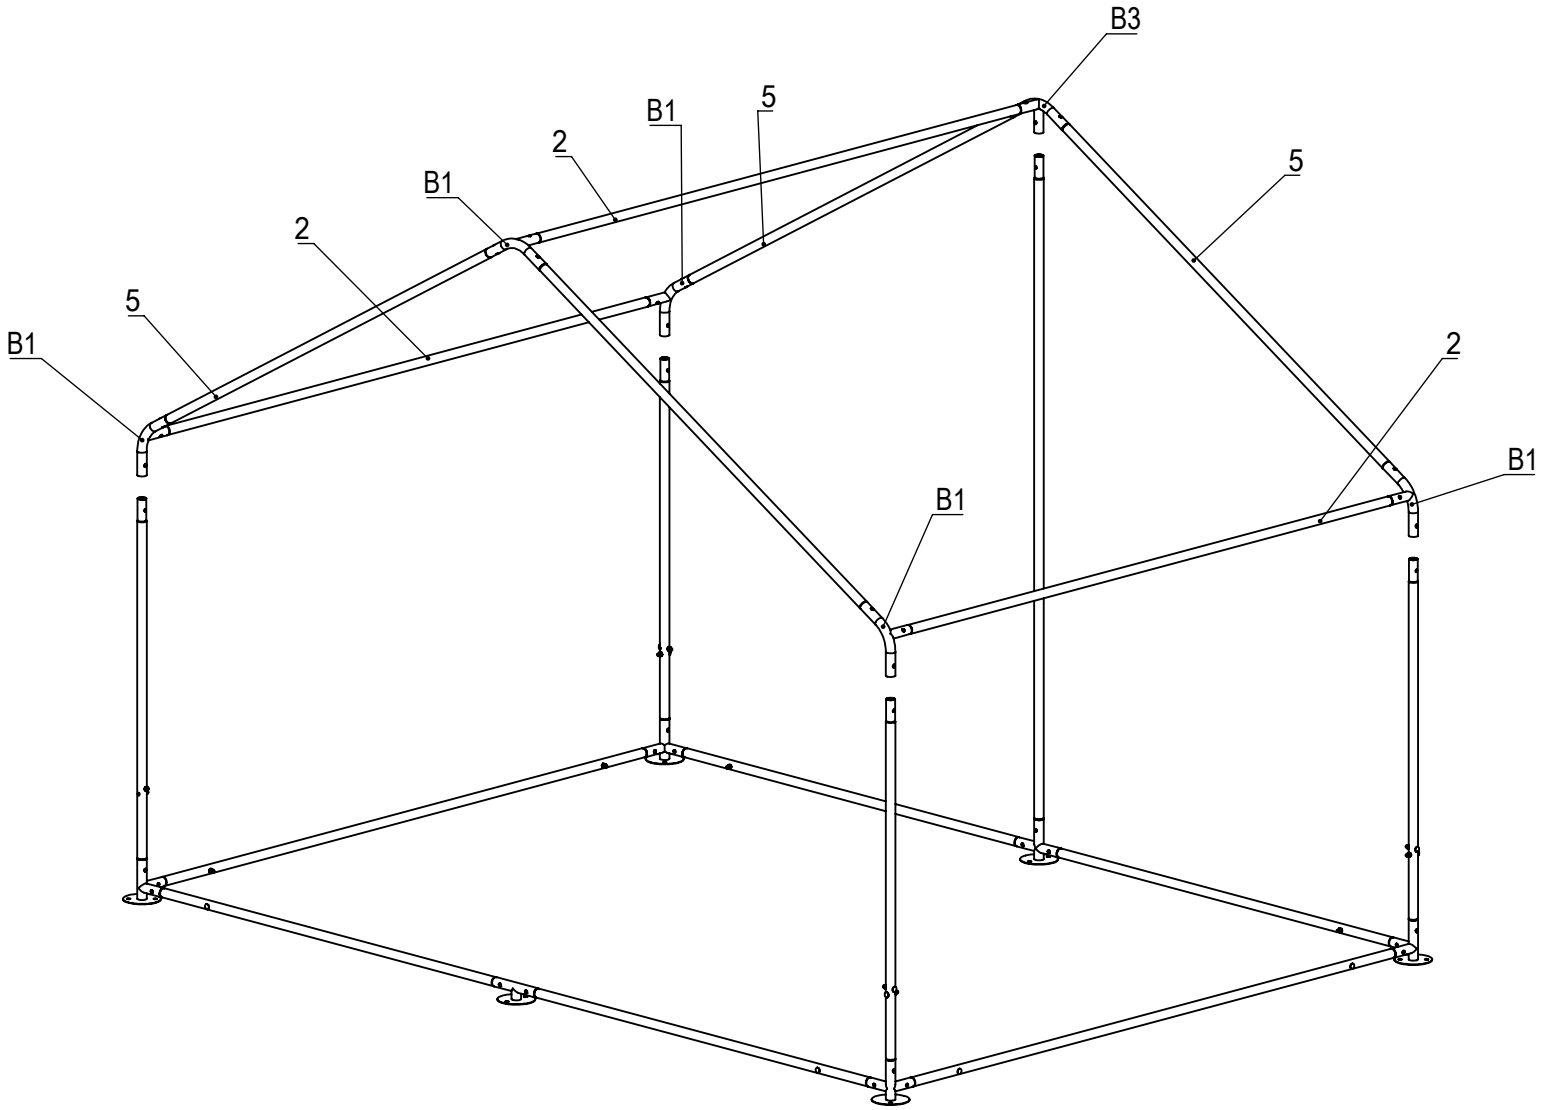


NO.	PCS
2	3
5	4
B1	5
B3	1

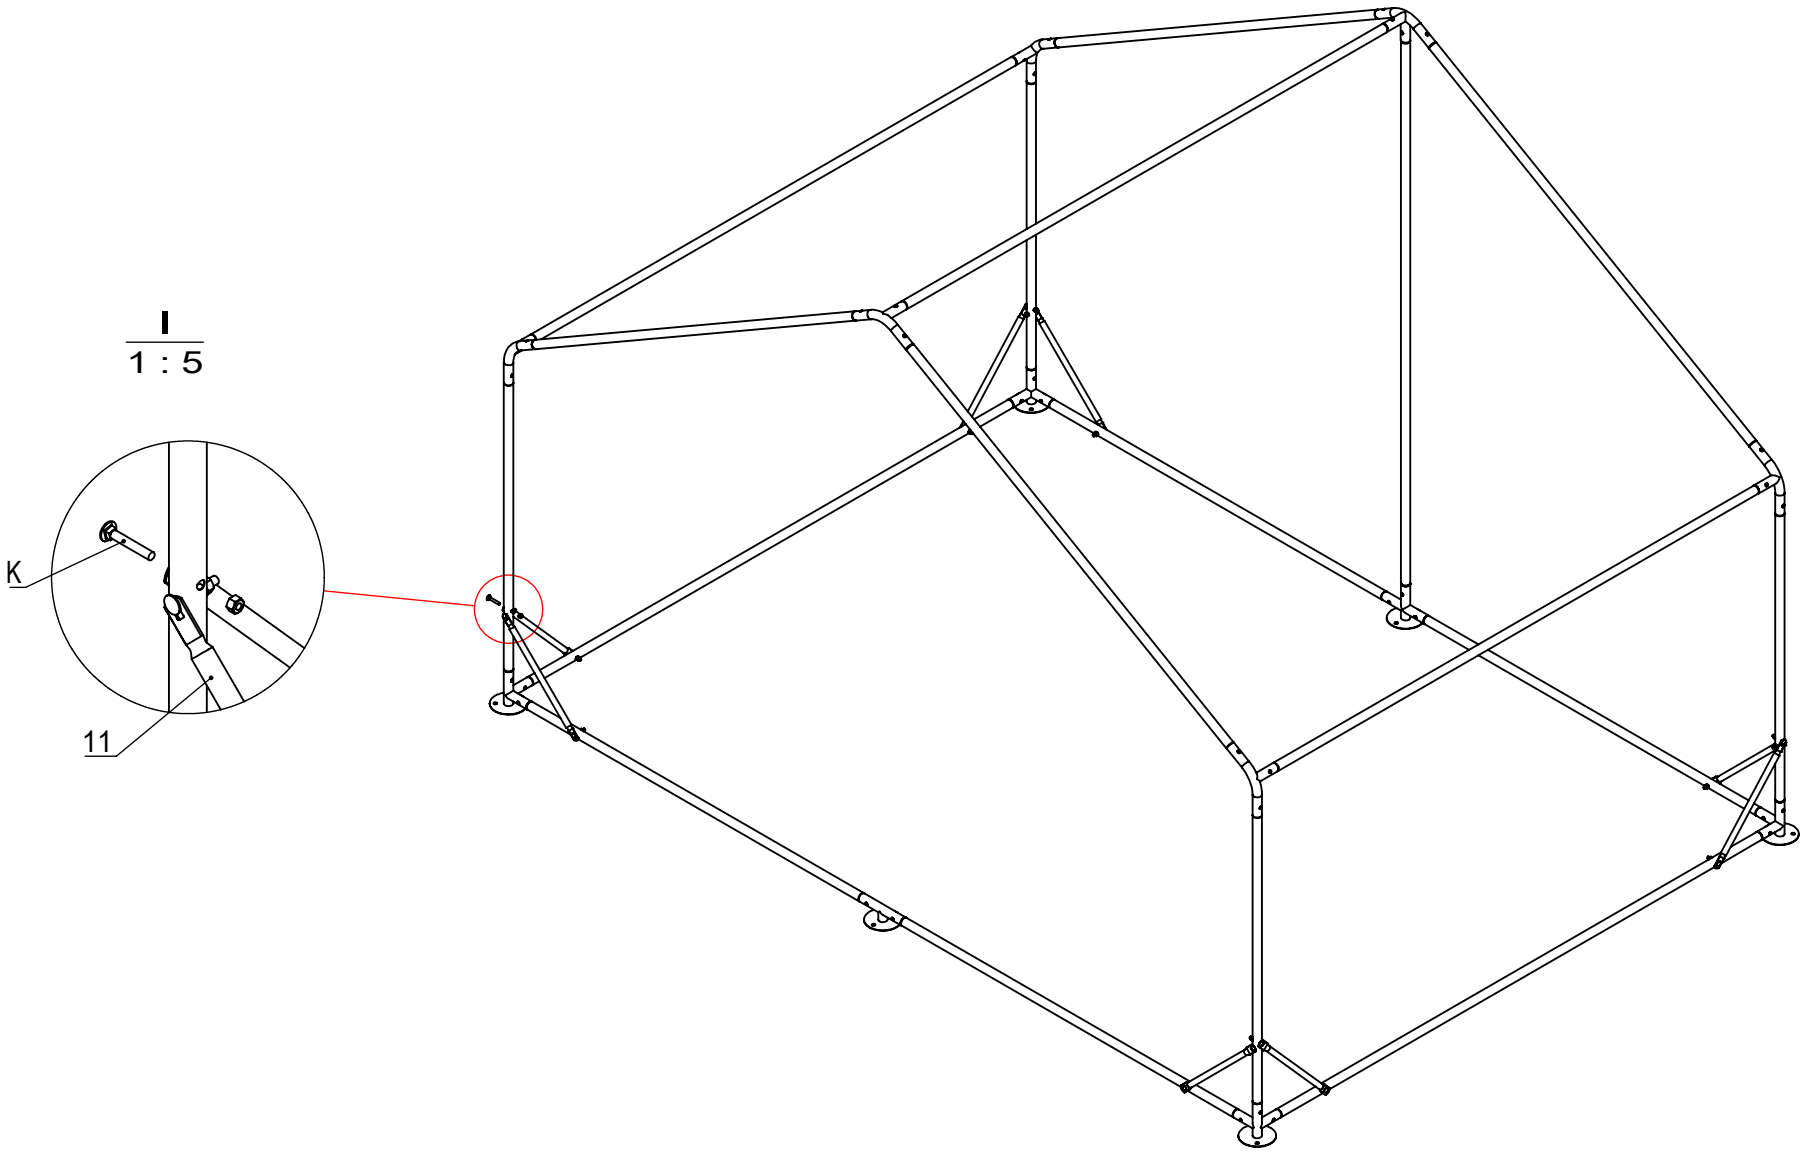


NO.	PCS
11	8
K(M6*40)	16

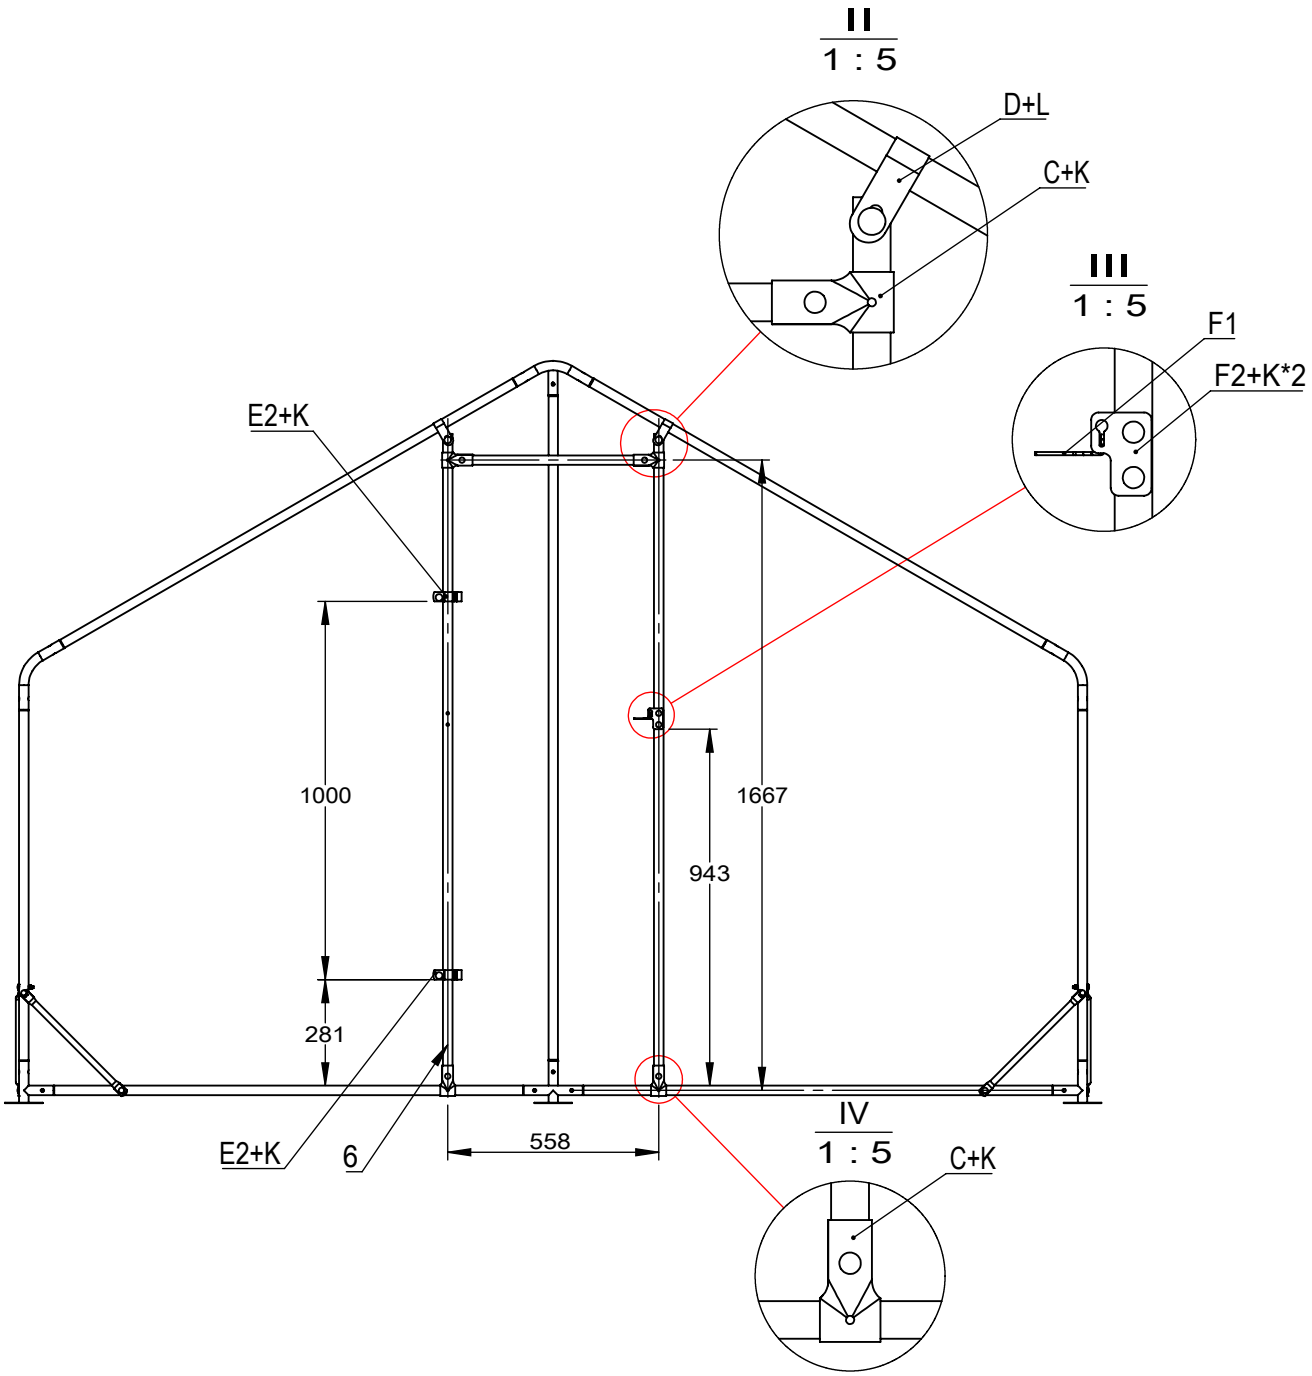


NO.	PCS
D	2
C	8
6	2
7	1
E2	2
F2	2
F1	1
L	4
K	6

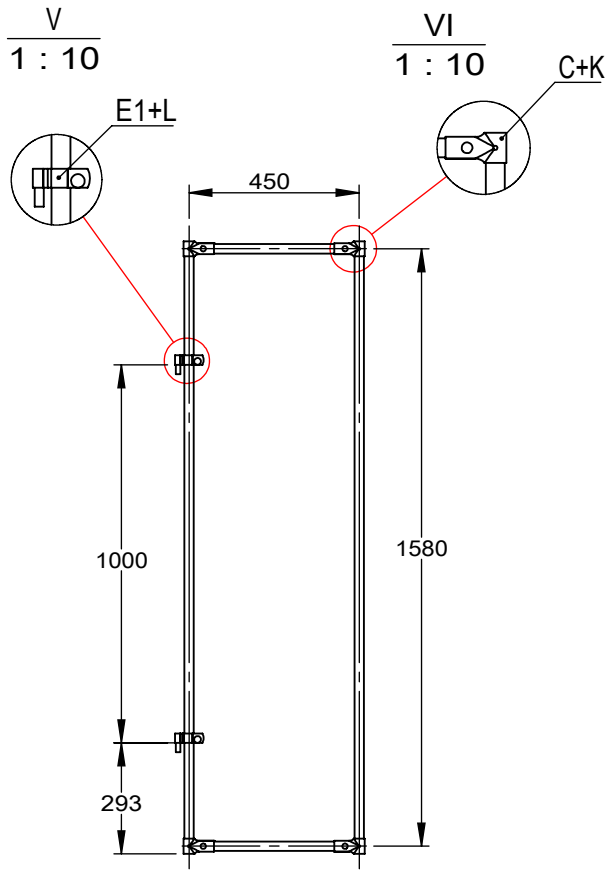


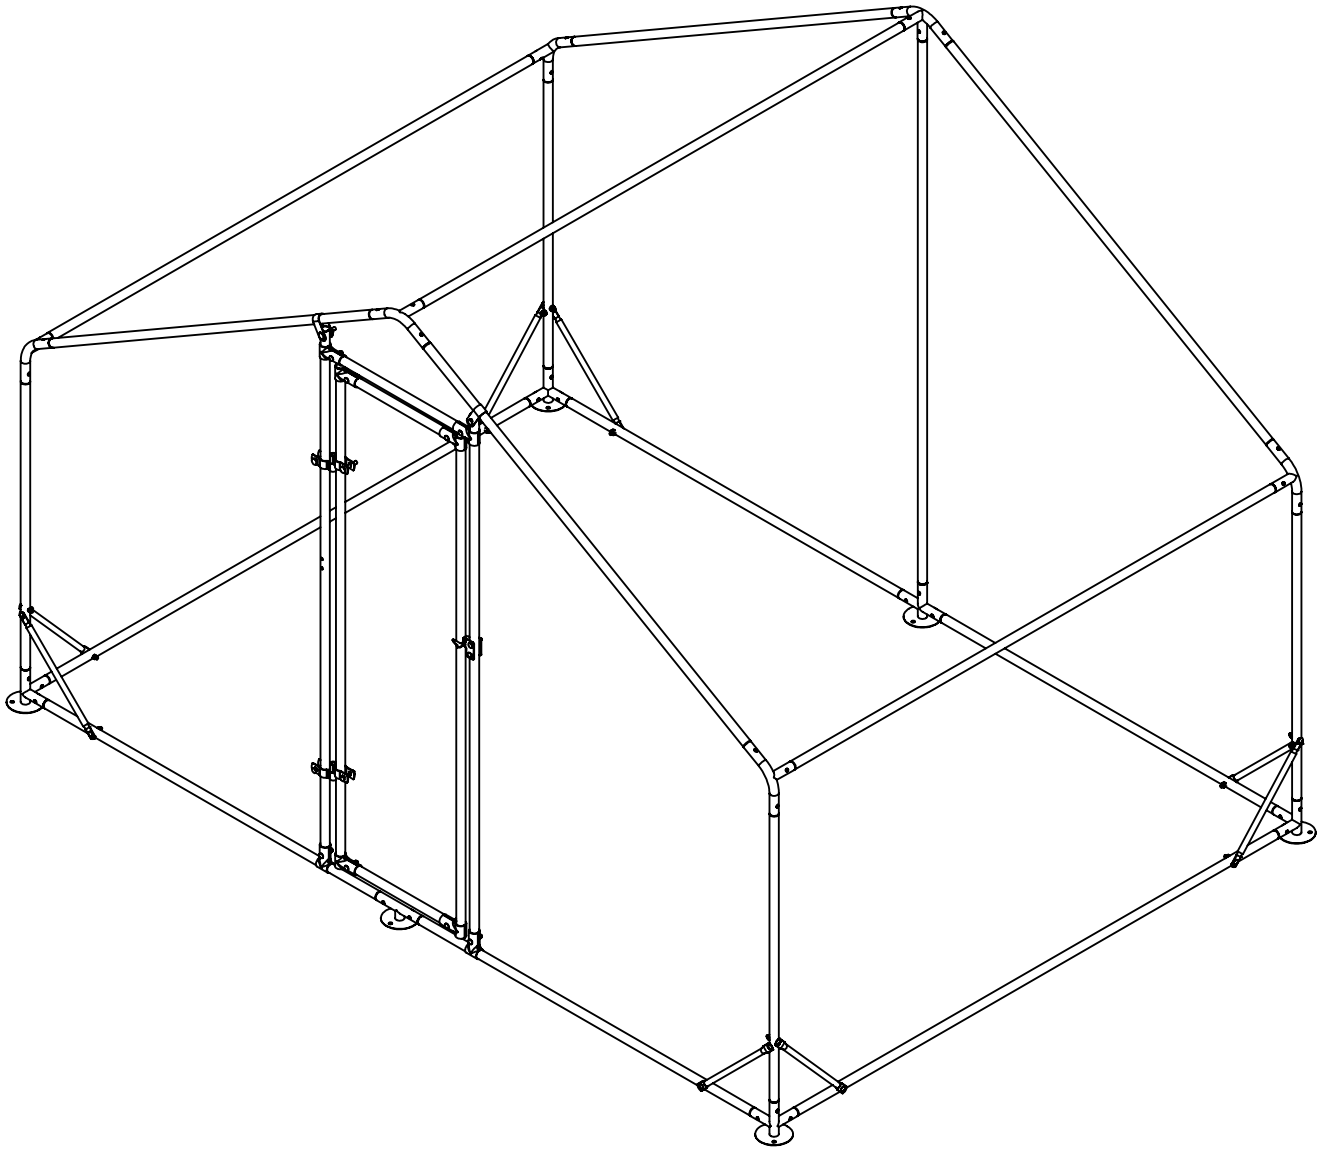


NO.	PCS
C	8
10	2
9	2
E1	2
L	2
K	4

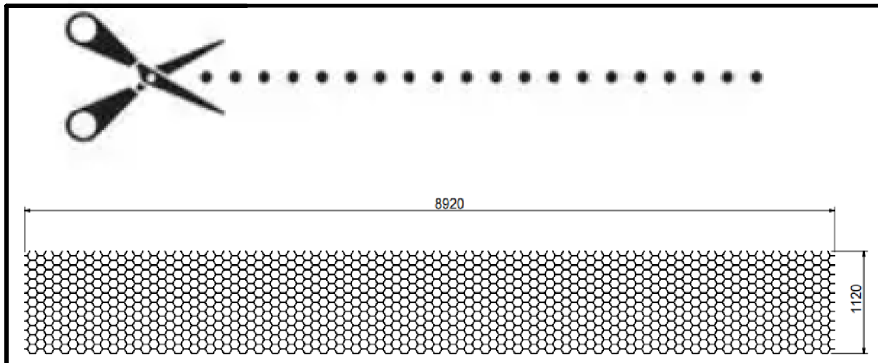


W1
1

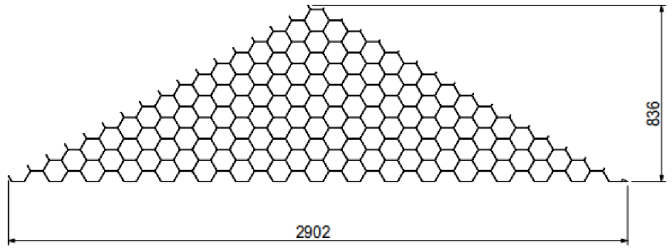


WJ1
1

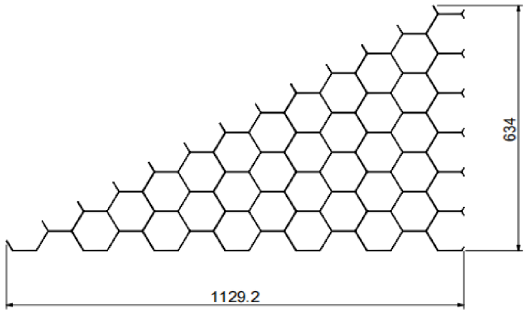


WJ2
2

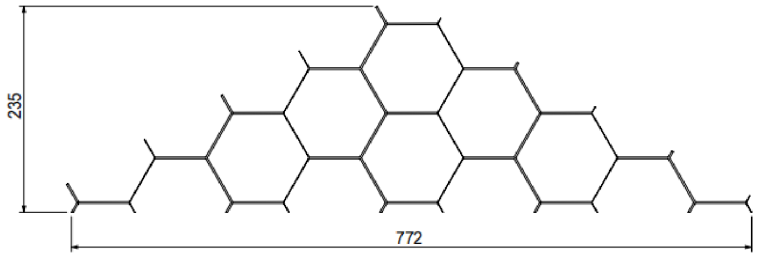


WJ3
1

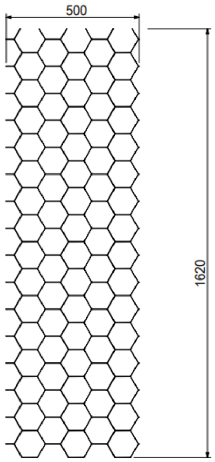



WJ4
1

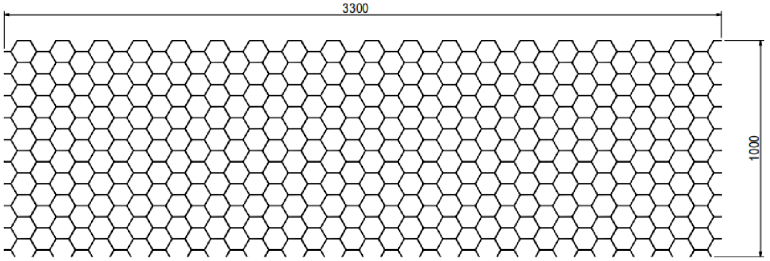



WJ5
2

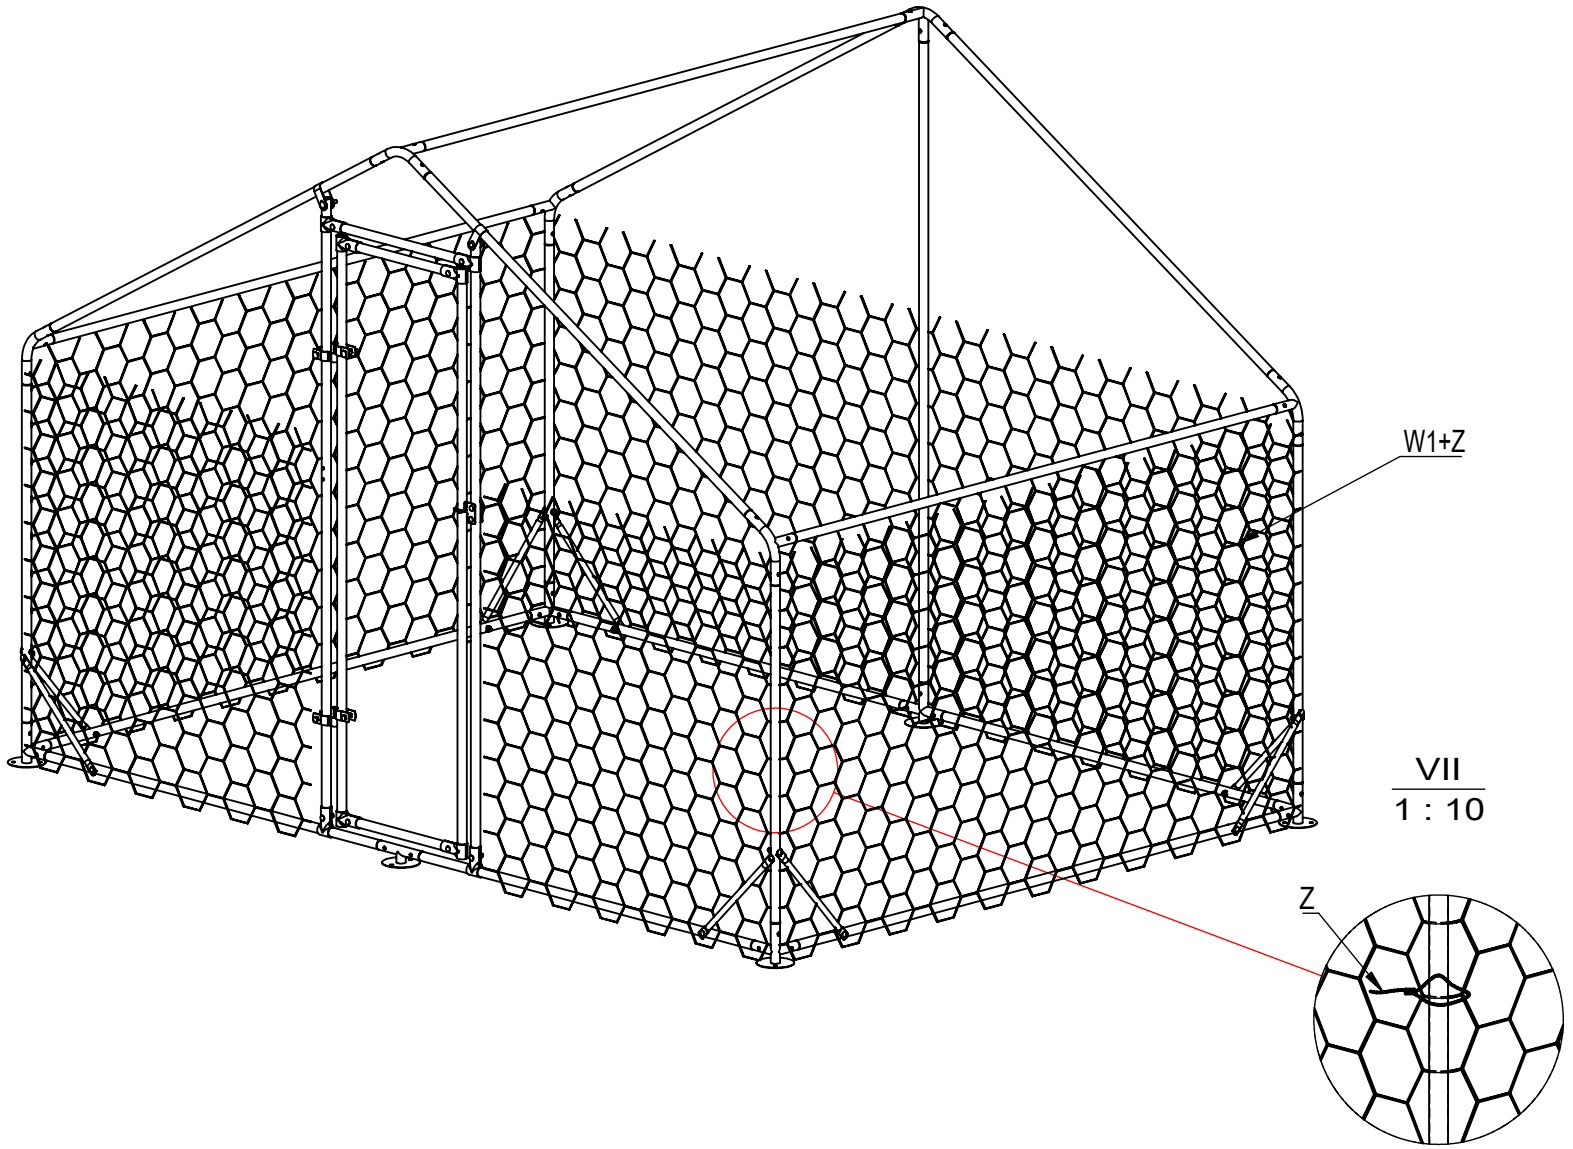

W1+Z
VII
1 : 10
Z

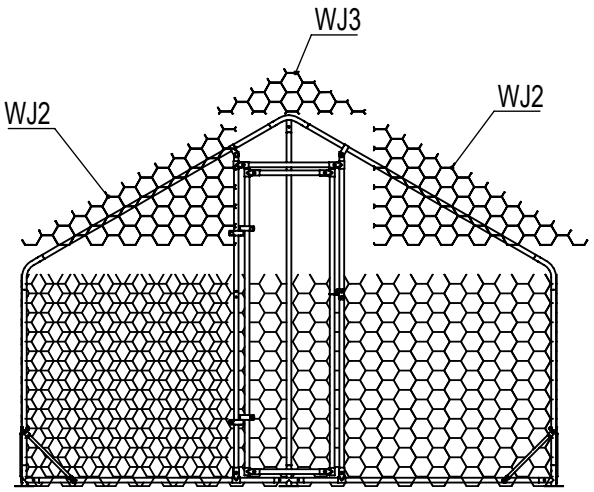
WJ3
WJ2
WJ2

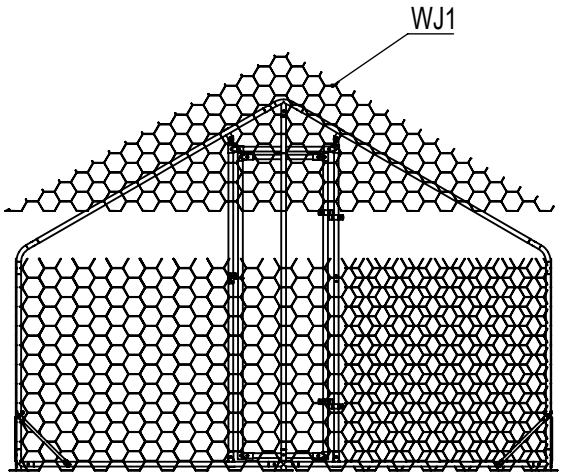
WJ1

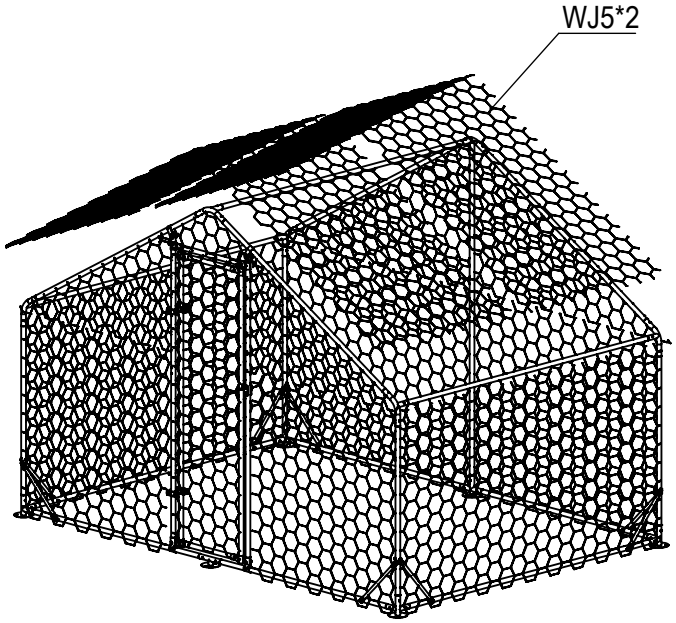
WJ5*2

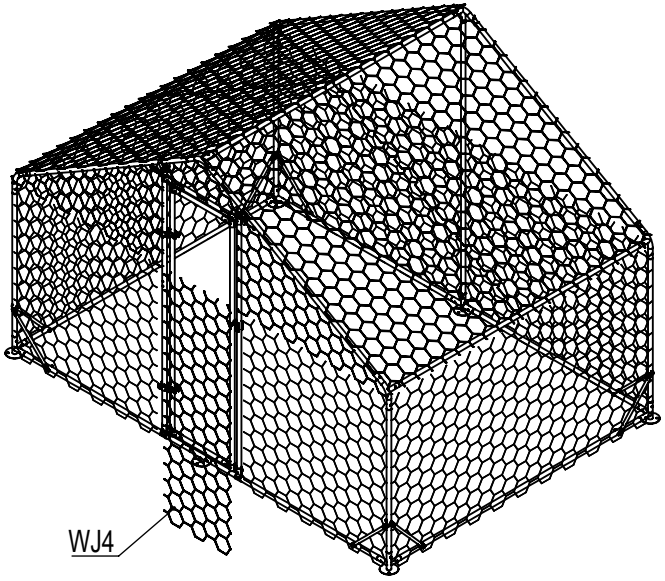
WJ4

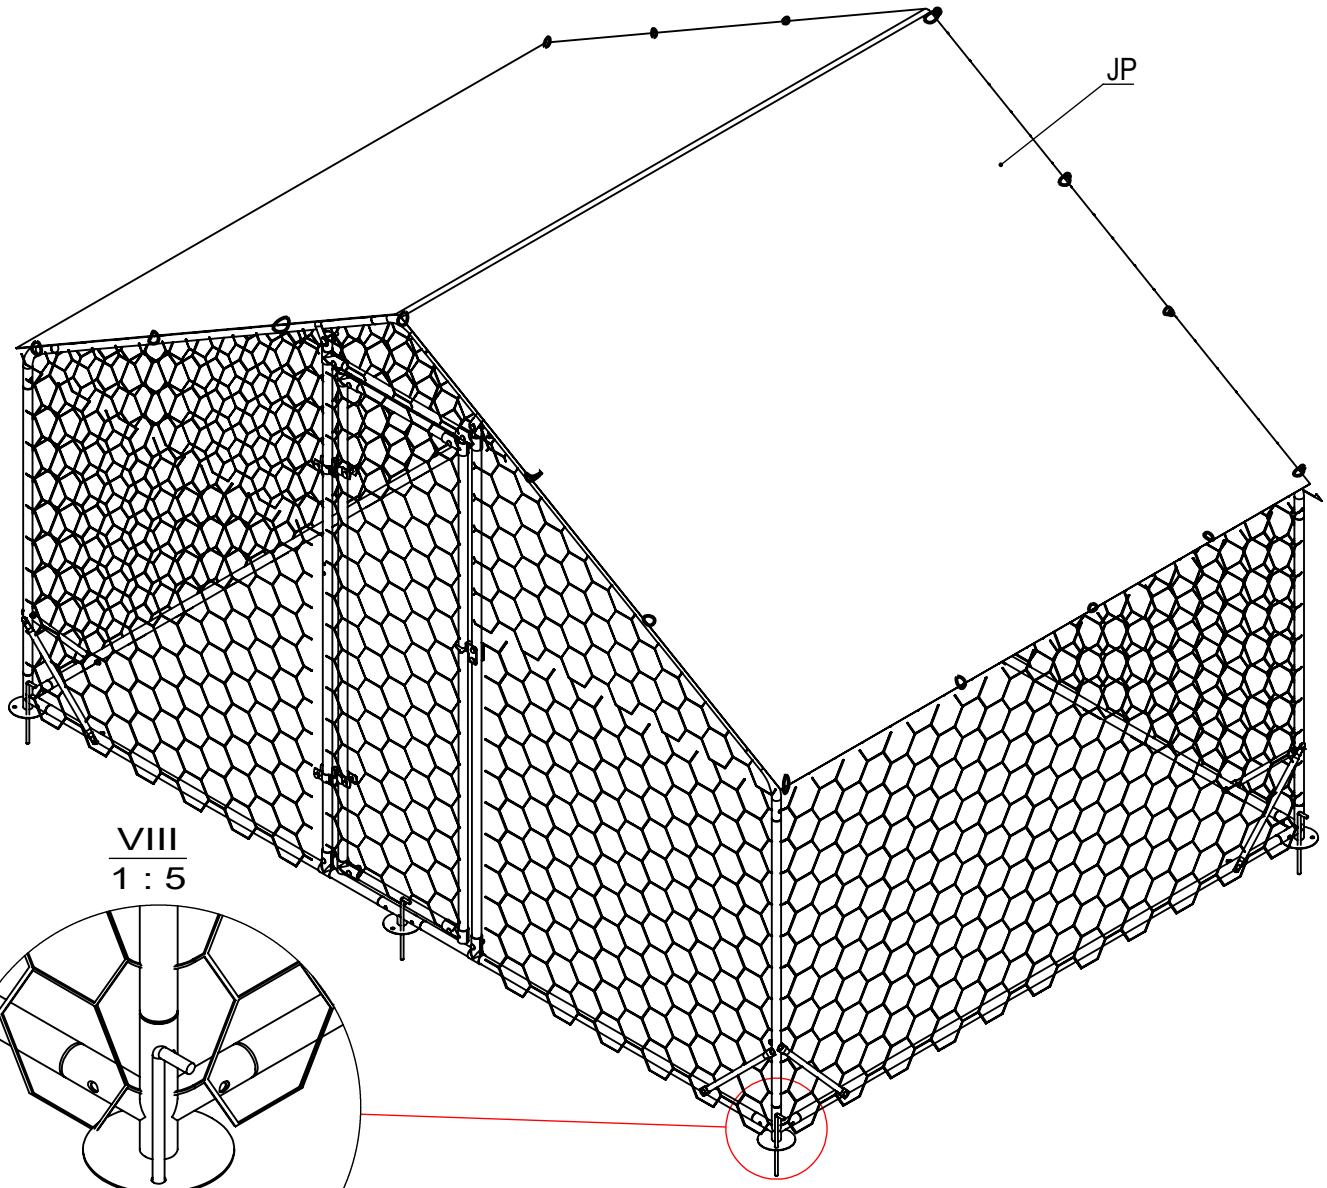
JP
VIII
1 : 5
G
KQ





