




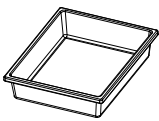





## PART LIST

A:Side Panel	B:Top/Bottom Tray	C:Metal Bar with Screws
2 PCS	2 PCS	2 SETS
		
D: Wheel	E:Handle	F:Removable Tray
4PCS	2 PCS	5 PCS
		
G:Dryer Holder	H:Tool	
1 PC	1 PC	
		

**TASALON**  
PROFESSIONAL


# Instruction Manual

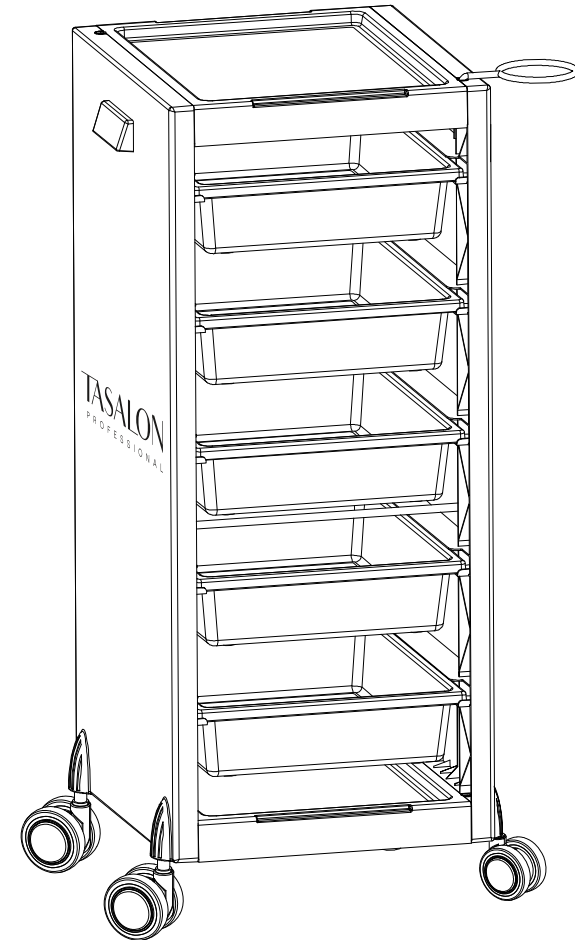

**HAIR SALON TROLLEY**  
Designed by and for Professionals


**1**  
year  
limited  
warranty

# Installation

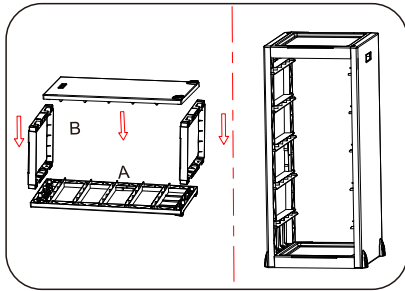


## Step 1

Connect the 2 side panels (A) with Top and Bottom Trays(B). Make sure all connections are fully snapped.

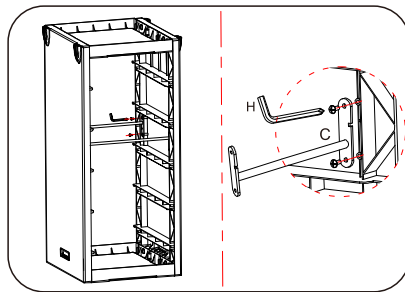


## Step 2

Connect both Side Panels(A) with the 2 Metal Bars(C). Use the Tool(H) to fasten the screws.

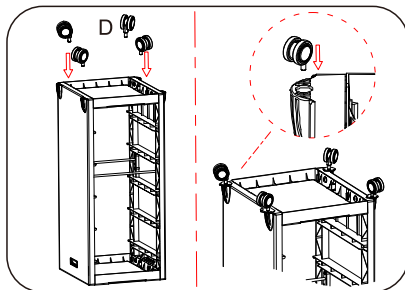


## Step 3

Plug the 4 Wheels(D) into the holes in the bottom of Side Panels(A).

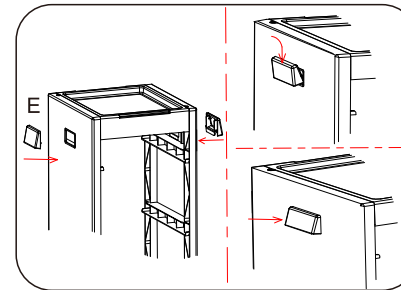


## Step 4

Attach the 2 Handles(E) to the Side Panels(A). Follow the steps on the drawings.

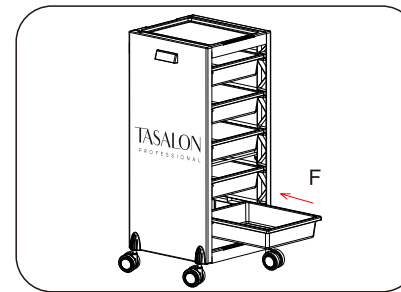

## Step 5

Place the 5 Removable Trays (F) to the rails inside the cabinet.

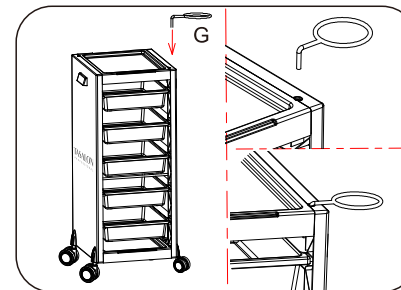

## Step 6

Plug the Dryer Holder (G) into the hole in the top.