


INSTALLATION MANUAL

CHANDELIER

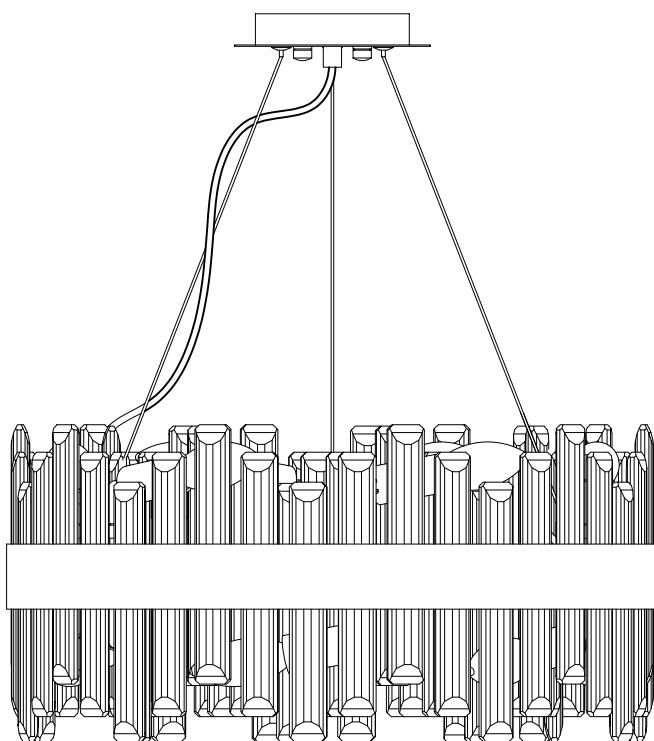

TOOLS REQUIRED




Ladder



Pliers




Wire
Strippers




Screwdrivers

PACKING LIST

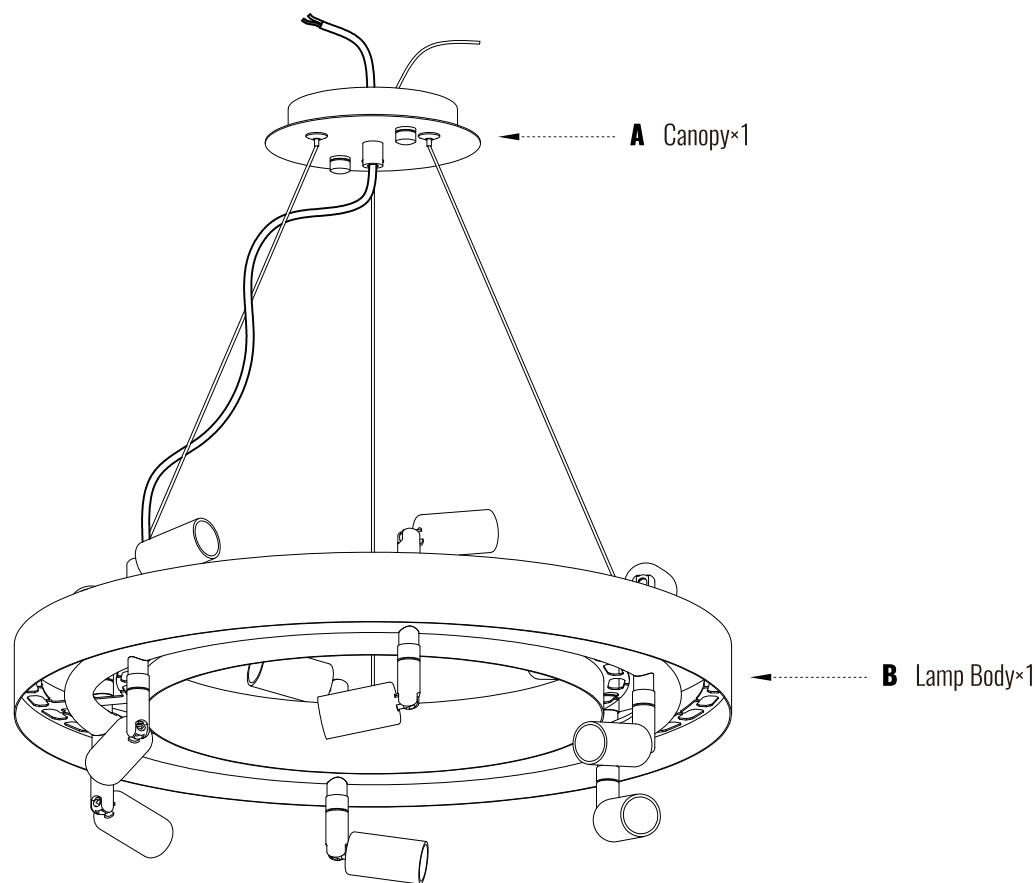



INSTALLATION KIT

AA  Mounting Bracket 1×	BB  Mounting Screw 2×	CC  Ground Screw 1×	DD  Wire Nut 3×	EE  Kneuled Nut 2×
FF  Crystal A 35×	GG  Crystal B 35×		HH  Gloves 1×	

NOTE:
1. CC is pre-installed on AA, AA/EE is pre-installed on A.
2. FF/GG has one spare part for backup.

MOUNTING AND WIRE


1. Install the Mounting Bracket

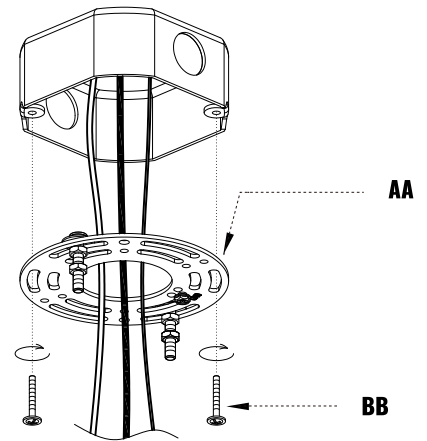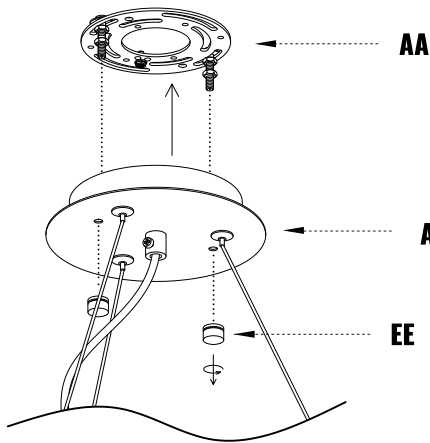

STEP 1: Loosen the kneuled nut (EE) from canopy (A), take out the mounting bracket (AA).

STEP 2: Take off the screws from outlet box, secure the mounting bracket (AA) onto the box with screws taken off or screws provided (BB).


2. Connect the Wires

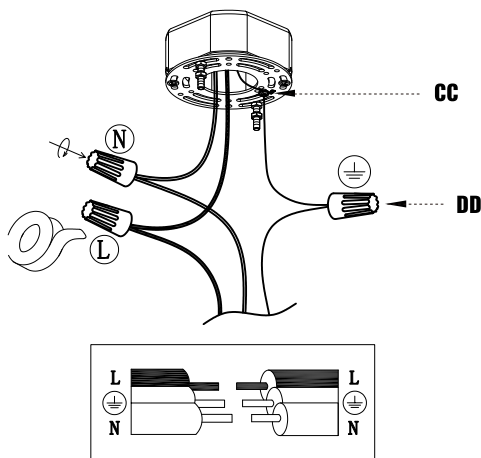

STEP 1: Connect the wires from the fixture to the house supply wires with wire nuts (DD), ground wire (green, green/yellow, or bare) to ground wire, neutral wire (white) to neutral wire, and hot wire (black) to the hot wire. Wrap the connection with electrical tape.

STEP 2: Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

3. Fix the Canopy

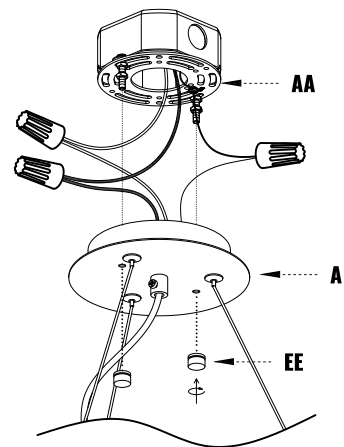


Fix the canopy (A) onto the mounting bracket (AA) with kneuled nuts (EE) taken off.

HARMONIZE AND INSTALL BULBS

1. Adjust the Balance

Adjust the length of the wire by pressing the wire lockers as shown in the picture.

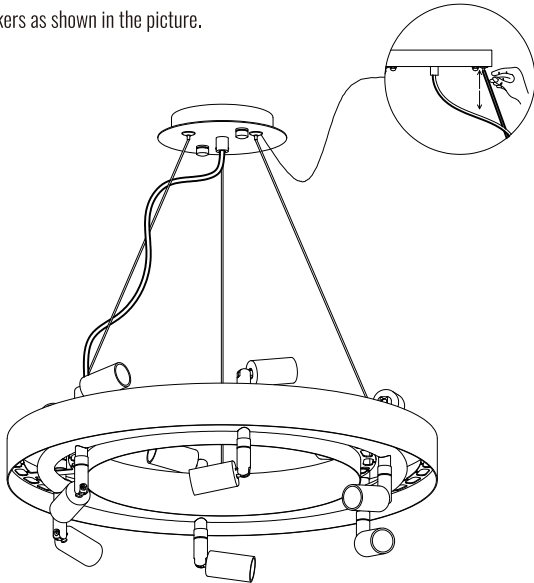


2. Install the Bulbs


E12 x 10, Max 40W each, LED recommended (not included).

Note:

To achieve dimming functionality, you need to use dimmable bulbs and a dimmer switch.

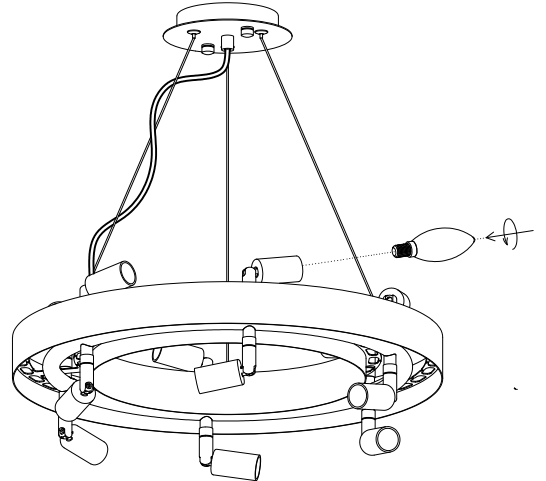

INSTALL THE CRYSTALS

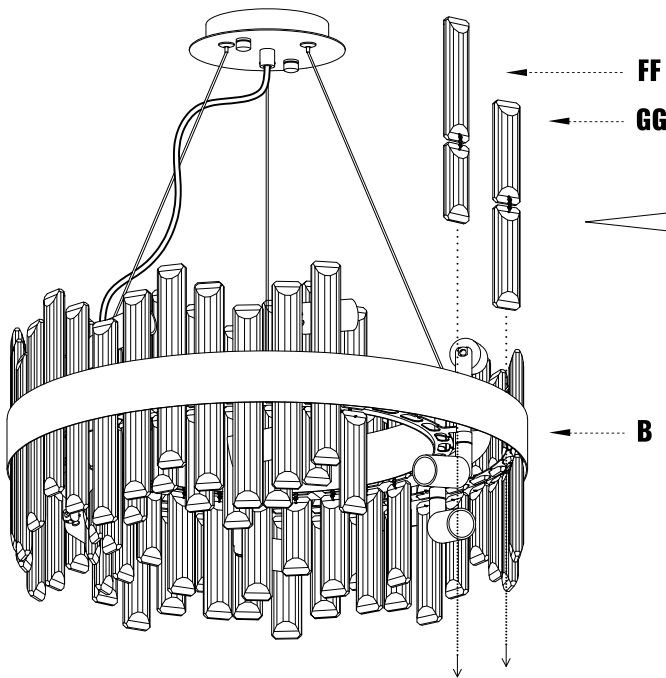

FF/GG

B

FF

GG

B

FF/GG

B

B

FF

GG

FF

GG

STEP 1

STEP 2

STEP 3

STEP 1: Insert the connector between FF/GG into the slot opening of B.

STEP 2: Secure FF/GG downward.

STEP 3: Arrange the crystals in the sequence "FF/GG/FF/GG" and repeat this group order.