


ILSC48CVD-N


Assembly Instructions

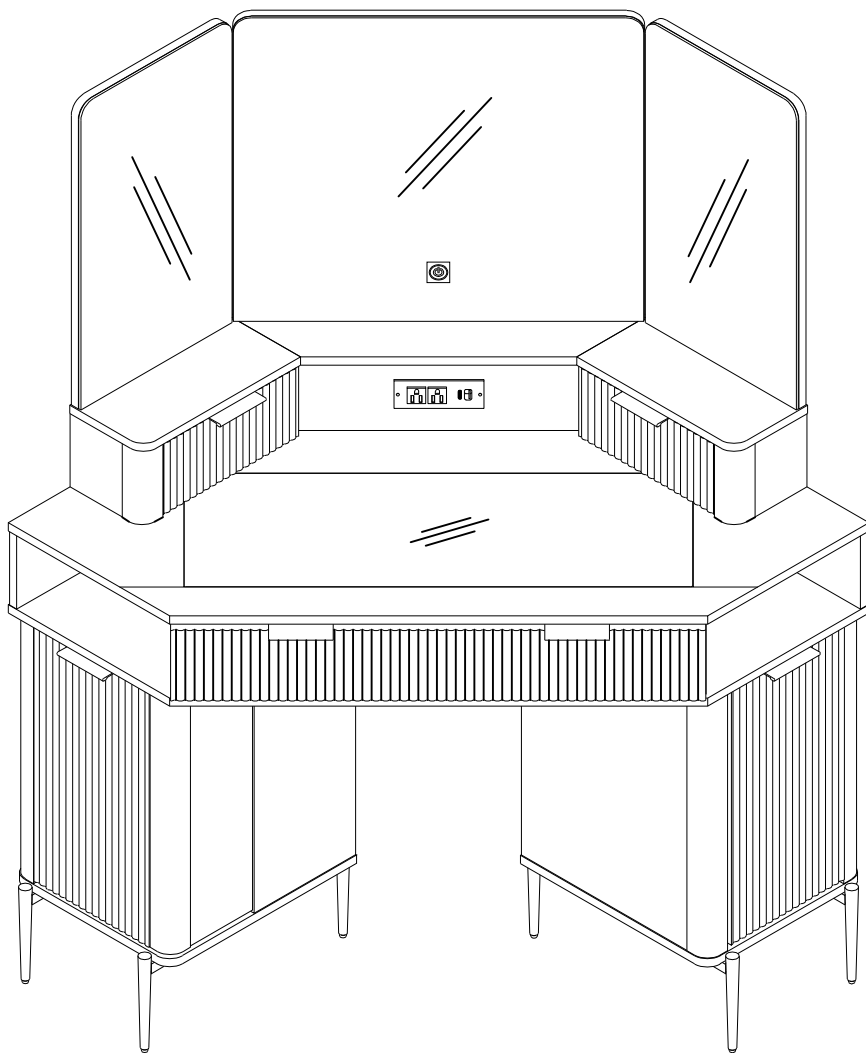


Date 2026-01-12 Rev.02-A

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

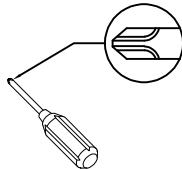

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

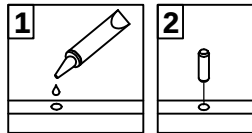


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

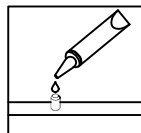


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

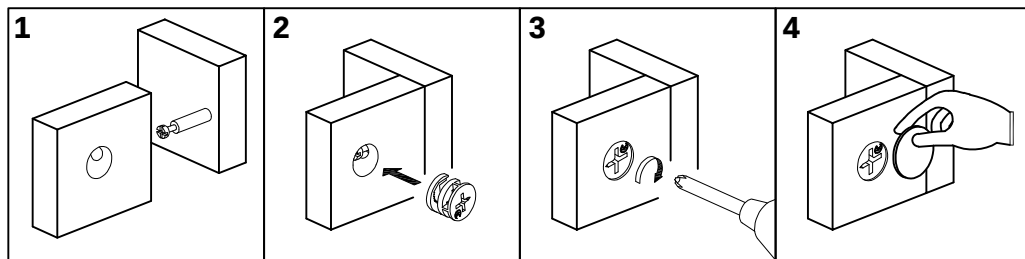



- VII. Power tools should not be used to assemble this product .

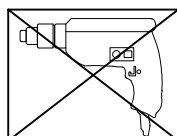


Parts List

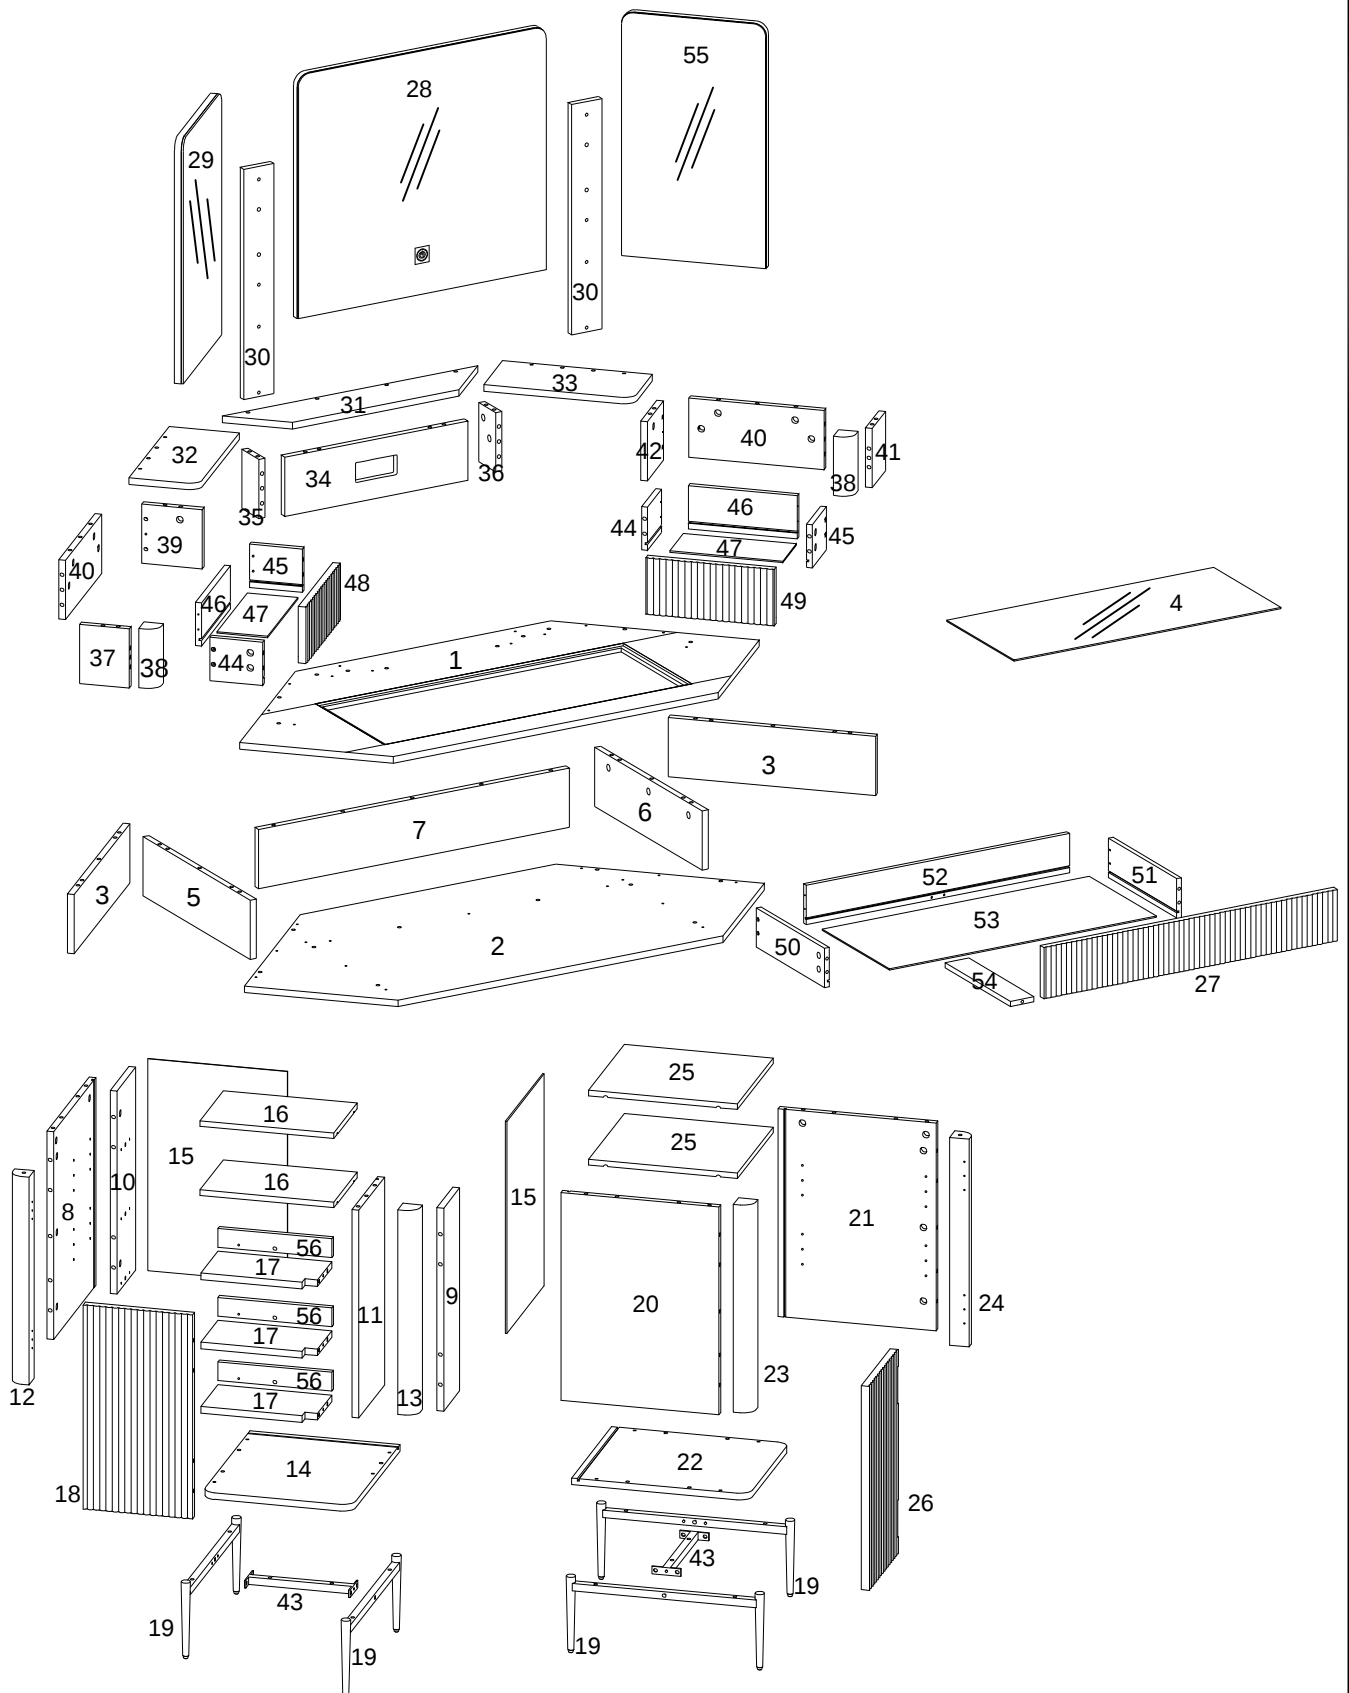



Hardware List


A		Ø8x30mm	Large dowel	90 pcs
B		Ø6x35mm	Cam bolt	89 pcs
C		Ø15x11mm	Large Cam lock	58 pcs
D		Ø30mm	Cam cover	89 pcs
E			Glue tube	2 pcs
F		Ø5*16mm	Shelf Pin	16 pcs
G		M 4	Allen Wrench	1 pc
H		Ø3.5x12mm	Screw	28 pcs
J		Ø15x9mm	Small Cam lock	31 pcs
K		Ø4x38mm	Screw	41 pcs
L			Power Cord W/USB	1 pc
M			Plastic wedge	12 pcs
N		Ø3*17mm	Screw	12 pcs
O			Hinge	4 pcs
P		Ø6x30mm	Small dowel	9 pcs
Q			Handle	6 pcs
R		Ø6*50mm	Bolt	16 pcs

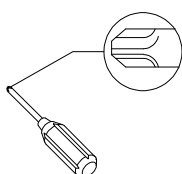

Philips head screwdriver required for assembly
(not included)


Hardware List

S		Ø1/4"x25mm	Bolt	16 pcs
T		Ø8x20mm	Medium dowel	8 pcs
U			Bracket	2 pcs
V		Ø1/4"x22mm	Bolt	4 pcs
W		12"	Left Glide Track	1 pc
X		12"	Left Glide Runner	1 pc
Y		12"	Right Glide Track	1 pc
Z		12"	Right Glide Runner	1 pc
AA		Tipping Restraint Hardware		2 sets
BB		Ø3.5x14mm	Screw	36 pcs
CC			Metal piece	2 pcs
DD		Ø1/4"x12mm	Bolt	8 pcs
EE			Magnetic catch	2 pcs
FF		Ø3*15mm	Screw	4 pcs
GG			Power plug	1 pc

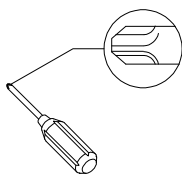


Philips head screwdriver required for assembly
(not included)




Step 1

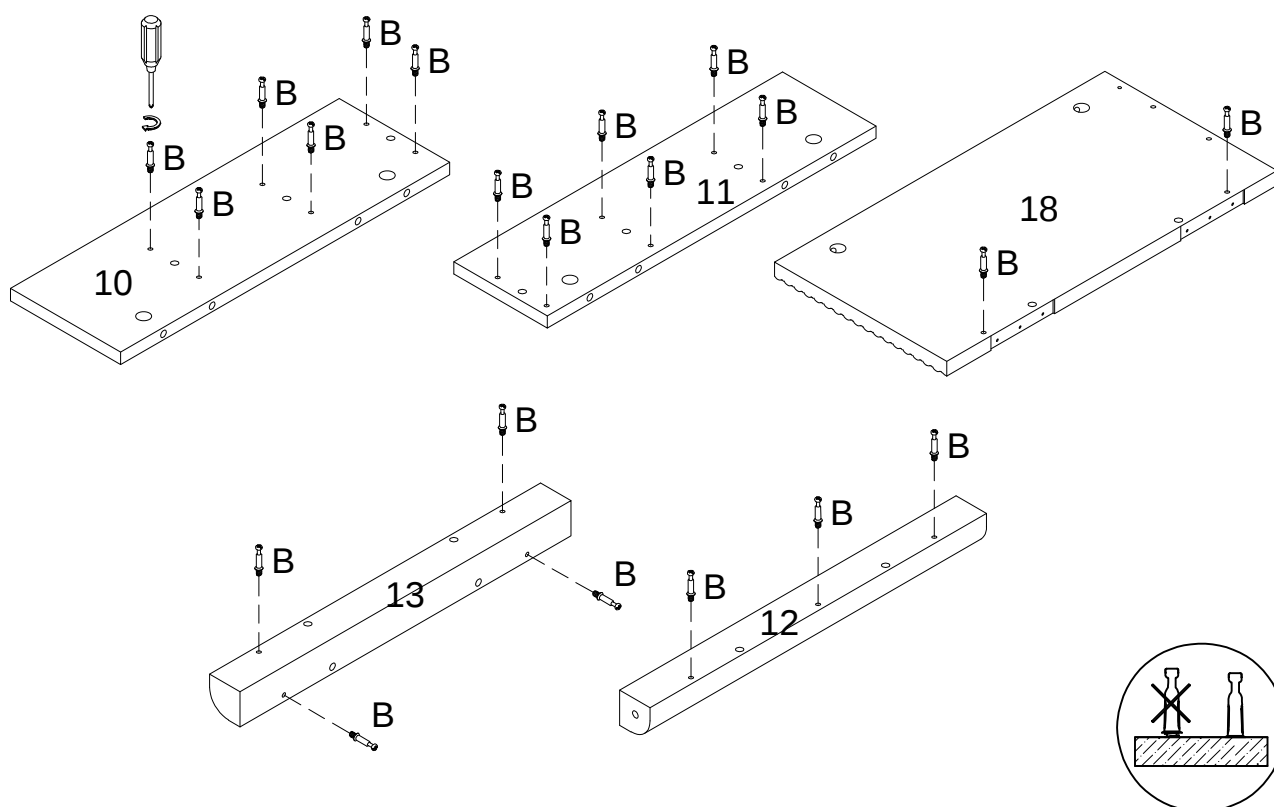




Step 2

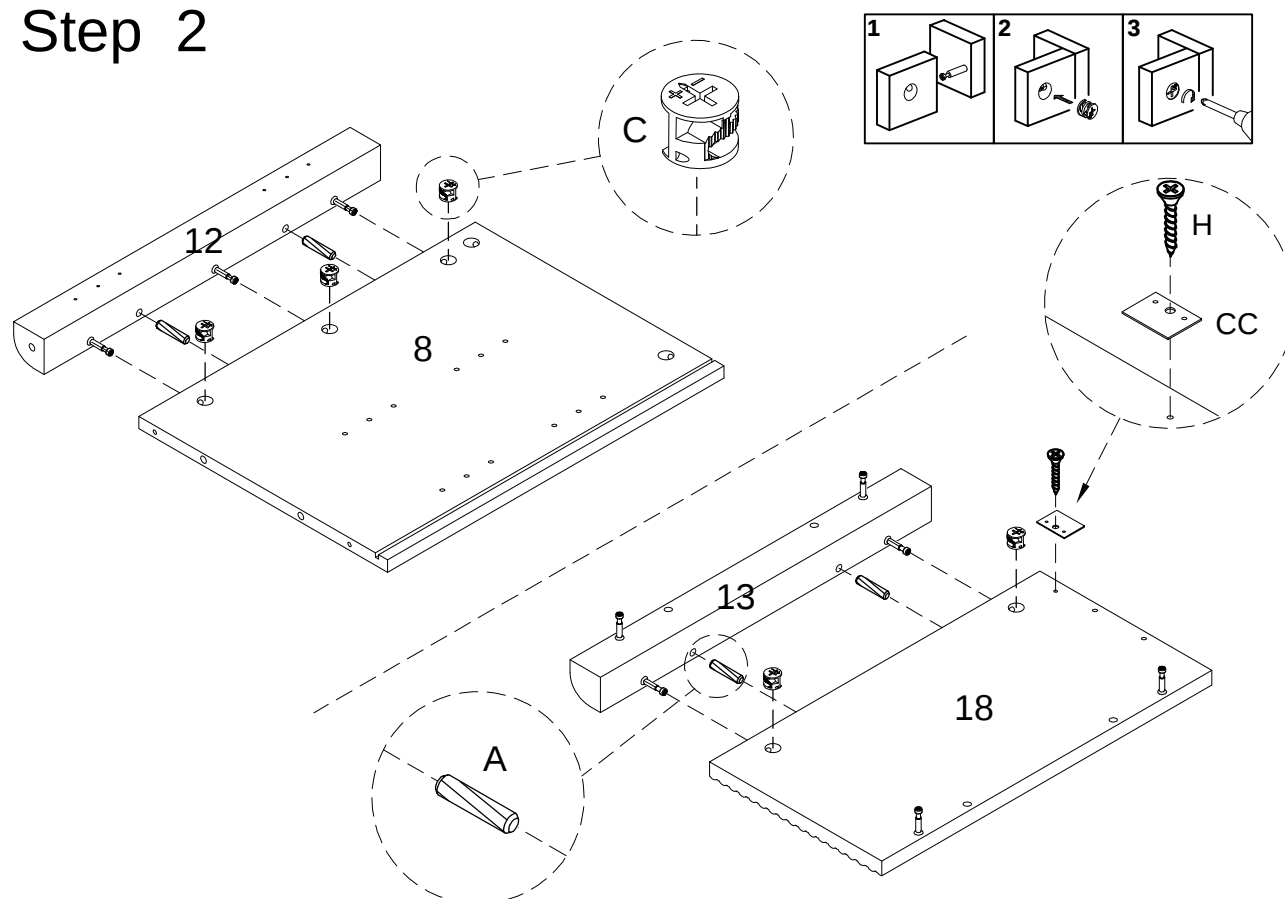


Step 3

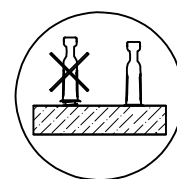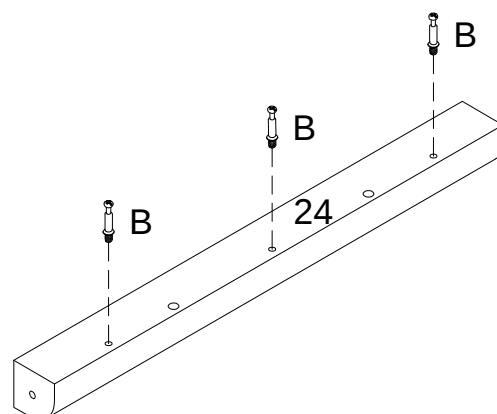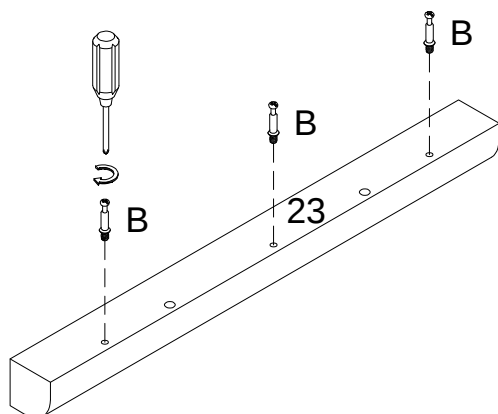


Step 4

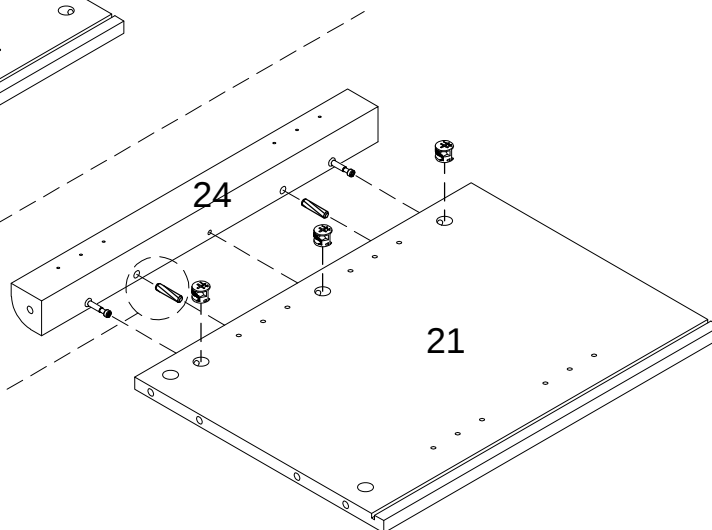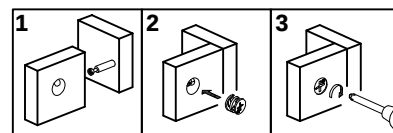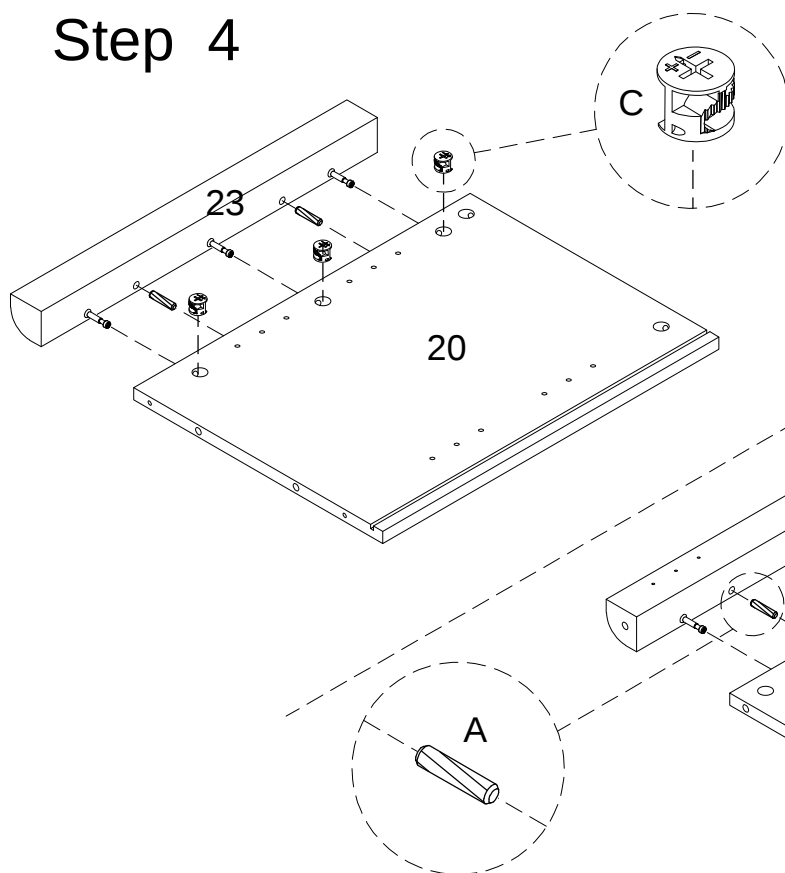


Step 5

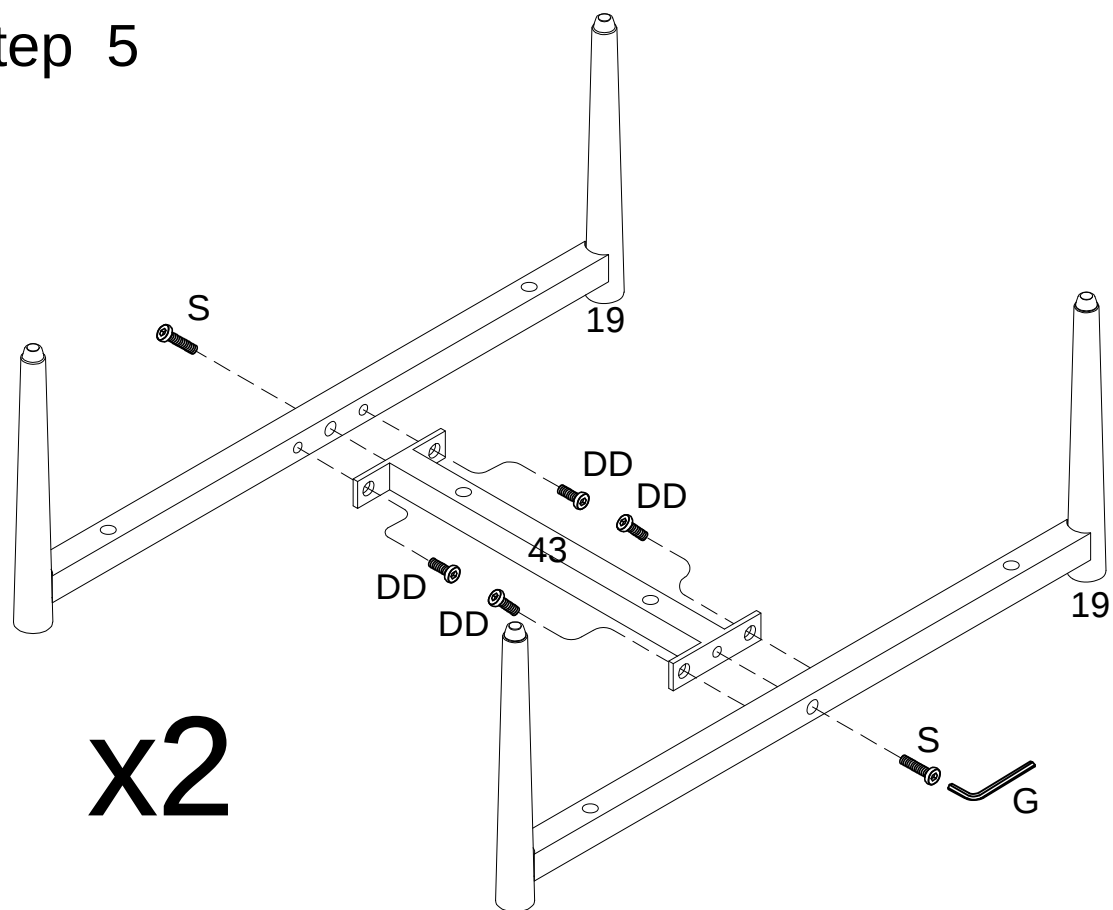


Step 6

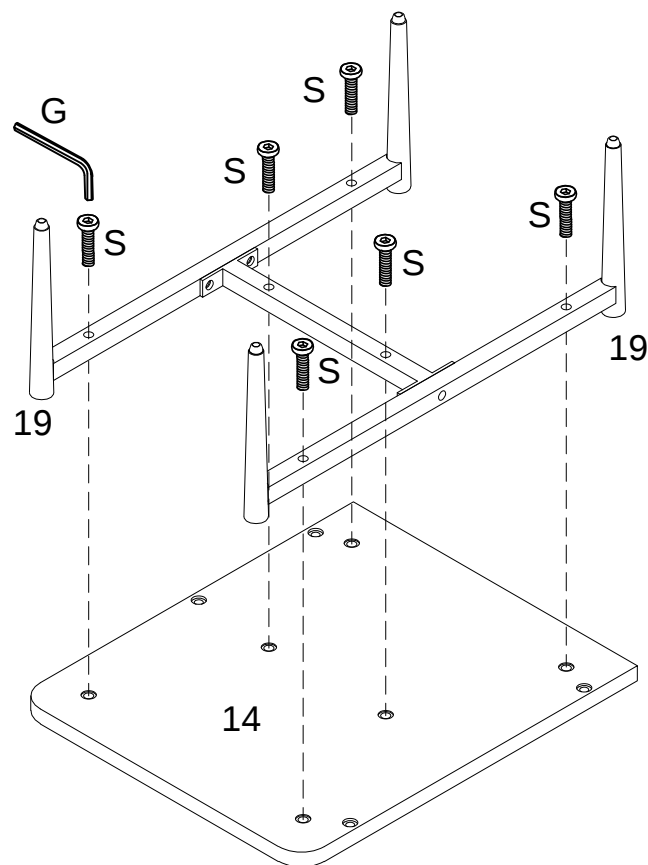


Step 7

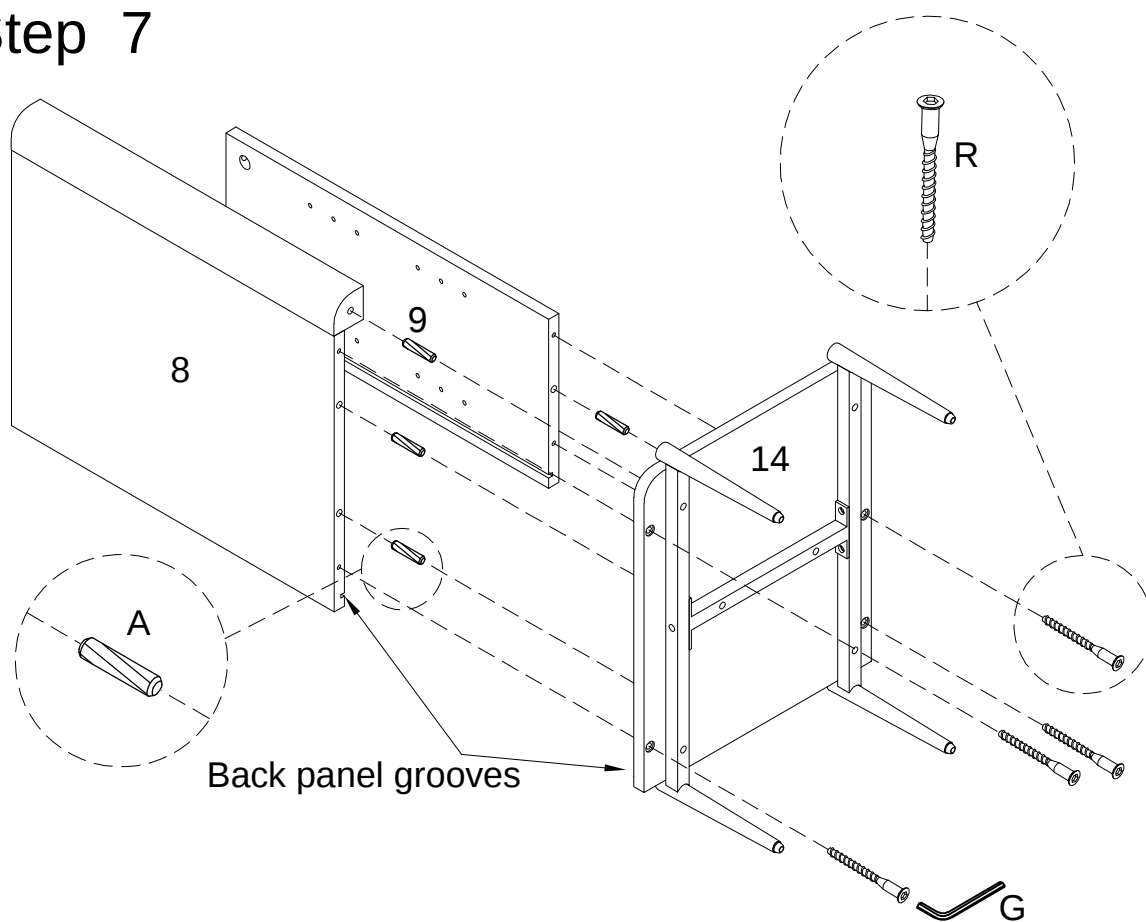


Step 8

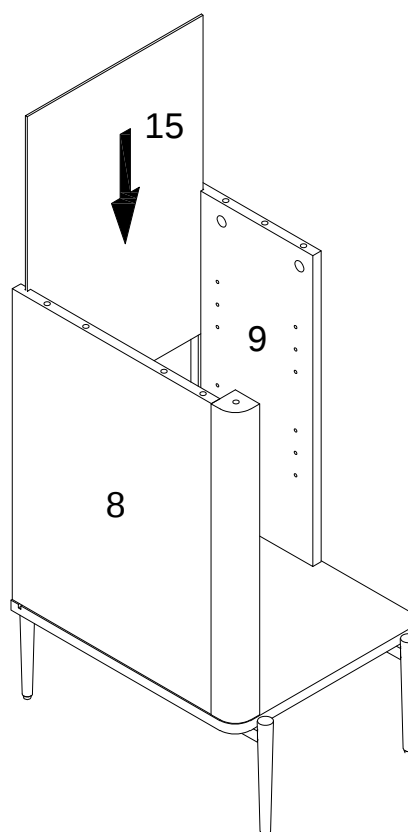


Step 9

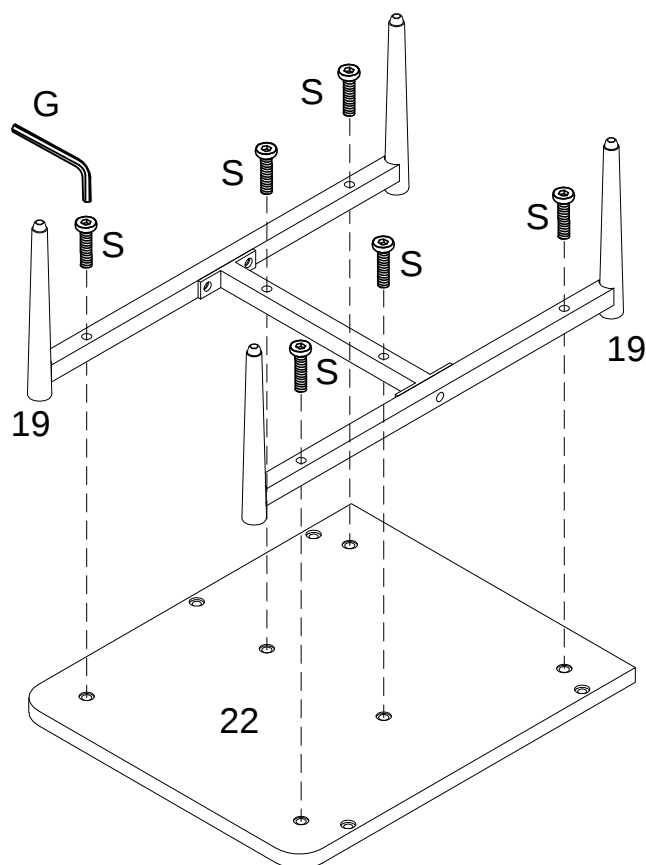


Step 10

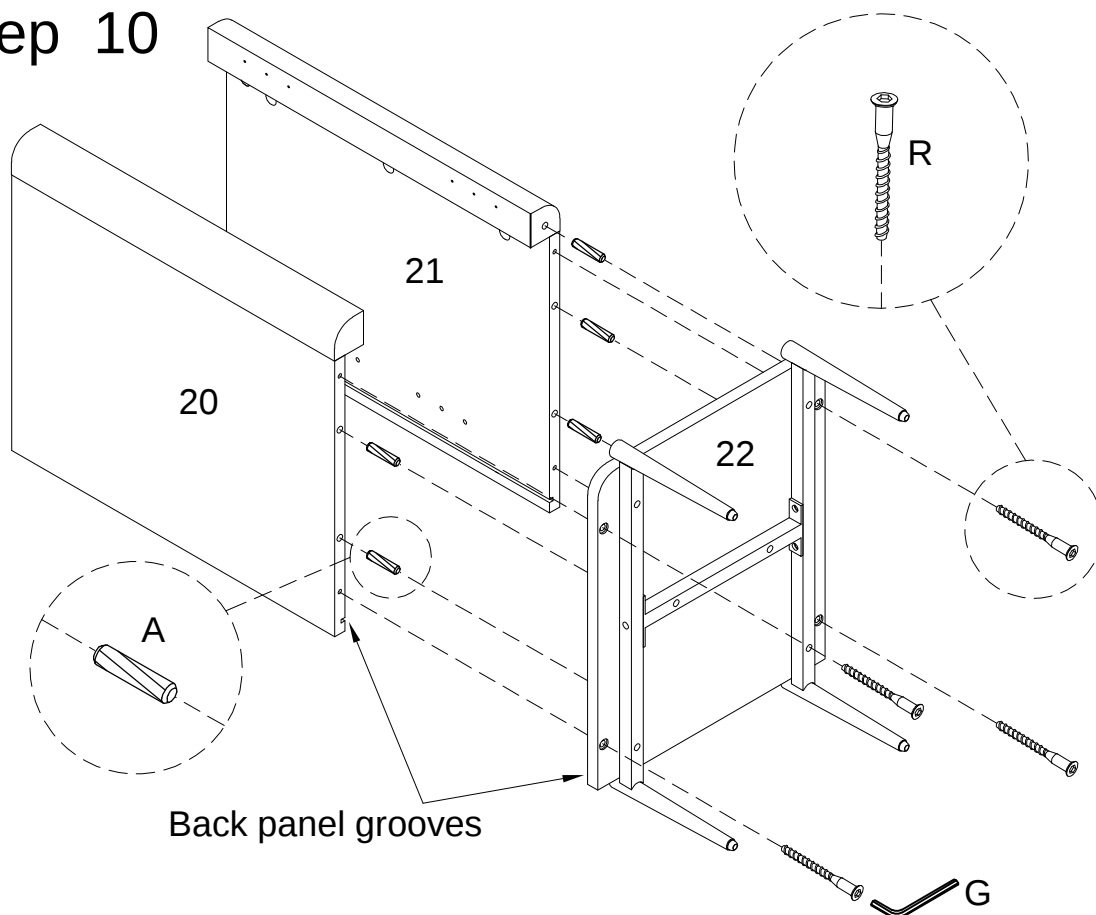


Step 11

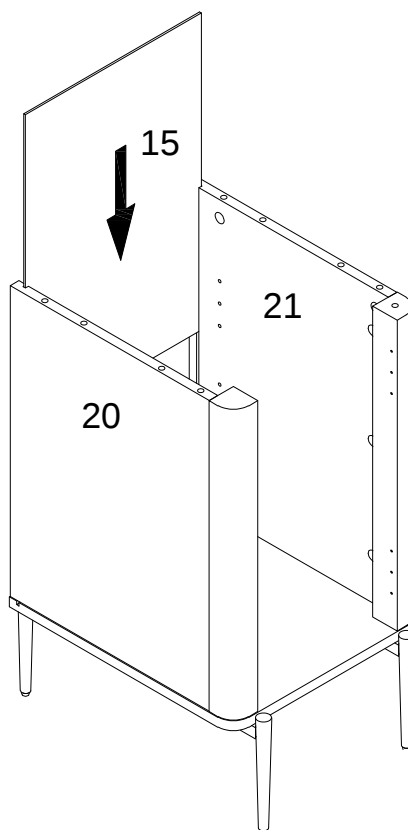


Step 12

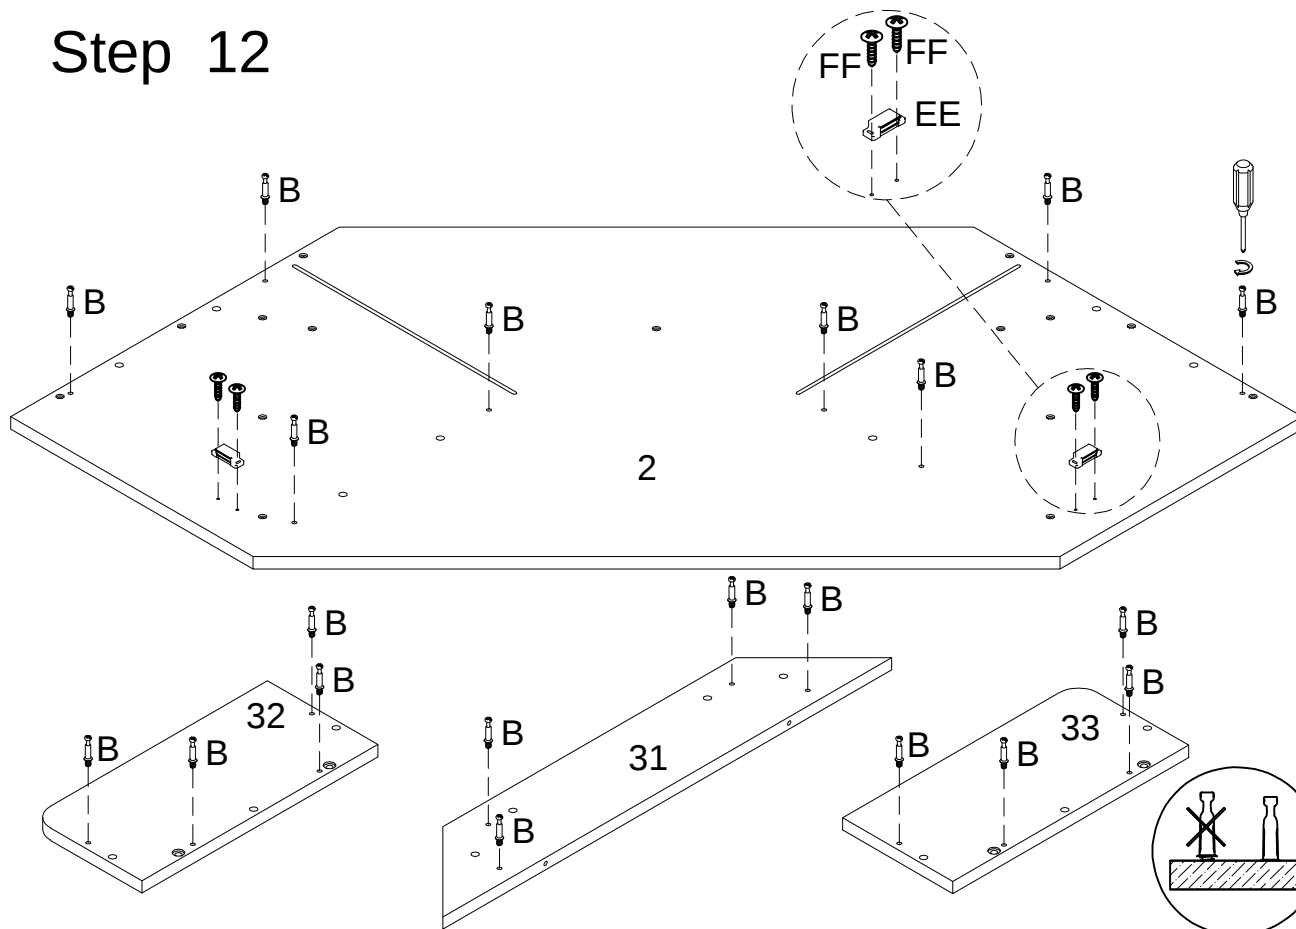






Step 13

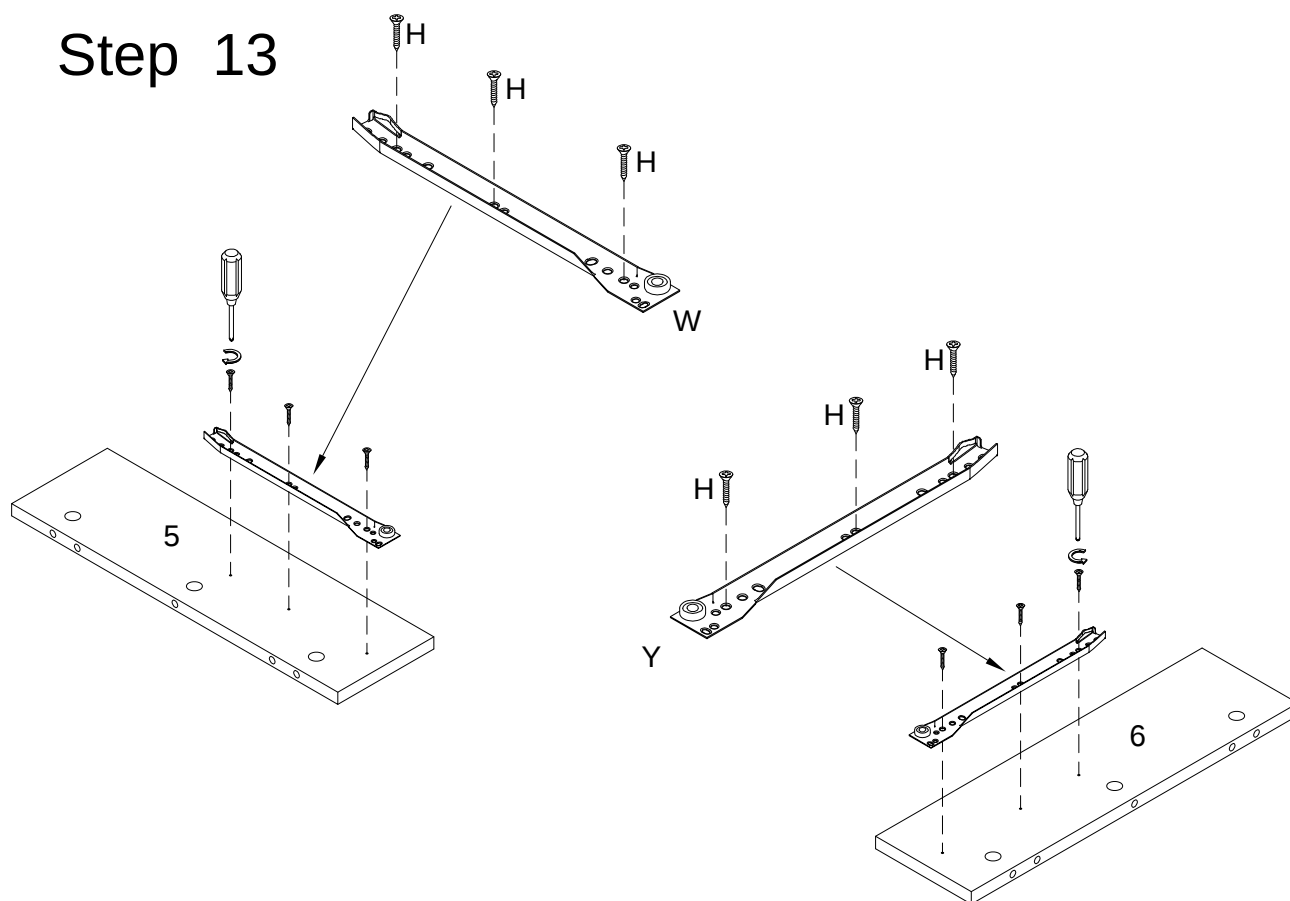

Step 14





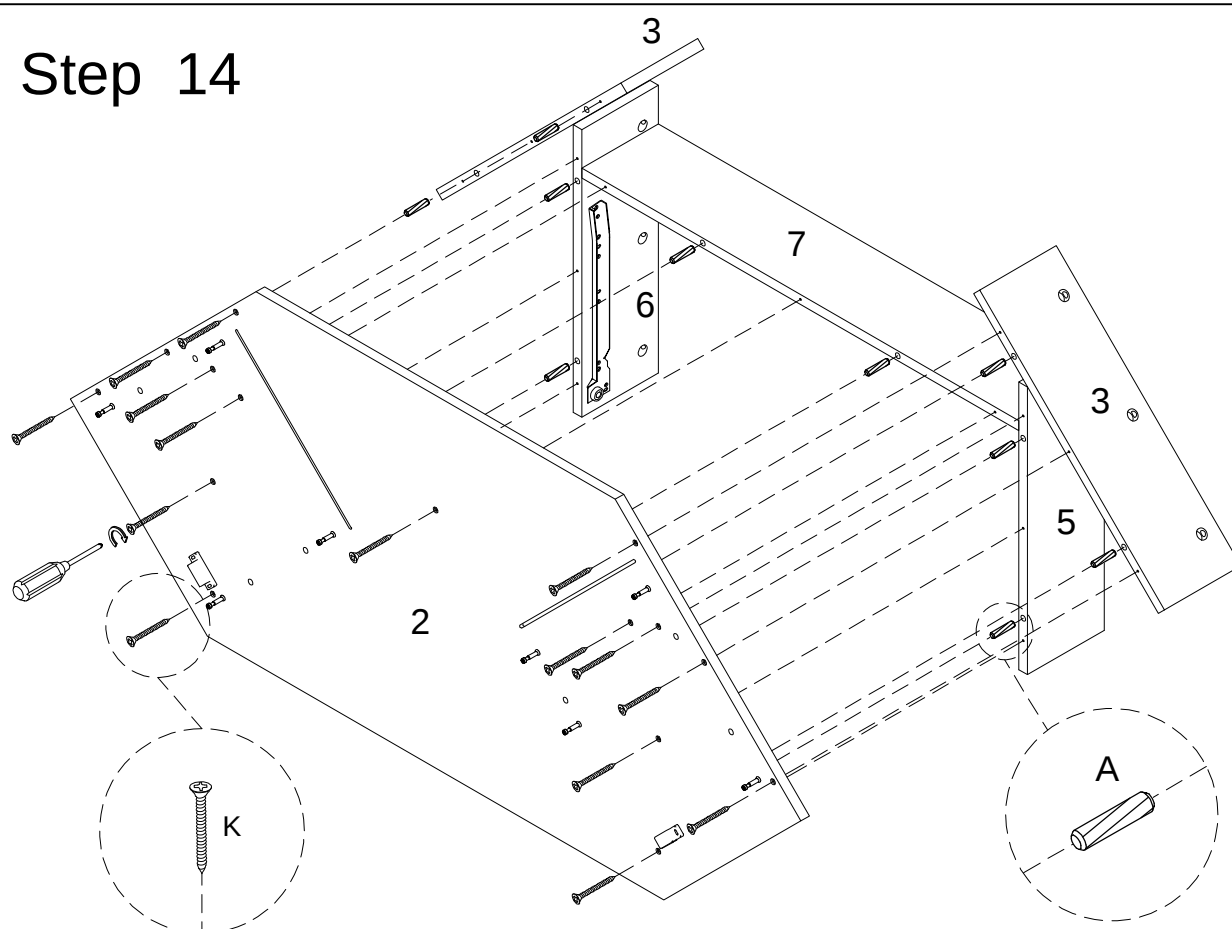


Step 15

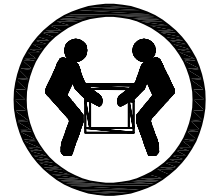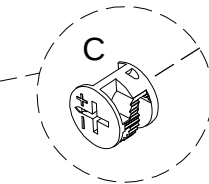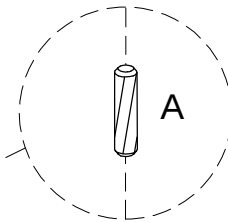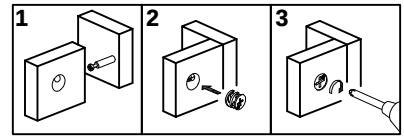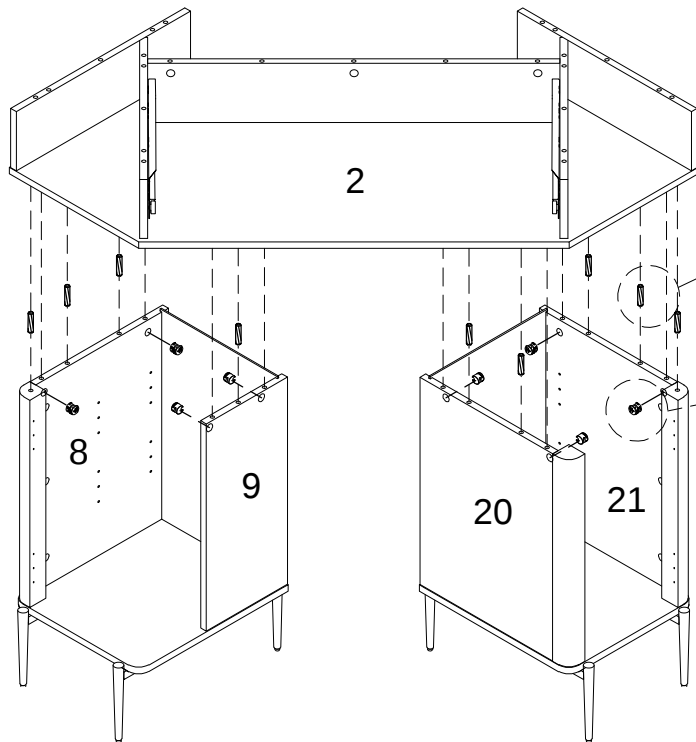


CAUTION: Heavy! You may need assistance with this step


Step 16

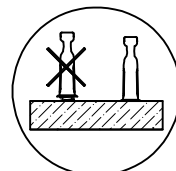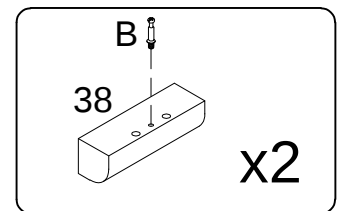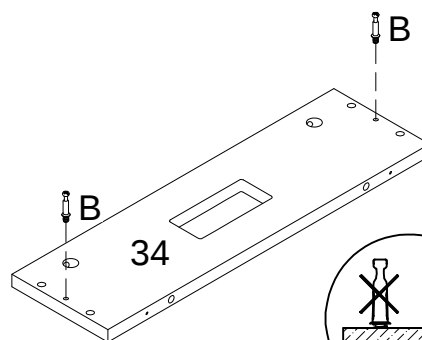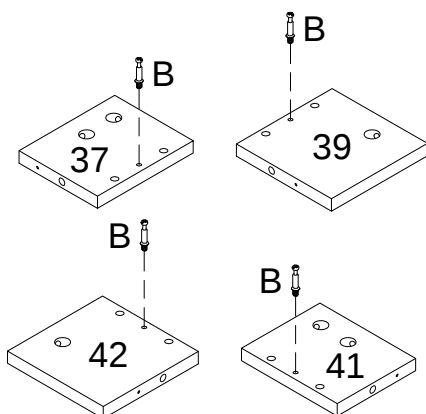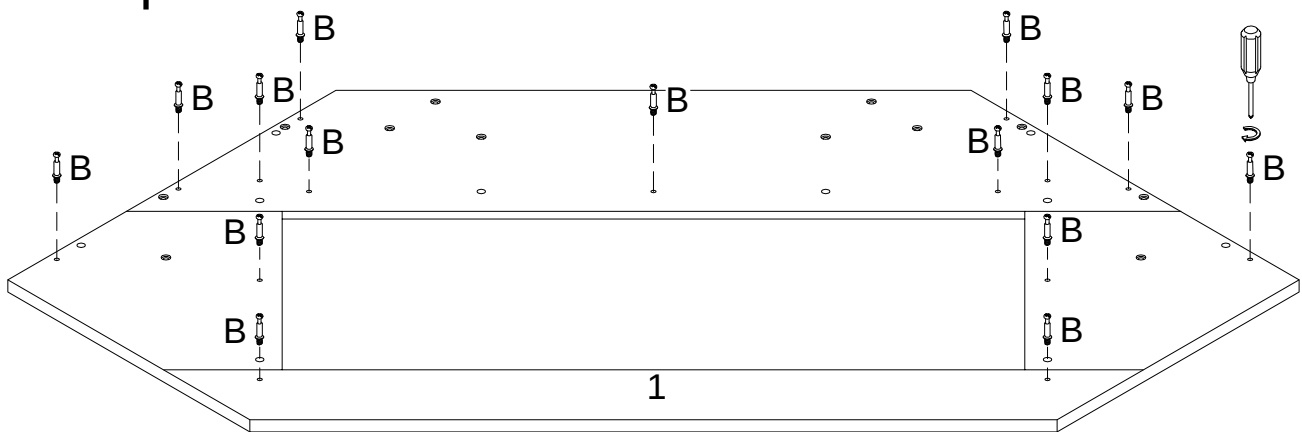


Step 17

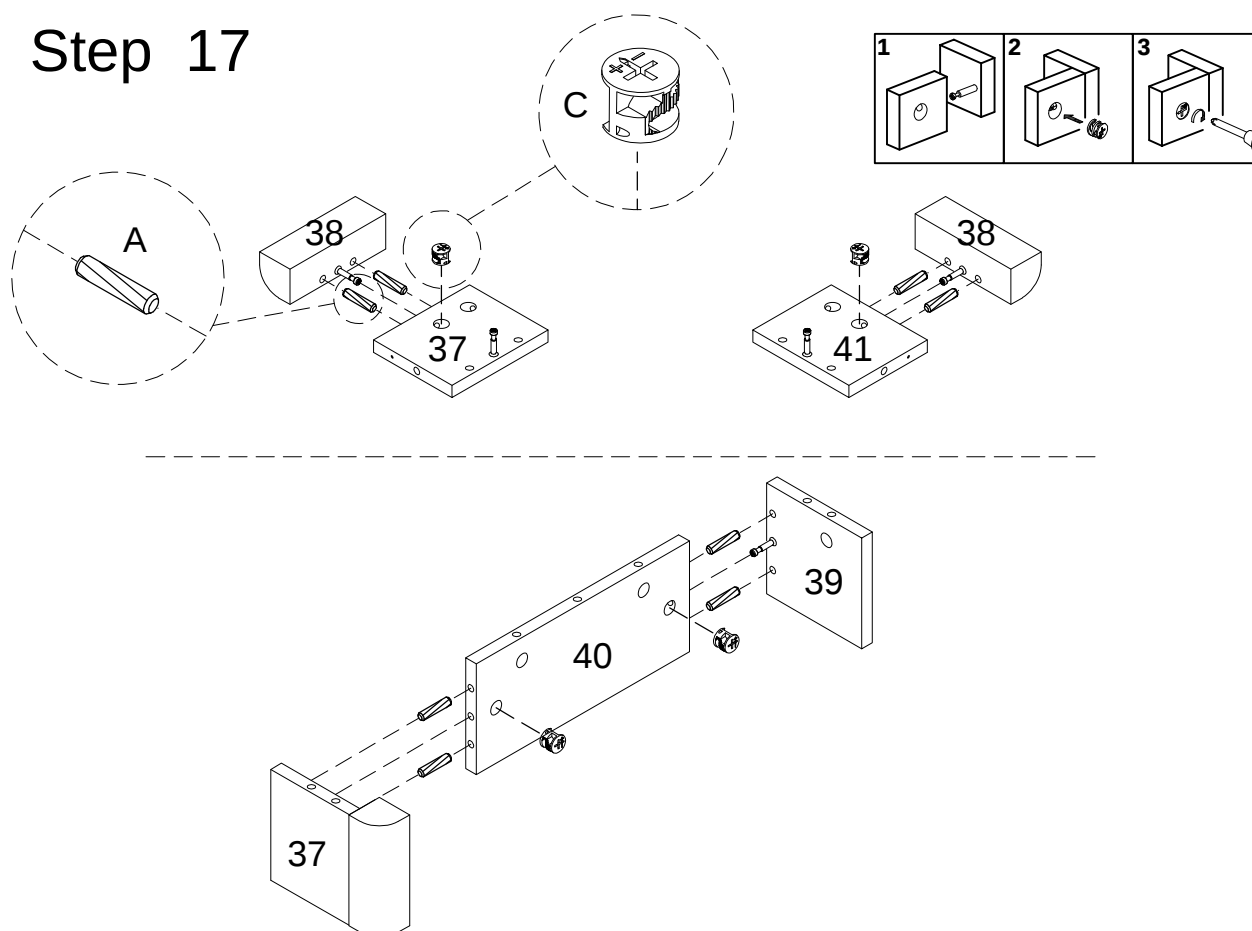


Step 18

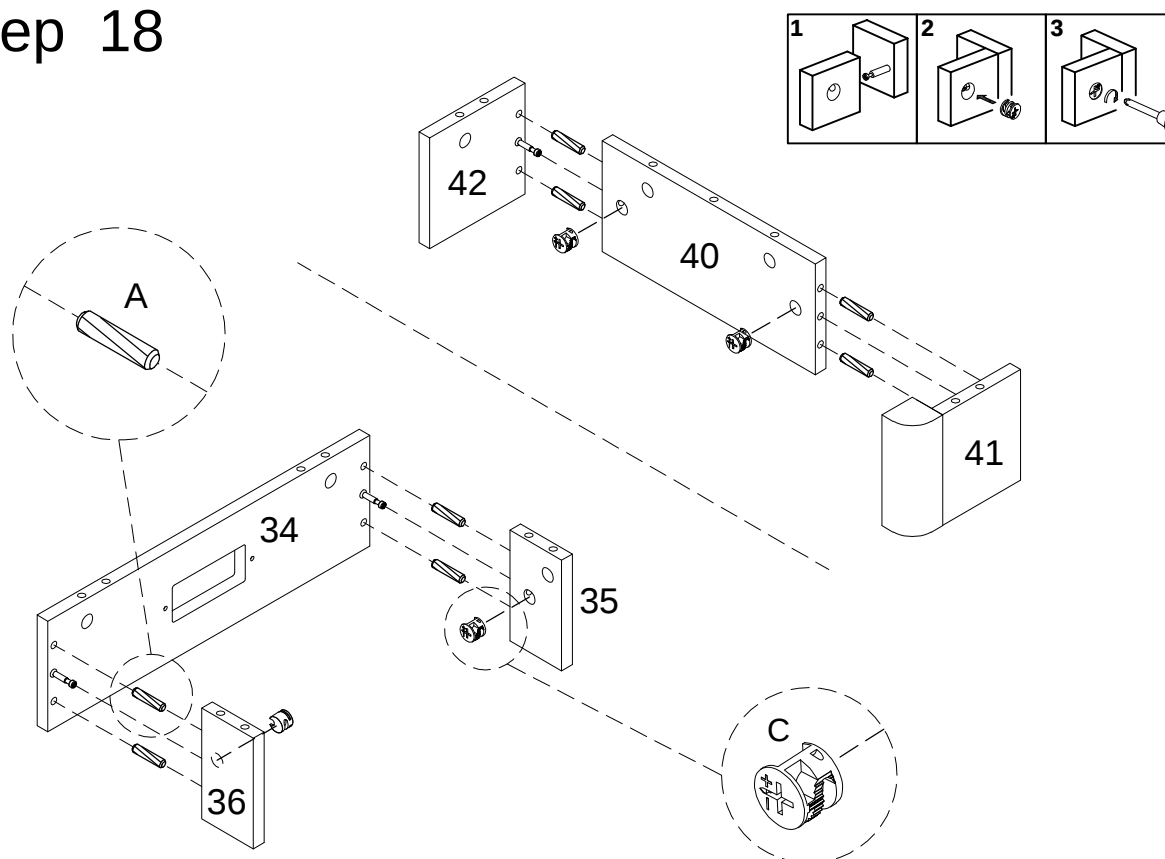


Step 19

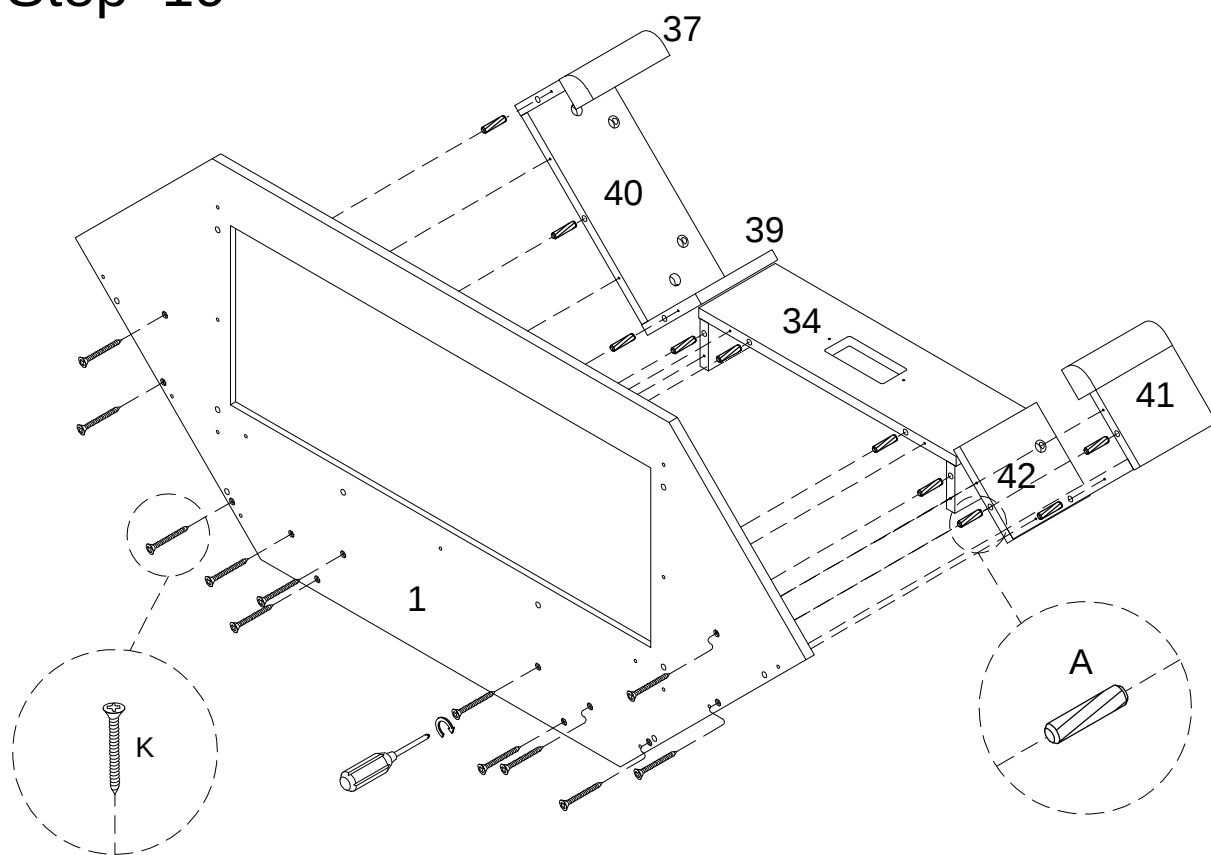


Step 20

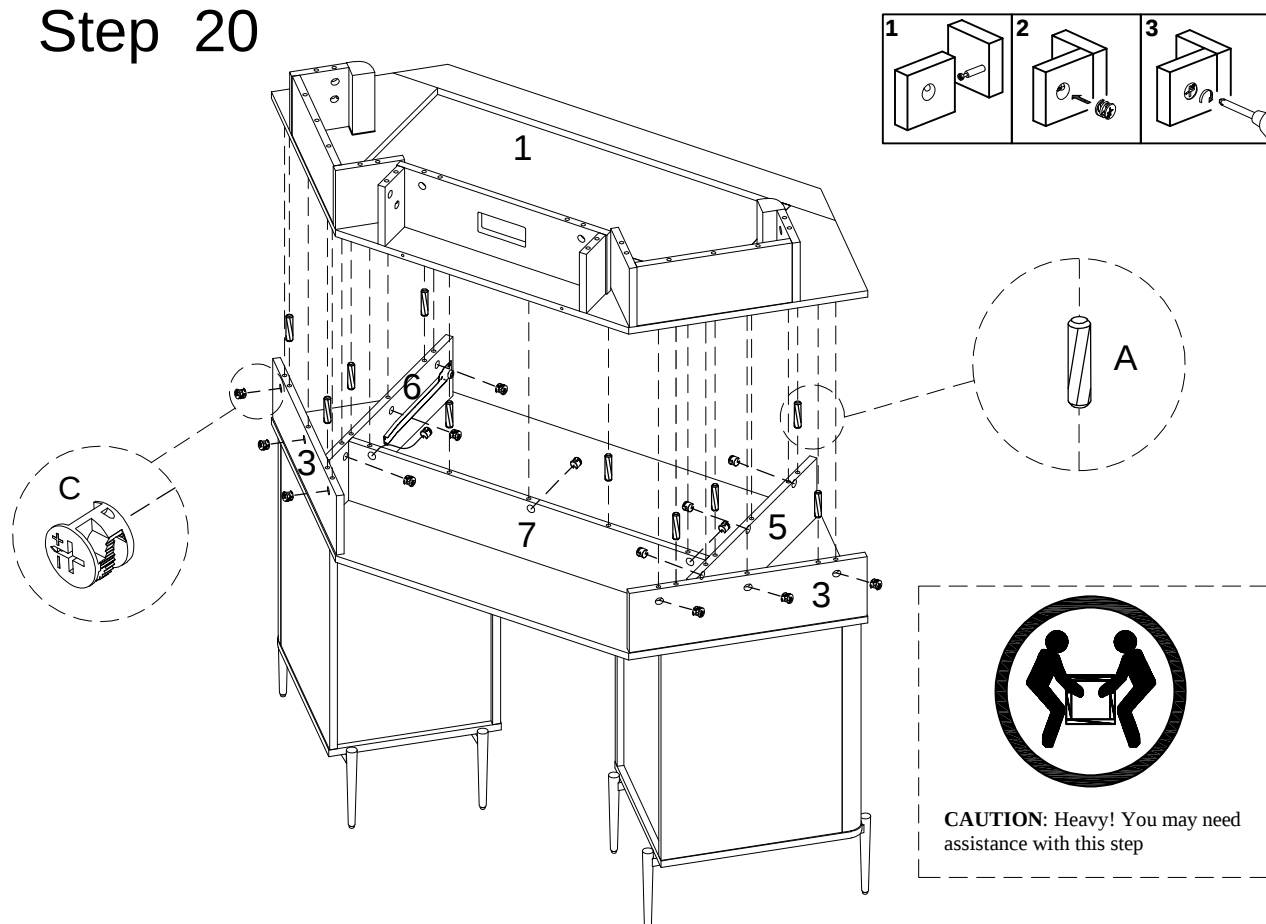


Step 21

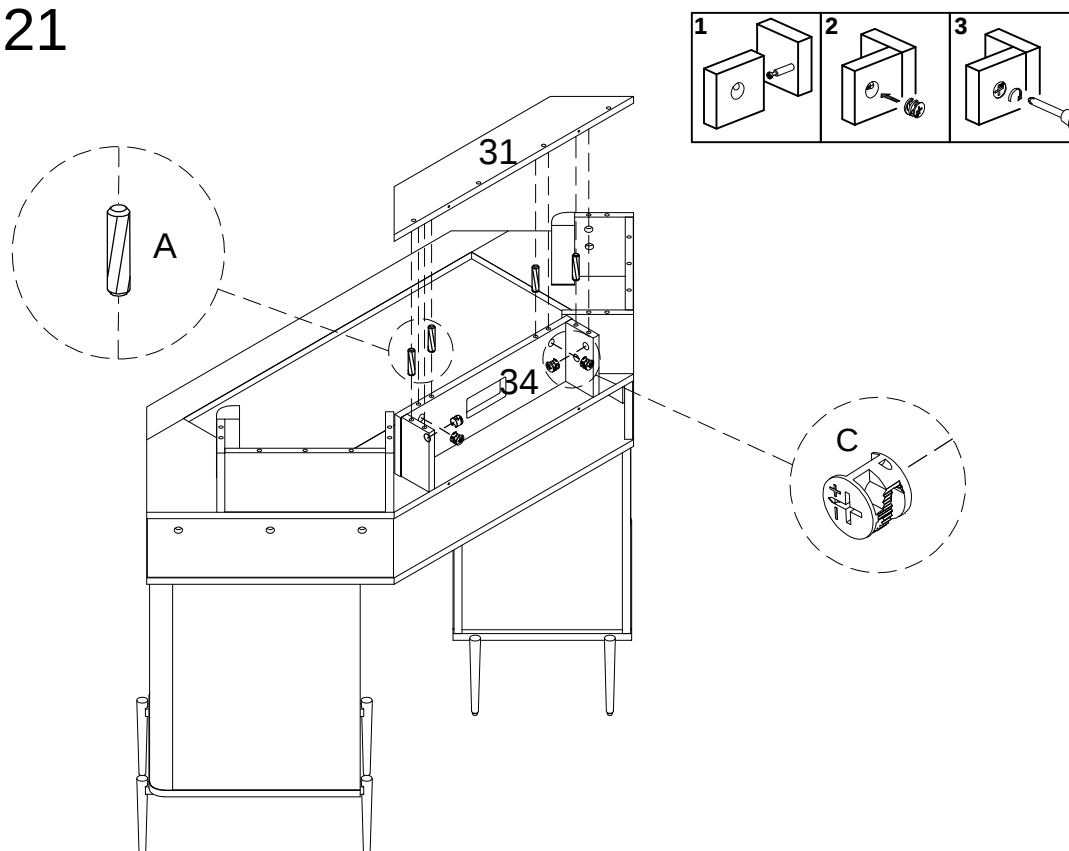


Step 22

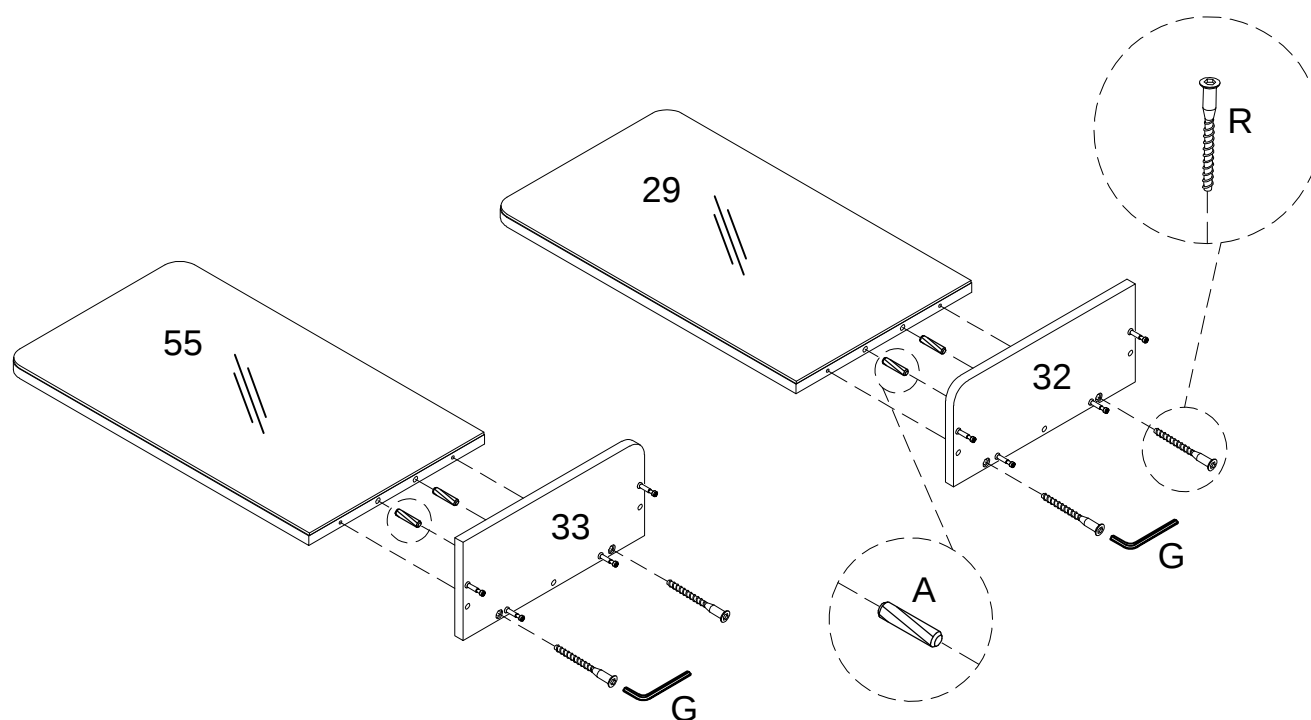


Step 23

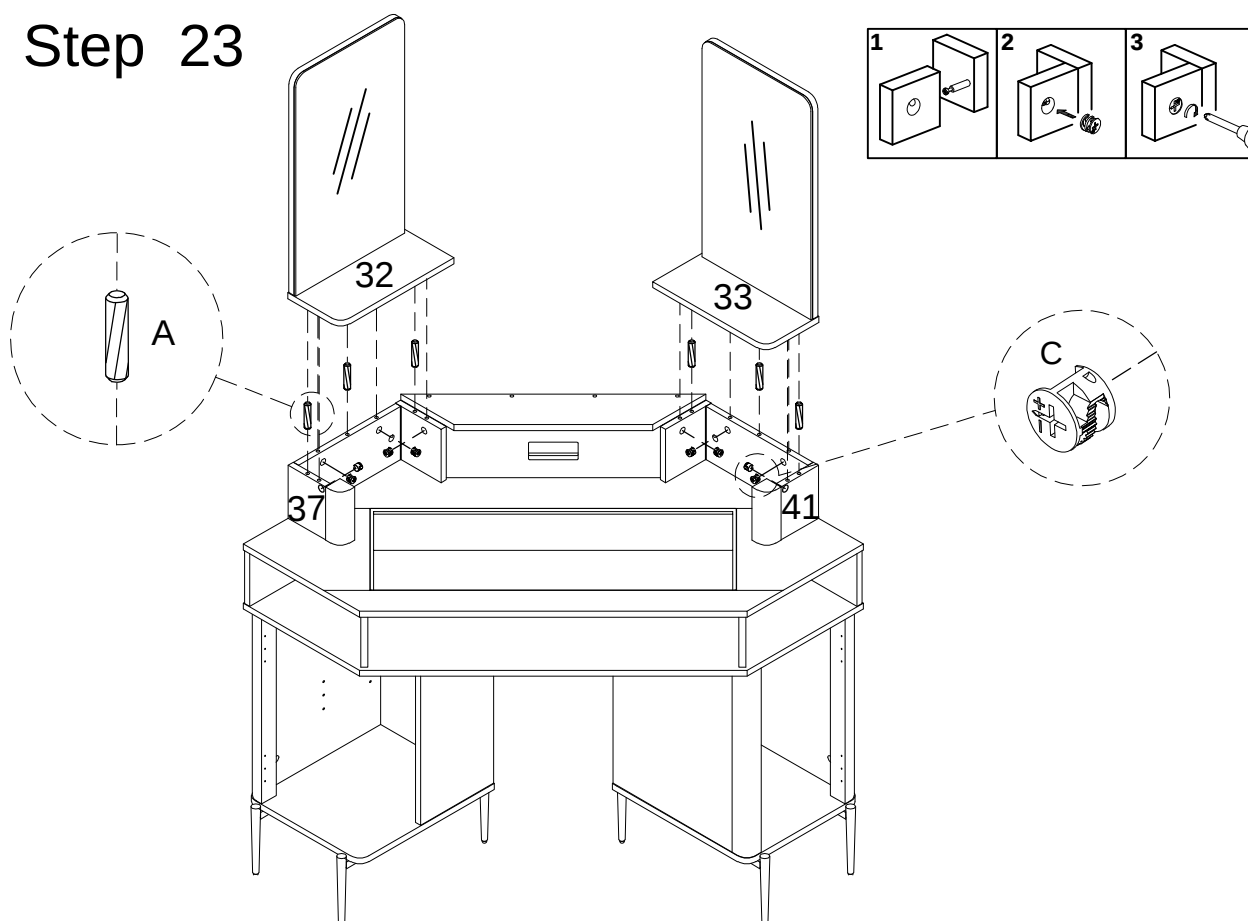


Step 24

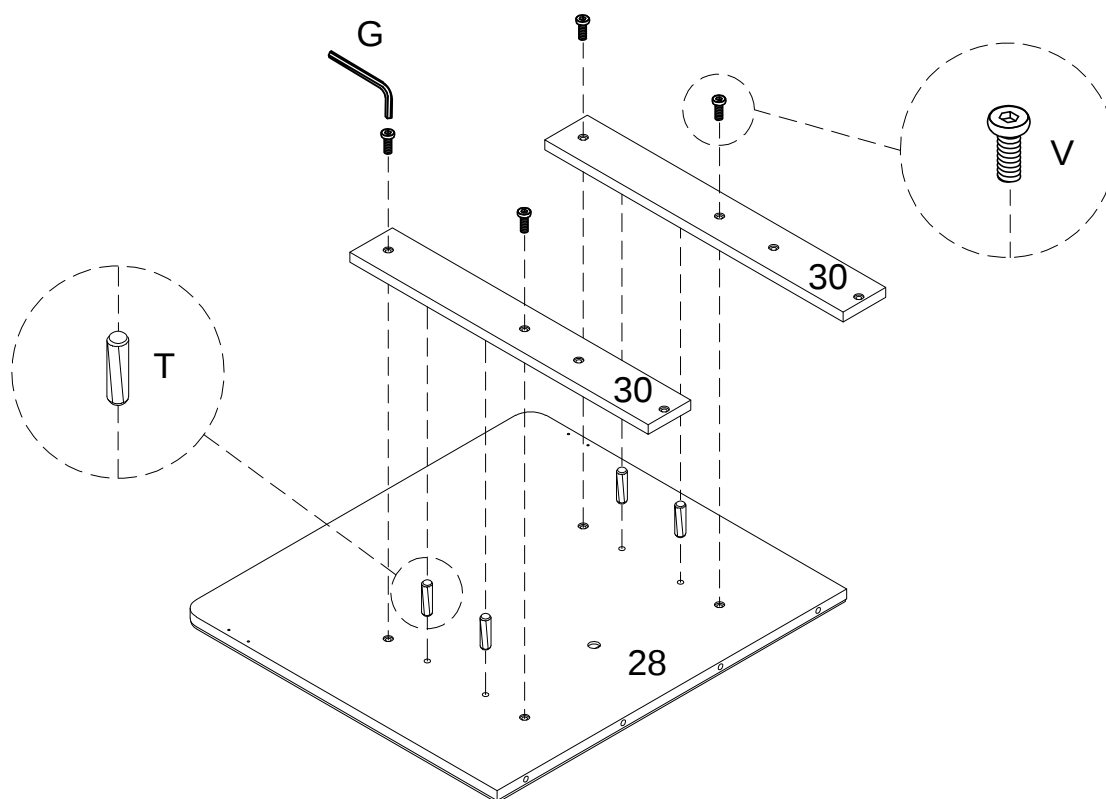


Step 25

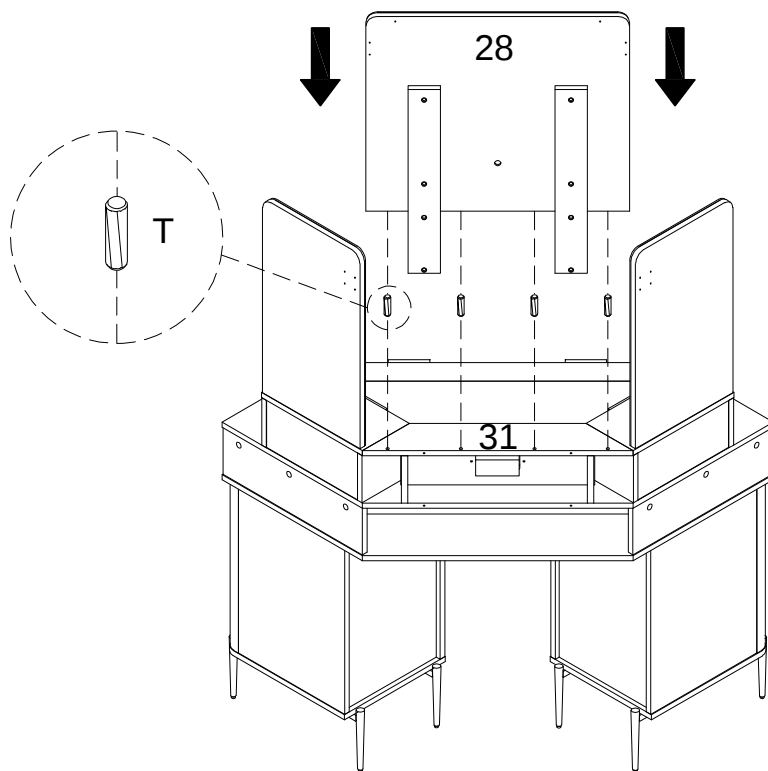


Step 26

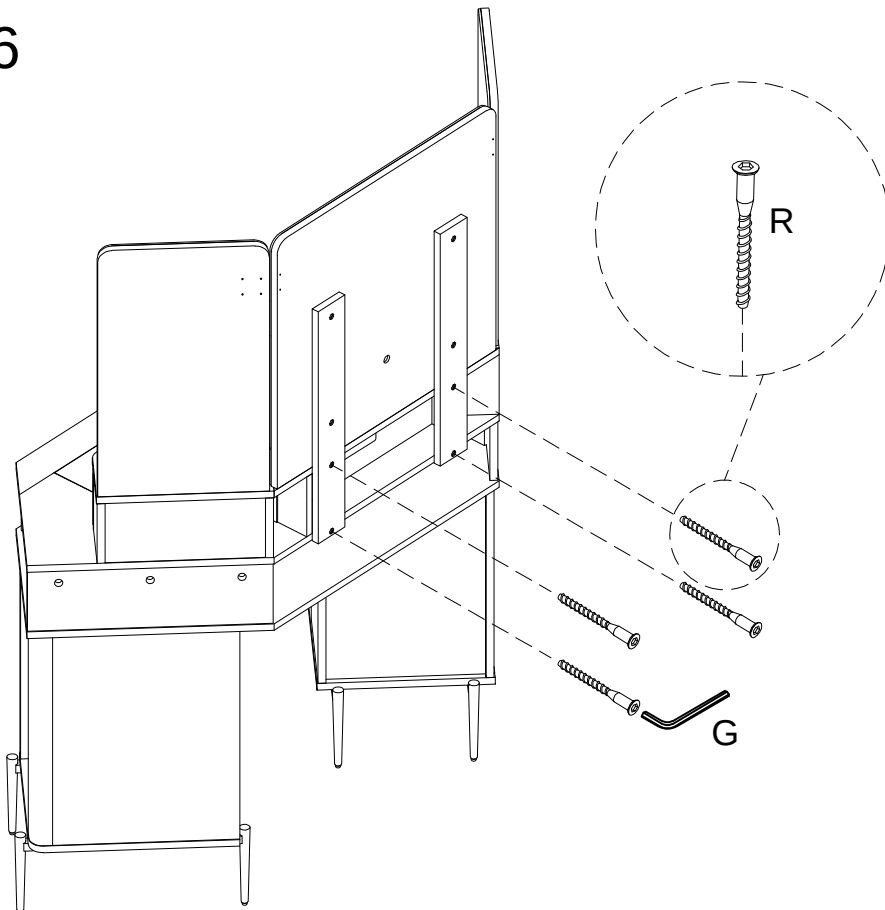


Step 27

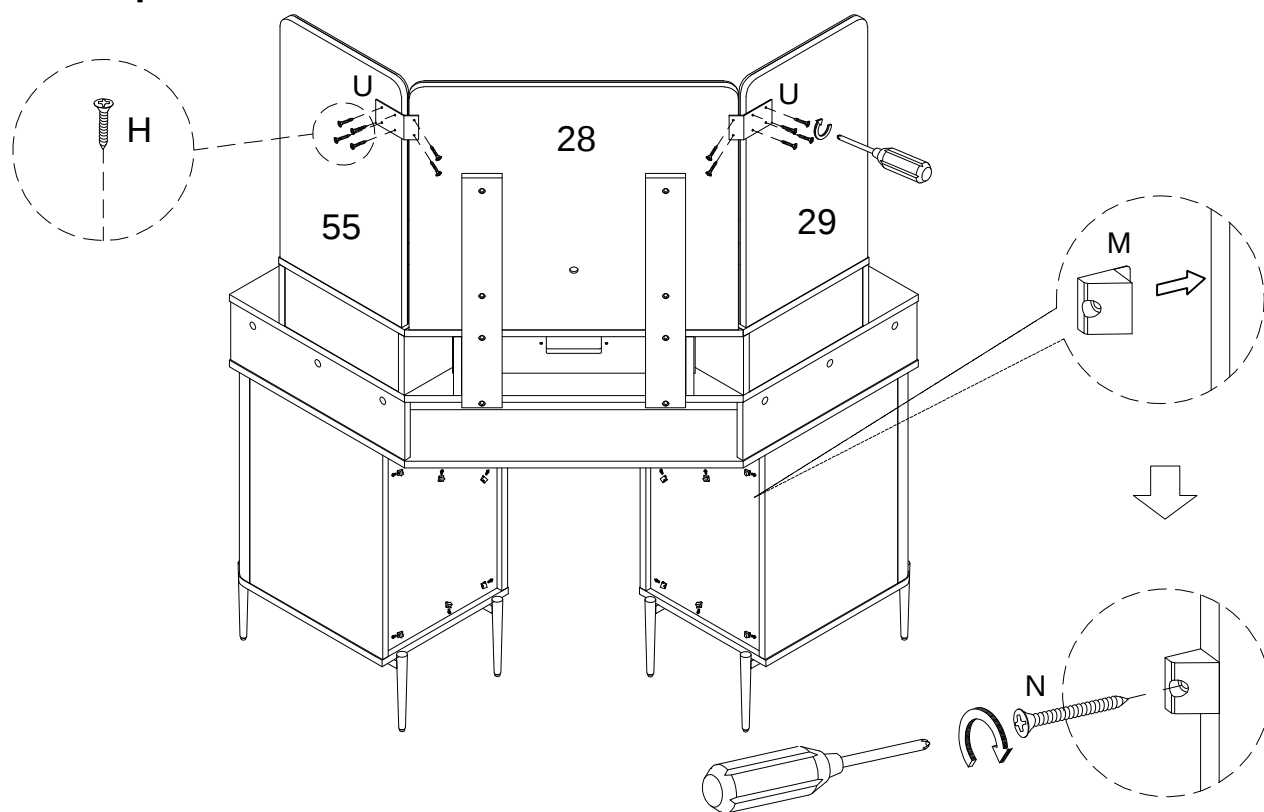


Step 28

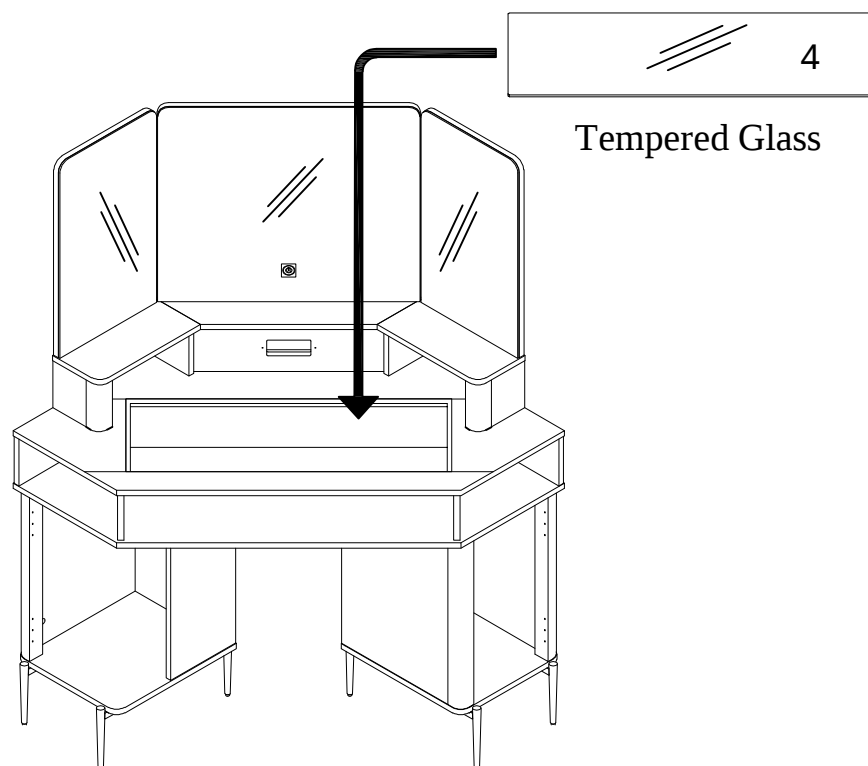



Step 29

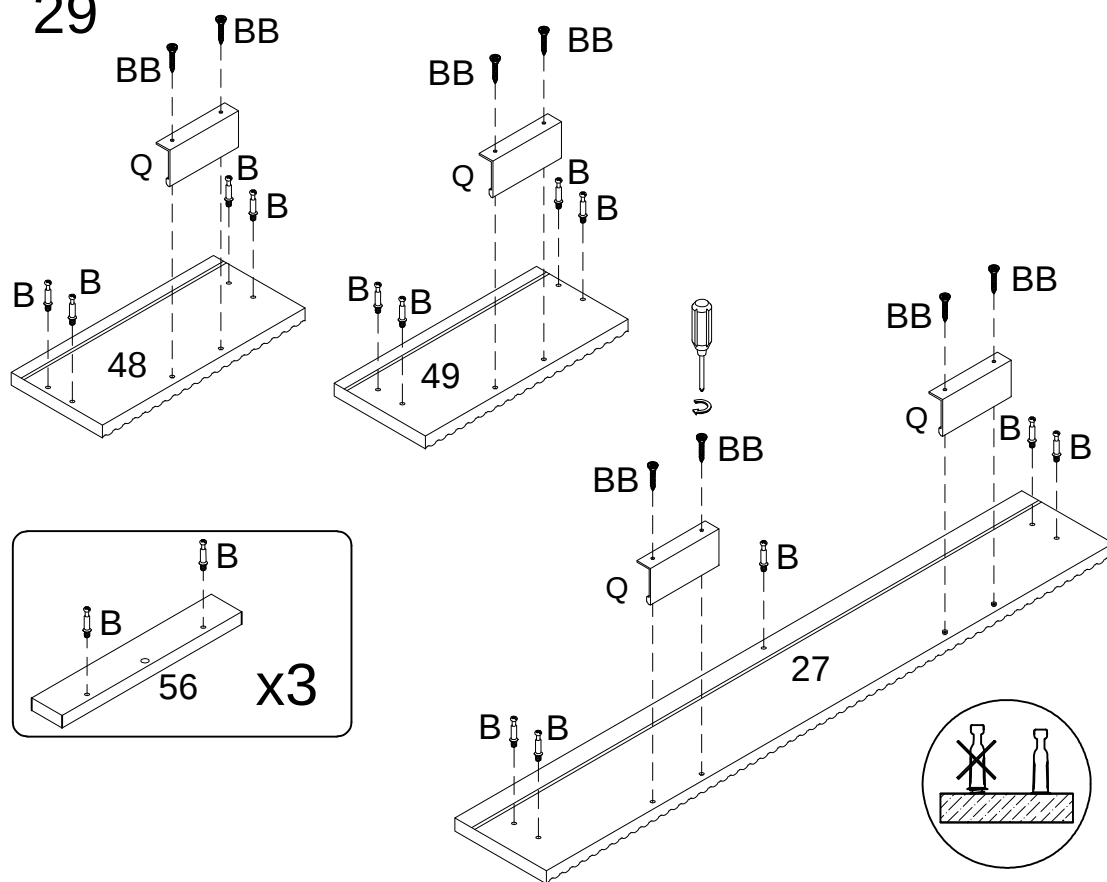


Step 30

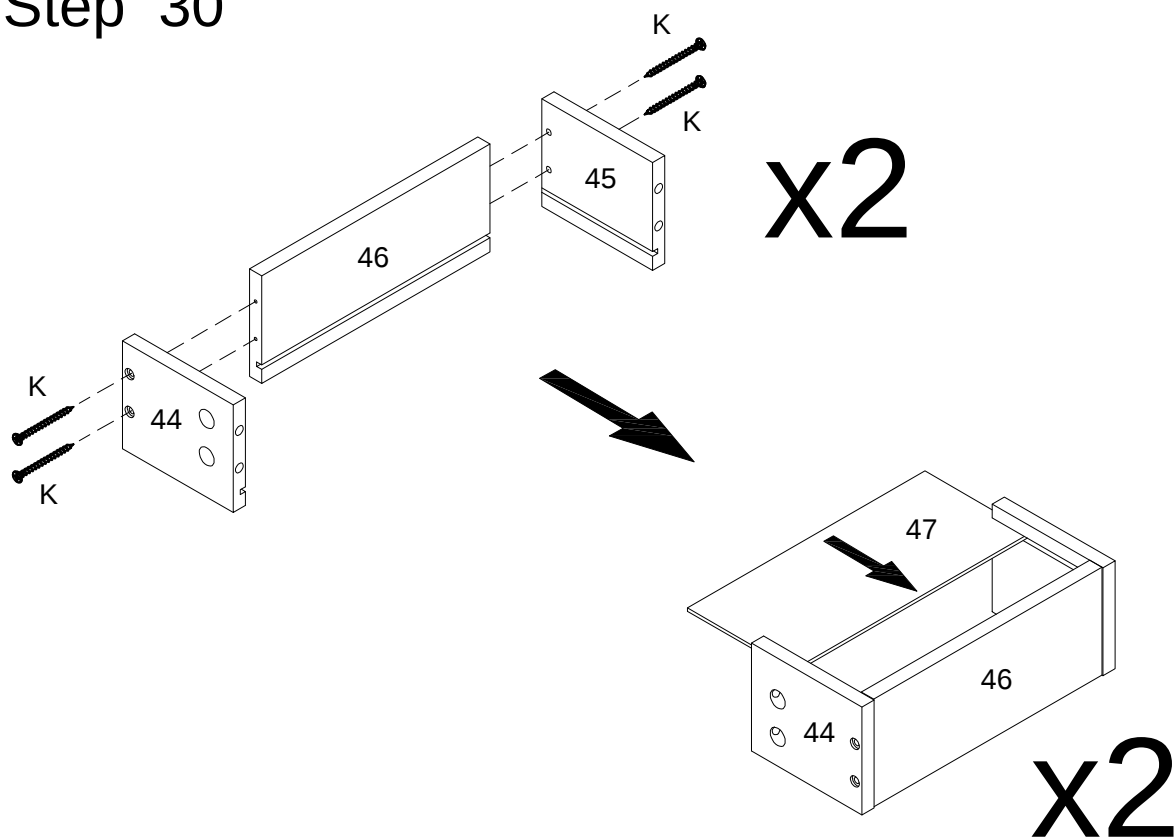


Step 31

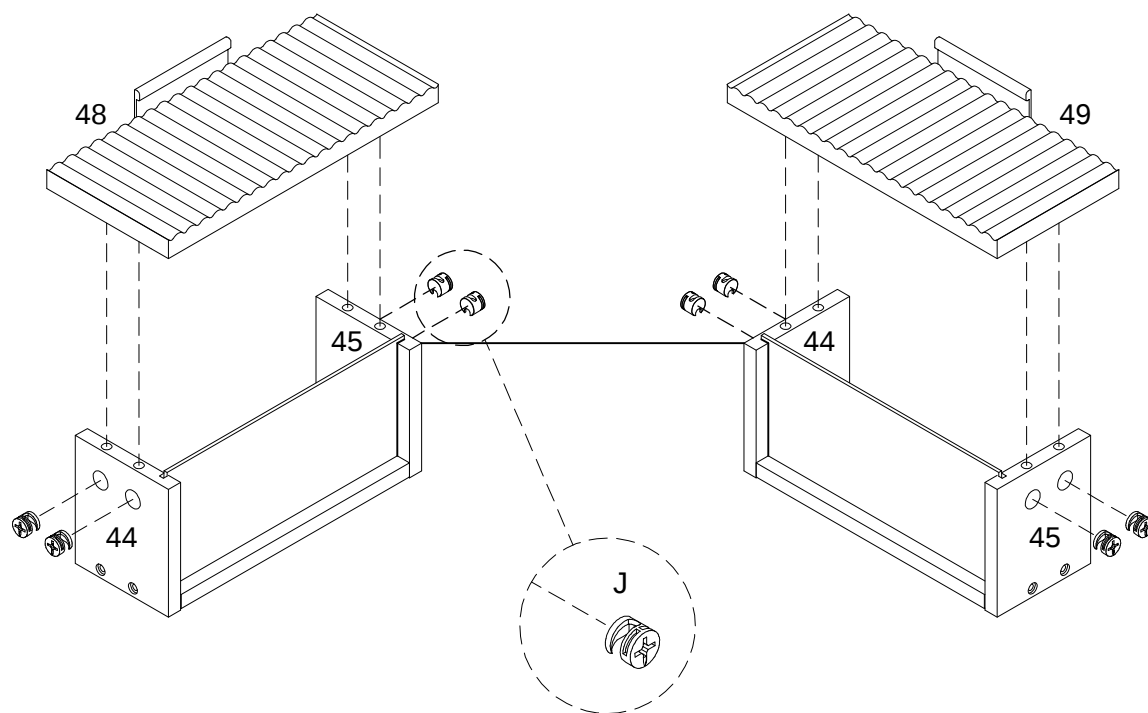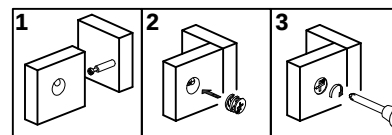


Step 32

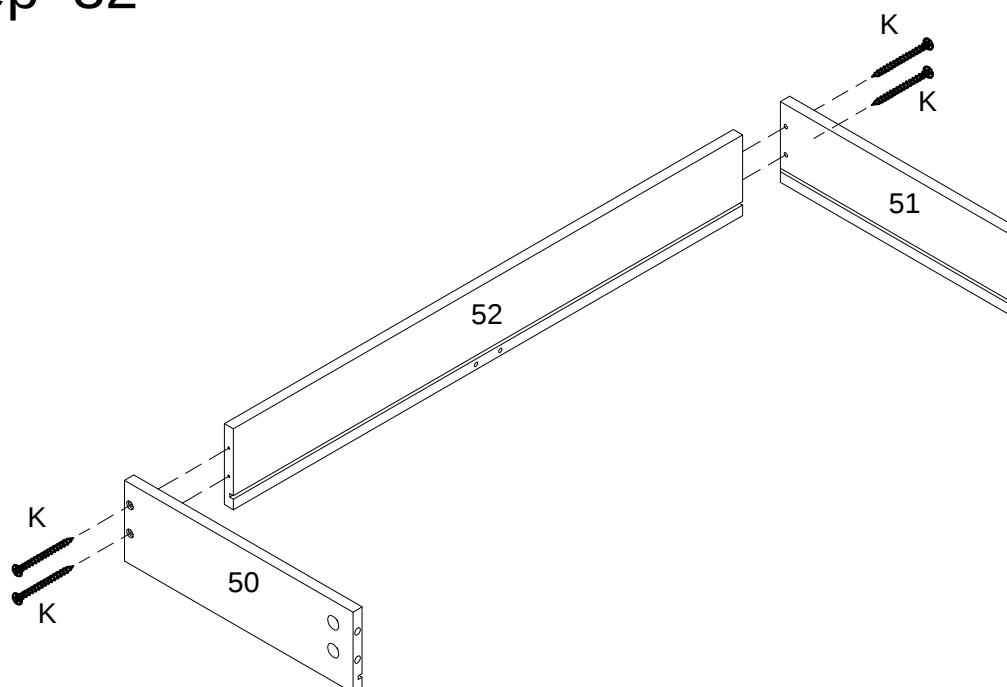


Step 33

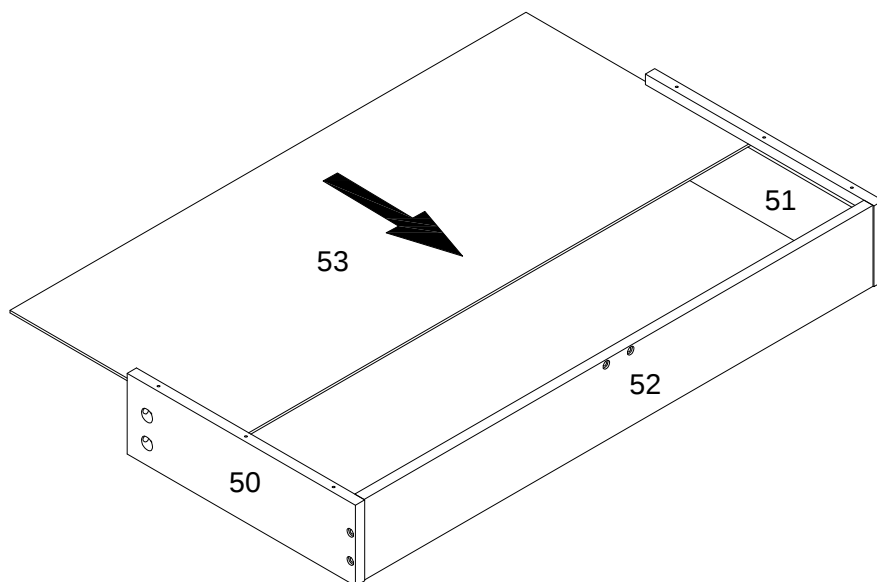


Step 34

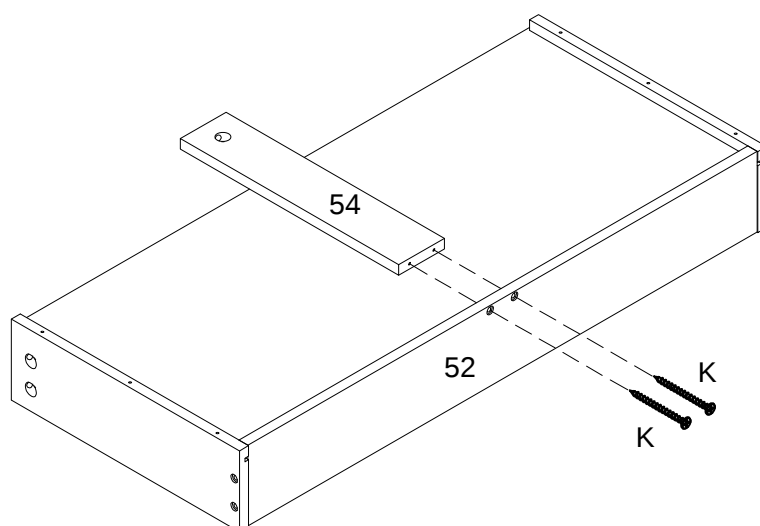



Step 35

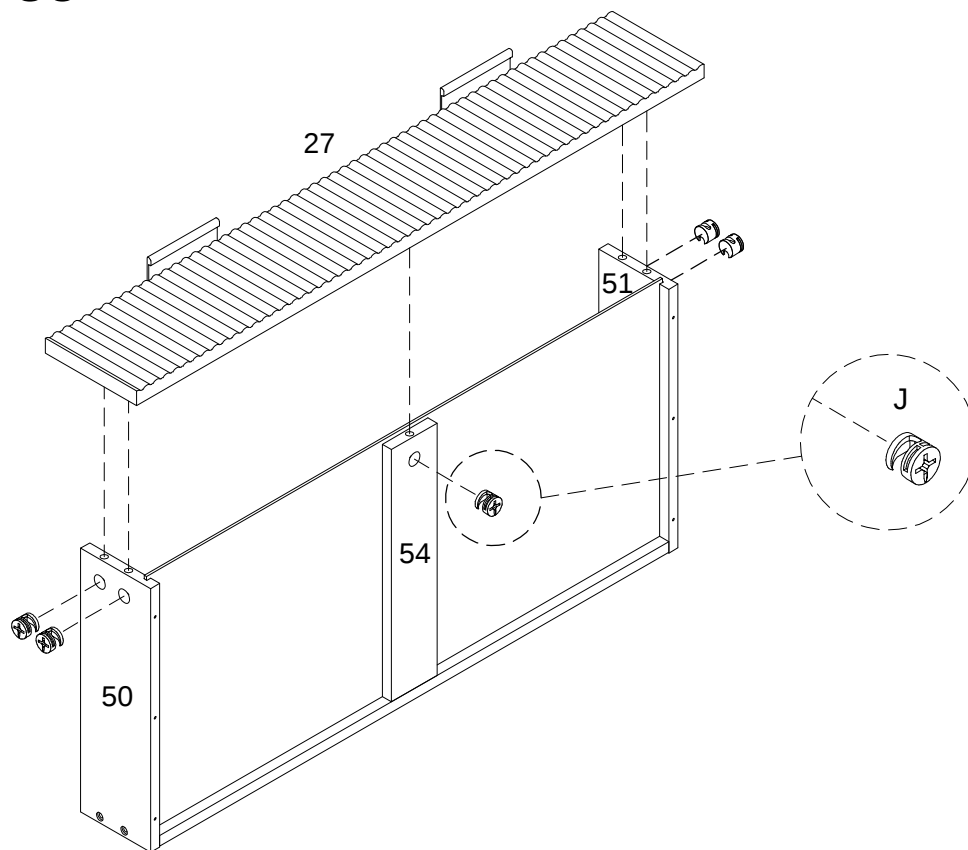



Step 36

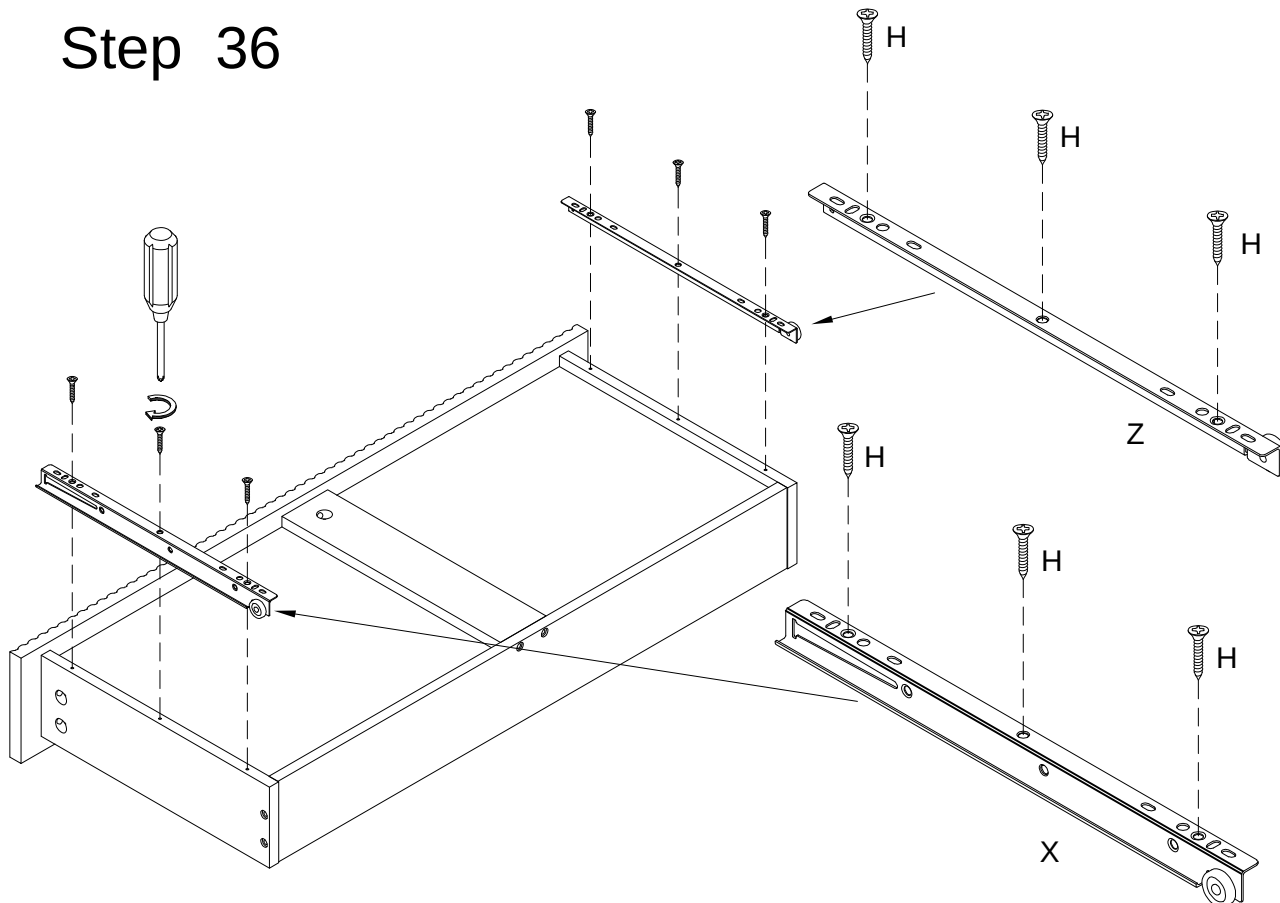


Step 37

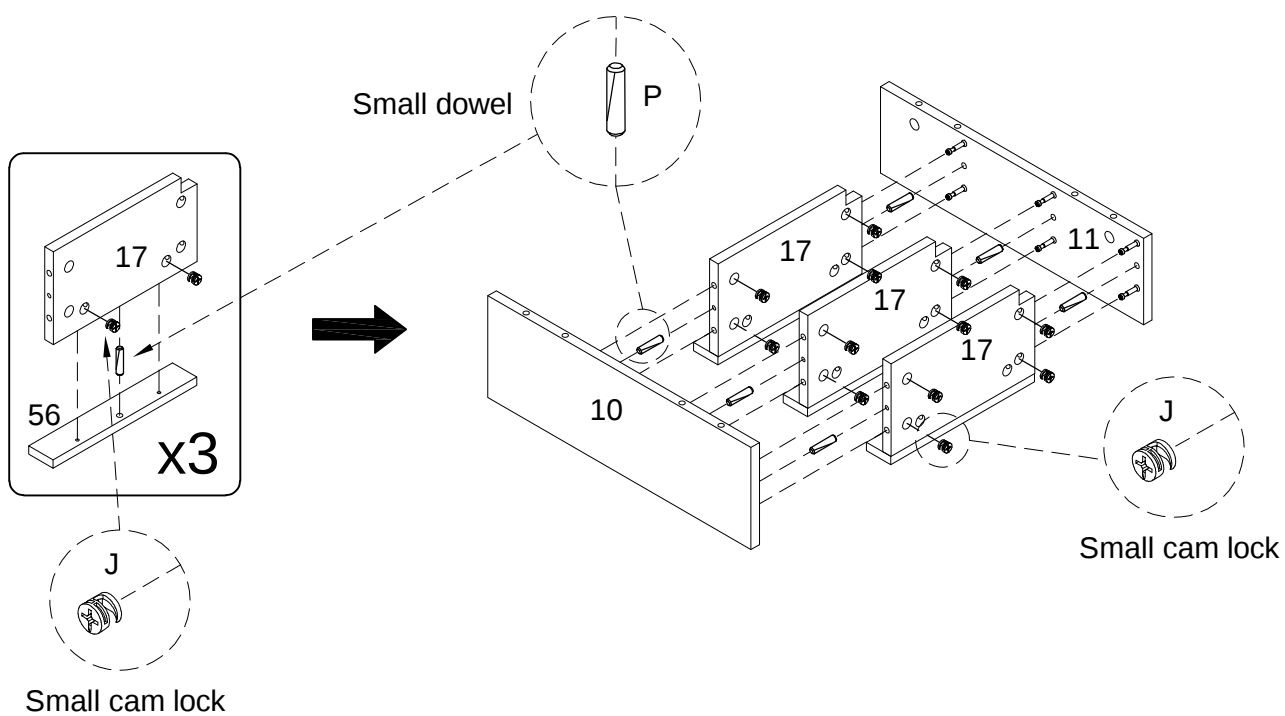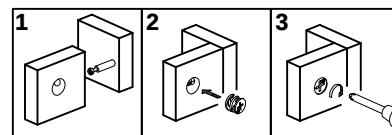


Step 38

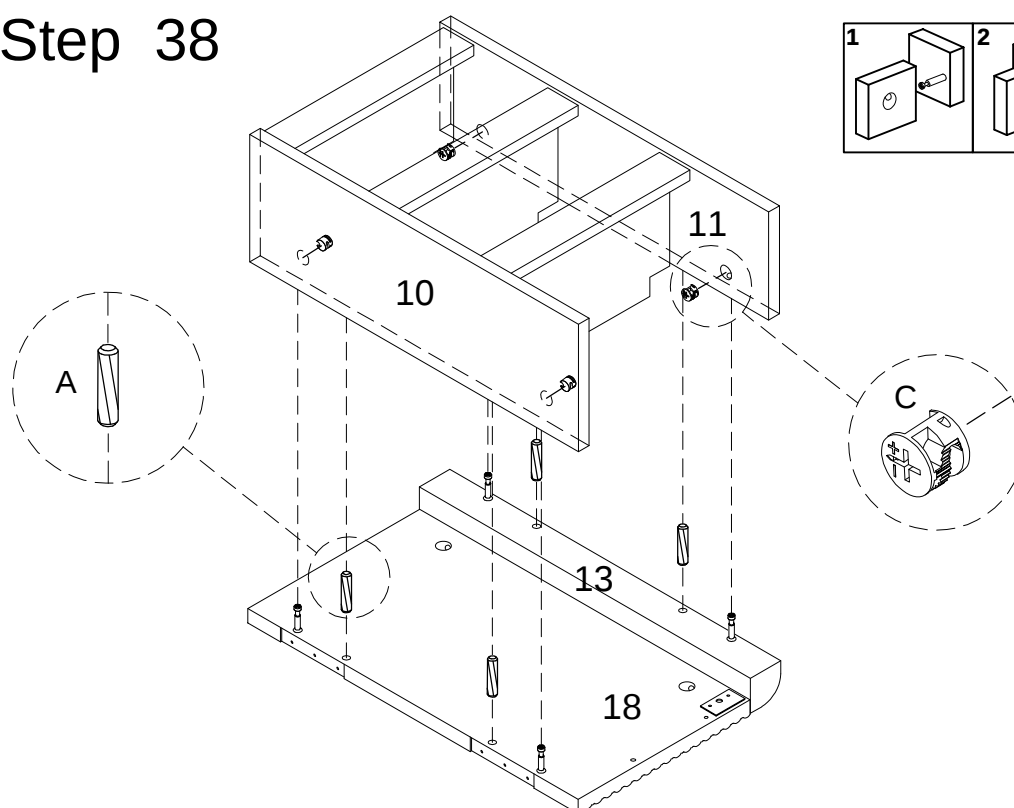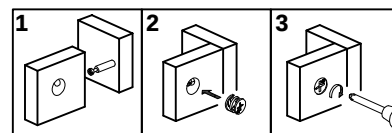


Step 39

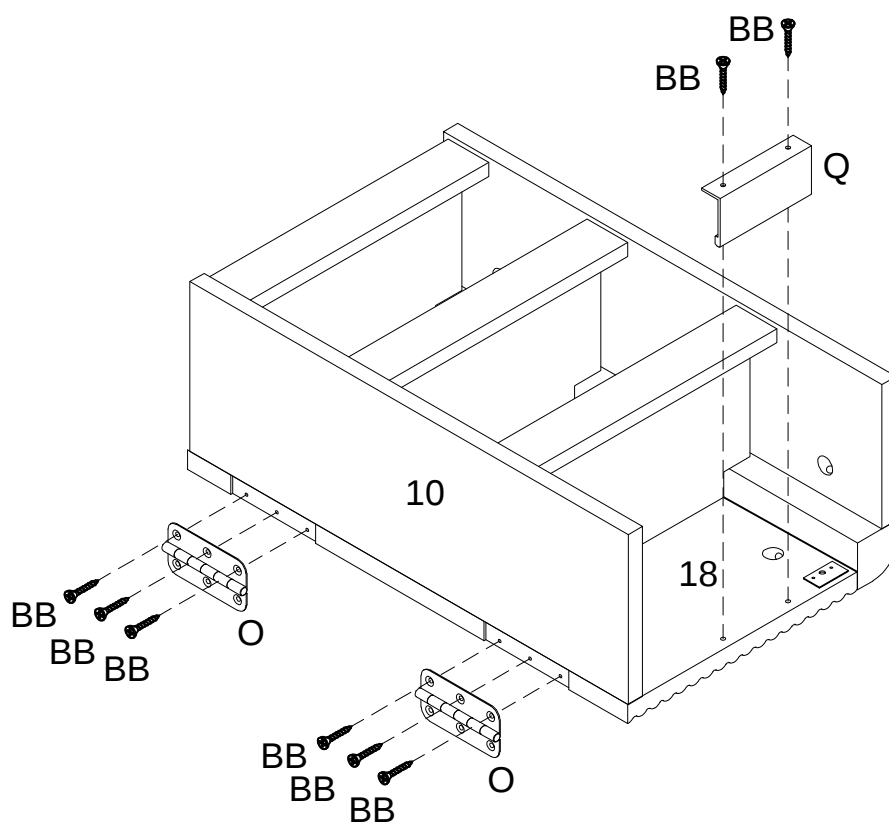


Step 40

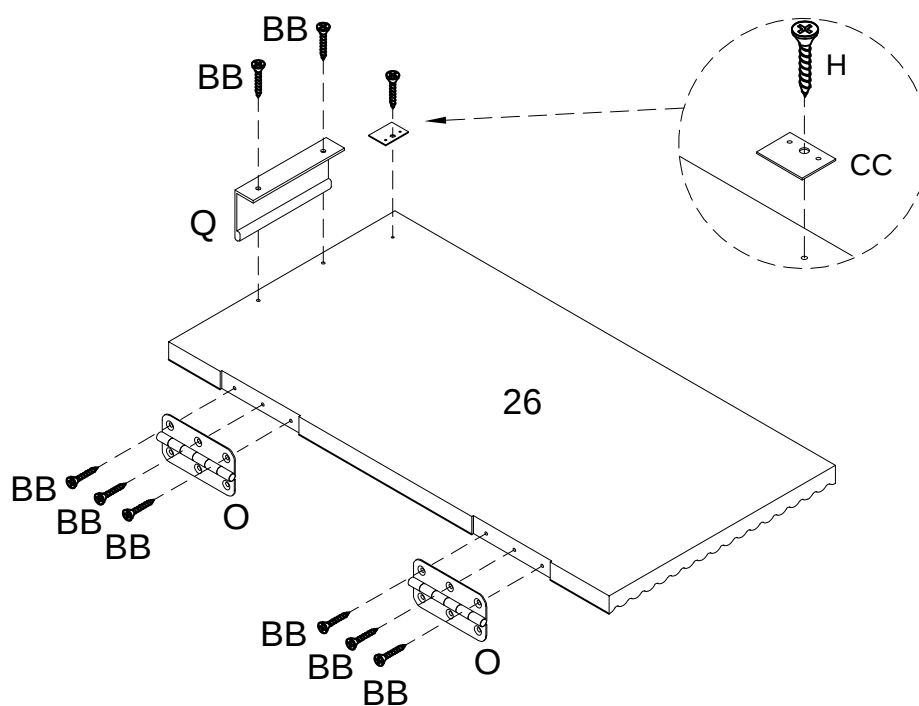


Step 41

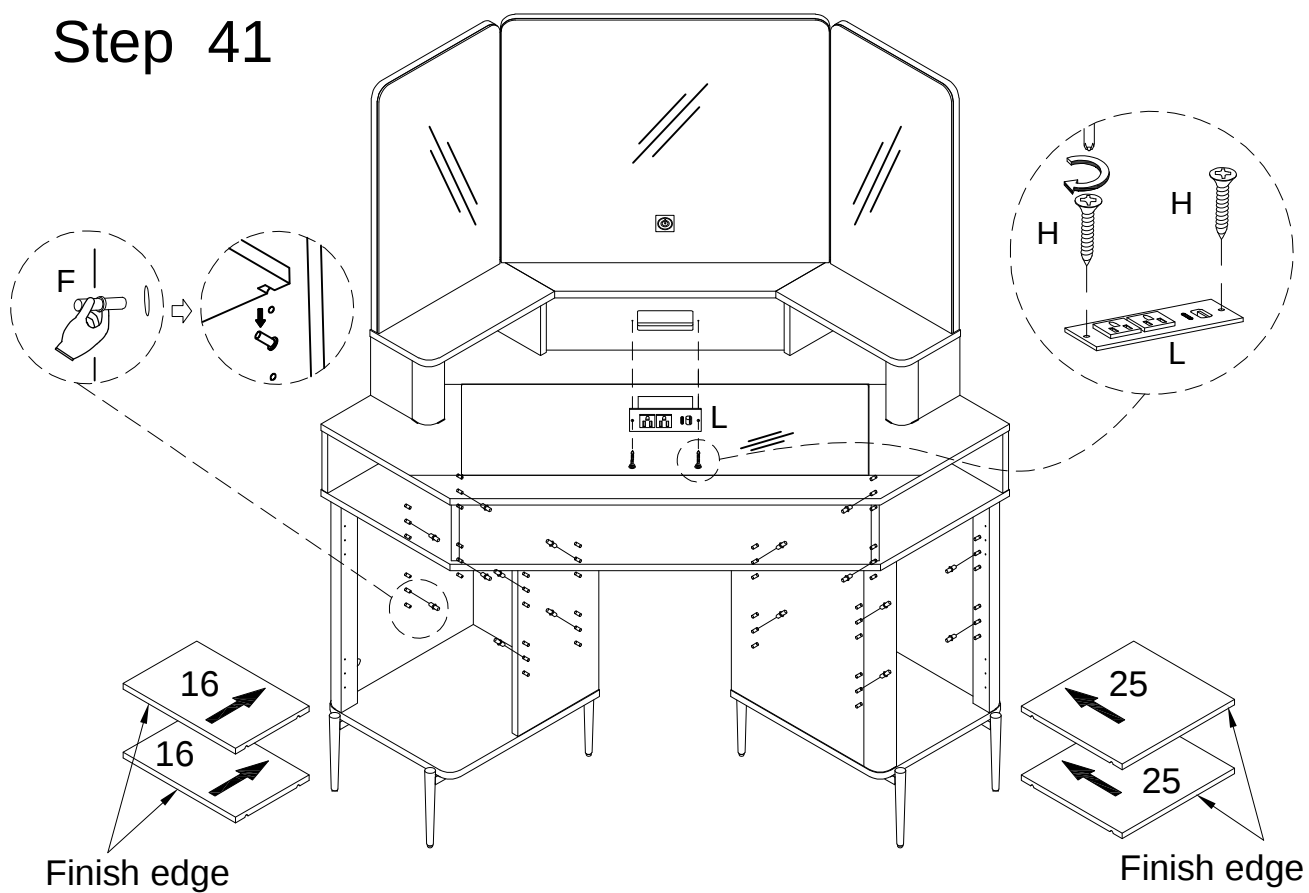


Step 42

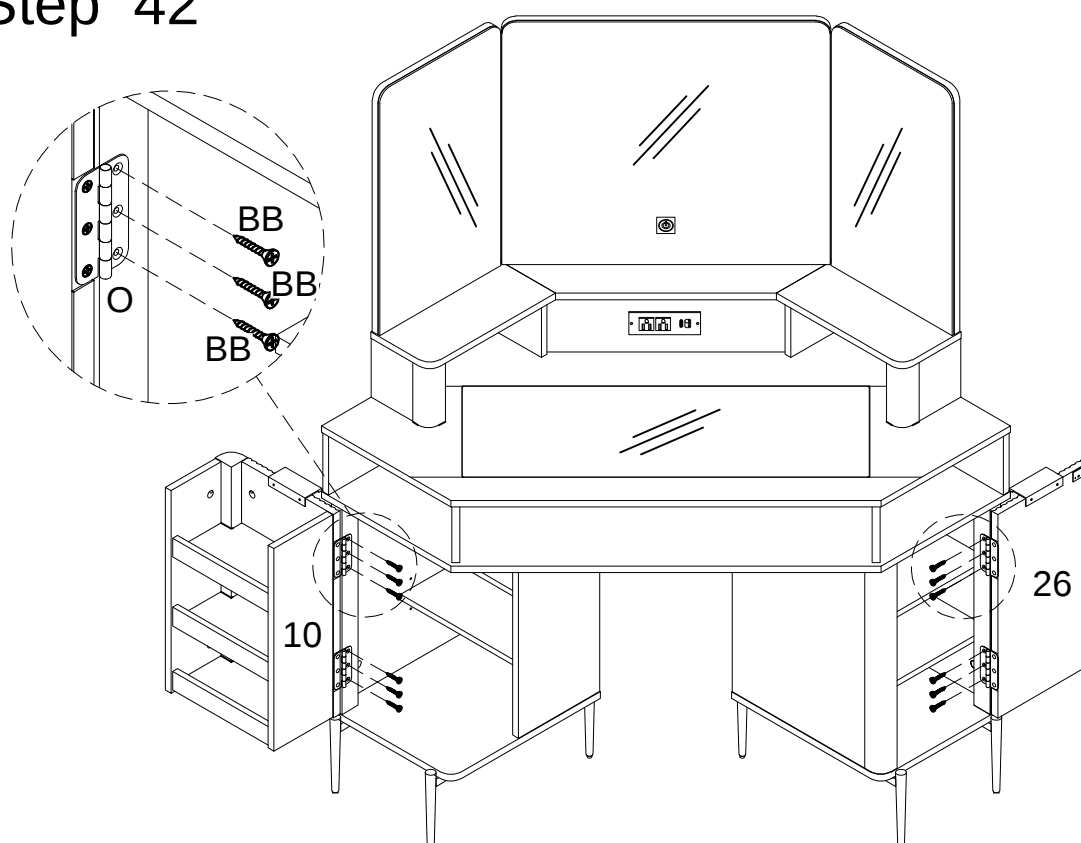

Step 43

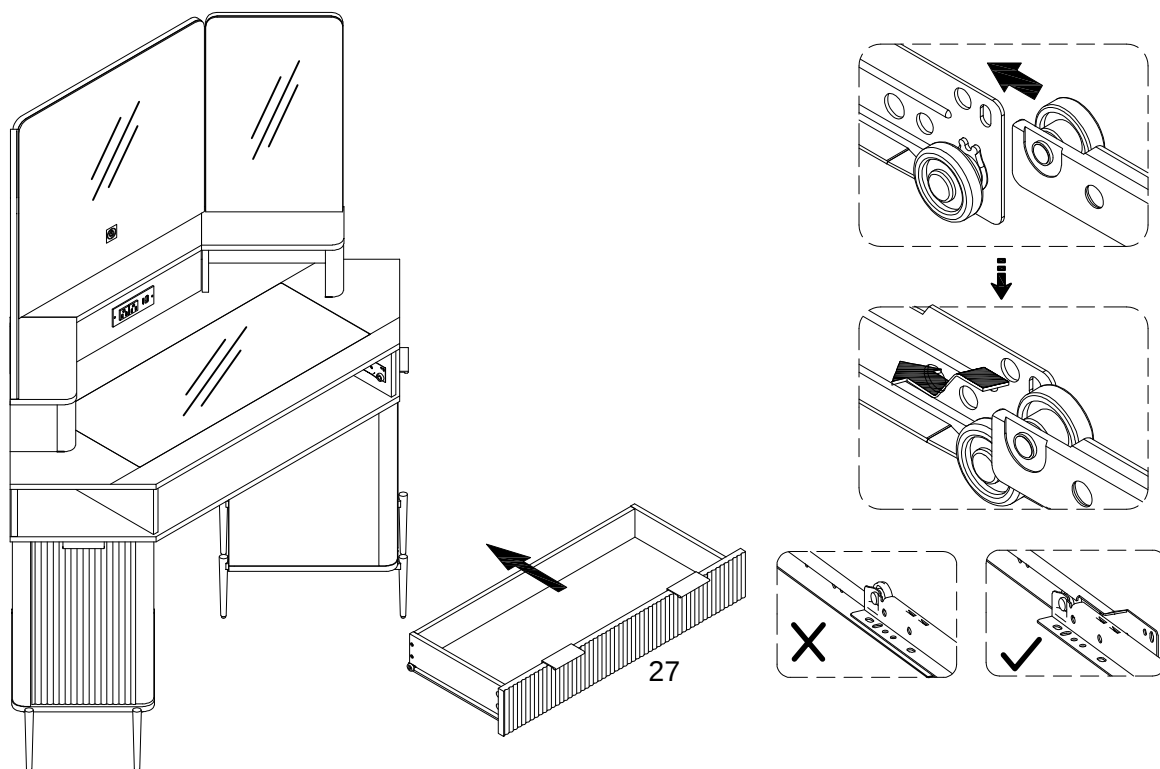


Step 44

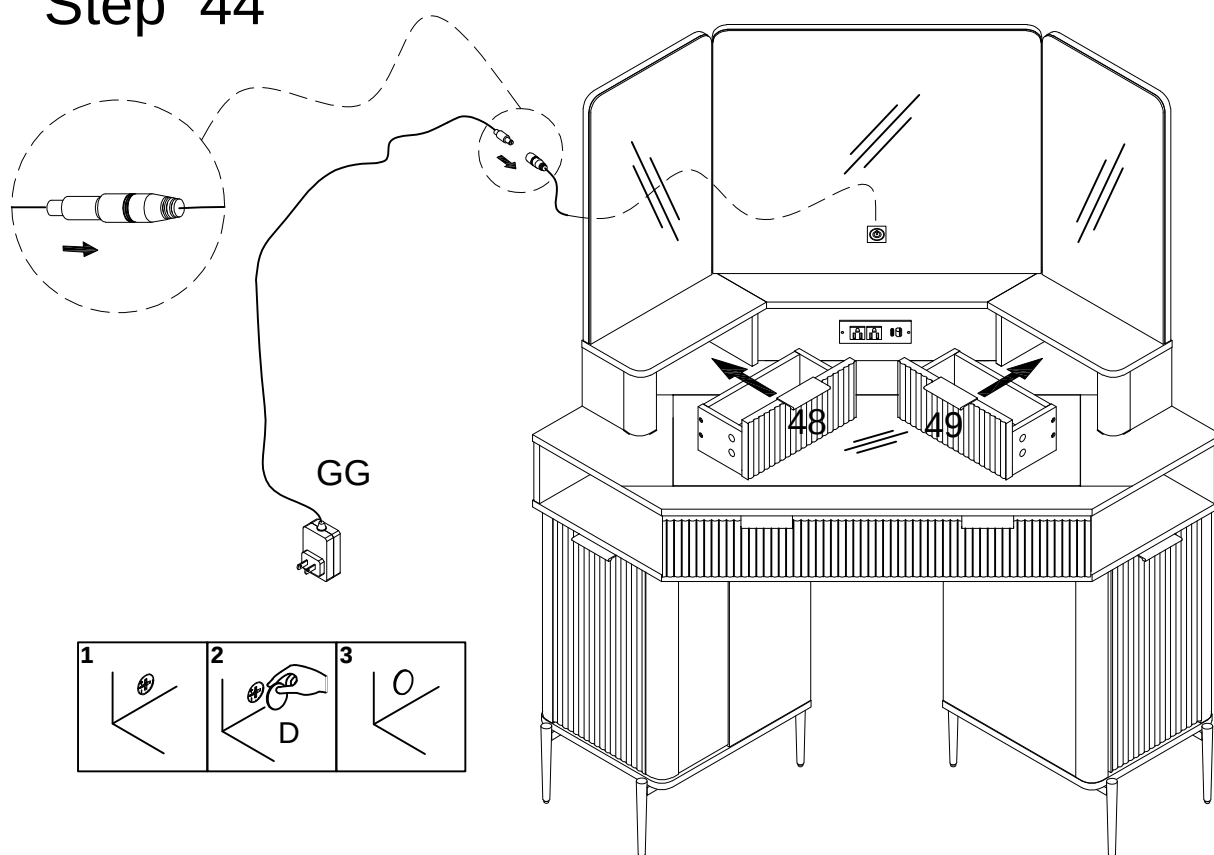

Step 45

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

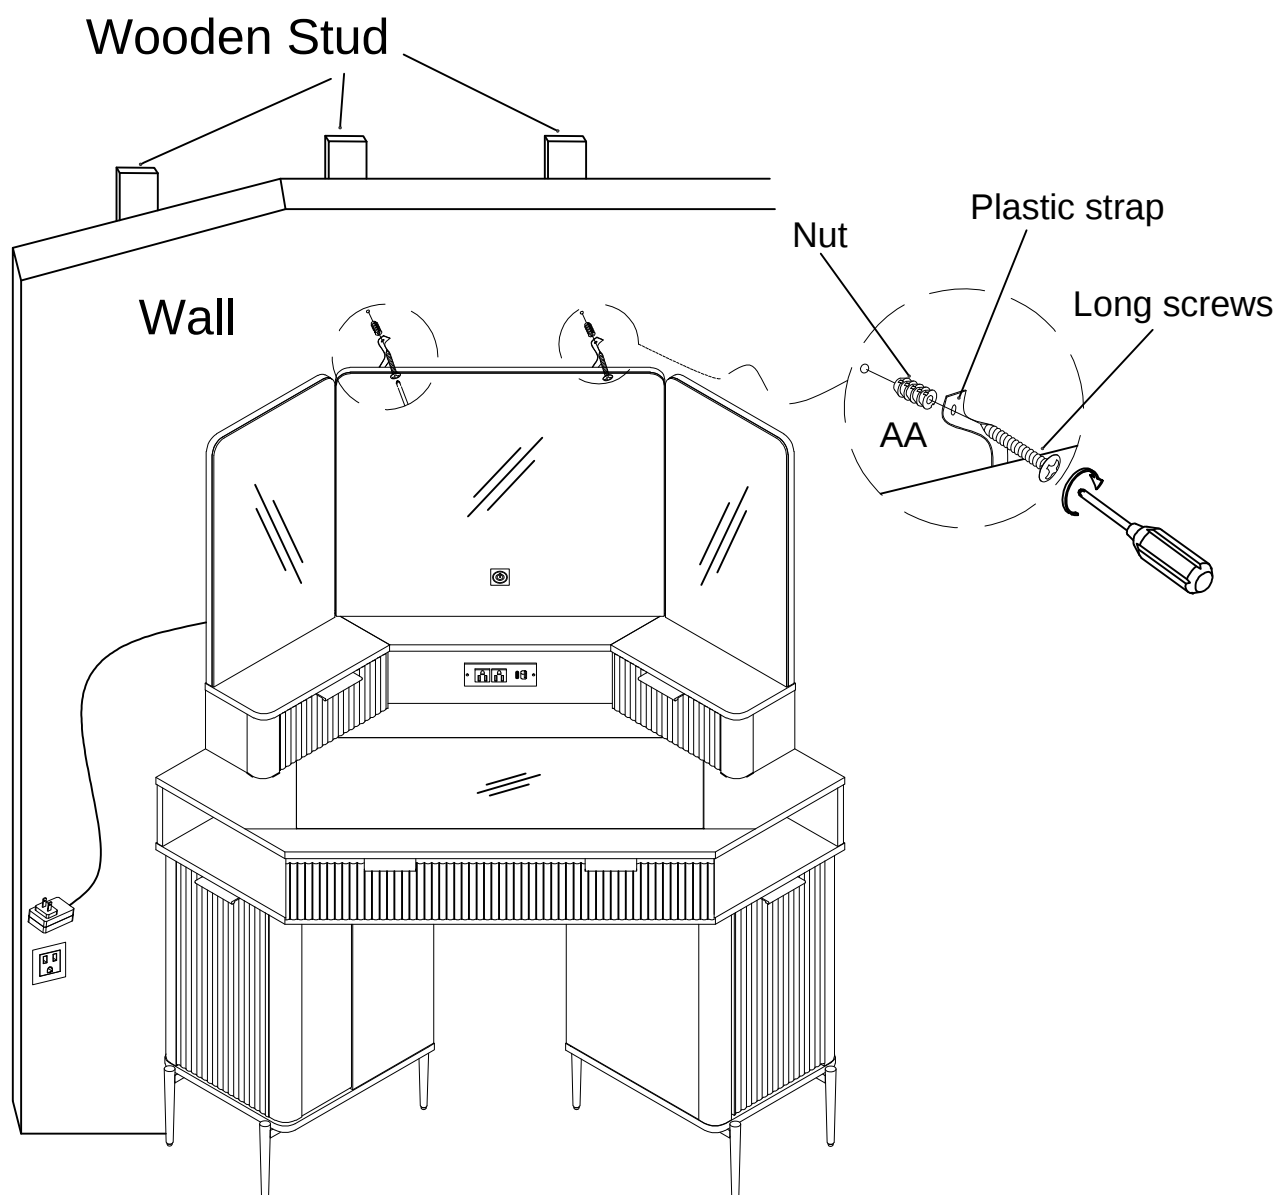

Final Assembly