



## PARTS

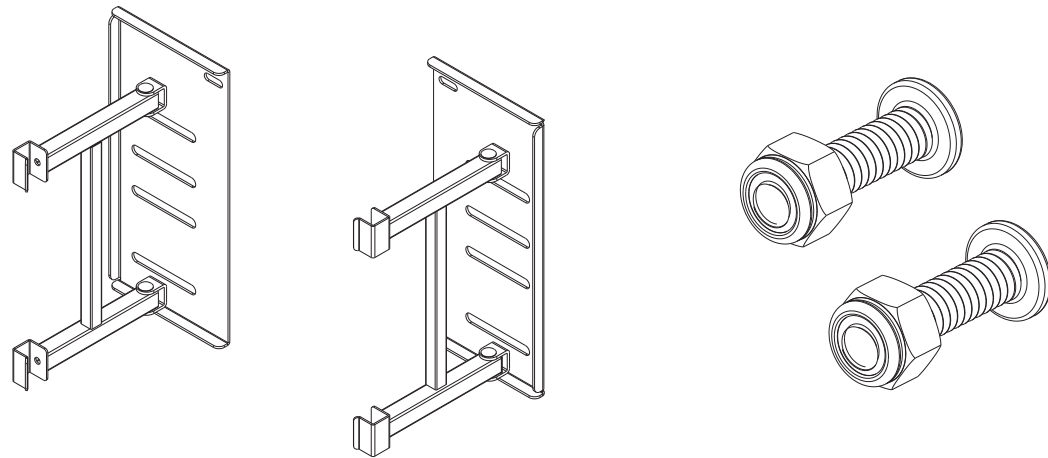

Brackets (2)

Bolt & Nut (2)


## STEP 1

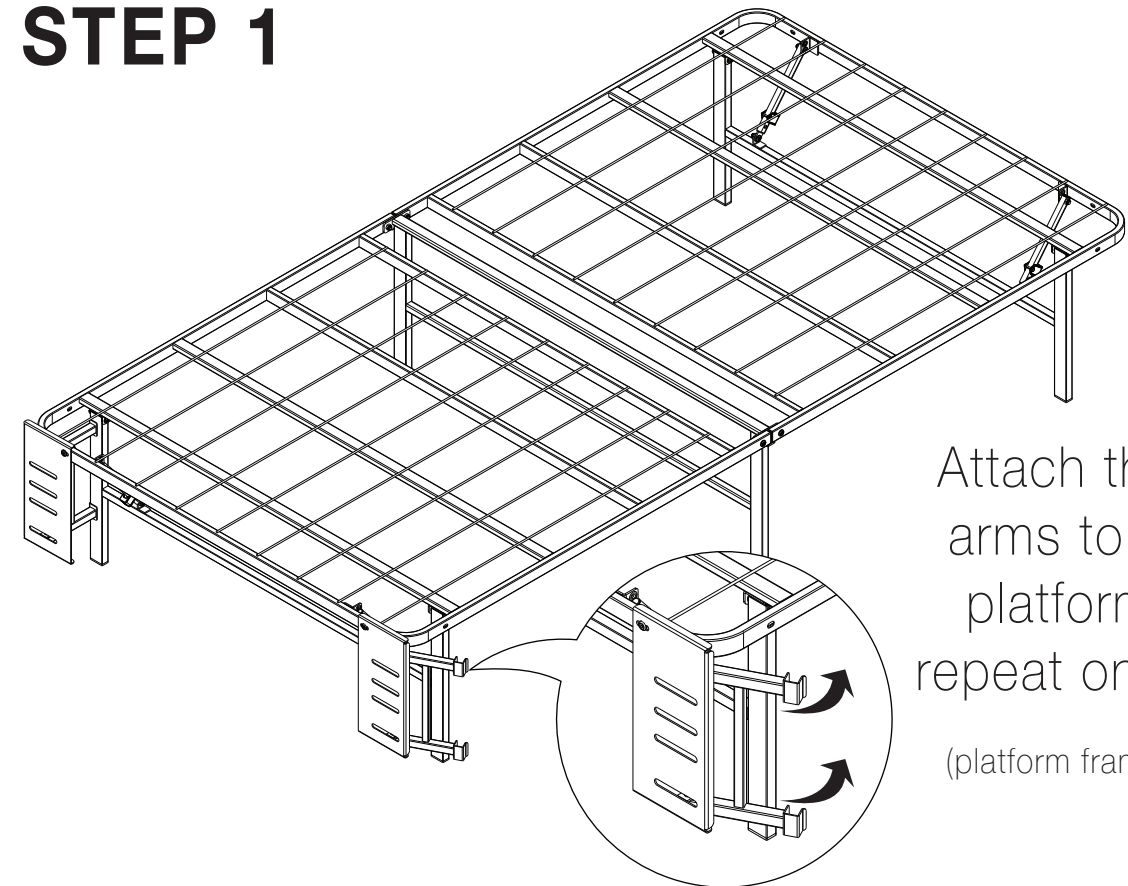

Attach the bracket arms to the metal platform frame - repeat on other side

(platform frame not included)


## STEP 2

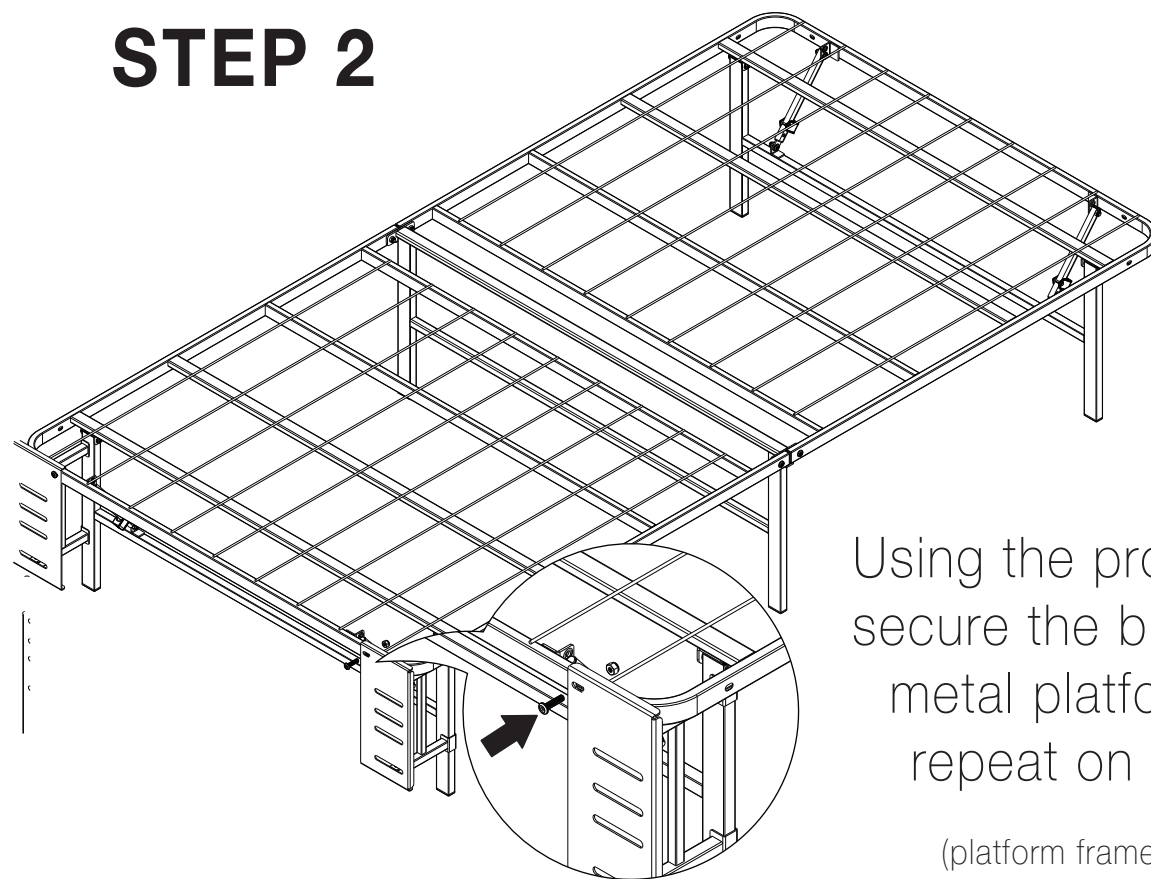

Using the provided bolts, secure the bracket to the metal platform frame - repeat on other side

(platform frame not included)

## STEP 3

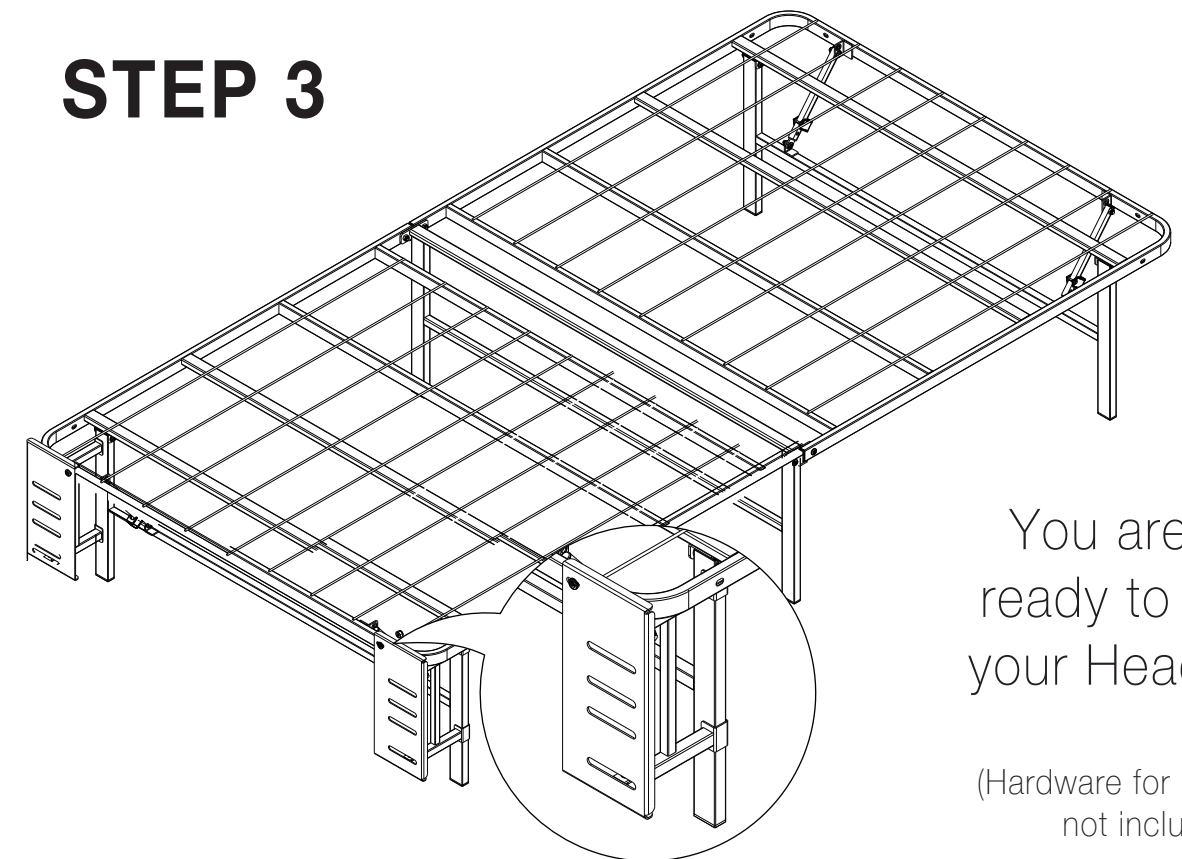

You are now ready to attach your Headboard

(Hardware for headboard not included)