
Assembly Instructions

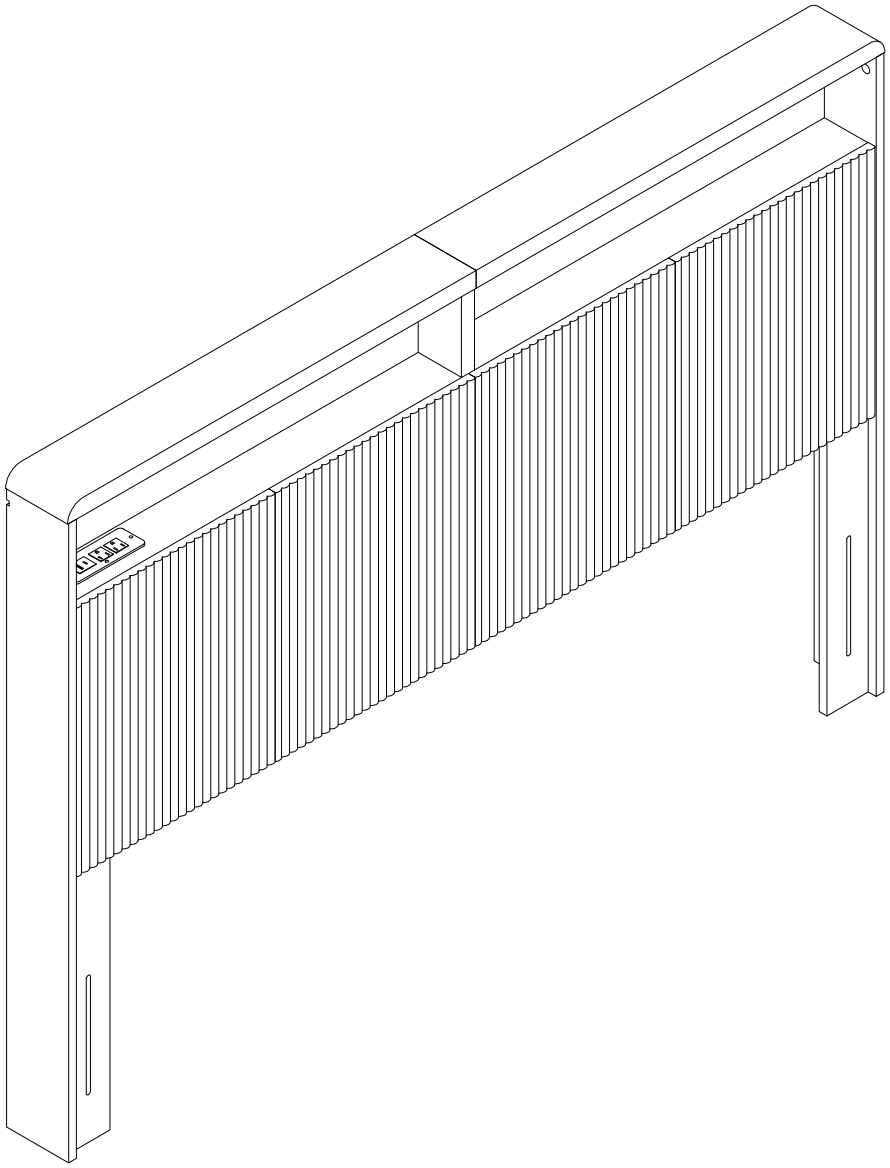


⚠	“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”

Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

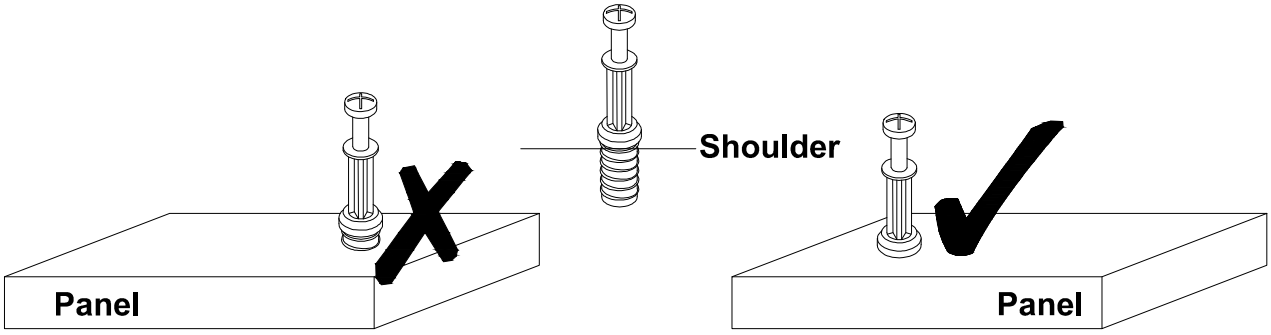

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

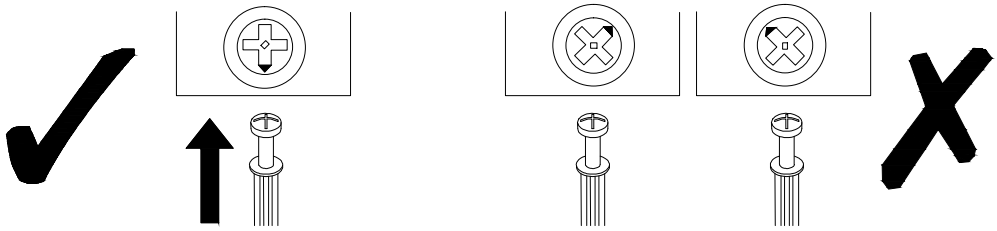

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

Quickfit head should be in the centre of the cam lock when the two panels are joined.


Cam lock should be inserted before quickfit.

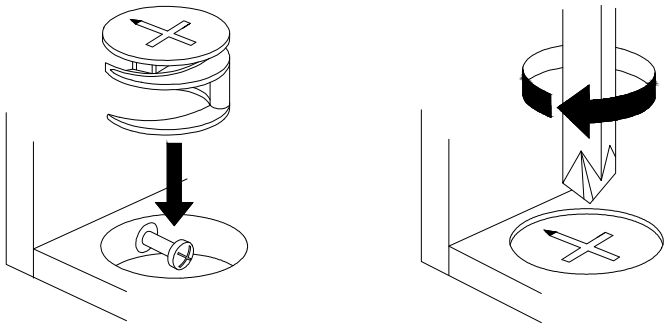


Turn cam lock clockwise to tighten.

Part List

Please prepare the following tools




Drill

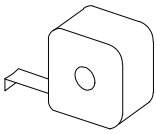












Measuring tape



penc i l




Level


No. A Quantity:58 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:78 Pcs Cam φ15 	No. C Quantity:78 Pcs Sticker Ø20 	No. D Quantity:29 Pcs Dowel 8*30mm 
No. E Quantity:10 Pcs Double-ended rod 6*64mm 	No. F Quantity:4 Pcs Wall hook 53*30*6mm 	No. G Quantity:18 Pcs Screw M3.5*14mm 	No. H Quantity:4 Pcs Screw M3.5*25mm 
No. I Quantity:8 Pcs Expansion bolt M8*40mm 	No. J Quantity:8 Pcs Screw M4*30mm 	No. K Quantity:1 Pc Power strip 	No. L Quantity:2 Pcs Screwdriver 
No. M Quantity:6 Pcs Fastening clip M3.5*12mm 	No. N Quantity:2 Pcs Connecting piece 60*38*1.5mm 	No. O Quantity:8 Pcs Screw M6*60mm 	No. P Quantity:8 Pcs Hex nut M6 

Part List


Please prepare the following tools




Drill

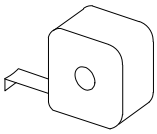






Measuring tape




penc i l



Level

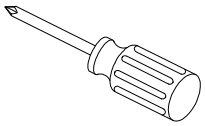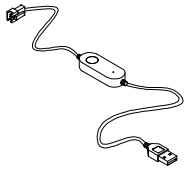
No. Q Quantity:1 Pc Screwdriver 	No. R Quantity:4 Pcs Screw M6*40mm 	No. S Quantity:1 Pc Allen Key 4# 	No. T Quantity:1 Pc LED light 1550mm 
No. U Quantity:1 Pc Switch data cable 	No. V Quantity:1 Pc Power plug 	No. W Quantity:16 Pcs Gasket M6 	

Product structure

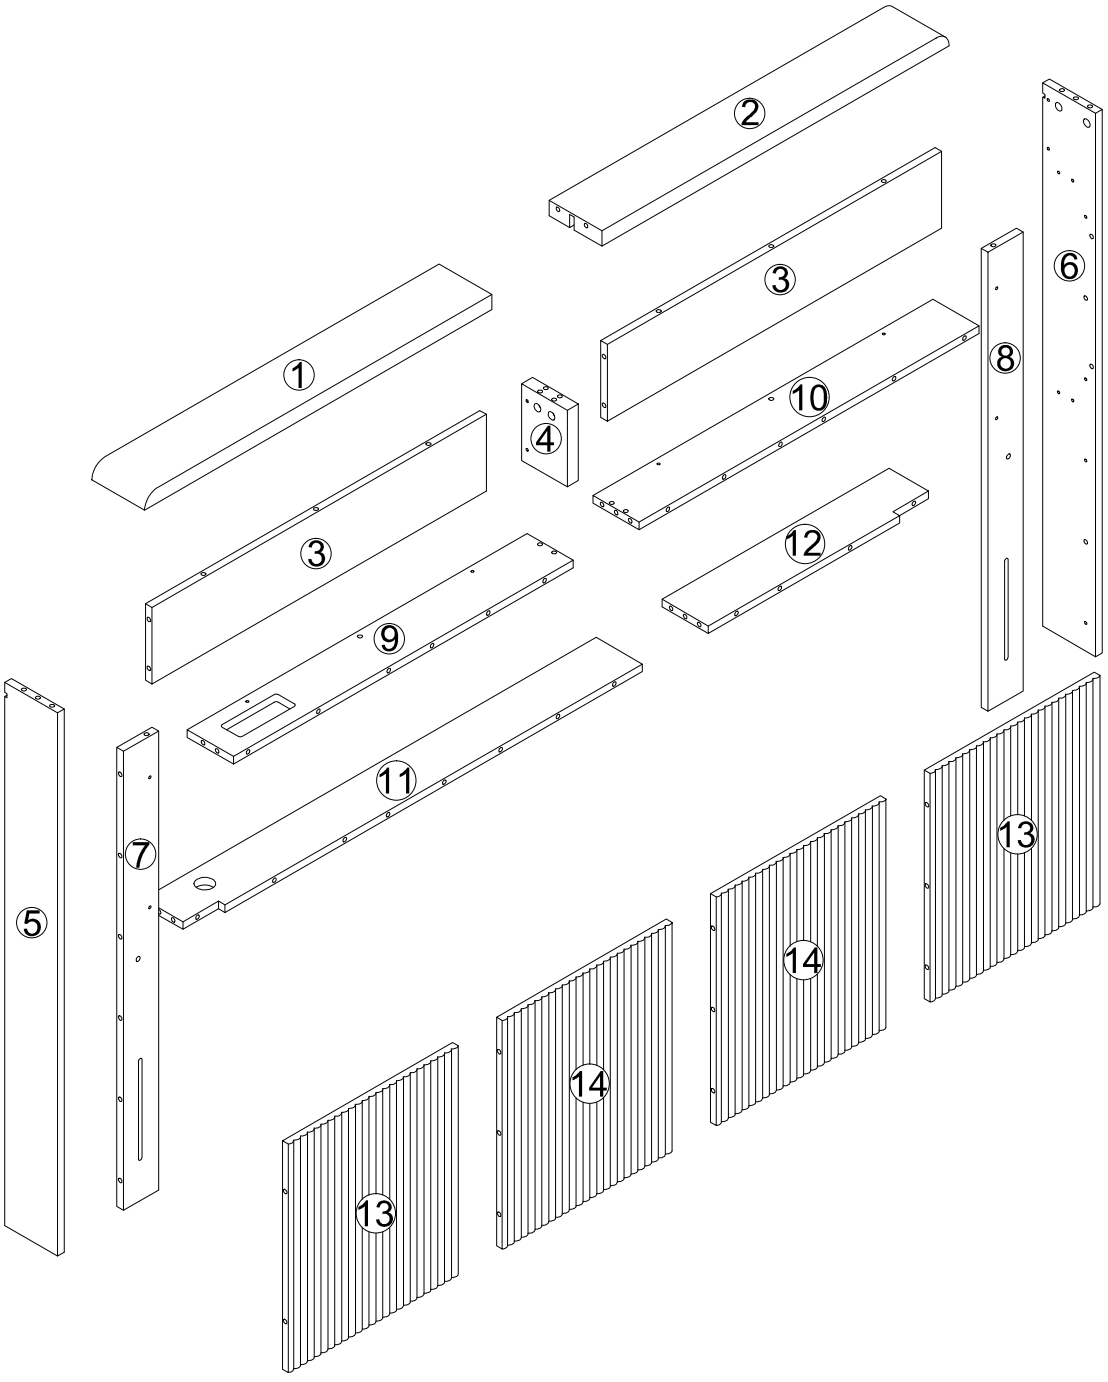


“Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels.”


STEP 1

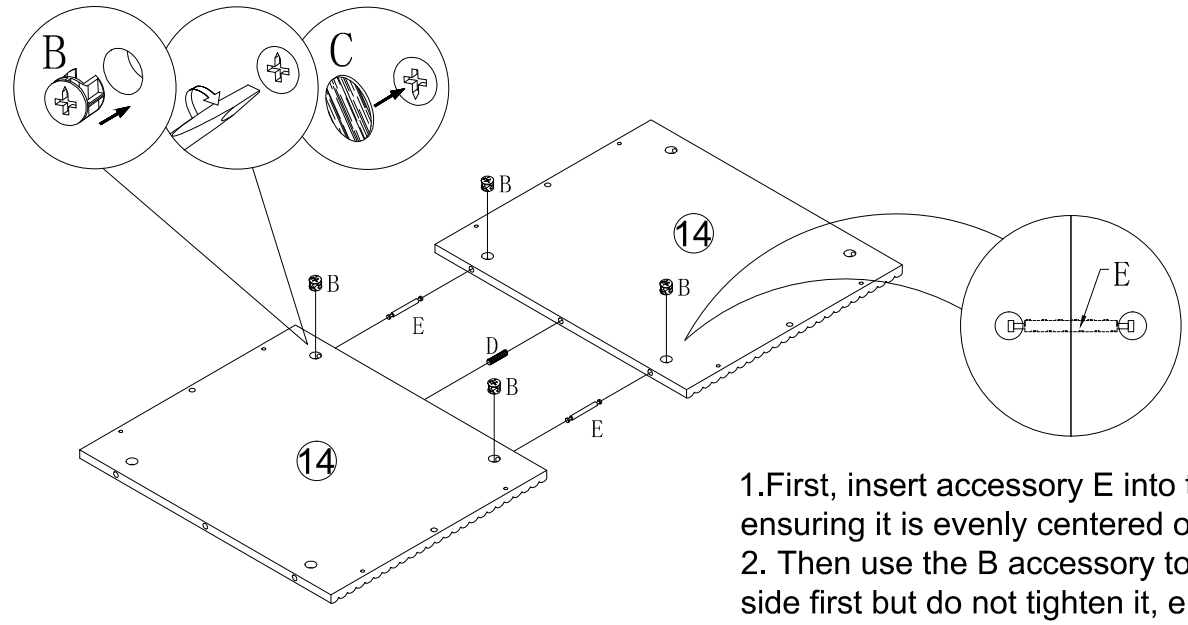


1.First, insert accessory E into the hole, ensuring it is evenly centered on both sides.
2. Then use the B accessory to lock one side first but do not tighten it, ensuring that the B accessories on both sides lock the E accessory simultaneously.

No. B	No. C	No. D	No. E
Quantity: 4 Pcs	Quantity: 4 Pcs	Quantity: 1 Pcs	Quantity: 2 Pcs
Ø15	Ø20	8*30mm	6*64mm
			


STEP 2

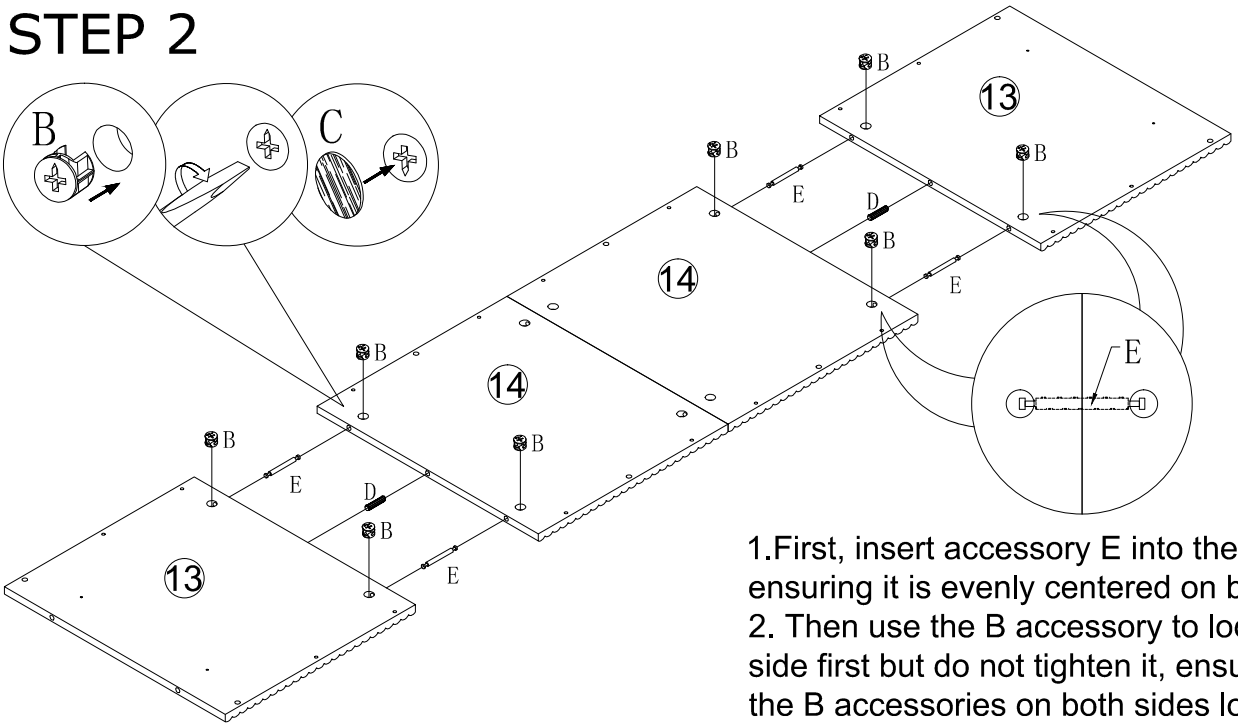


1.First, insert accessory E into the hole, ensuring it is evenly centered on both sides.
2. Then use the B accessory to lock one side first but do not tighten it, ensuring that the B accessories on both sides lock the E accessory simultaneously.

No. B	No. C	No. D	No. E
Quantity: 8 Pcs	Quantity: 8 Pcs	Quantity: 2 Pcs	Quantity: 4 Pcs
Ø15	Ø20	8*30mm	6*64mm
			


STEP 3

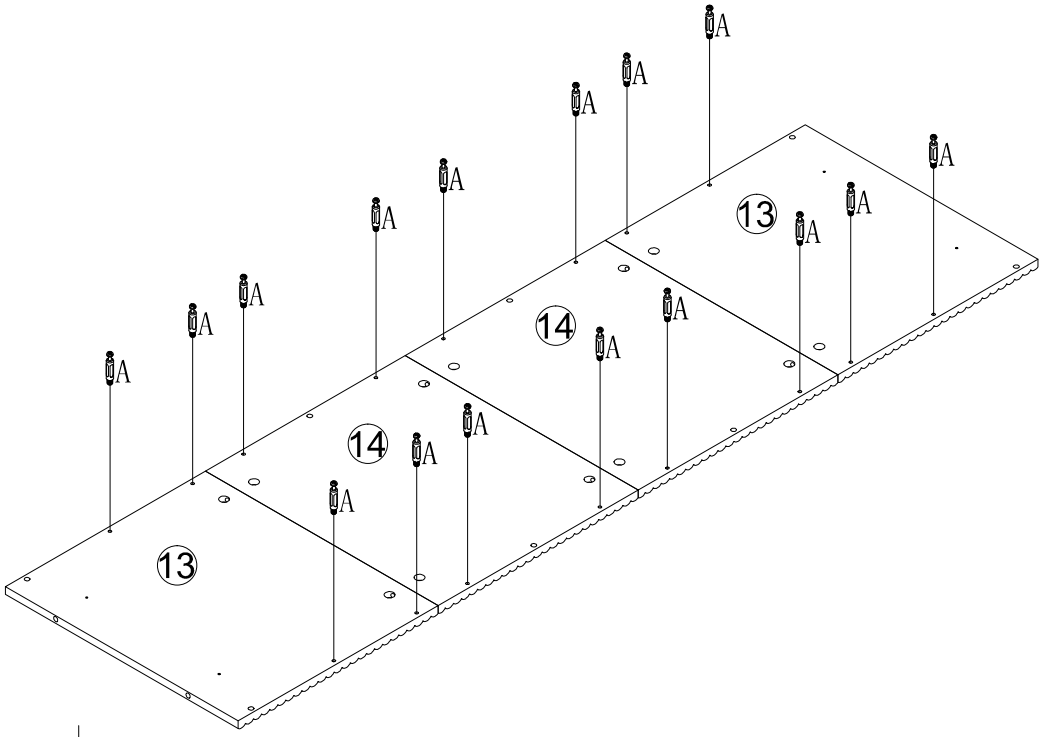

No. A
Quantity: 16 Pcs
8*28 mm



STEP 4

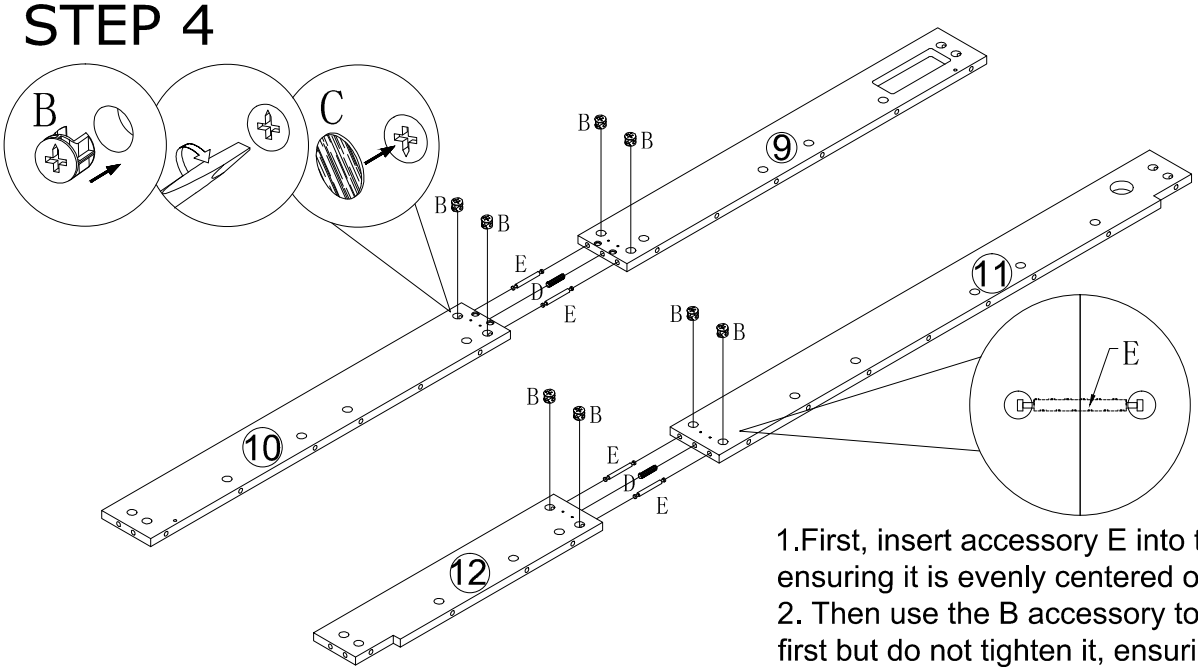

1.First, insert accessory E into the hole, ensuring it is evenly centered on both sides.
2. Then use the B accessory to lock one side first but do not tighten it, ensuring that the B accessories on both sides lock the E accessory simultaneously.

No. B
Quantity: 8 Pcs
Ø15




No. C
Quantity: 8 Pcs
Ø20




No. D
Quantity: 2 Pcs
8*30mm




No. E
Quantity: 4 Pcs
6*64mm




STEP 5

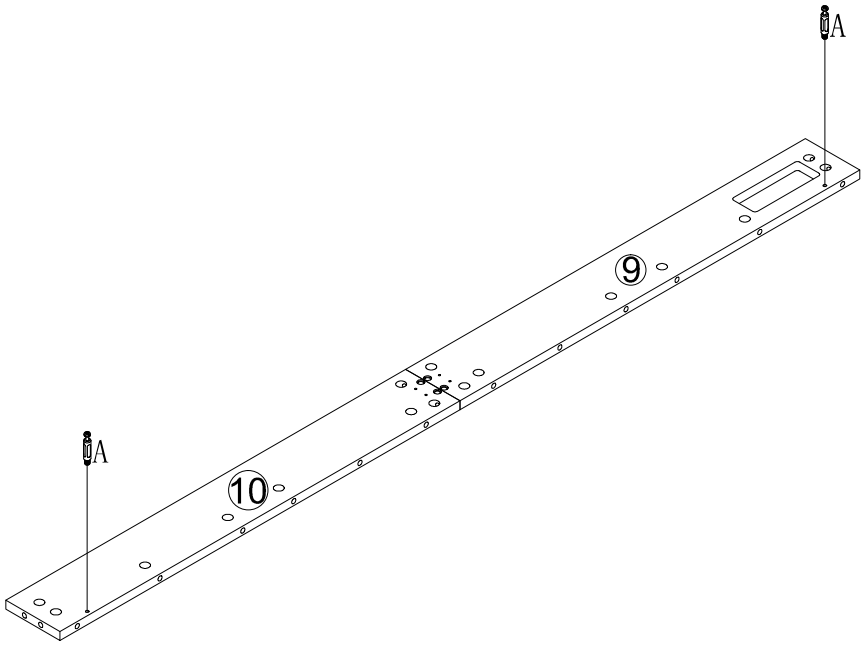

No. A
Quantity: 2 Pcs
8*28 mm



STEP 6

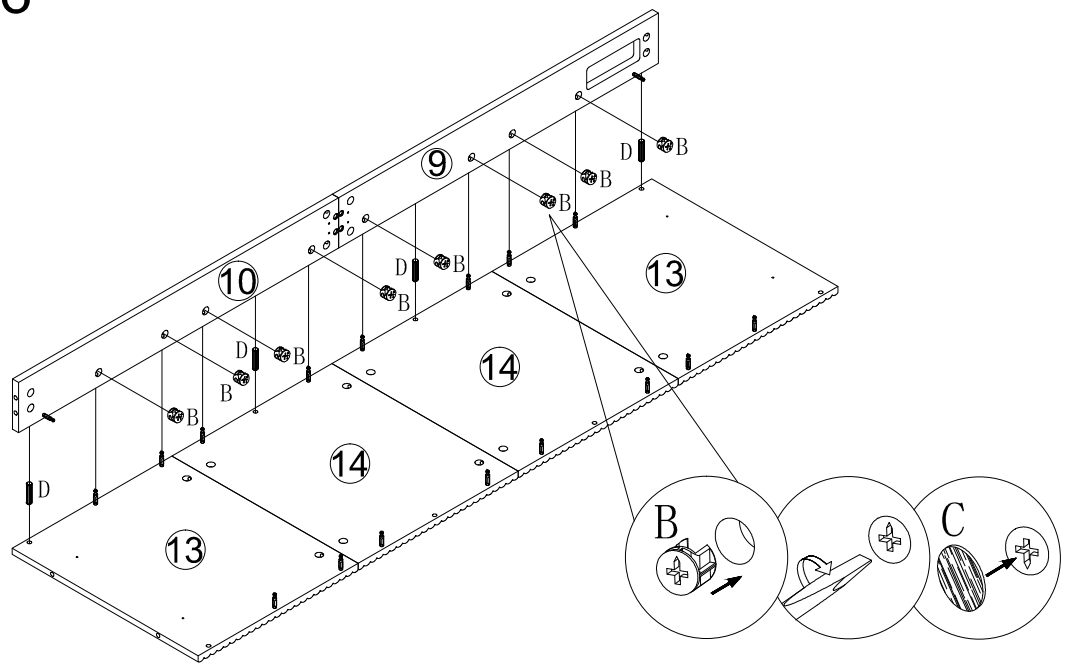

No. B
Quantity: 8 Pcs
Ø15




No. C
Quantity: 8 Pcs
Ø20



No. D
Quantity: 4 Pcs
8*30mm



STEP 7

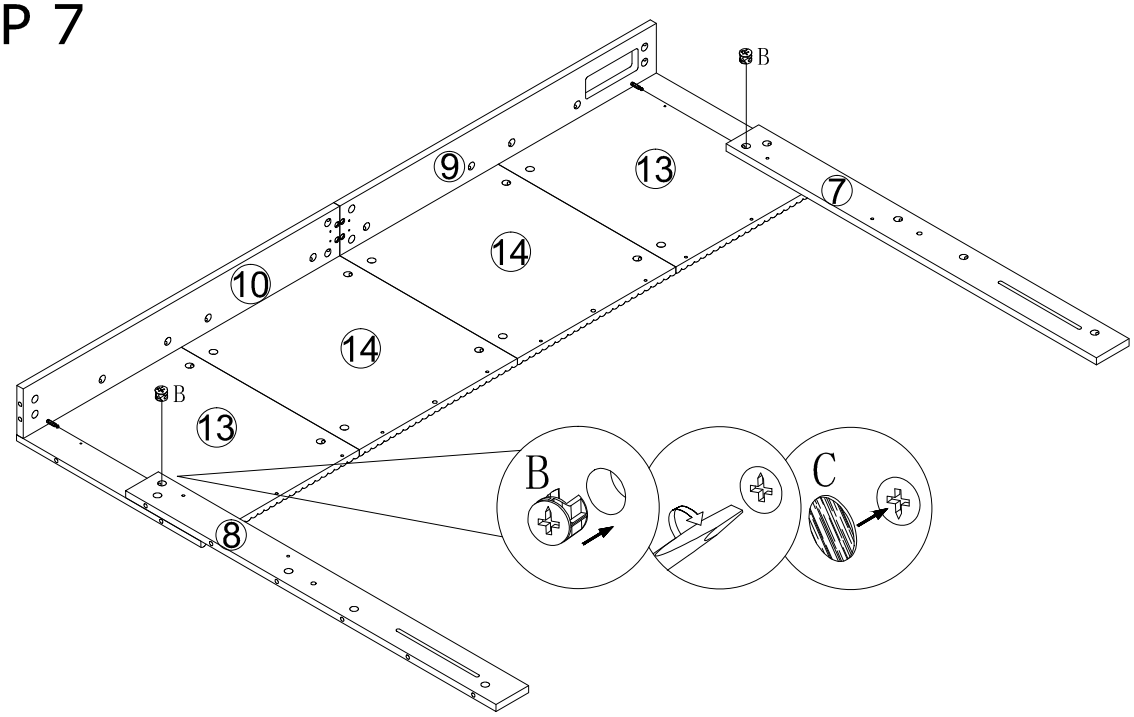


No. B
Quantity: 2 Pcs
Ø15



No. C
Quantity: 2 Pcs
Ø20



STEP 8

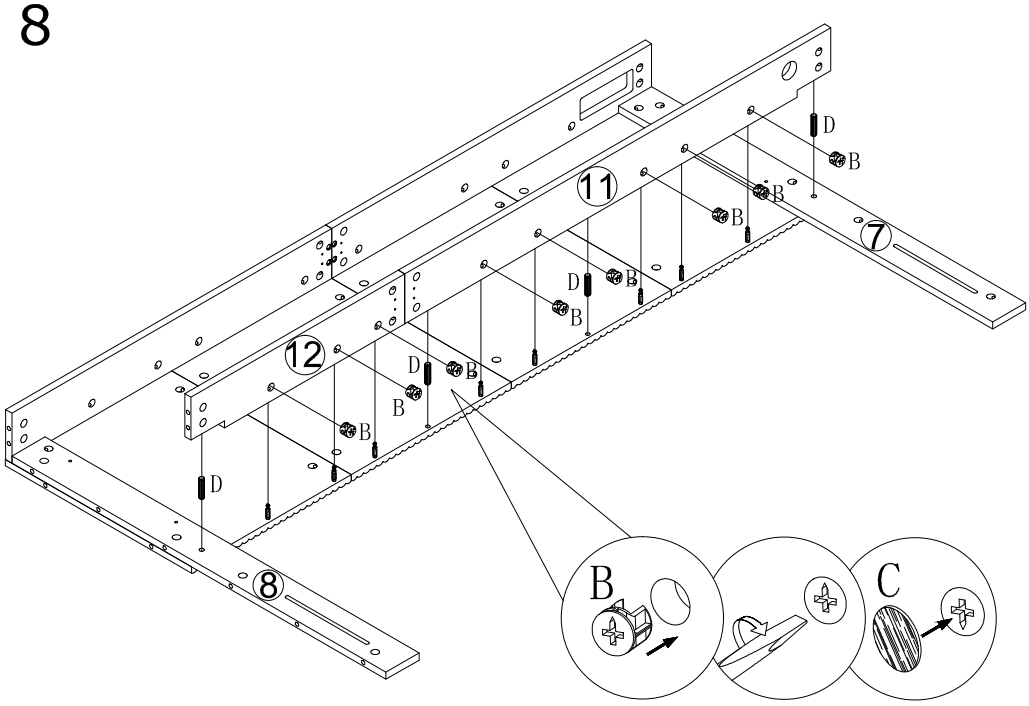

No. B
Quantity: 8 Pcs
Ø15




No. C
Quantity: 8 Pcs
Ø20




No. D
Quantity: 4 Pcs
8*30mm




STEP 9

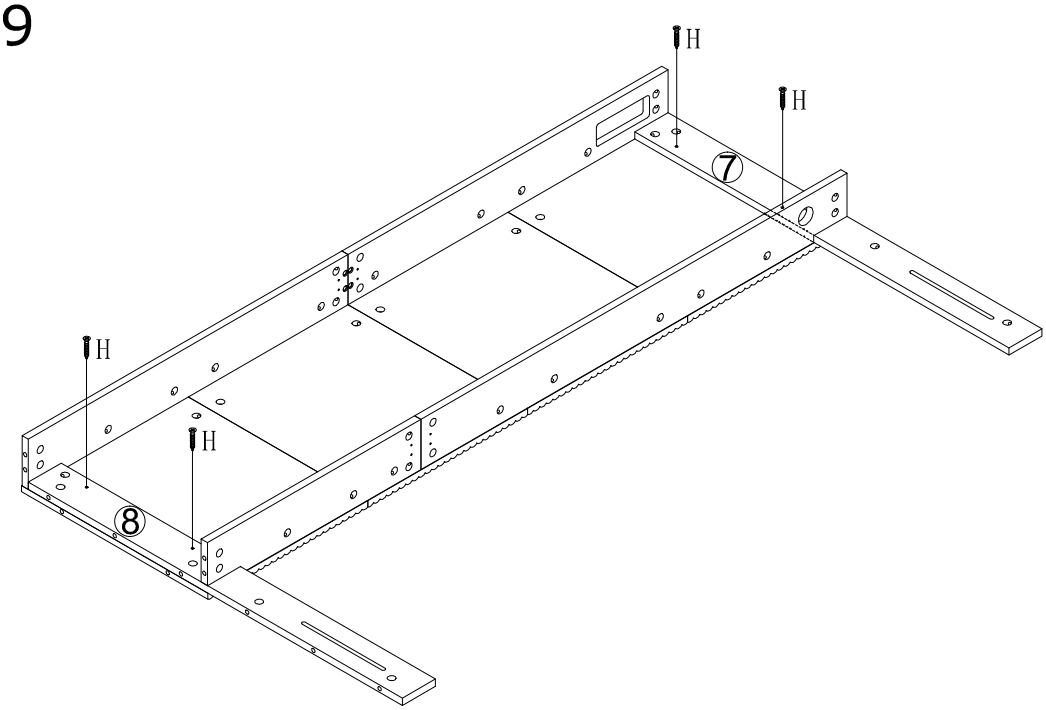


No. H
Quantity: 4 Pcs
M3.5*25mm




STEP 10

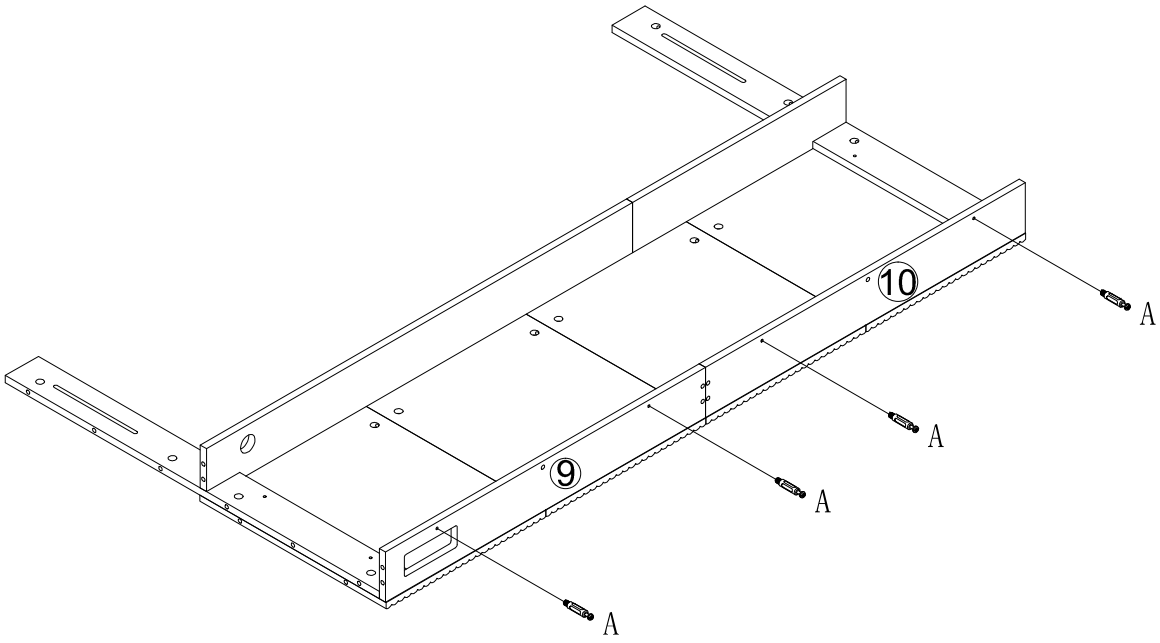


No. A
Quantity: 4 Pcs
8*28 mm




STEP 11

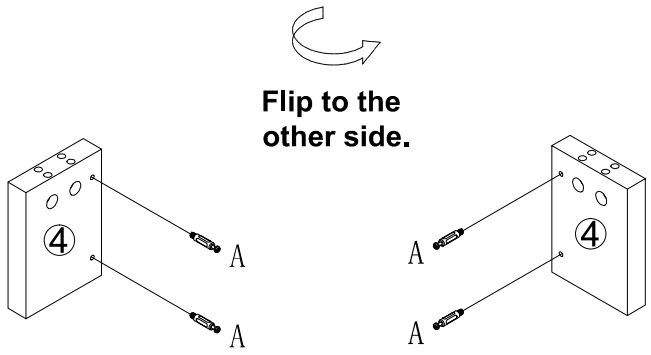

No. A
Quantity: 4 Pcs
8*28 mm



STEP 12

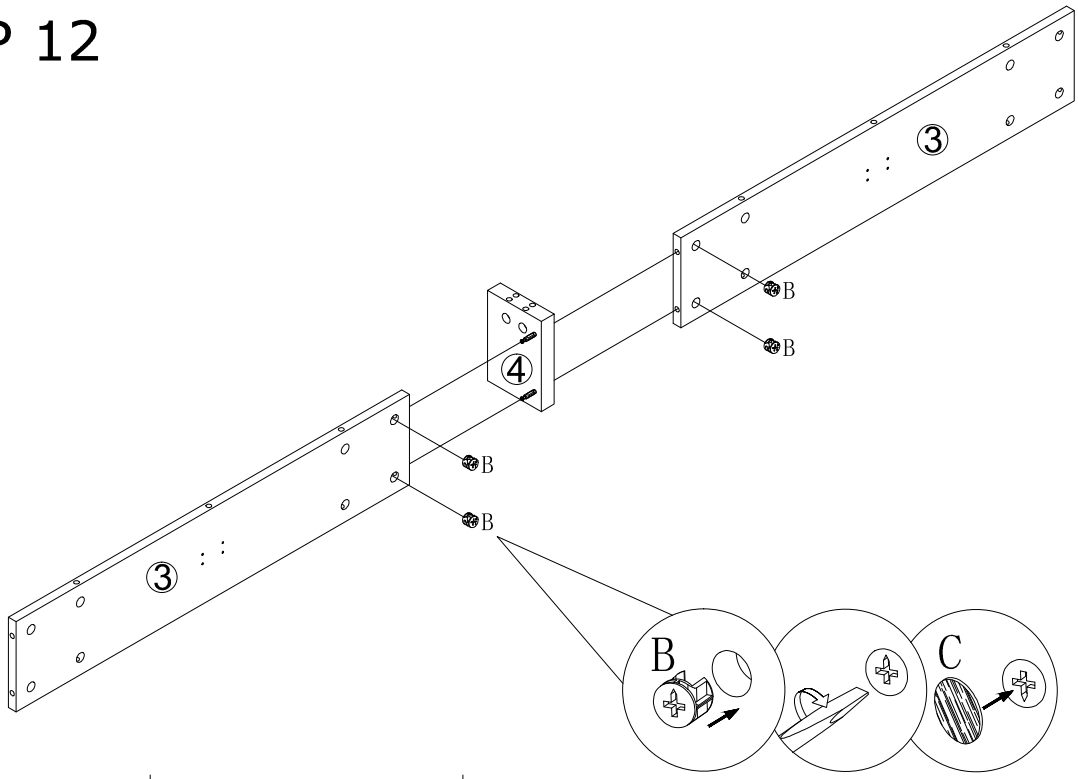


No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20



STEP 13

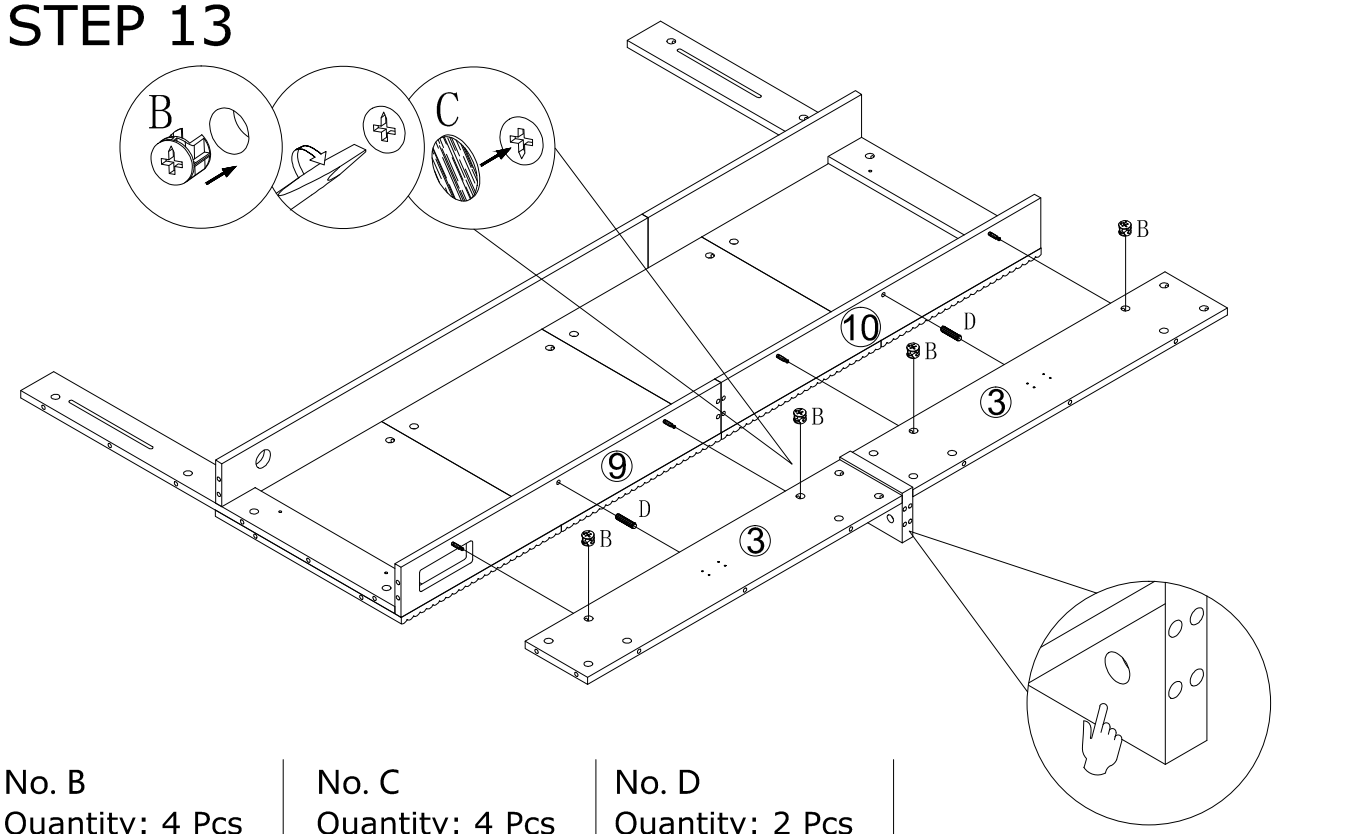

No. B
Quantity: 4 Pcs
Ø15



No. C
Quantity: 4 Pcs
Ø20




No. D
Quantity: 2 Pcs
8*30mm




Note: Please distinguish the direction before assembly, with the lock hole on top.


STEP 14

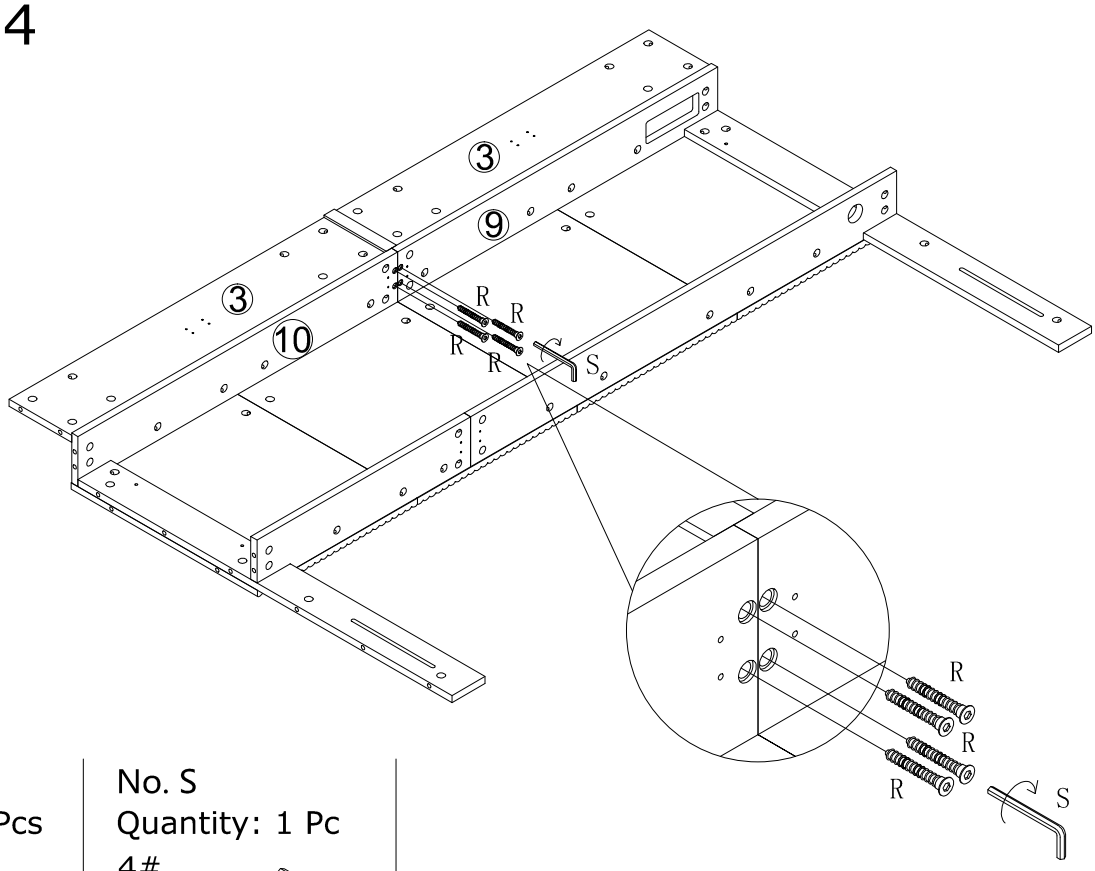


No. R
Quantity: 4 Pcs
M6*40mm



No. S
Quantity: 1 Pc
4#




STEP 15

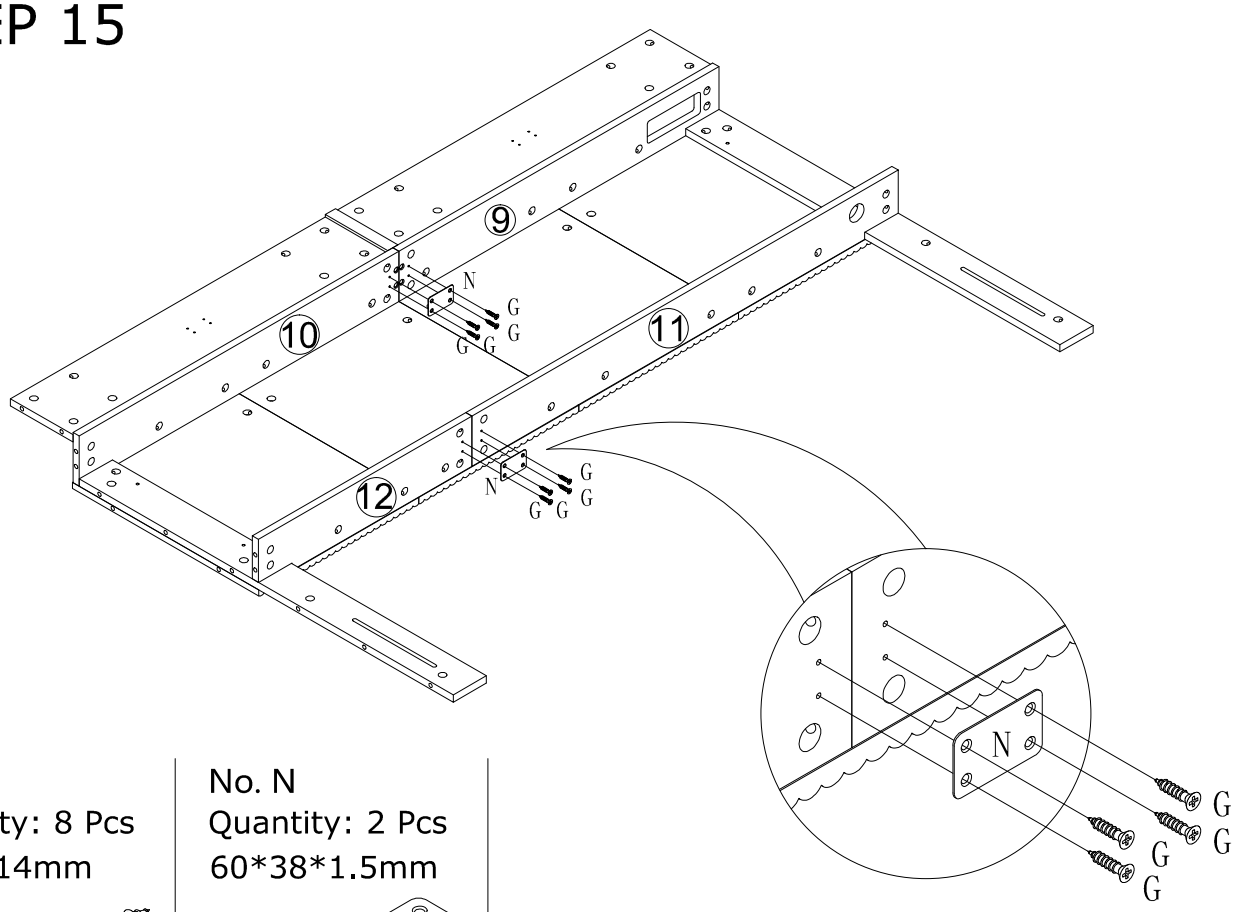


No. G
Quantity: 8 Pcs
M3.5*14mm



No. N
Quantity: 2 Pcs
60*38*1.5mm




STEP 16

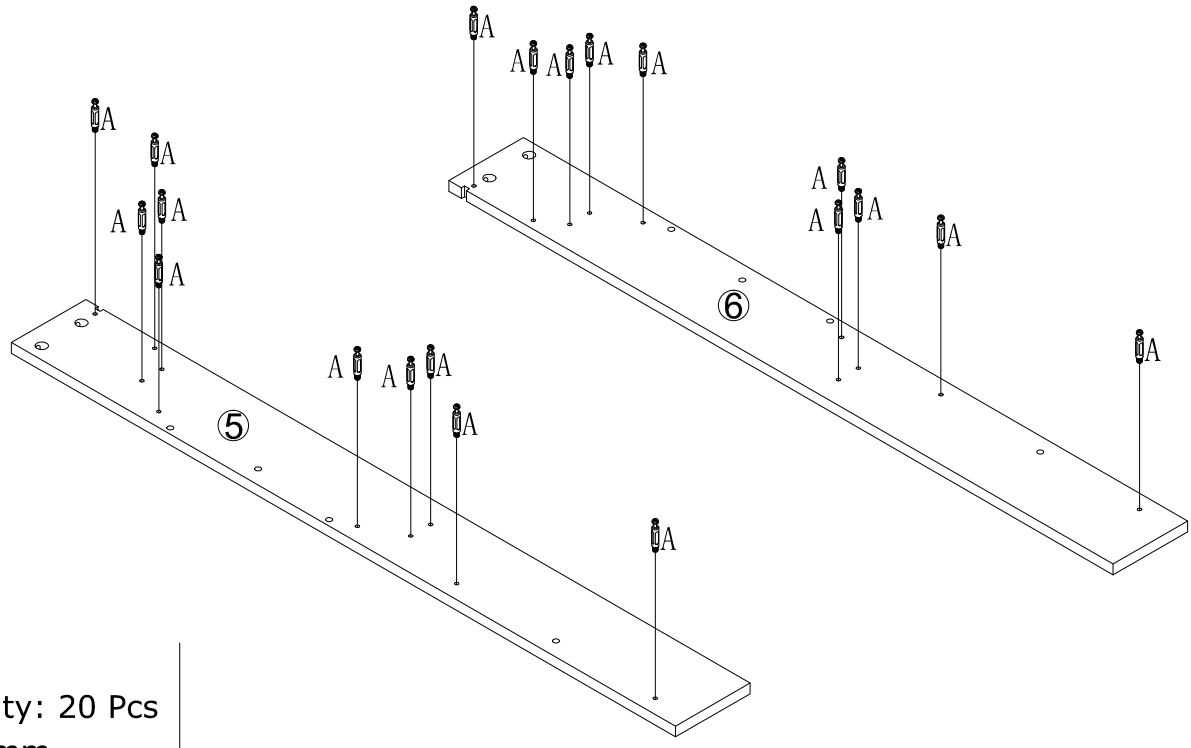

No. A
Quantity: 20 Pcs
8*28 mm



STEP 17

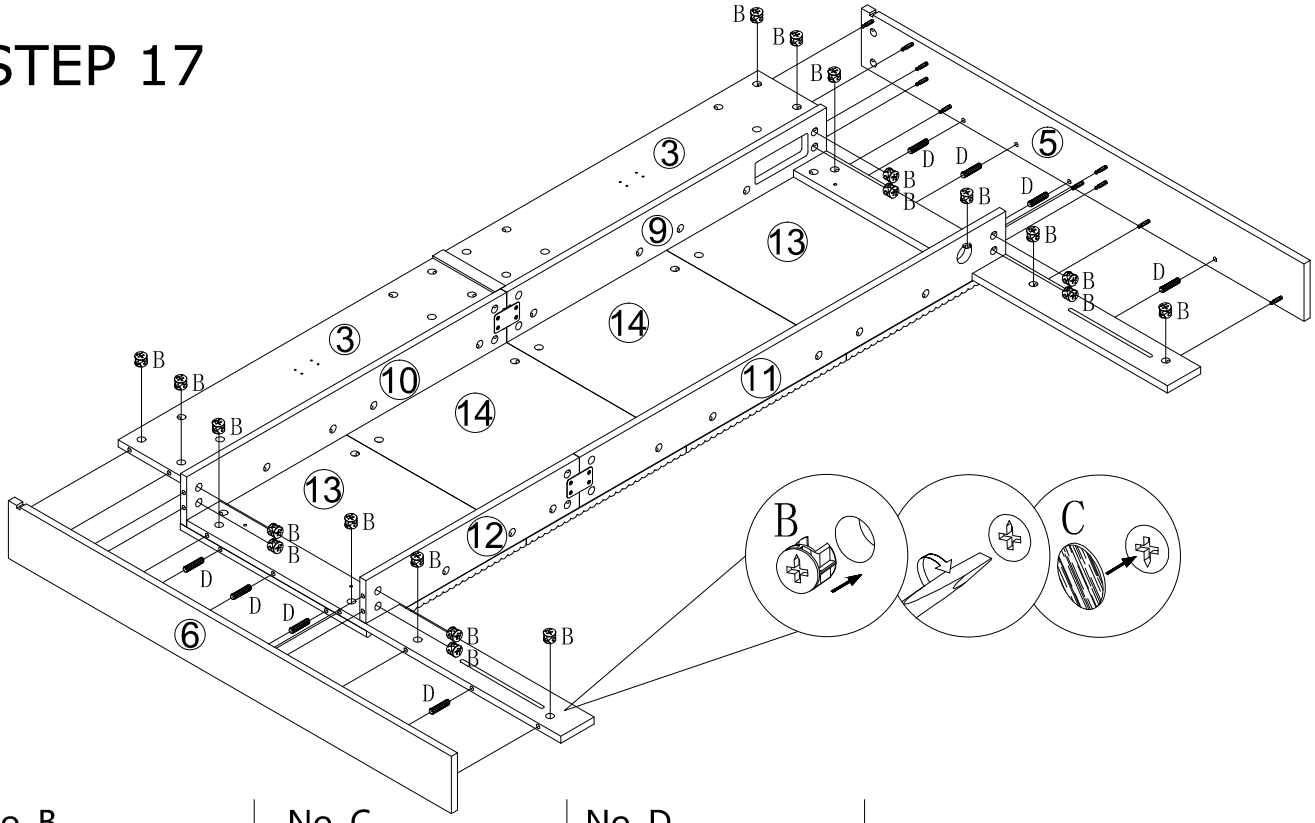

No. B
Quantity: 20 Pcs
Ø15




No. C
Quantity: 20 Pcs
Ø20




No. D
Quantity: 8 Pcs
8*30mm



STEP 18

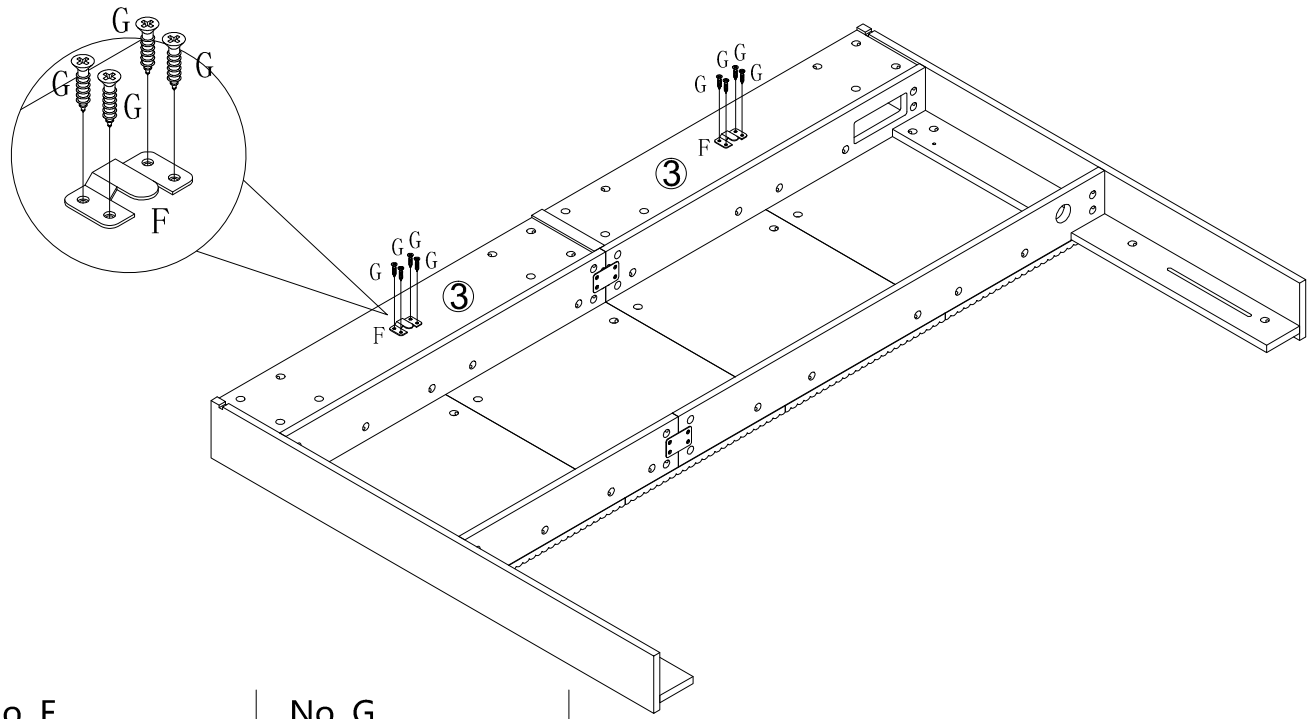


No. F
Quantity: 2 Pcs
53*30*6mm



No. G
Quantity: 8 Pcs
M3.5*14mm




STEP 19

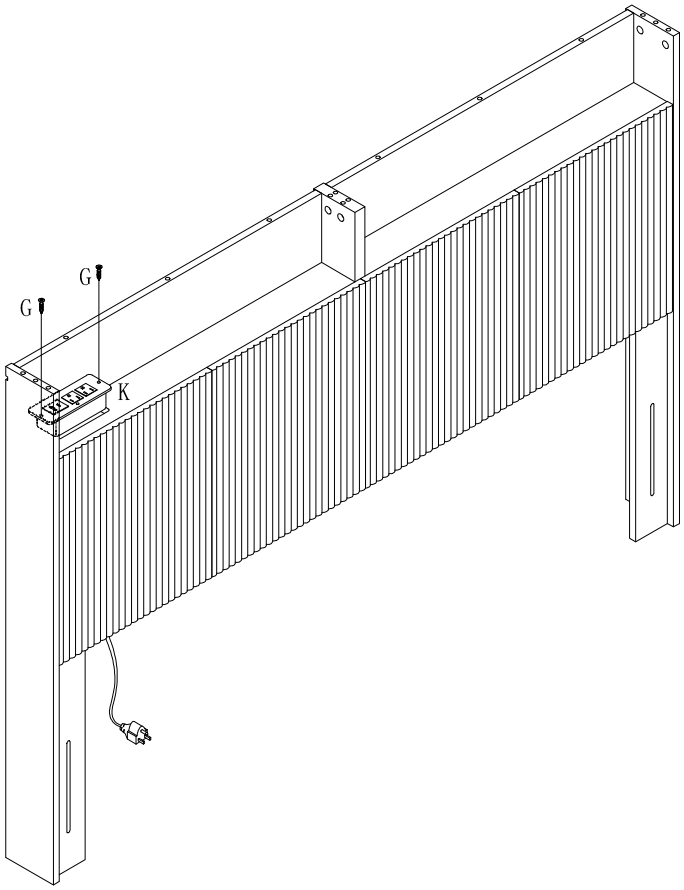


No. G
Quantity: 2 Pcs
M3.5*14mm



No. K
Quantity: 1 Pc



STEP 20

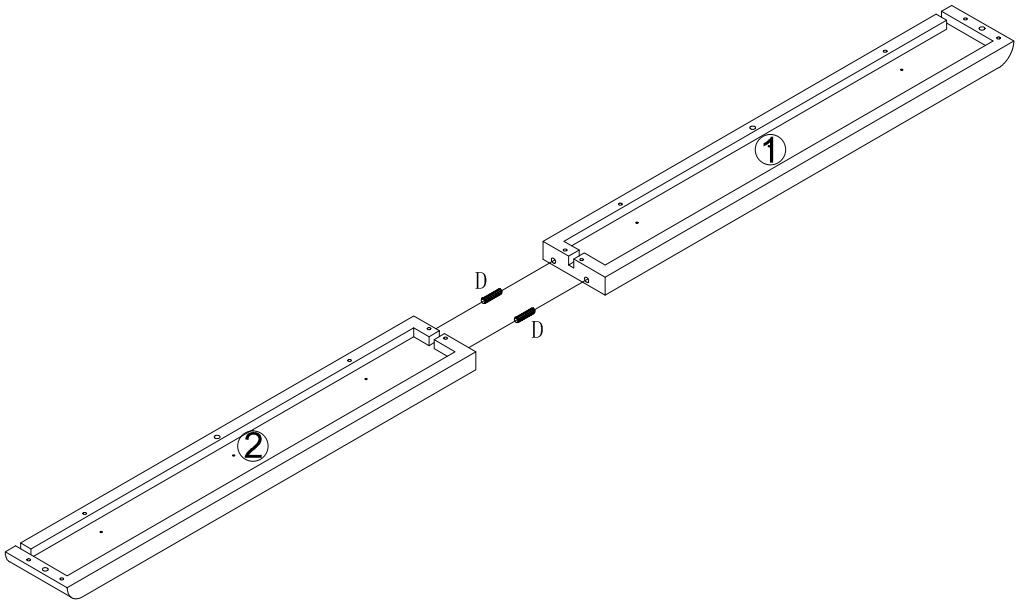


No. D
Quantity: 2 Pcs
8*30mm



STEP 21

1.For better installation, please use this Q screwdriver to lock the tighten the M screws, locking it 50%.
2. After completing the above steps, continue assembling to the next step to lock part M to 100%.

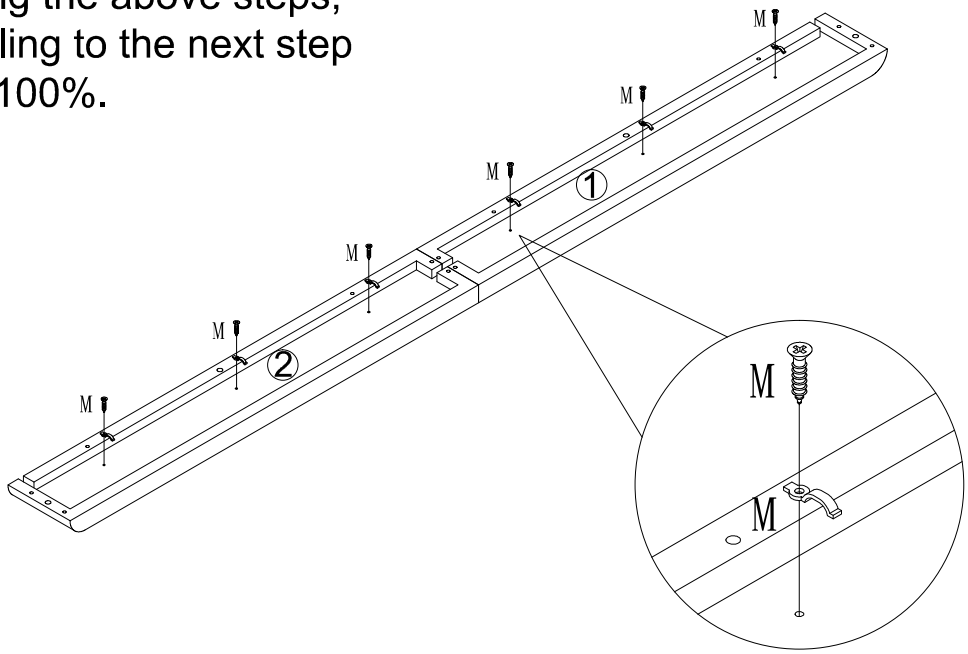


No. M
Quantity: 6 Pcs
M3.5*12mm




STEP 22

After all the light strips are assembled, fasten the screws on the light strips fully tight.

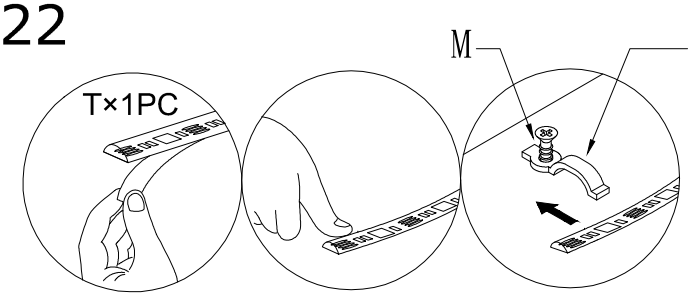


Note: First peel off the protective film on the back, then stick the LED light strip onto the wooden board.

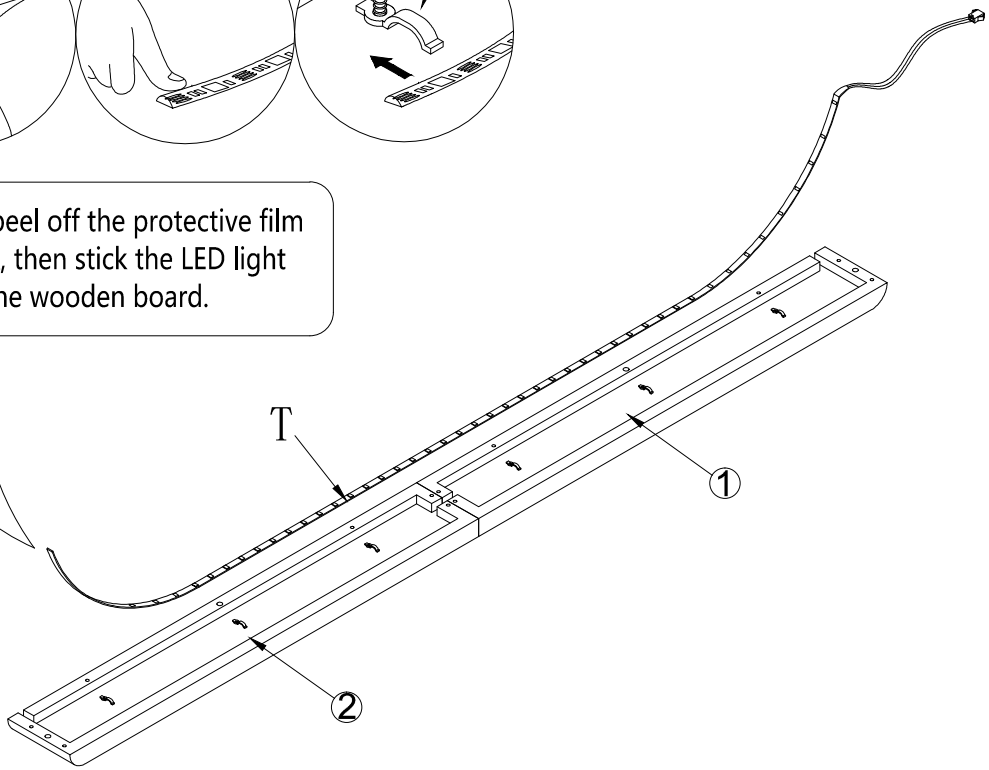


No. T
Quantity: 1 Pc
1550mm




STEP 23

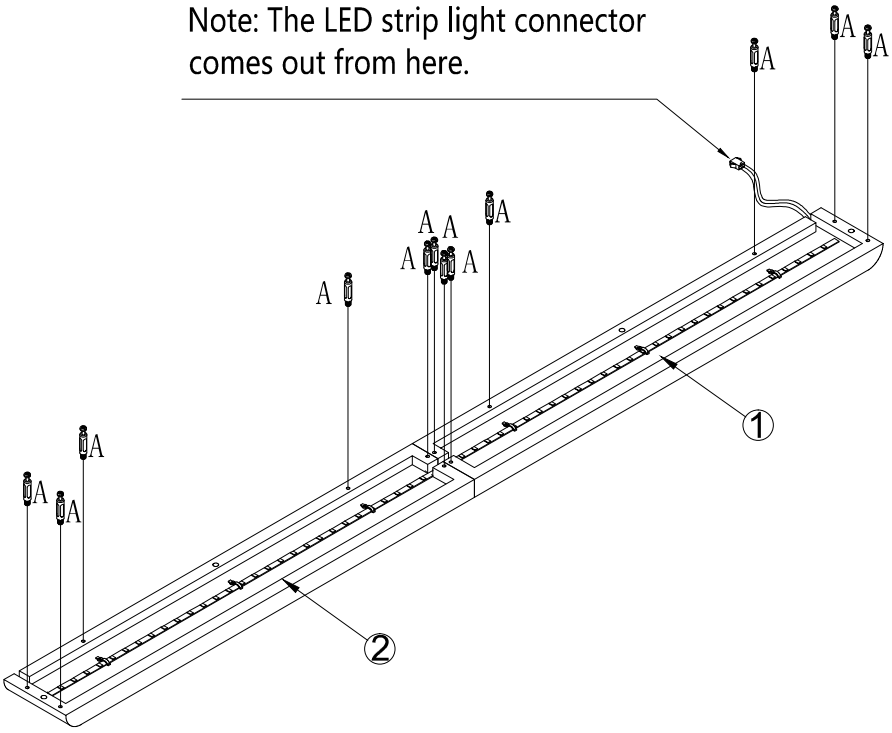

No. A
Quantity: 12 Pcs
8*28 mm



STEP 24

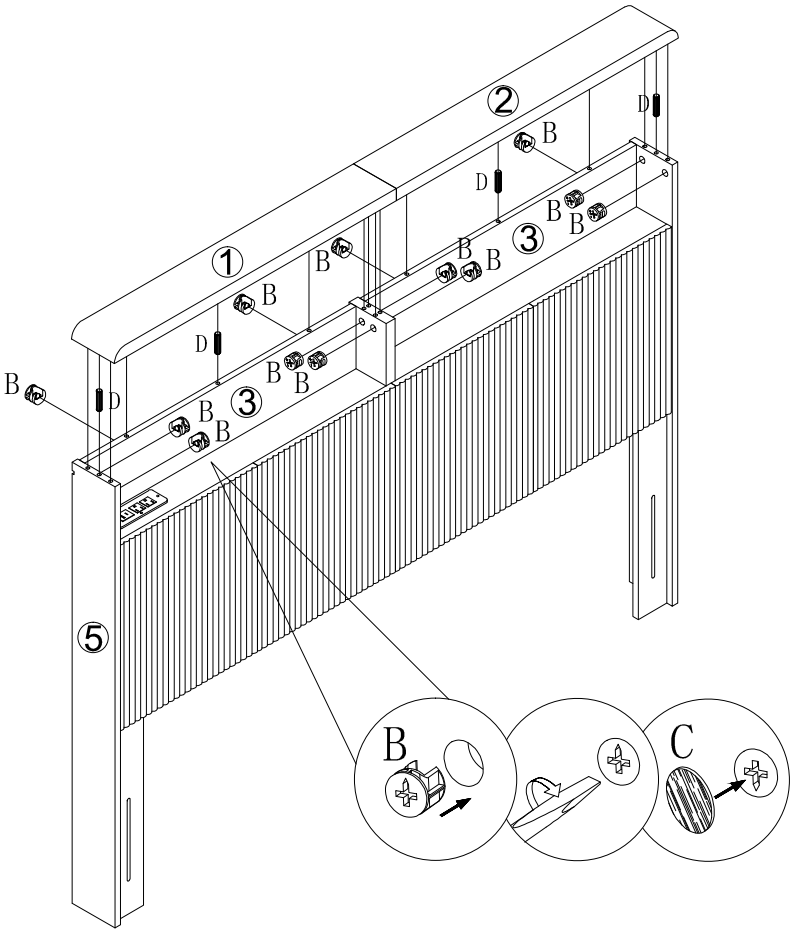

No. B
Quantity: 12 Pcs
Ø15




No. C
Quantity: 12 Pcs
Ø20



No. D
Quantity: 4 Pcs
8*30mm




STEP 25

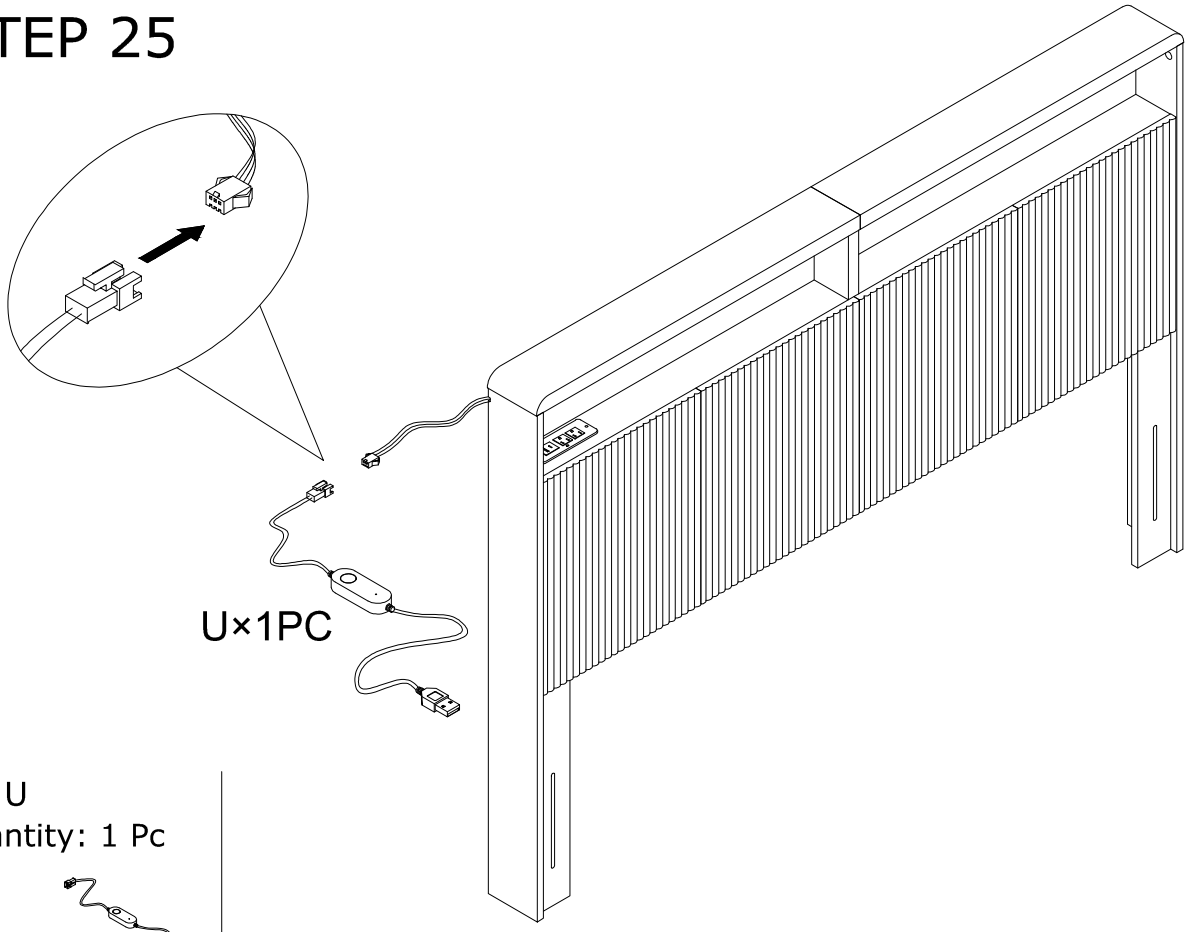

No. U
Quantity: 1 Pc

STEP 26

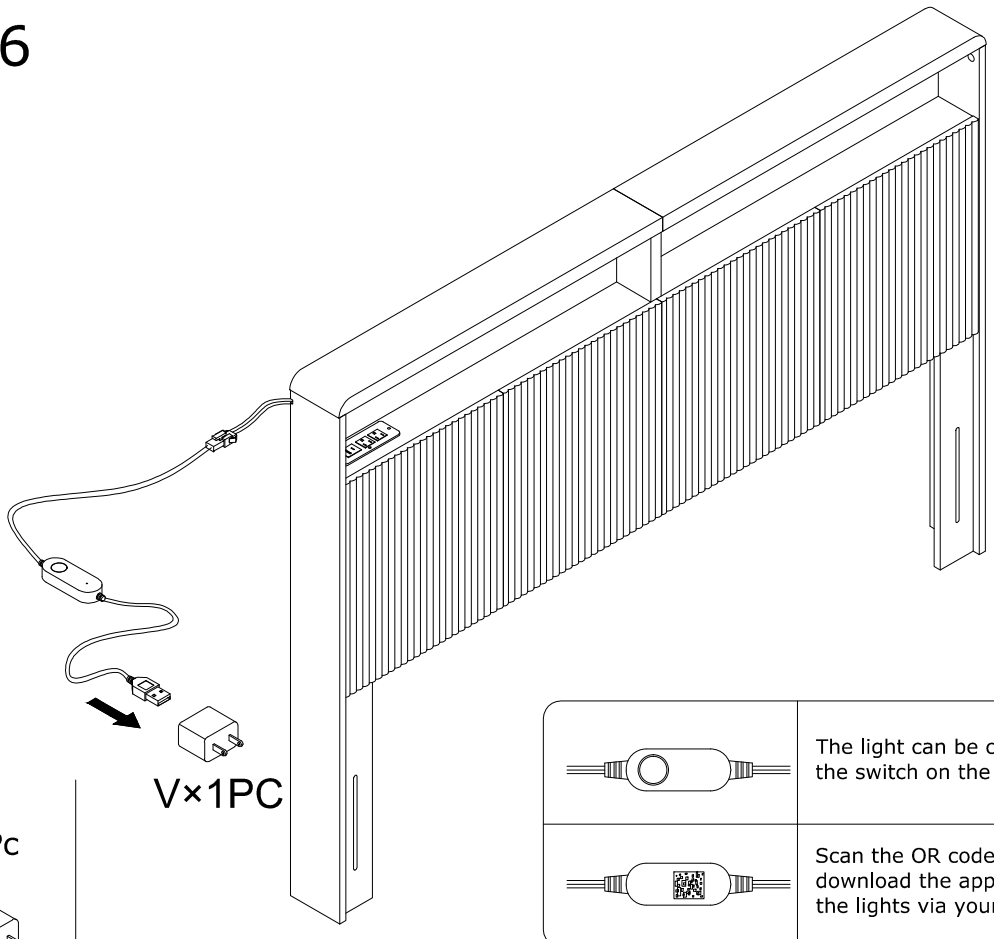



No. V
Quantity: 1 Pc



	The light can be controlled using the switch on the front.
	Scan the OR code on the back to download the app and control the lights via your phone.


STEP 27

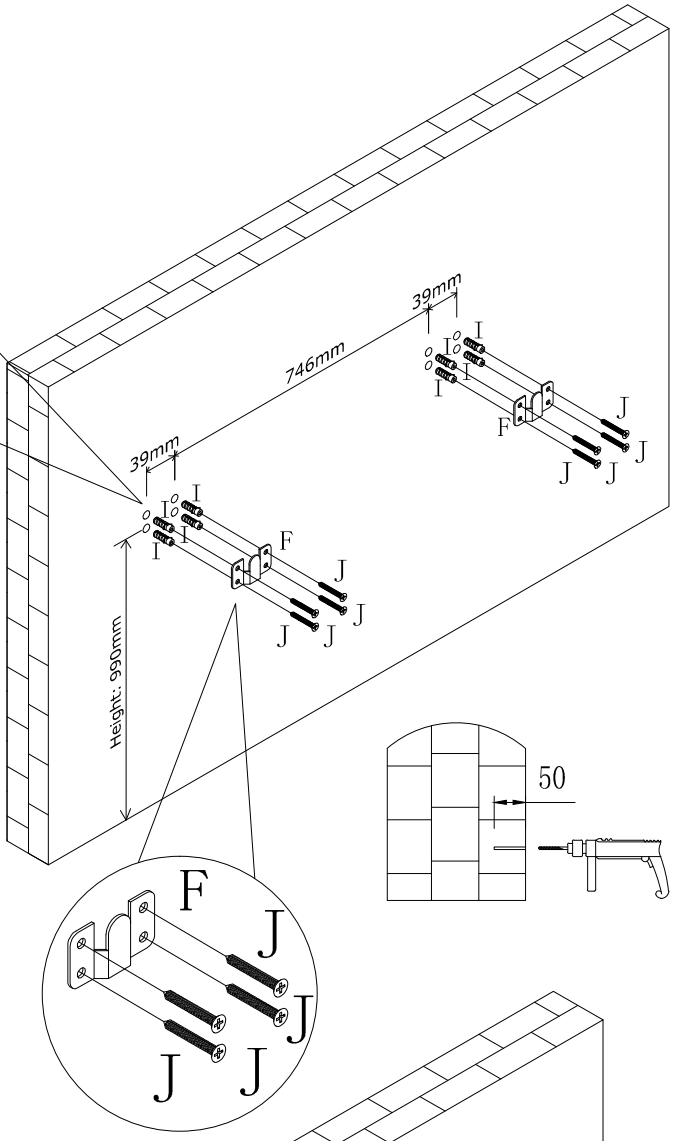

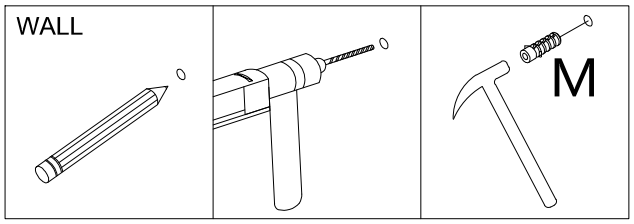


1.The customer must mark the desired mounting positions on the wall,then use their own hammer drill to drill holes into the wall surface.
2. Use a hammer to tap the one plastic expansion anchors into the wall.
3. Insert the corresponding screws into the plastic expansion anchors tocomplete the installation.


No. F
Quantity:2 Pcs




No. I
Quantity:8 Pcs
M8*40mm



No. J
Quantity:8 Pcs
M4*30mm



STEP 28

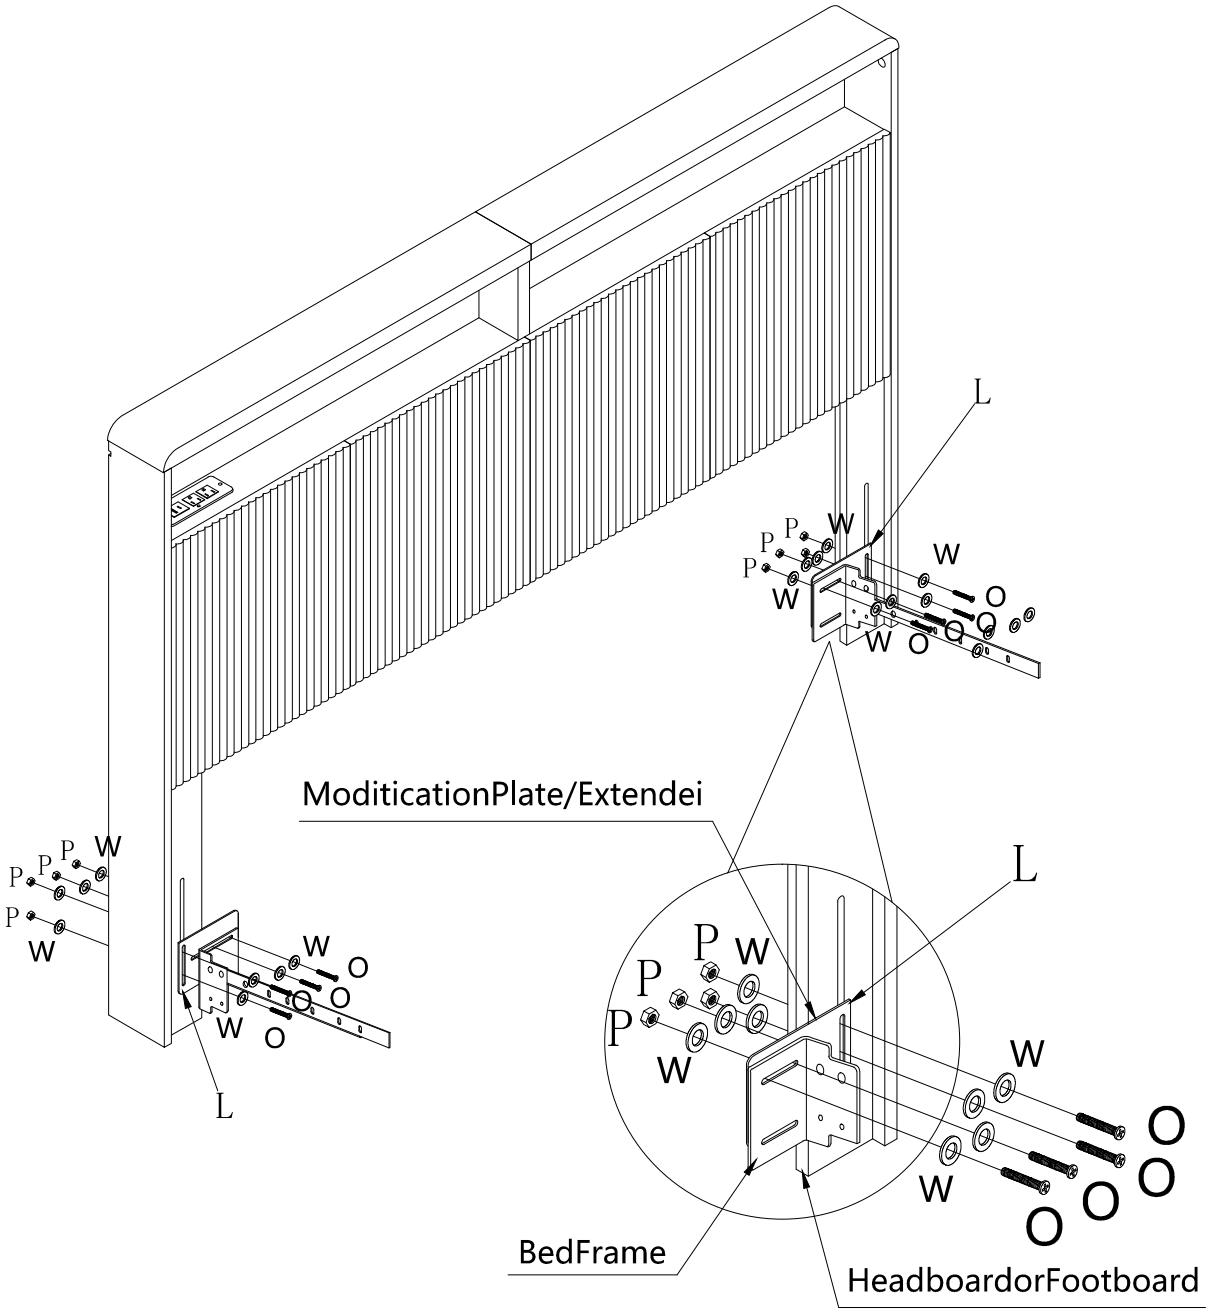

Please install the expansion board first. When installing, do not tighten it immediately to allow for height adjustment. Adjust it to the height suitable for your bed frame, then tighten it. After tightening, install the base frame.

No. L Quantity: 2 Pcs	No. O Quantity: 8 Pcs M6*60mm	No. P Quantity: 8 Pcs	No. W Quantity: 16 Pcs M6