
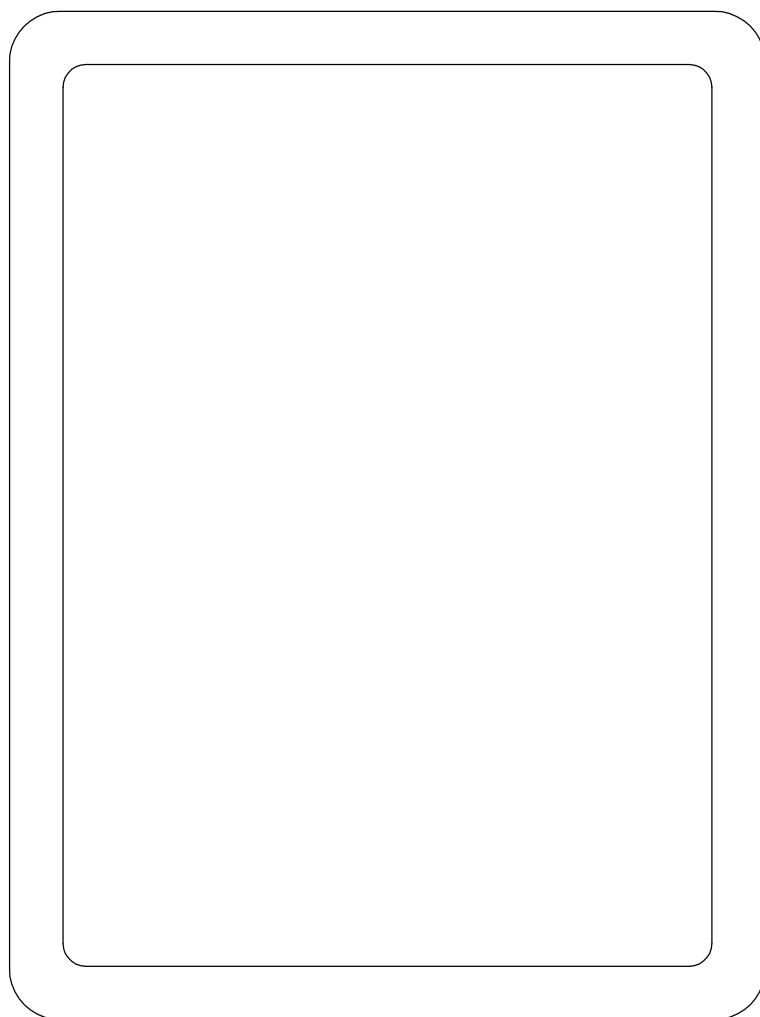





MEDICINE CABINET

Instruction Manual







PACKING LIST

Size No.		 16" * 26"	 24" * 30" 24" * 32"	 24" * 36"
①	 Ø6*40MM Screw	4 PCS	4 PCS	4 PCS
②	 Ø10*42MM Dowel	4 PCS	4 PCS	4 PCS
③	 Sticker		4 PCS	4 PCS

Size	Dimension	Types of Medicine Cabinet
16" * 26"	130 x 406 x 660 mm	Single-door
24" * 30"	130 x 610 x 760 mm	Single-door
24" * 32"	130 x 610 x 810 mm	Single-door
24" * 36"	130 x 610 x 915 mm	Single-door

INSTALLATION

Installation Tools

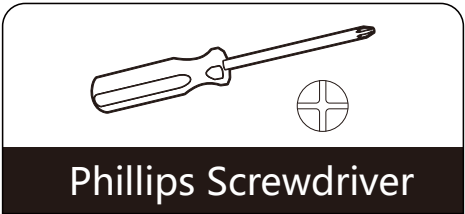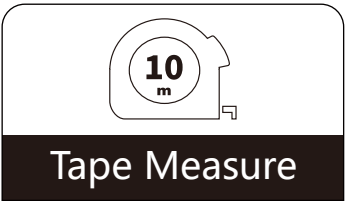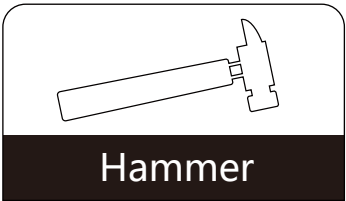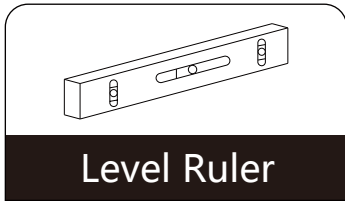


INSTALLATION METHOD 1


Step 1

Please refer to the following drilling spacing diagram to drill Ø10holes on the wall by using an impact driller. Or measure the distance between two holes on the aluminum strip.


16" * 26"

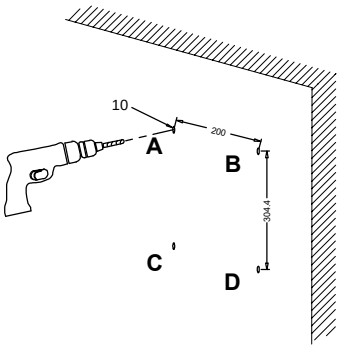

24" * 30" or 24" * 32"

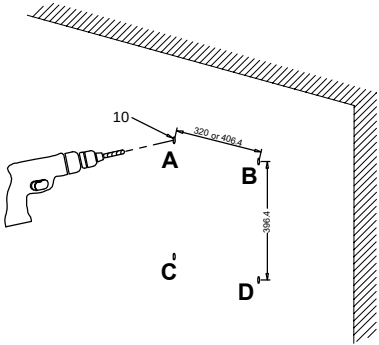

24" * 36"

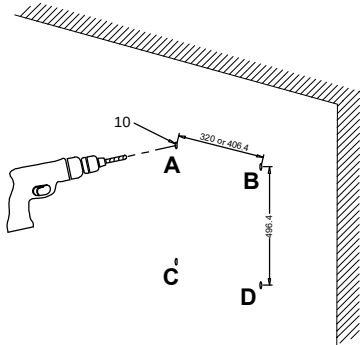


Required Tools	Distance:mm	16"*24"	24"*30"	24"*32"	24"*36"
 Electric drill	A→B=C→D	200	320 or 406.4	320 or 406.4	320 or 406.4
	A→C=B→D	304.4	396.4	396.4	496.4

INSTALLATION METHOD 1


Step 2

Use a hammer to insert the expansion screw into the hole.

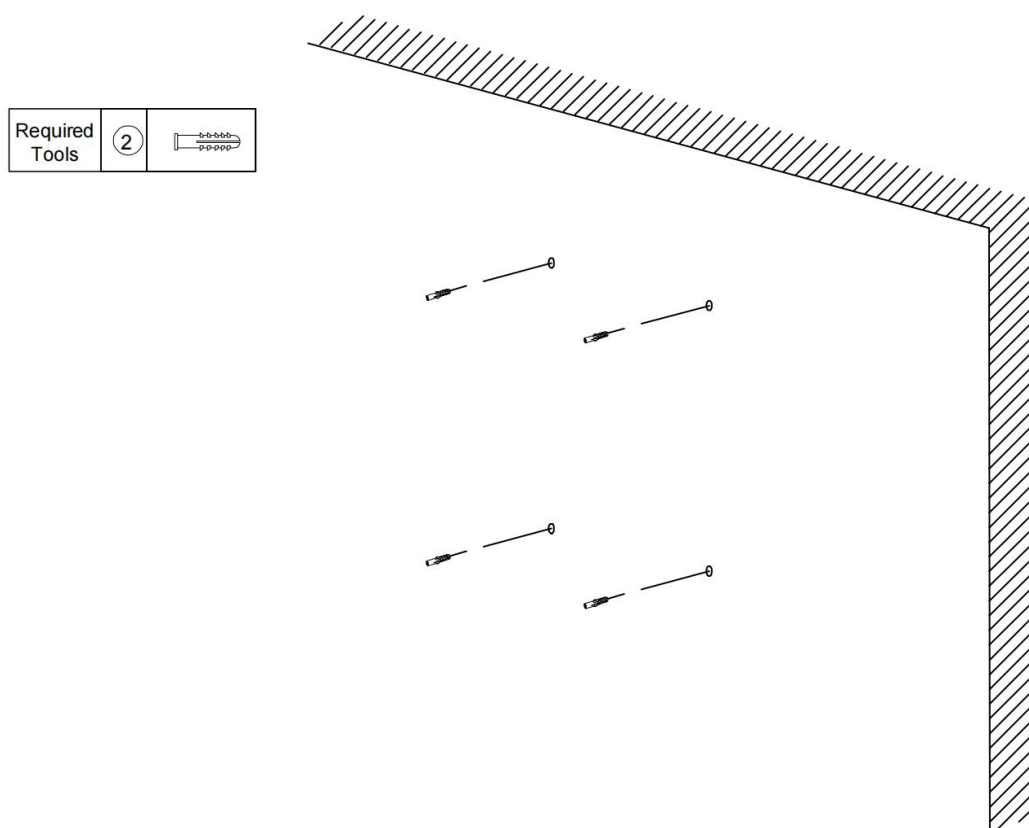

Step 3

Secure the mounting bracket with screws.

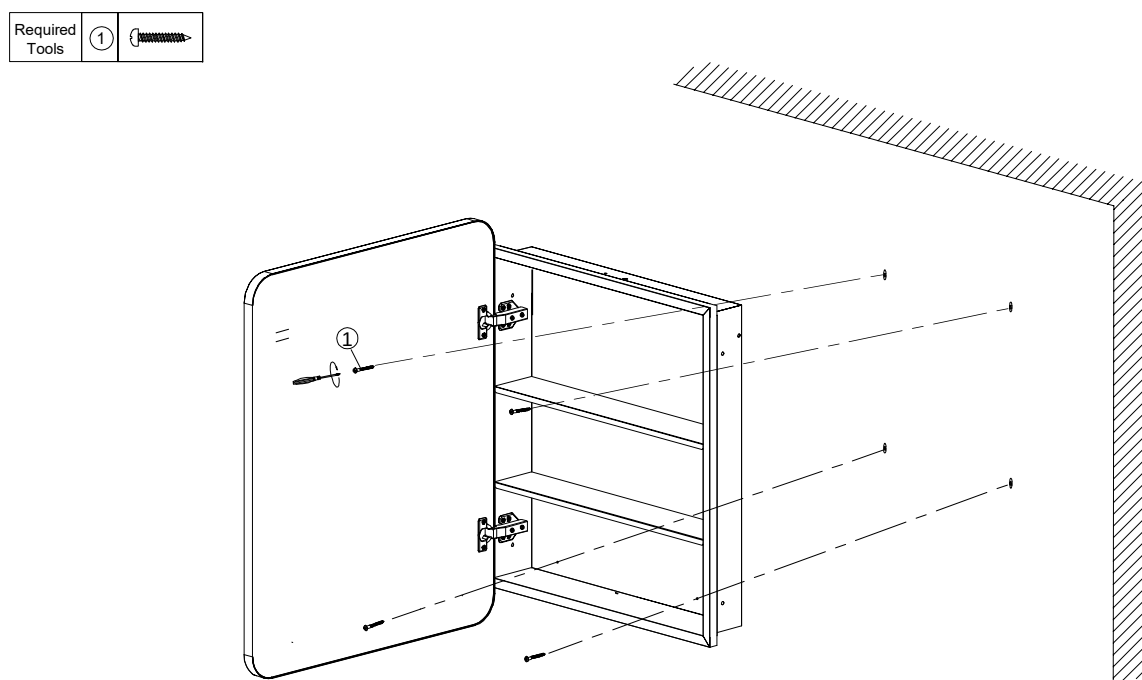


Cover the other four unused screw holes with round Sticker

INSTALLATION METHOD 2

Step 1


If you choose embedded installation, you need to reserve sufficient inner space dimensions of wall, please refer to the following figure for the data.

Distance Size	W in (mm)	D in (mm)	H in (mm)
16" * 26"	14.5-14.9 (368.5-378.5)	3.6-4.3 (91.5-109.0)	22.1-22.9 (561.5-582.0)
24" * 30"	21.5-21.9 (546.0-556.5)	3.6-3.9 (91.5-109.0)	25.3-26.1 (642.5-663.0)
24" * 32"	21.5-21.9 (546.0-556.5)	3.6-3.9 (91.5-109.0)	27.3-28.1 (693.5-714.0)
24" * 36"	21.5-21.9 (546.0-556.5)	3.6-3.9 (91.5-109.0)	31.2-32.0 (792.5-813.0)

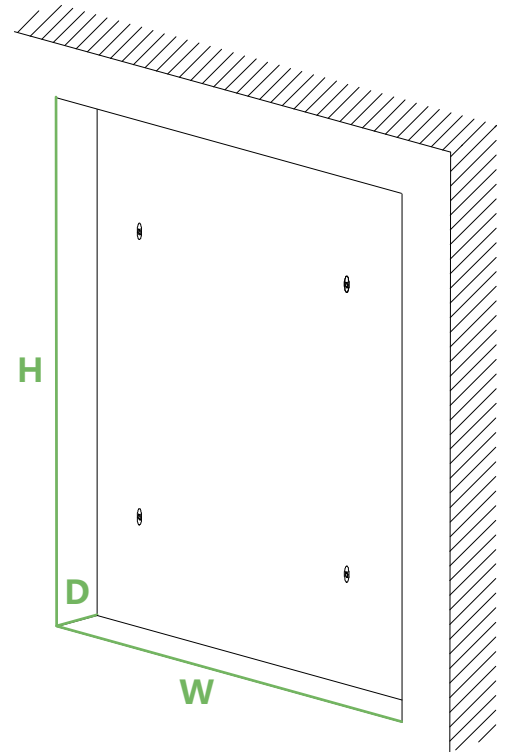


Please refer to the following drilling spacing diagram to drill 4pcs Ø10holes on the wall by using an impact driller.


16" * 26"

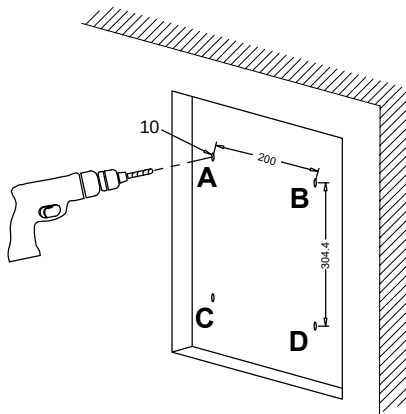

24" * 30" or 24" * 32"

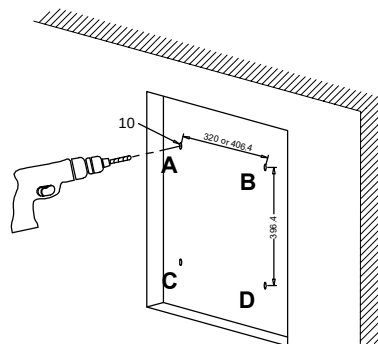

24" * 36"

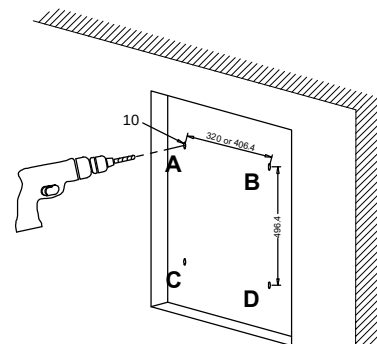



Required Tools
Electric drill

Distance:mm	16"*24"	24"*30"	24"*32"	24"*36"
A→B=C→D	200	320 or 406.4	320 or 406.4	320 or 406.4
A→C=B→D	304.4	396.4	396.4	496.4

INSTALLATION METHOD 2



Step 2

Use a hammer to insert the expansion screw into the hole.

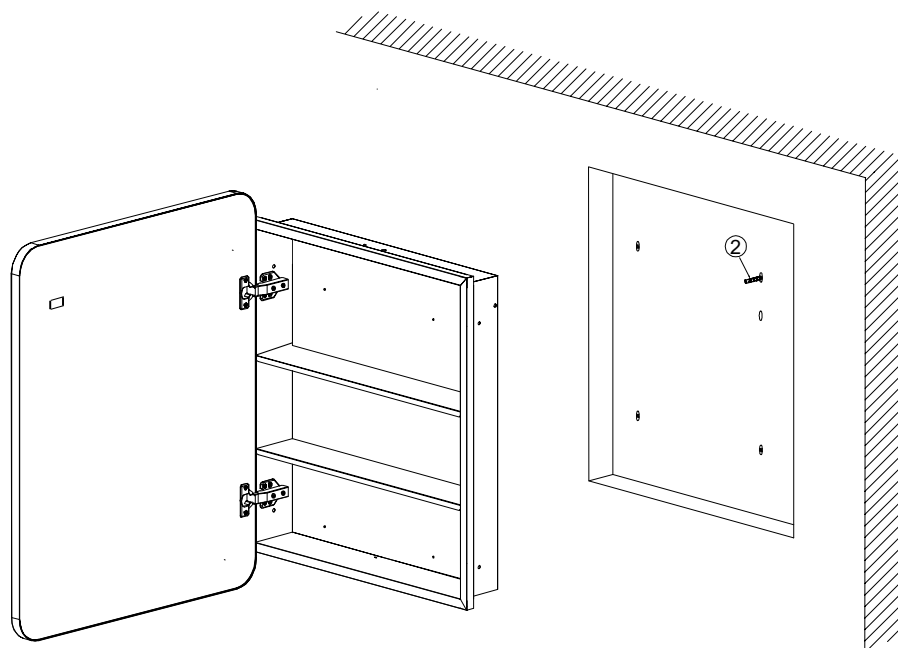

Step 3

Insert the mirror cabinet into the wall, take out the screw, put the screw to go through and cabinet, fix the cabinet on the wall by using cross screwdriver to tighten screw.

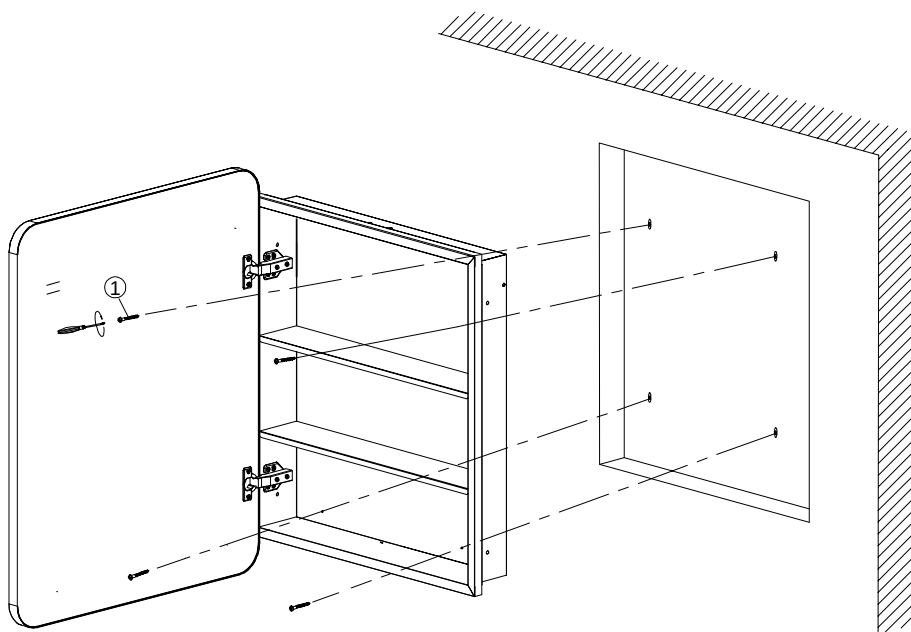

Cover the other four unused screw holes with round Sticker

AFTER-SALES SERVICE CARD

We sincerely thank you for trusting our service and our products, and may this product add enrichment to your home. We guarantee that the product has undergone strict quality inspection and meticulous packaging. If you encounter any issue regarding either shipping or the product, please feel free to contact us at any time. We'd be more than happy to serve you wholeheartedly.

Yours Sincerely

- Please clean with a damp cloth and wipe dry.
- Please avoid harsh, corrosive and abrasive cleaners.
- Keep dry and avoid damp environments.

If you have any questions or concerns, please feel free to contact us. We're committed to providing our customers with the quality service.