

INSTALLATION MANUAL



Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.





Before You Start

-  Please read all instructions carefully.
-  Retain instructions for future reference.
-  Separate and count all parts and hardware.
-  Read through each step carefully and follow the proper order.
-  We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
-  Always place the product on a flat, steady and stable surface.
-  Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.



Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

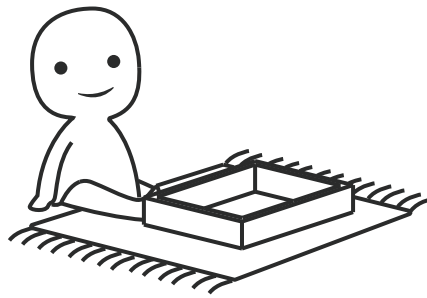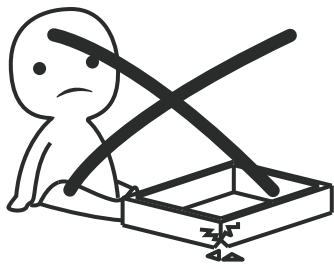

AVOID SCRATCHES!

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

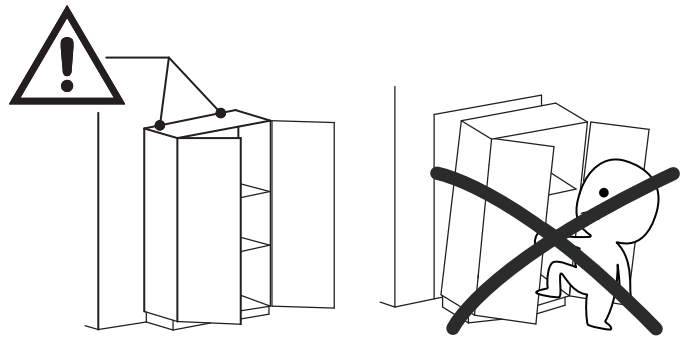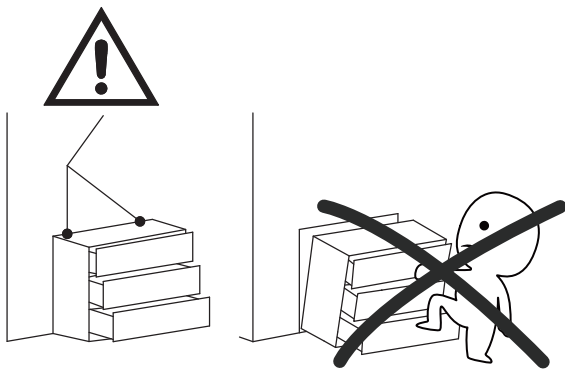

ANTI-TOPPLE WARNING !

Overtured furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

Completed Assembly

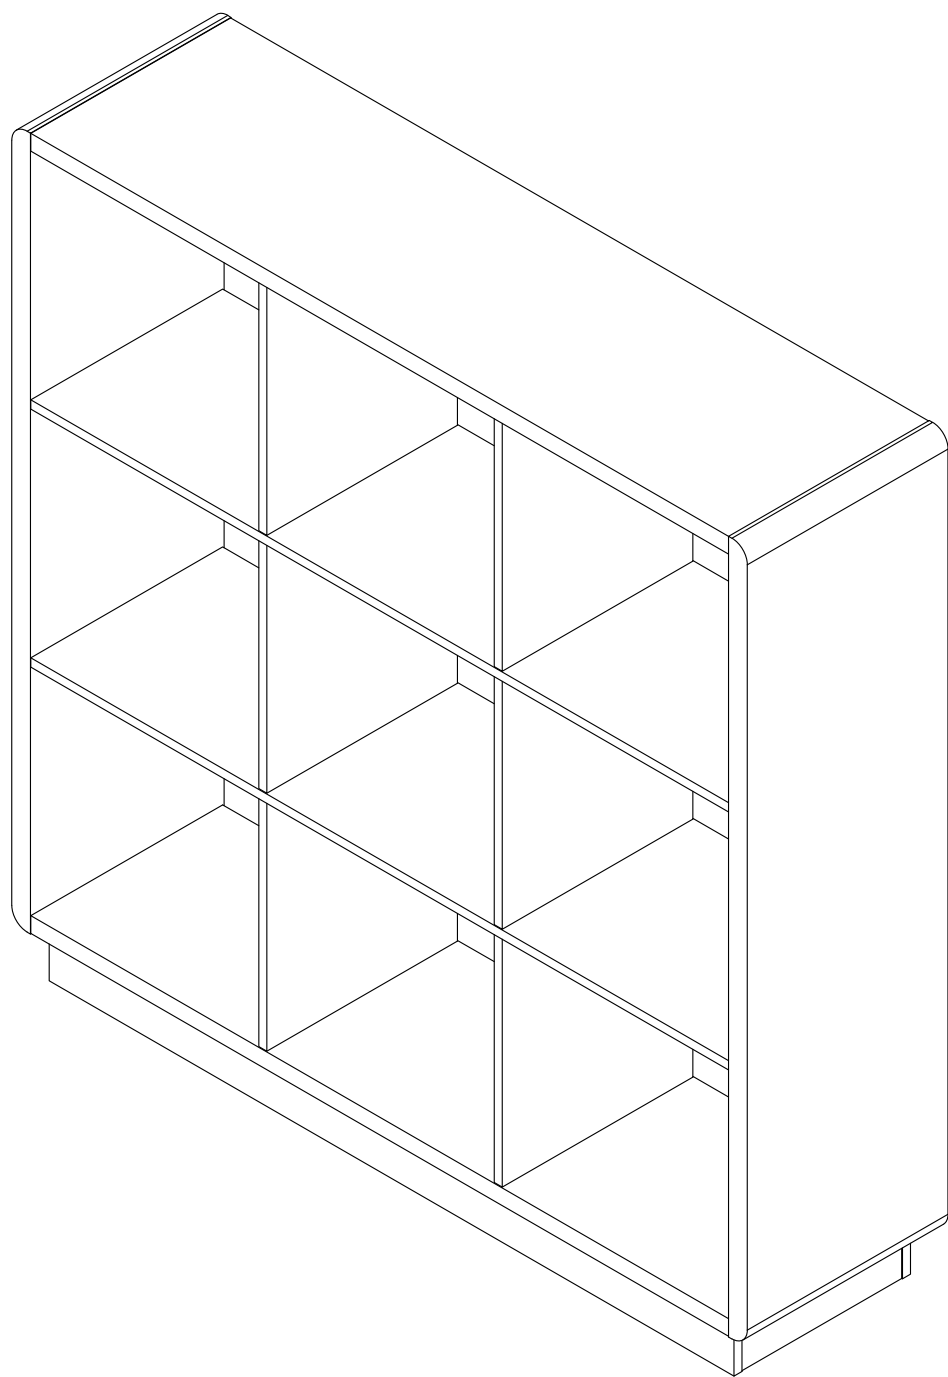


Parts Description

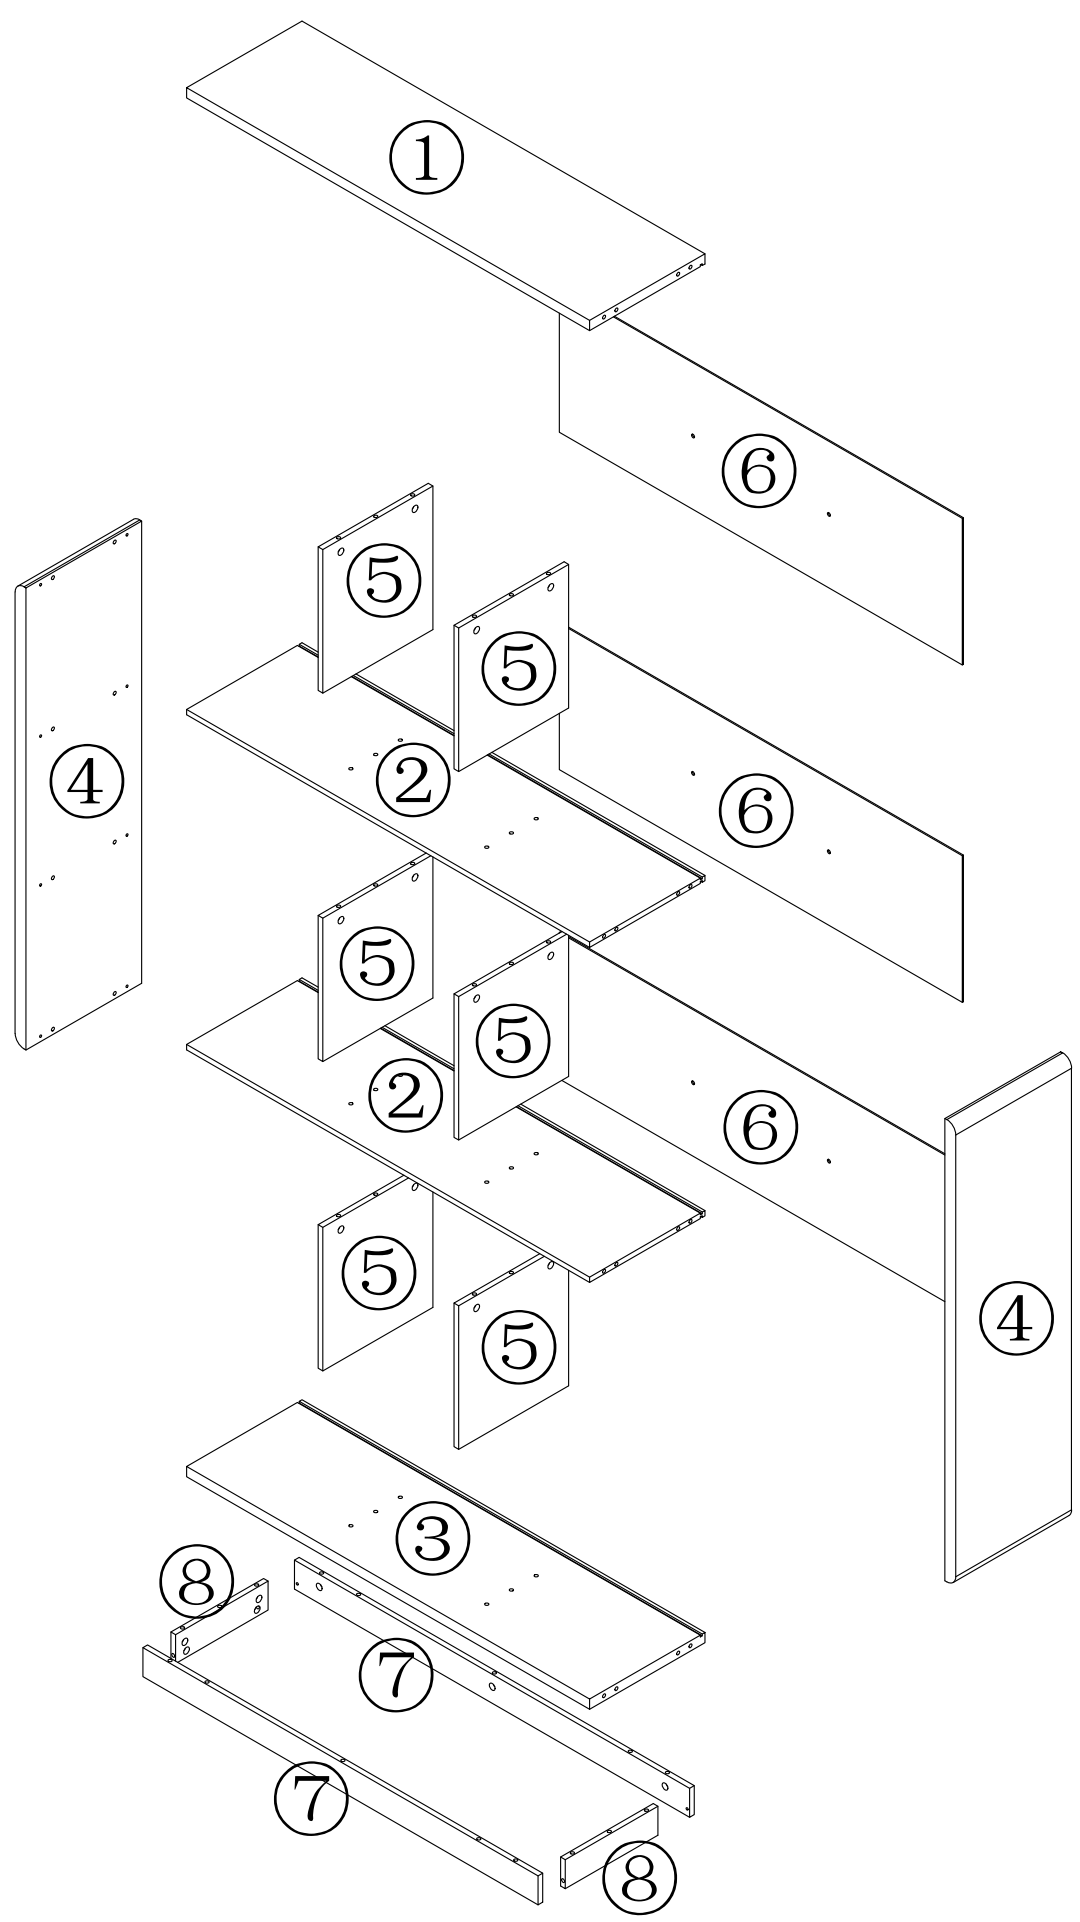


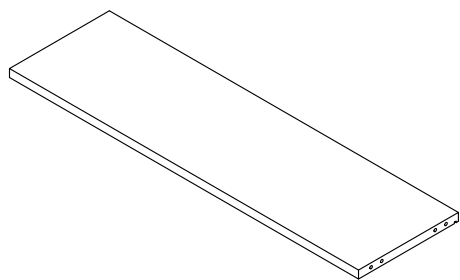


①x1

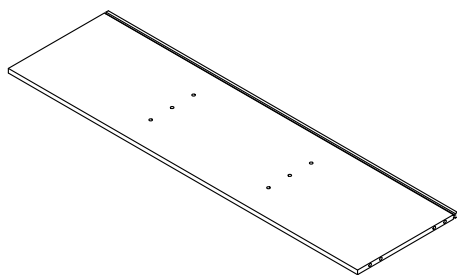


②x2

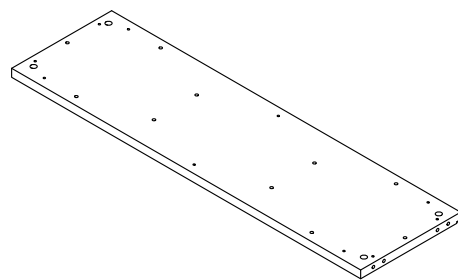


③x1




④x2

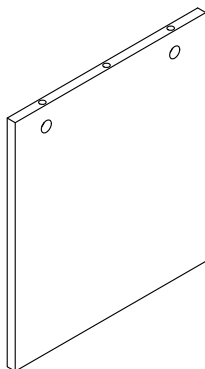


⑤x6

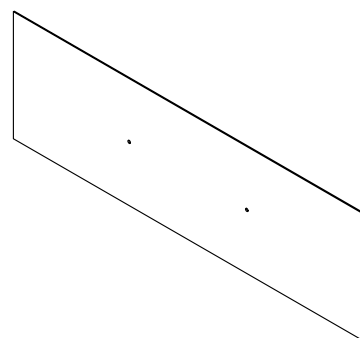











⑥x3

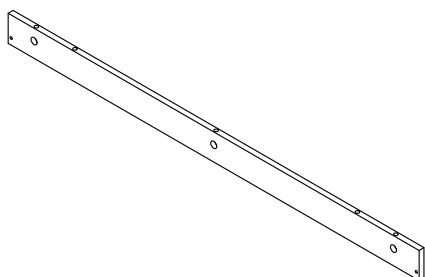

⑦x2

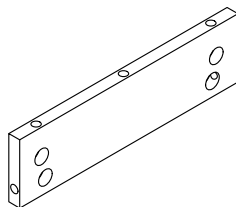

⑧x2

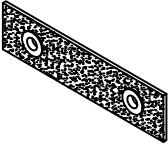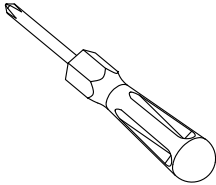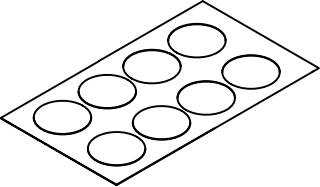A  Cam Bolt 42+3	B  Cam Lock 42+3	C  8x30mm Wooden Dowel 34+2
D  7x40mm Bolt 14+1	E  7x50mm Bolt 4	F  4x35mm Screw 2
G  3x16mm Screw 20+1	H  Anti-Tip Strap 2	I  Anchor 2
J  Foot Pad 6	K  Allen Key 1	L  Phillips Screwdriver 1
M  Back Plate Fastener 18	N  Hole Cover 30	



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock





CAM BOLT





CAM LOCK

Cam Bolt

Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

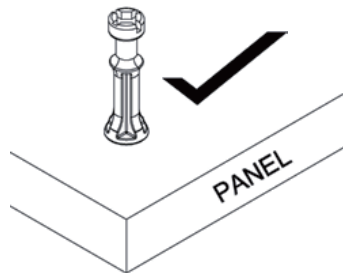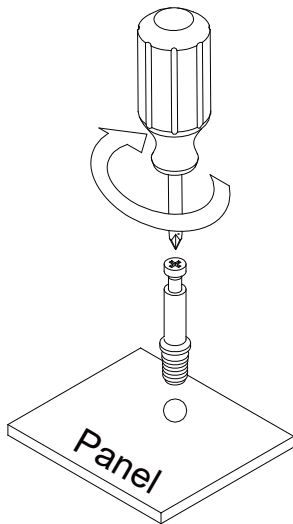



Shoulder is flushed
(on the same level)
with the panel.

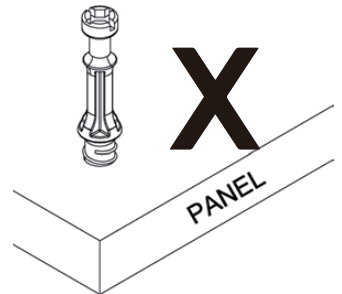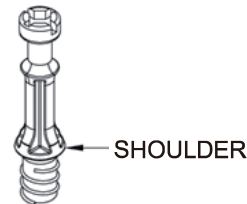

Shoulder is
above the panel.


CAM-LOCK

Align the arrow on the Cam-lock to the
Cam-bolt head and insert the Cam-lock.

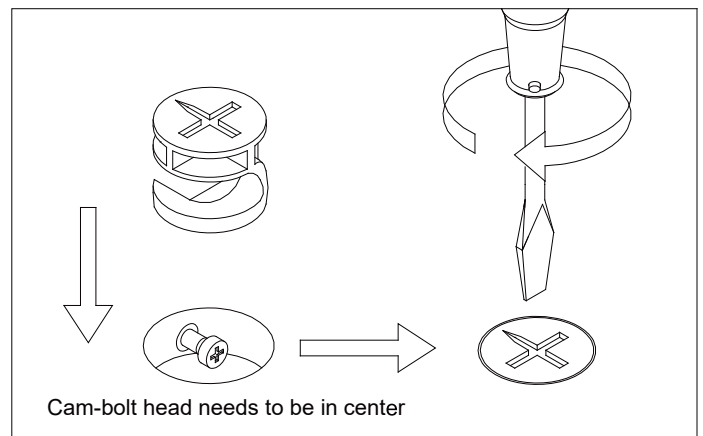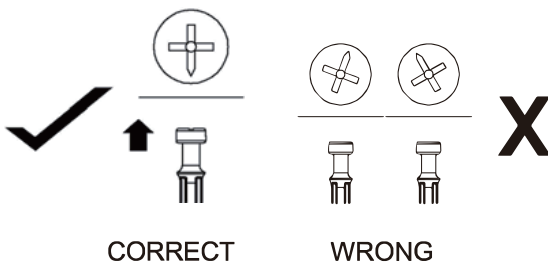



Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.

Step 1

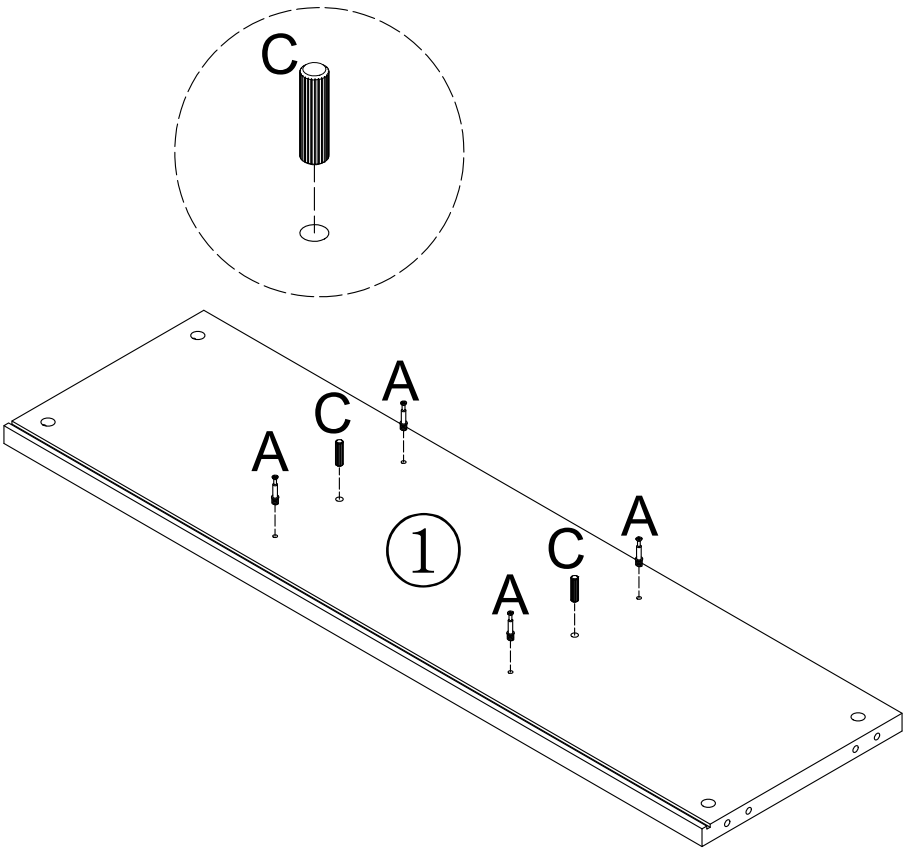


Hardware Needed


A		X4
C		X2

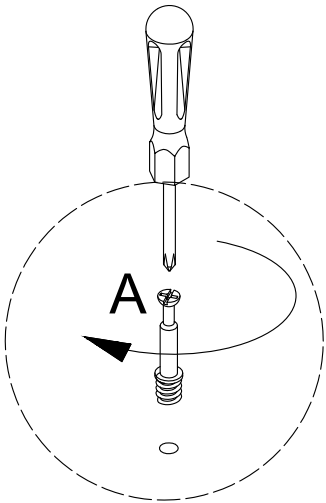


Step 2

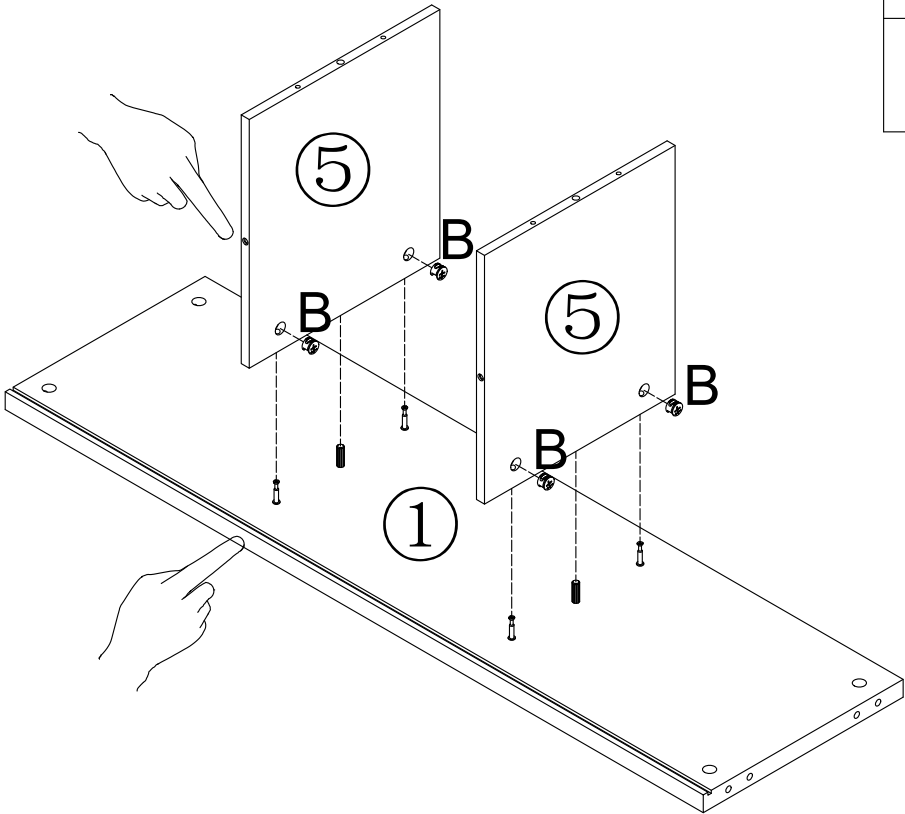


Hardware Needed


B		X4
---	---	----

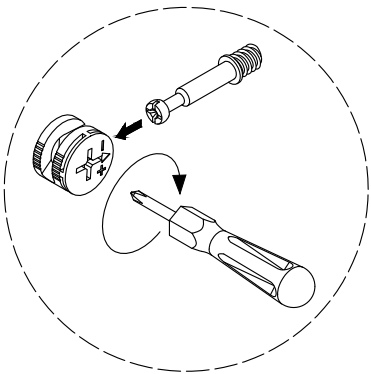


Step 3

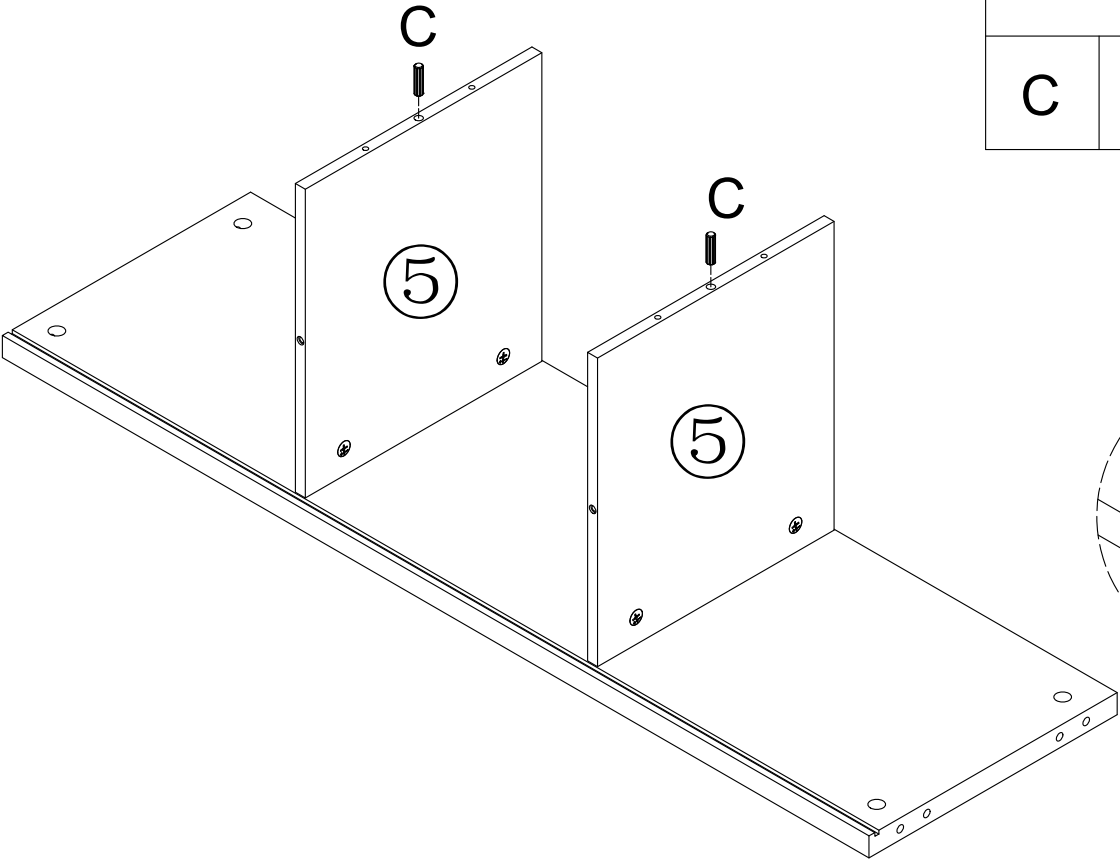


Hardware Needed		
C		X2

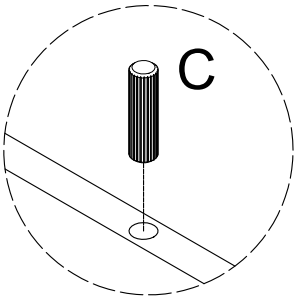



Step 4

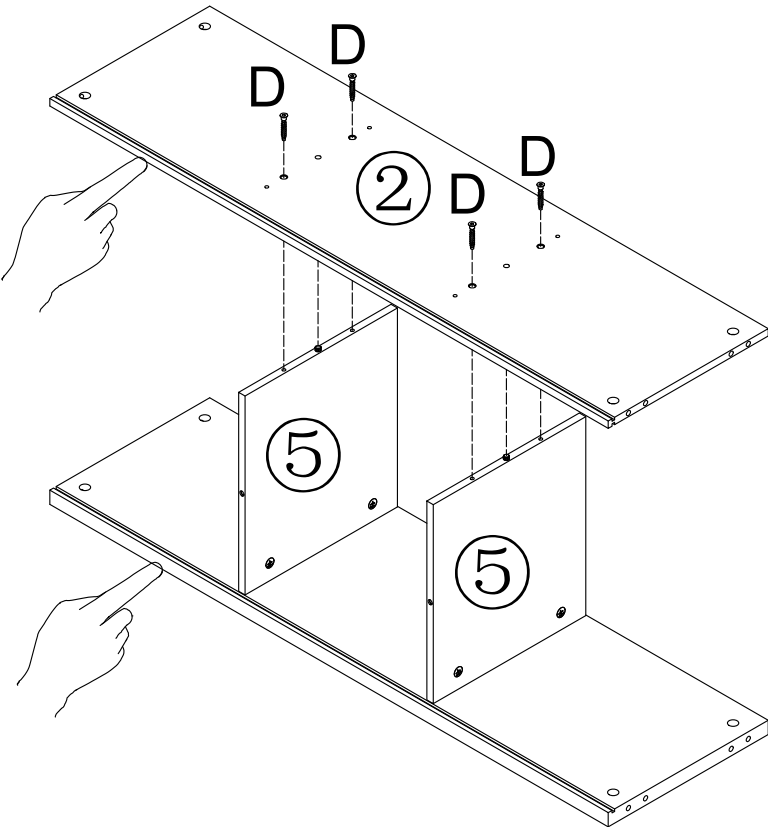

Hardware Needed		
D		X4
K		X1

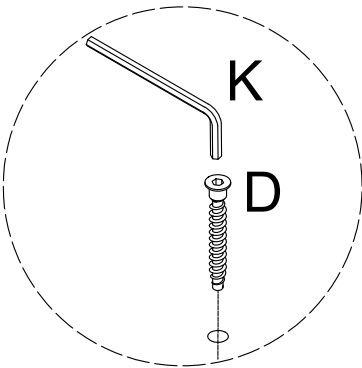


Step 5

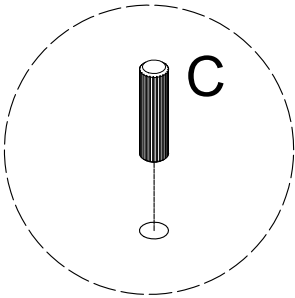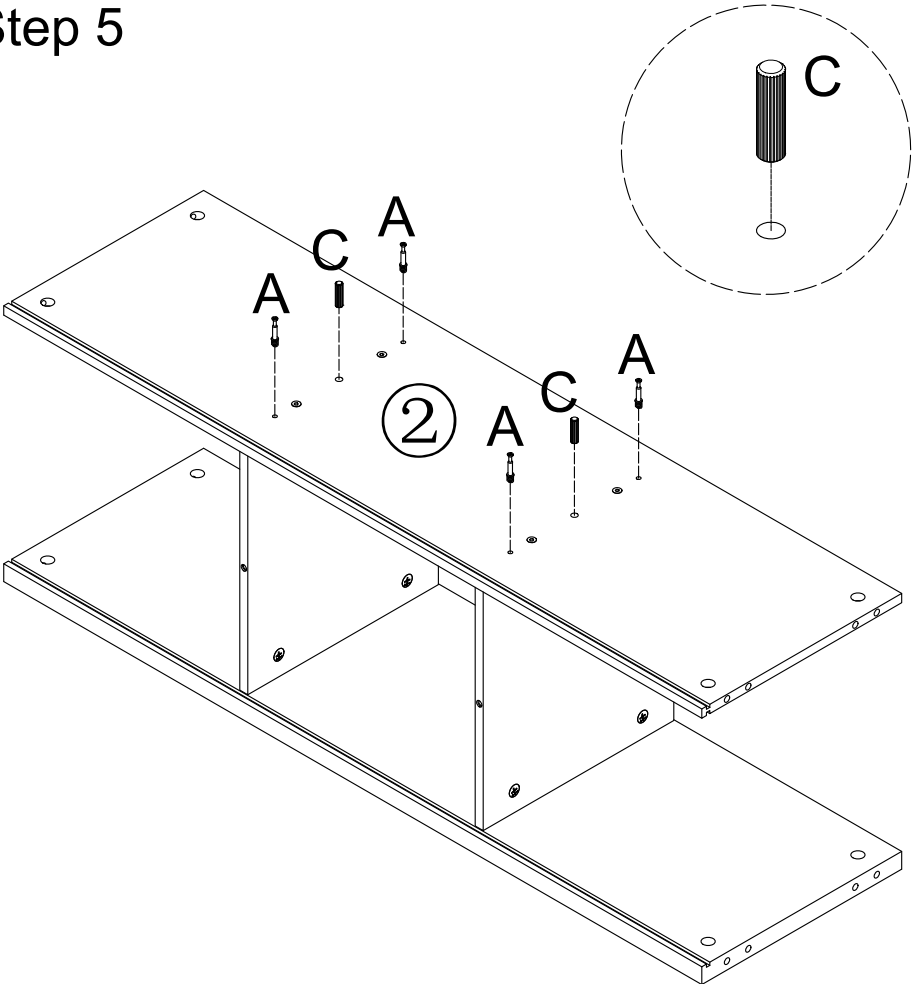


Hardware Needed


A		X4
C		X2

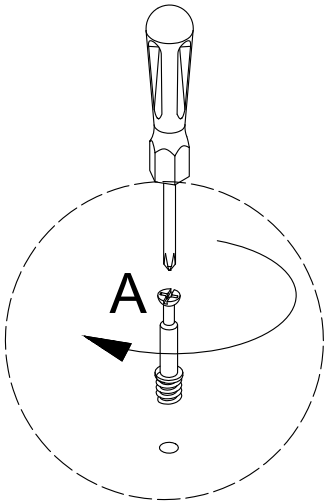


Step 6

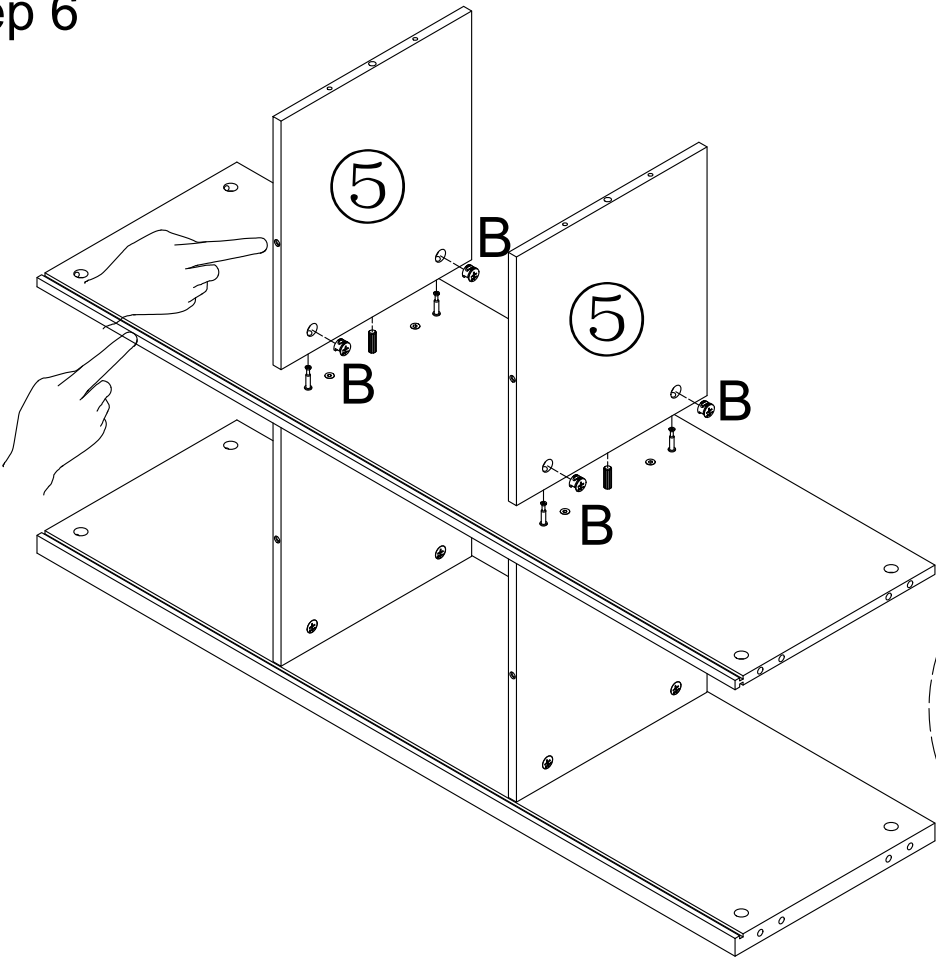


Hardware Needed

B		X4
---	---	----

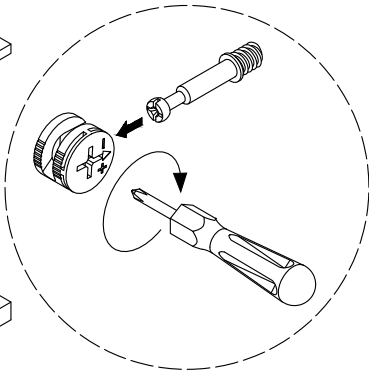


Step 7

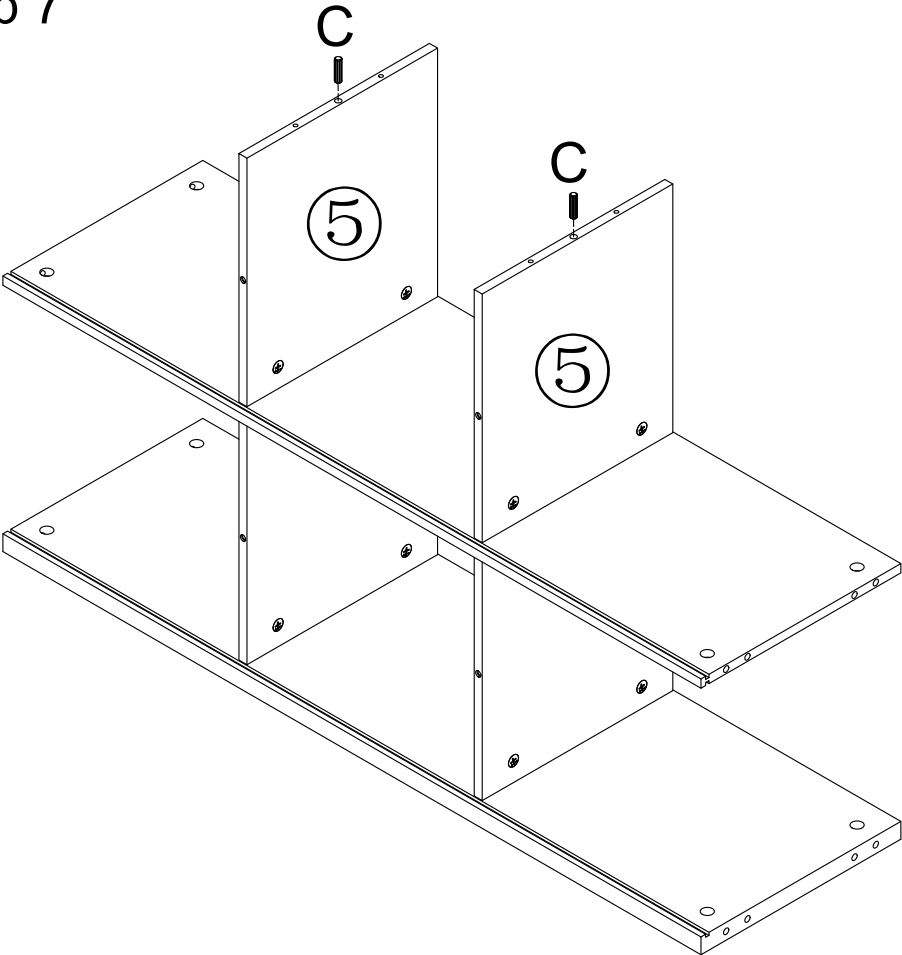


Hardware Needed

C		X2
---	---	----

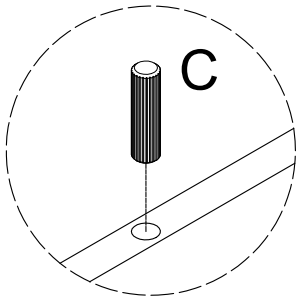


Step 8

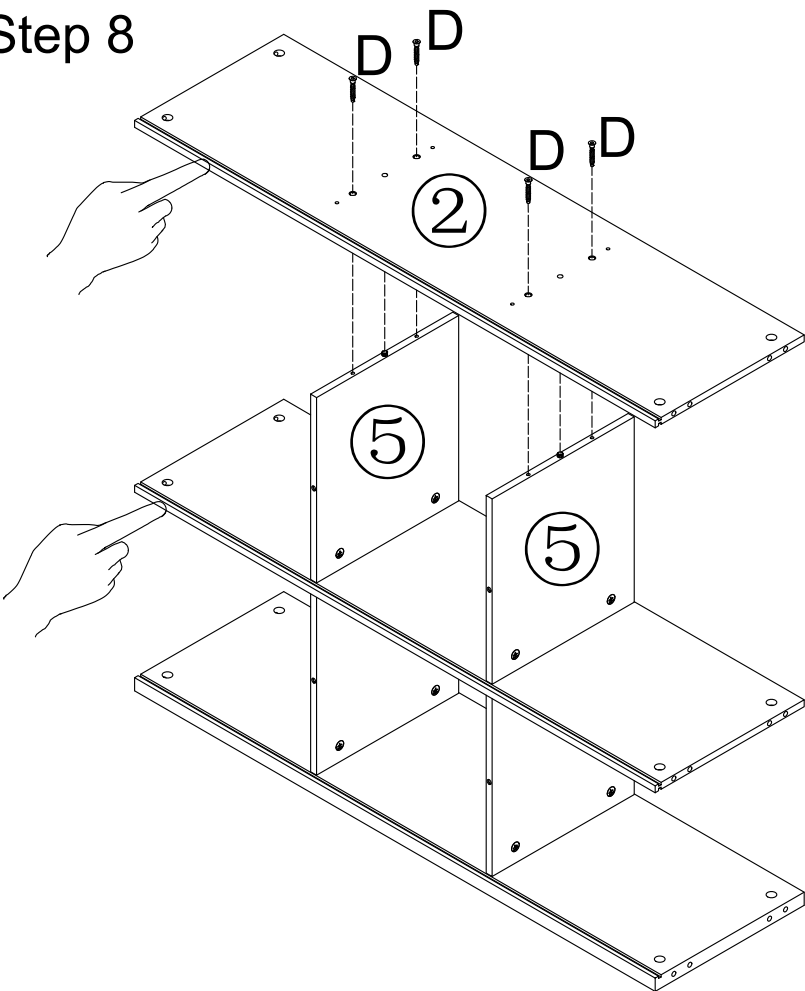


Hardware Needed

D		X4
K		X1

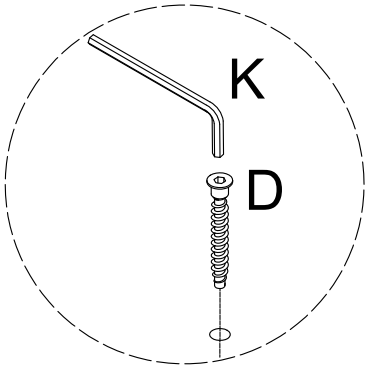


Step 9

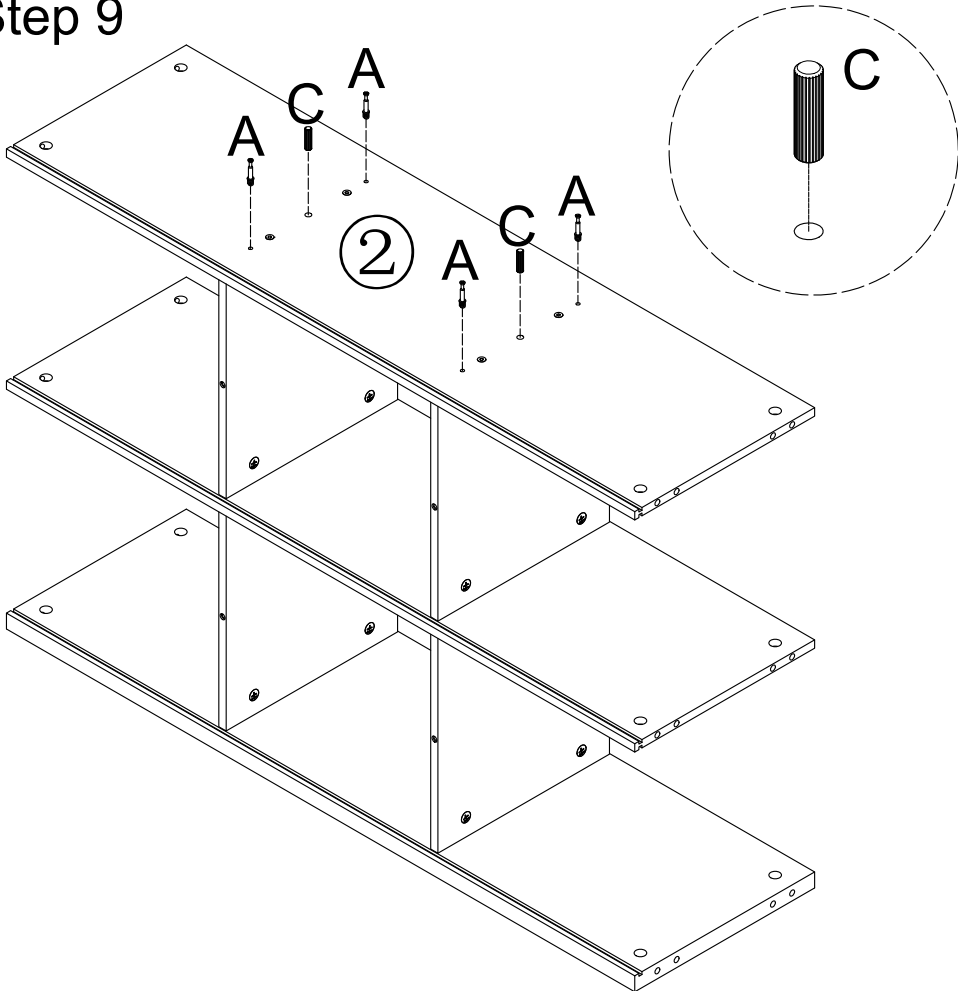


Hardware Needed


A		X4
C		X2

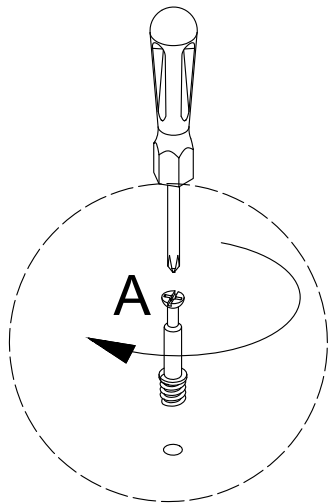


Step 10

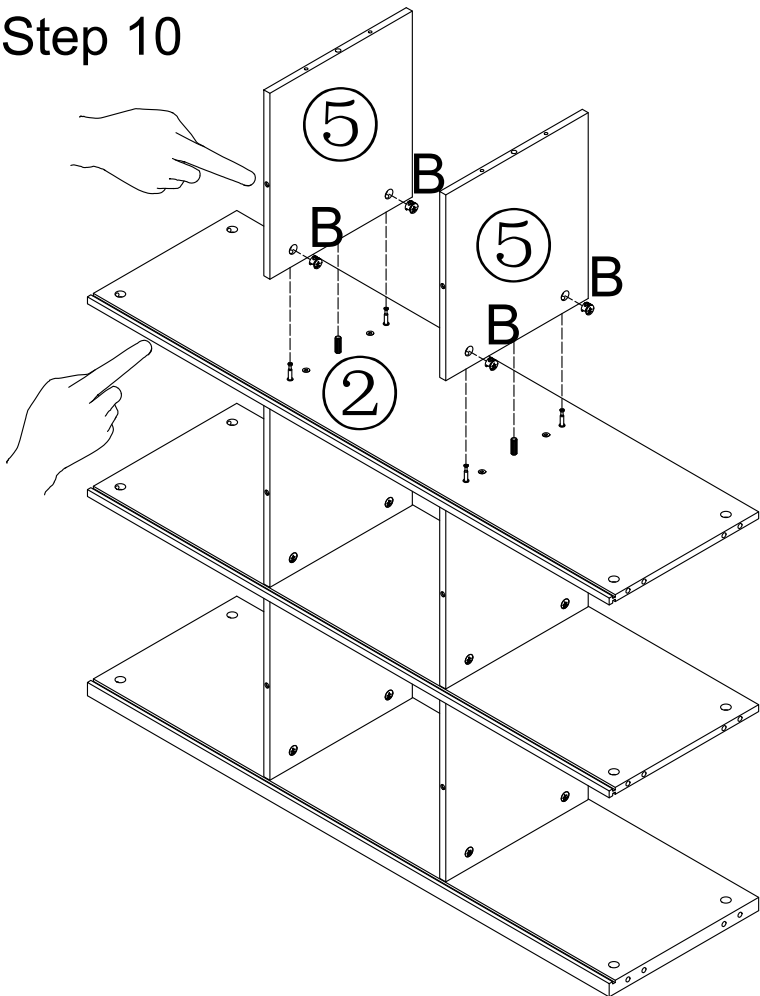


Hardware Needed

B		X4
---	---	----

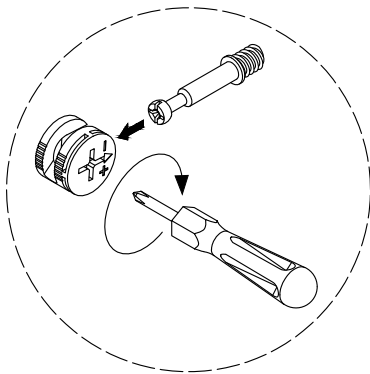


Step 11

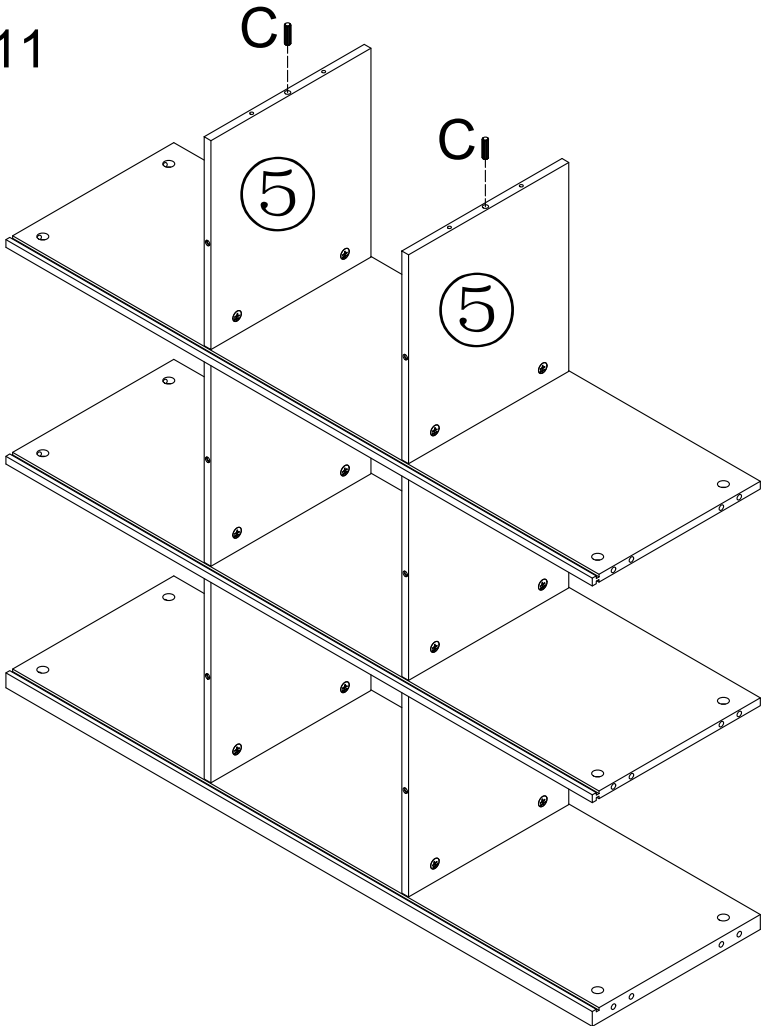


Hardware Needed

C		X2
---	---	----

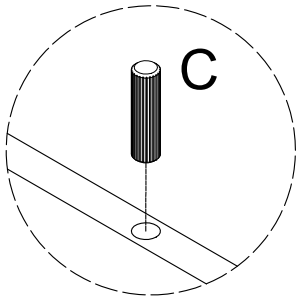


Step 12


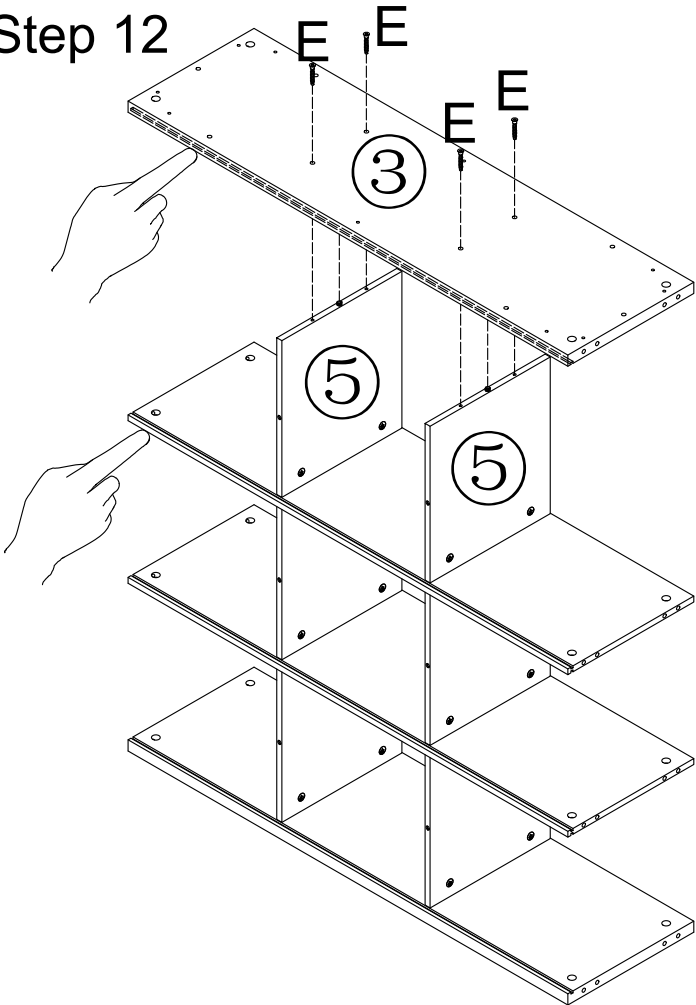


Hardware Needed


E		X4
K		X1

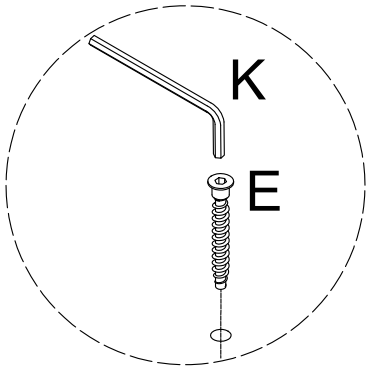

Step 13

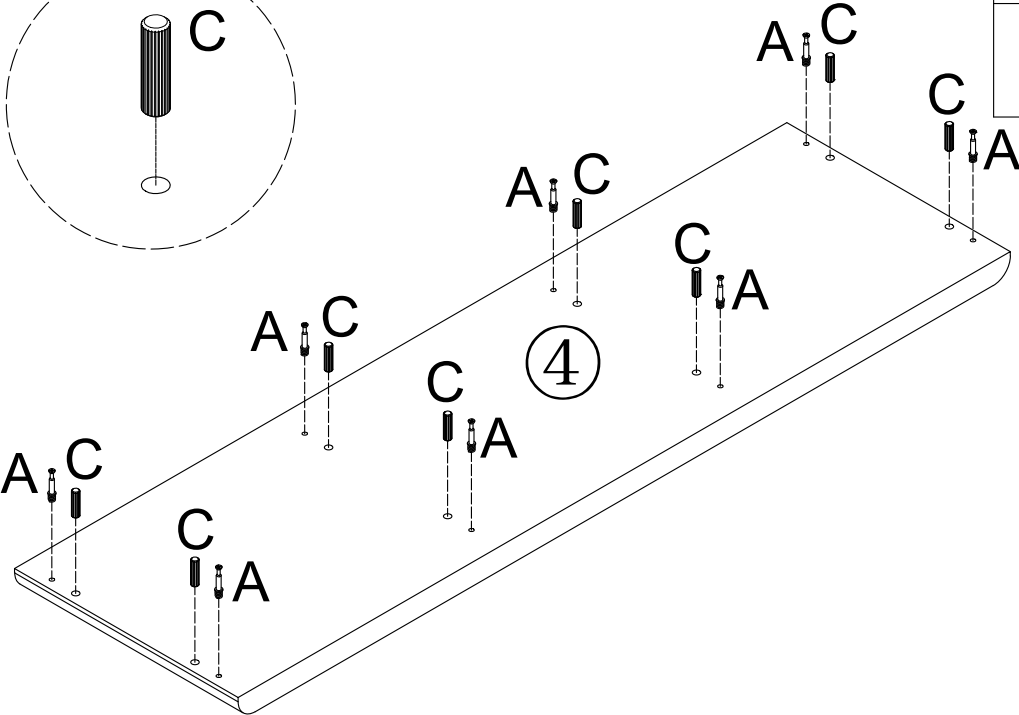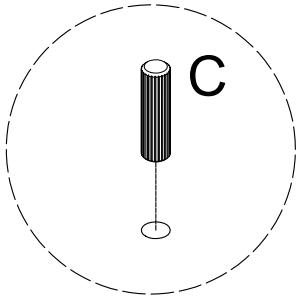



Hardware Needed		
A		X16
C		X16

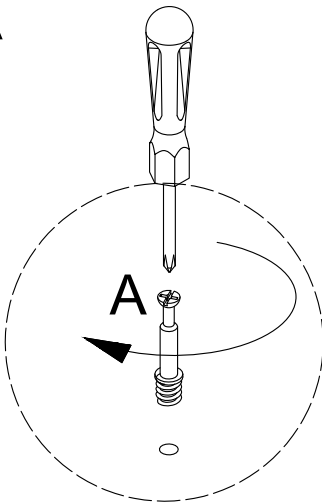


X2


Step 14

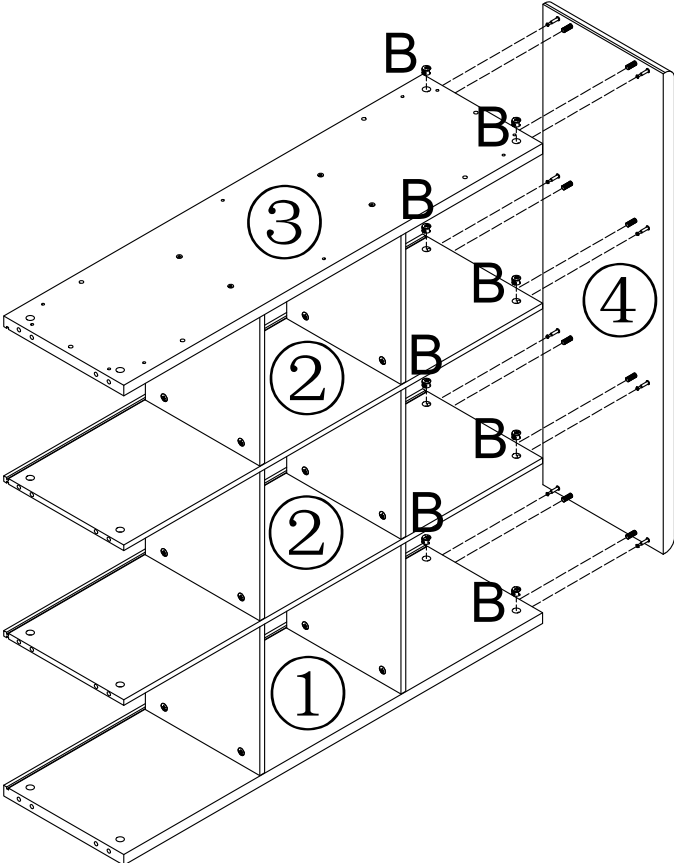


Hardware Needed		
B		X8

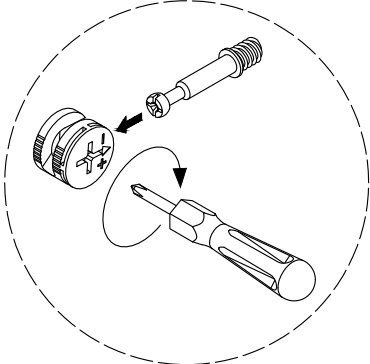


Step 15

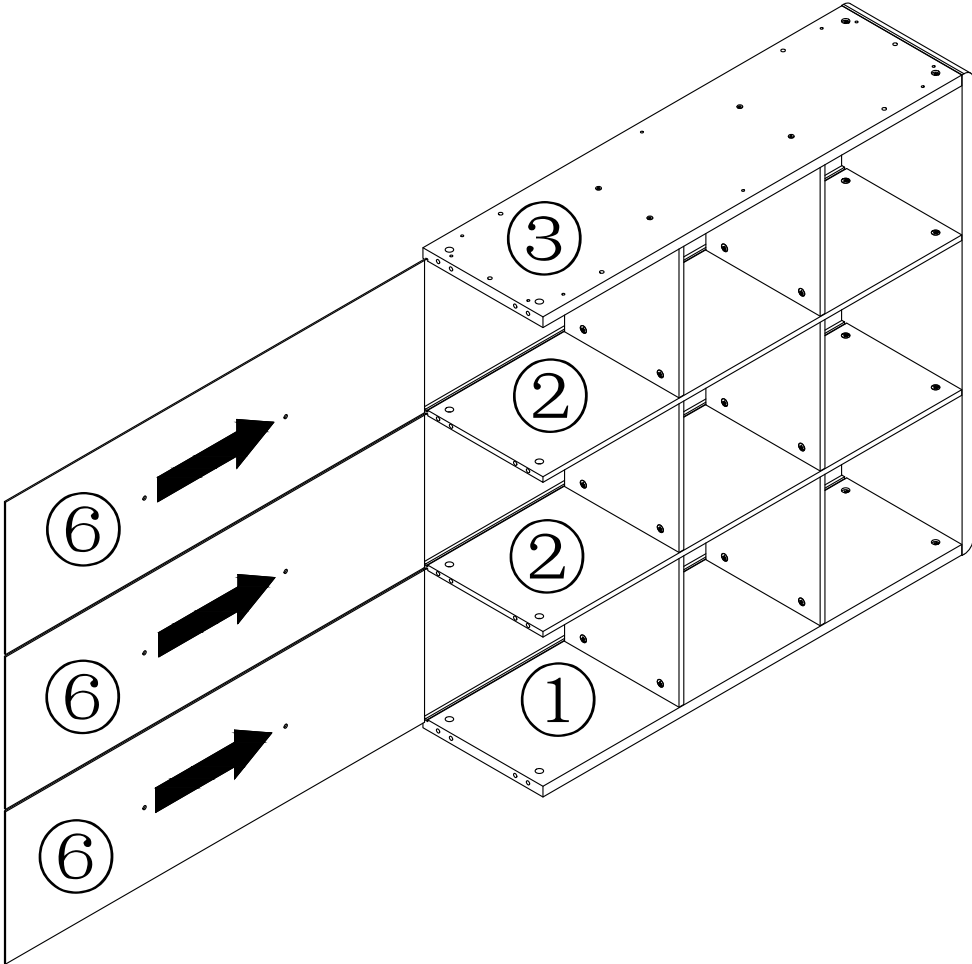



Step 16

Hardware Needed		
B		X8

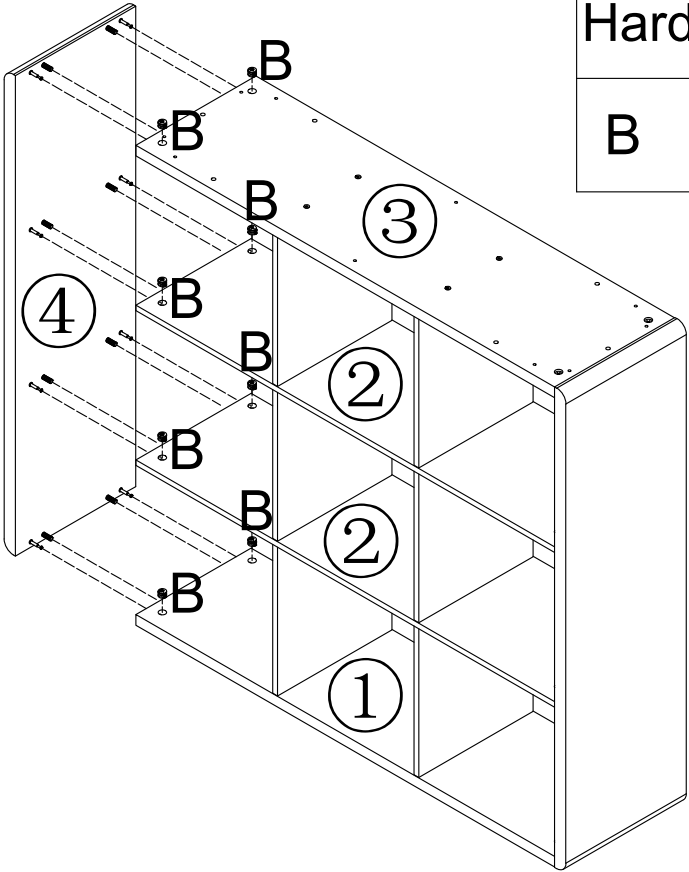



Step 17

Hardware Needed		
A		X4

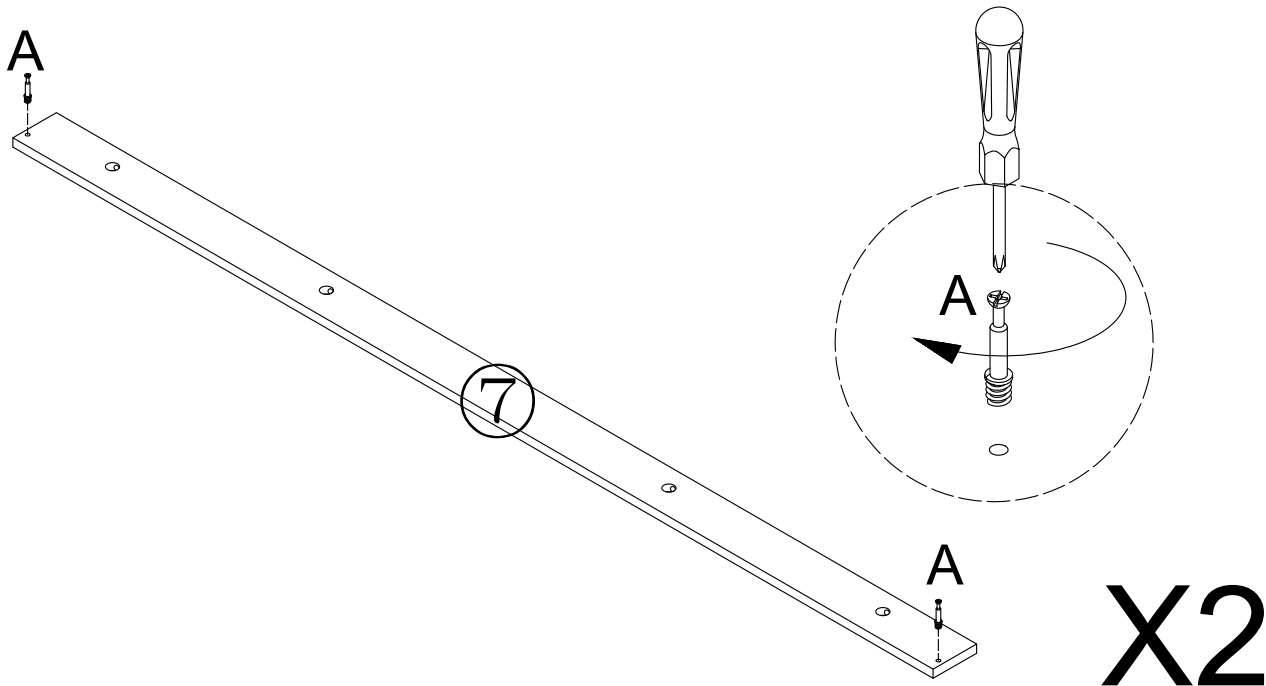


Step 18

Hardware Needed		
B		X4

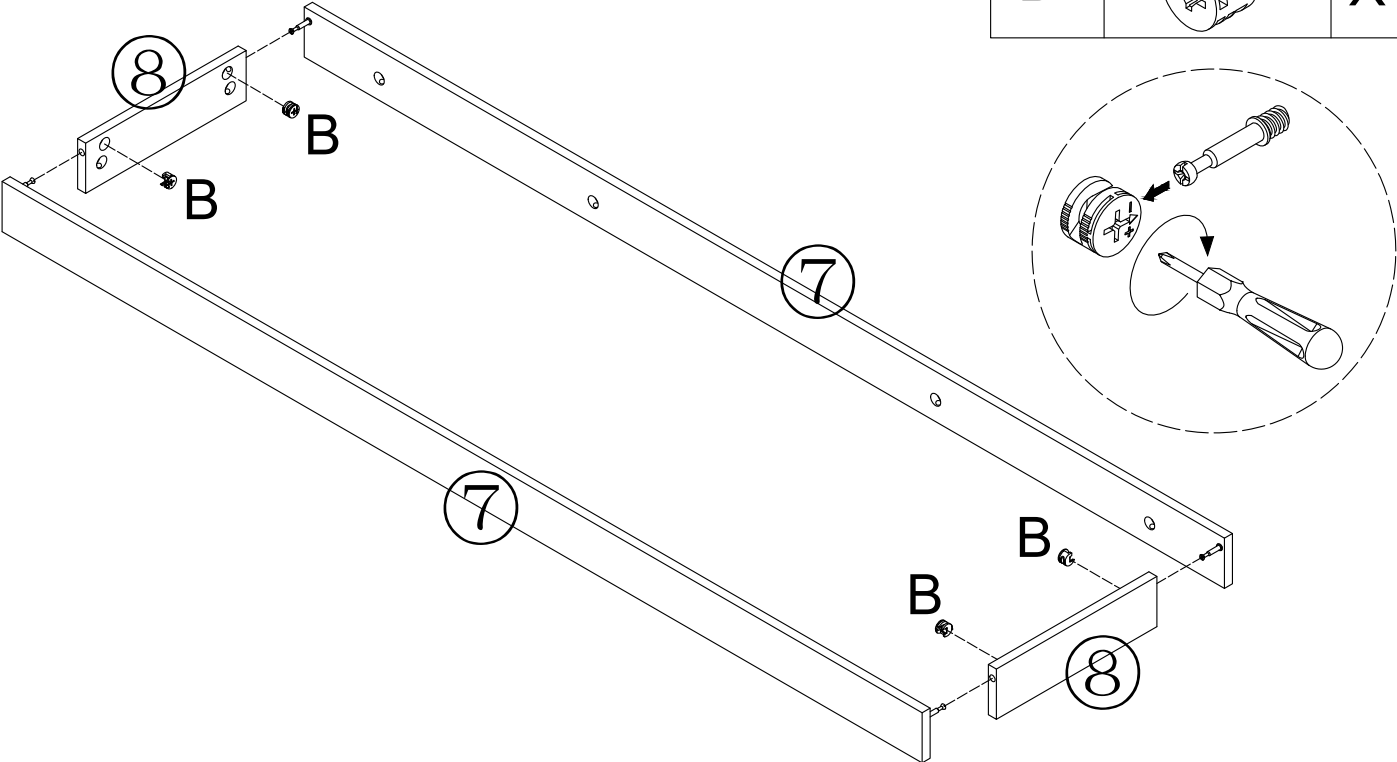


Step 19

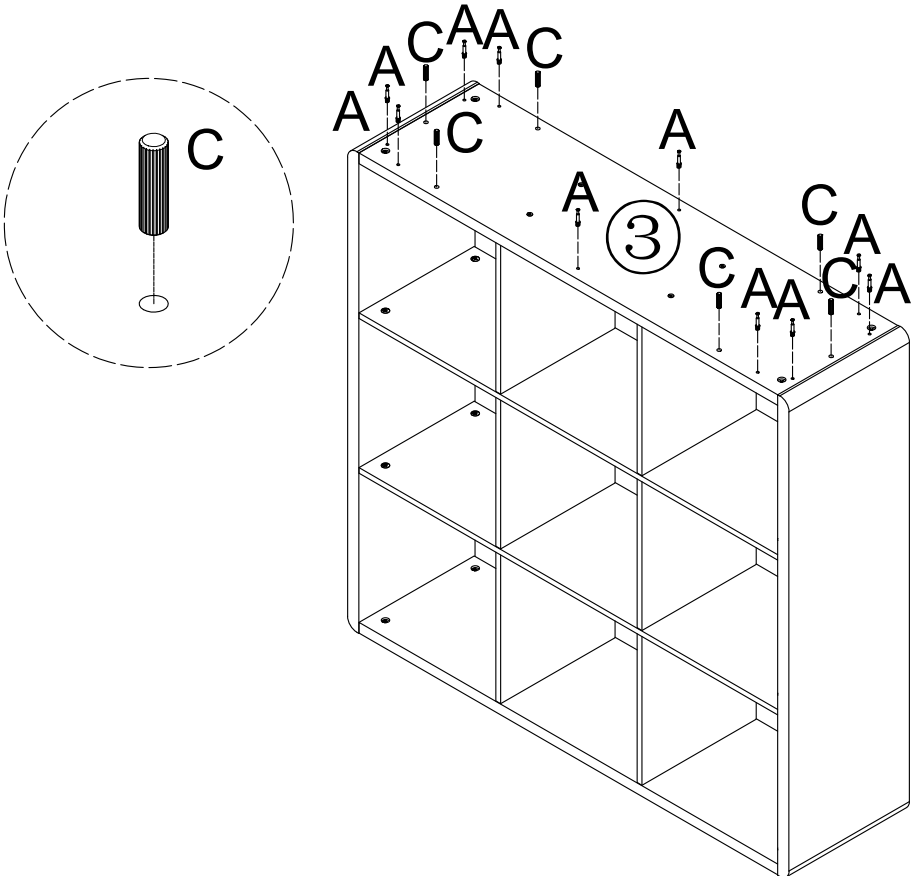


Hardware Needed


A		X10
C		X6

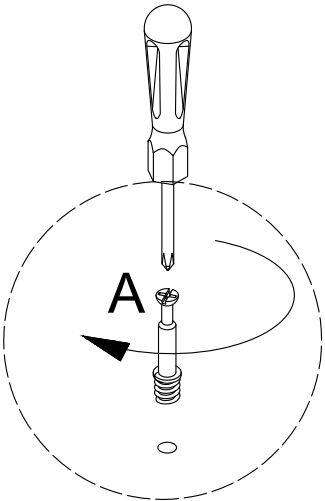


Step 20

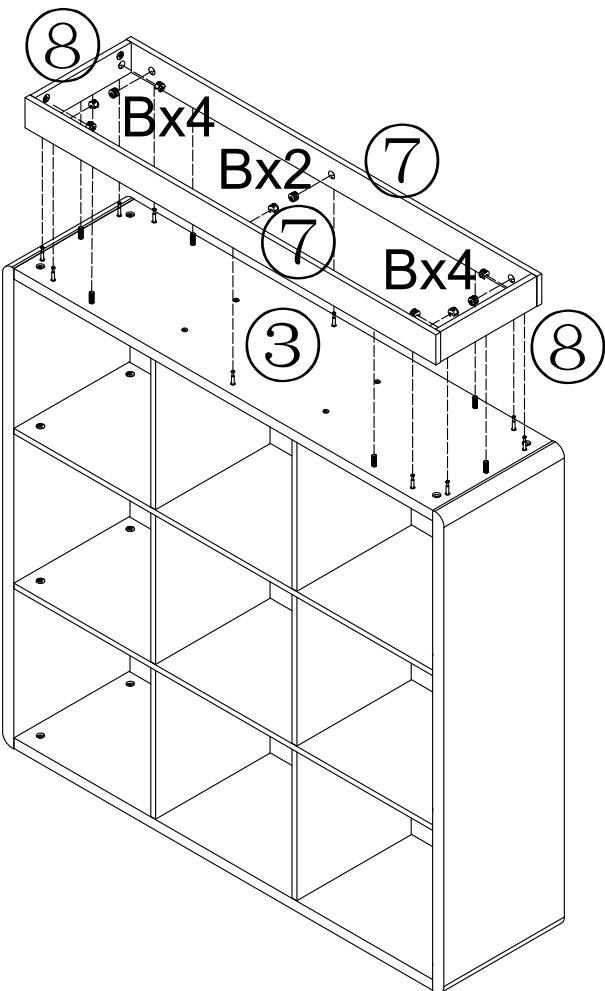


Hardware Needed


B		X10
---	---	-----

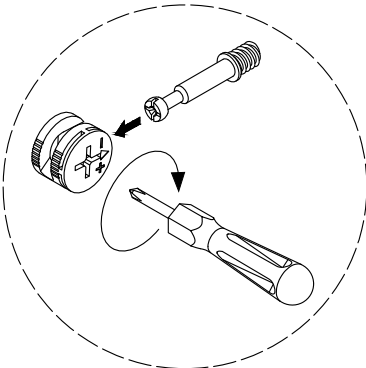


Step 21

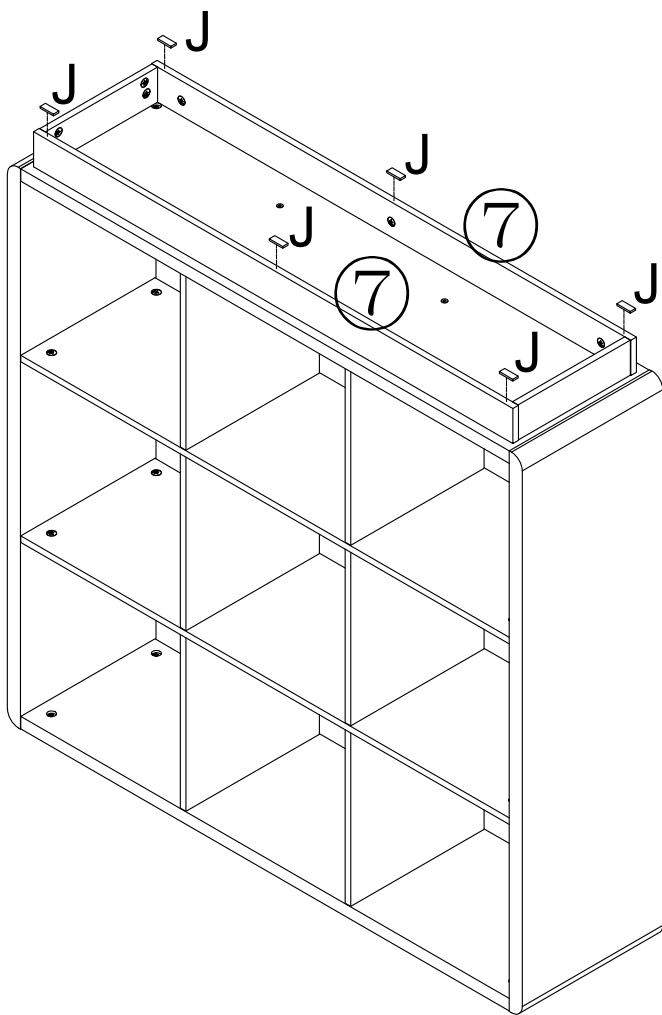


Hardware Needed


J		X6
---	---	----

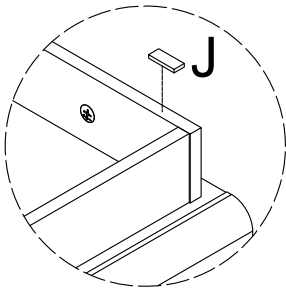


Step 22


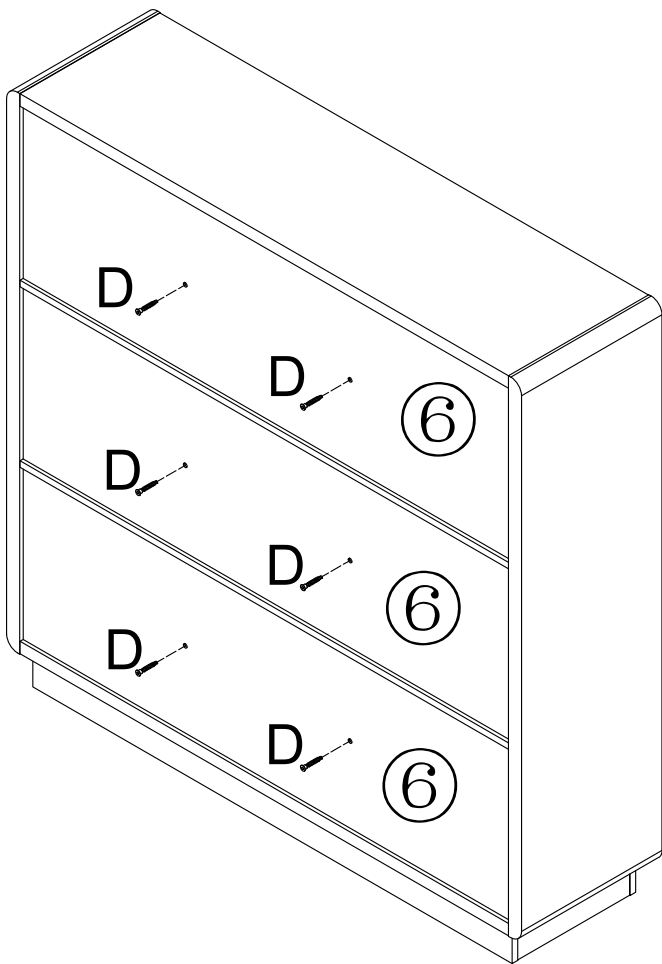


Hardware Needed

D		X6
K		X1

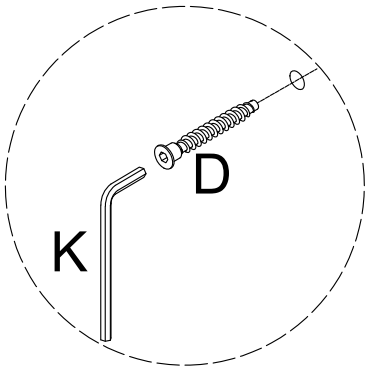


Step 23

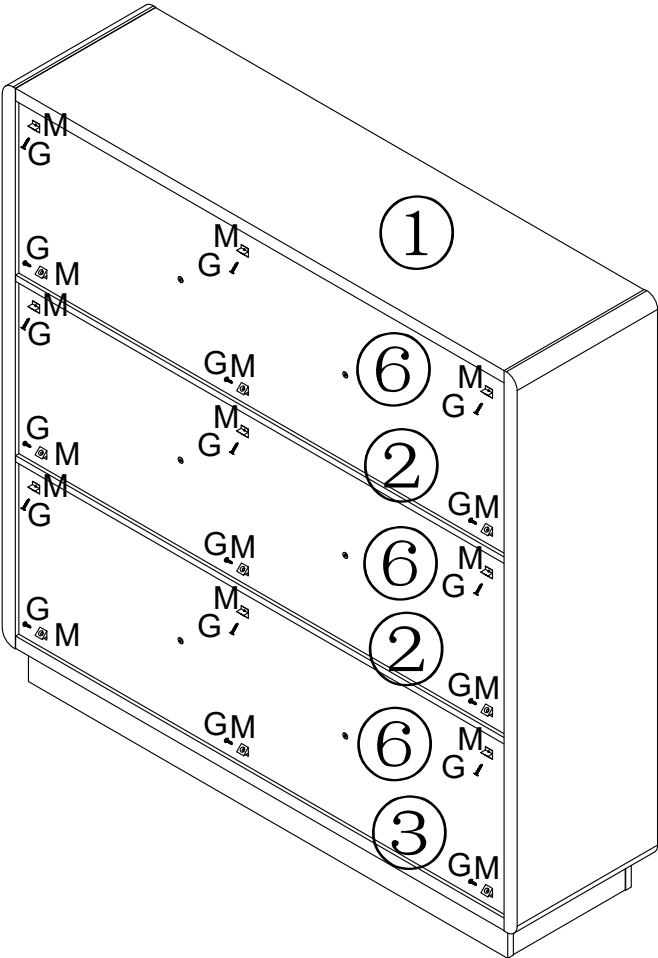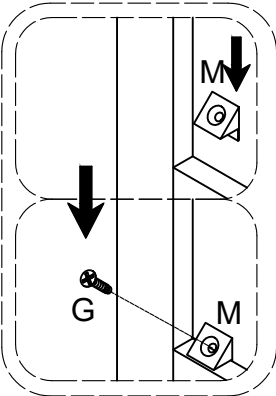


Hardware Needed



G		X18
M		X18

Step 24

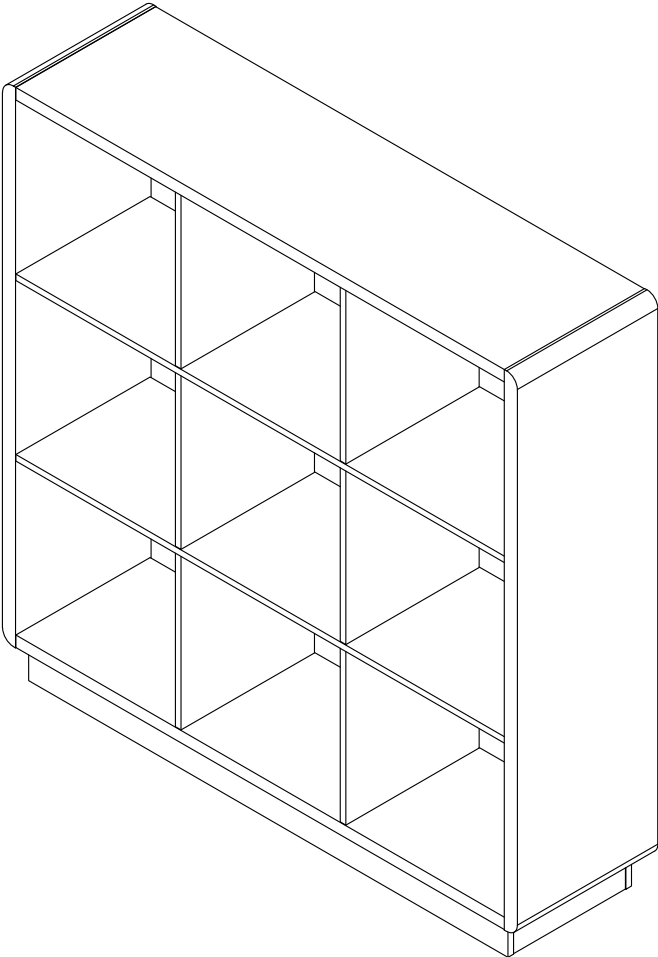


Hardware Needed

N		X30
---	---	-----

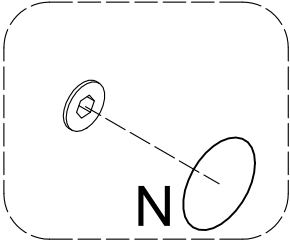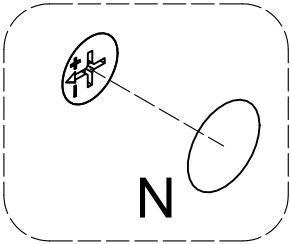


Step 25

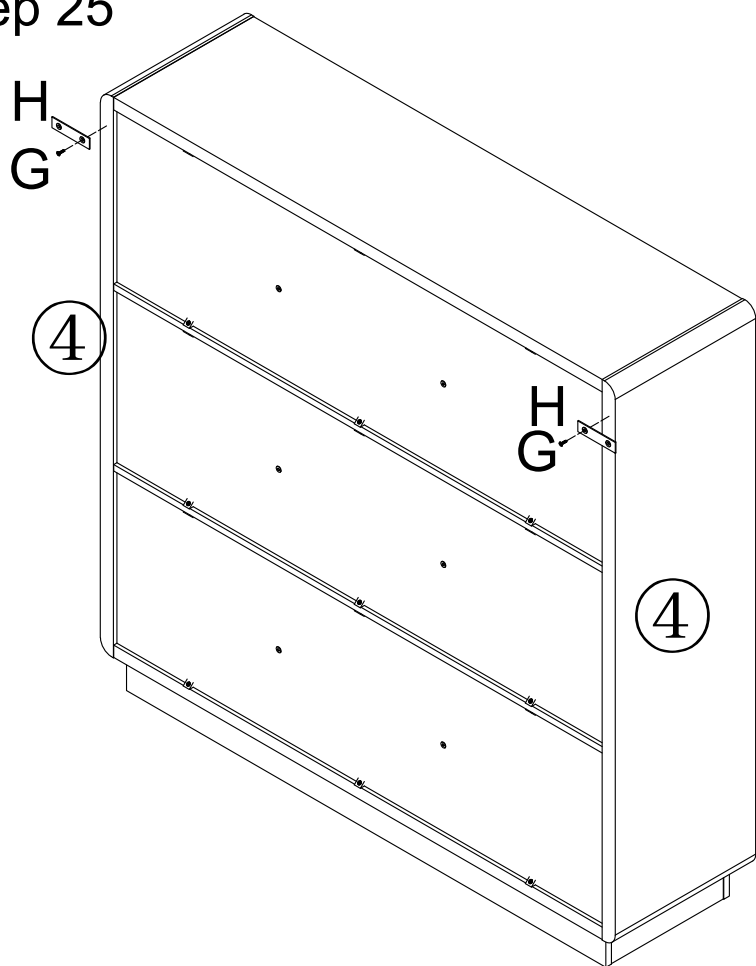


Hardware Needed



G		X2
H		X2

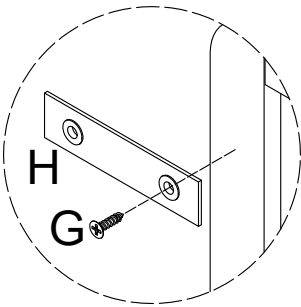

Step 26

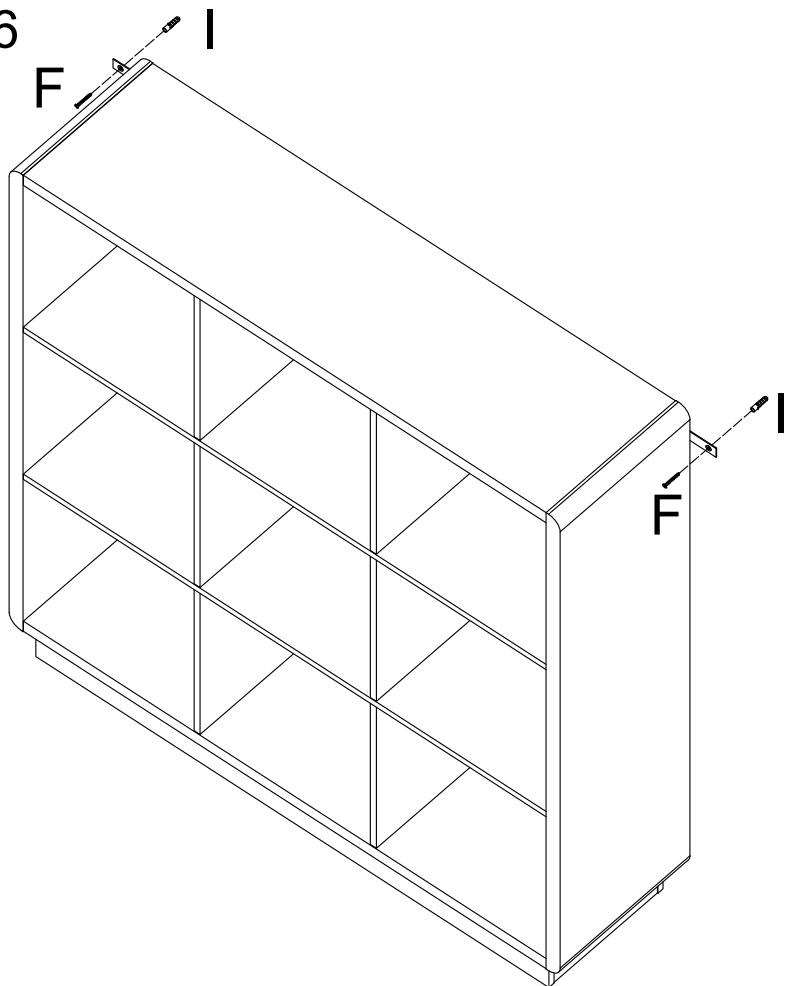

Hardware Needed

F		X2
I		X2

