



Furniture Co.

Assembly Instructions

**Homestead Bed Frame
(Twin, Full or Queen)**



*Thank you for choosing **A&L Furniture Co.***

*We hope that this bed frame brings you
many years of enjoyment!*

For help with assembling your furniture,
or if you have missing hardware, please email us at
helpalf@ibyfax.com or call us at 814-349-8203

PARTS (included)


(A) Right Posts (2)

(B) Left Posts (2)

(C) End Rails (2)

(D) Side Rails (2)

(E) Slat Roll (1)

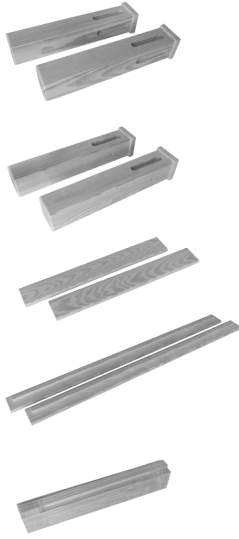

HARDWARE (included)

(a) 3½" Bolts (12)

(b) 1¾" Screws (28)

(c) Allen Wrench (1)

(d) Square Drive Bit (1)



TOOLS NEEDED

Screwgun

STEP 1

Attach the posts to the end rails with the notches up. (Note: There are right and left posts, be sure they are in the right place before fastening.) Insert the bolts through the posts and screw into the metal inserts in the end rails with the Allen wrench. (See photos 1 & 2.)

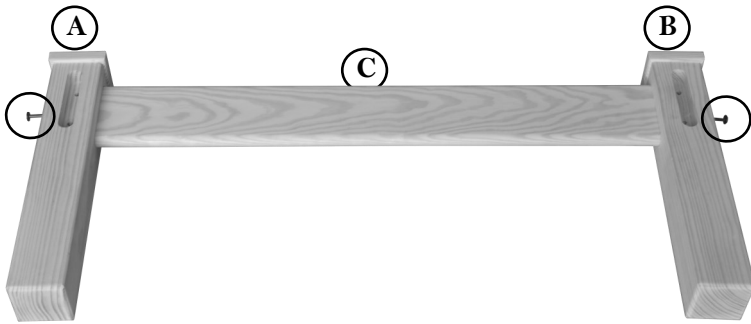


photo 1

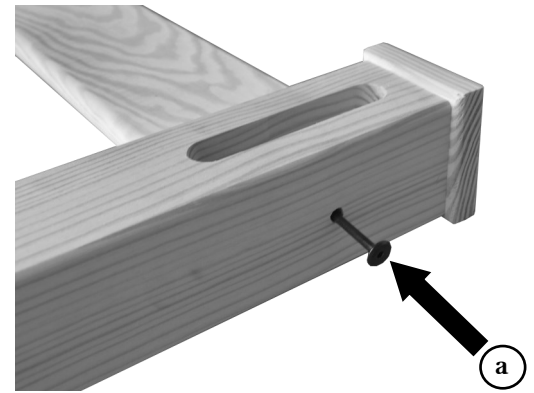


photo 2

STEP 2

Attach the side rails to the posts. Insert the bolts through the posts and screw into the metal inserts in the side rails with the Allen wrench. (See photos 3 & 4.)

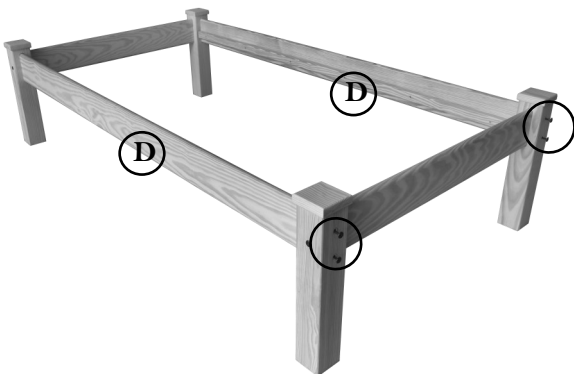


photo 3

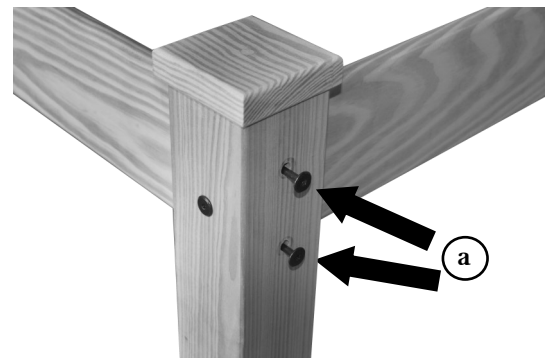


photo 4

STEP 3

Cut the wrap on the slat roll and unroll them on the bed frame with the string facing up. (See photo 5.) Fasten each slat at both ends to the side rails with $1\frac{3}{4}$ " screws keeping the string taut as you go along. (See photos 6 & 7.) Use your power drill or screwgun to drive the screws with the included square drive bit. Note: The screws are self-drilling. You shouldn't need to predrill, however, doing so will make them easier to drive. Use drill bit no larger than $\frac{7}{64}$ ".



photo 5



photo 6

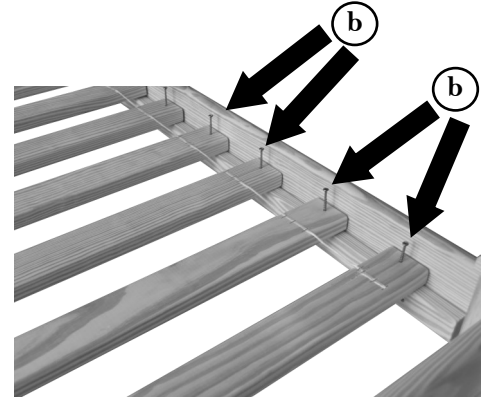


photo 7