



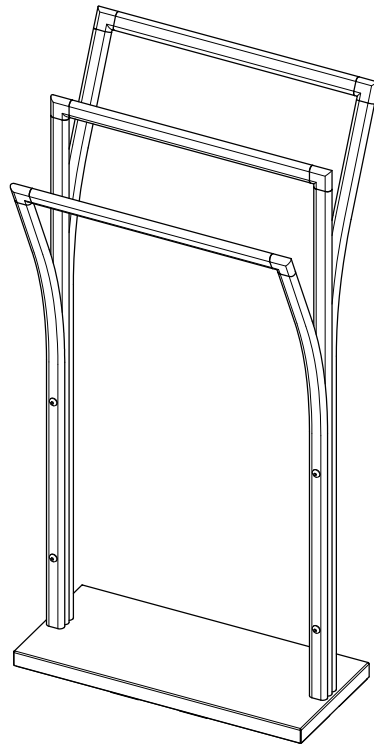

Pedestal Y Style Steel Frame Towel Rack Installation Instructions

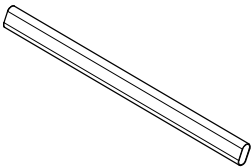

Parts:

Straight Tube			J Shape(long)	J Shape(short)	Two-way connector
			 2 Pcs	 2 Pcs	 6 Pcs
			Washer  2 Pcs	Screw(long)  2 Pcs	Sleeve & Screw(short)  4 Pcs
A	13-3/4"	3 Pcs			
B	29"	2 Pcs			


www.kingstonbrass.com

TOLL-FREE CUSTOMER SERVICE: 1-877-2-KBRASS

TECHNICAL SUPPORT E-mail: service@kingstonbrass.com

12775 Reservoir Street, Chino, CA 91710


Tools Required



Rubber Mallet



Allen Wrench

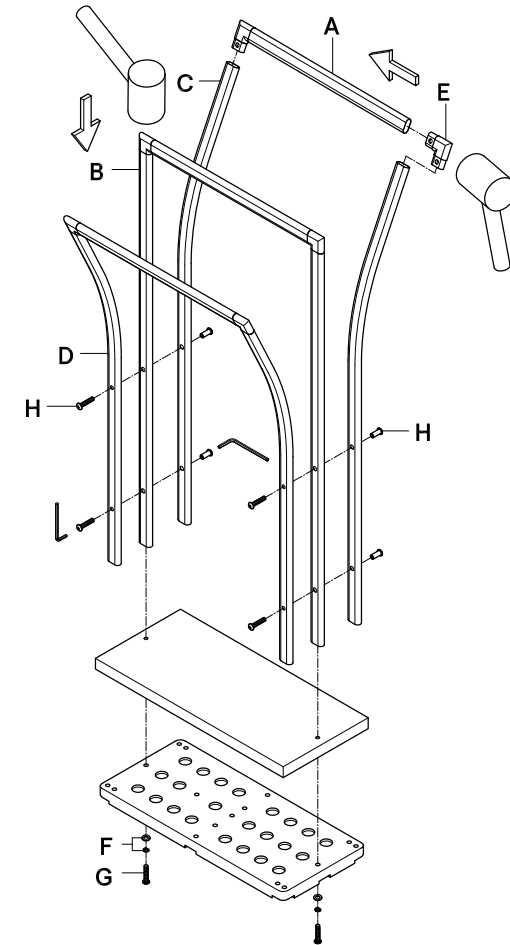

Installation Steps:

Step 1. Using a rubber mallet, gently tap the two-way connectors (part E) into the straight tube (part A). Repeat on the other side and for the remaining 2 pieces.

Step 2. After completing step 1 with parts A. Locate parts B, C, D and E.

Step 3. Secure the straight tube (part B) and J Shape (part C, D) together using the provided sleeves, short screws (part H) and an Allen wrench. Repeat for the other end.

Step 4. Locate the base, then use the long screws (part G) and washers (part F) provided to secure it to the base and parts B by tightening with an Allen wrench.

Cleaning

Clean with a damp cloth only.
Avoid using metal or abrasive polishes.