


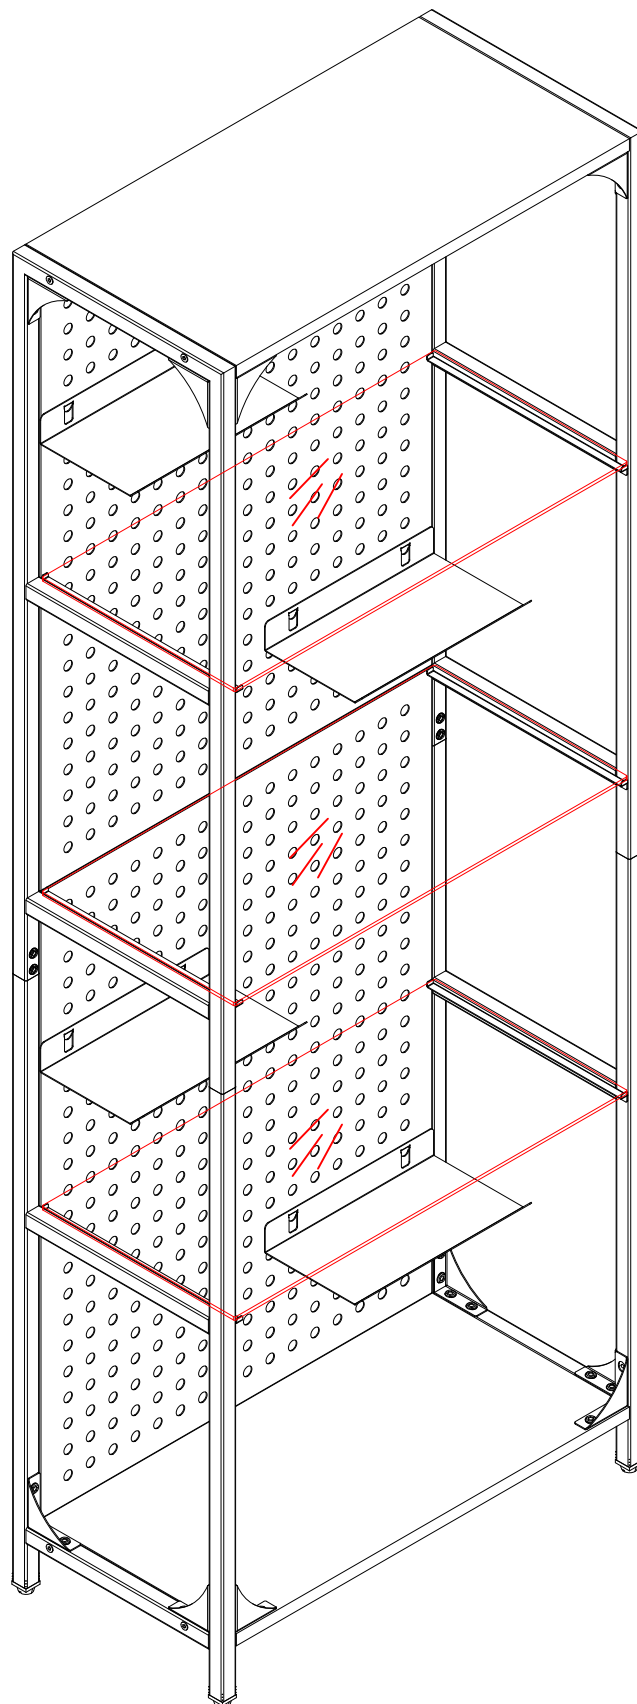
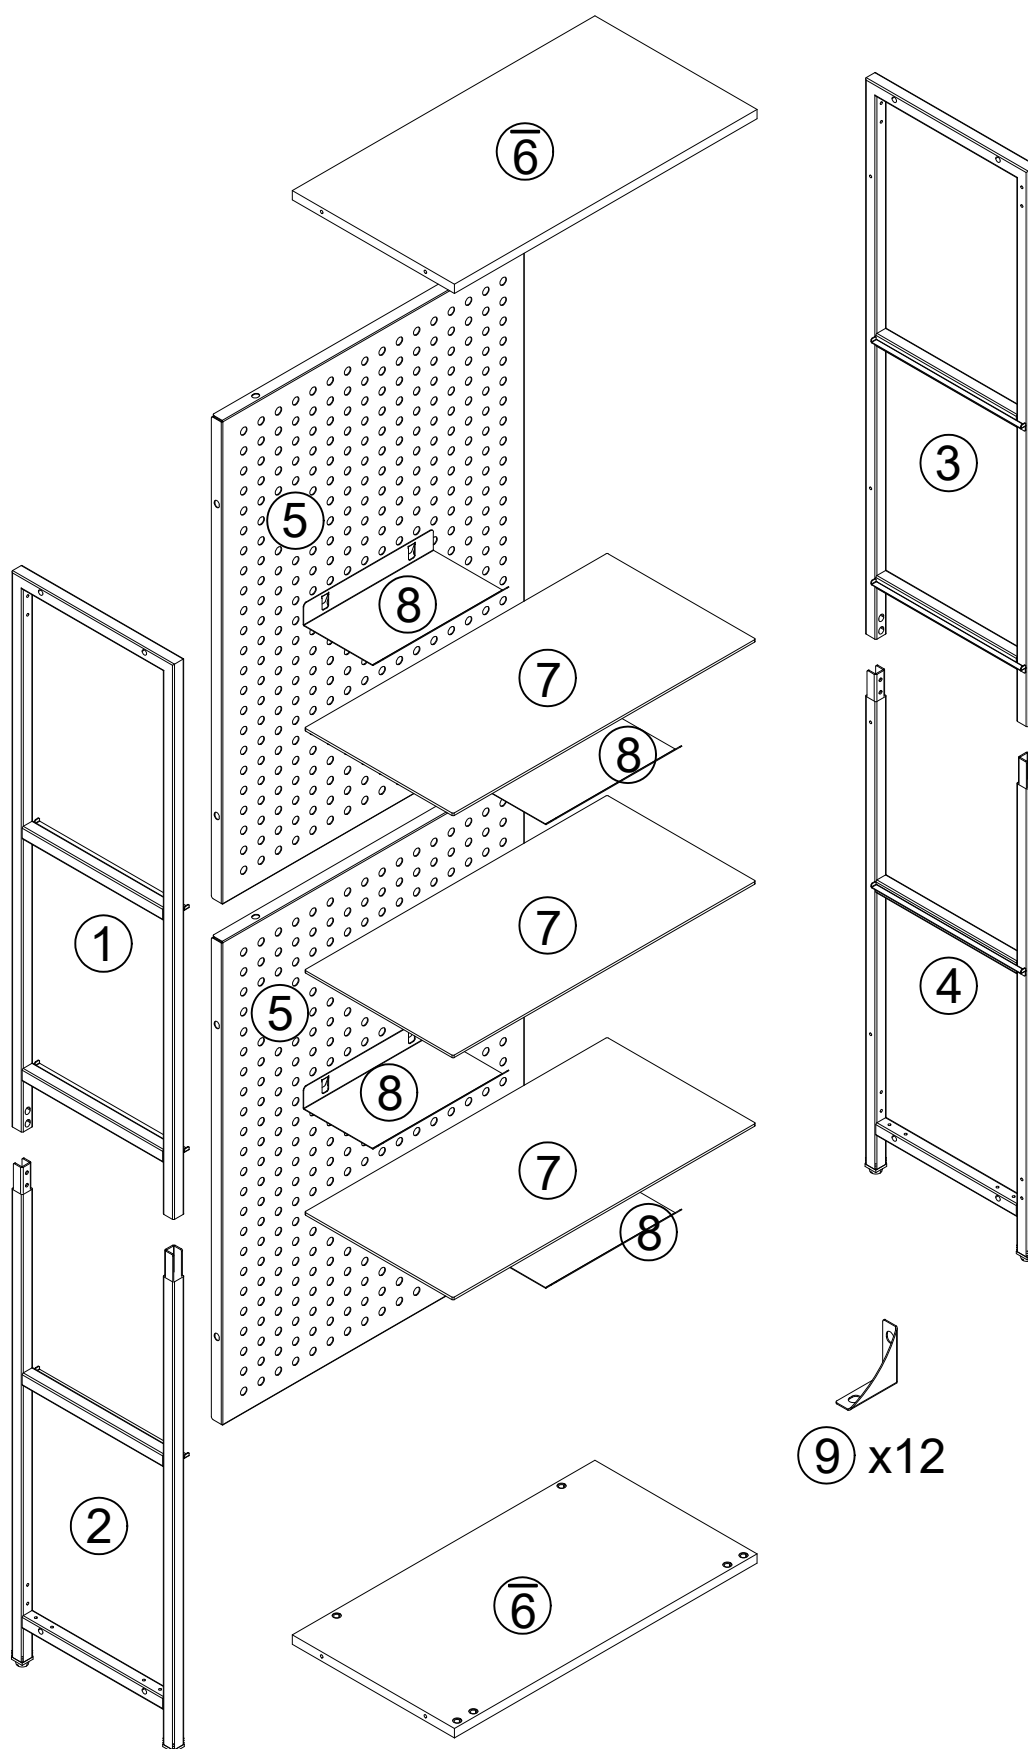
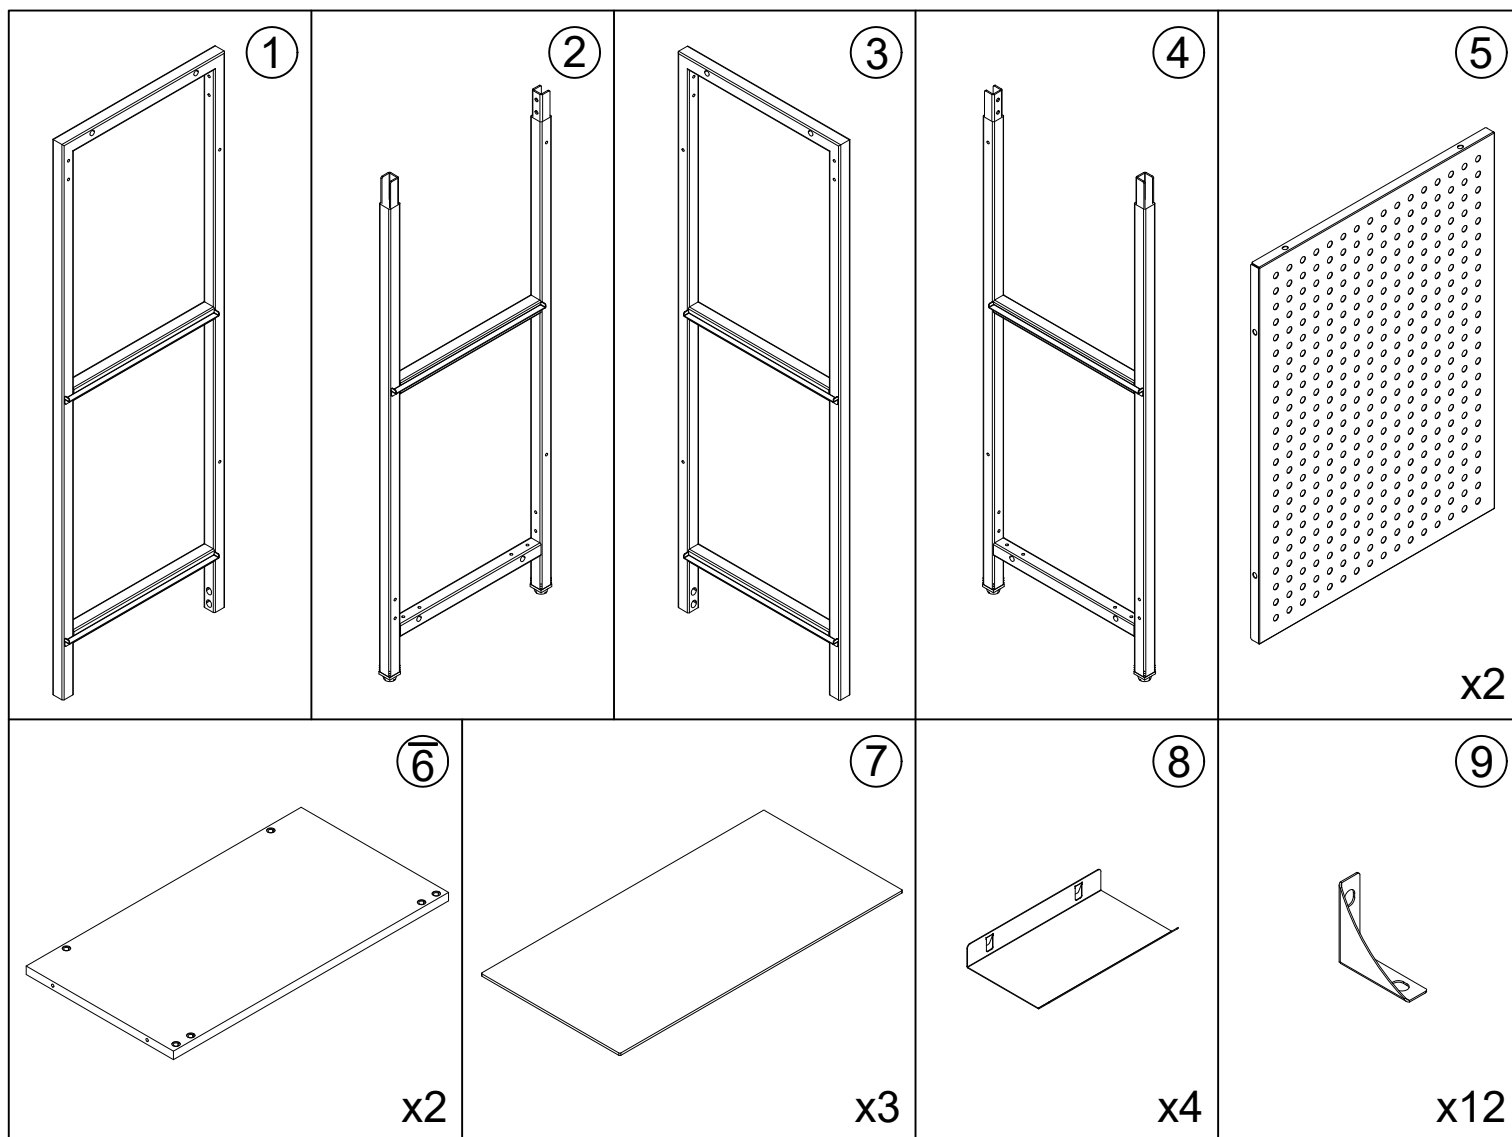

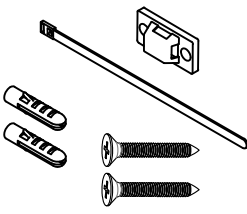



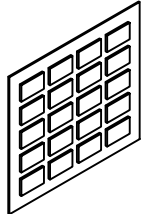

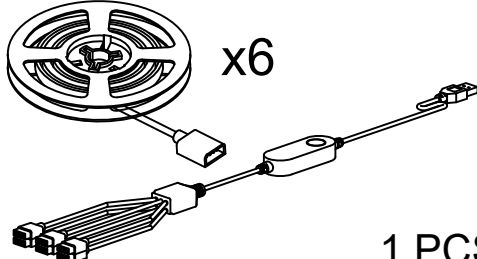

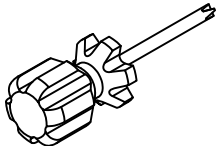


A M7x50	B M6X8	C M6	D	E
 8 PCS	 70 PCS	 2 PCS	 2 PCS	 14 PCS
F	G		4#	
 20 PCS	 x6 1 PCS		 1 PCS	 1 PCS

(B) M6X8


16 PCS

1

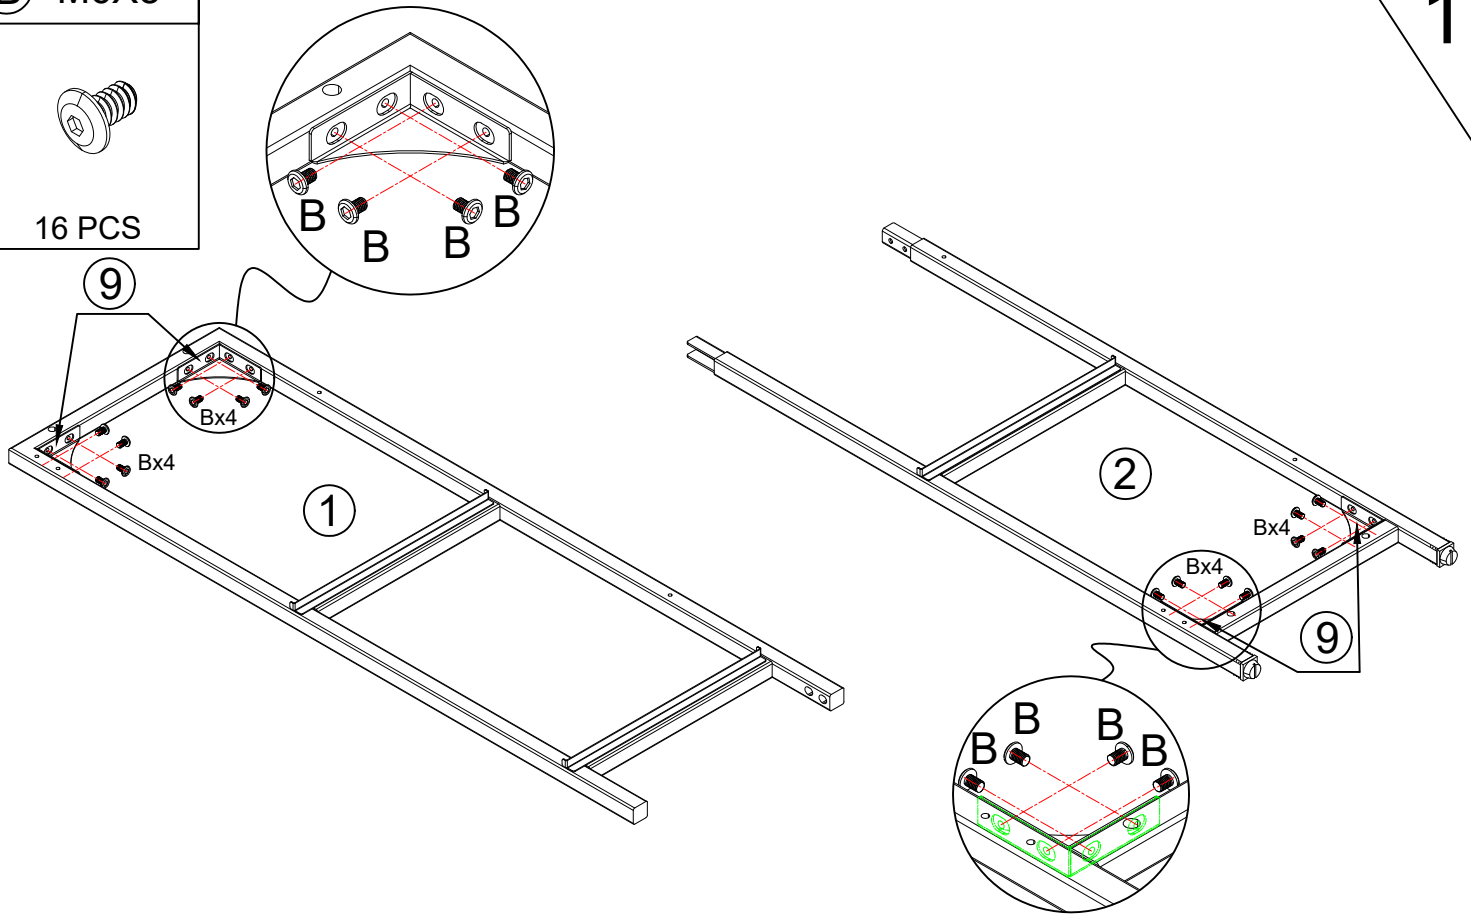**(B)** M6X8

16 PCS

2

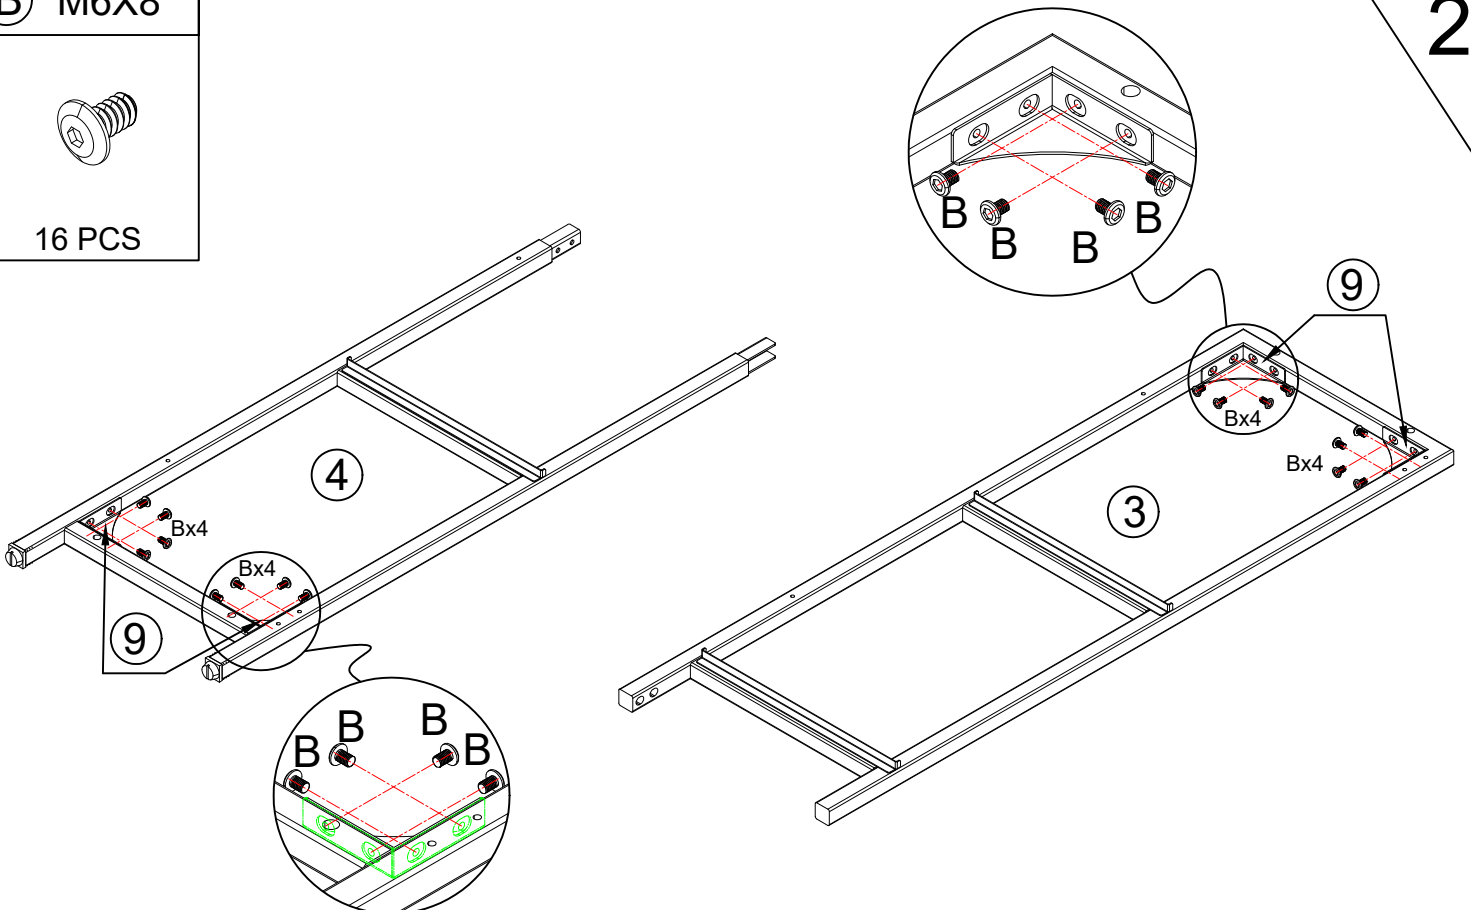


(B) M6X8



4 PCS

3

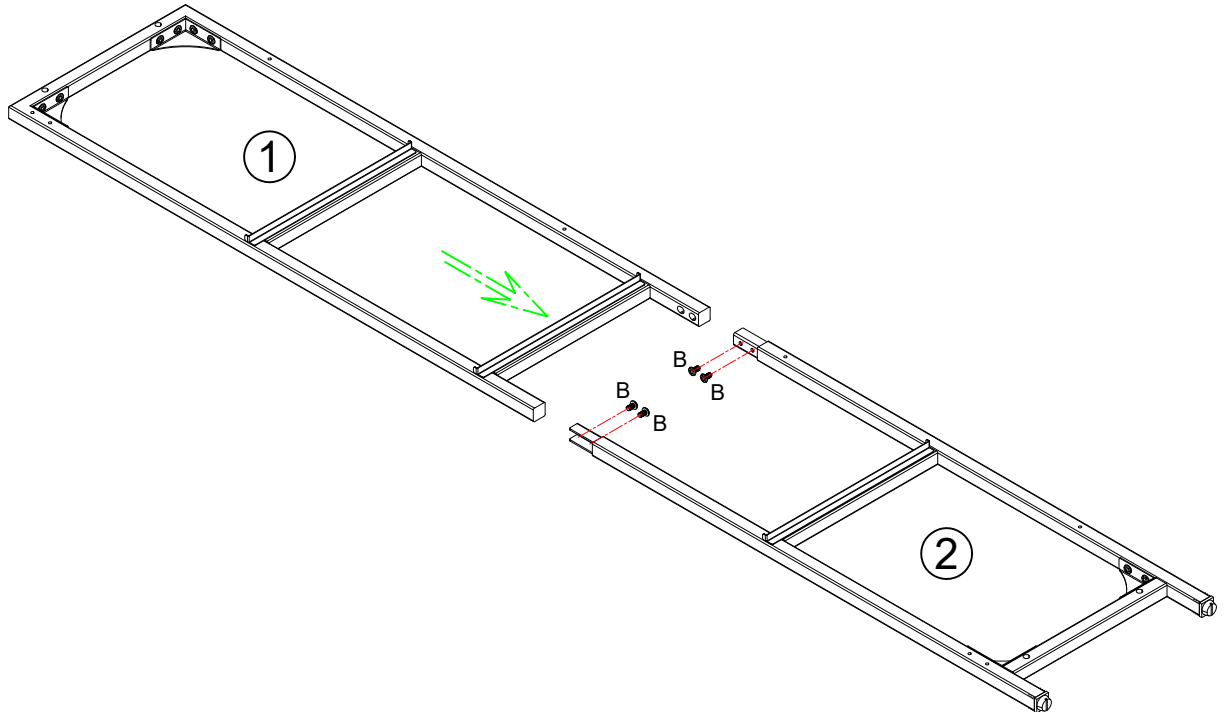


(B) M6X8



4 PCS


4

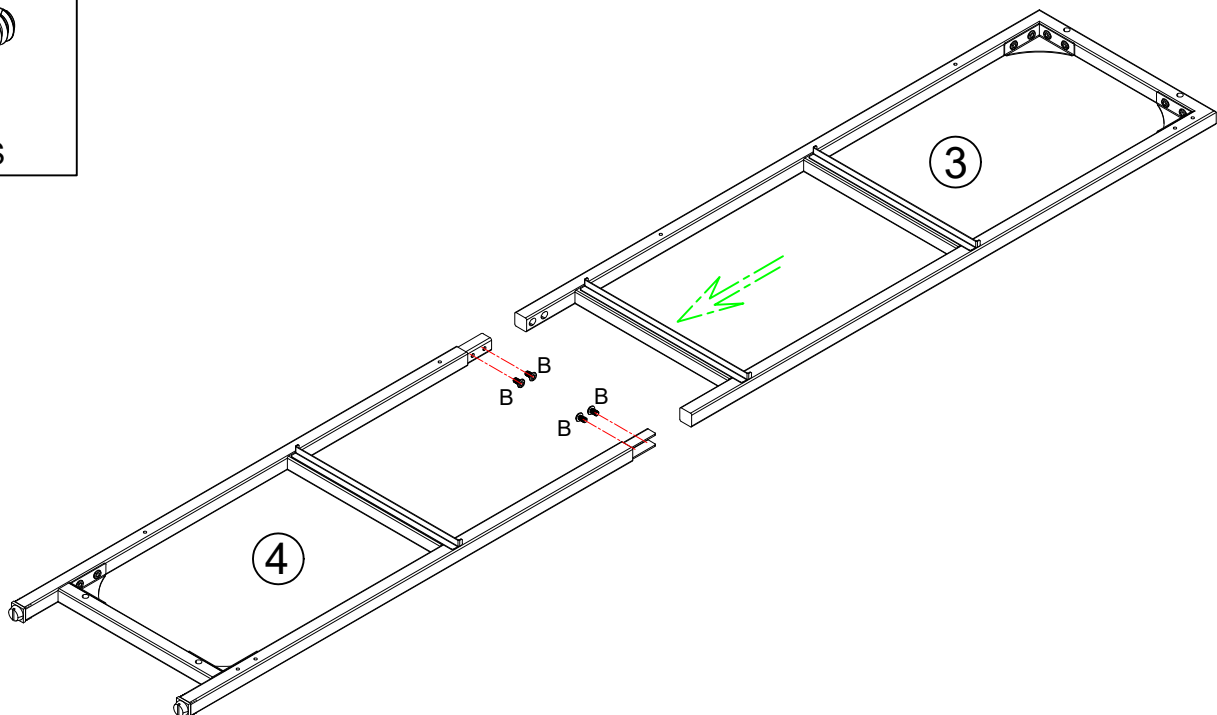

(B) M6X8



8 PCS

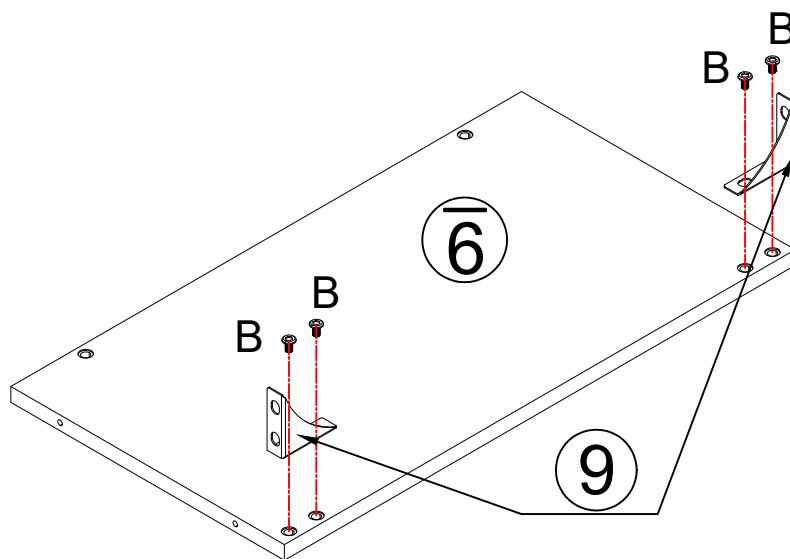

(B) M6X8


(C) M6



2 PCS




2 PCS

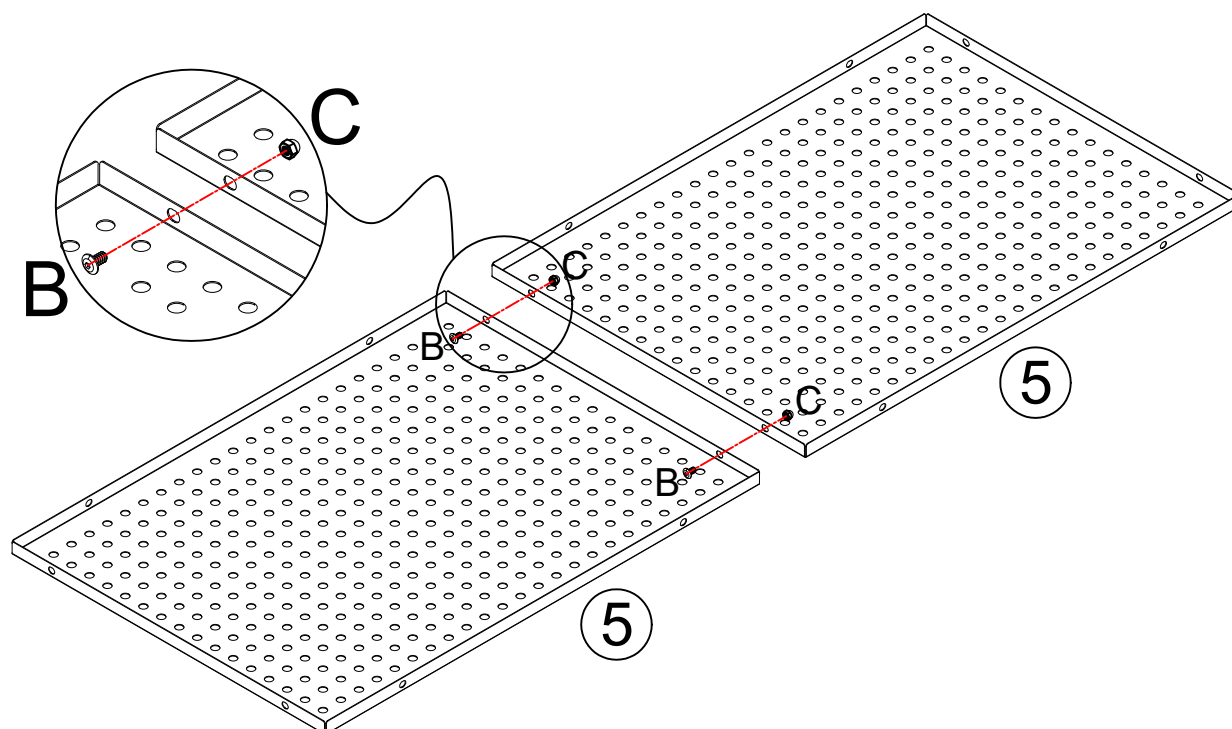

(B) M6X8



4 PCS

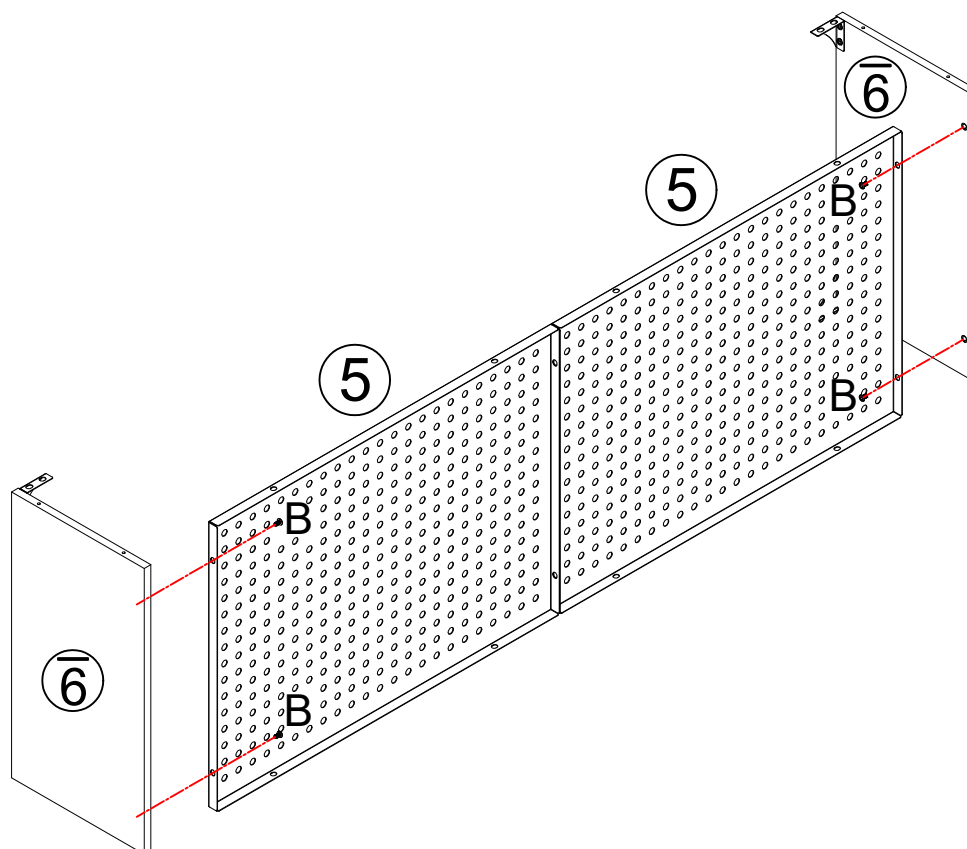


(B) M6X8




4 PCS

(A) M7x50



4 PCS

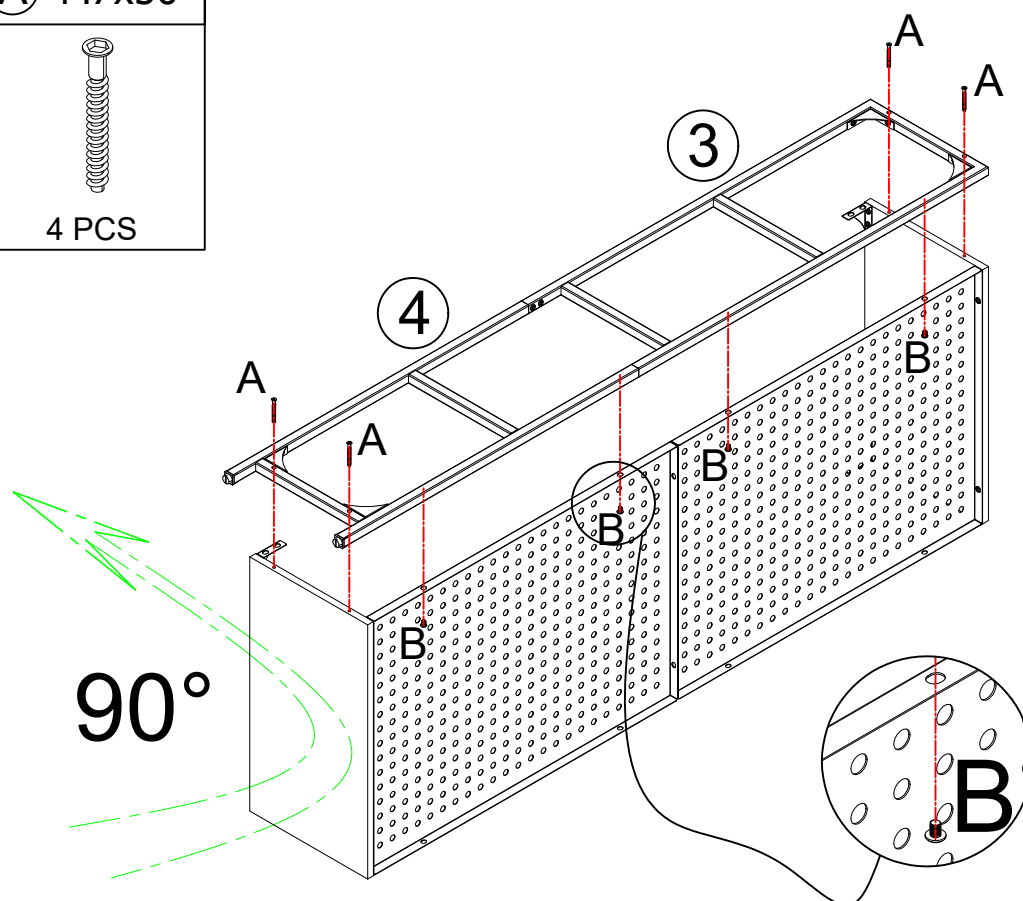

(B) M6X8


(A) M7x50



4 PCS



4 PCS

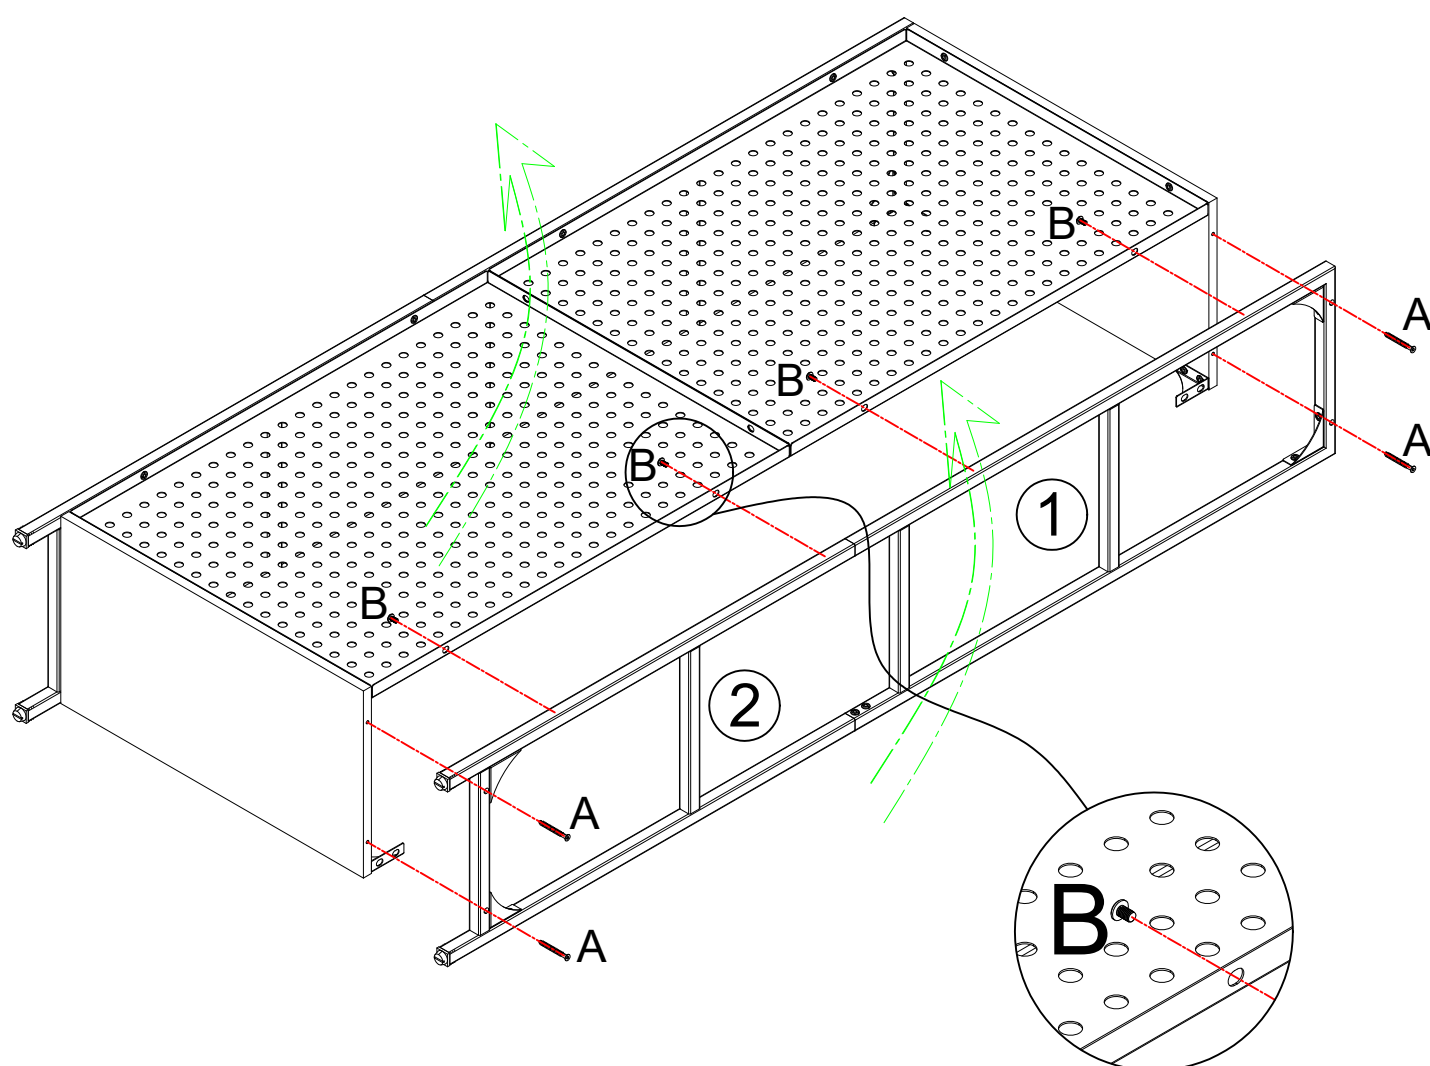


(B) M6X8

(F)













8 PCS



20 PCS

F

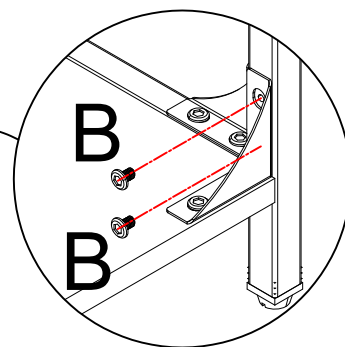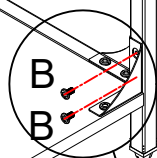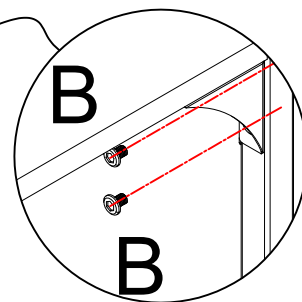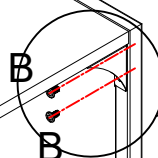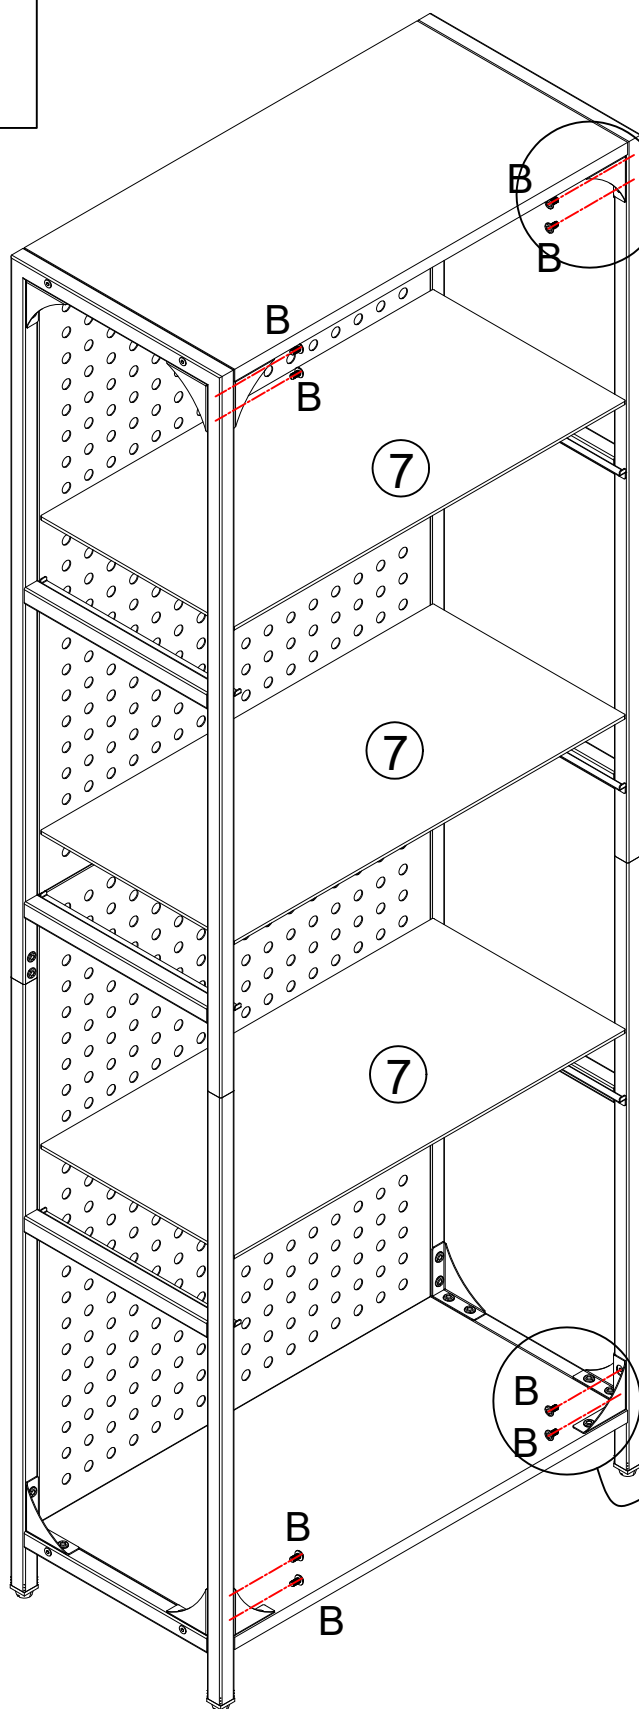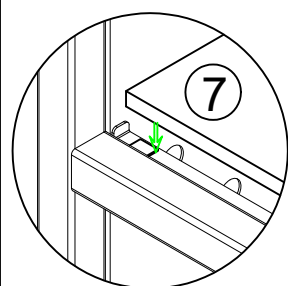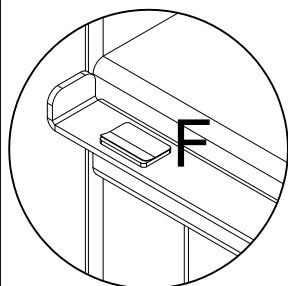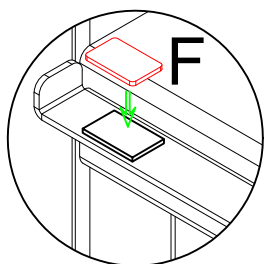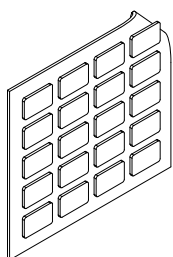

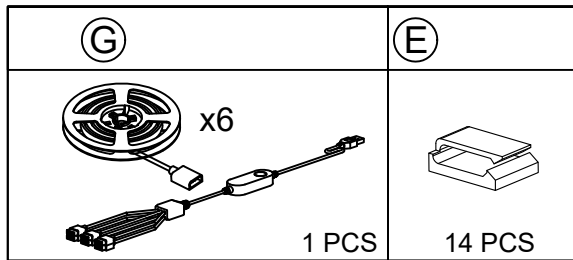

Tear off the tape and apply it to the plate, Then press it firmly with your hand






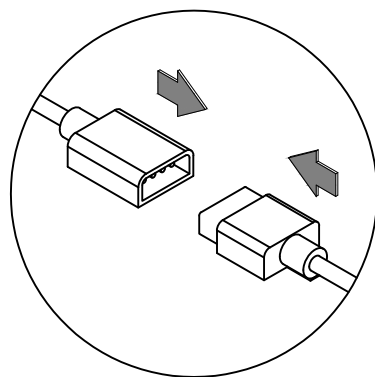




Diagram of Back Interface Connection

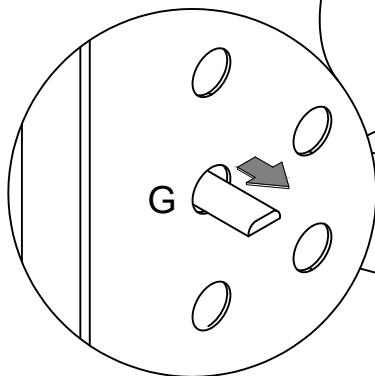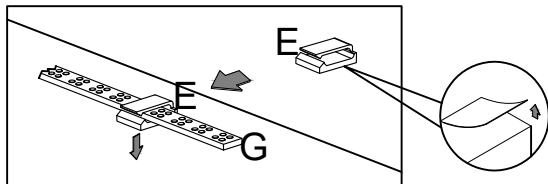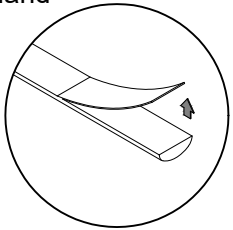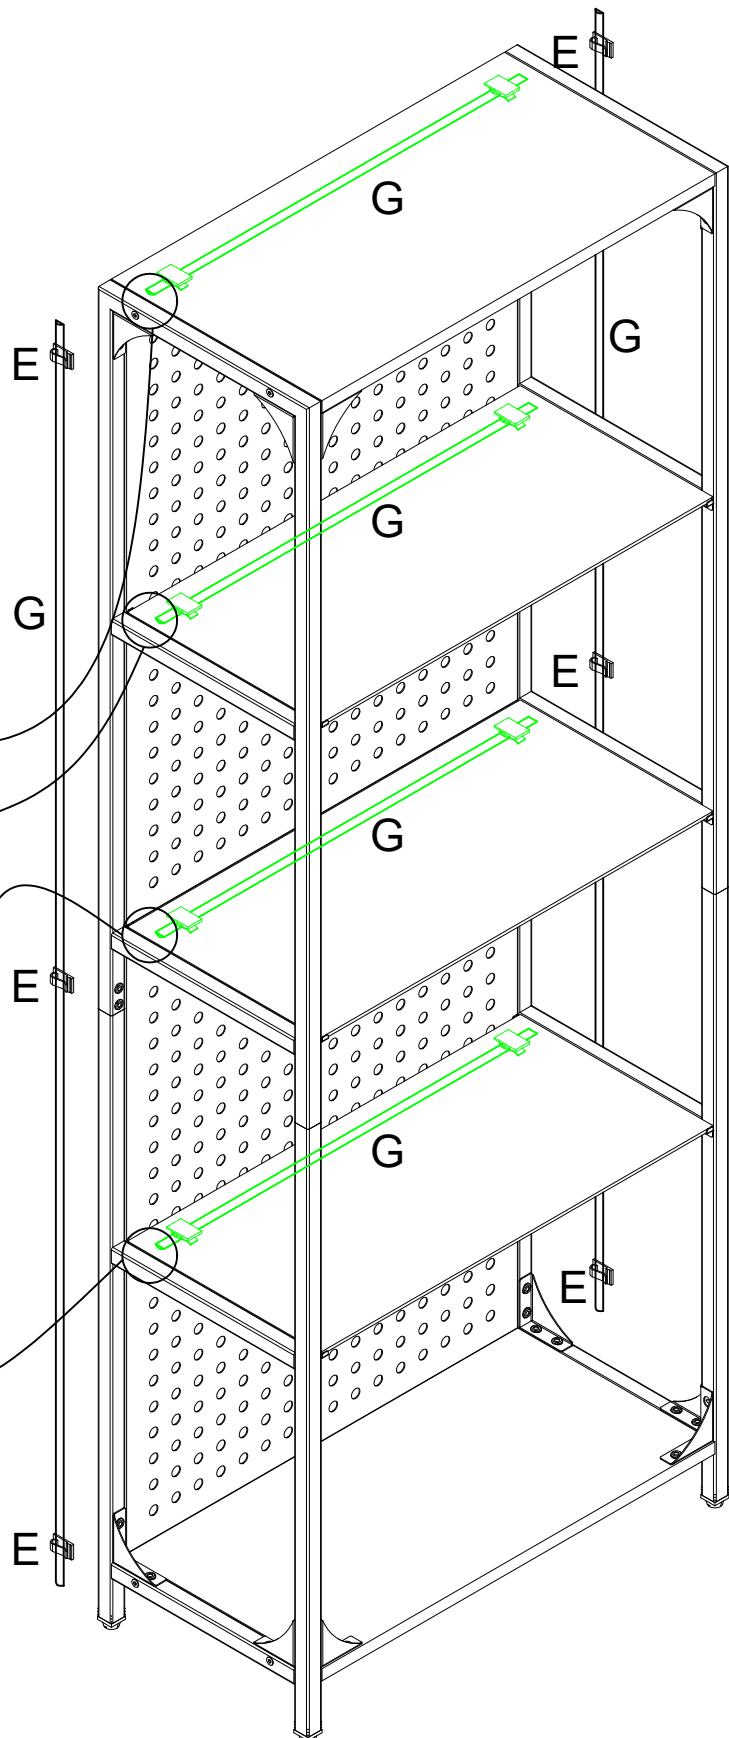


D

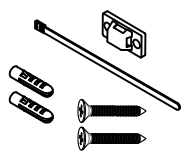


2 PCS

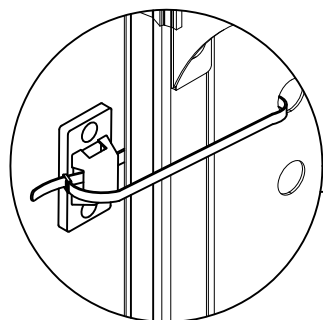


Step 1

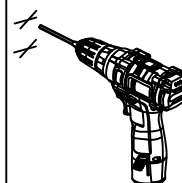


Step 2



Step 3

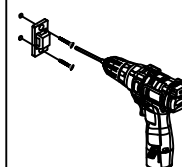

Step 4

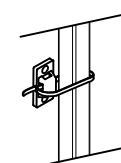

Step 5

