



USER'S MANUAL


FARMHOUSE BUFFET SIDEBOARD

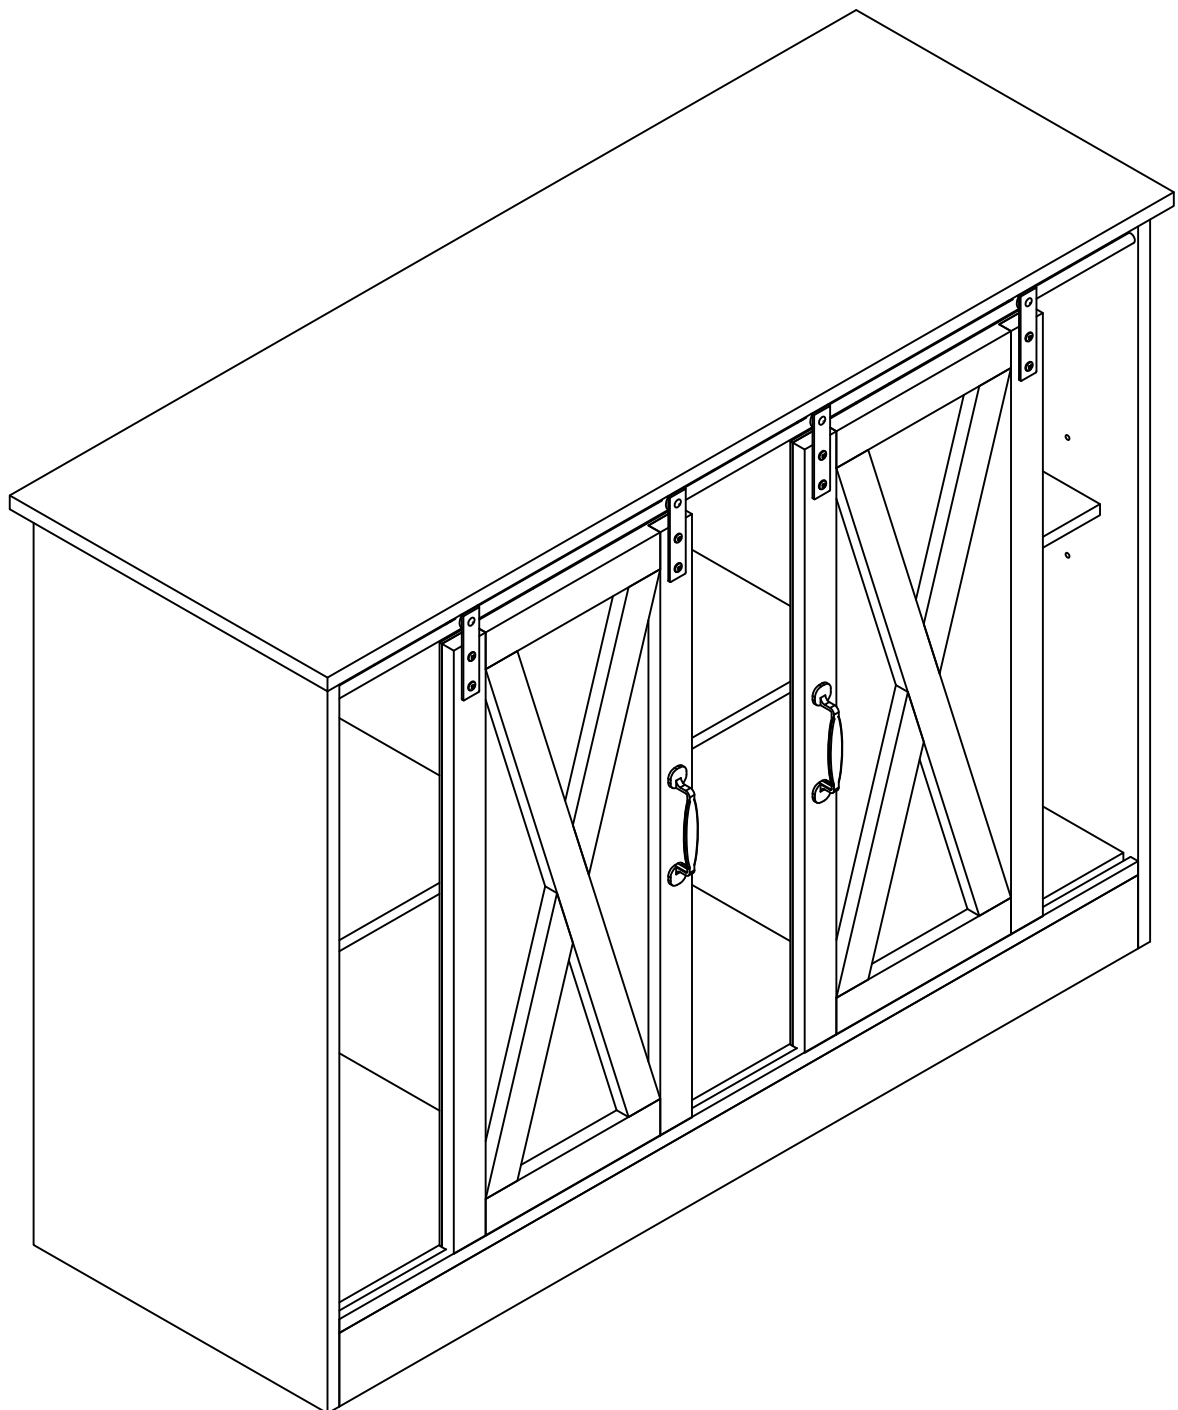


BOARD IDENTIFICATION

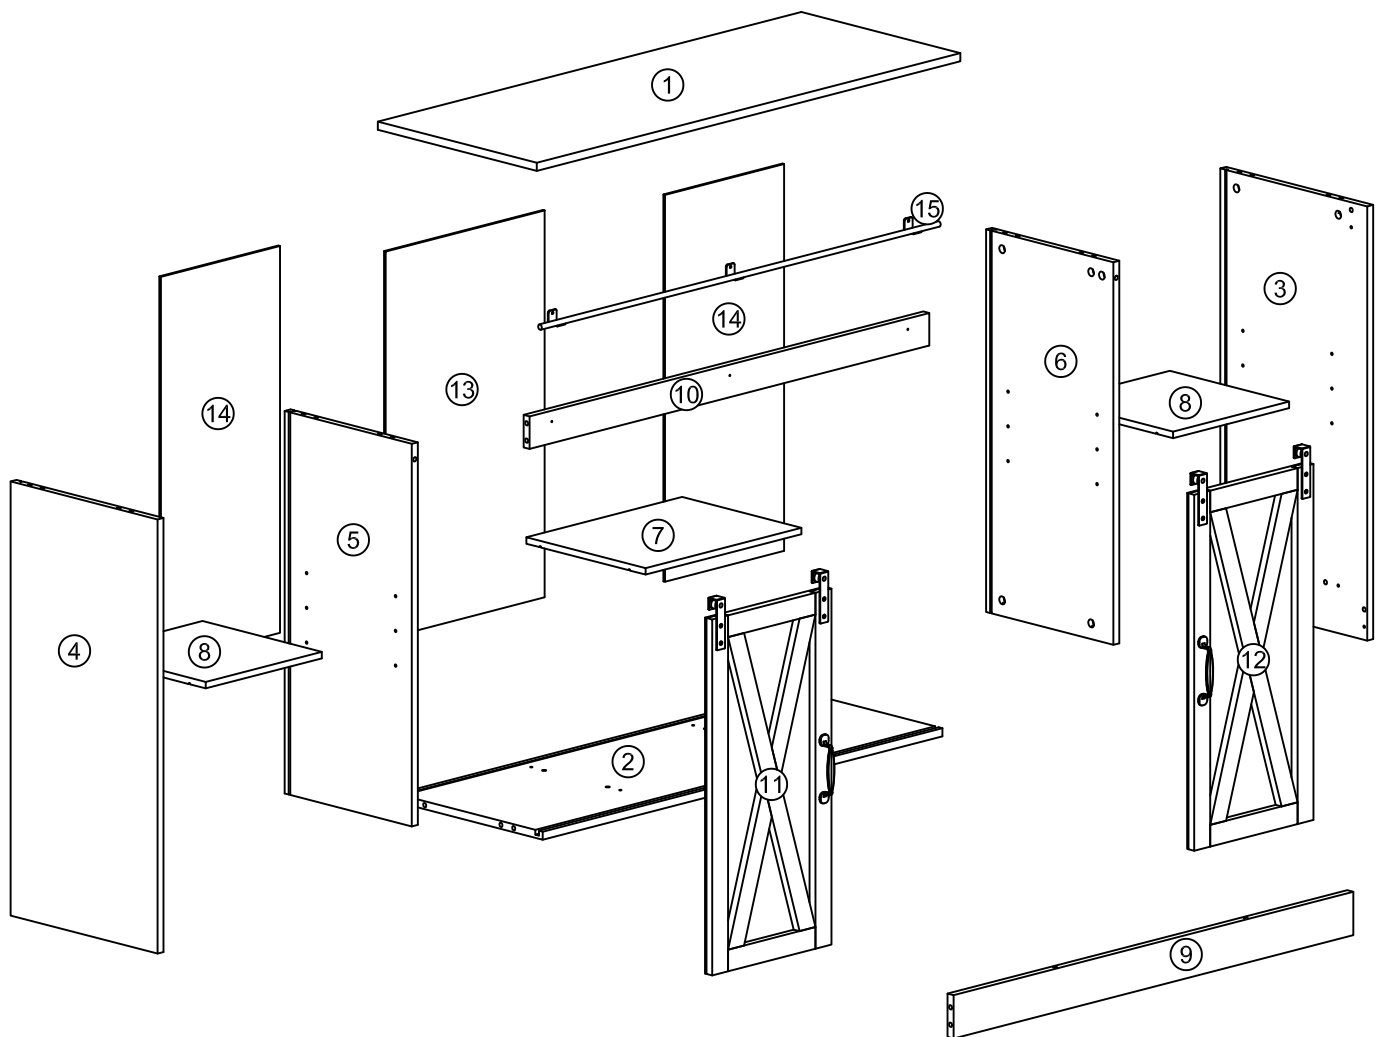


Part List

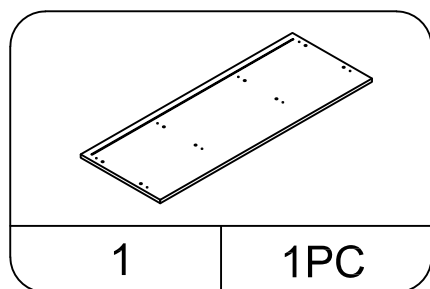


Desktop Board

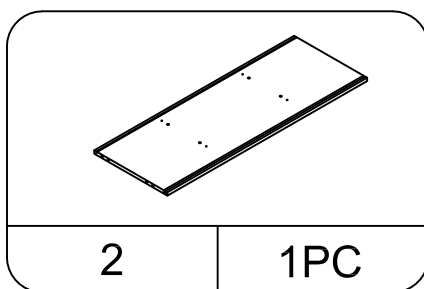


Bottom Board

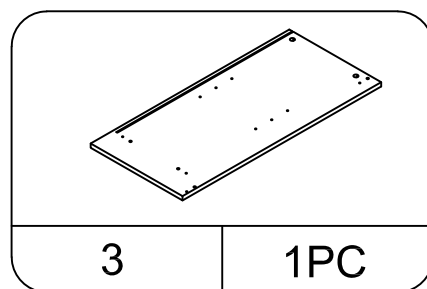


Right Board

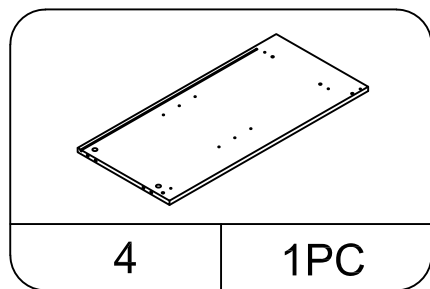


Left Board

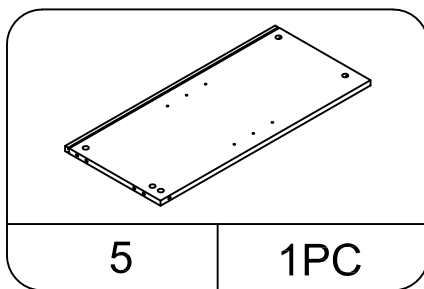


Middle Left Board

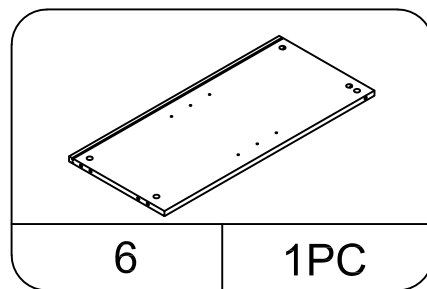


Middle Right Board

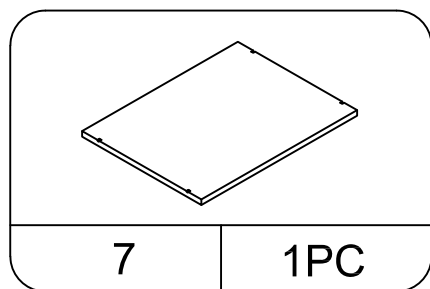


Middle Shelf

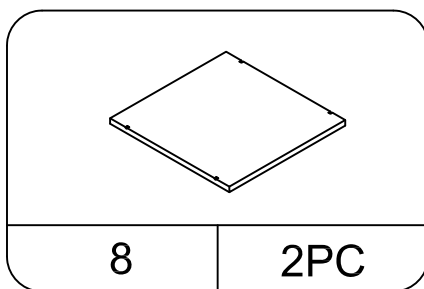


Adjustable Shelf

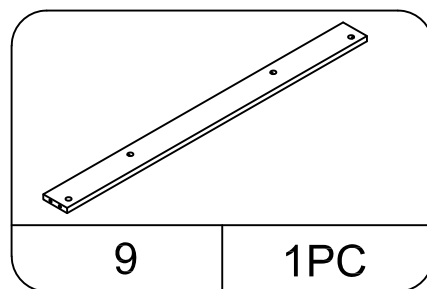


Right Door

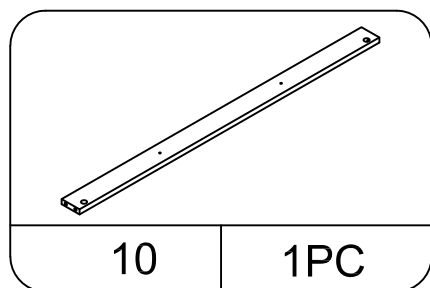


Left Door

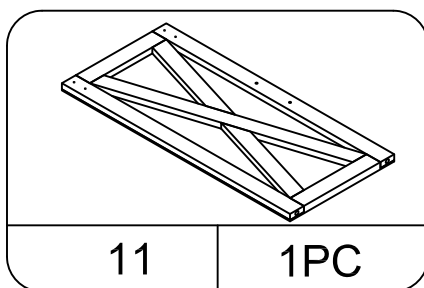


Right Door

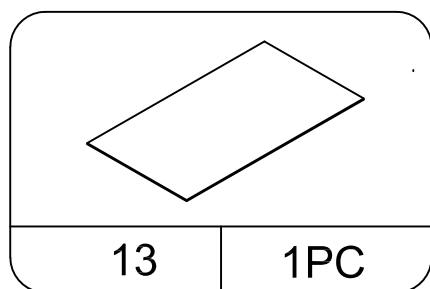

Middle Back Board









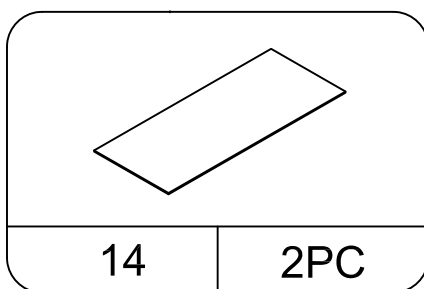


Side Back Board

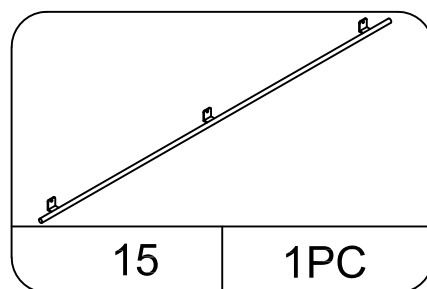

Slide

Hardware List

 A4PC	 B4PC	 C26PC	 D26PC
 Ø8*30mm E22PC	 F4PC	 G12PC	 Ø4*14mm H11PC
 J1PC	 Ø4*16mm K12PC	 L12PC	 Ø4*18mm M4PC
 N2PC			

REPLACEMENT PARTS




We are devoted to provide the best products and services for customers. Please contact us via the "Contact seller" button in the detail page of your order for any concern and we'll response as soon as possible.

STEP1

Insert cam bolt (C) to part (2) with screwdriver.

Attach Part (2) to part (9) through bolt (C)

Insert and secure cam lock (D) to part (9) to lock part (2)

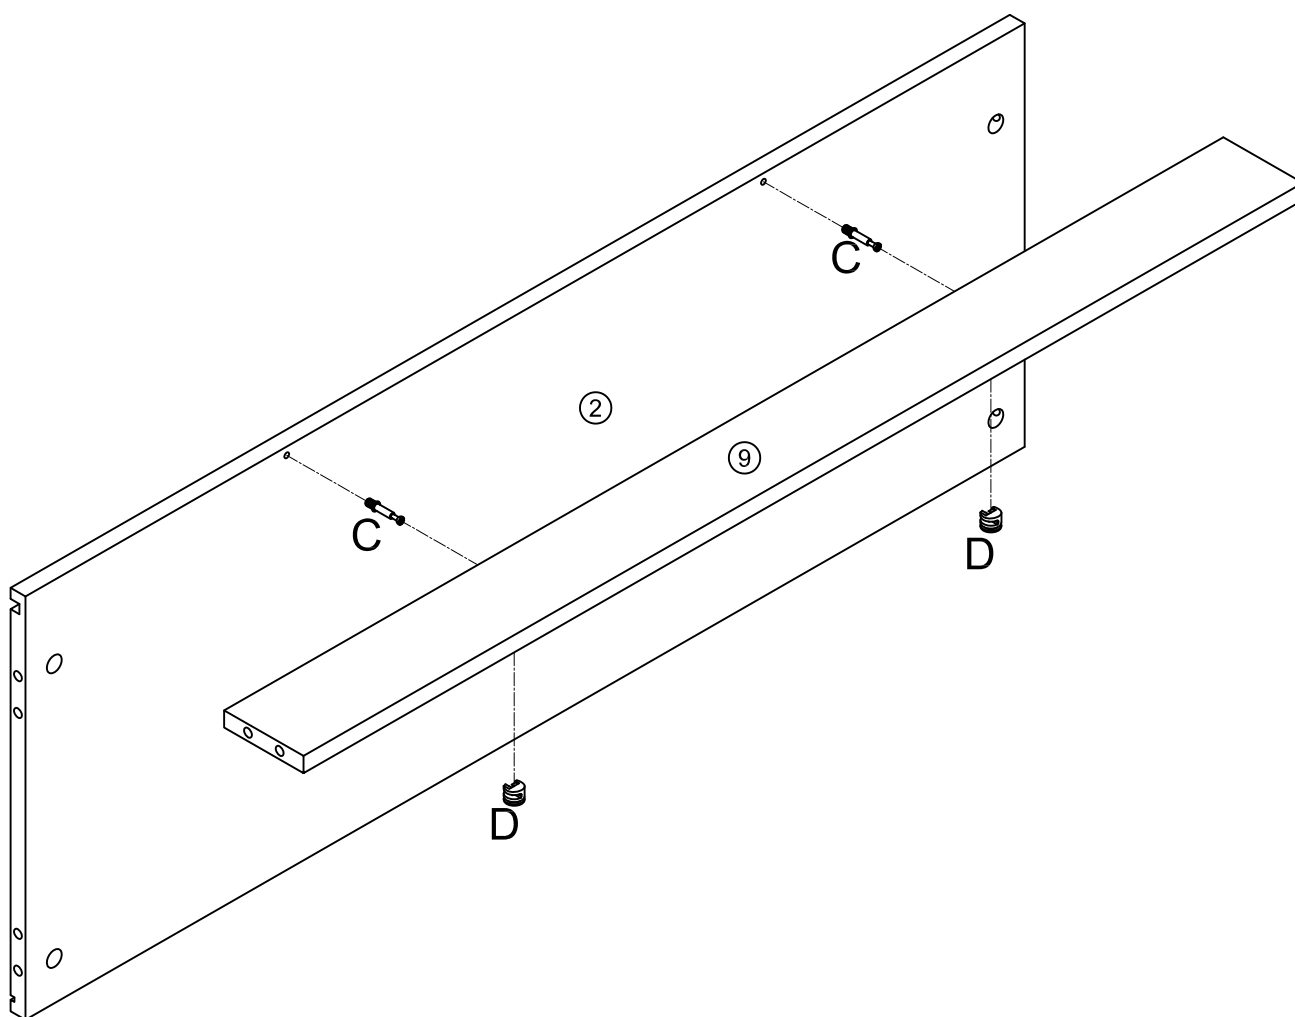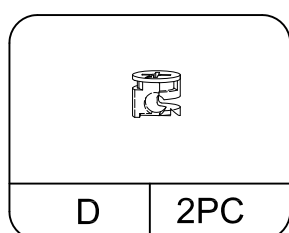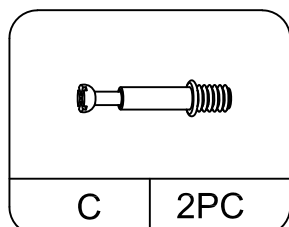






STEP2

Insert cam bolt (C) to part (2) with screwdriver.

Insert dowel (E) into part (2)

Attach part (5,6) to part (2) through bolt (C) and dowel (E)

Insert and secure cam lock (D) to part (5,6) to lock part (2).

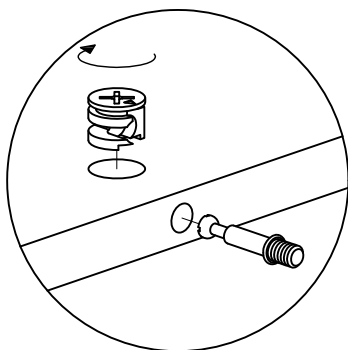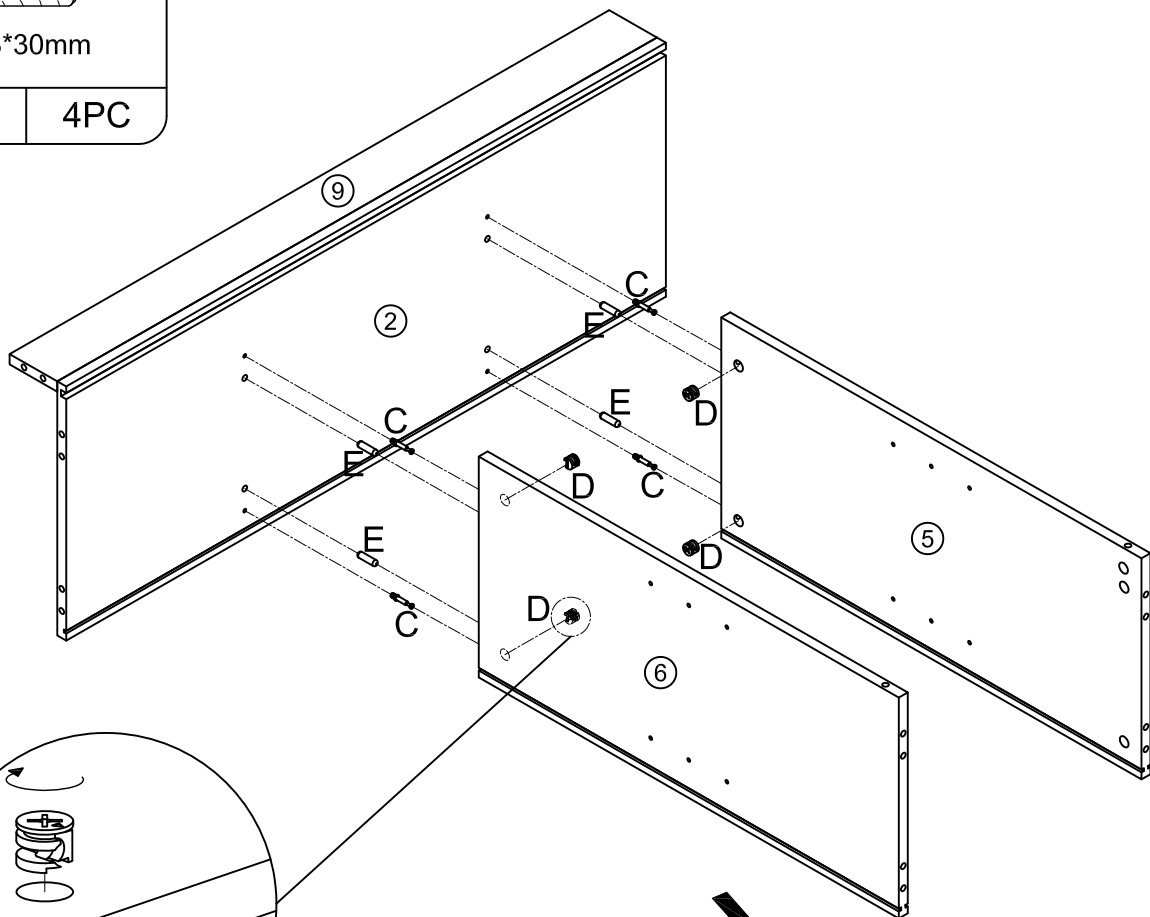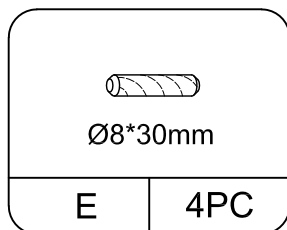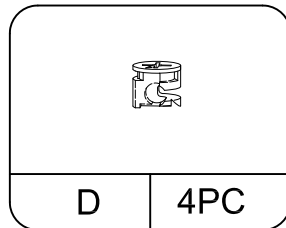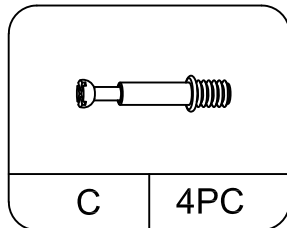

Be careful not to over tighten.




Arrow on lock (D) should point in the direction of bolt (C).

STEP3

Insert cam bolt (C) to part (10) with screwdriver.

Attach Part (10) to part (5,6) through bolt (C)

Insert and secure cam lock (D) to part (5,6) to lock part (10).




C

2PC



D

2PC

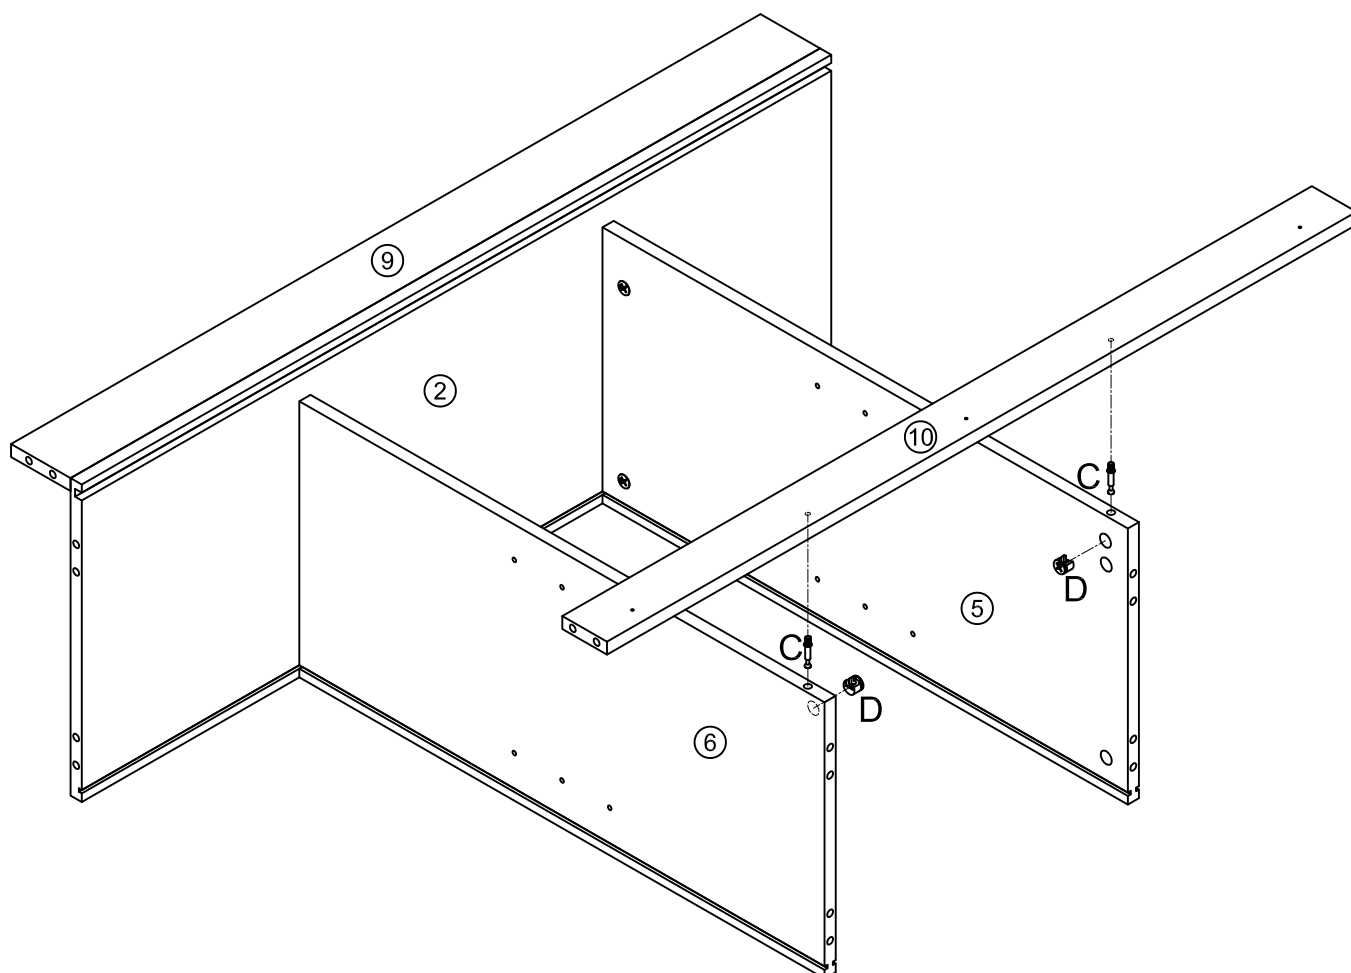





STEP4

Insert cam bolt (C) to part (3,4) with screwdriver.

Insert dowel (E) into part (3,4)

Attach part (3,4) to part (2,9,10) through bolt (C) and dowel (E)

Insert and secure cam lock (D) to part (2,9,10) to lock part (3,4).

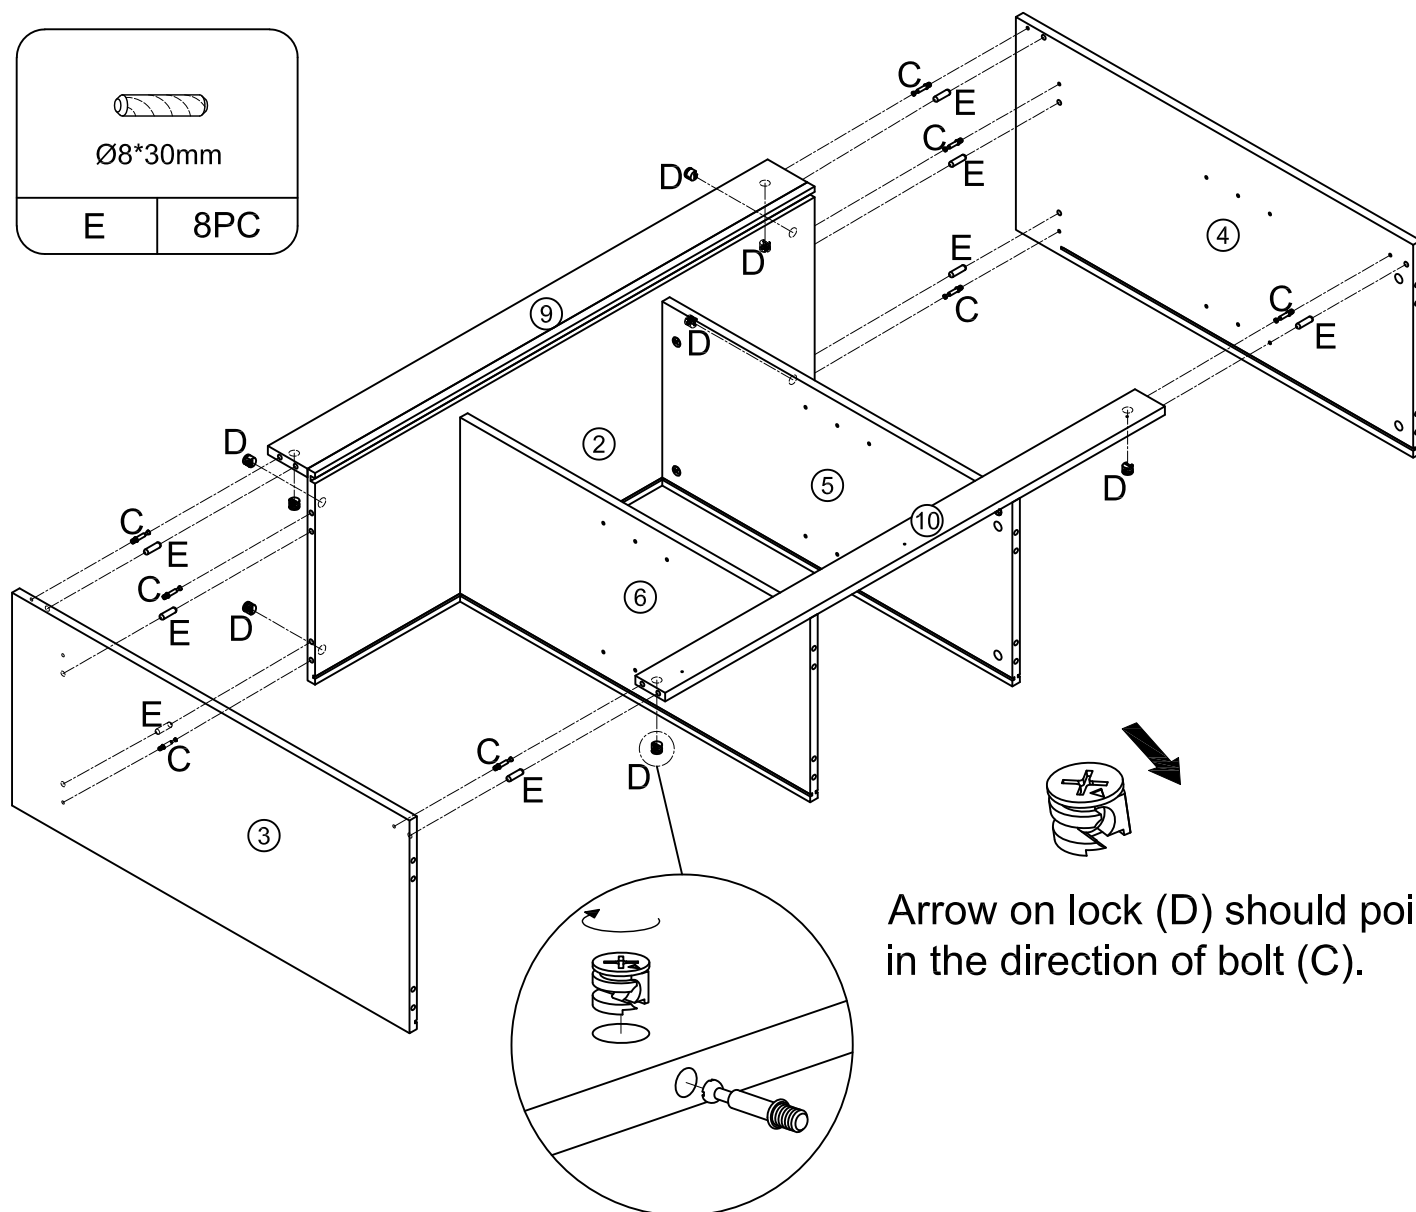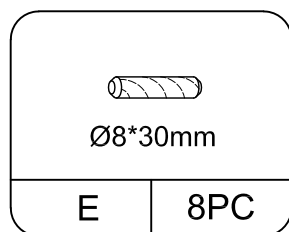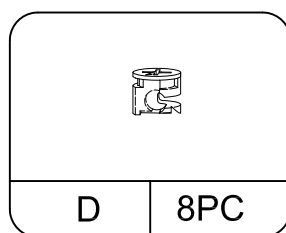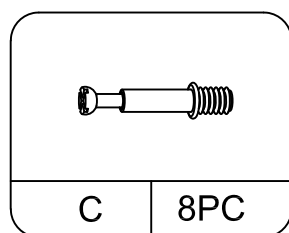

Arrow on lock (D) should point in the direction of bolt (C).


Be careful not to over tighten.

STEP5

Stand up the whole buffet sideboard

Slide part (13) into grooves of part (5) and part (6) as per diagram.

Slide part (14) into grooves of part (4,5) and part (3,6) as per diagram.

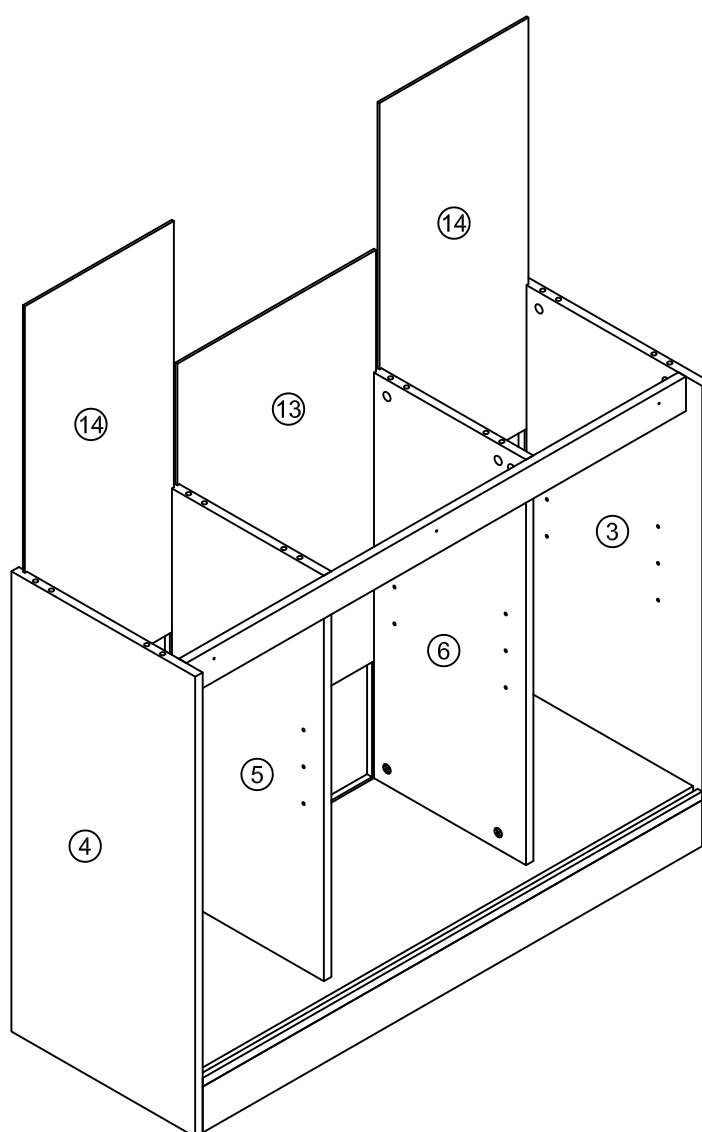






STEP6

Insert cam bolt (C) to part (1) with screwdriver.

Insert dowel (E) to part (3,4,5,6).

Attach part (1) to part (3,4,5,6) through bolt (C) and dowel (E)

Insert and secure cam lock (D) to part (3,4,5,6) to lock part (1).

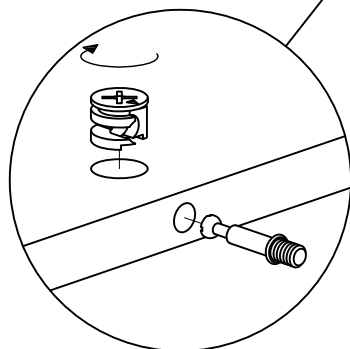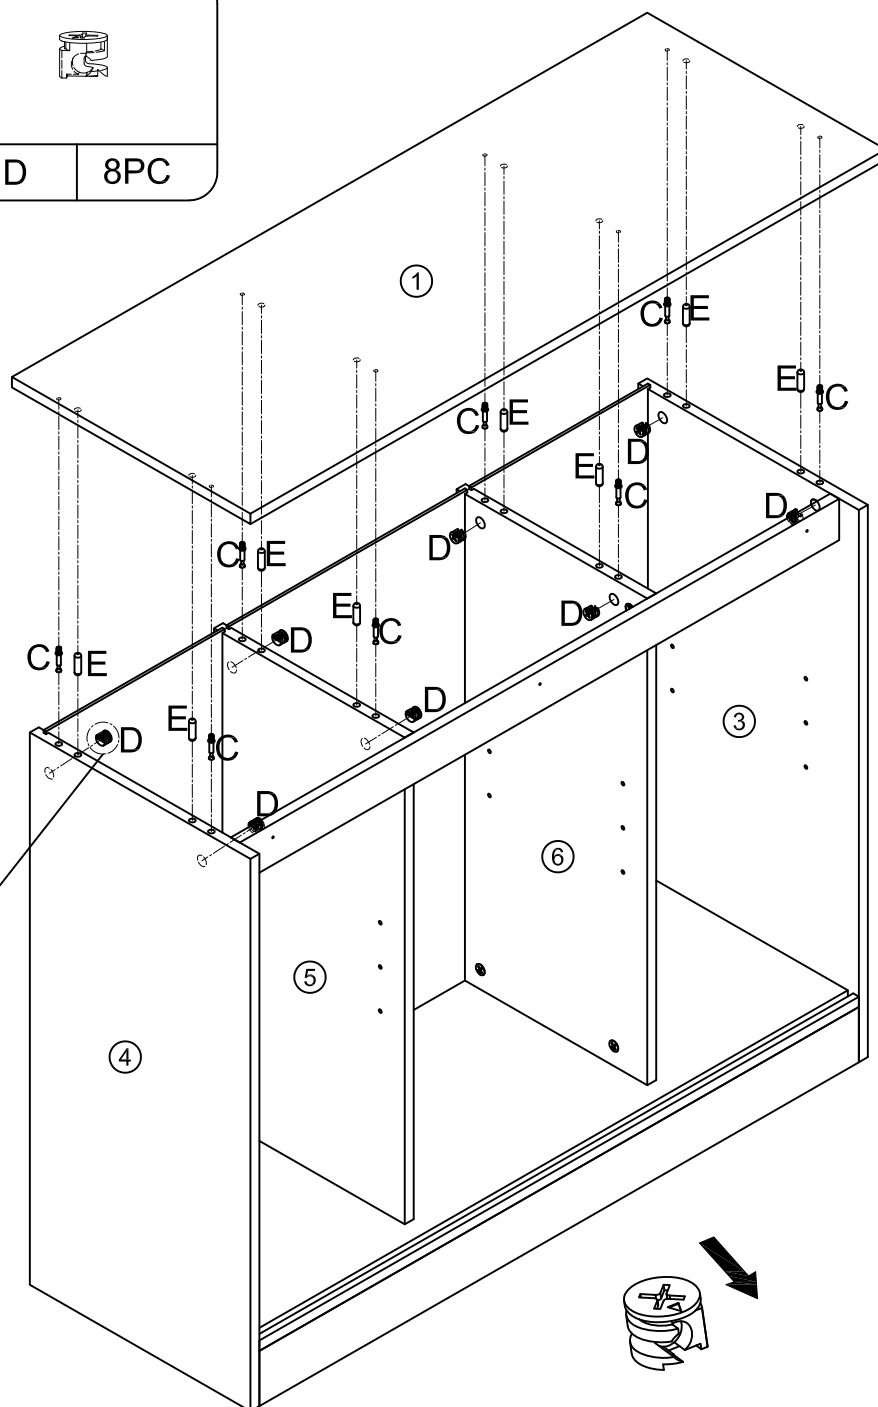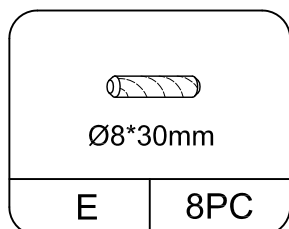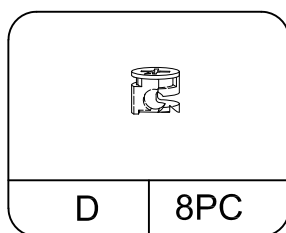
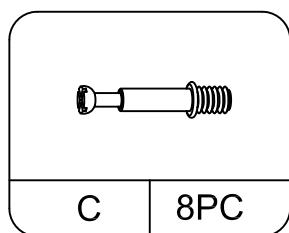


Be careful not to over tighten.

Arrow on lock (D) should point in the direction of bolt (C).







STEP7

Attach part (15) to using screw (I) with screwdriver.

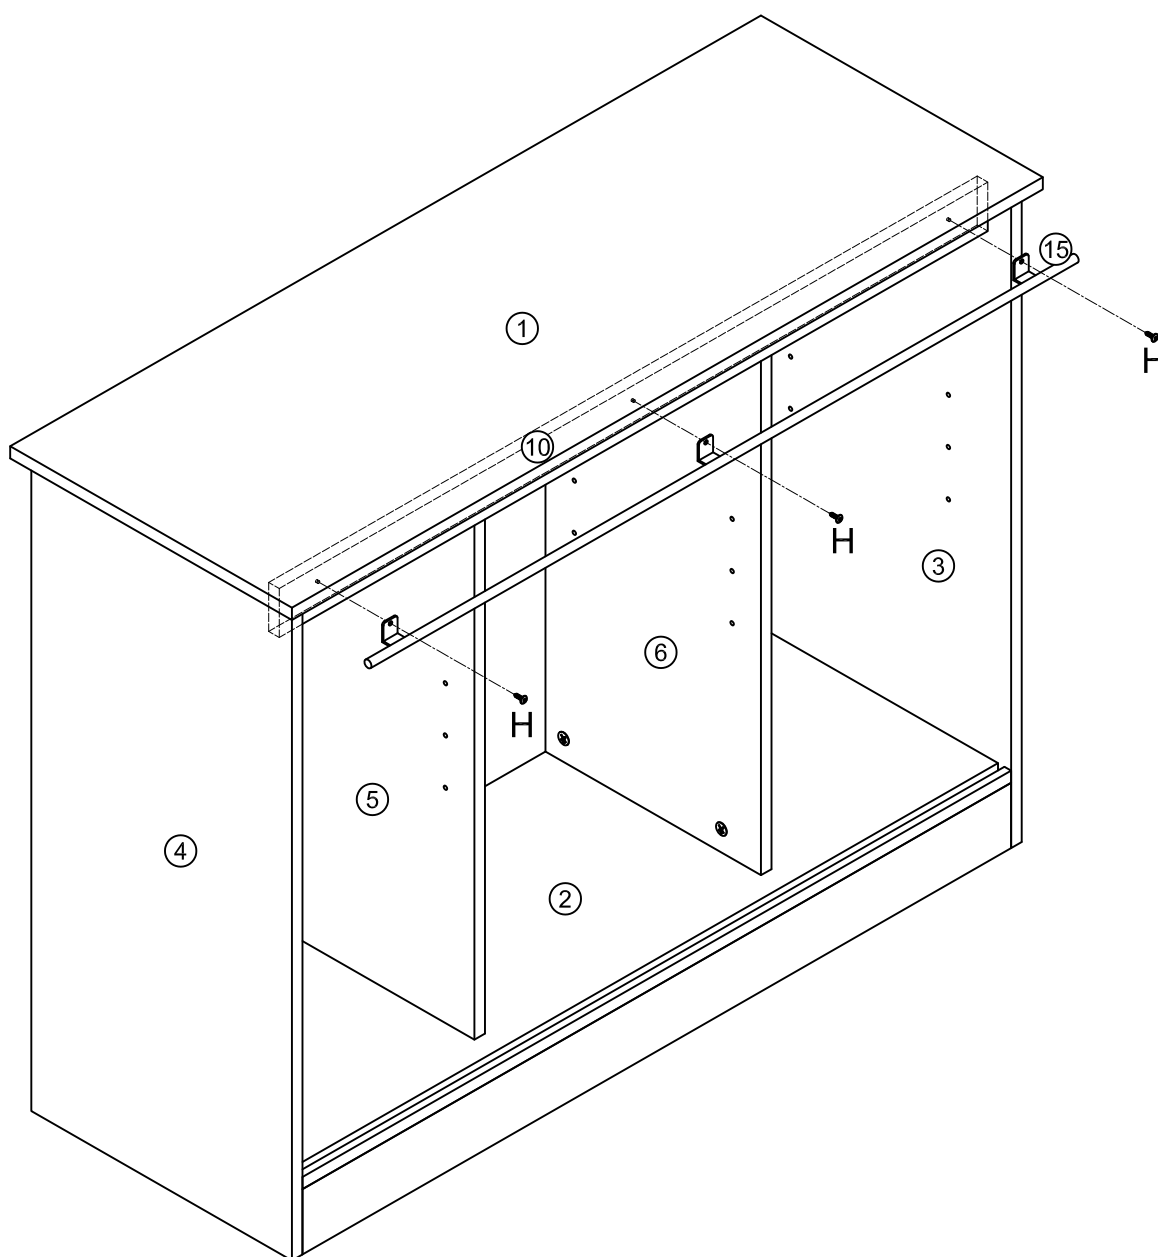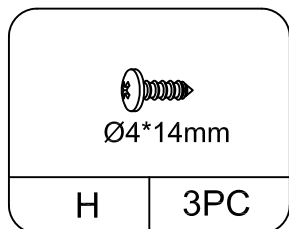

STEP8

Attach handle (N) to part (11,12) using screw (M) with screwdriver.
Attach part (A) to part (11,12) using screw (H) with screwdriver.
Install part (F) on bottom of part (11,12).

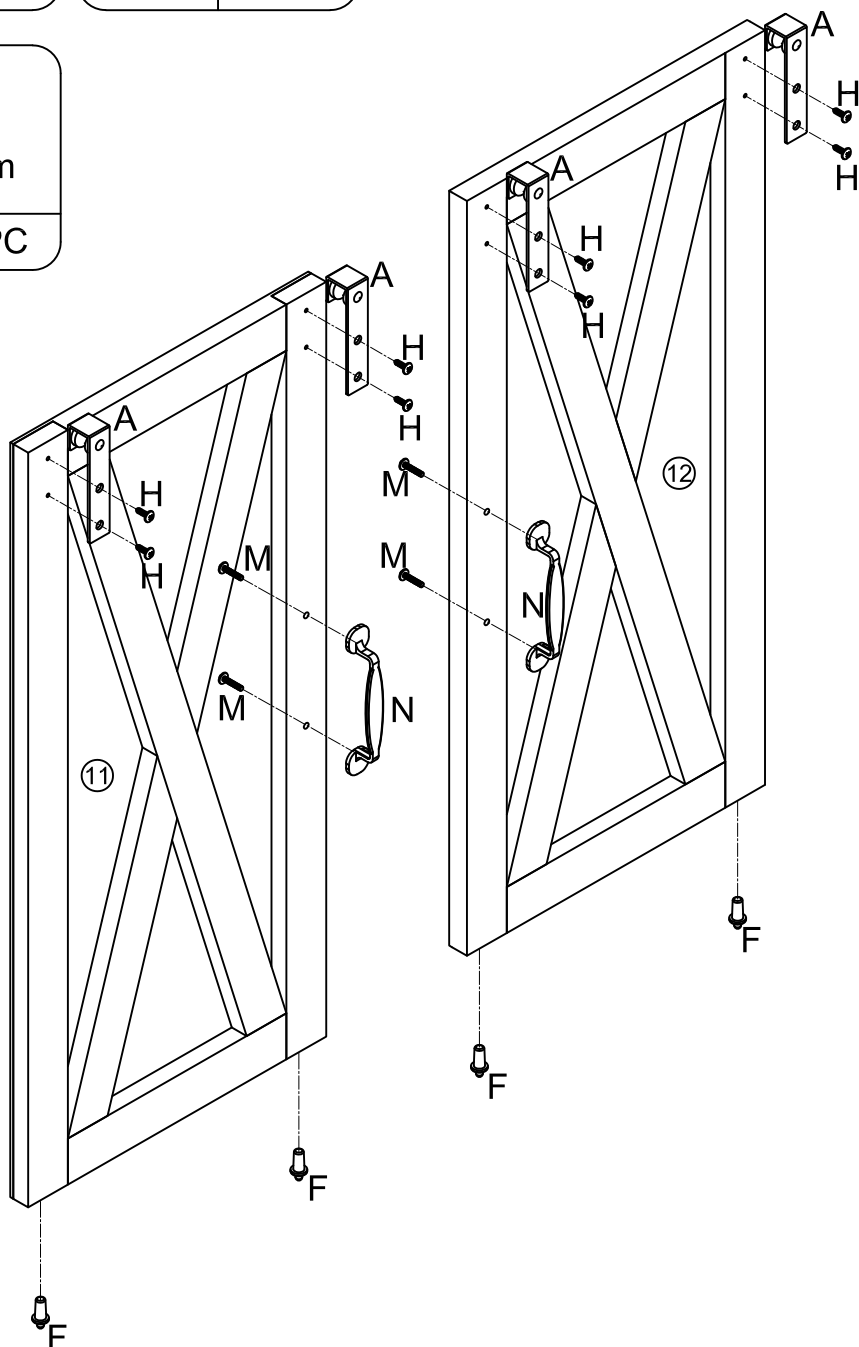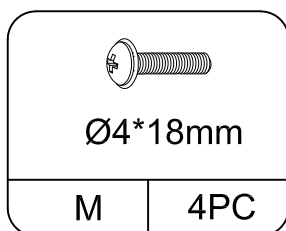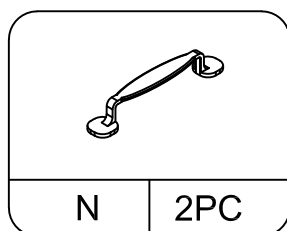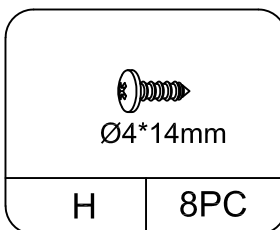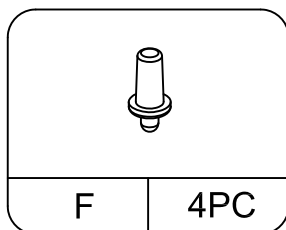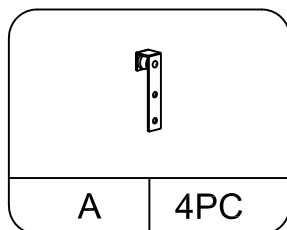

STEP9



Insert bolt (G) to part (3,4,5,6).

Insert part (8) horizontally between part (4,5) and part (3,6)

Put part (8) on top of bolt (G).



Insert part (7) horizontally between part (5,6)

Put part (7) on top of bolt (G)

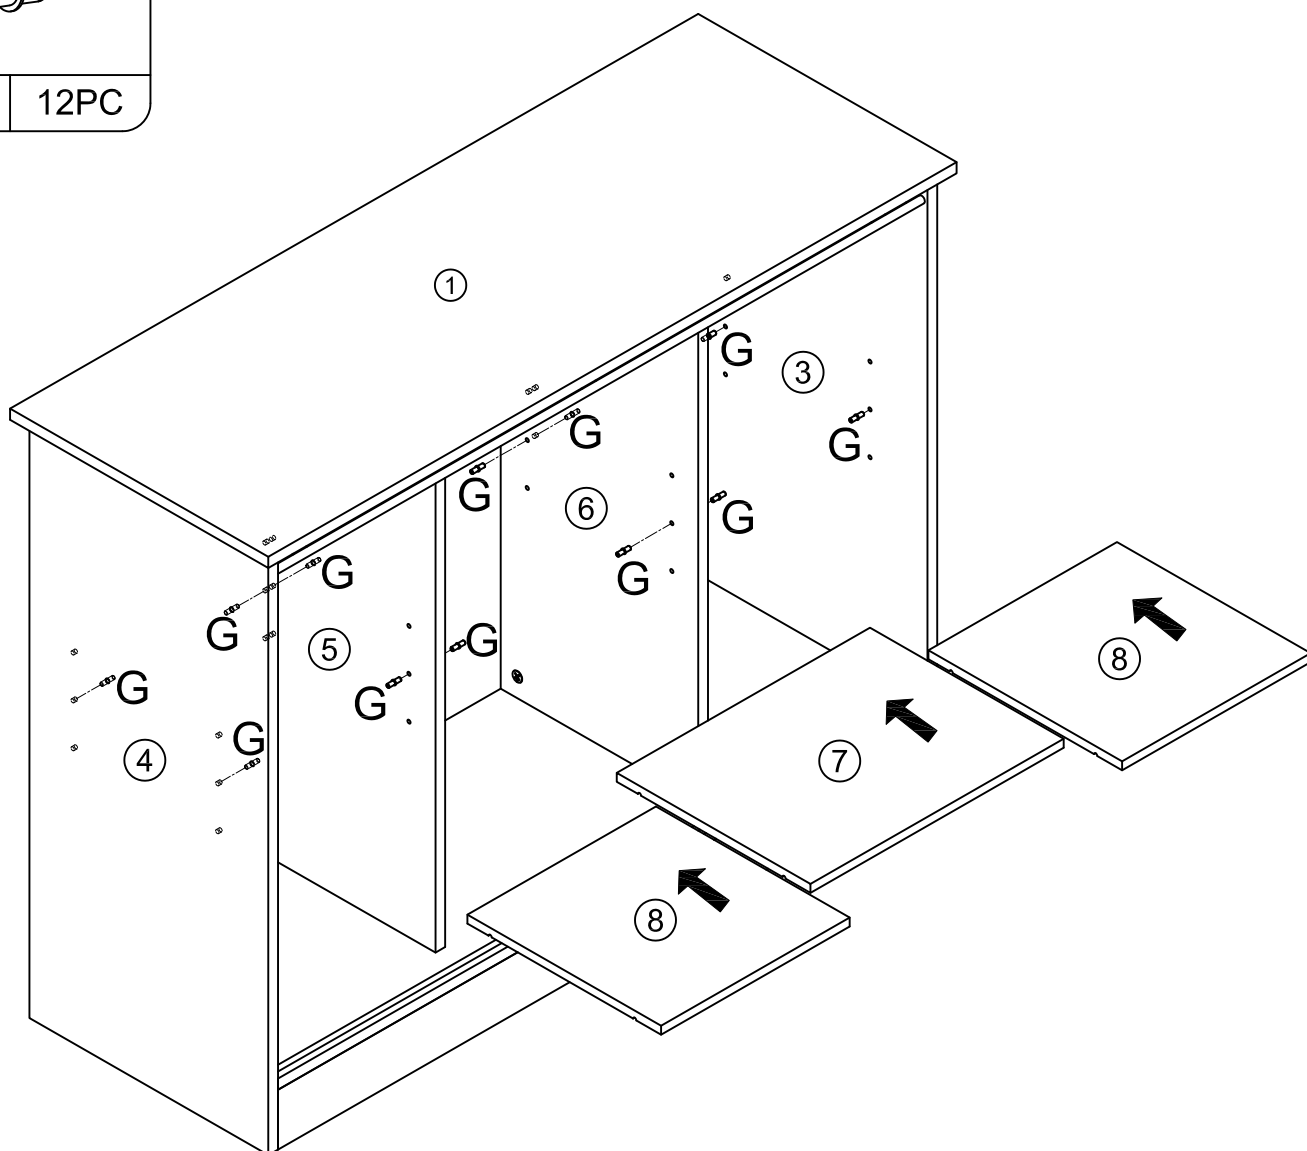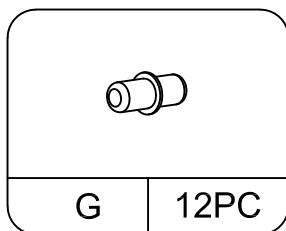

STEP10

Hang part (11,12) on top of part(15) through part (A).
Insert part (F) stuck in the groove of part (2) as per diagram.

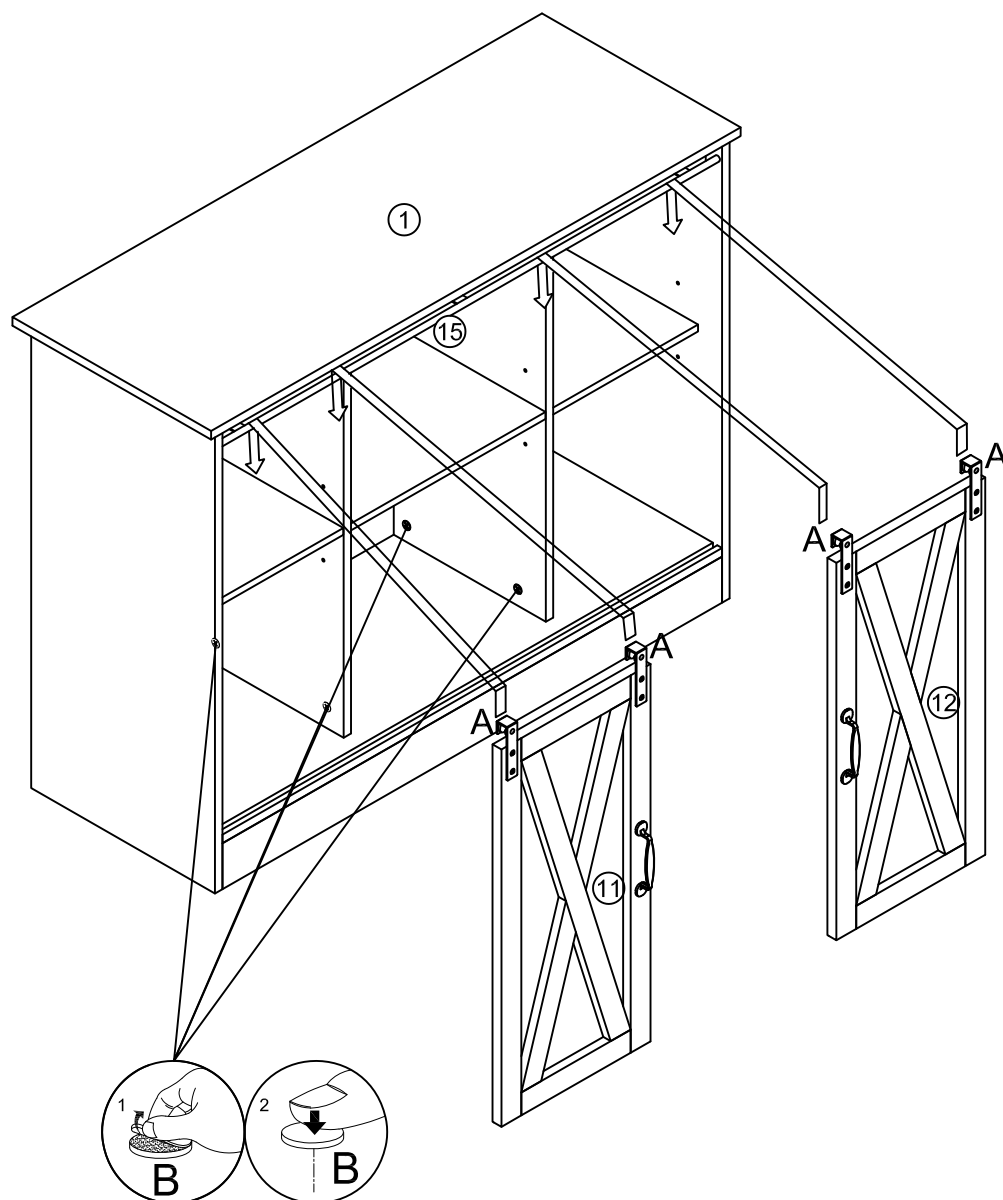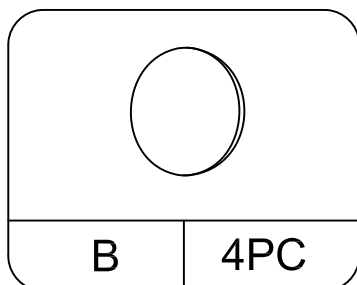

STEP11

Warm tips:If it doesn't feel firm. This can be used for reinforcement.

 Ø4*16mm			
K	12PC	L	12PC

