
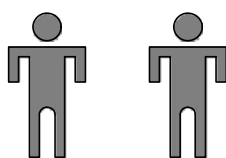






ASSEMBLY INSTRUCTIONS

ITEM:JM002

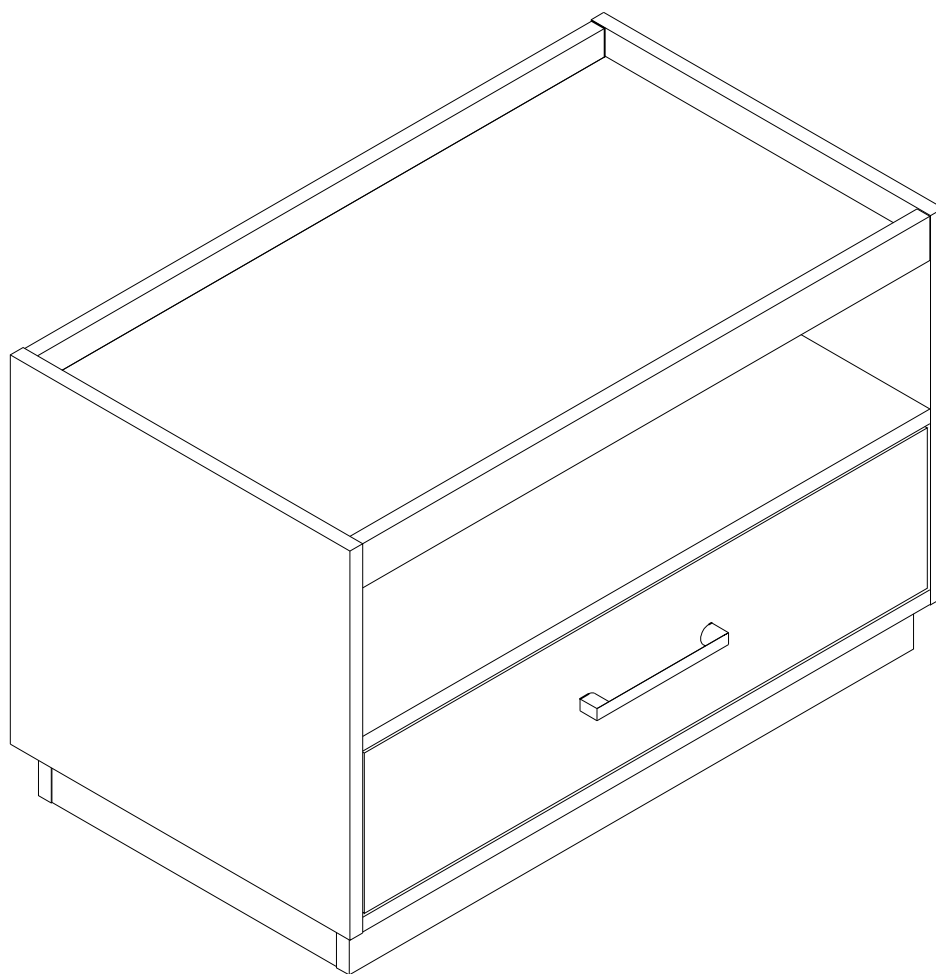


2 people for assembly










JM Collections

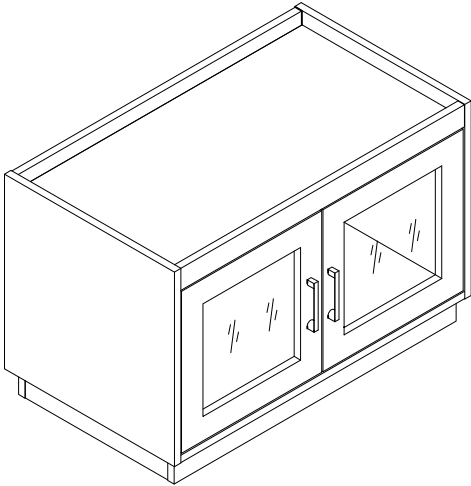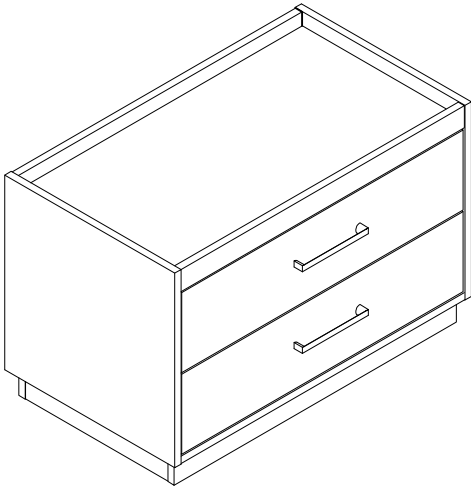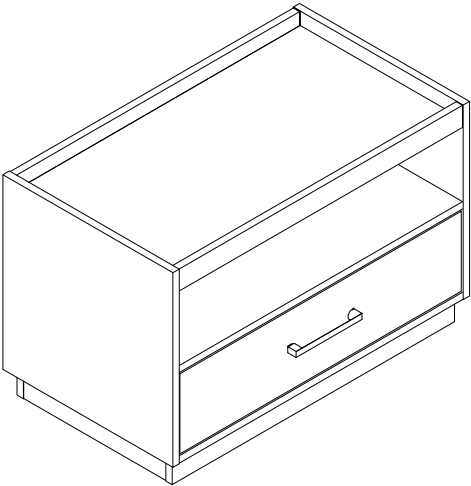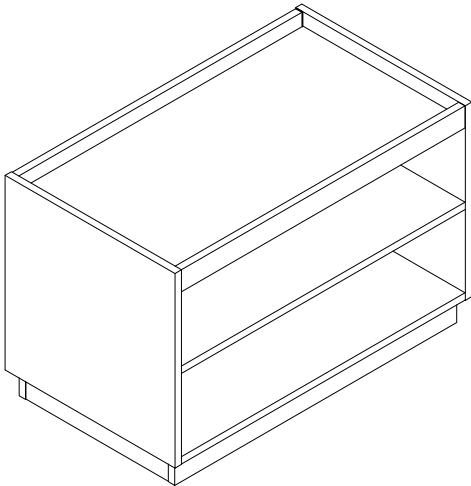

PACKAGE INCLUDE

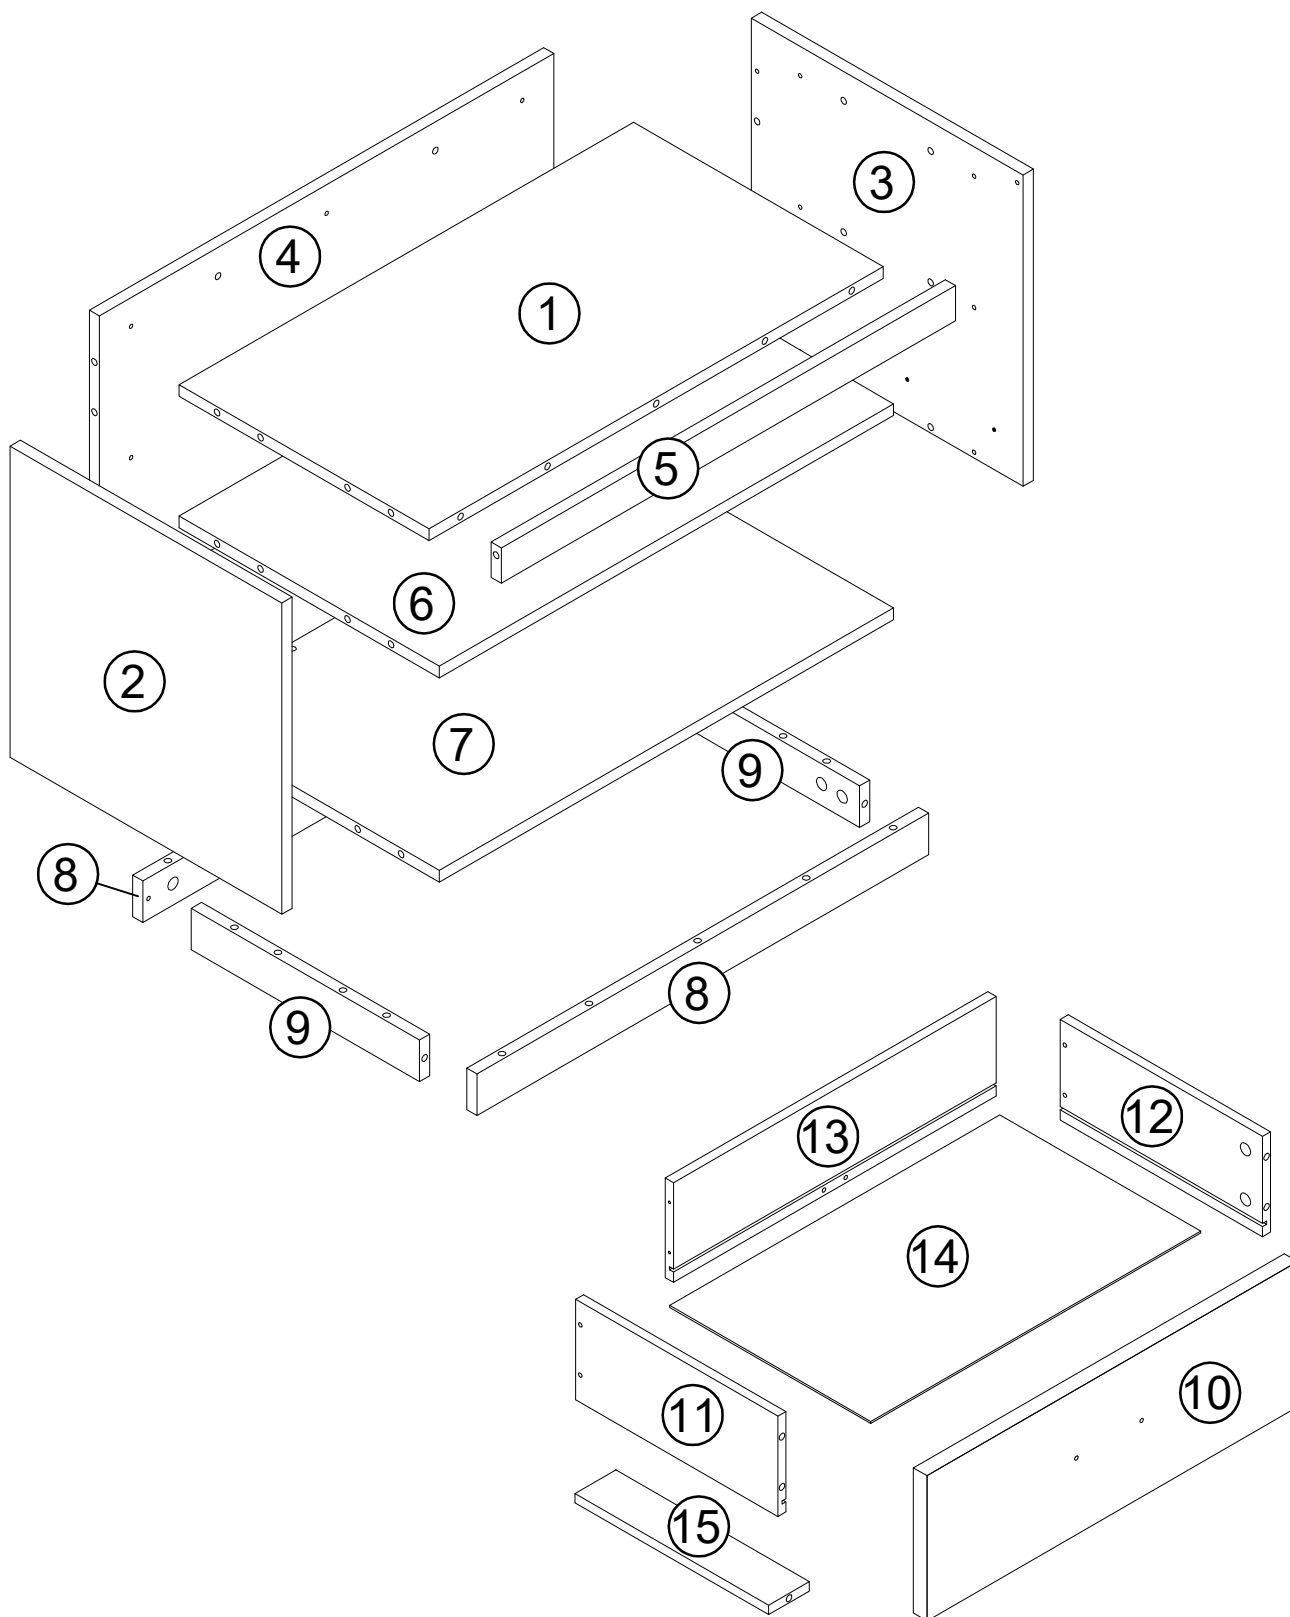


PACKAGE CONTENT

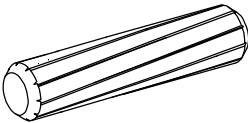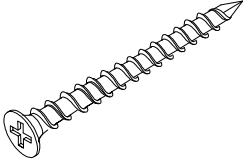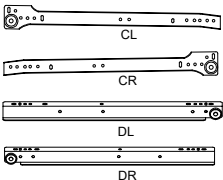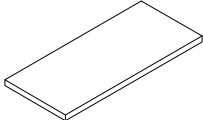
ø7.8X30MM  A 32X+1	B 16X+1 	ø6X34MM  C 46X+2	ø15X12MM  D 41X+2
ø4X38MM  E 9X+1	ø15X9MM  F 5X+1	G 1X 	H 2X 
 I 2X	ø3.5X12MM  J 12X+1	K 2X 	ø3X12MM  L 4X
ø3X14MM  M 4X+2	N 1X 	O 1X 	

Tools required: Long Phillips/Flat Head screwdriver (not Included),
Short Phillips screwdriver (Included).


How to use the cam lock system

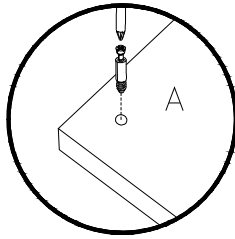


1. Screw cam bolt into panel

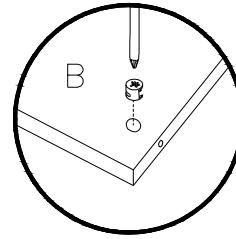


2. Push cam into panel - arrow feature on cam top points to panel edge

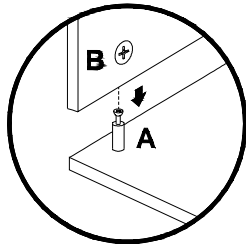

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

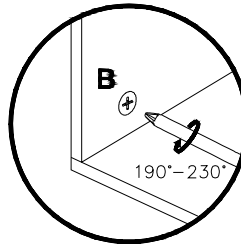


4. Rotate cam(s) clockwise 190°-230° to lock panels together

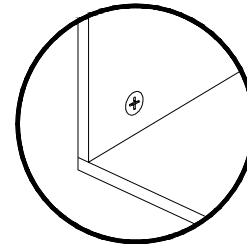

5. Panels should be tight against each other and connection should be rigid


Insert the wood dowel (A) at least half way by tapping lightly with a rubber mallet, IF NECESSARY

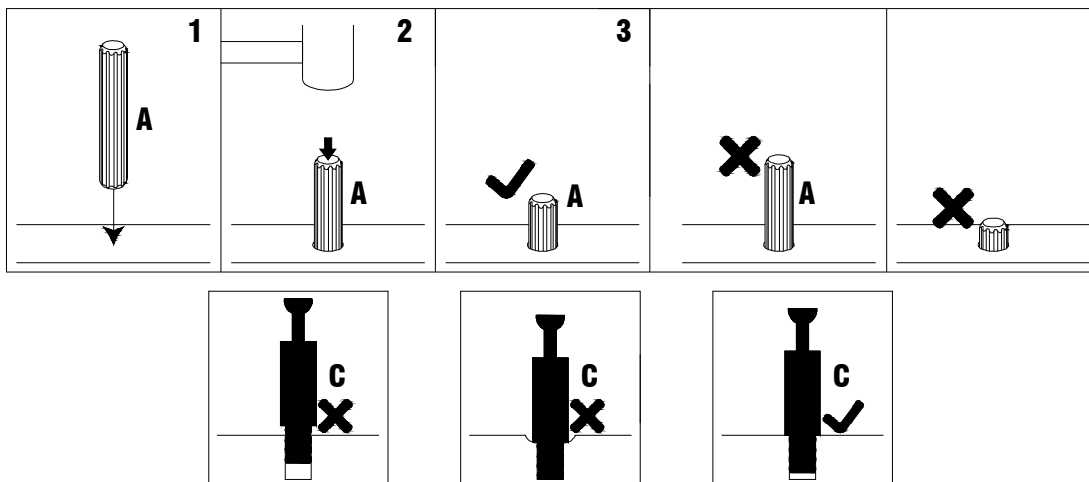

! WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Now you can assemble the item.

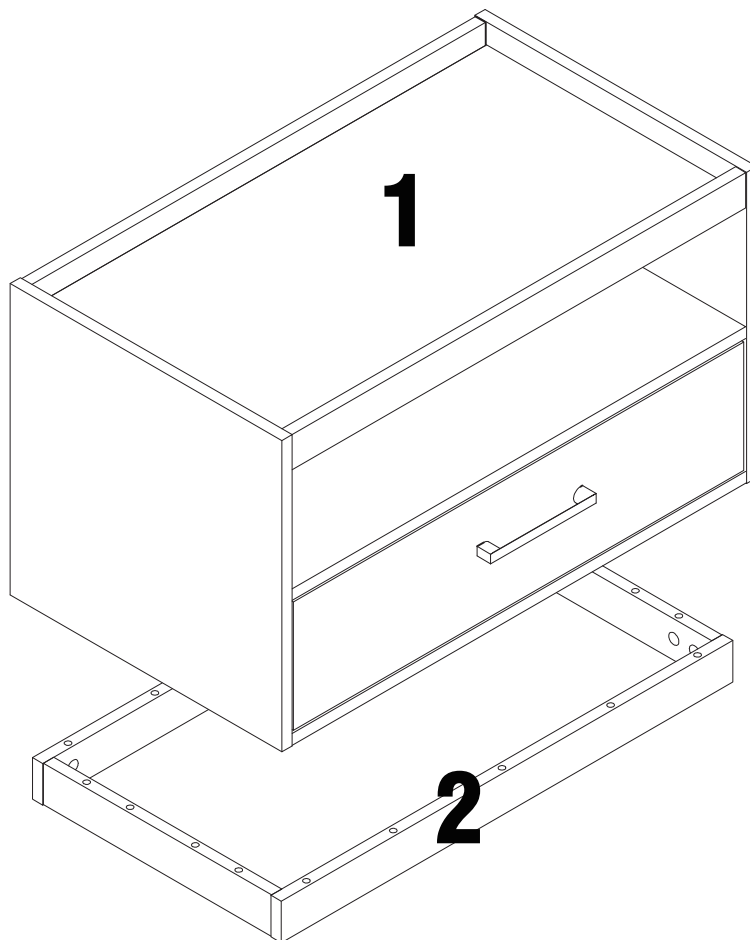







The installation process is divided into two parts:


1. Install the cabinet body
2. Install the base parts

Tip:


Using an electric screwdriver will make assembly easier.

STEP 1




 ② X1	 ③ X1	 ④ X1	 ⑦ X1	 ⑤ X1
 ⑧ X2	 G X41			






Long Philips
Screwdriver
(Not Included)

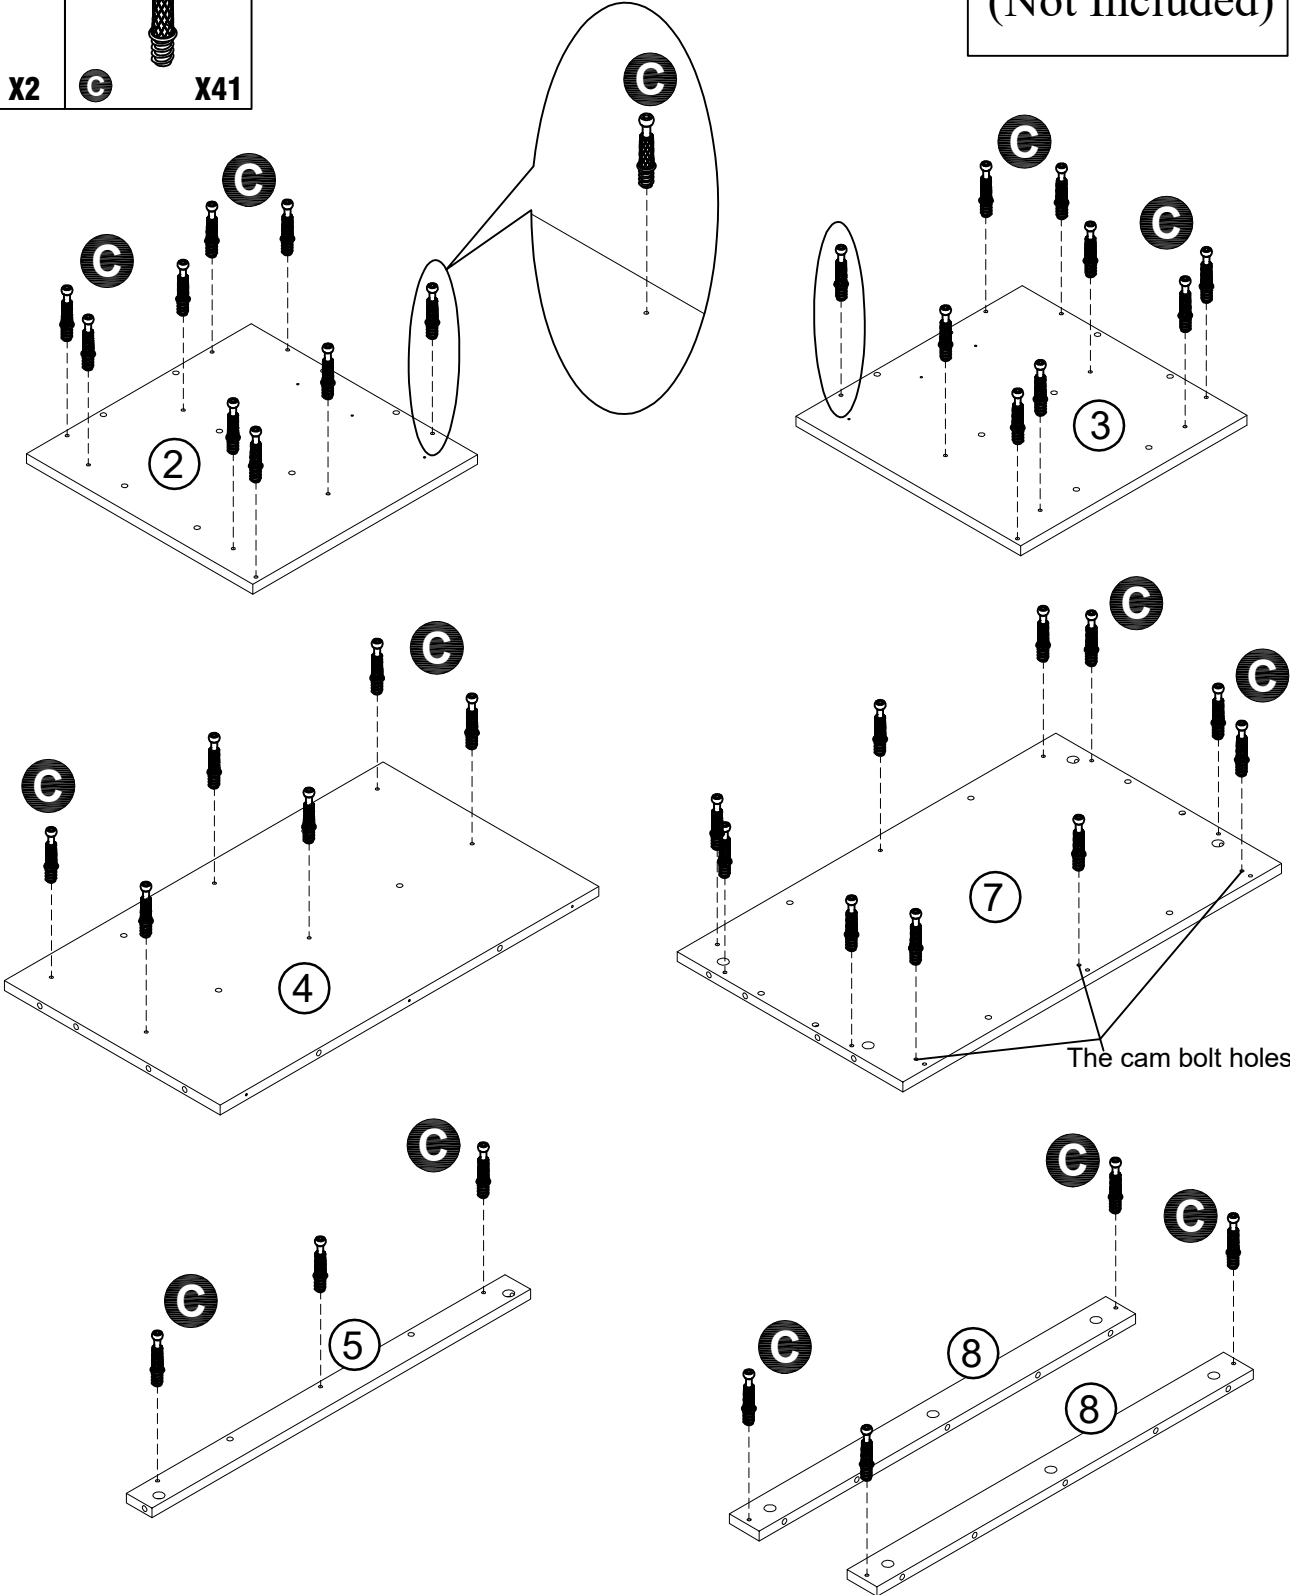



STEP 2

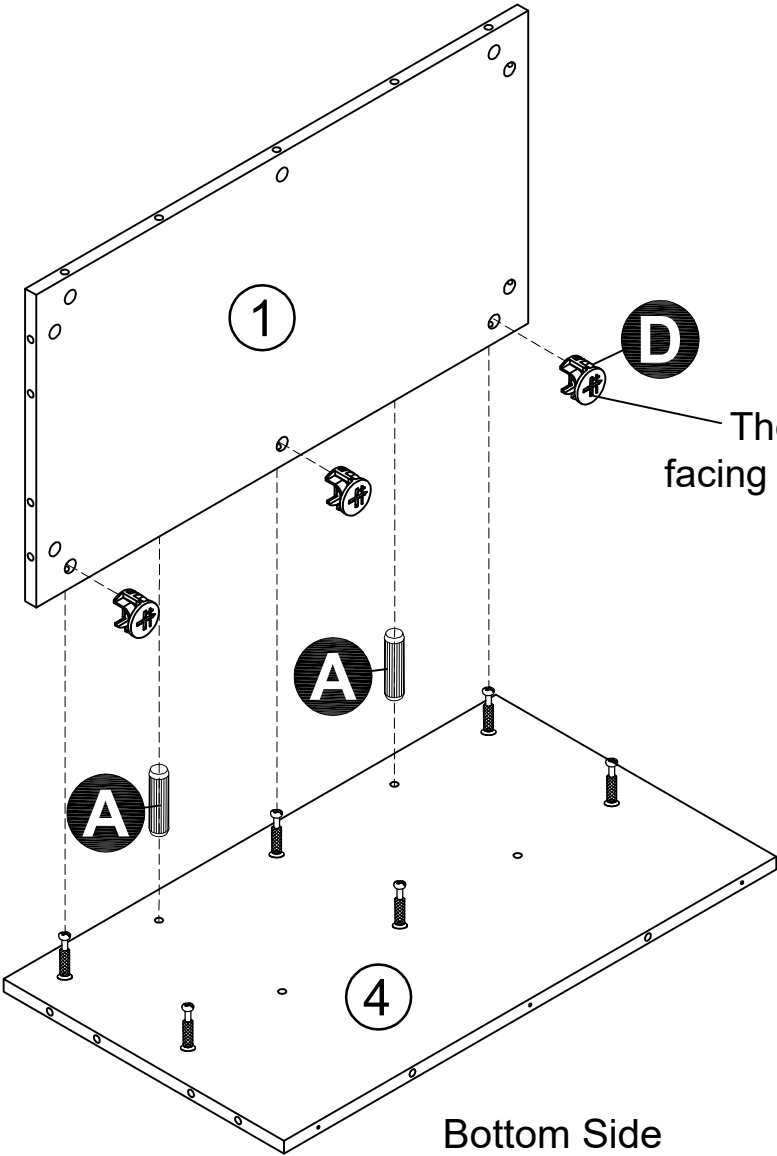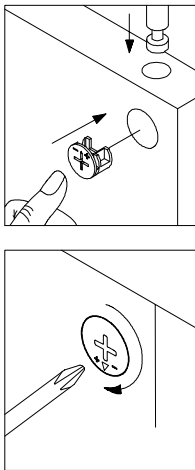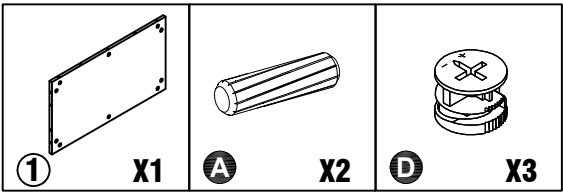




STEP 3

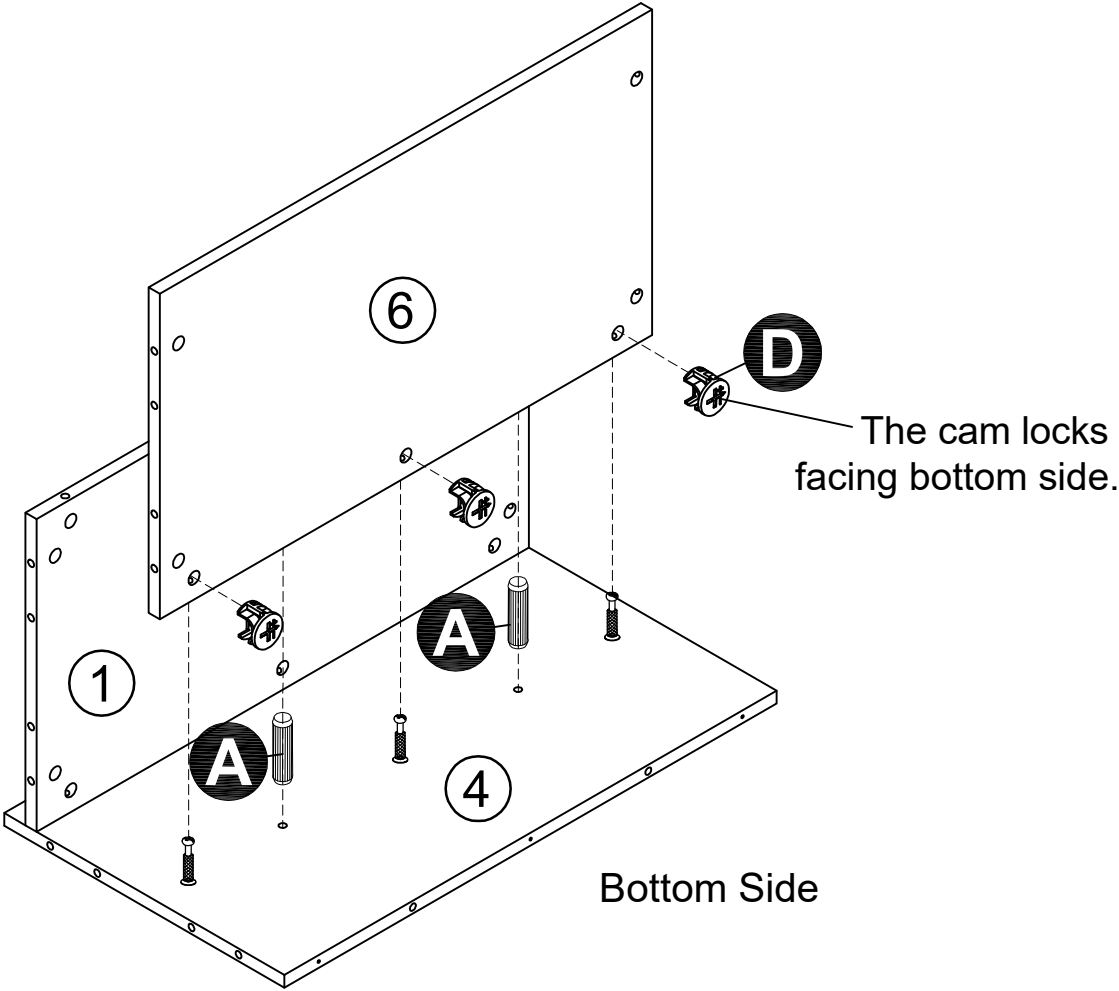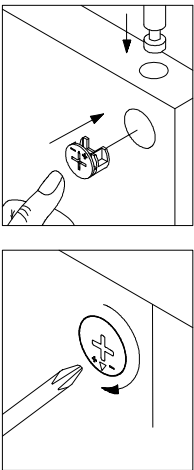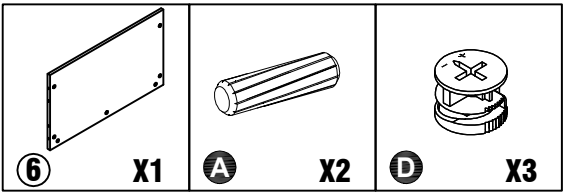


STEP 4

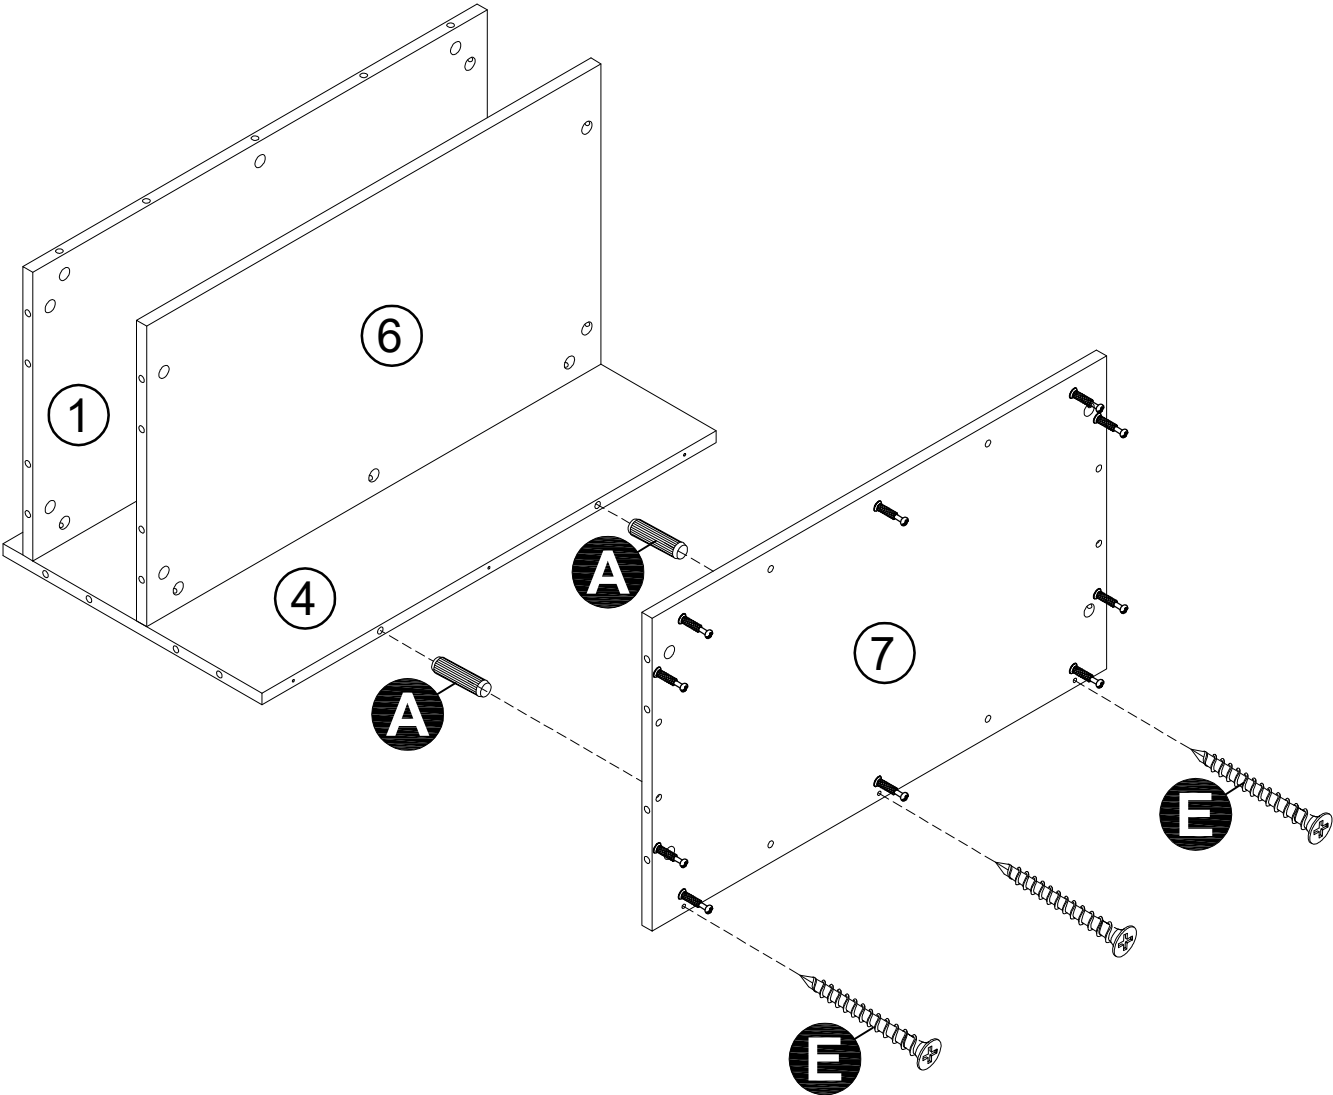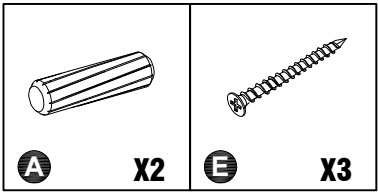


STEP 5

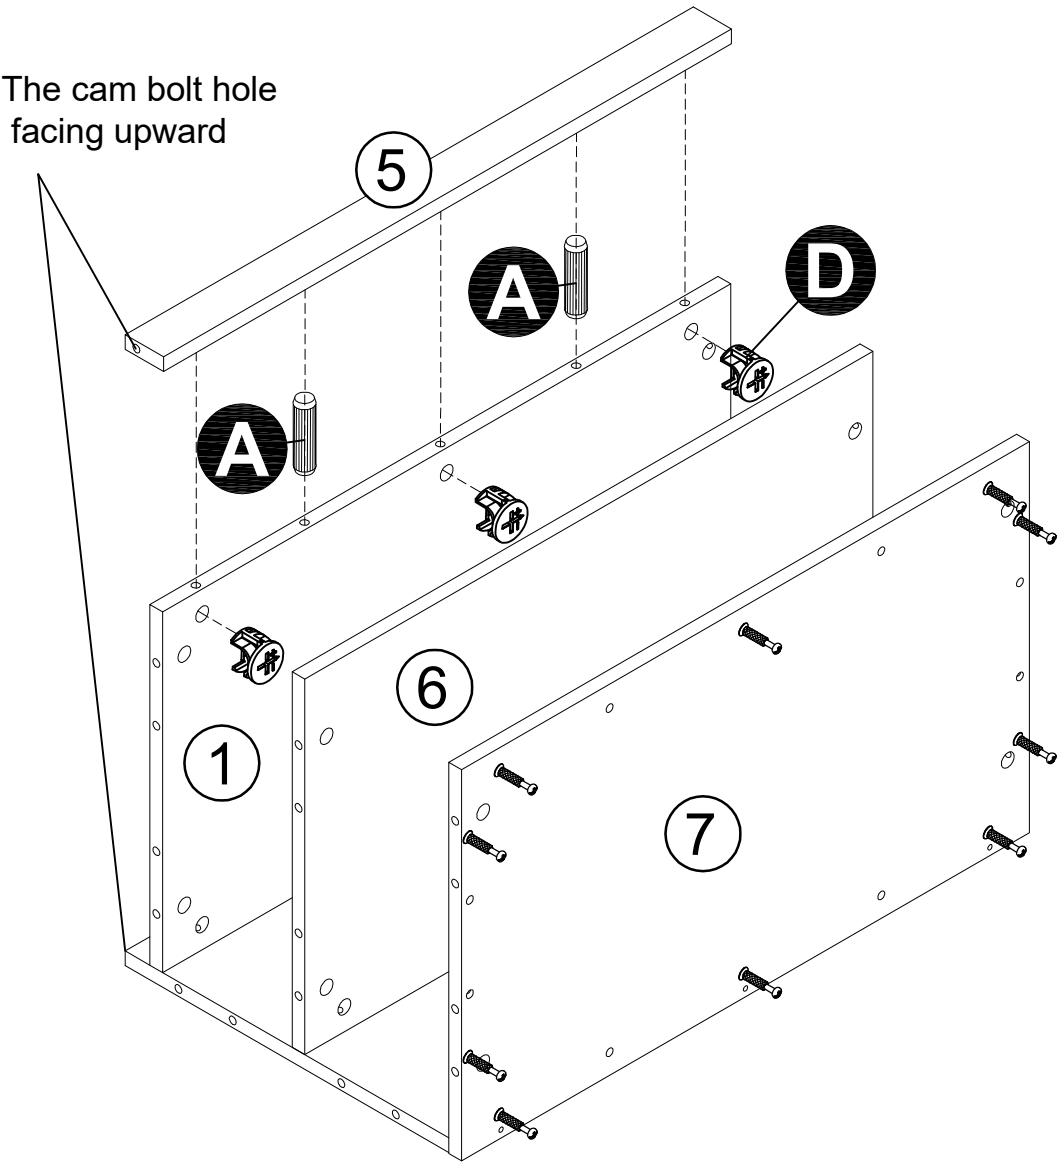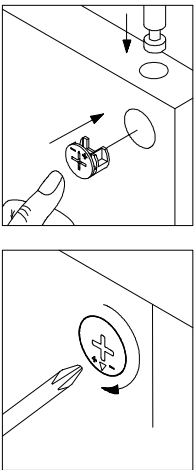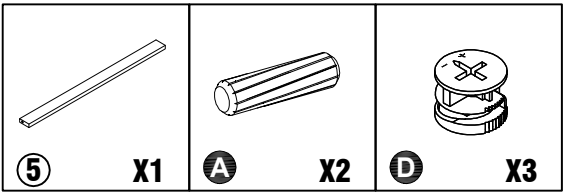


STEP 6





Long Philips
Screwdriver
(Not Included)

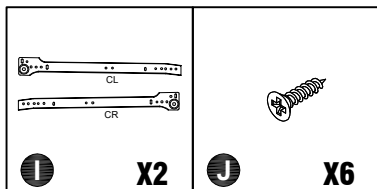





The opening and the cam bolt
facing the same direction

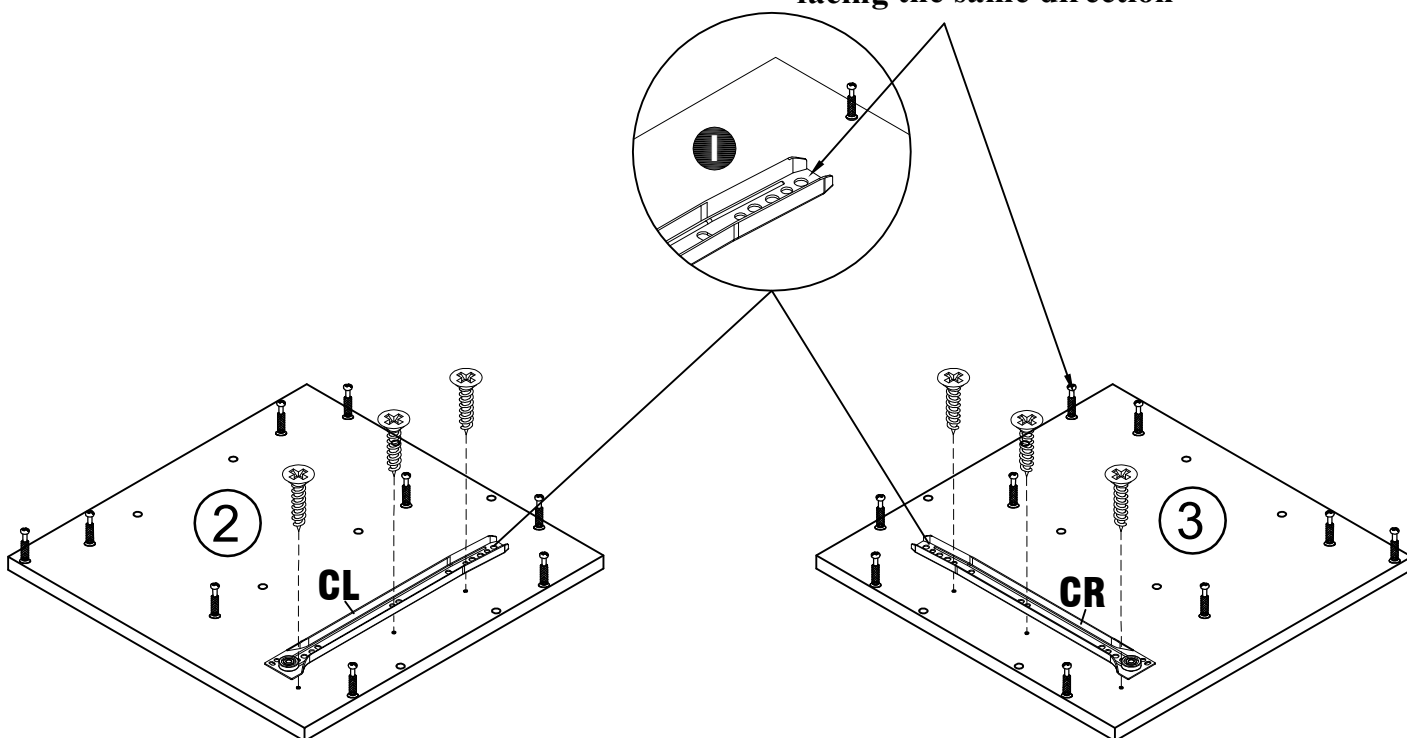



Note: The drawer slides are
marked with "CL" and "CR."
Be sure to correctly differentiate
between them before installation.

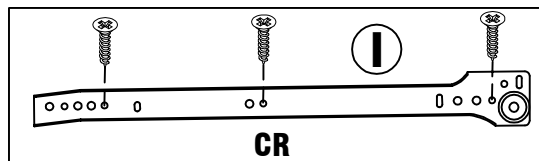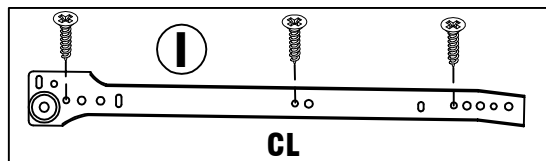


STEP 7

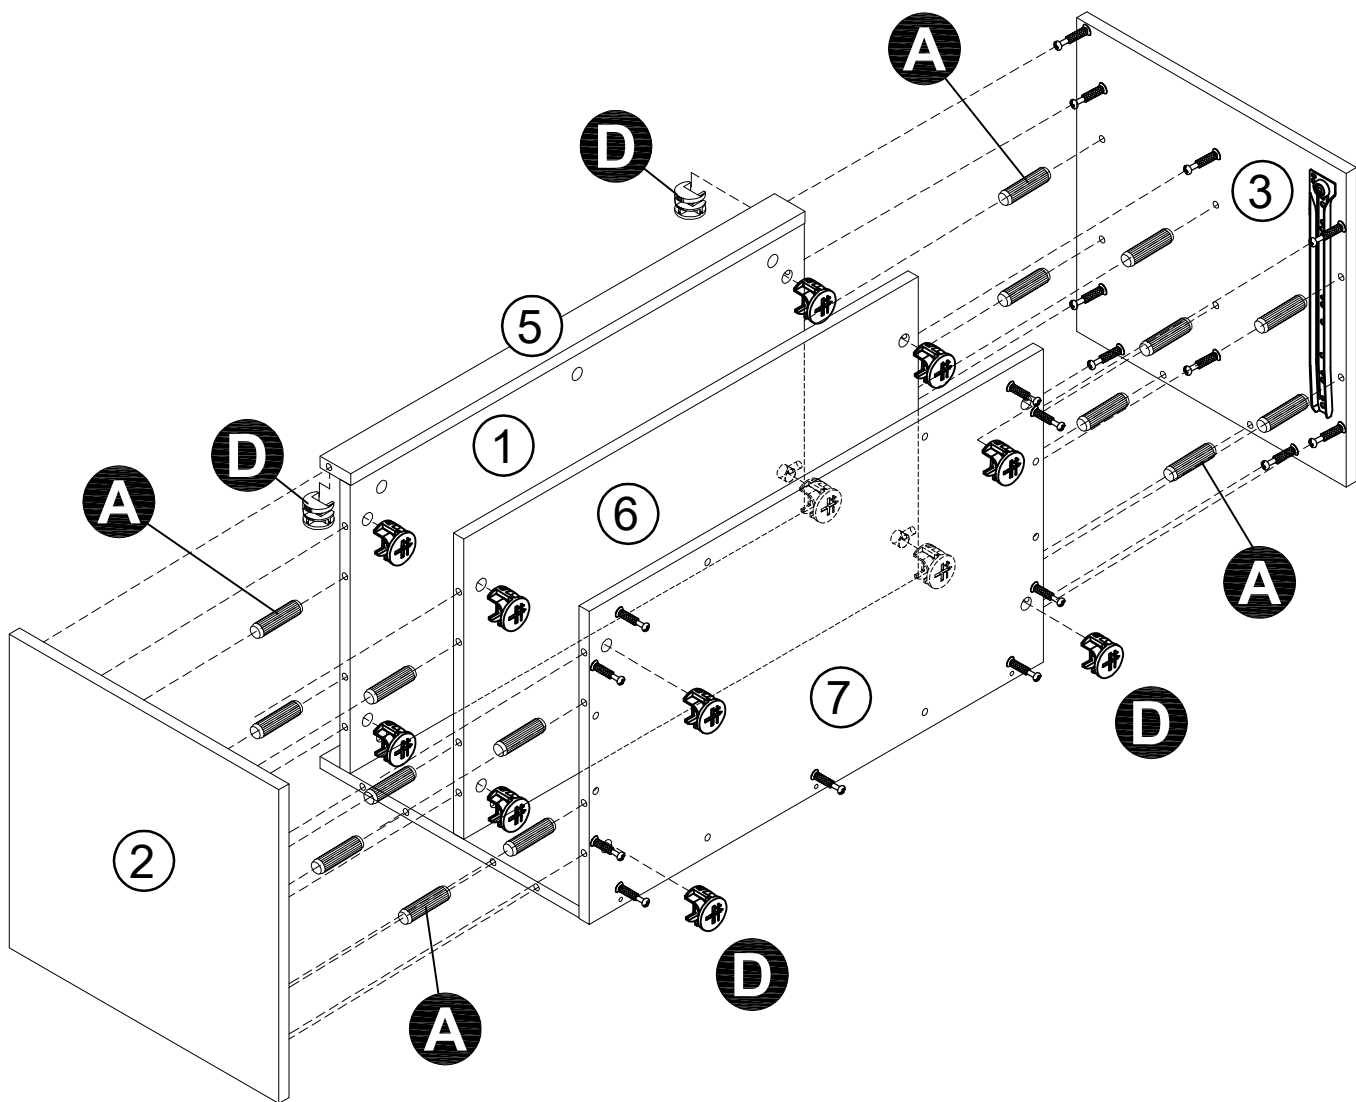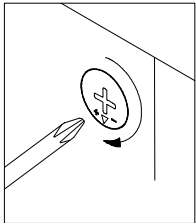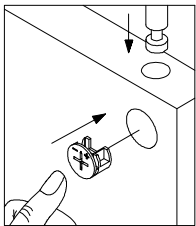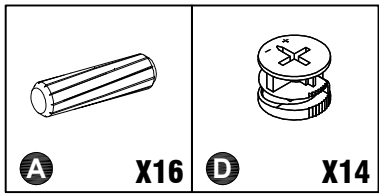




STEP 8

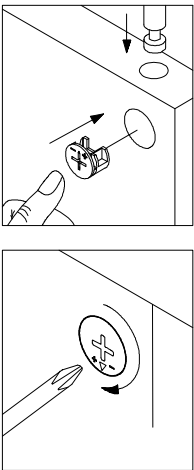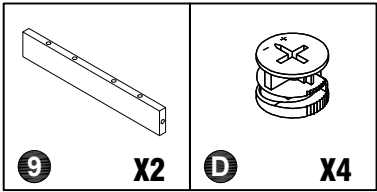




The cam bolt holes
facing the same direction

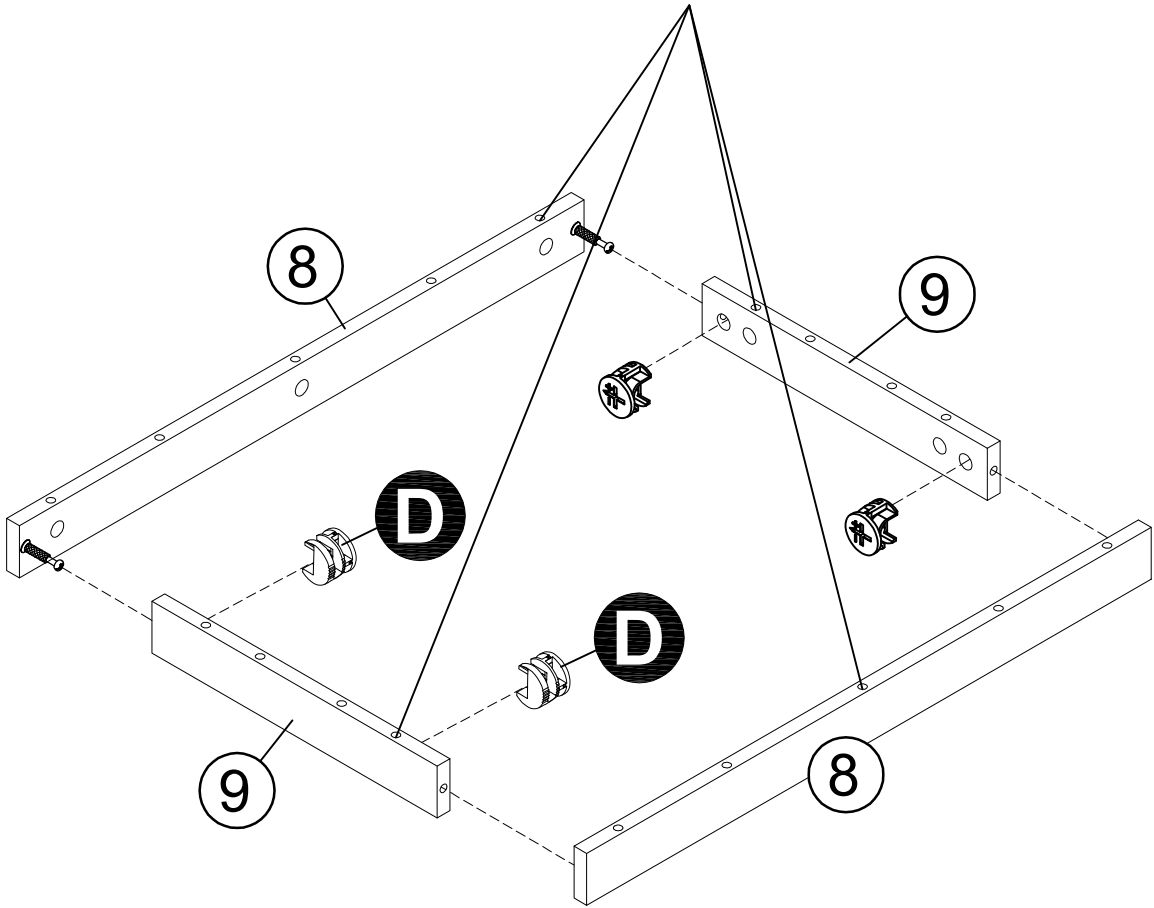



STEP 9

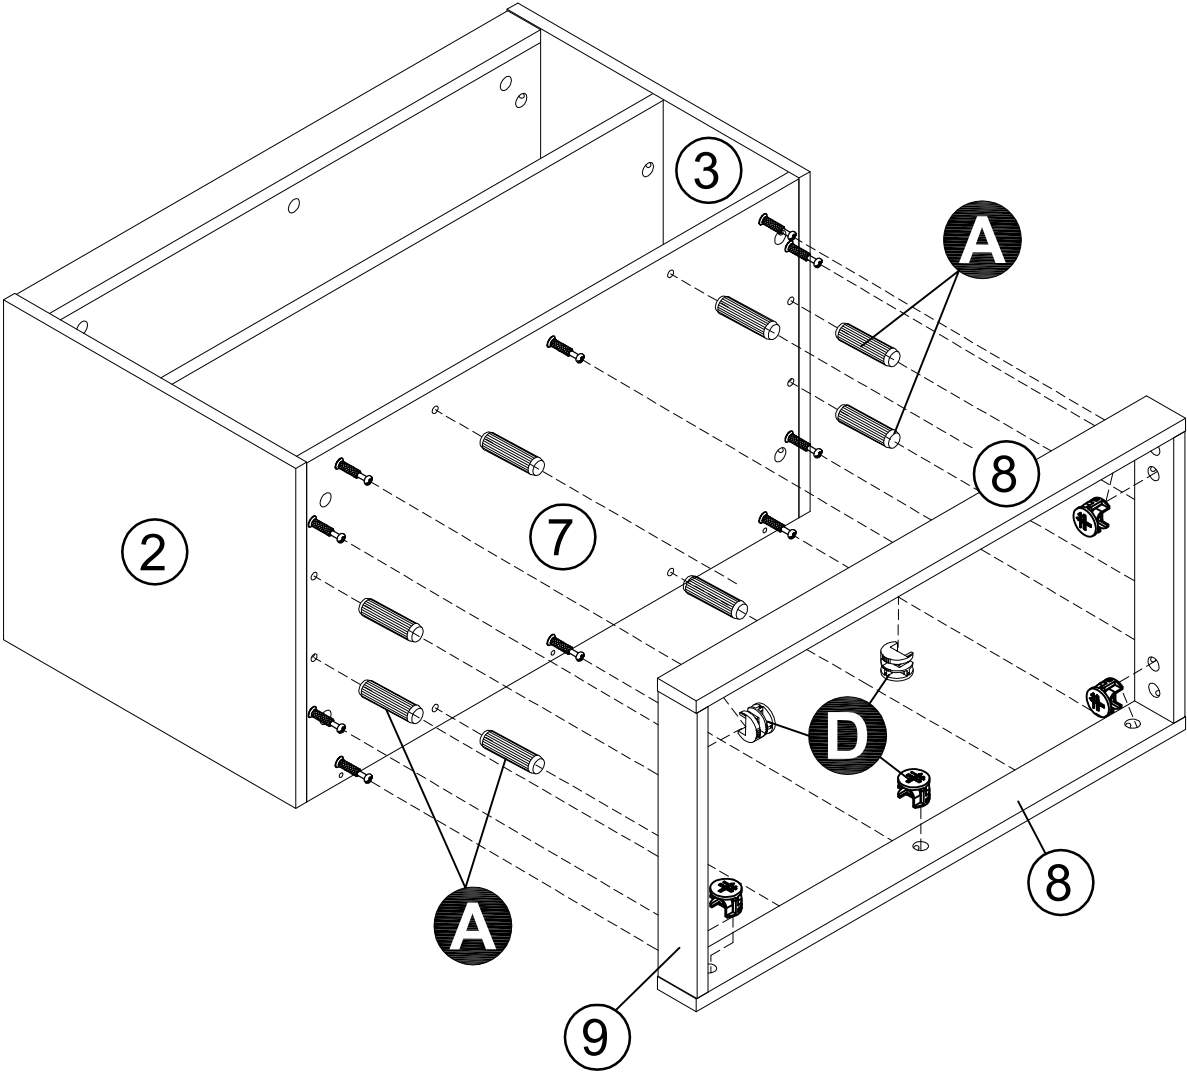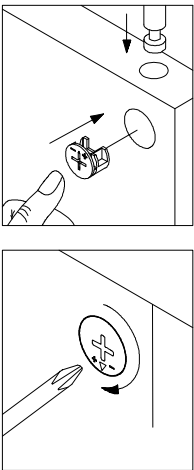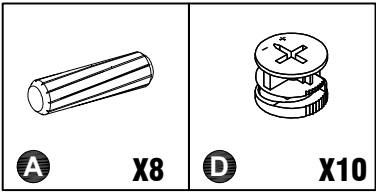


STEP 10

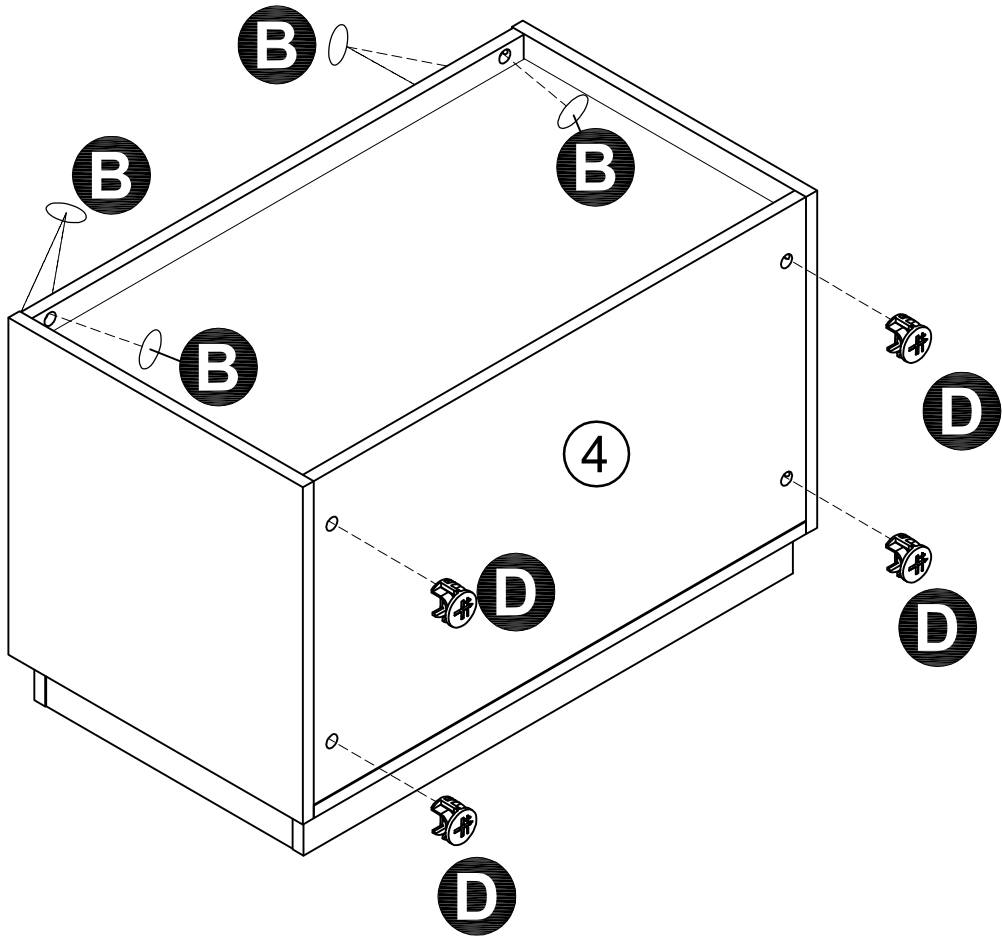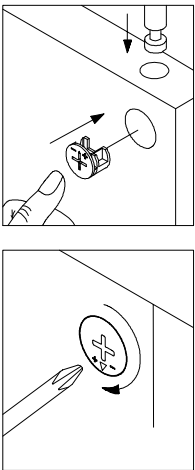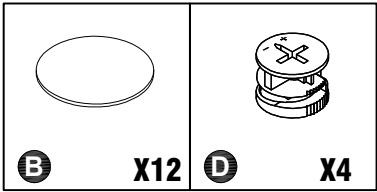




STEP 11


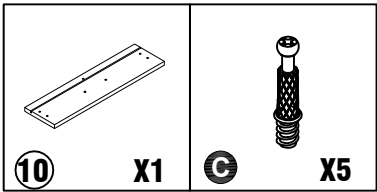


Philips
Screwdriver
(Not Included)


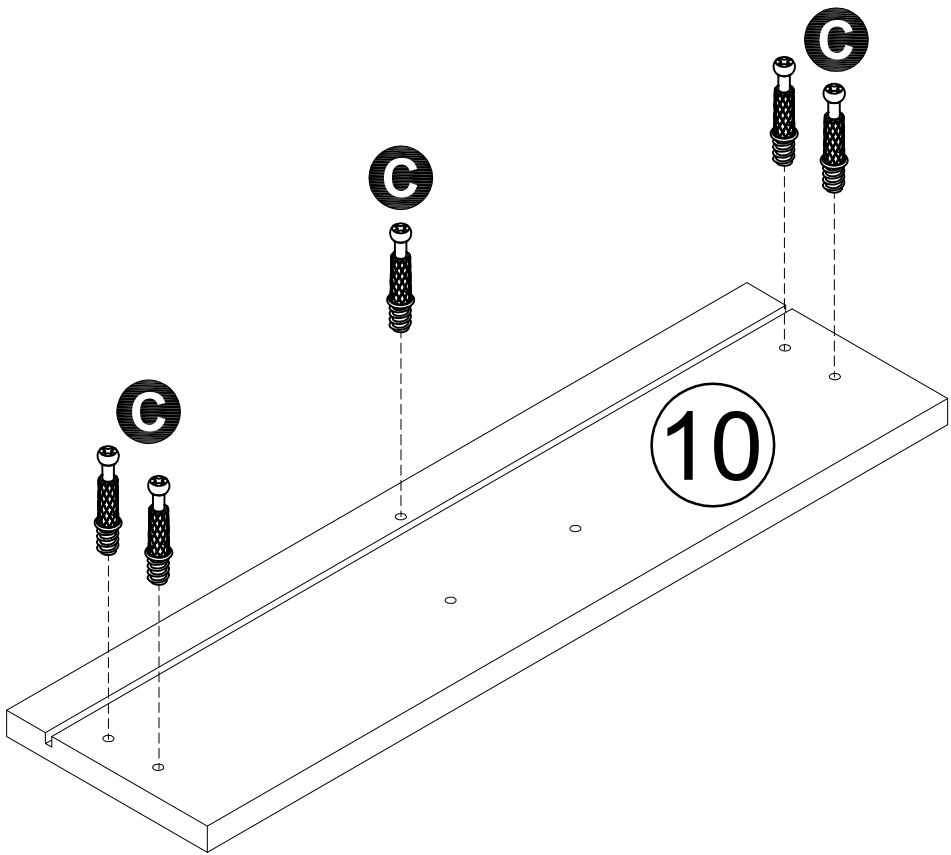


STEP 12


 11 X1	 12 X1	 14 X1	 15 X1
 B X4	 F X5		

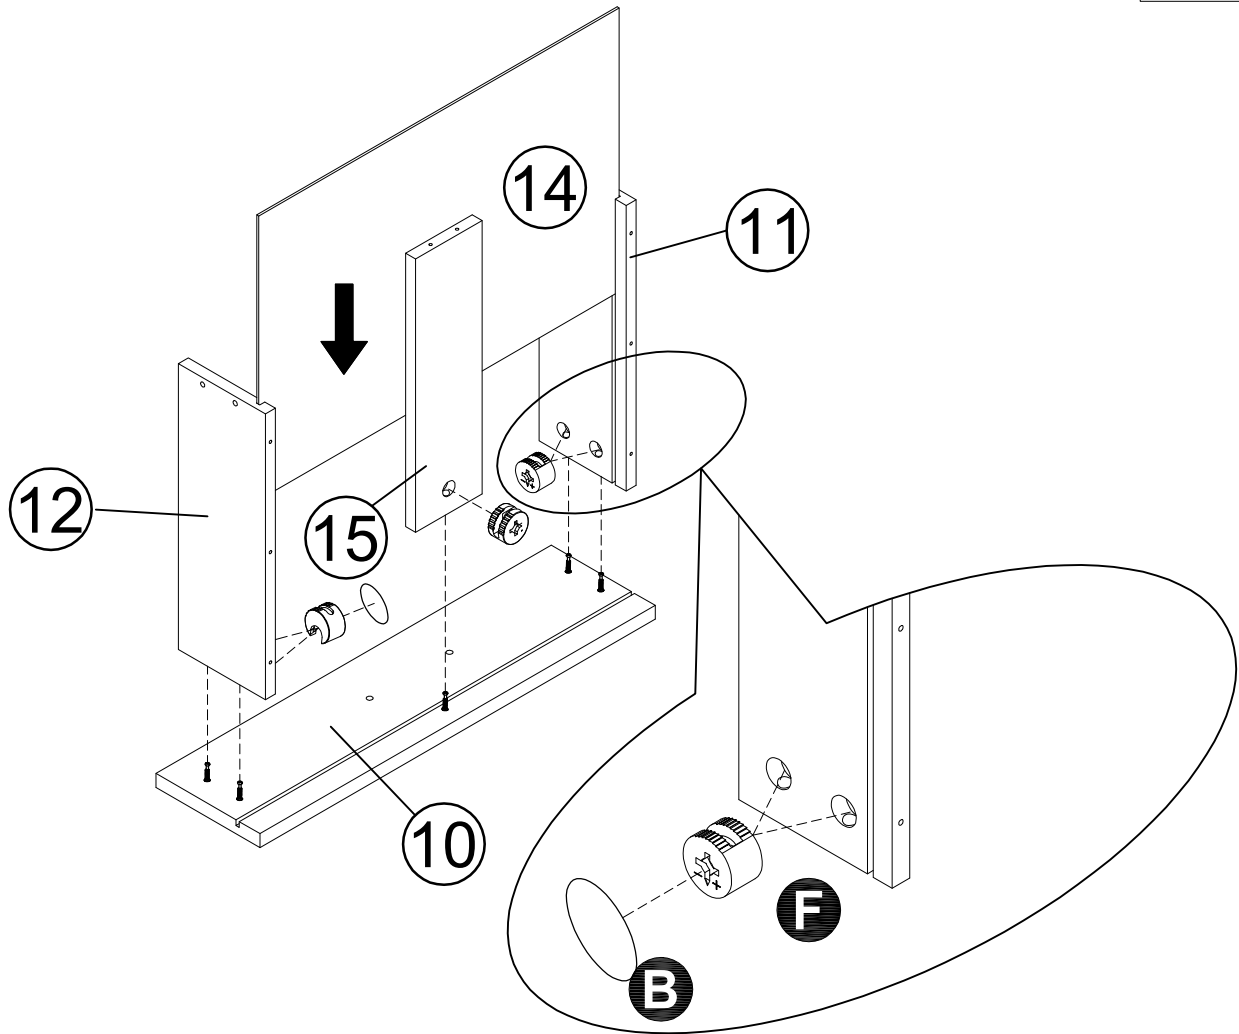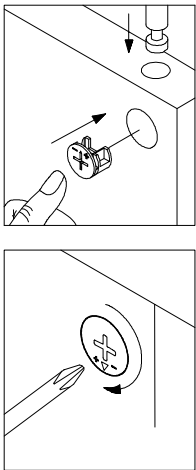






STEP 13

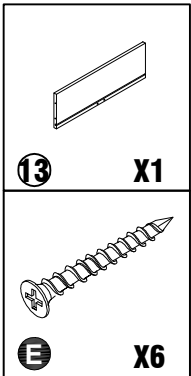






Philips
Screwdriver
(Not Included)

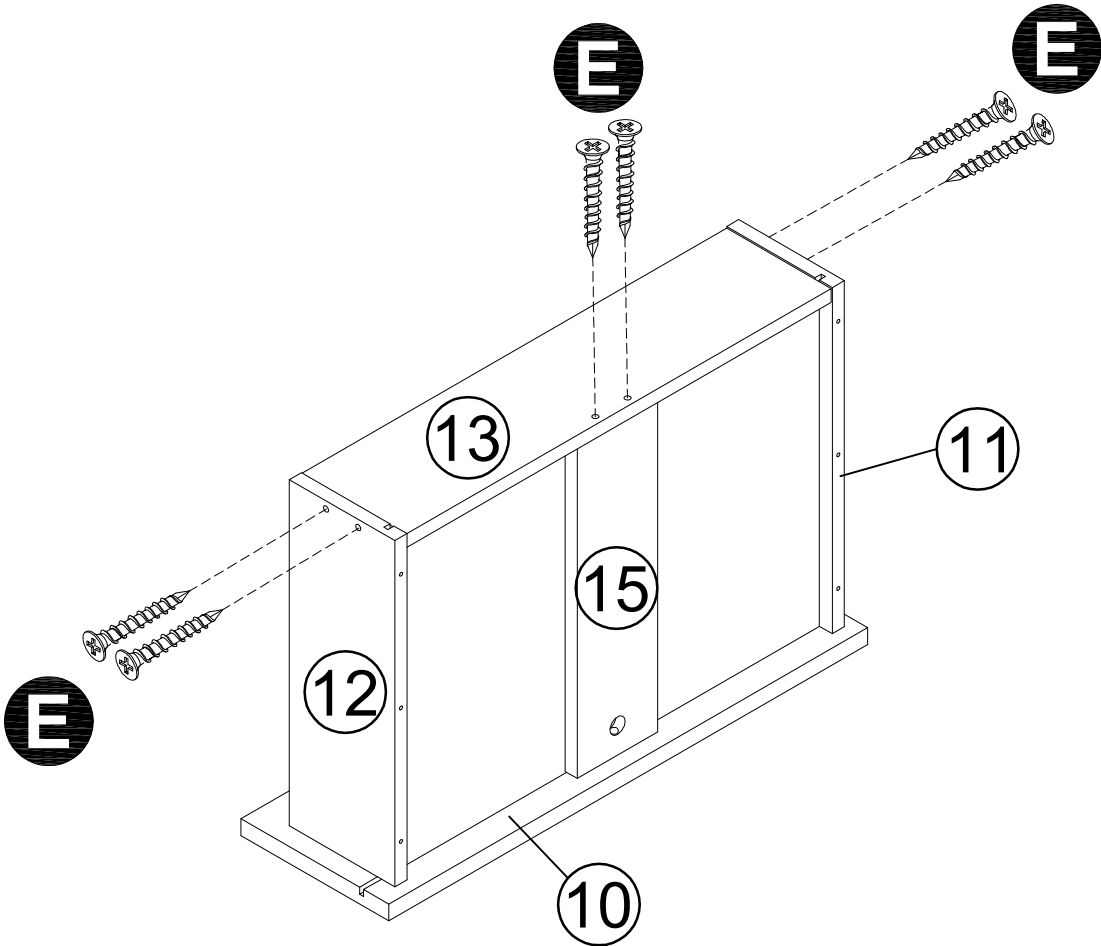


STEP 14

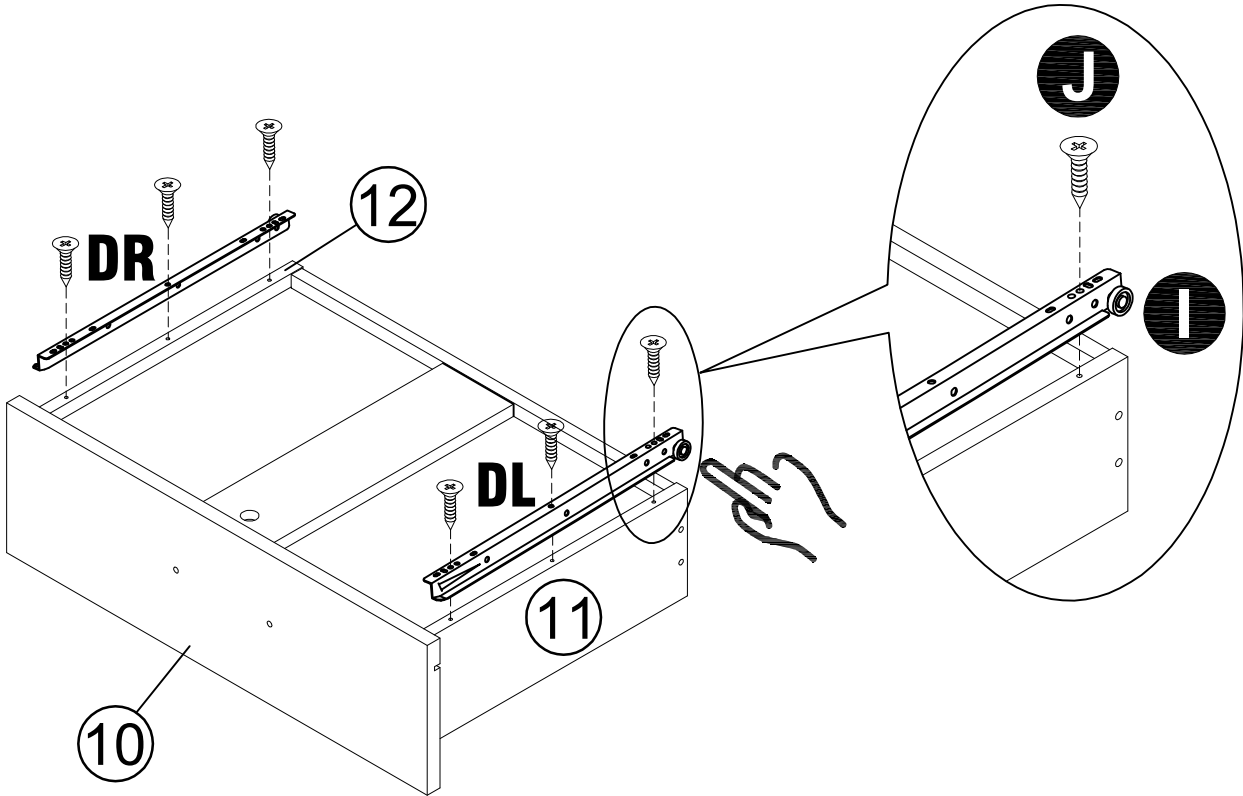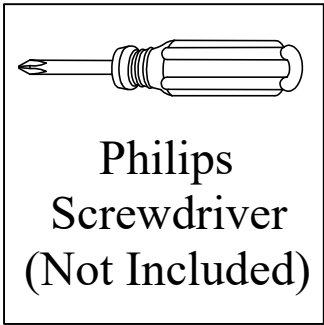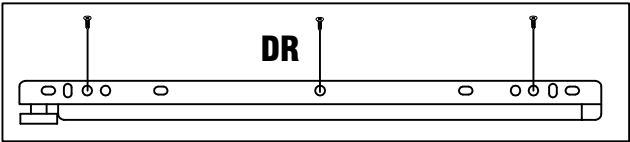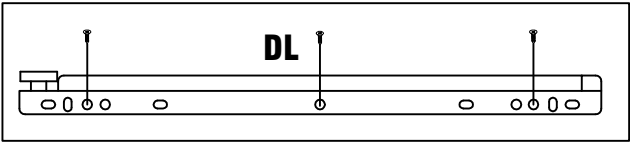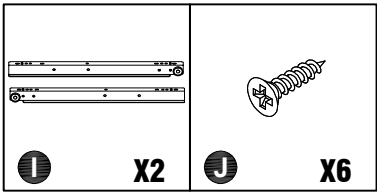

STEP 15

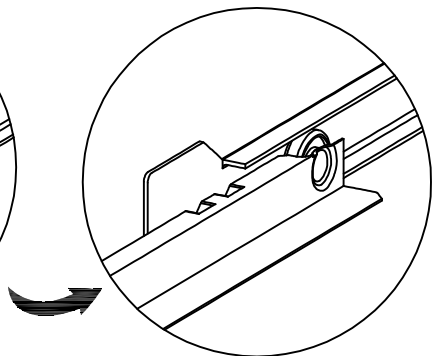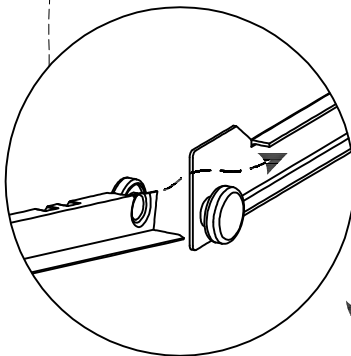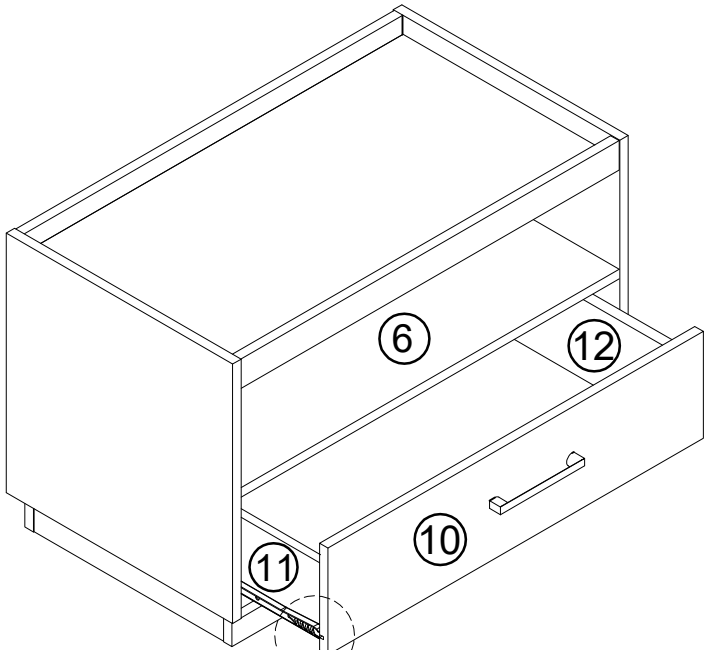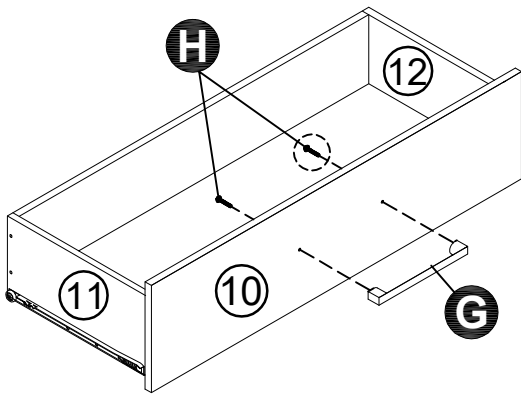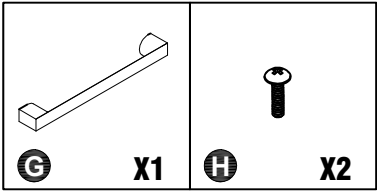

STEP 16

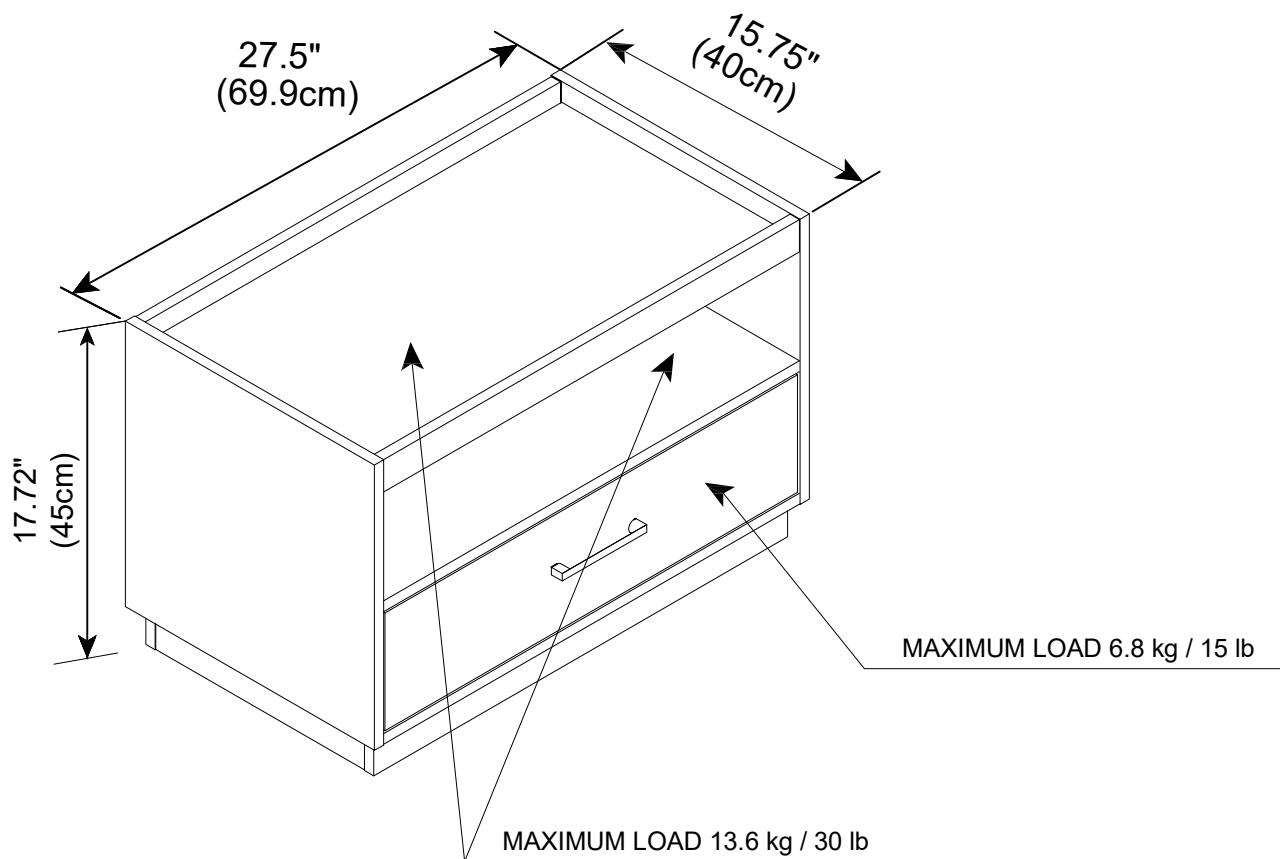

SPECIFICATIONS

ASSEMBLED DIMENSIONS(W x D x H)


27.5" x 15.75 " x 17.72"

69.9 x 40 x 45 cm



MAXIMUM WEIGHT CAPACITY

Top: 30 lb


STEP 17

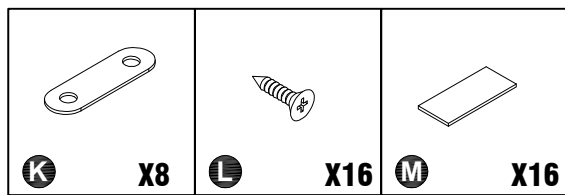


NOTE: Please remove the protective film before use.

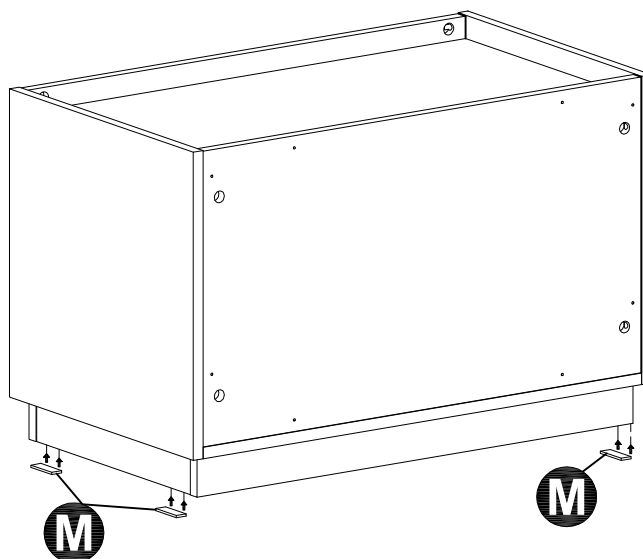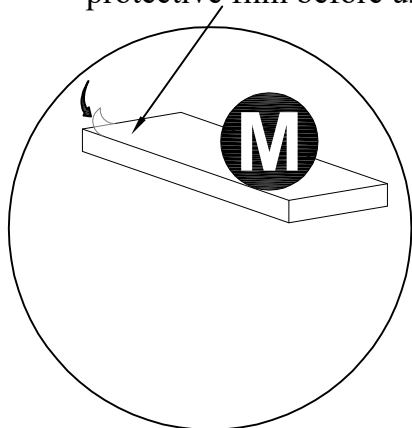


According to your needs. ↓

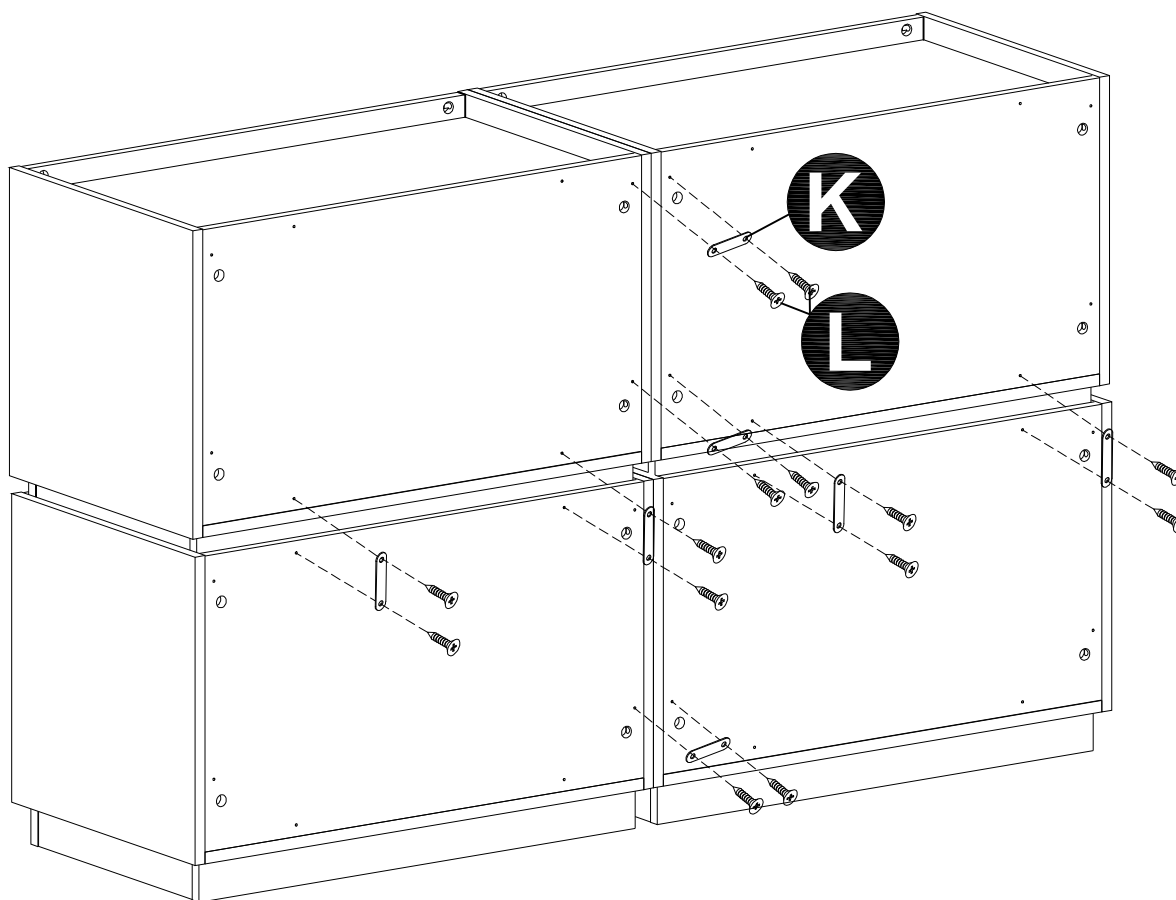

STEP 18

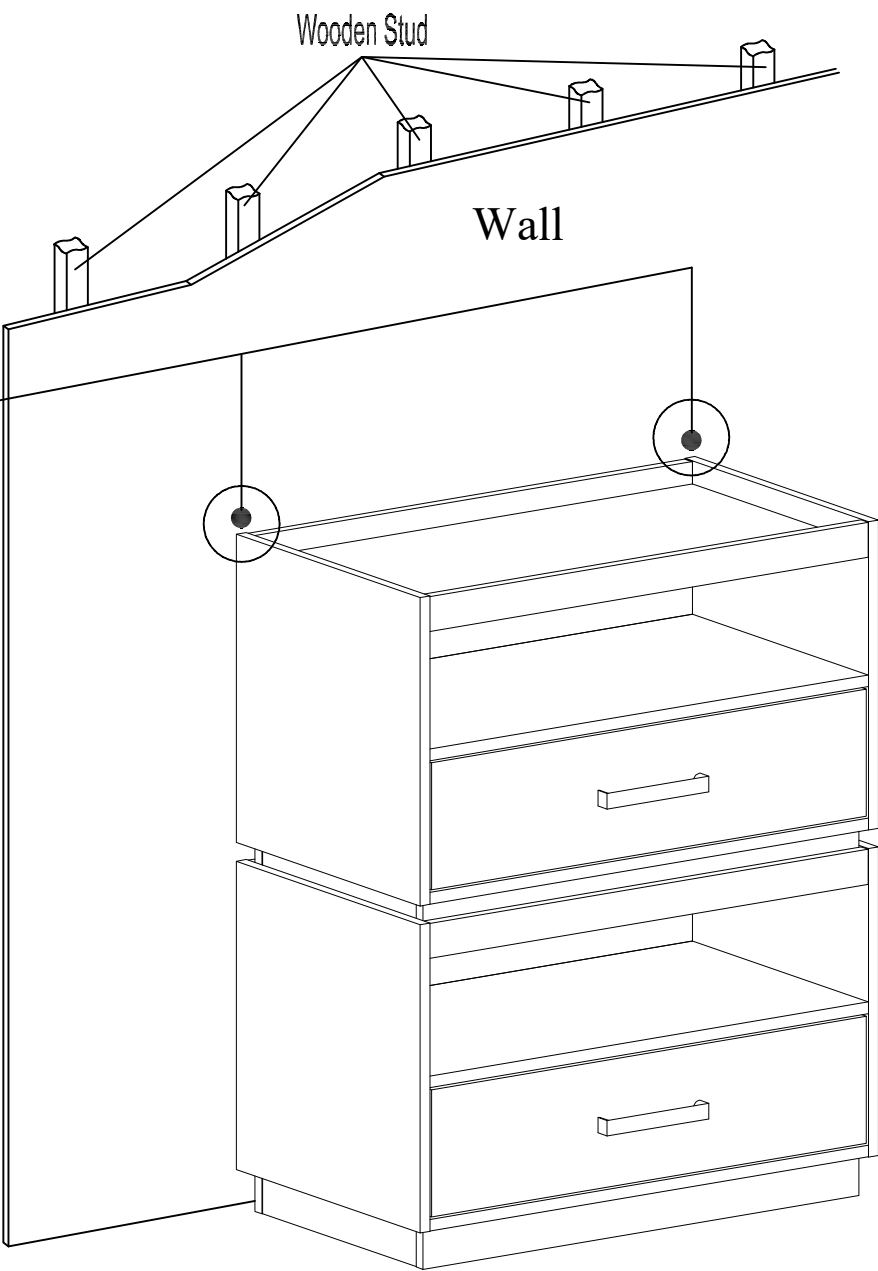

Using the pilot
holes as a guide
Short Screw

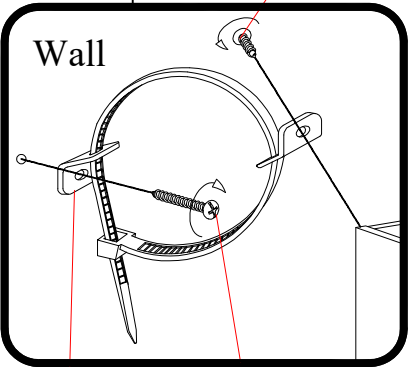

Metal
Bracket

Long Screw