



DESIGNED FOR LIFE

Assembly Instructions



Shoe Rack

Model No.
HOGA-YS0196



Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video

Step 1


Scan the QR code.




Installation Video

Step 2



Search with the Model No.
(on the bottom left corner of the title page)

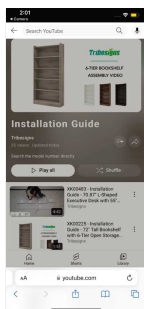

Note: If you can't find the assembly video, please contact us.

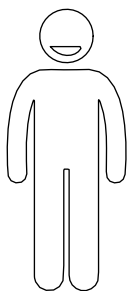


X2

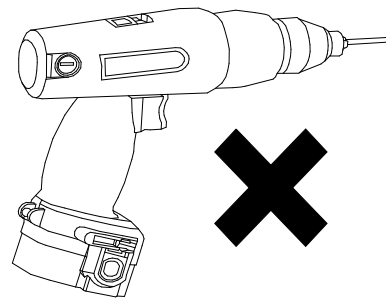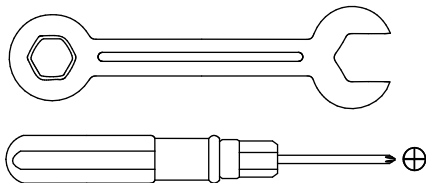



We recommend using hand tools for assembly.

If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

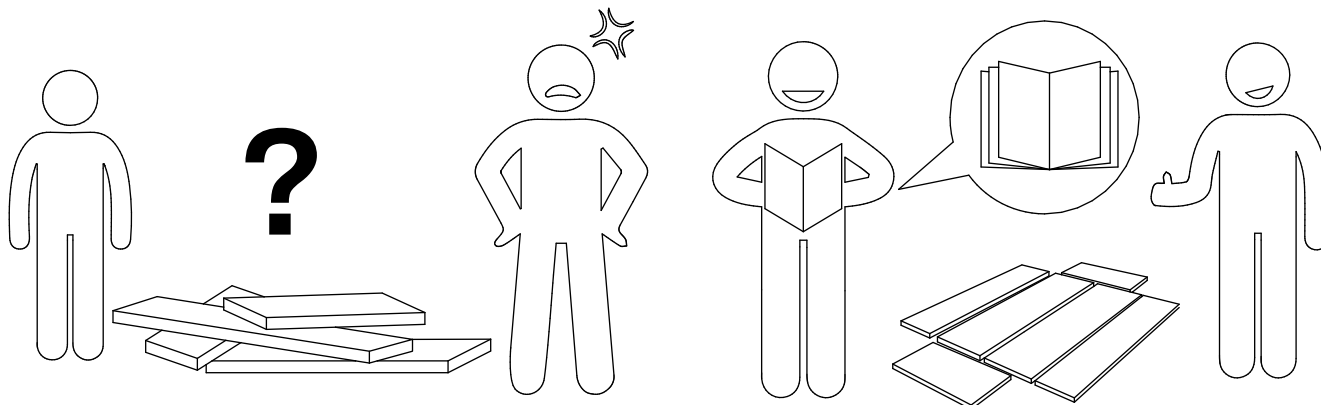



AVOID SCRATCHES


In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.

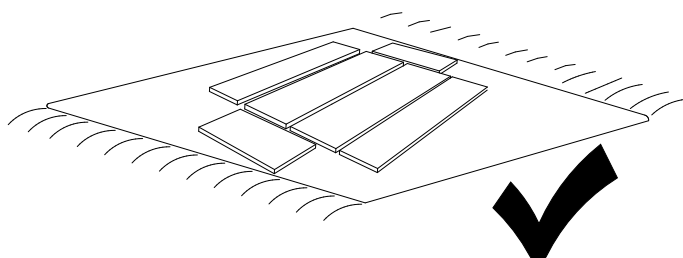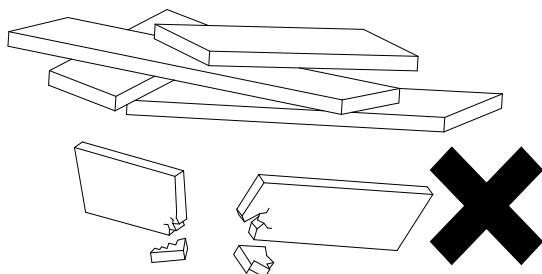

Install the Anti-Tip Straps

Using the anti-tip straps can reduce the risk of tipping over, but can not eliminate it.

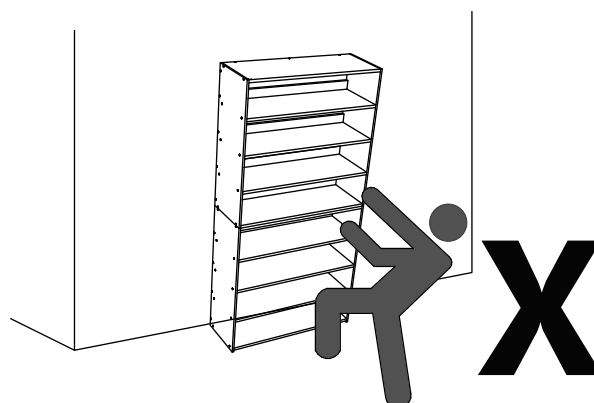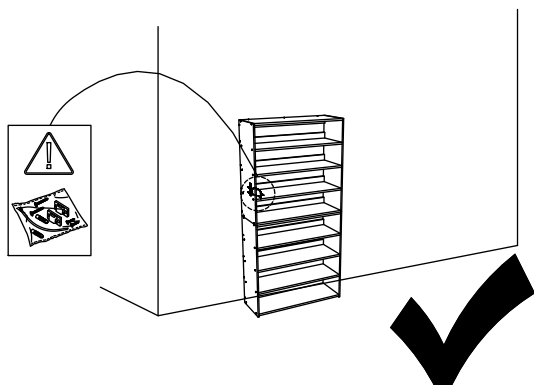

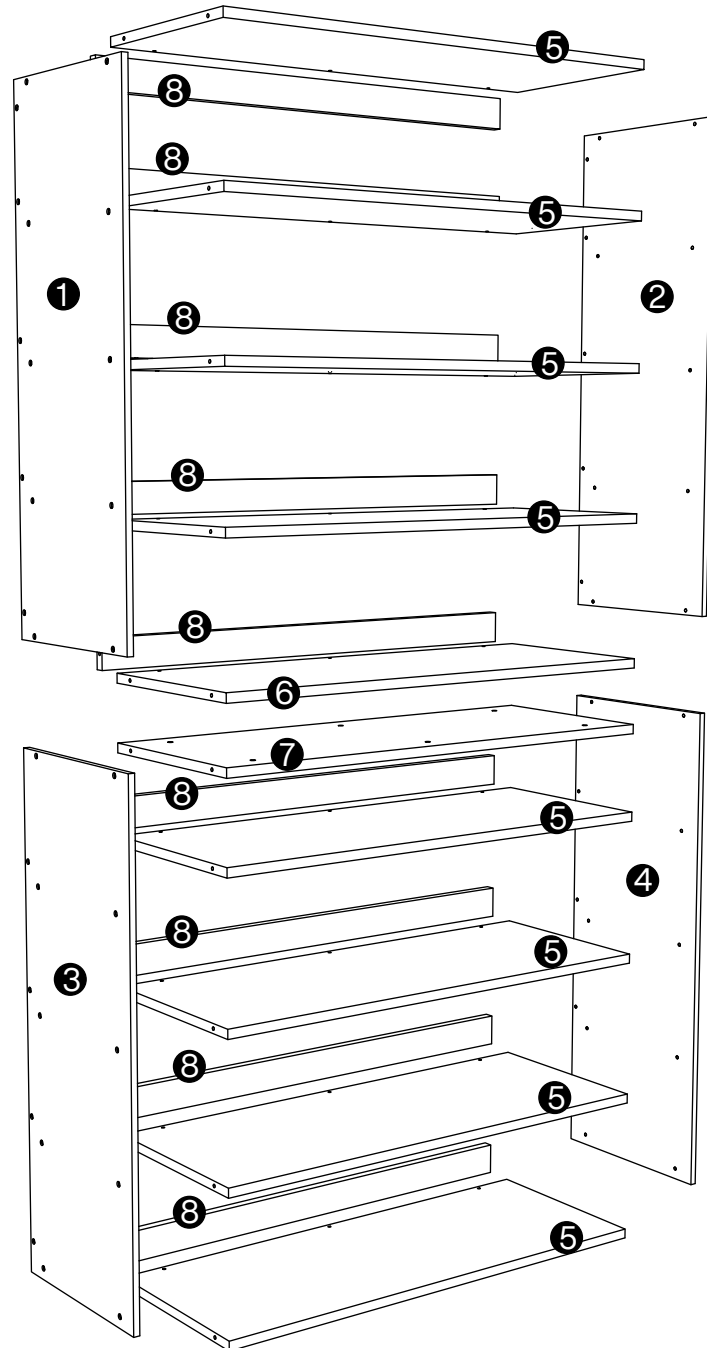

⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge.
Contact us for a free replacement if you encounter any damaged or missing parts.



Parts List



1 1pc	2 1pc
3 1pc	4 1pc
5 8 pcs	6 1pc
7 1pc	8 9 pcs

Hardware List


A	B	C	D	E
M6x20mm	M5x38mm		M3	M4
6 pcs	85 pcs	1 pc	1 pc	1 pc




1

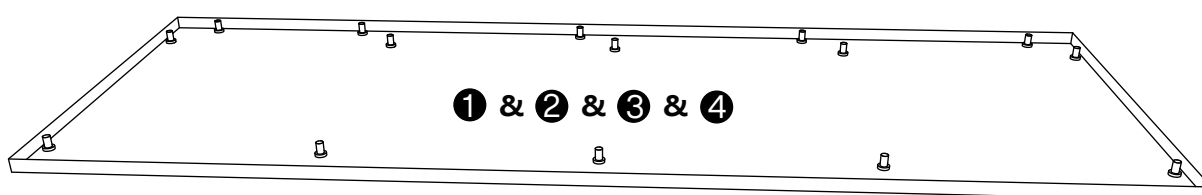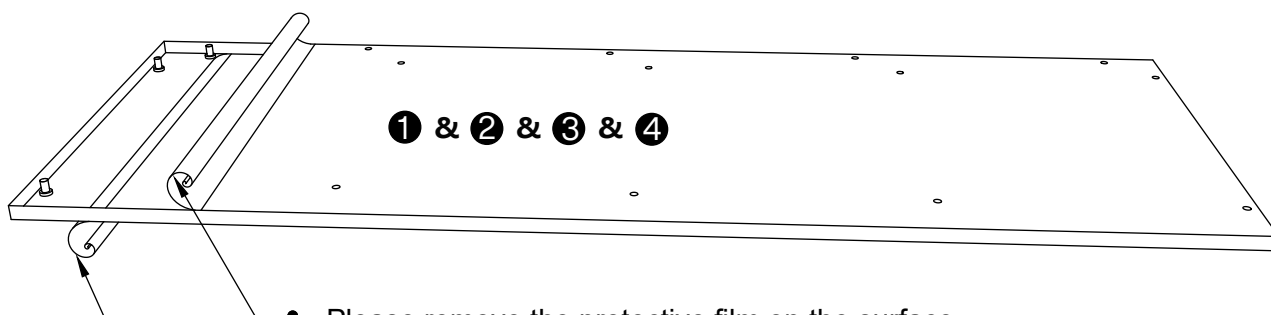


2

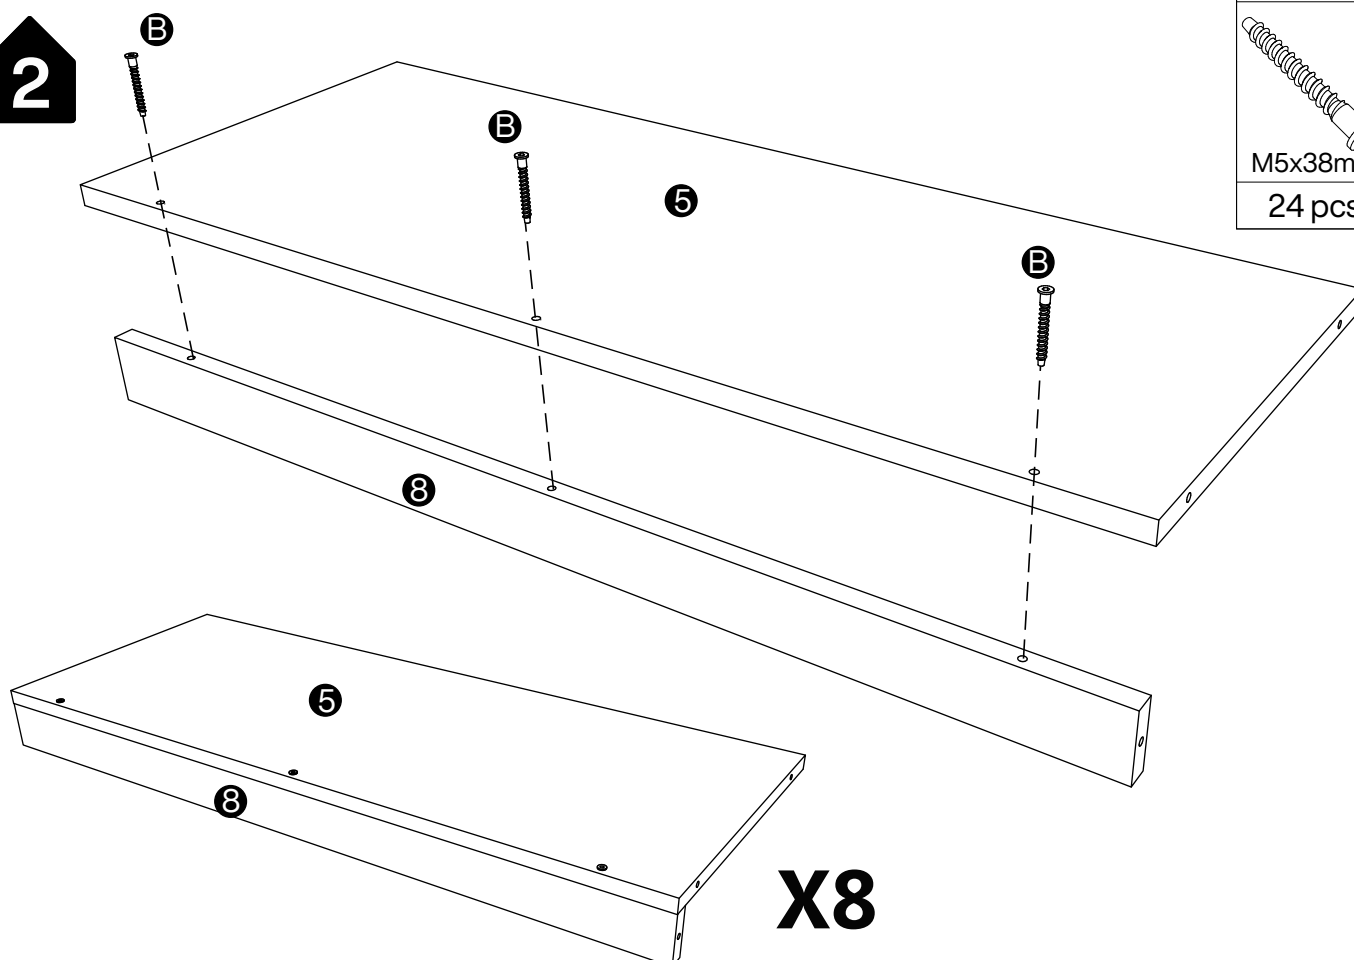

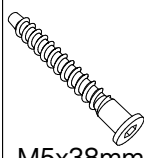
B

M5x38mm
24 pcs

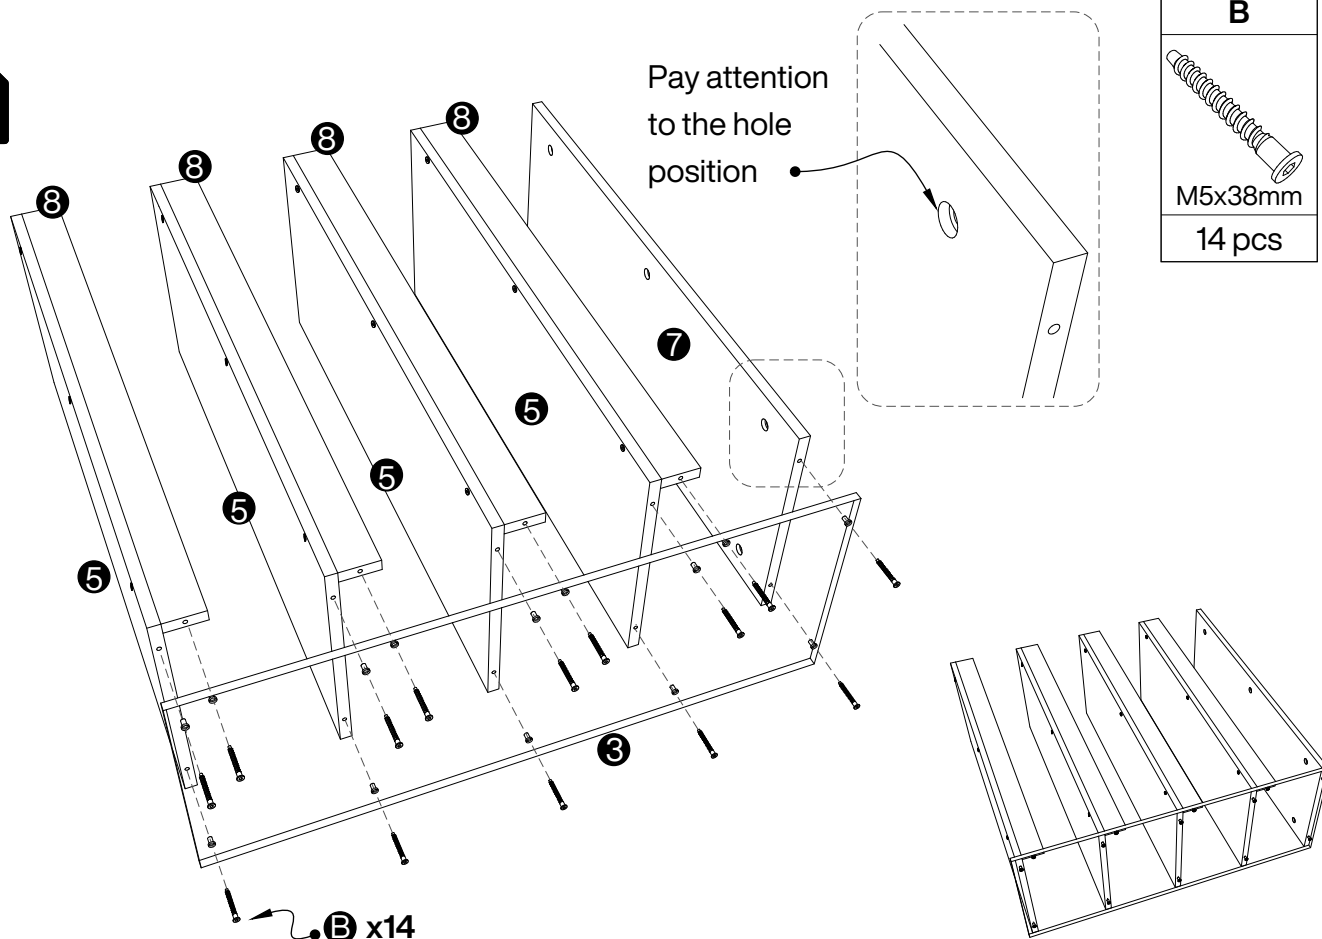

3

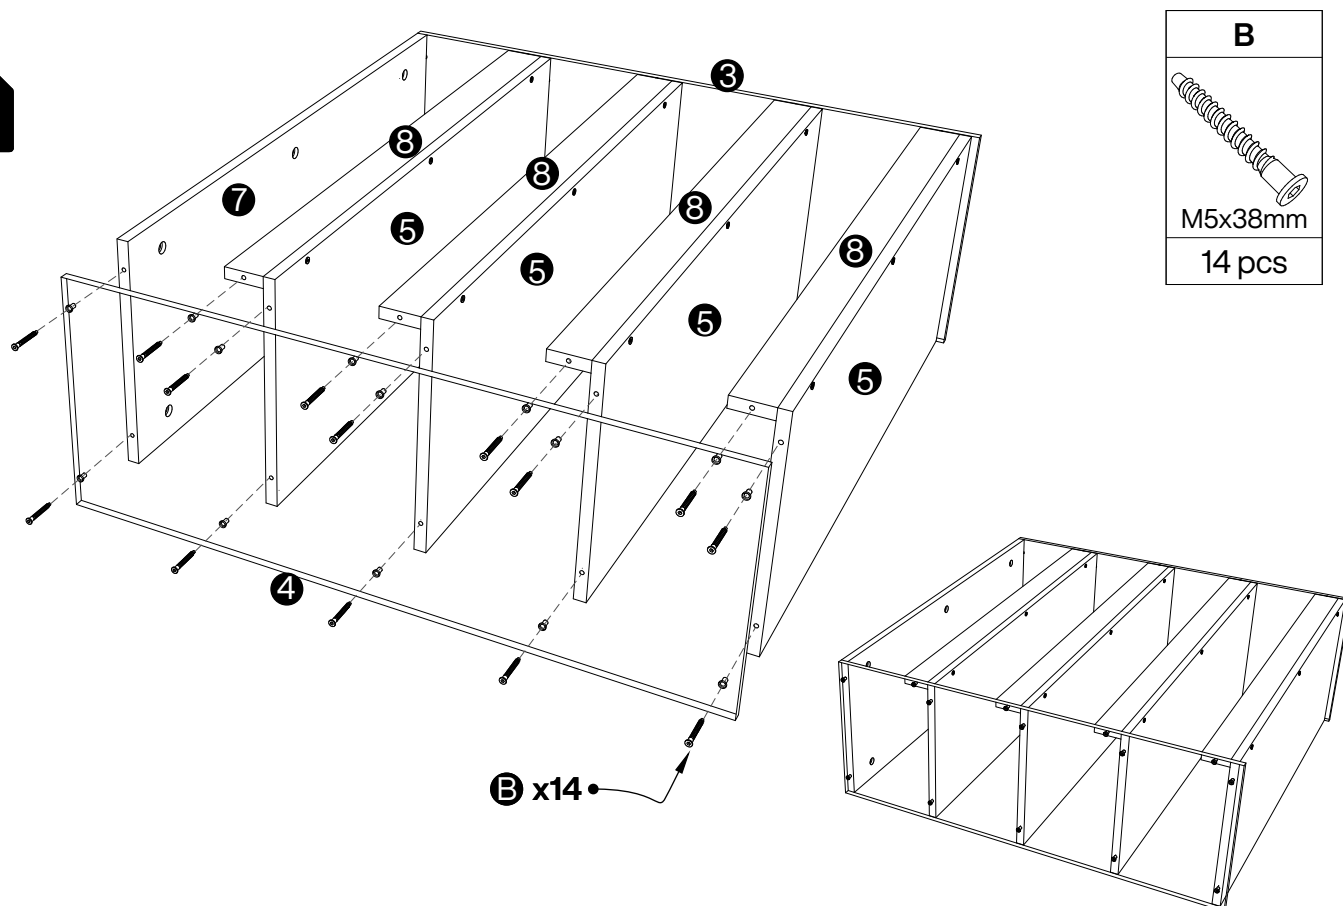



4








5

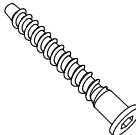B

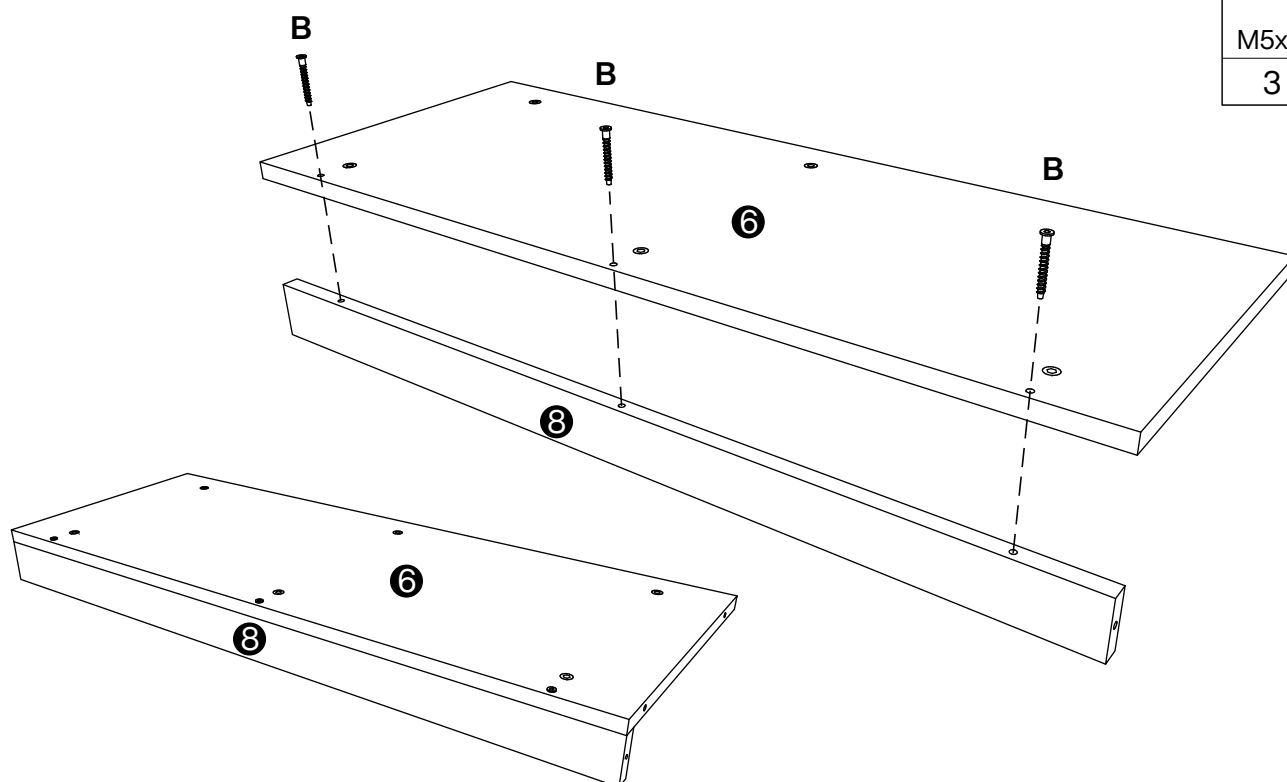M5x38mm
3 pcs

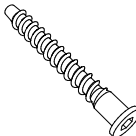


6

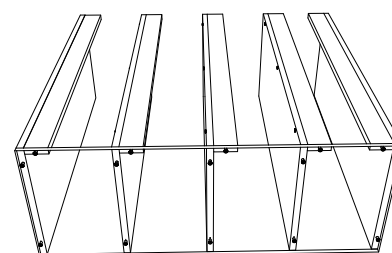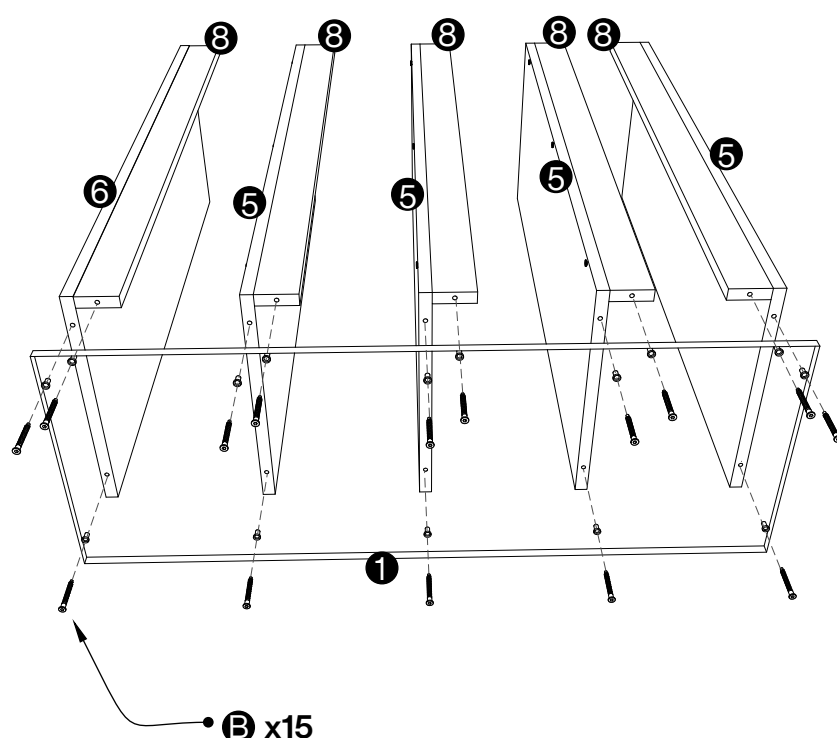B

M5x38mm
15 pcs




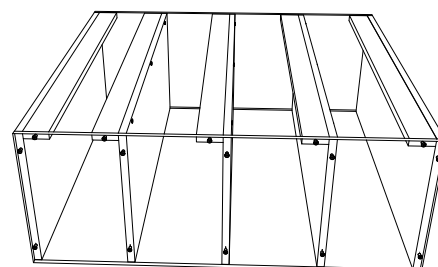

7



B


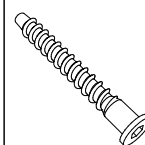


M5x38mm


15 pcs

B x15

8






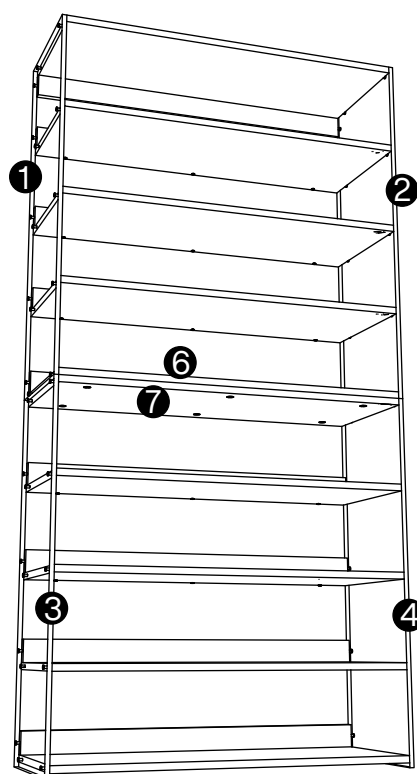
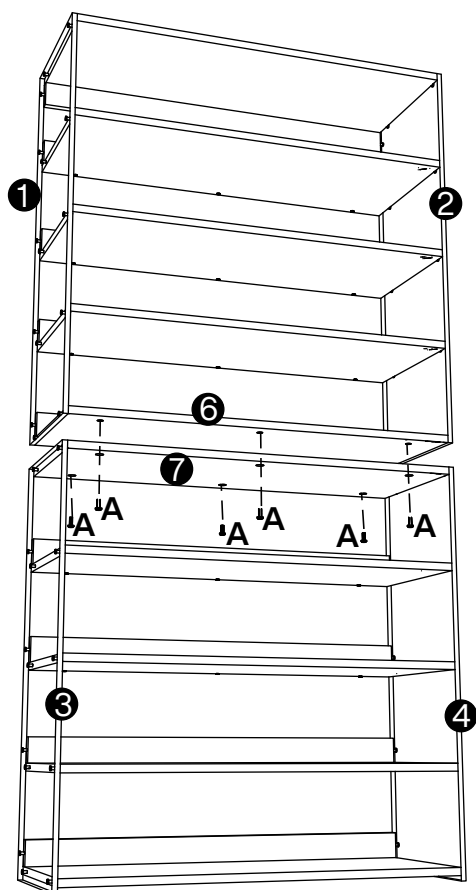


A




M6x20mm


6 pcs

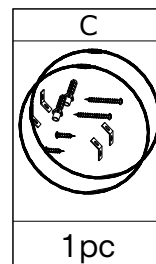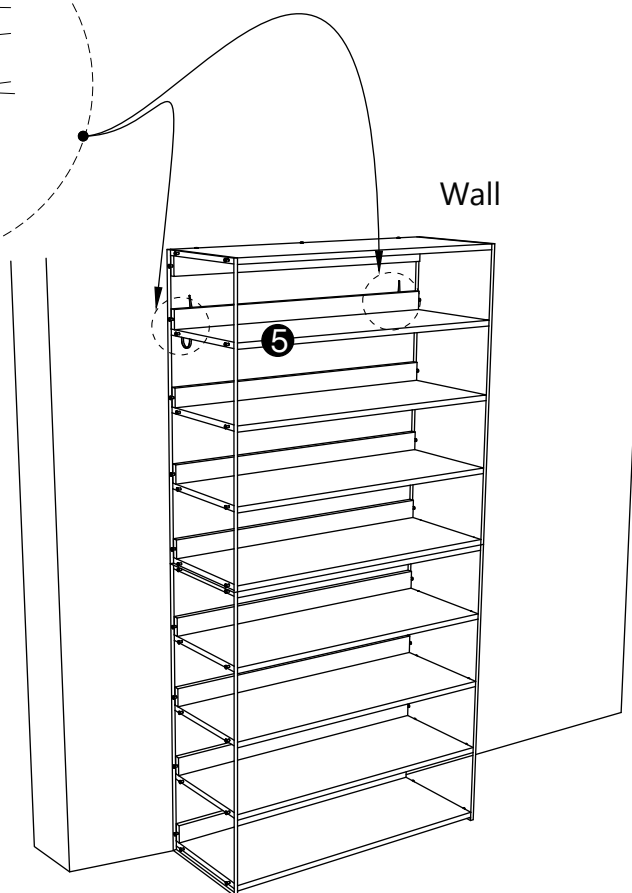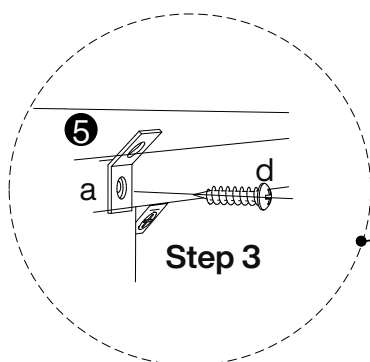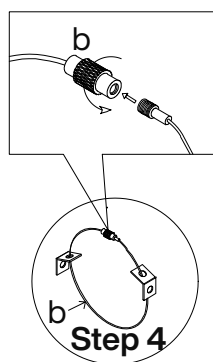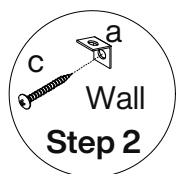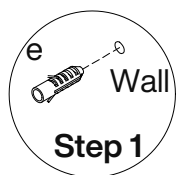**9**


2x

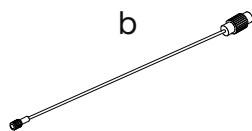


1x



1x



1x



1x

Installation Steps:

1. Drill a hole on the wall, insert the expansion bolt (e) into the hole
2. Secure one bracket (a) into the expansion bolt (e) using the screw (c)
3. Position the furniture in place. Attach another bracket (a) (aligns with the bracket on the wall) to the back edge of unit top using the screw (d).
4. Thread the male end of the steel cable (b) through both brackets. Securely join the ends by turning the female connector clockwise.


Note:

Before installing the anti-tip kit, please determine where the furniture is to be placed and locate the center line of a wooden stud using a stud finder.
For a concrete wall, ensure no steel bars are inside it.



DESIGNED FOR LIFE

Thank you for your support!

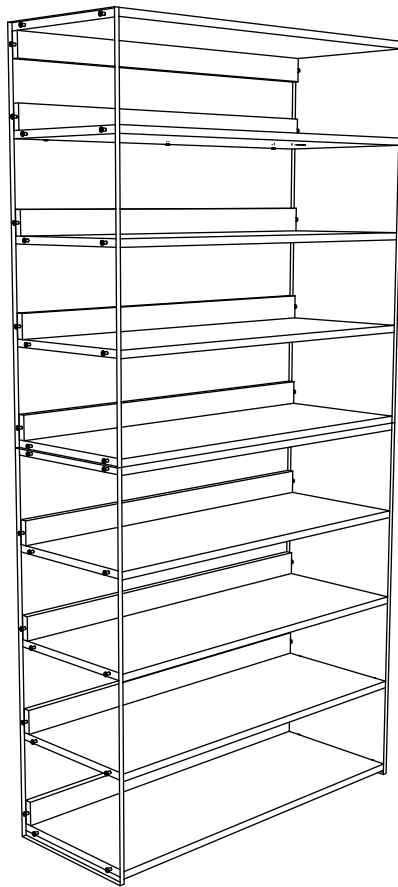

Contact our customer service team



support@tribesigns.com

www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,
Monday to Friday.



Facebook



Instagram




Pinterest



Twitter



YouTube

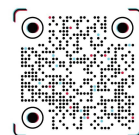

TikTok



WhatsApp