


ASSEMBLY INSTRUCTIONS

FULL LOFT BED WITH BOOKSHELF

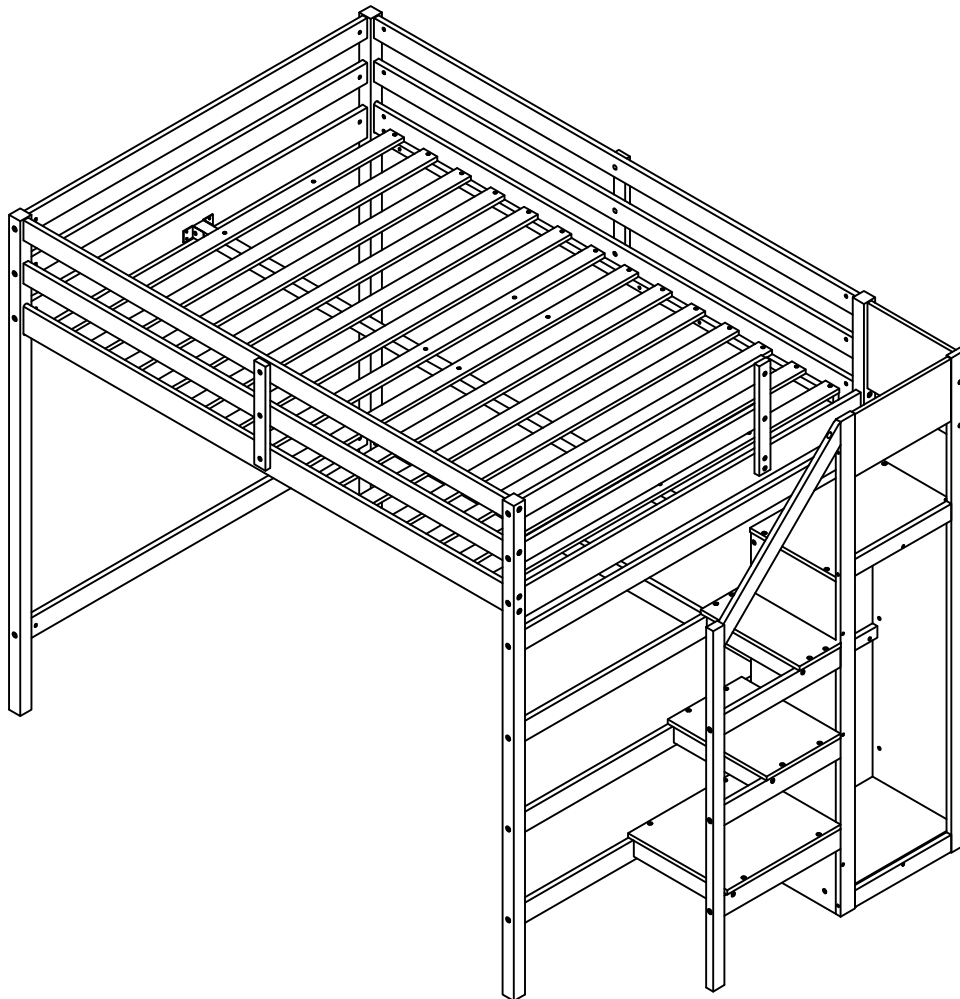

WF310898/WF310899

SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the loft bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-light may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the loft bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the loft bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your loft bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 54" WIDE ON UPPER. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:












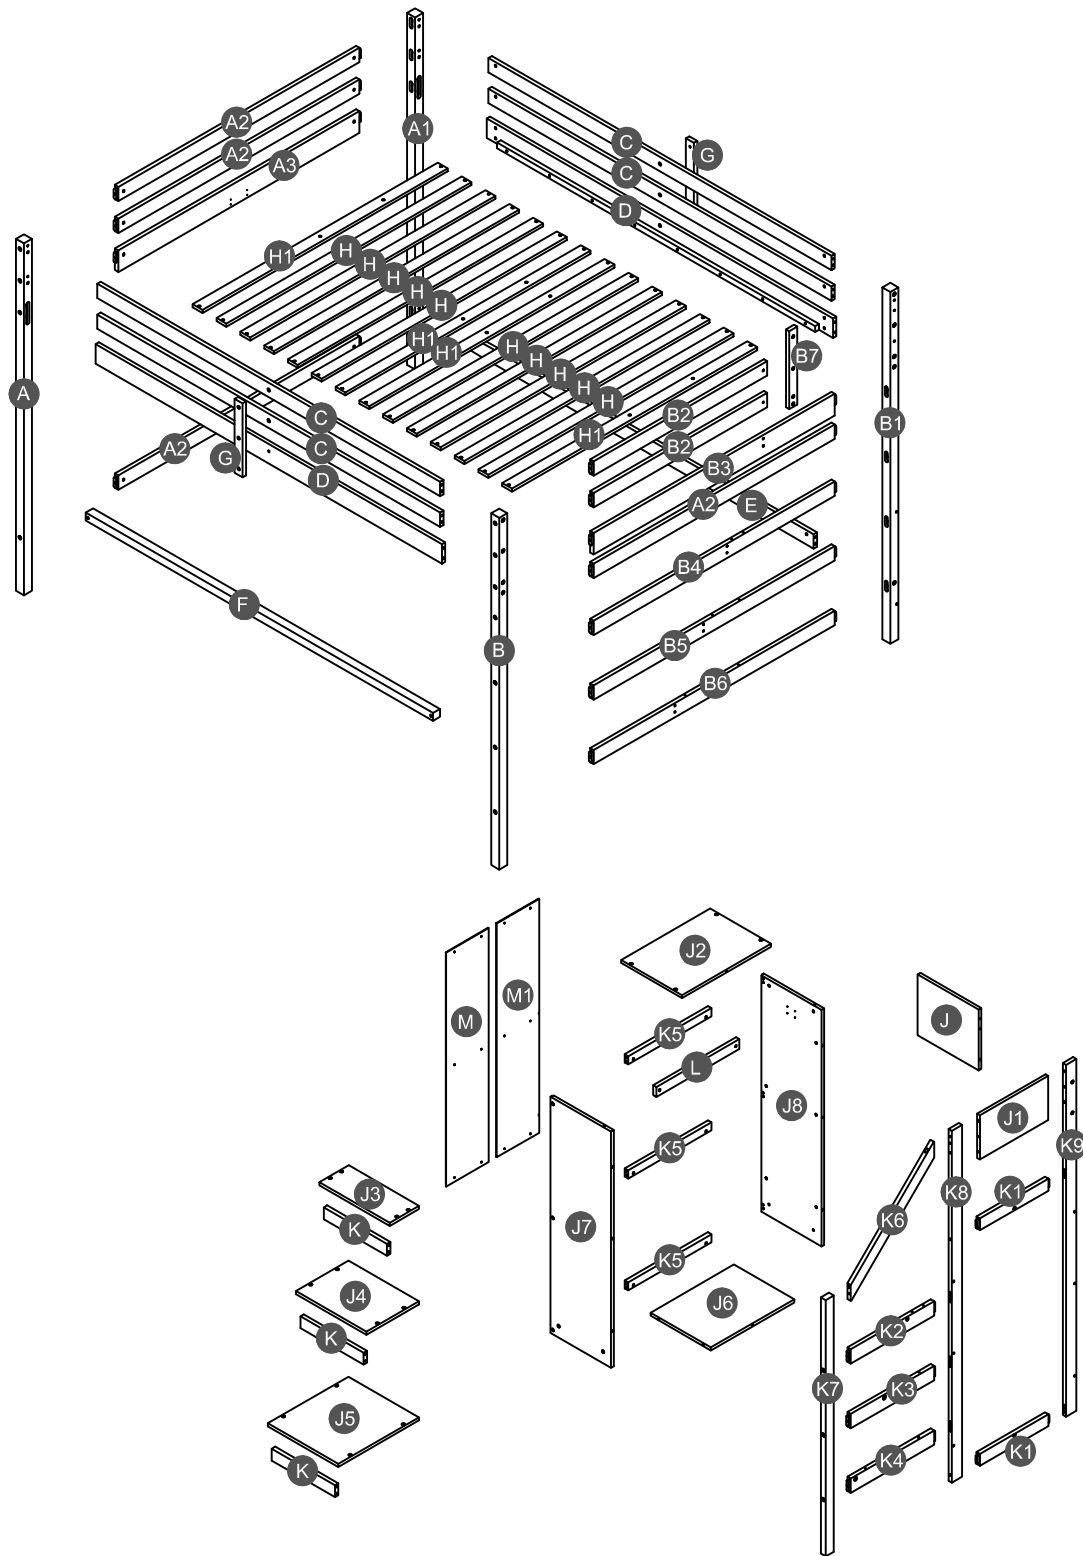










Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers

Detail View






















Part List

WF310898





















A  Leg (Left Front) - 1pc	A1  Leg (Left Back) - 1pc	A2  Horizontal bar HB/FB - 4pcs
A3  Divider horizontal bar HB - 1pc	B  Leg (Right Front) - 1pc	B1  Leg (Right Back) - 1pc
B3  Upper horizontal bar FB - 1pc	B7  Vertical guard rail FB - 1pc	C  Long guard rail - 4pcs
D  Side rail - 2pcs	E  Lower horizontal bar (Back) - 1pc	F  Lower support slat - 1pc
G  Vertical guard rail - 2pcs	K1  Horizontal bar (Right Front)-2pcs	K2  Upper horizontal bar - 1pc
K3  Divider horizontal bar - 1pc	K4  Lower horizontal bar - 1pc	K5  Horizontal bar (Back) - 3pcs
K7  Vertical bar (Front) - 1pc	K8  Vertical bar (Divider) - 1pc	K9  Vertical bar (Back) - 1pc
L  Horizontal bar - 1pc		

Part List


WF310899 + Hardware inside

B2  Upper horizontal bar FB - 2pcs	B4  Divider horizontal bar FB - 1pc	B5  Divider horizontal bar FB - 1pc
B6  Lower horizontal bar FB - 1pc	H  Slat - 10pcs	H1  Slat - 4pcs
J  Upper panel (Back) - 1pc	J1  Upper panel (Right) - 1pc	J2  Top panel - 1pc
J3  Upper step ladder panel - 1pc	J4  Divider step ladder panel - 1pc	J5  Lower step ladder panel - 1pc
J6  Bottom panel - 1pc	J7  Side panel (Front) - 1pc	J8  Side panel (Back) - 1pc
K  Horizontal bar ladder - 3pcs	K6  Upper horizontal bar (Right)-1pc	M  Back panel (Left) - 1pc
M1  Back panel (Right) - 1pc		

Hardware List WF310899


1	 Ø10*40mm Wood dowel (10pcs)	2	 Ø8*30mm Wood dowel (20pcs)	3	 (Ø15)1/4"*100mm Hex-Head bolts (27pcs)
4	 (Ø15)1/4"*80mm Hex-Head bolts (27pcs)	5	 (Ø12)1/4"*60mm Hex-Head bolts (30pcs)	6	 (Ø12)1/4"*40mm Hex-Head bolts (2pcs)
7	 (Ø12)1/4"*30mm Hex-Head bolts (10pcs)	8	 (Ø12)1/4"*15mm Hex-Head bolts (2pcs)	9	 1/4"*15 (9.5mm) Horizontal-Hole bolts (84pcs)
10	 (Ø12)1/4"*40mm Wood screw bolts (14pcs)	11	 (1/4")4.5*58mm Allen key (2pcs)	12	 Ø4*30mm Wood screws (32pcs)
13	 116*40*27mm Metal bracket (2pcs)	14	 63*40*30mm Metal bracket (2pcs)	15	 (Ø13)1/4"*14mm Connect bolt (4pcs)
16	 Ø3.5*15mm Wood screws (22pcs)	17	 Ø3.5*15mm Wood screws (8pcs)	18	 24*28*28*2mm Metal bracket (2pcs)
19	 Ø4*38mm Wood screws (2pcs)	20	 Ø9*32mm Plastic anchor (2pcs)		



ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

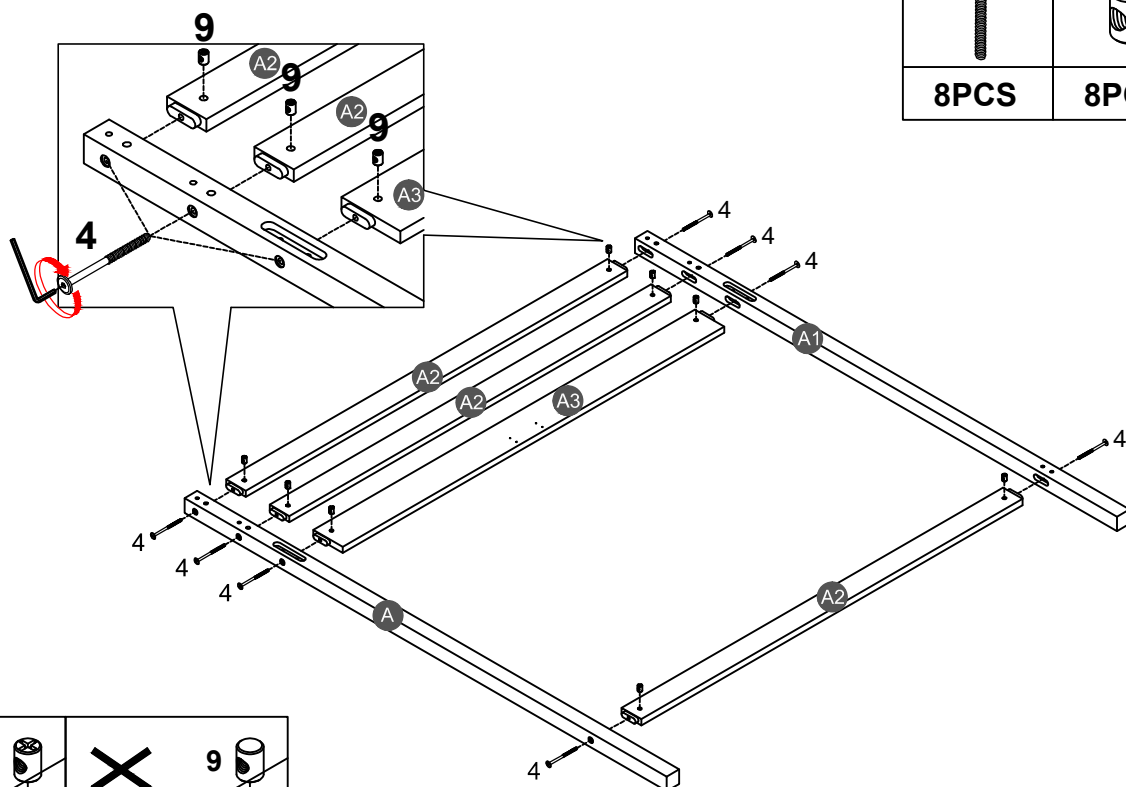STEP 1:






4		9	
8PCS		8PCS	

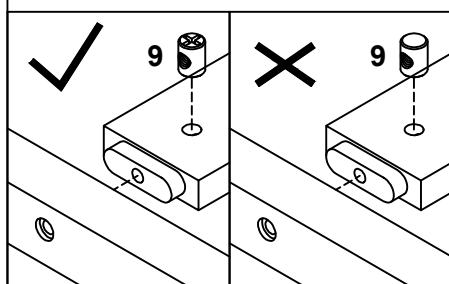


Note: Part 9 will face up with the "x" mark on it, otherwise it cannot be tightened

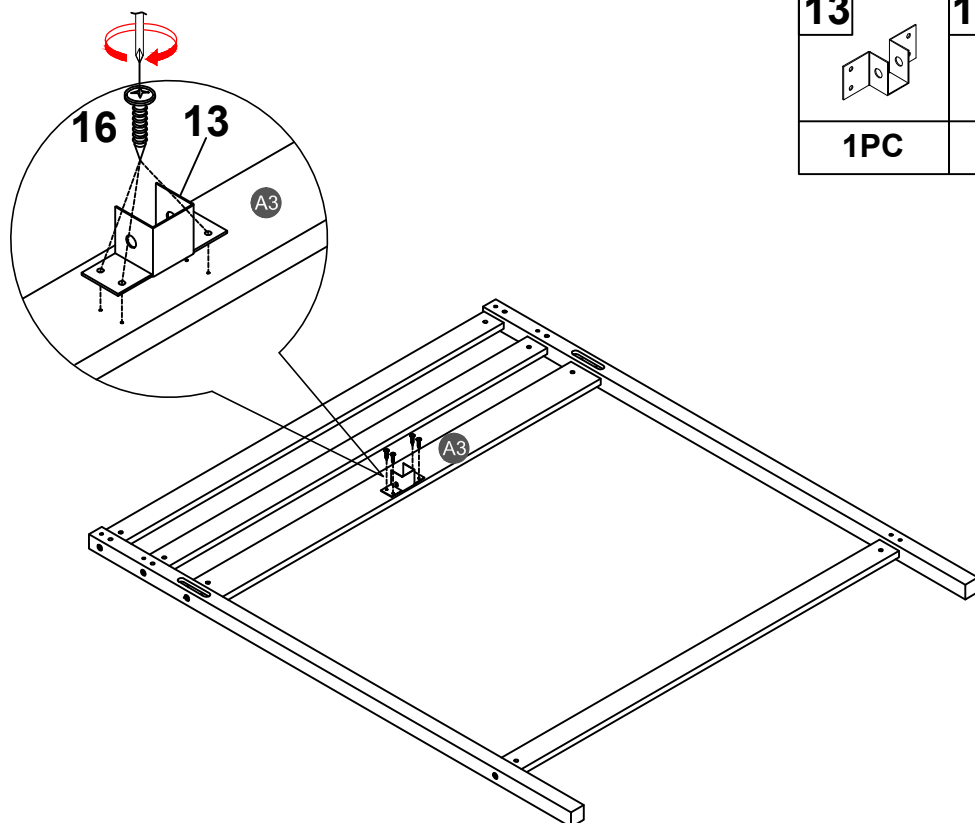

STEP 2:




13		16	
1PC		4PCS	

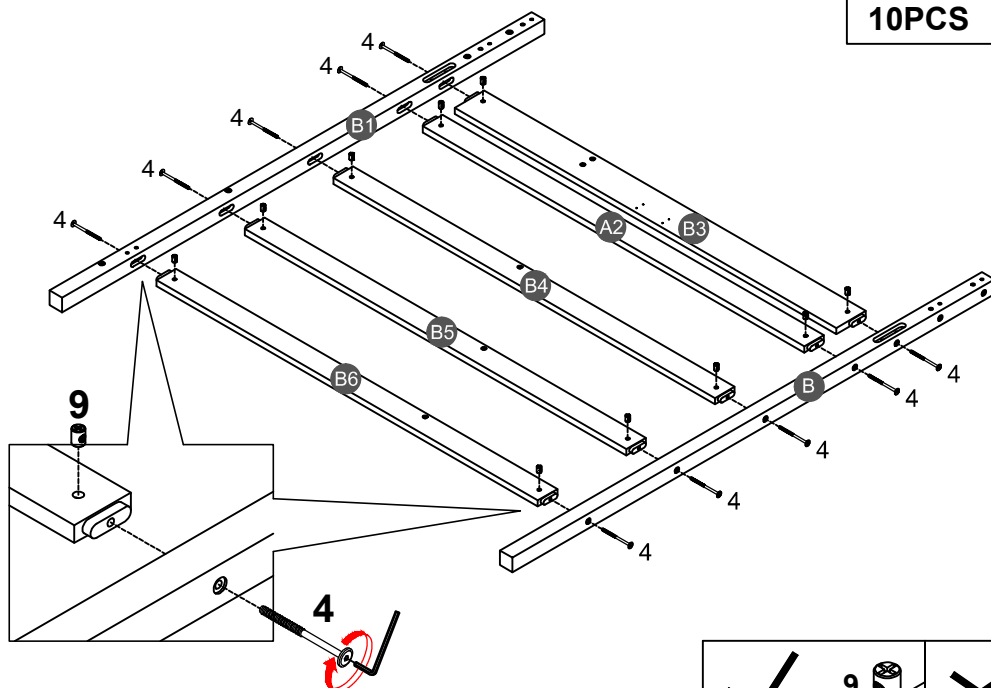STEP 3:






4		9	
10PCS		10PCS	

Note: Part 9 will face up with the "x" mark on it, otherwise it cannot be tightened

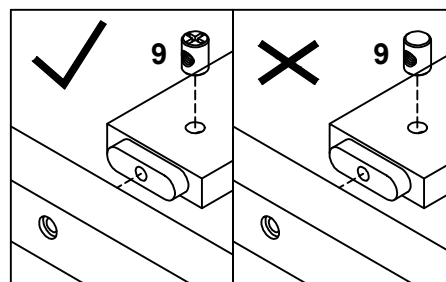


STEP 4:

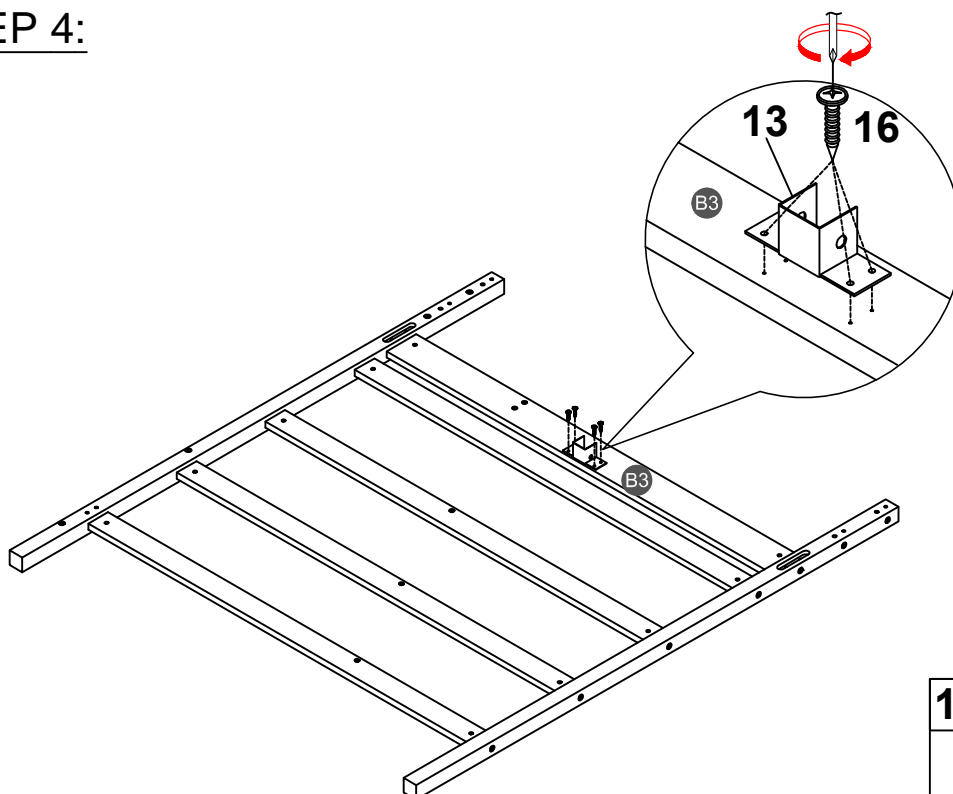


13		16	
1PC		4PCS	


STEP 5:

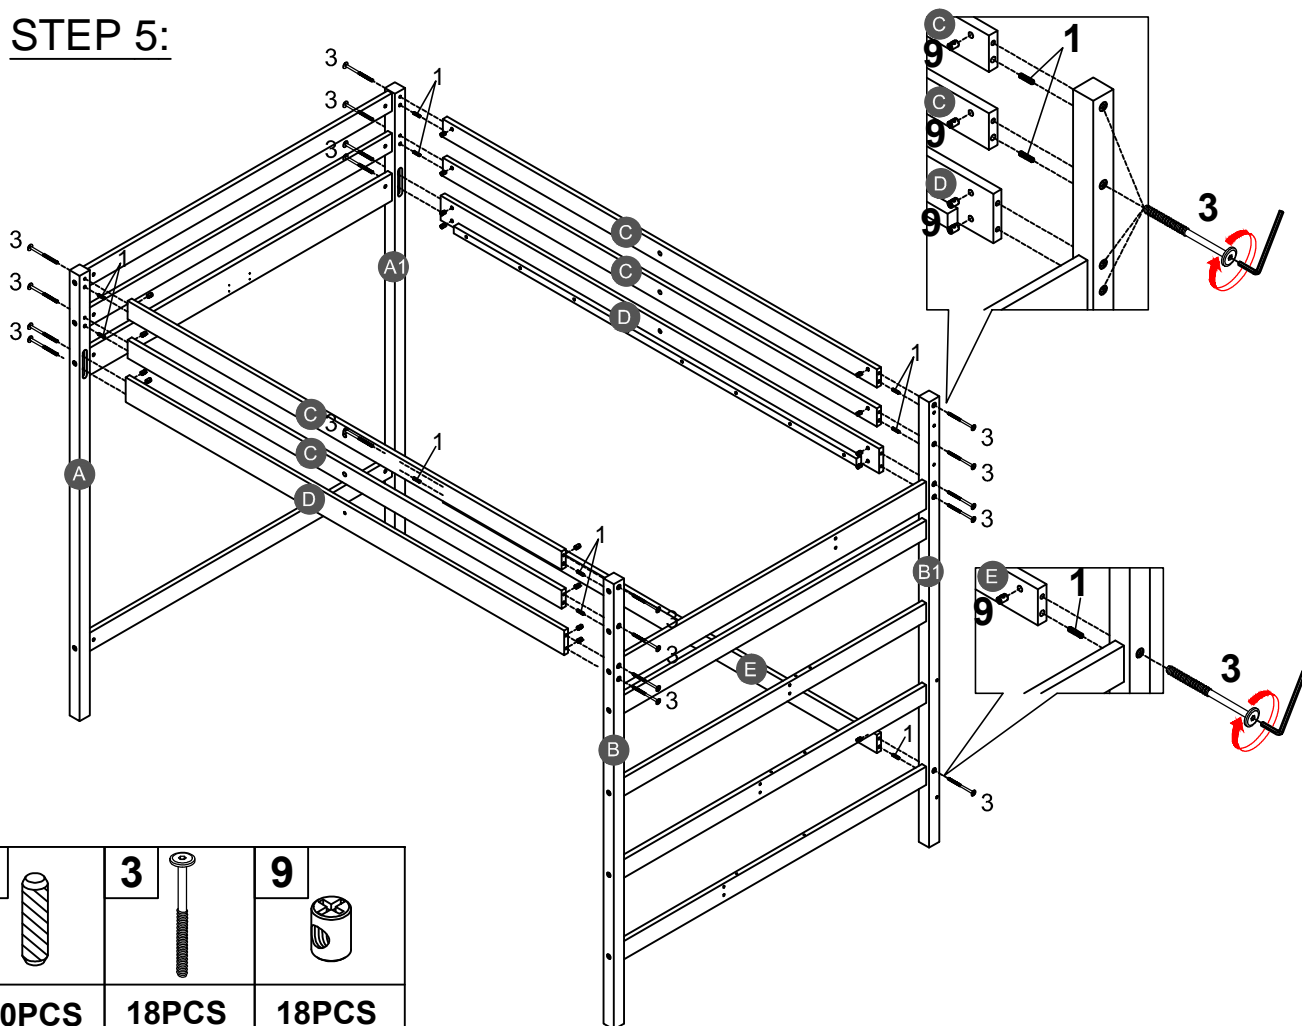


STEP 6:

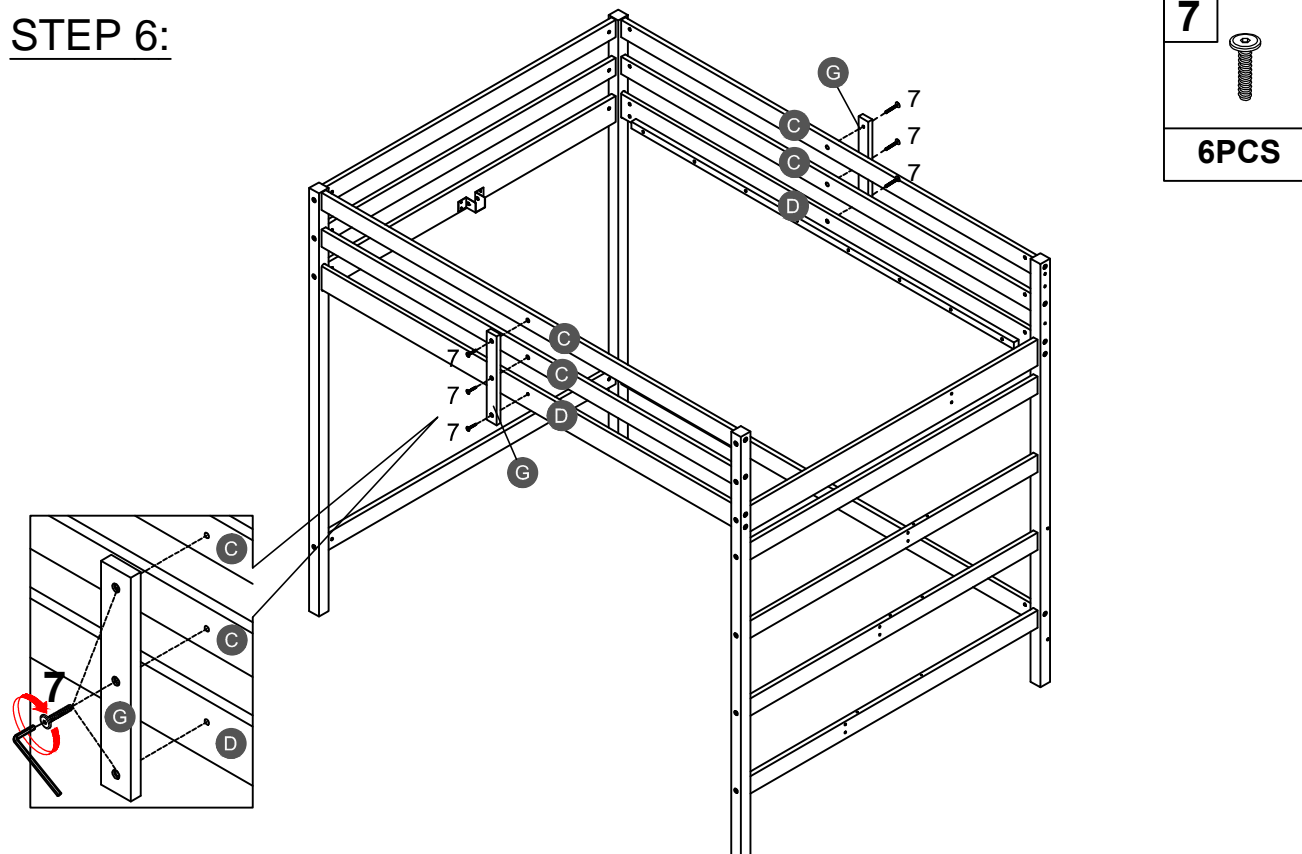


STEP 7:

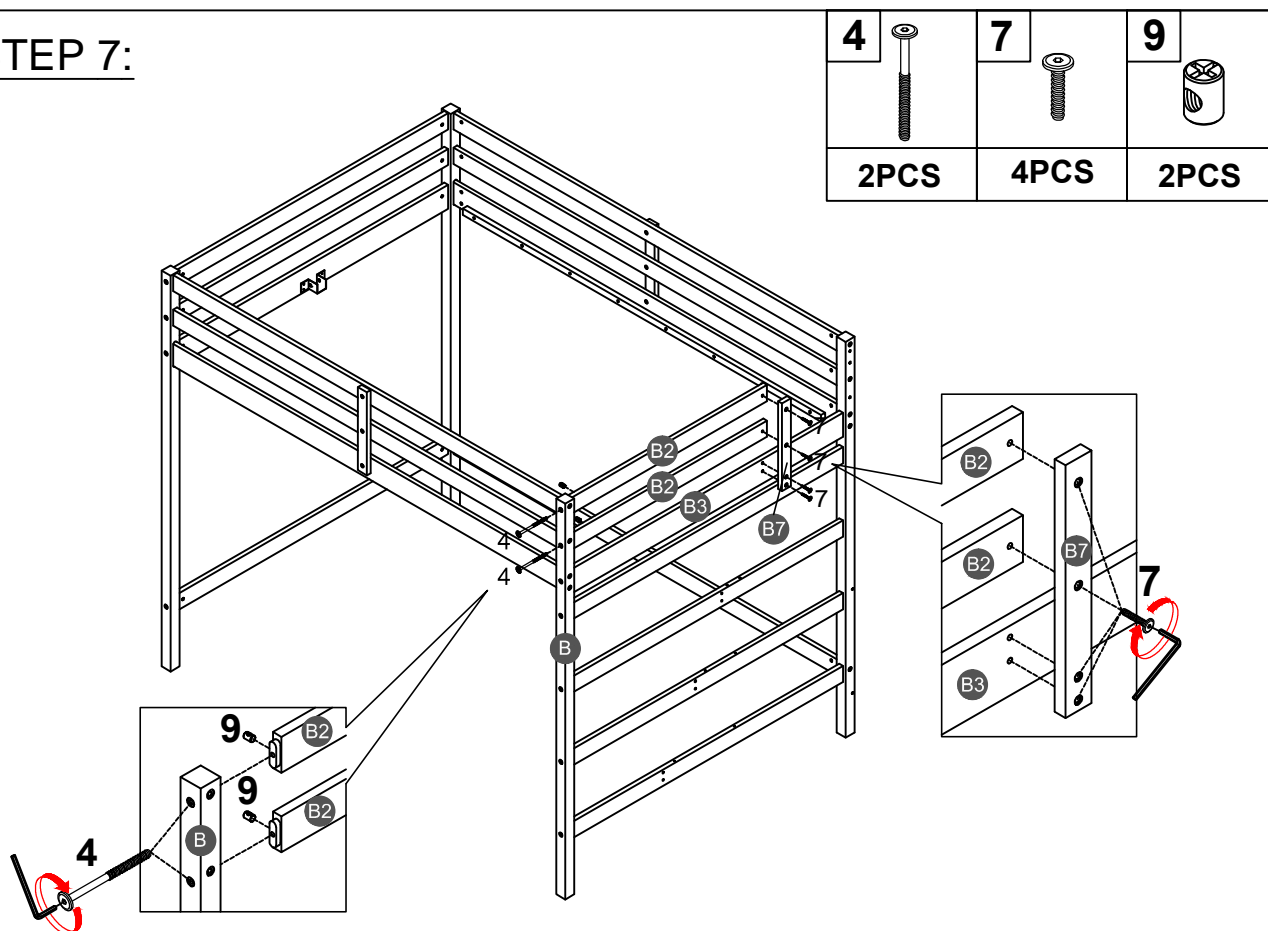

STEP 8:

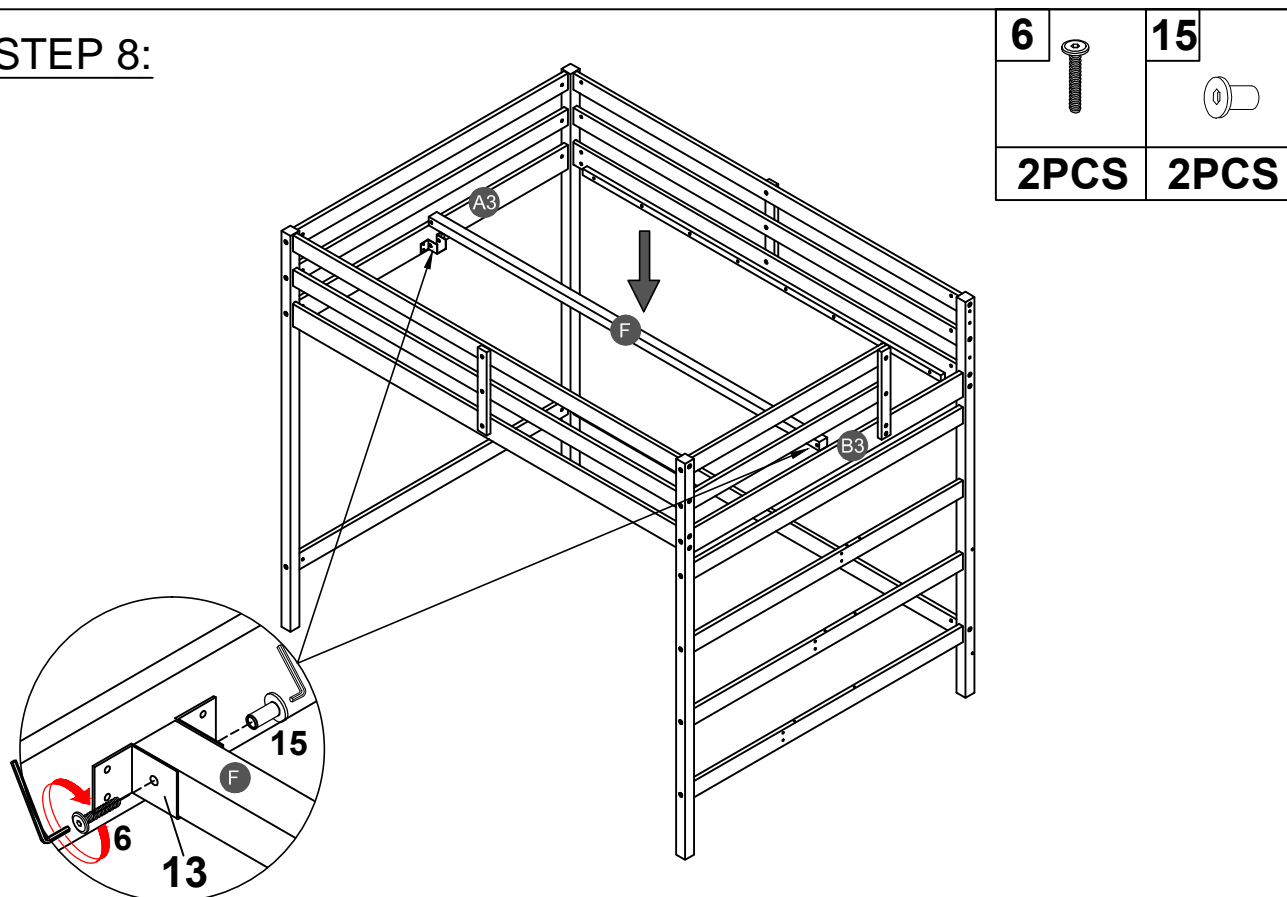


STEP 9:

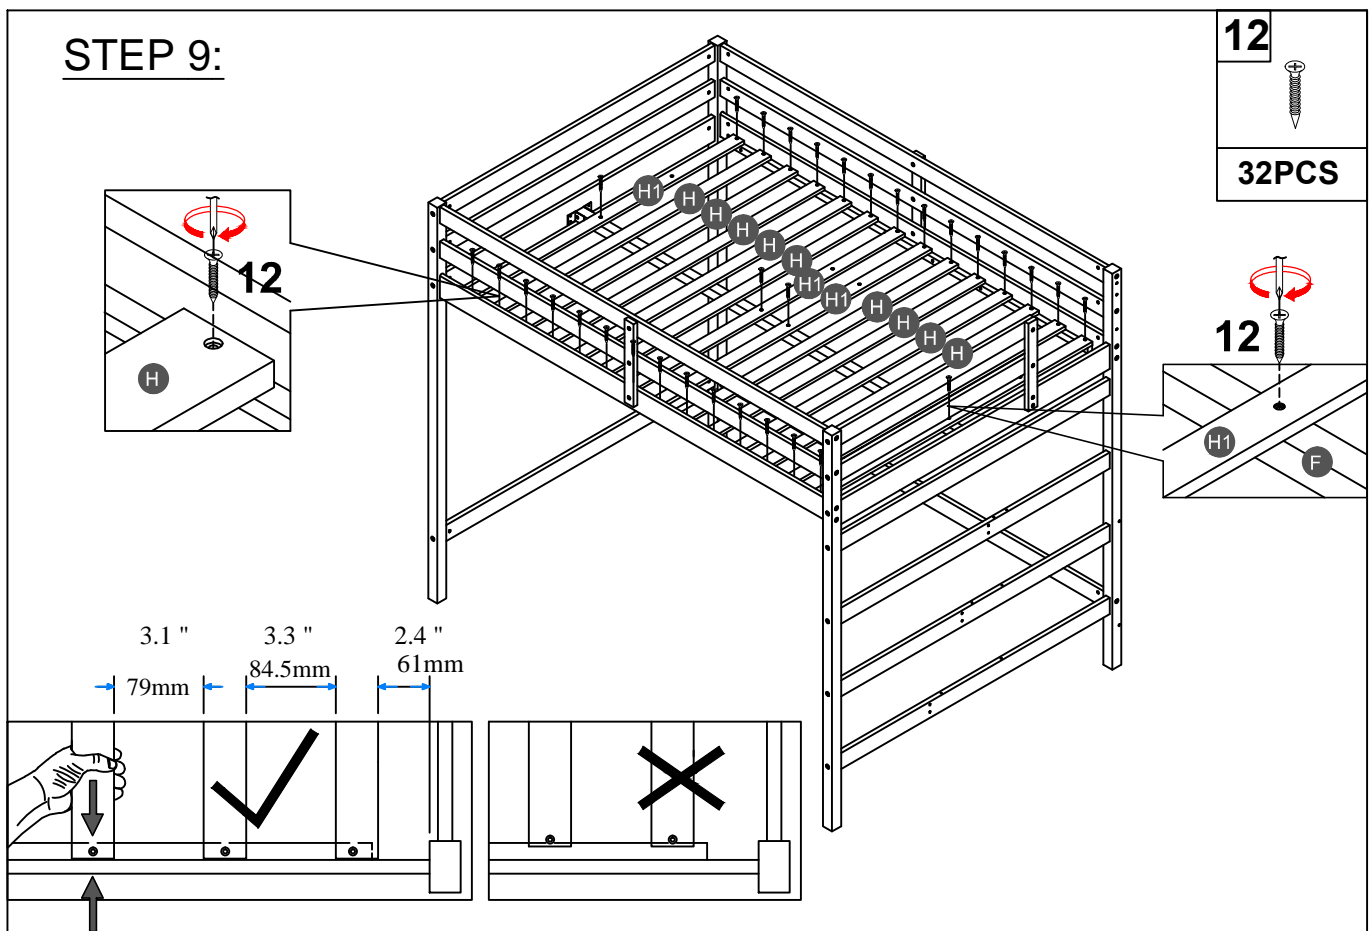


STEP 10:


2		4		9	
1PC		2PCS		2PCS	

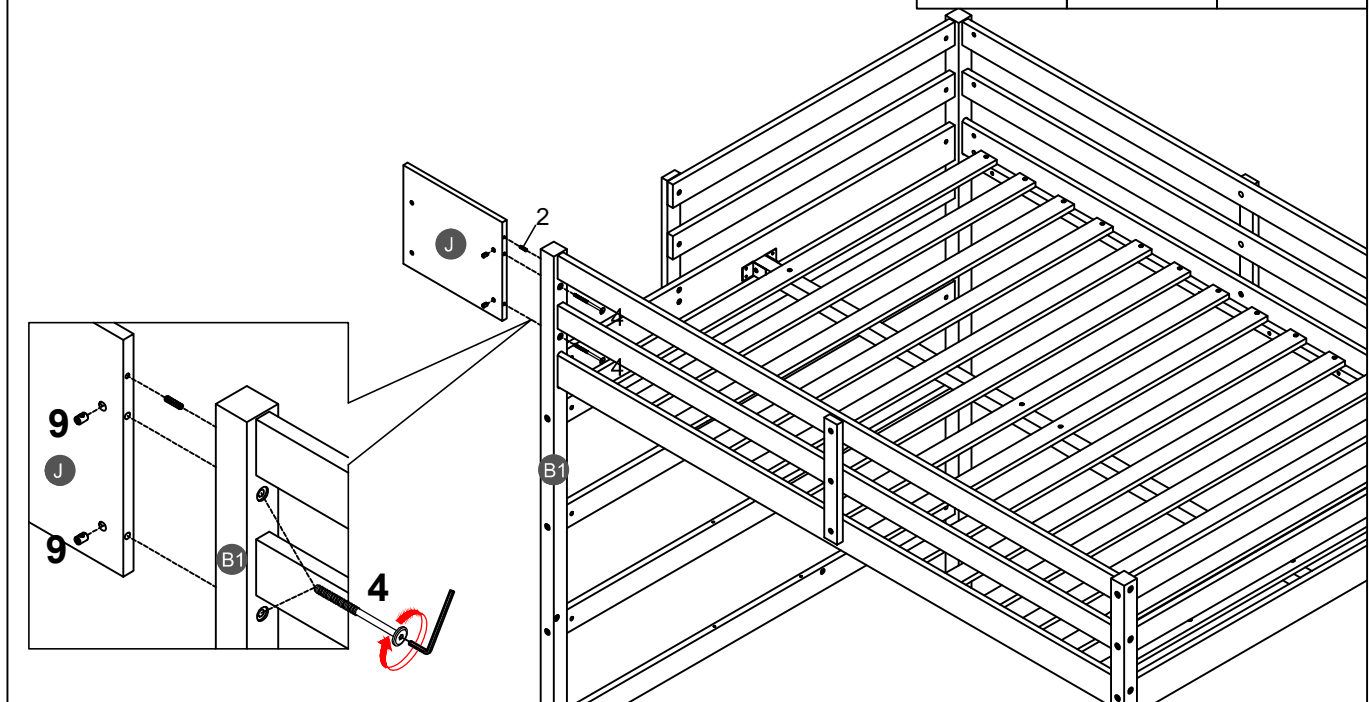



STEP 11:

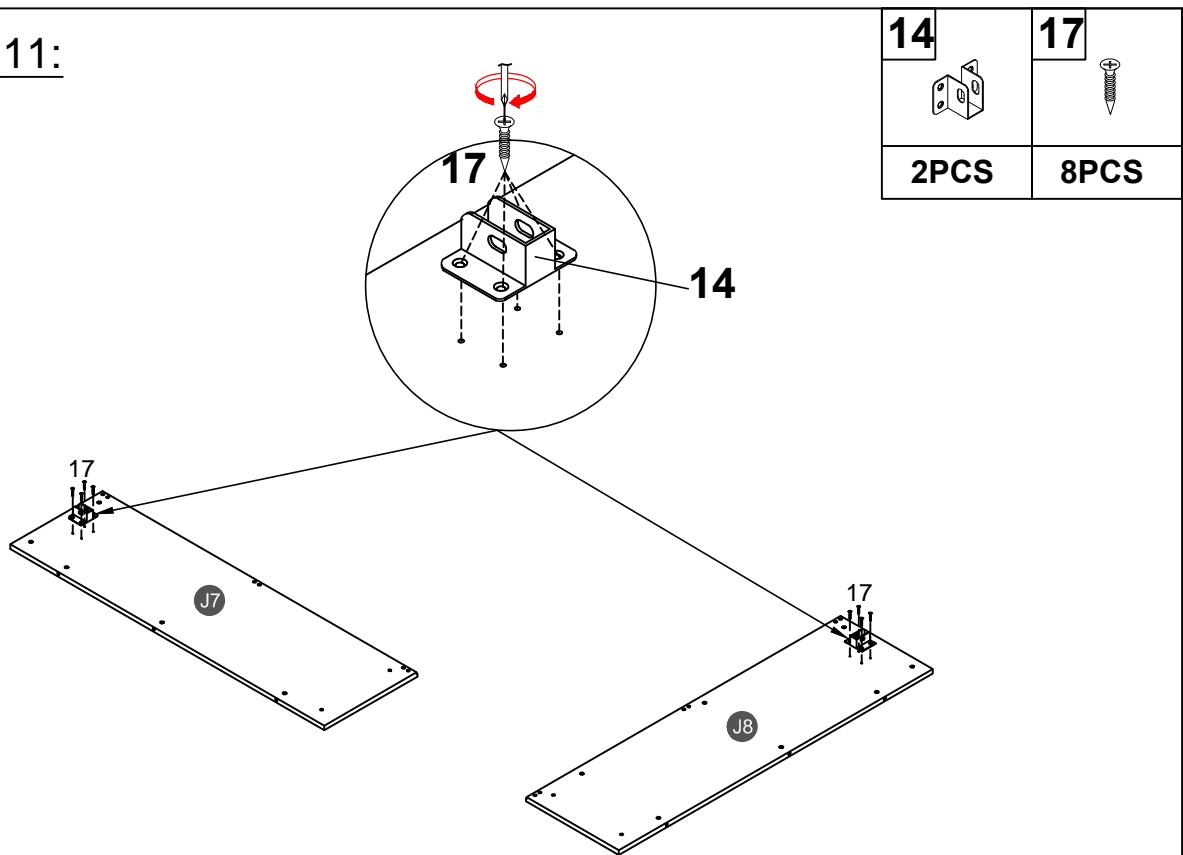


STEP 12:

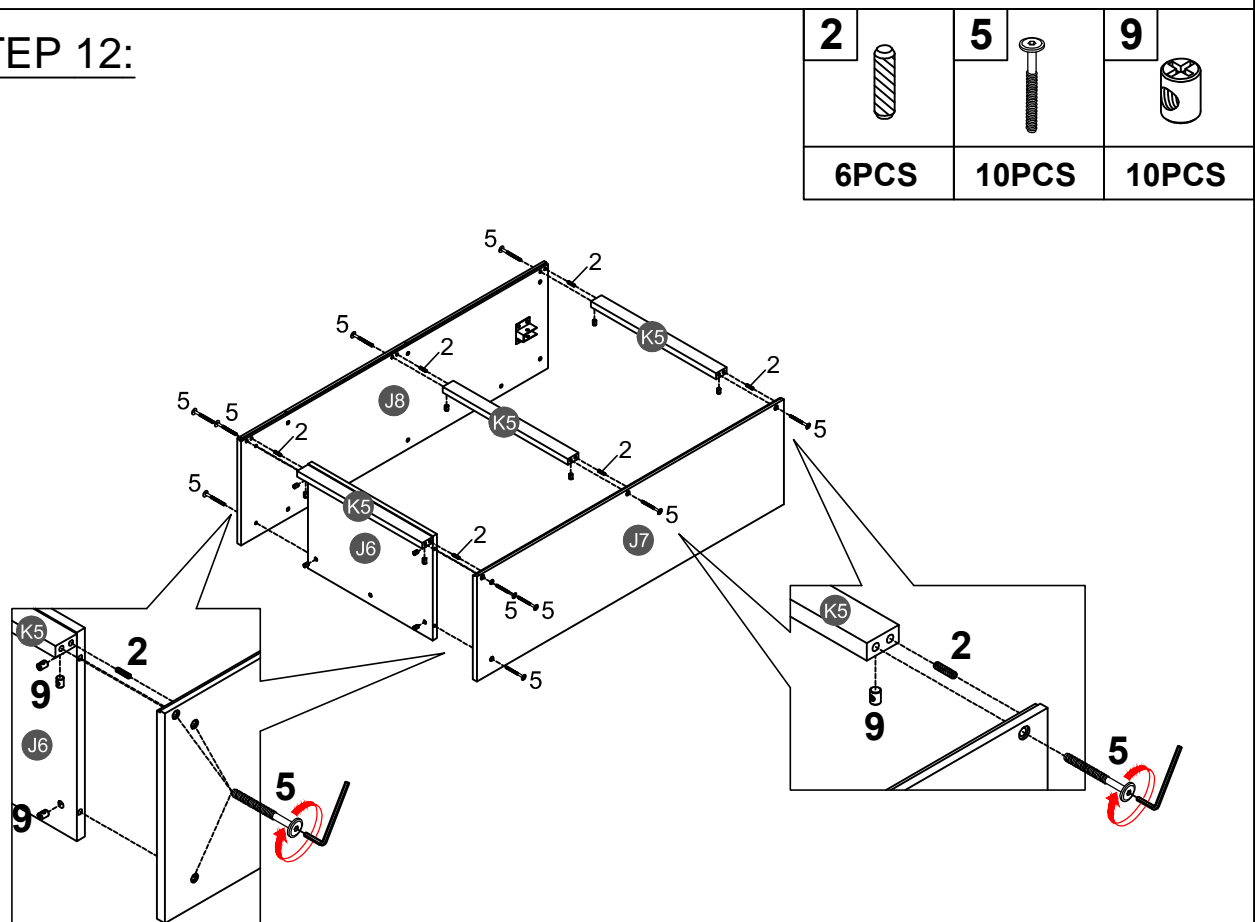




STEP 13:

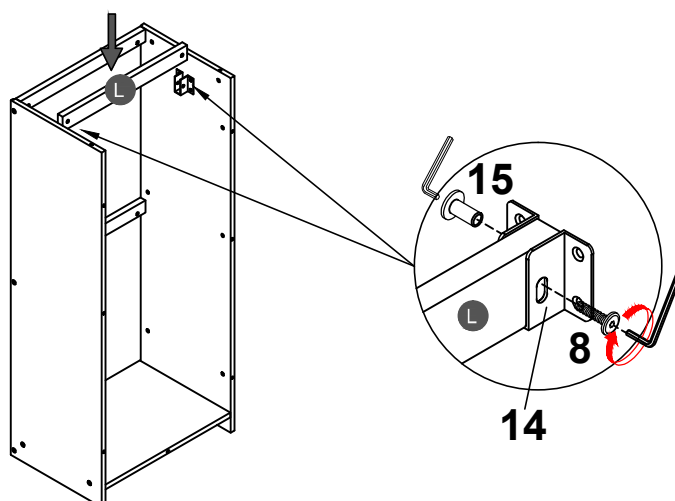8		15	
2PCS		2PCS	



STEP 14:

5		9	
4PCS		4PCS	

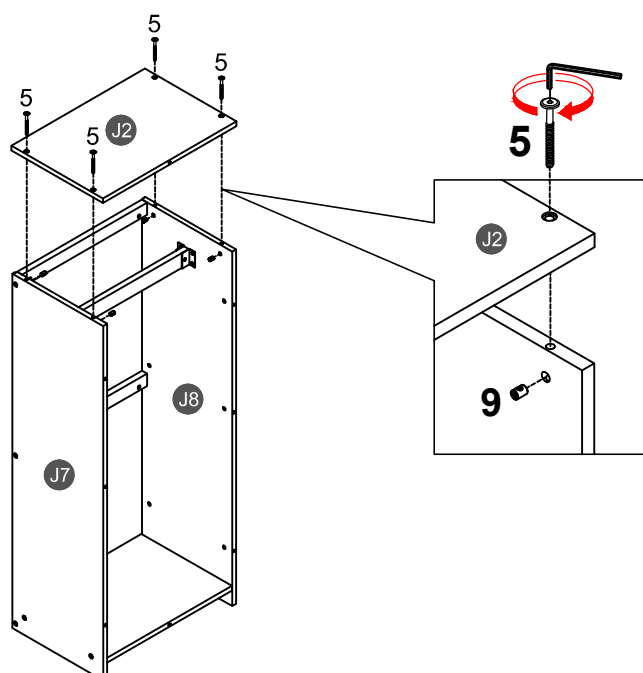


STEP 15:

16



12PCS

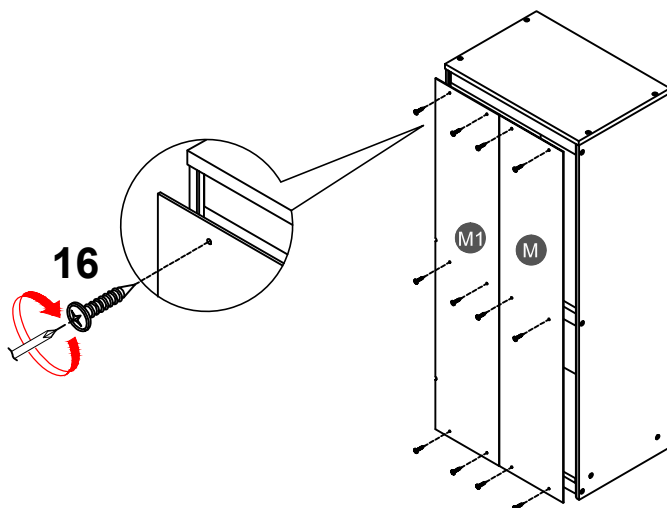

STEP 16:

2



4PCS

3




6PCS


9



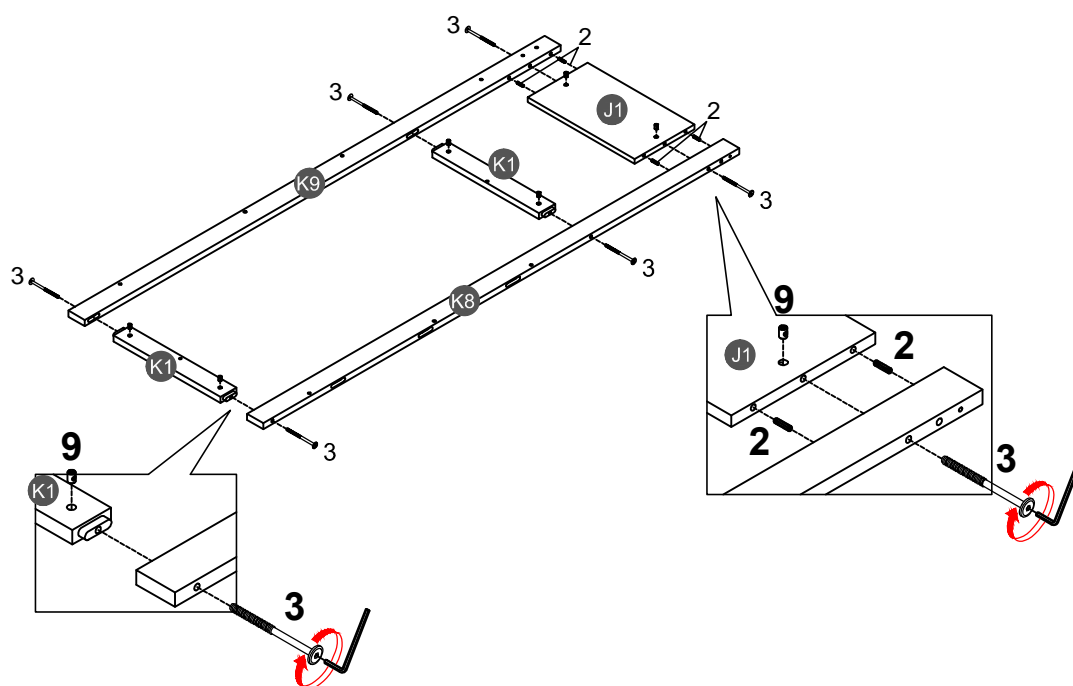

6PCS




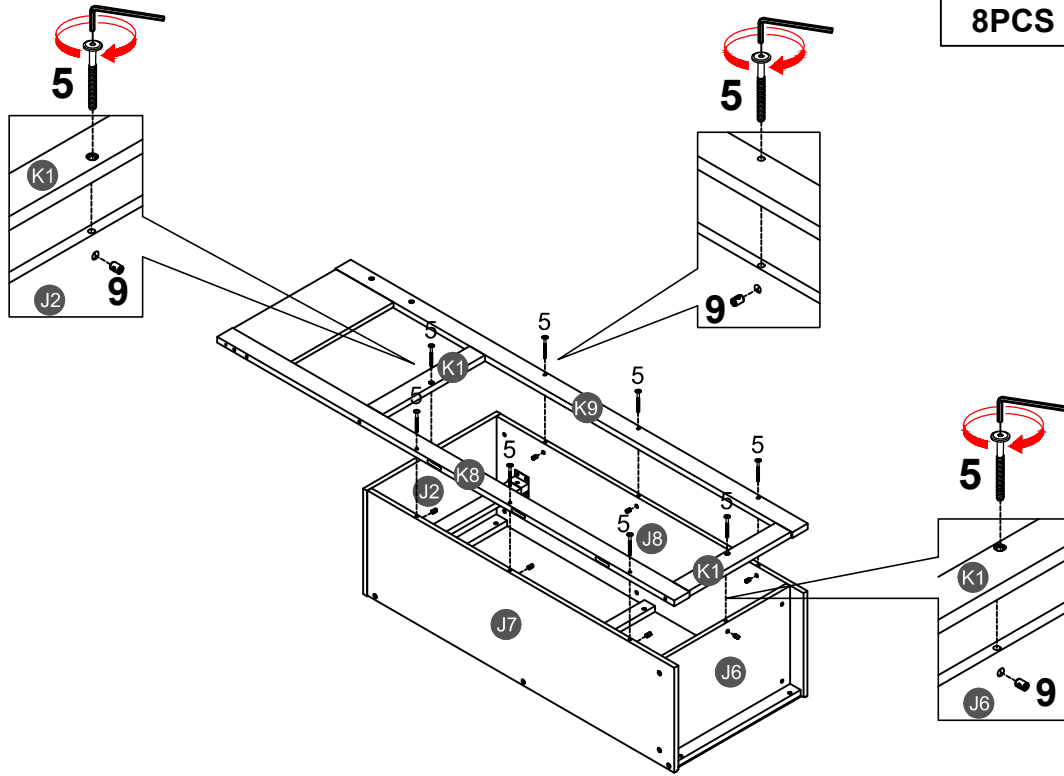




STEP 17:

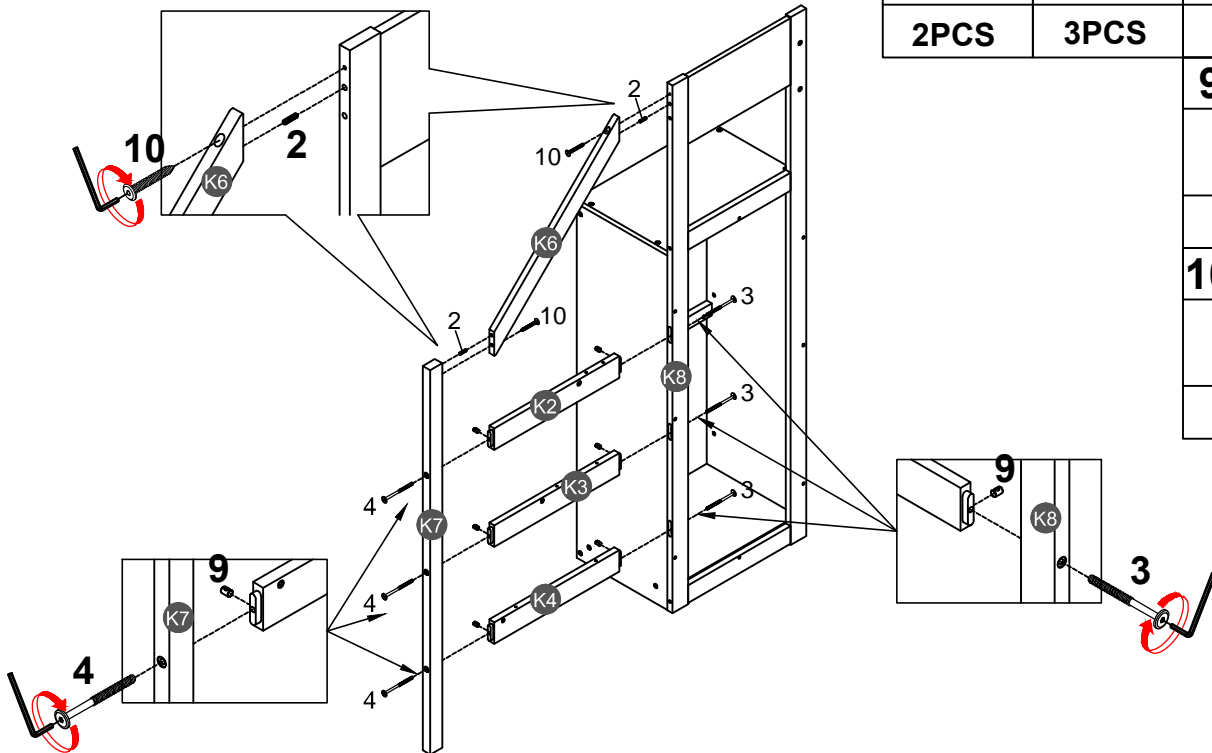


5		9	
8PCS		8PCS	

STEP 18:




2		3		4	
2PCS		3PCS		3PCS	
				9	
				6PCS	
				10	
				2PCS	


STEP 19:

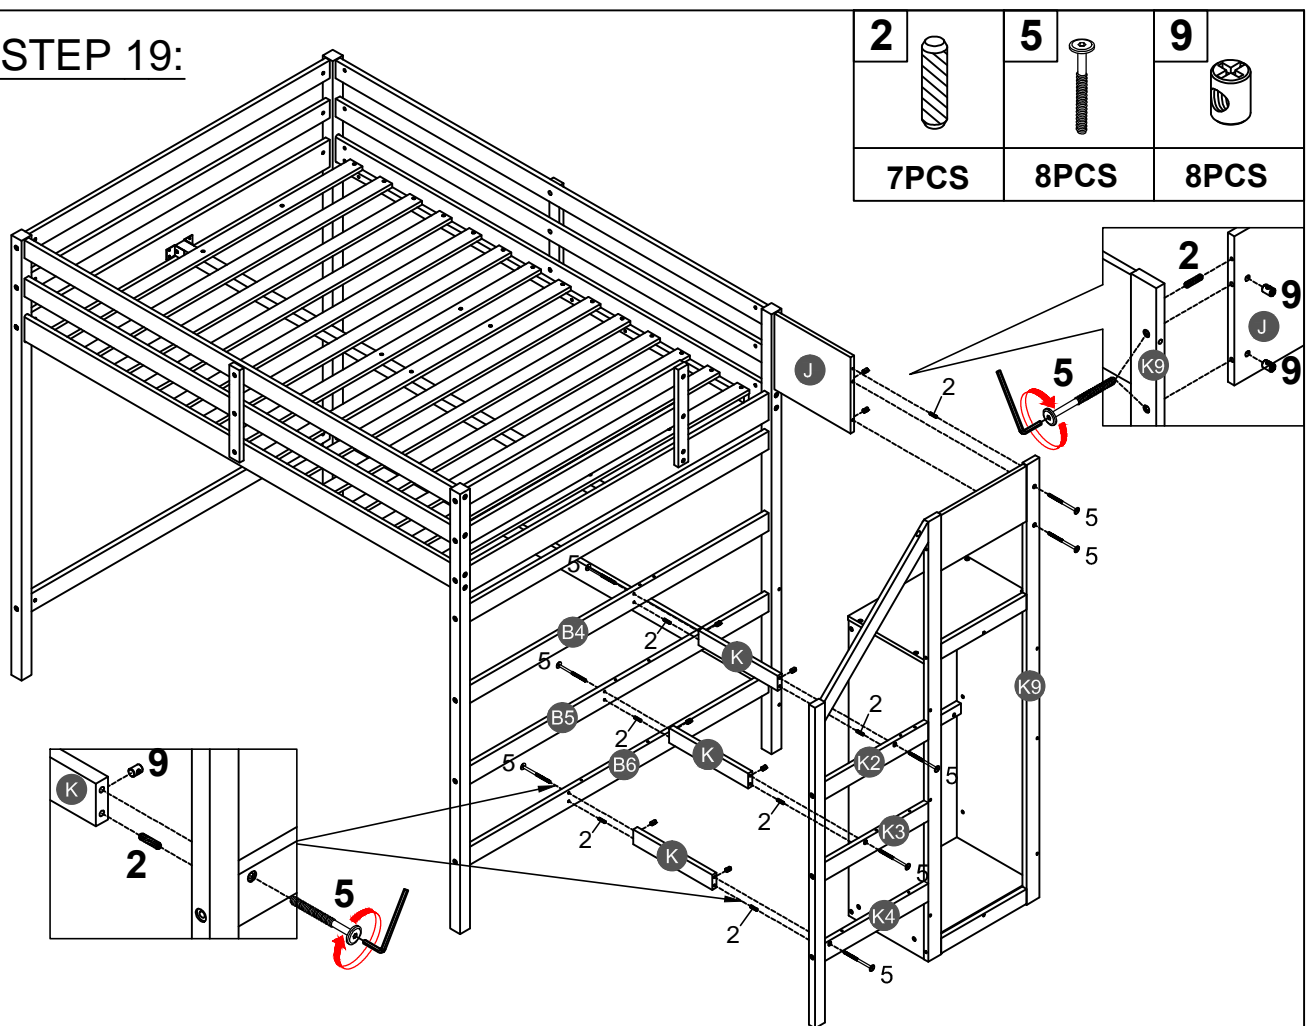


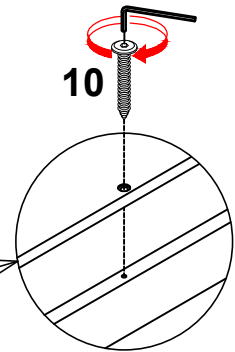
STEP 20:

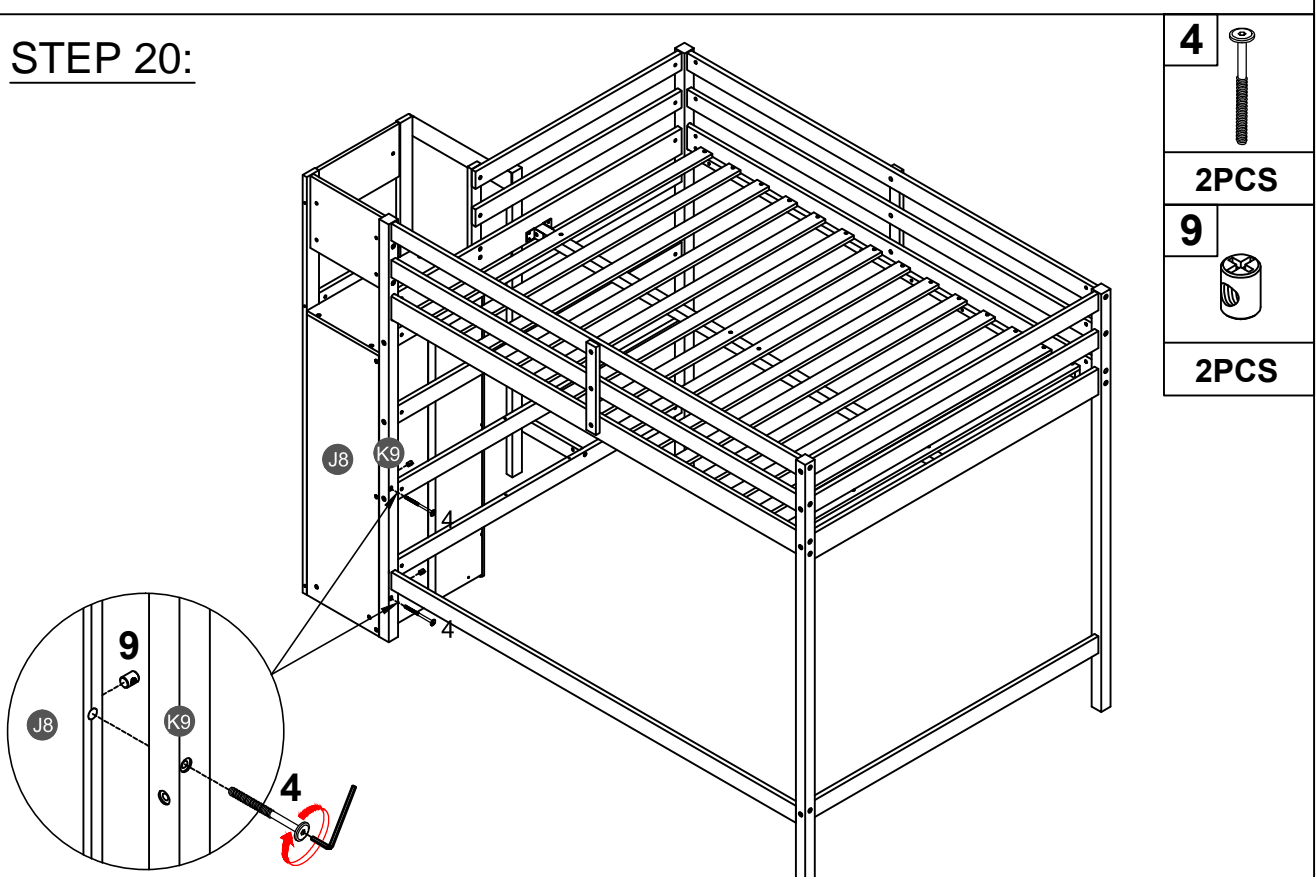



STEP 21:

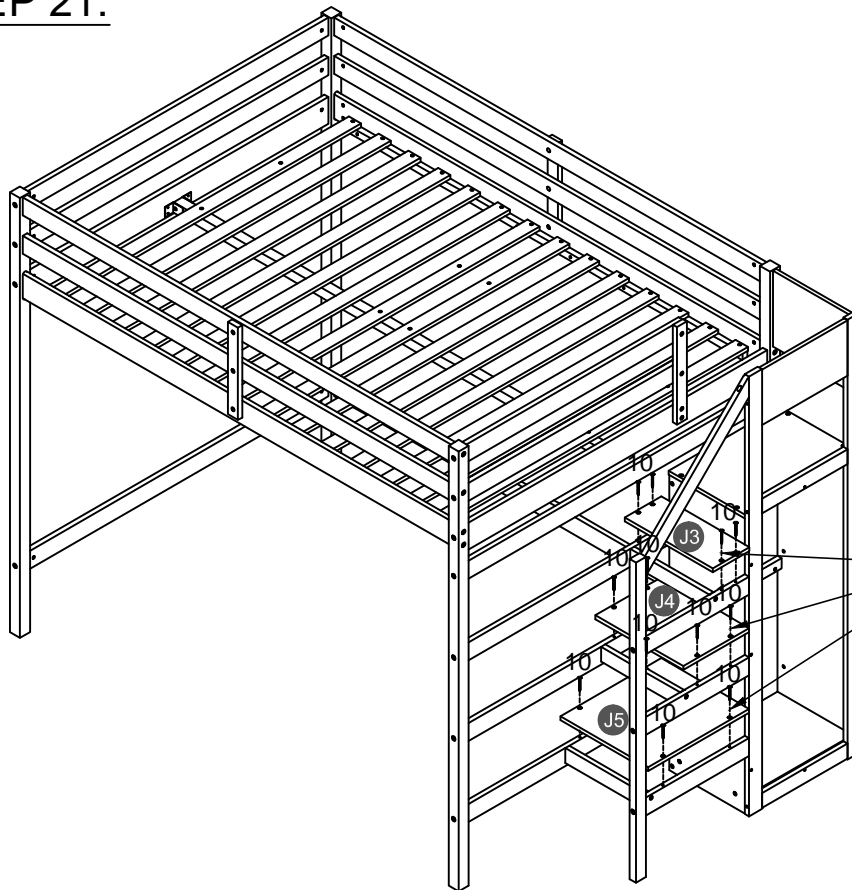



10	
12PCS	




STEP 22:

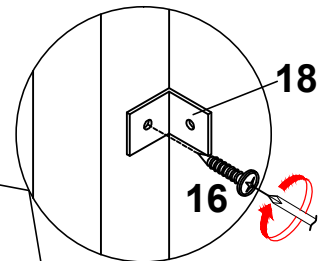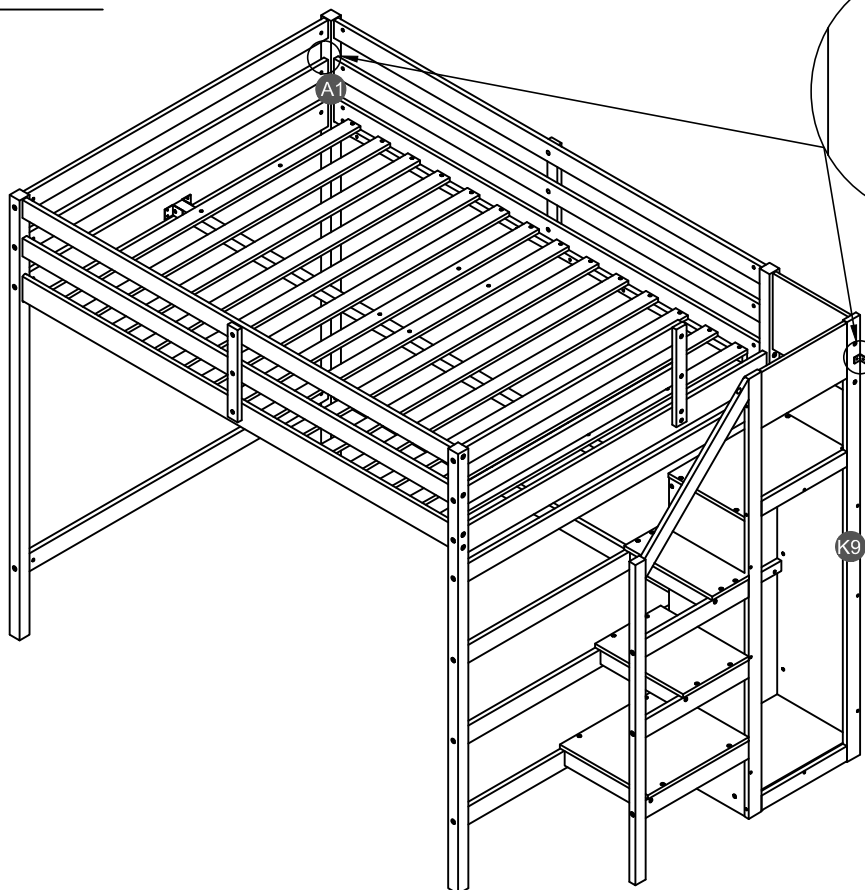


16		18	
2PCS		2PCS	

STEP A:

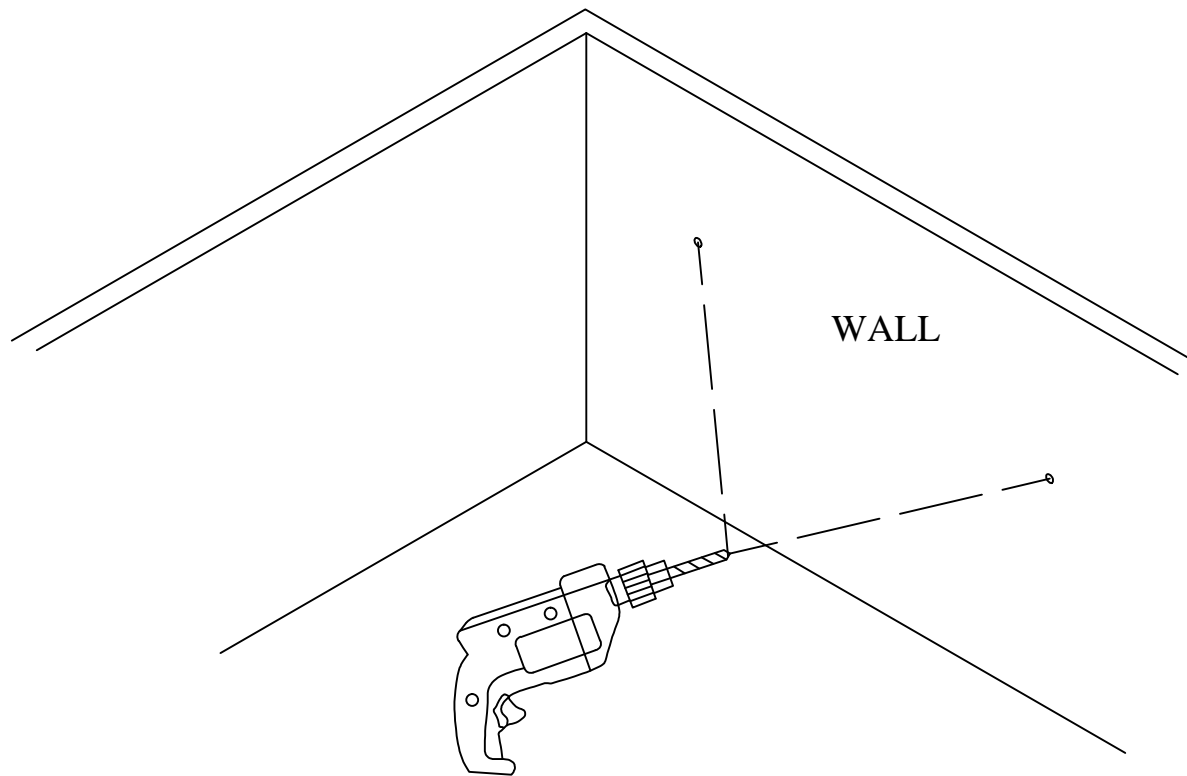

Drill holes in the wall.

STEP B:

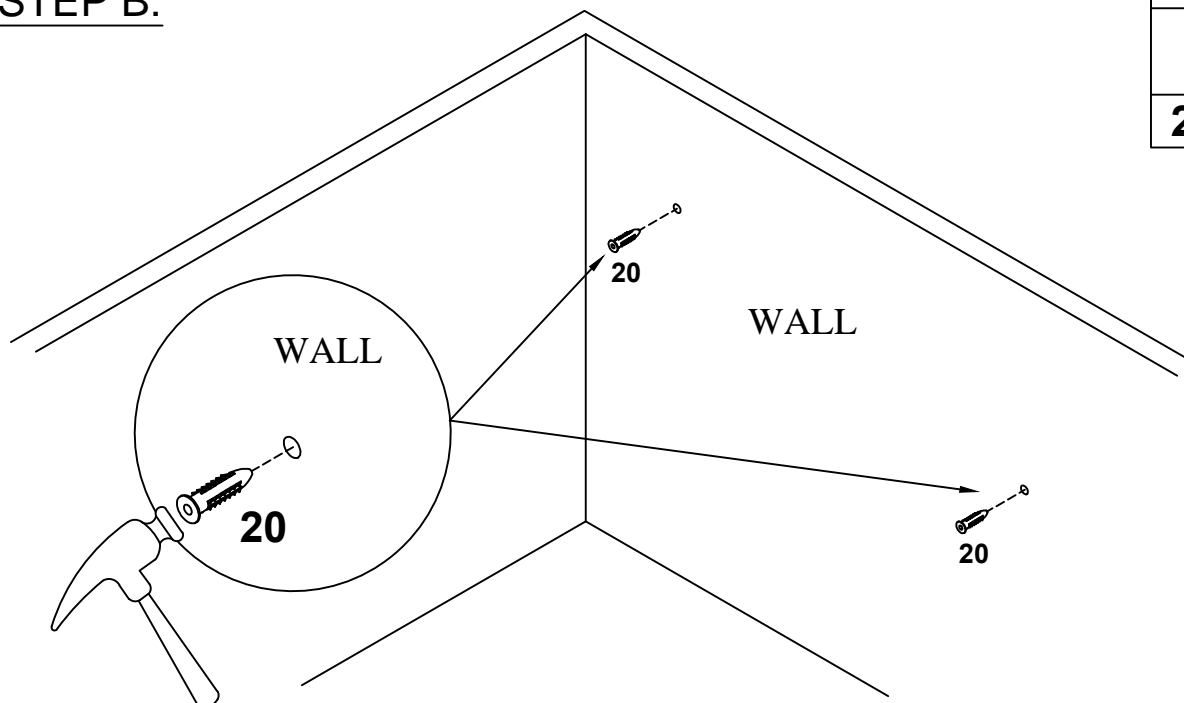

20



2PCS


Tap plastic anchor in with a hammer or mallet.

STEP C:

19



2PCS

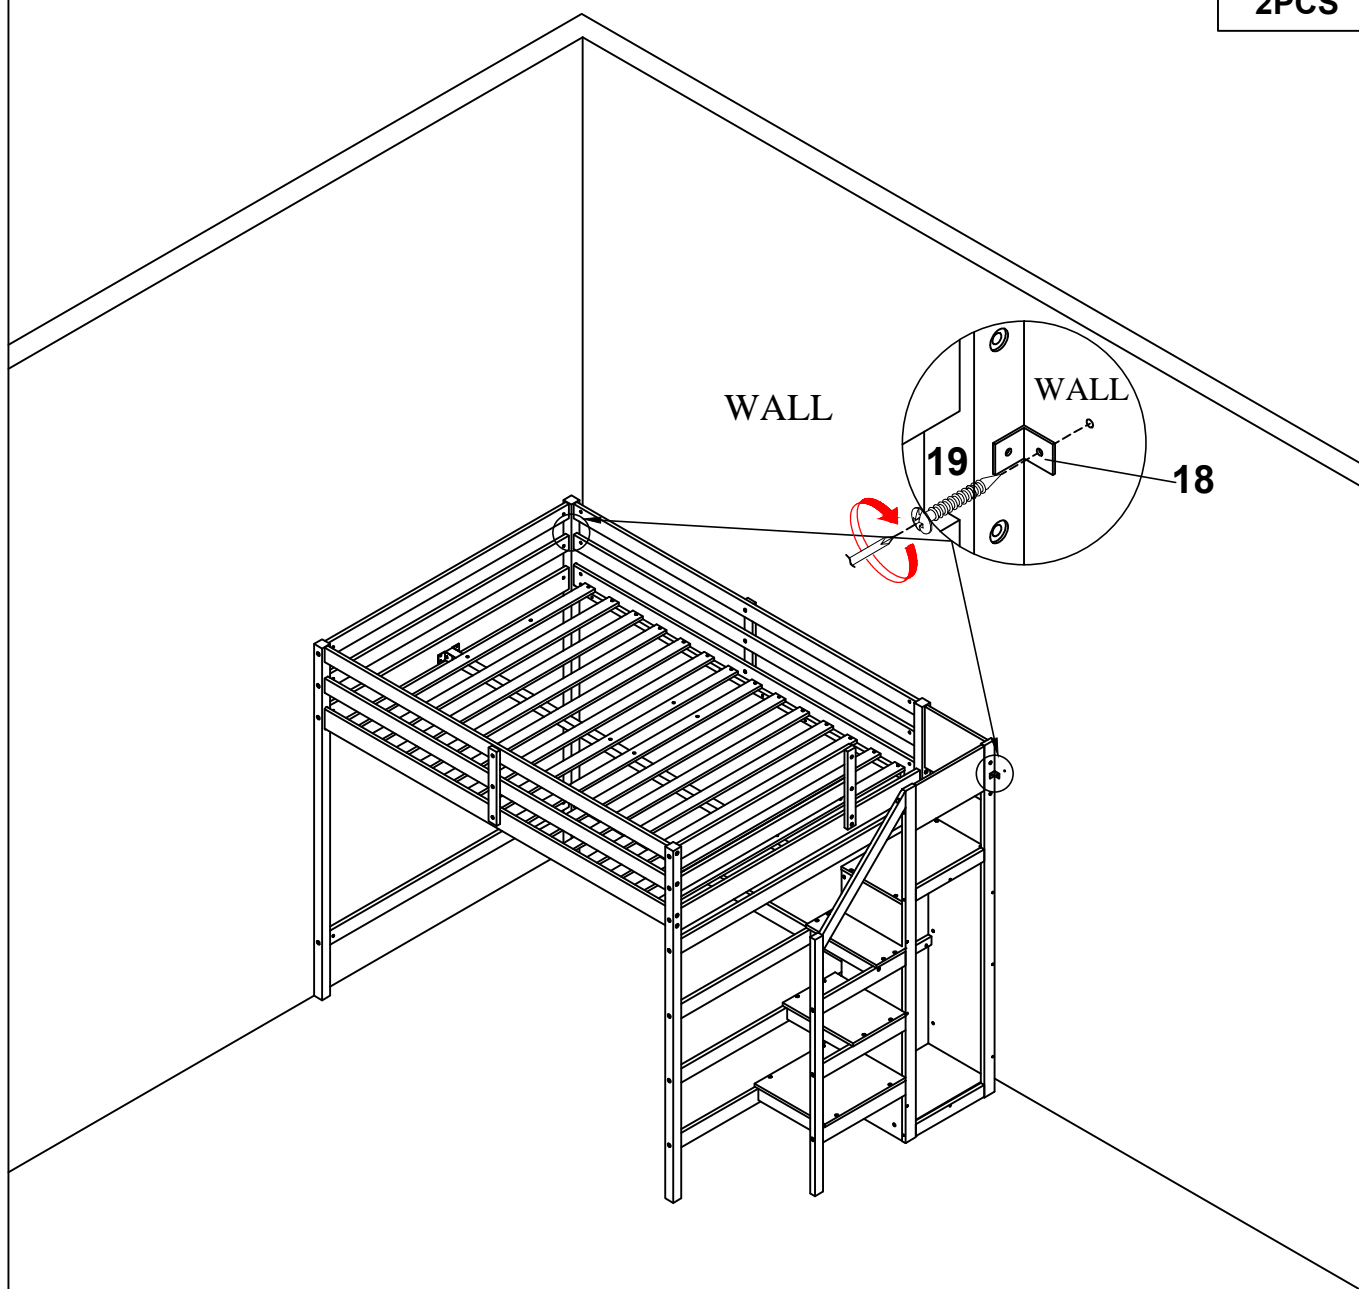

Make sure to tighten all the screws of the bed.