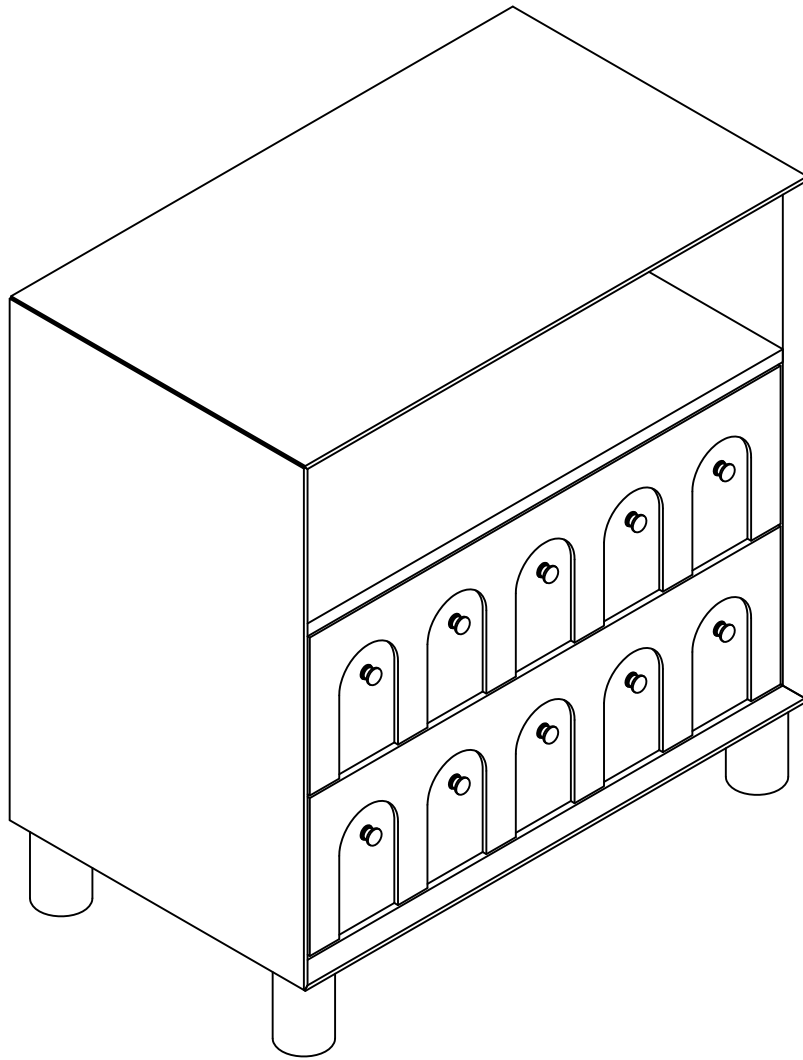


HONGMAO



ITEM NO.HMGG0009

NOTE:

This brochure contains IMPORTANT safty info. Please read and keep for future reference.

MAINTAINANCE AND WARNING

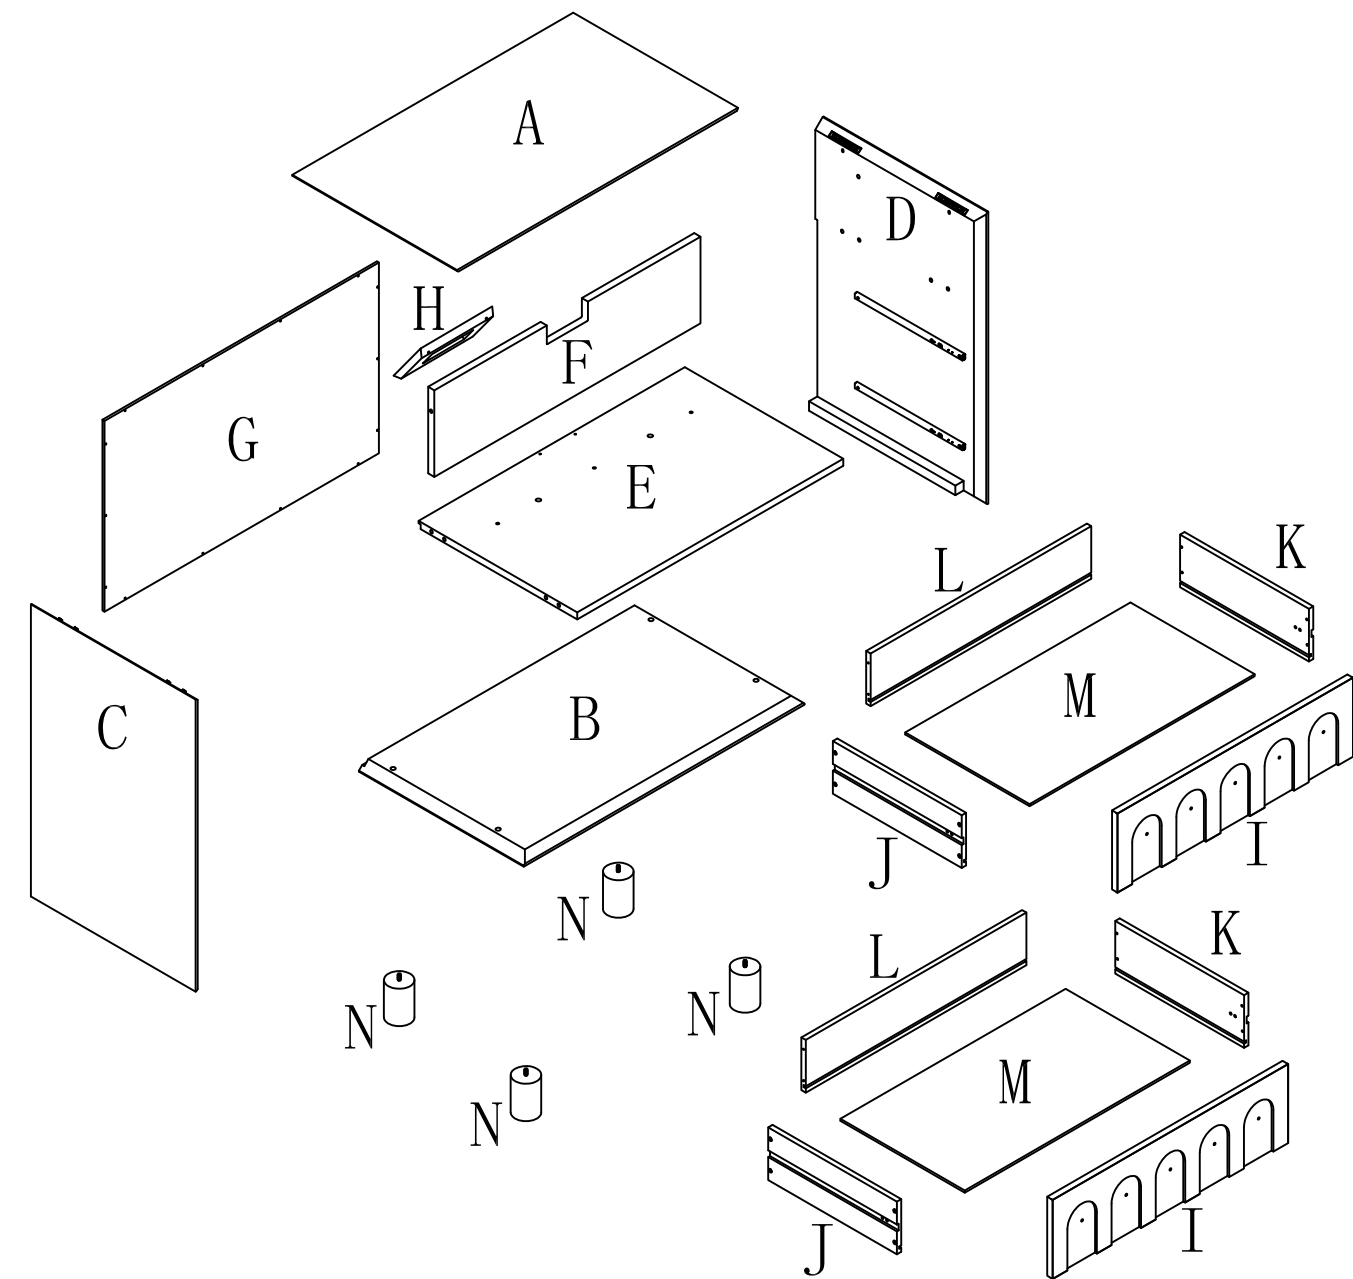
- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight,material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6.Not for commercial use,only for residential use.



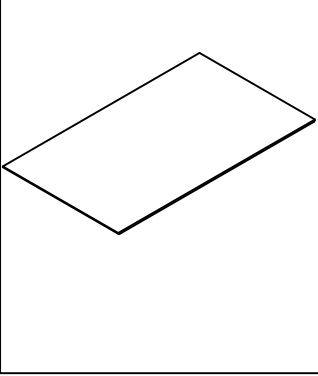
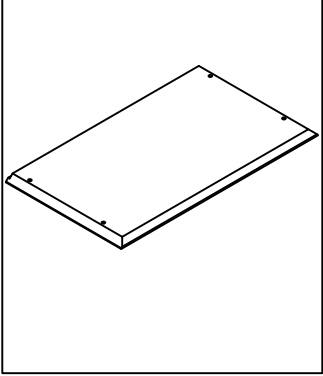
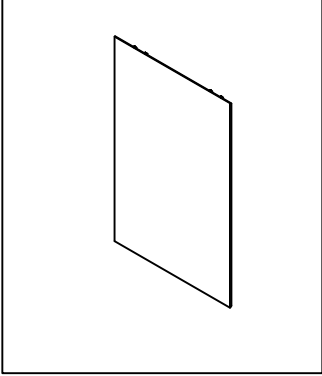
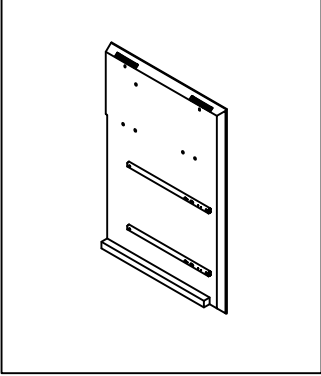
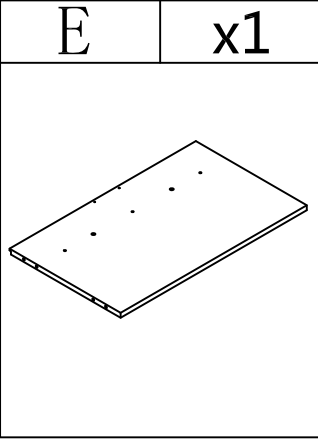
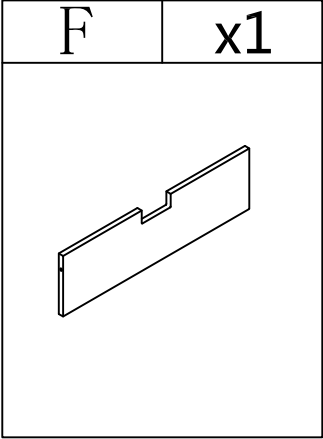
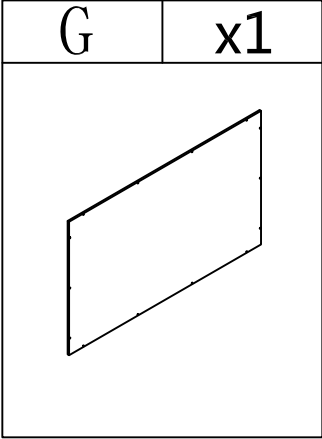
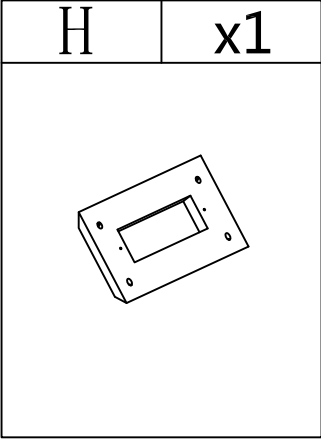
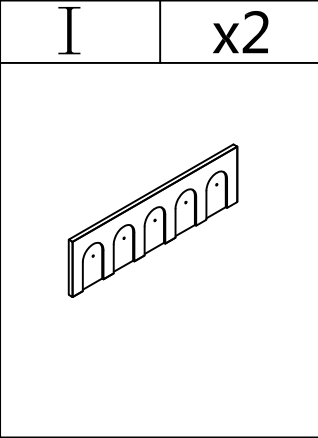
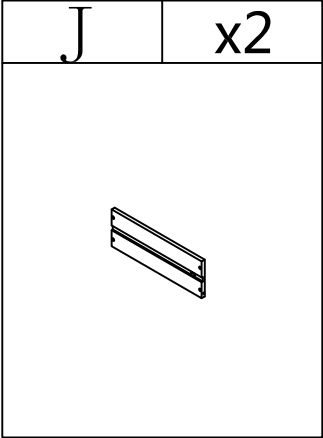
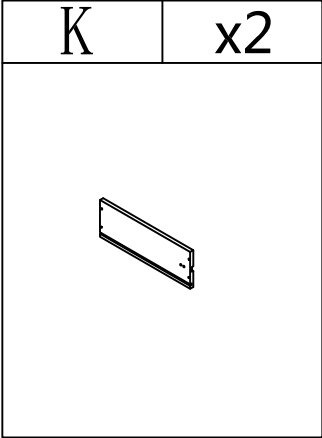
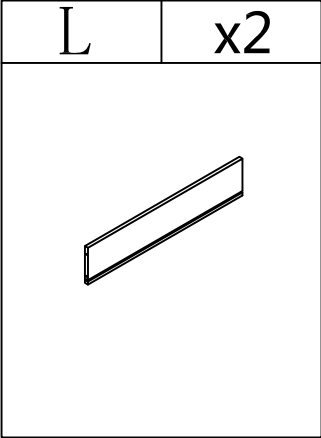
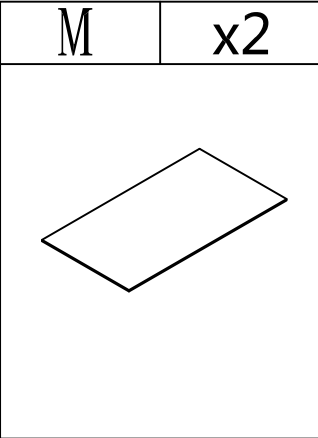
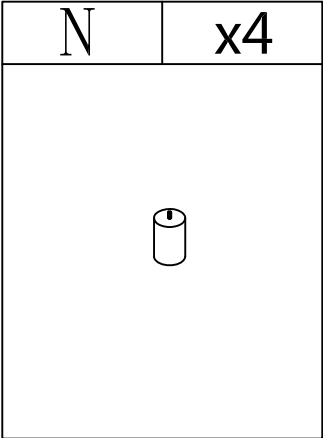
Weight Limitation

110 LBS




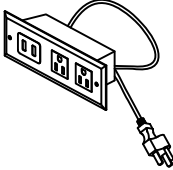



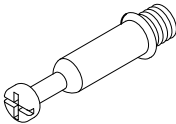


EXPLOSIVE VIEW



PARTS LIST

A x1 	B x1 	C x1 	D x1 
E x1 	F x1 	G x1 	H x1 
I x2 	J x2 	K x2 	L x2 
M x2 	N x4 		

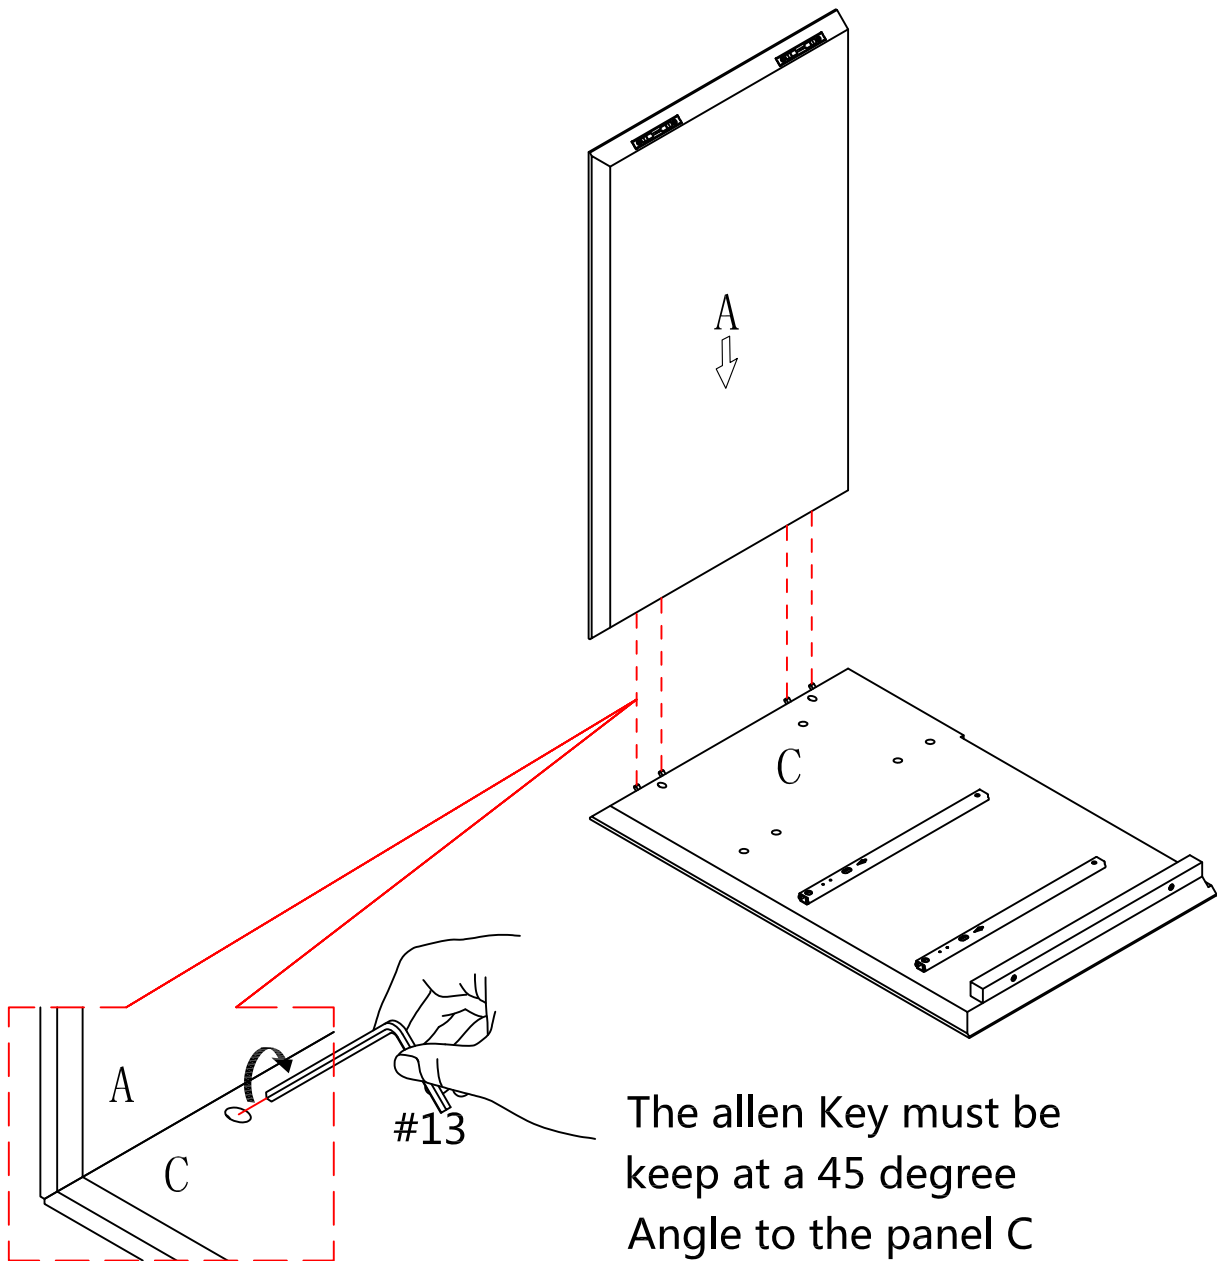
HARDWARE LIST


#1	x14	#2	x23	#3	x4	#4	x2	#5	x1	#6	x2
											
ø3*14mm		ø8#*1"		ø1/4"*1-1/4"		ø3*12mm					
#7	x2	#8	x10	#9	x10	#10	x2	#11	x2	#12	x1
											
ø3*16mm*6#				ø4*22mm		ø3.5*35mm*7#					
#13	x1	#14	x1	#15	x8	#16	x4	#17	x4	#18	x8
											
M4				ø5/32"*1/2"						ø8*30mm	

ASSEMBLY INSTRUCTIONS

STEP-1

1.Insert Part (A) to the designated holes on Part (C). Tighten them using Allen key L (#13).

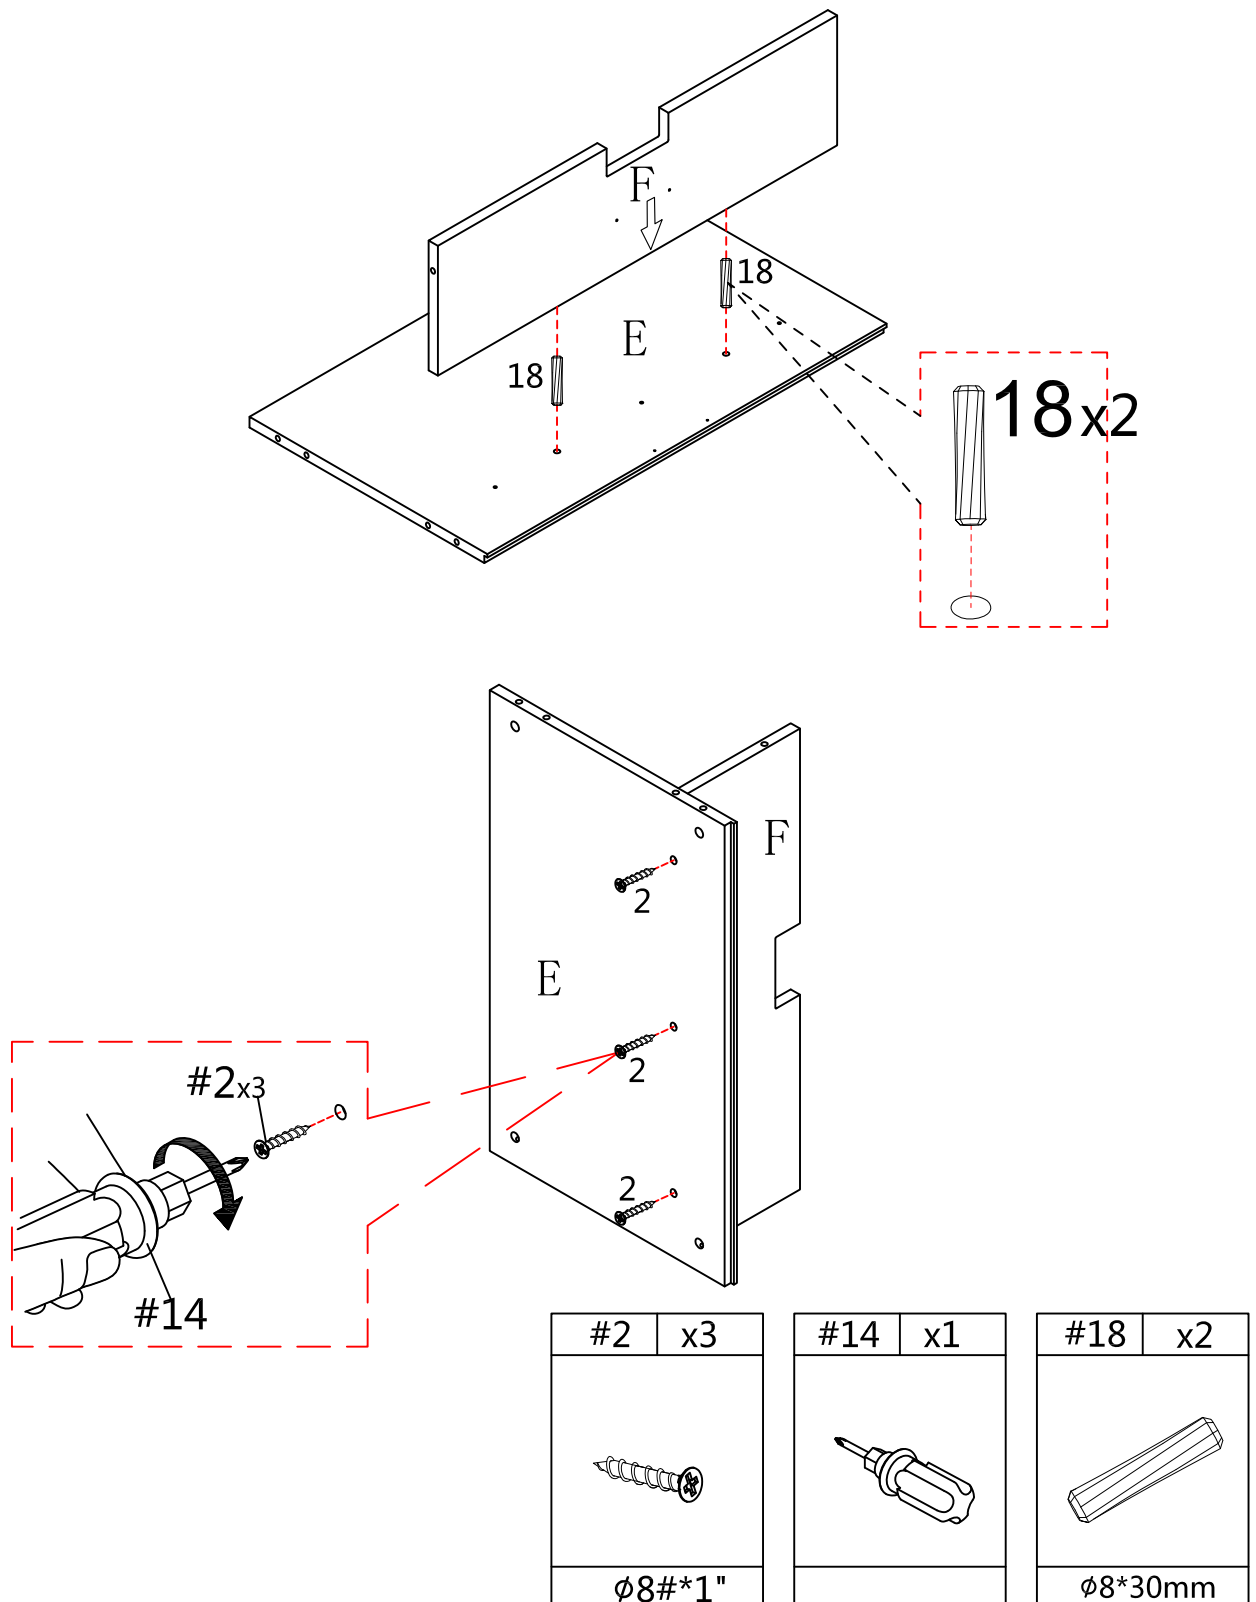


#13	x1
	
M4	

ASSEMBLY INSTRUCTIONS

STEP-2

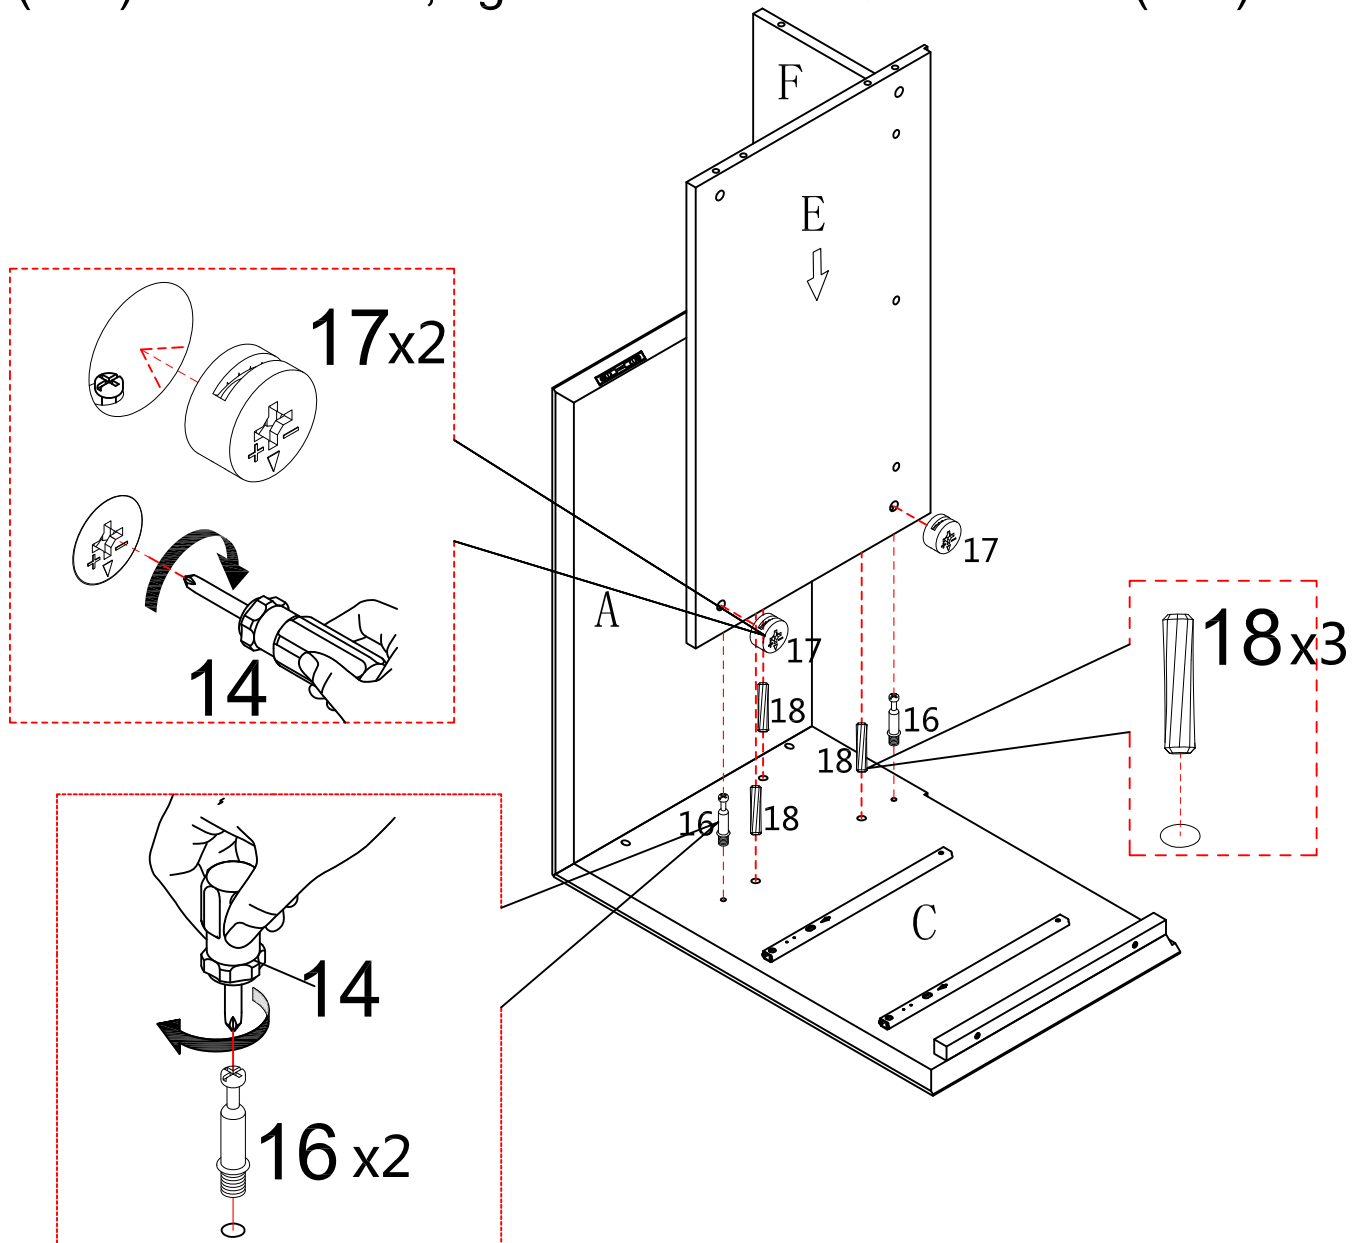
1.Connect Part (F) to the Part (E) and use 3x Screw (#2) to attach them, tighten screw (#2) with Screwdriver (#14).

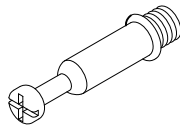


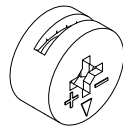
ASSEMBLY INSTRUCTIONS


STEP-3


- 1.Insert 3x dowels (#18) on the Part C,and Tighten bolt (#16) with Screwdriver (#14).
- 2.Connect Part (E) Into the Part (C),and use 2x cam locks (#17) to lock them, tighten them with Screwdriver (#14).



#16	x2
	

#17	x2
	

#18	x3
	
ø8*30mm	

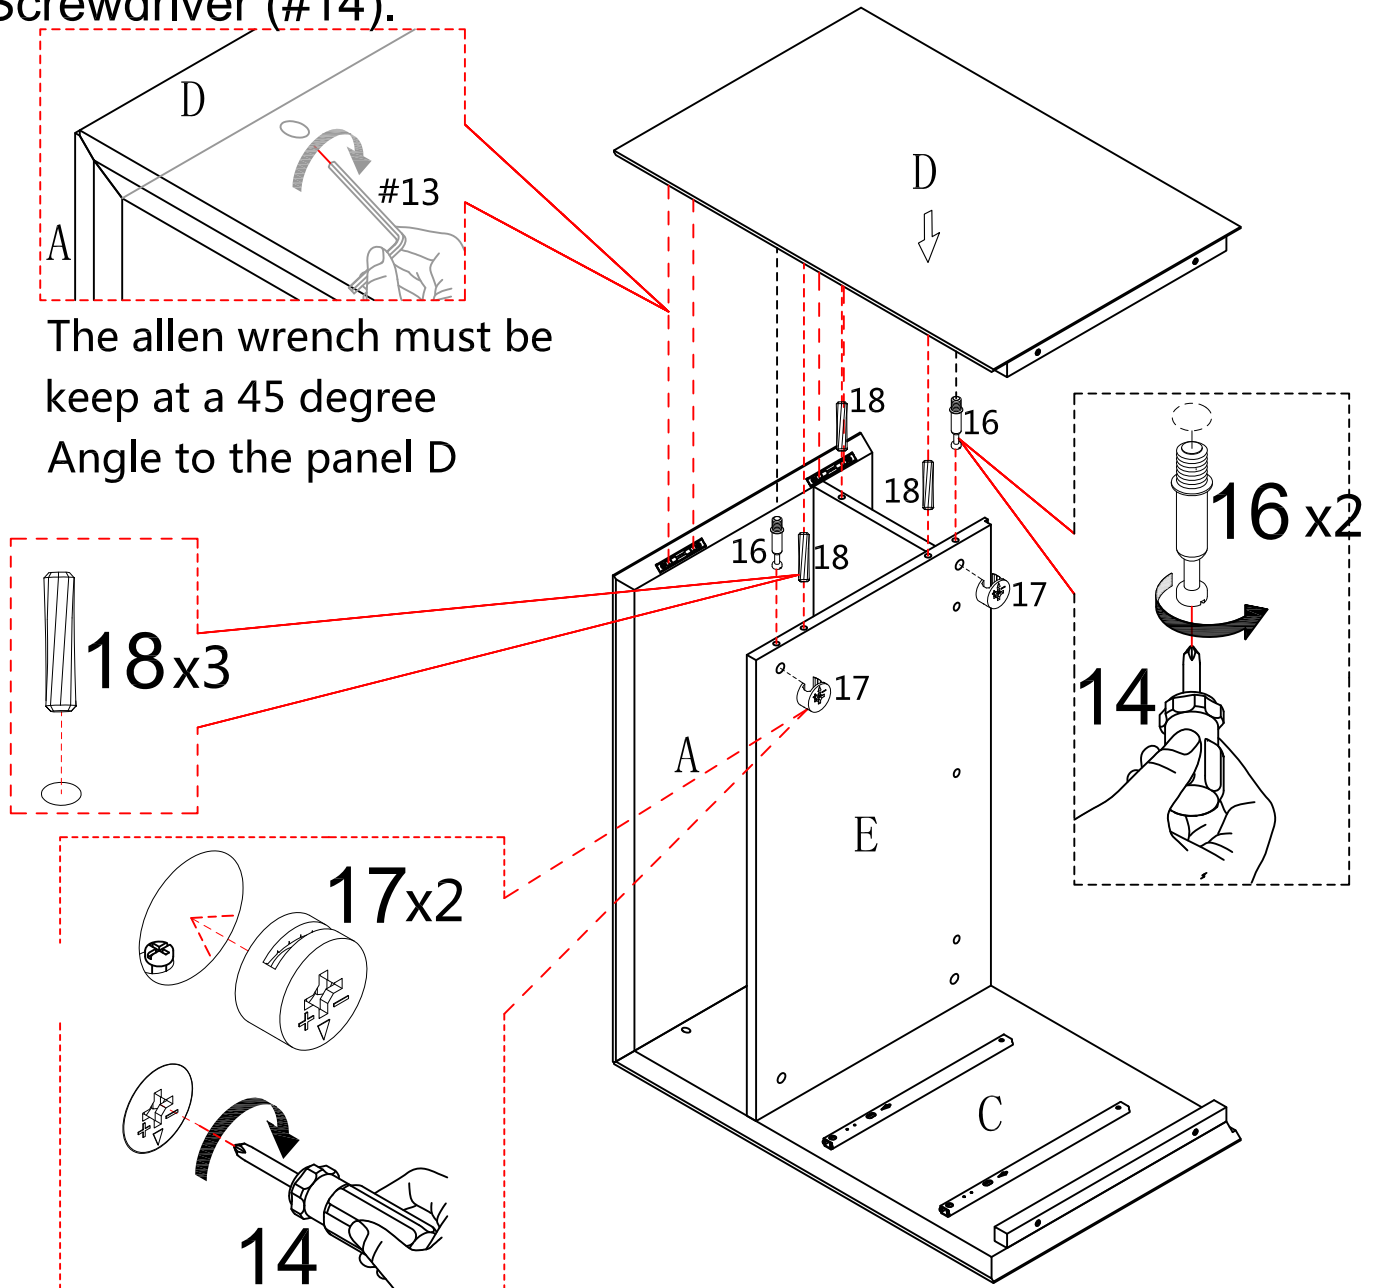
#14	x1
	

ASSEMBLY INSTRUCTIONS


STEP-4


1.Insert 2x dowels (#18) on the Part (E),and Tighten bolt (#16) with Screwdriver (#14).

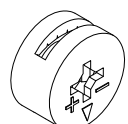
1.Connect Part (D) to the Part (A&E) and Tighten them with Screwdriver (#14).




#13	x1
	
M4	

#14	x1
	

#16	x2
	

#17	x2
	

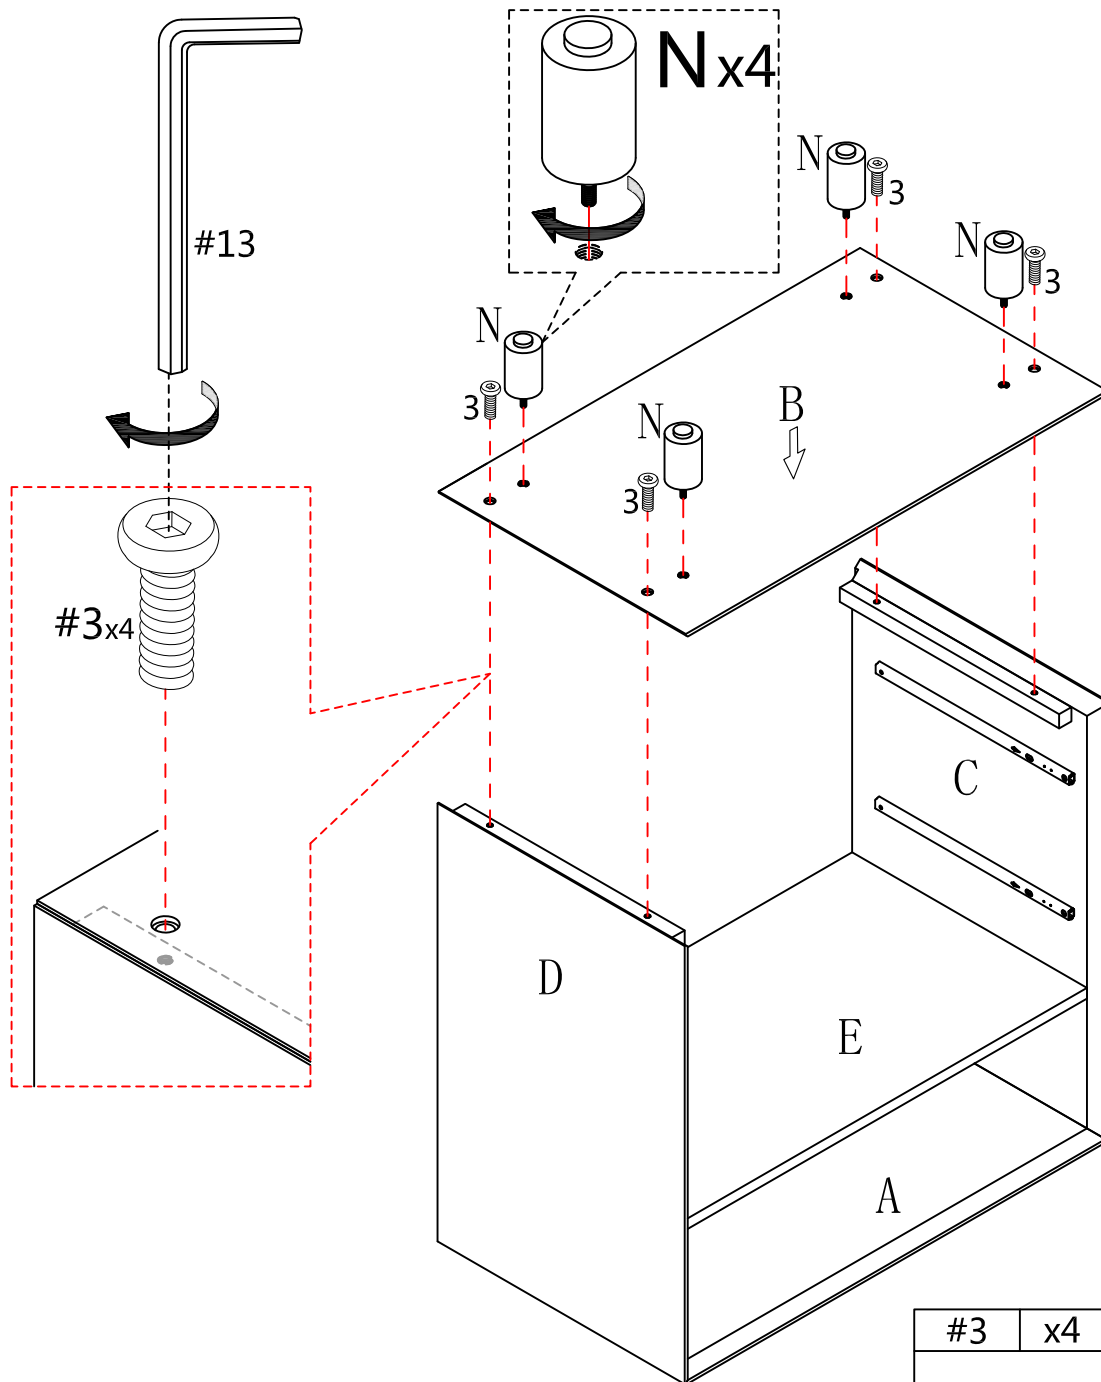
#18	x3
	
ø8*30mm	


ASSEMBLY INSTRUCTIONS


STEP-5

1. Insert the 4x Leg (N) on Part (B)

1.Connect Part (B) to the Part (D&C) and use 4x Screw (#3) locks then .Tighten them using Allen key L (#13).



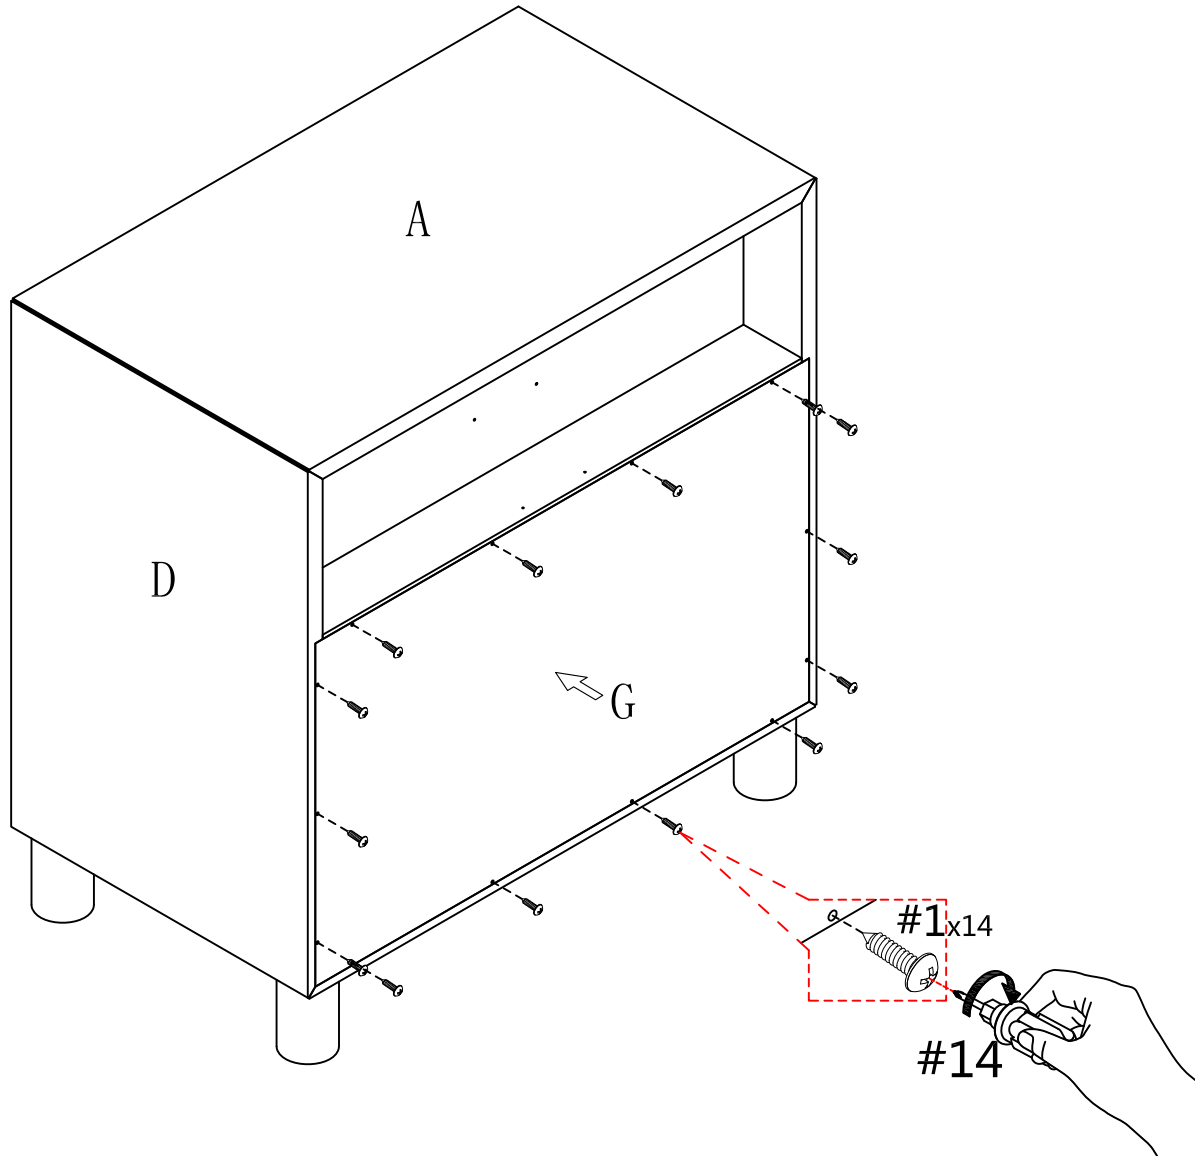
#3	x4
	
ø1/4"*1-1/4"	


#13	x1
	
M4	


ASSEMBLY INSTRUCTIONS

STEP-6

1.Insert back panel (G) into the groove of preassembled step 5,make sure all holes aligned and use screw(#1) to attach them ,tighten screw (#1) with Screwdriver (#14).



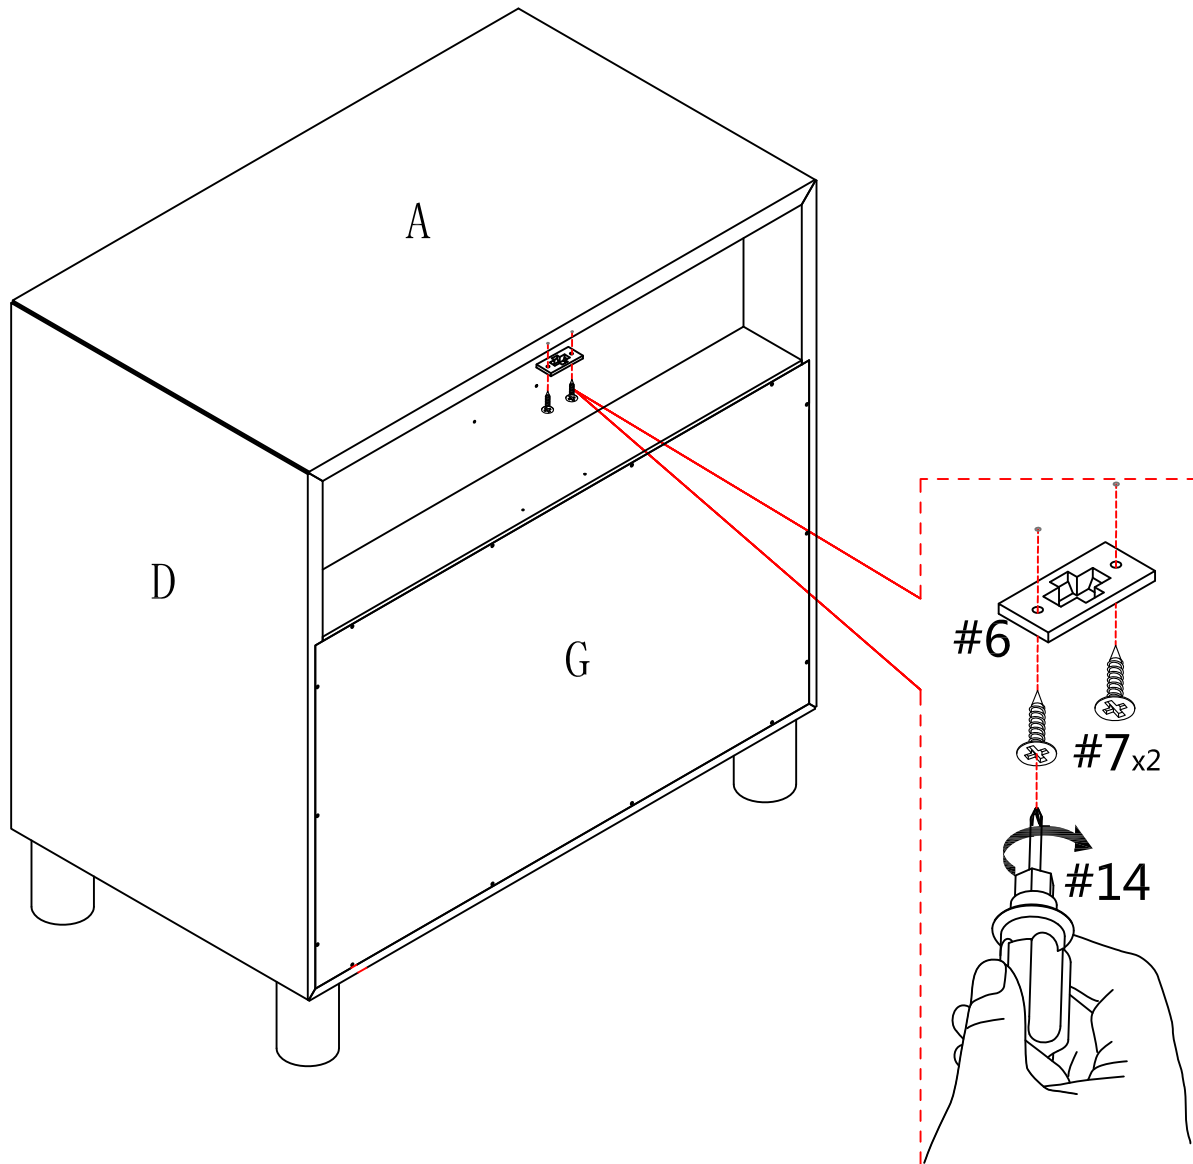
#1	x14
	
ø3*14mm	



#14	x1
	

ASSEMBLY INSTRUCTIONS

STEP-7

1.Insert 2x Part (#6) and use Screw (#7) to attach them ,tighten Screw (#7) with Screwdriver (#14).

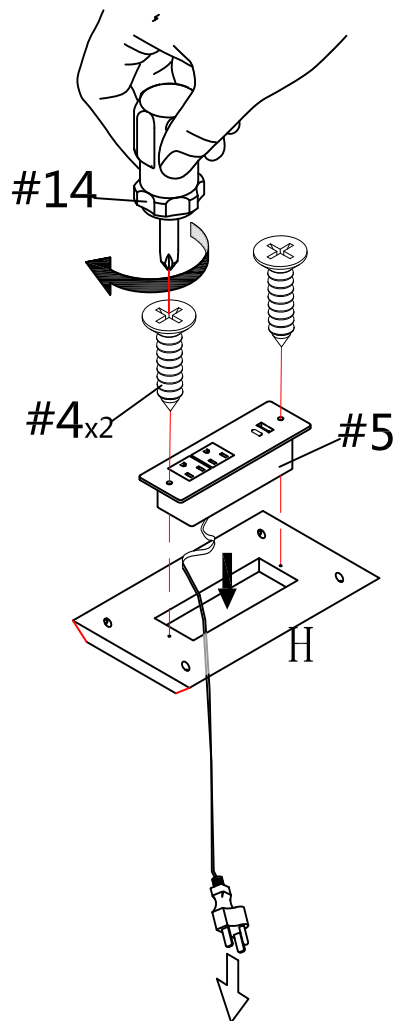


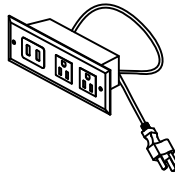

#6	x1	#7	x2	#14	x1
					
		ø3*16mm*6#			

ASSEMBLY INSTRUCTIONS

STEP-8

1.Insert 1x Socket(#5) with Part (H)and use Screw (#4) to attach them, tighten Screw (#4) with Screwdriver (#14).

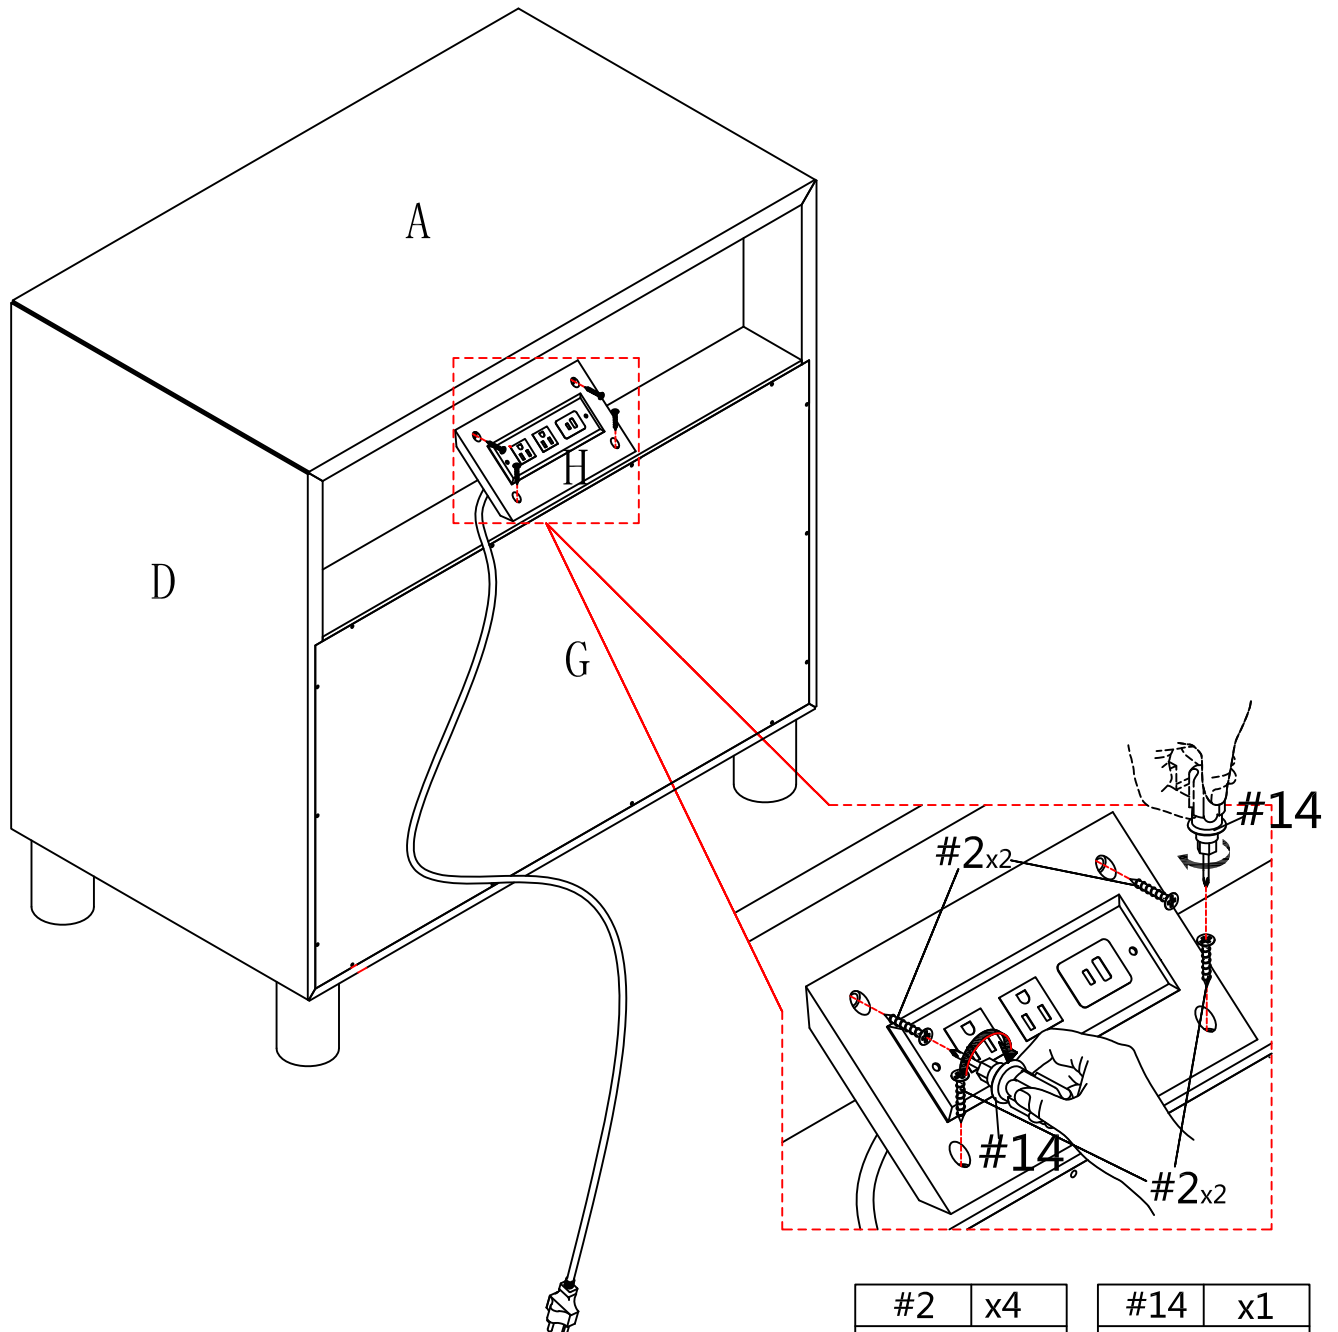



#4	x2	#5	x1	#14	x1
					
ø3*12mm*6#					


ASSEMBLY INSTRUCTIONS

STEP-9

1.Insert Part (H) into the groove of preassembled Step 8,make sure all holes aligned and use 2x Screw (#2) to attach them,tighten screw (#2) with Screwdriver (#14).



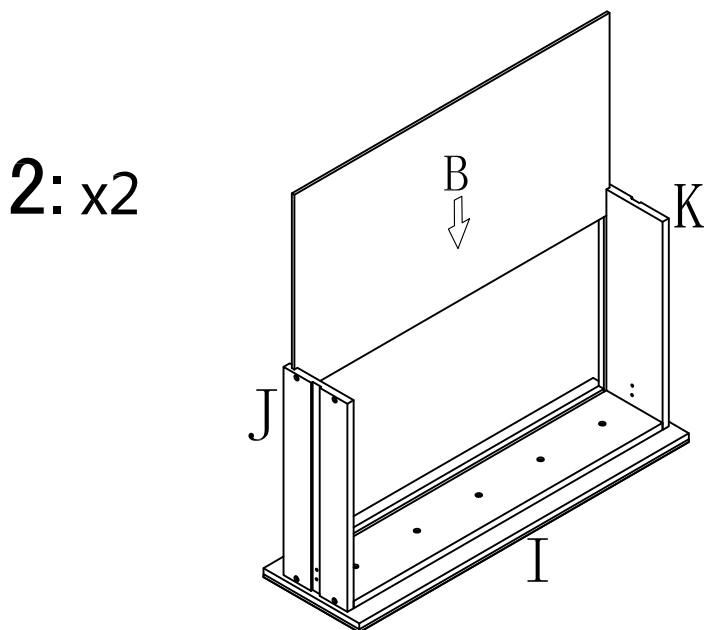
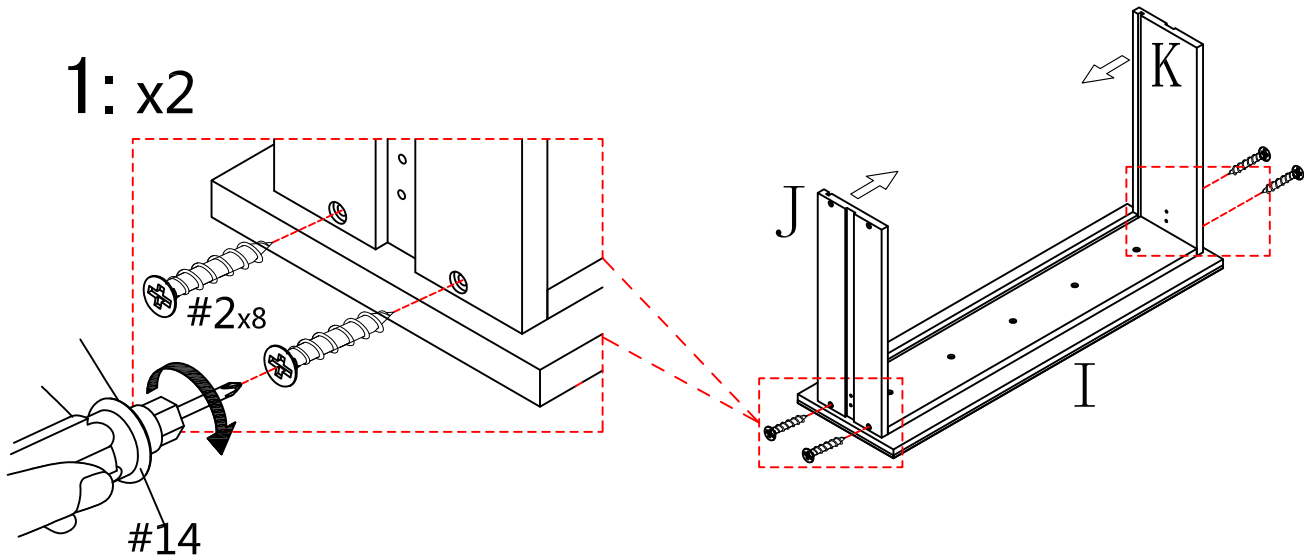
#2	x4
	
ø8#*1"	



#14	x1
	

ASSEMBLY INSTRUCTIONS

STEP-10

1. Connect Part (J&K) to Part (I) using screw #2 and tighten it with Screwdriver (#14). Slide in the part (B) into the groove in Part (J&K). make sure they are also in groove in part (I).

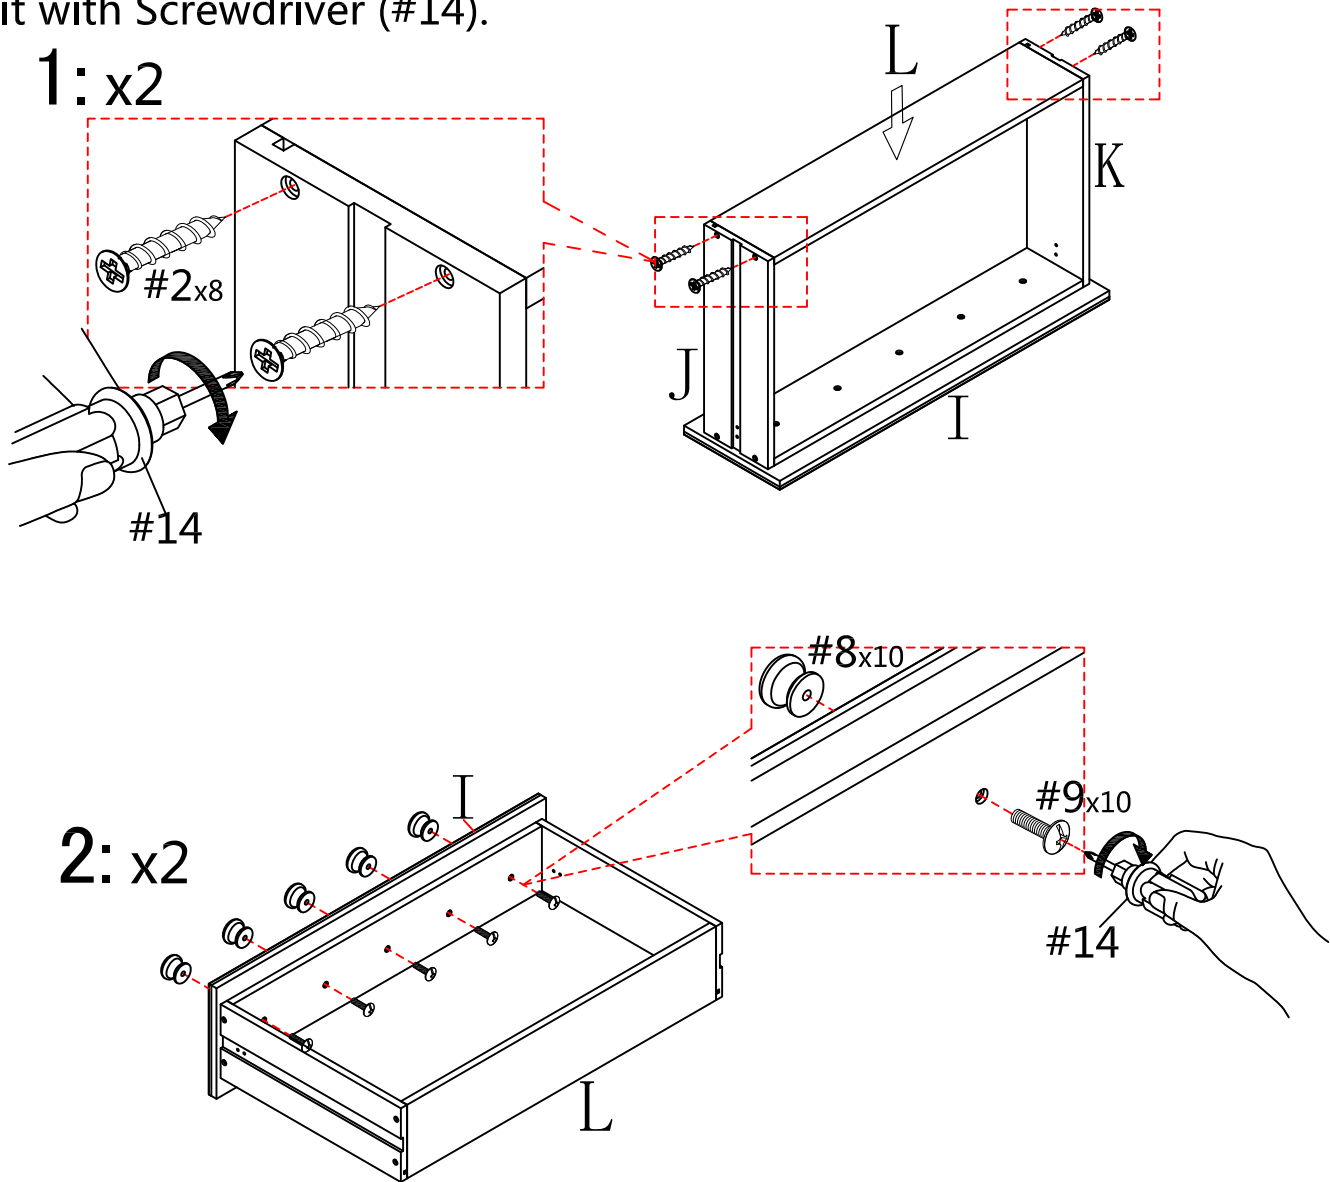




#2	x8	#14	x1
			
ø8#*1"			

ASSEMBLY INSTRUCTIONS

STEP-11

- 1.Connect Part (L) on part (J&K) using 8x Screw (#2) and tighten it with Screwdriver (#14).
- 2.Insert 10x handle (#8) to the door (I) using 10x Screw (#9) and tighten it with Screwdriver (#14).





#2	x8	#8	x10	#9	x10	#14	x1
							
ø8#*1"				ø4*22mm			

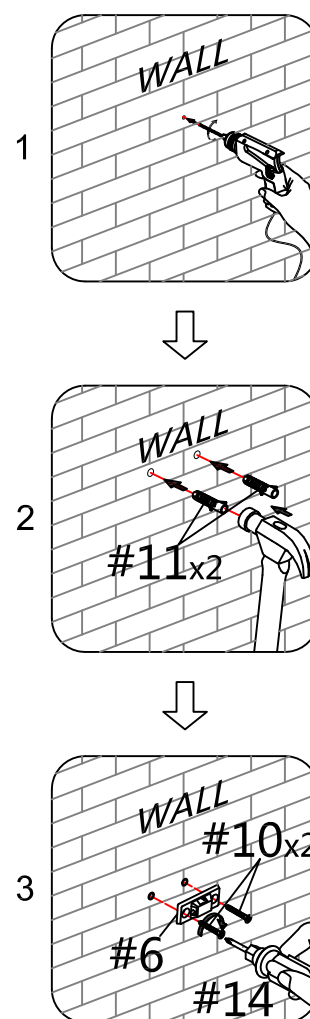
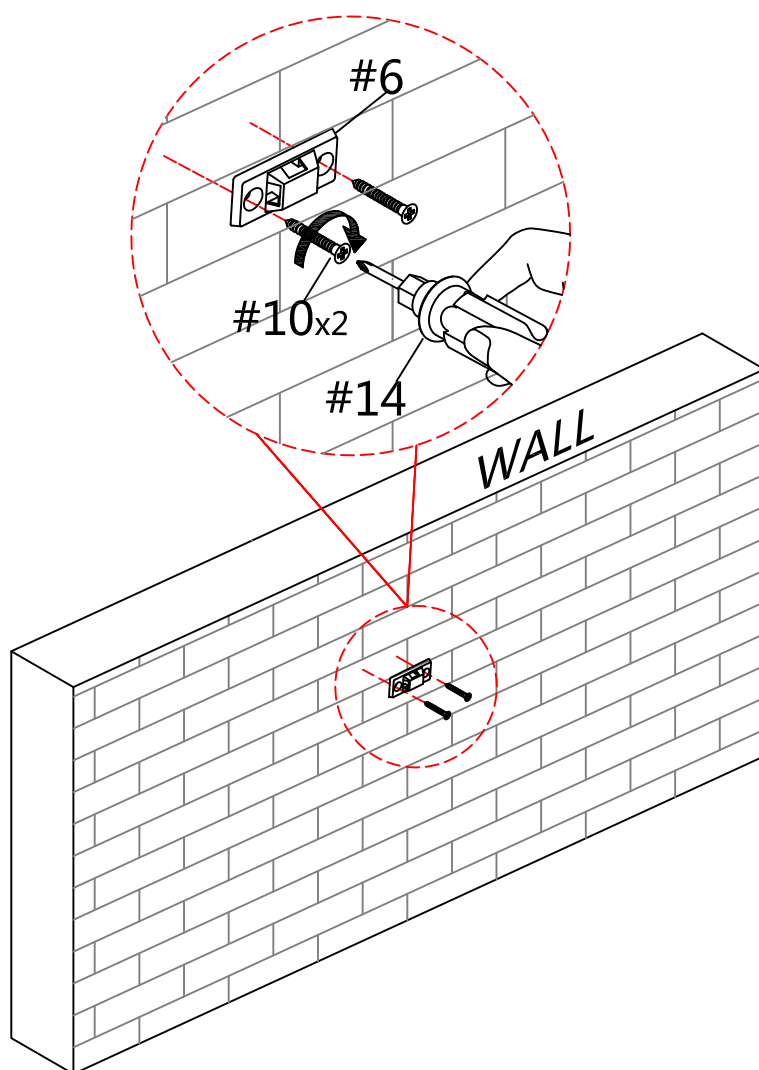
STEP-12

#15	x8	#14	x1
			
$\varnothing 5/32" \times 1/2"$			

ASSEMBLY INSTRUCTIONS

#6	x1	#10	x2	#11	x2	#14	x1
							
		ø3.5*35mm*7#					

STEP-13

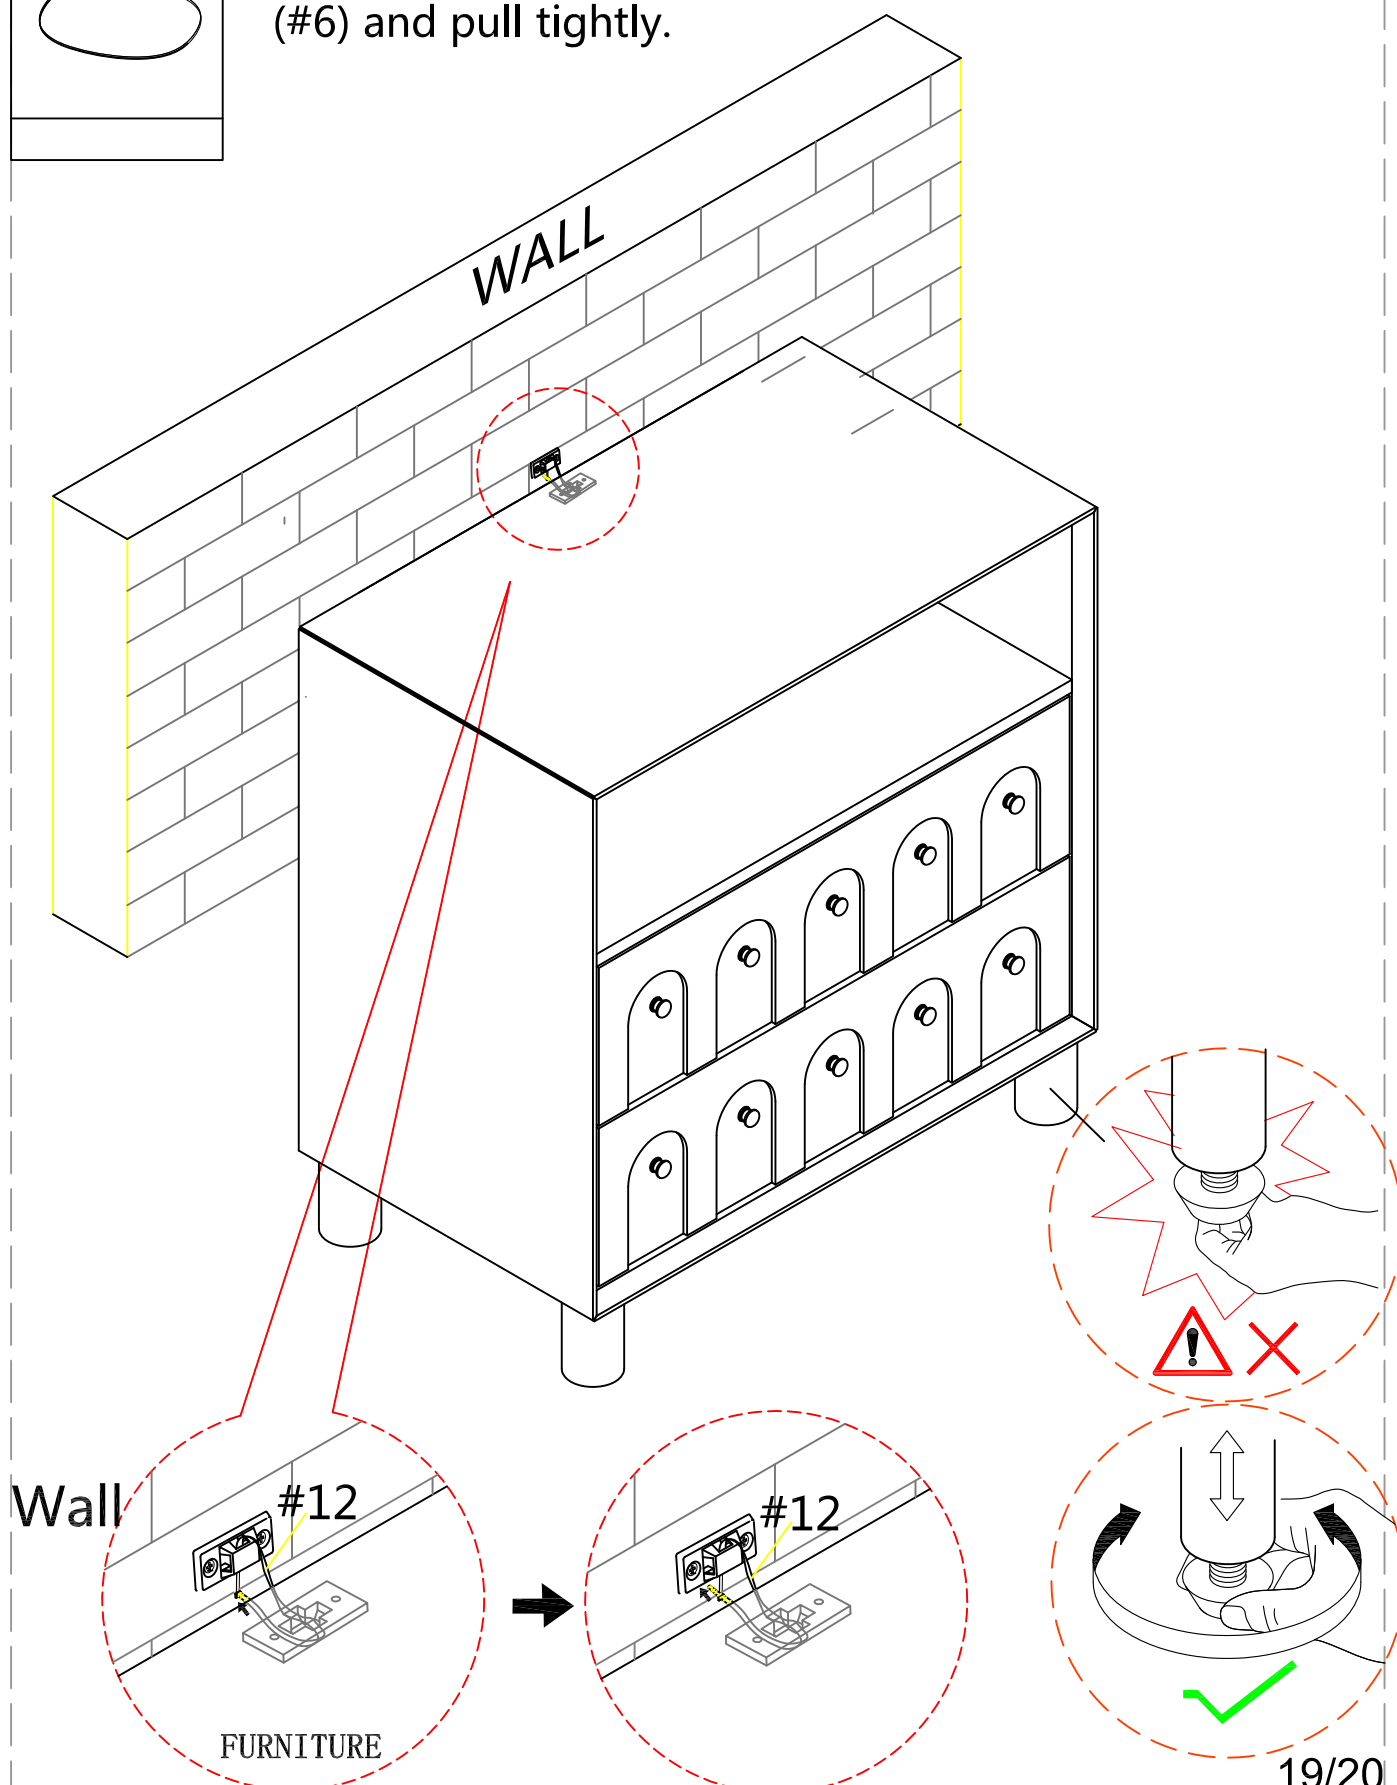


ASSEMBLY INSTRUCTIONS

#12 x1

STEP-14

1. Let the plastic belt (#12) pass through the both part (#6) and pull tightly.



WARRANTY

1. We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
2. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty
With assembly? Missing parts?
Please send email with your order No to
hubeihongmao@163.com
For return, please check the return policy with
the retailer or market place you bought from.

Appreciate your purchasing from us.
Pop up your life by our furniture piece!