METAL BED SET

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required.

HARDWARE LIST

A (4) Long Allen Bolts
B (4) Short Allen Bolts
C (8) Flat Washers
D (8) Spring Washers
E (4) Hex Nuts
F (1) Allen Wrench

PARTS LIST

G (1) Headboard Panel
H (1) Footboard Panel
I (2) Leg Extensions

PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	4		B	4	
C	8		D	8	
E	4		F	1	

STEP 1 - Figure 1


Begin assembly by inserting both Leg Extensions (I) into bottom of Headboard Panel (G).

STEP 2 - Figure 2

Attach bed frame (*not included) to each Leg Extension (I) using 2 Long Allen Bolts (A) from the back side, 2 Flat Washers (C), 2 Spring Washers (D) & 2 Hex Nuts (E) per post & Leg Extension. Tighten all bolts using Allen Wrench (F) provided.

STEP 3 - Figure 3

Attach bed frame (*not included) to each post on Footboard Panel (H) using 2 Short Allen Bolts (B) from the back side, 2 Spring Wahsers (D) & 2 Flat Washers (C) per post. Tighten all bolts using Alen Wrench (F) provided. Assembly is now complete.

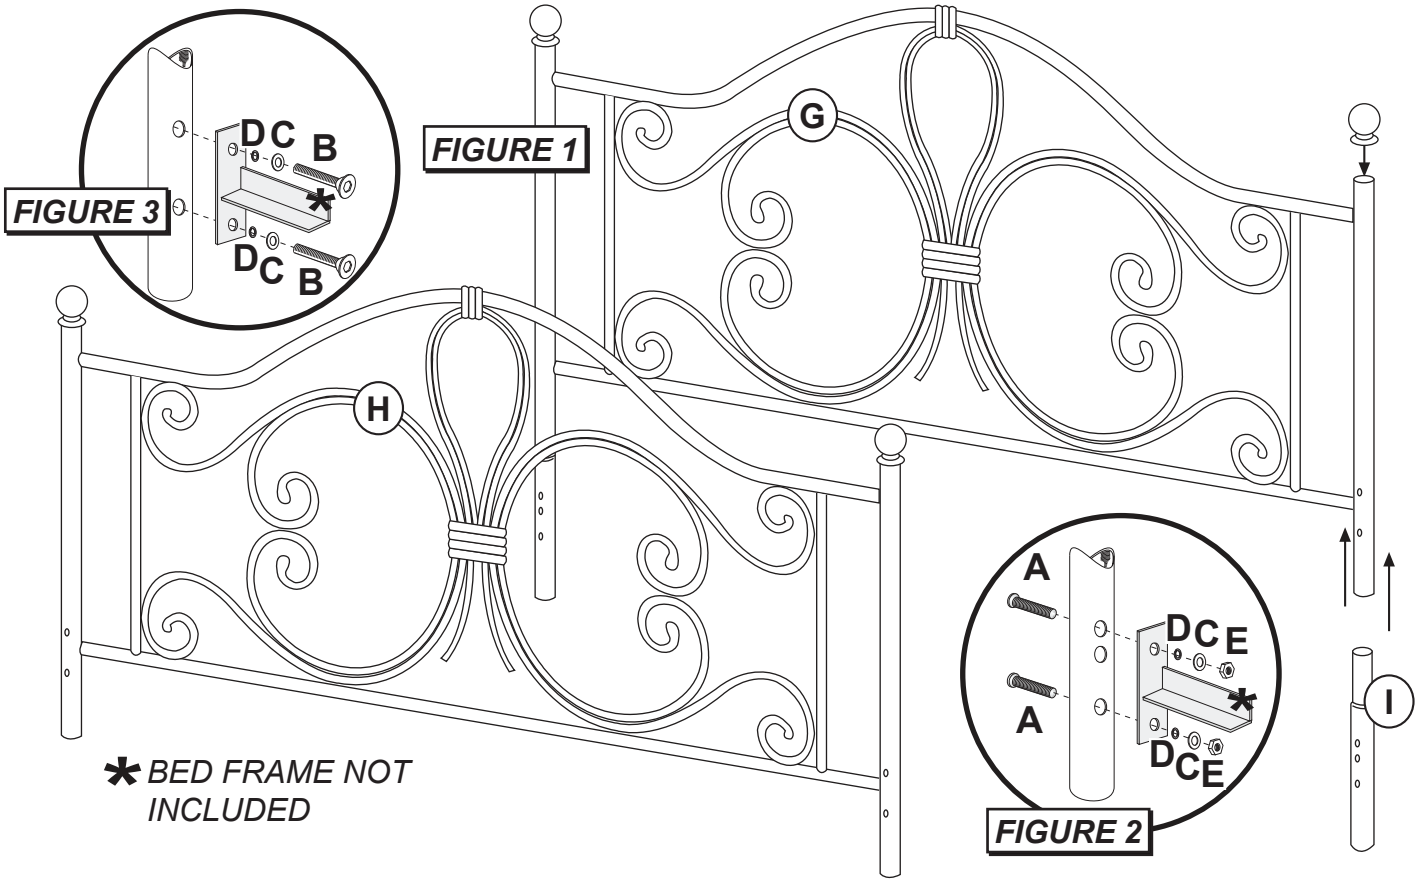

CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all hardware is securely tightened.

MÉTAL LIT ENSEMBLE

Examinez tous les matériaux d'emballage pour les petites pièces qui peuvent avoir été lâche pendant le transport. Des contrôles périodiques sont recommandées afin d'assurer que tous les composants sont en bonne position, tendu et sans dommages. Gardez ces instructions de montage pour référence future. Assemblage par un

LISTE DU MATÉRIEL

A (4) Longue Boulons Allen
B (4) Court Boulons Allen
C (8) Rondelles Plates
D (8) Rondelles de Printemps
E (4) Écrous Hexagonaux
F (1) Clé Allen

PART	QTY	HARDWARE	PART	QTY	HARDWARE
A	4		B	4	
C	8		D	8	
E	4		F	1	

LISTE DES PIÈCES

G (1) Panneau de Tête de Lit
H (1) Panneau de Pied de Lit
I (2) Extensions des Jambes

ÉTAPE 1 - Figure 1


Commencez l'assemblage en insérant les deux extensions de jambe (I) dans le fond du Panneau de Chevet (G).

ÉTAPE 2 - Figure 2

Fixez cadre de lit (* non inclus) pour chaque Jambe d'Extension (I) en utilisant deux longues boulons Allen (A) de la face arrière, 2 rondelles plates (C), 2 Rondelles (D) et deux écrous hexagonaux (E) par poste et extension des jambes. Serrez tous les boulons en utilisant la clé Allen (F) à condition.

ÉTAPE 3 - Figure 3

Fixez cadre de lit (* non inclus) à chaque poste sur Panneau de pied (H) à l'aide de 2 boulons Allen court (B) de la face arrière, 2 Rondelles (D) et 2 rondelles plates (C) par poste. Serrez tous les boulons à l'aide Alen clé (F) à condition. Assemblée est maintenant terminée.

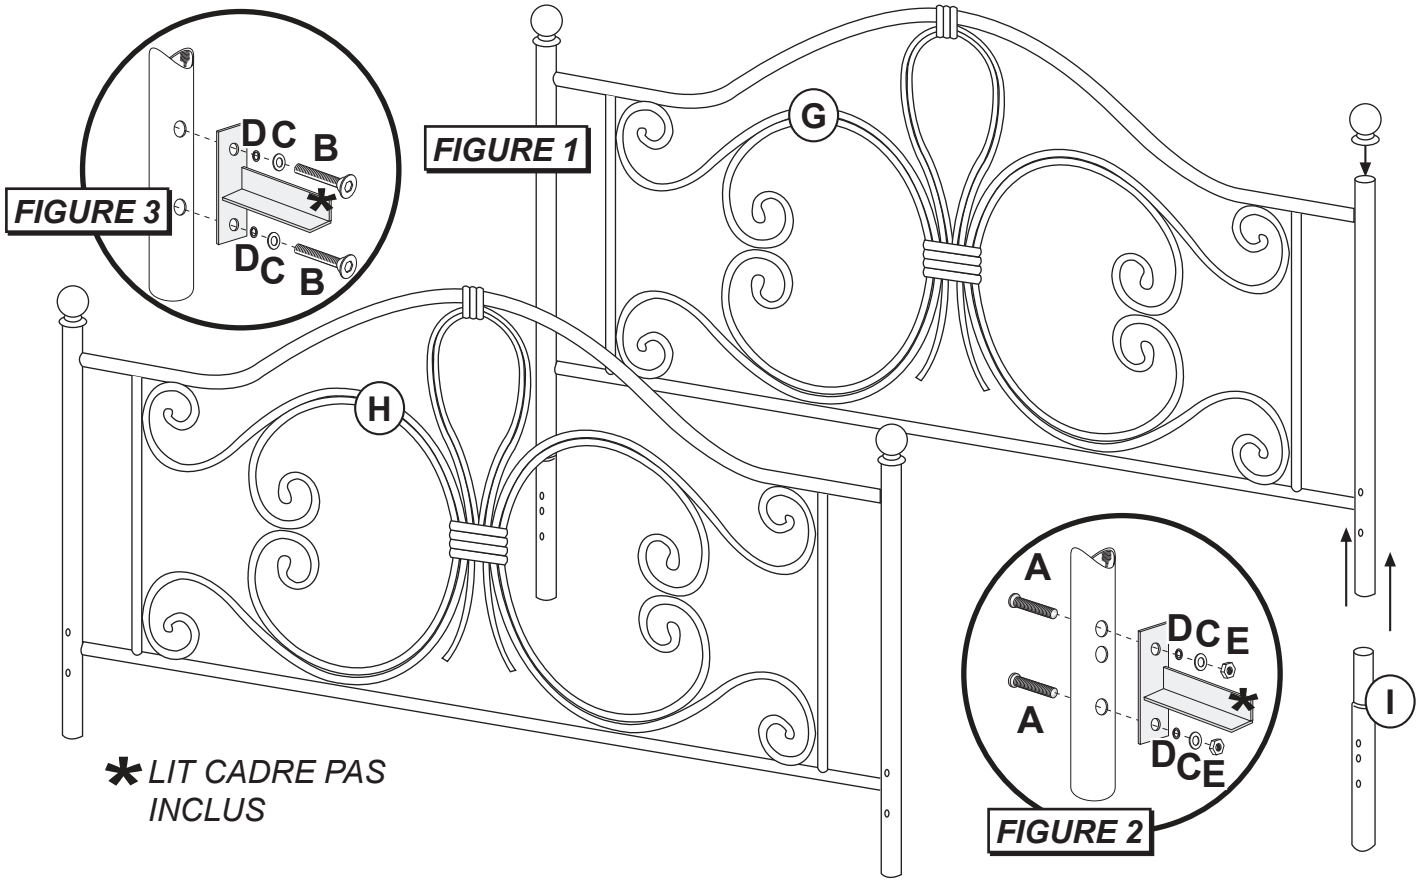

* *LIT CADRE PAS INCLUS*

SOINS ET ENTRETIEN: La touche d'un chiffon doux est tout l'entretien de la finition aurez jamais besoin. S'il vous plaît ne pas utiliser de nettoyants corrosifs ou abrasifs pour le polissage, car ils peuvent causer des dommages à la finition. Des contrôles périodiques sont recommandées afin de s'assurer que tous les boulons, vis et écrous sont bien serrés.