90min

APPROXIMATE ASSEMBLY TIME

2 PEOPLE FOR ASSEMBLY

FLOOR AREA
1.0M X 1.0M
(FLAT BUILD)

CEILING HEIGHT
2.2M

REQUIRED ASSEMBLY SPACE

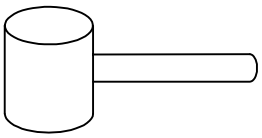

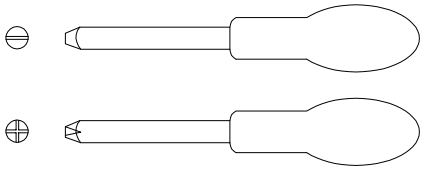

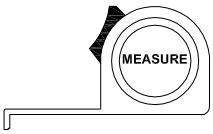

REQUIRED ASSEMBLY TOOLS

ASSEMBLED DIMENSIONS

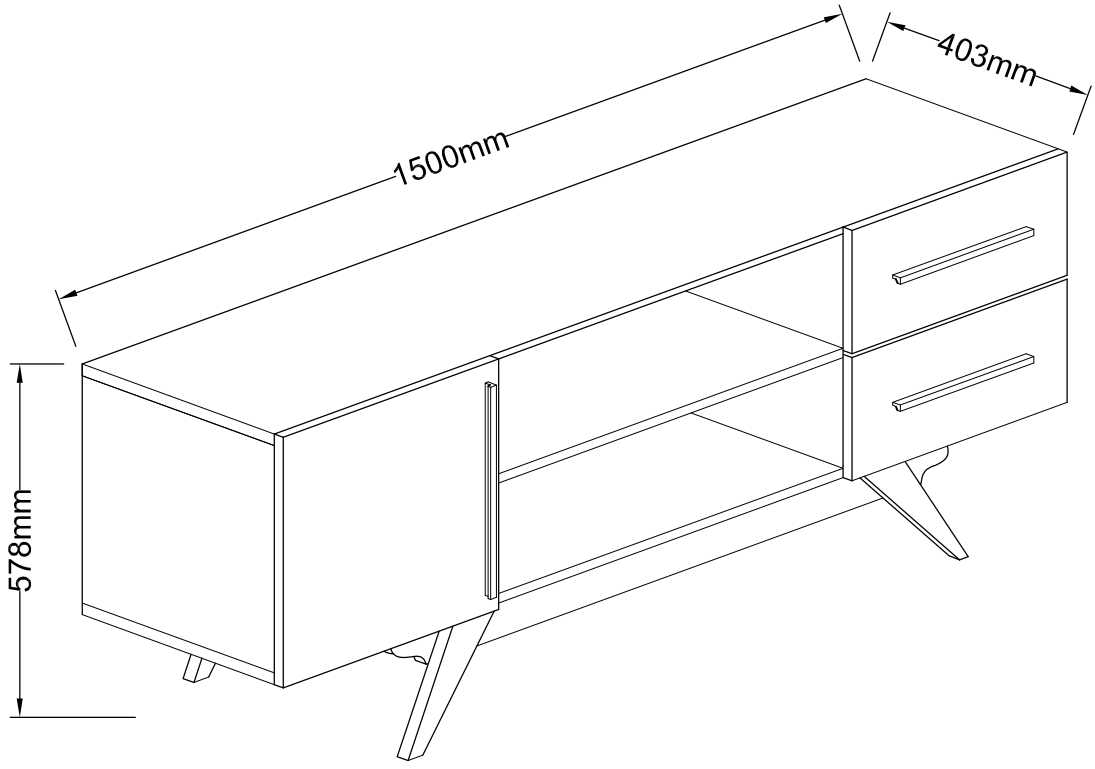

NOTE : THE MAXIMUM WEIGHT THIS PRODUCT CAN HOLD UP TO IS 25 KGS.

NO.	PART LIST	QTY
(A)	RIGHT SIDE PANEL	1
(B)	LEFT SIDE PANEL	1
(C)	CENTRE PANEL RIGHT	1
(D)	CENTRE PANEL LEFT	1
(E)	TOP PANEL	1
(F)	BOTTOM PANEL	1
(G)	FIXED PANEL	1
(H)	DOOR PANEL	1
(I)	BACK PANEL	1

NO.	PART LIST	QTY
(J)	DRAWER FRONT	2
(K)	DRAWER SIDE (RIGHT)	2
(L)	DRAWER SIDE (LEFT)	2
(M)	DRAWER BACK PANEL	2
(N)	DRAWER BASE	2

PARTS LIST

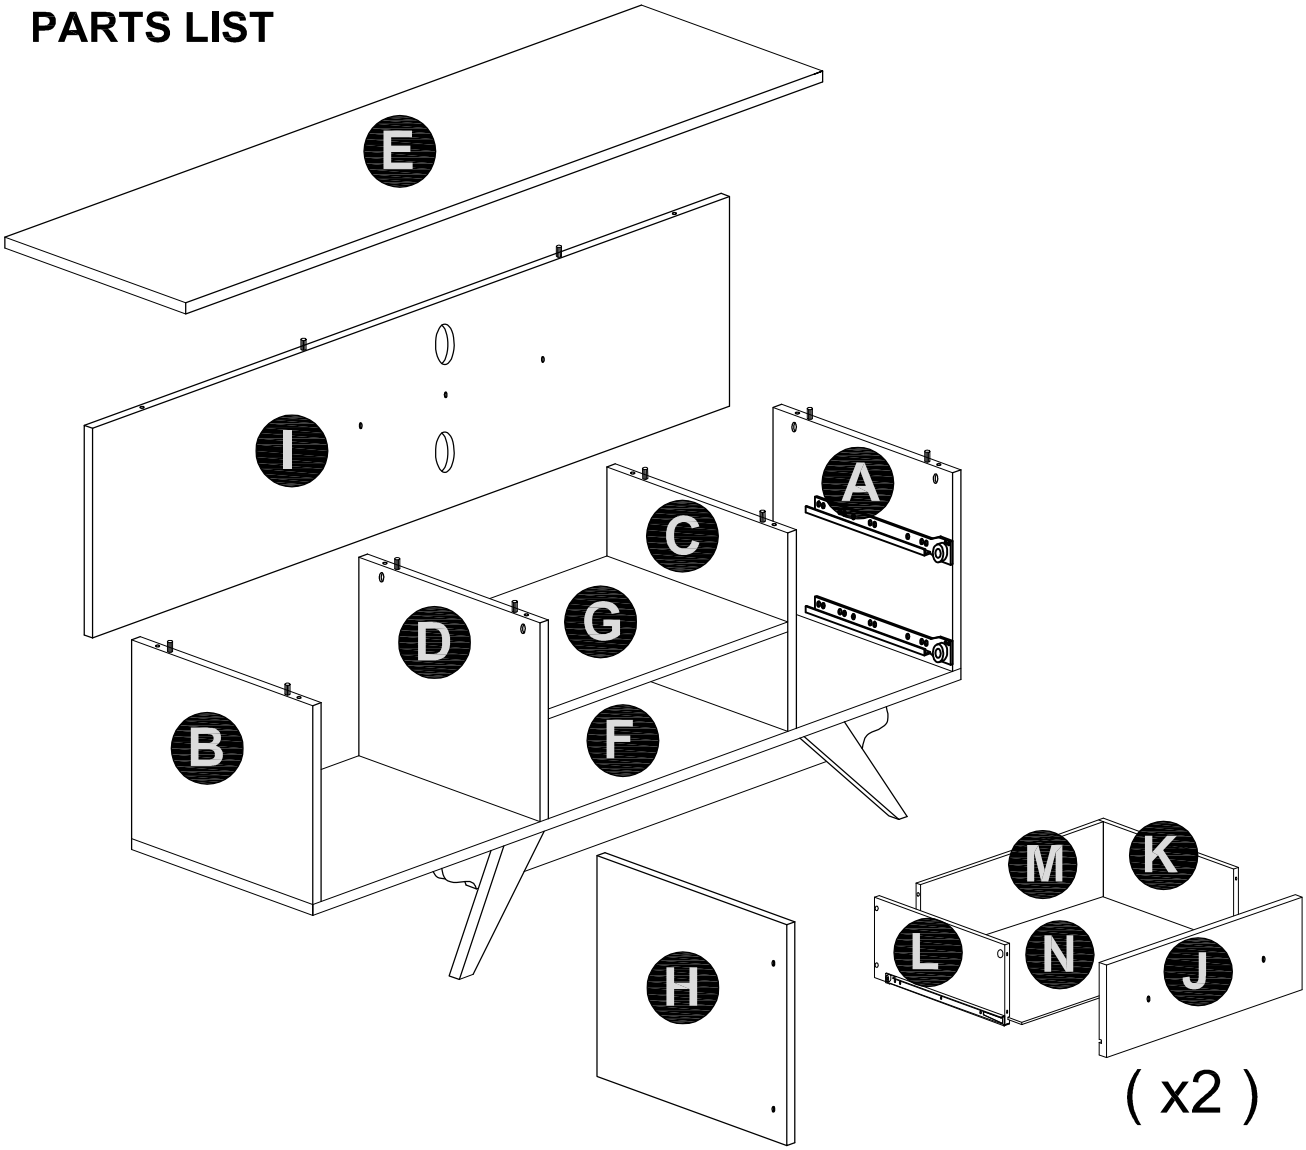

HARDWARE LIST

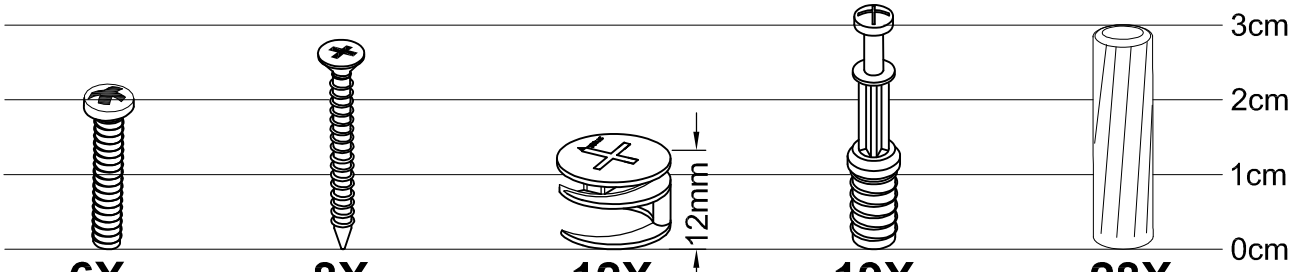

6X
M4 x 19mm
1
PAN HEAD BOLT

8X
M3.5 x 25mm
2
FLAT HEAD SCREW

12X
Dia.15mm
3
CAM-LOCK

19X
M6.5
4
CAM BOLT

28X
Dia.6 x 30mm
5
WOOD DOWEL

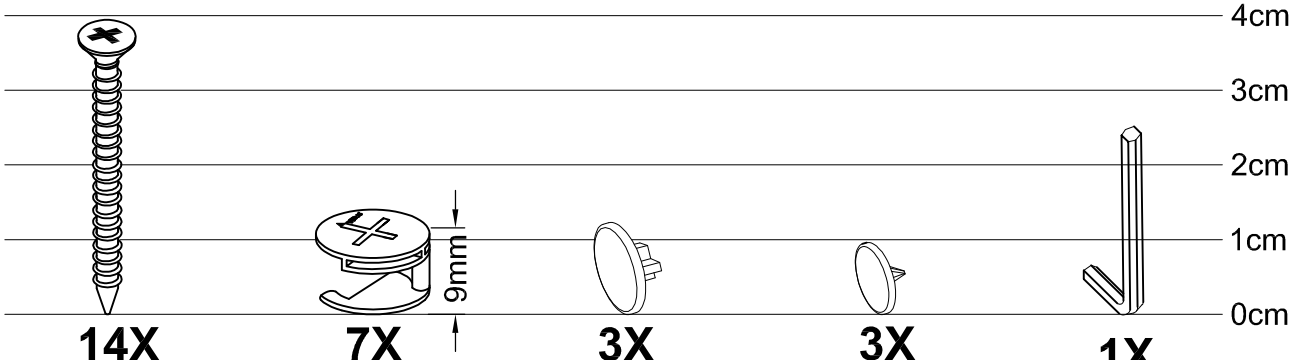

14X
M8 x 38mm
6
FLAT HEAD SCREW

7X
Dia.15mm
7
SMALL CAM-LOCK

3X
Dia 17mm
8
UNIVERSAL CAP (OPTIONAL)

3X
Dia.13mm
9
SCREW COVER (OPTIONAL)

1X
M4
10
ALLEN KEY

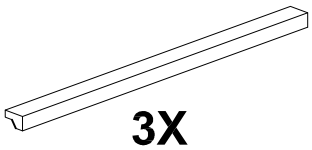

3X
11
HANDLE



2X
12
ADJUSTABLE HINGE



1X
13
GLUE 10CC

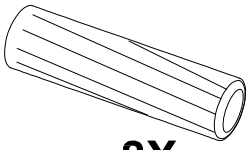

8X
Dia.8 x 30mm
14
WOOD DOWEL

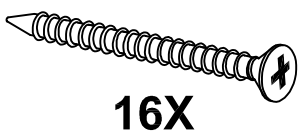

16X
M8 x 50mm
15
FLAT HEAD SCREW

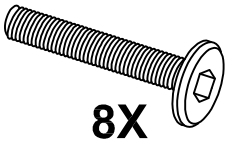

8X
M5 x 40mm
16
ALLEN HEAD BOLT

8X
Ø12 x 1mm
17
SPRING WASHER

8X
Ø12 x 0.5mm
18
FLAT WASHER

HARDWARE LIST



12X
M8 x 32mm
19
FLAT HEAD
SCREW

8X
M8 x 5/8mm
20
FLAT HEAD
SCREW

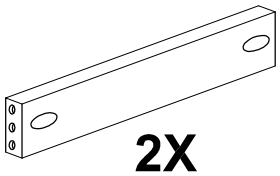

2X
21
SIDE PROFILE
283 x 45 x 20 mm

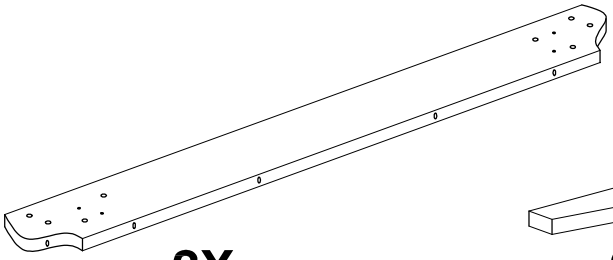

2X
22
FRONT PROFILE
1148 x 70 x 20 mm



2X
23
RIGHT LEG PROFILE
300 x 70 x 28 mm



2X
24
LEFT LEG PROFILE
300 x 70 x 28 mm

1X
24
DOOR
SOFT CLOSED

2X
25
ANTI TIP STRAP

Top Tips before you start!

1. Please check that all parts are present before you start the assembly of your furniture.

2. For ease and speed of assembly,we recommend that before you commence each step of the assembly,that you identify all the parts required for that step.

3. For larger items, please ensure that you have sufficent space and people (as indicated on page 1) to assemble your product safely

4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.

5. For the protection of your furniture, particularly items of high gloss finish, we recommend that the product is placed on a protected surface during assembly to prevent any damage.

6. Caution - Electric / Battery operated screw driver NOT RECOMMENDED.

7. During assembly please take care not to over-tighten any fittings, as this may damage the product.

8. Always place the product on a flat, steady and stable surface.

9. Do not sit or stand on the product.
   Do not use the product as a stepladder.

10. This product is intended for indoor, household use only as it is non industrial product.

11. This product is constructed from re-inforced hollow board. Excessive pressure cause irreparable damage. Please do not kneel on any part of this product during assembly.

Care and Maintenance of your Furniture

- Please periodically check all fittings and re-tighten as necessary.
- To clean your item,please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture.
- Please do not place hot items (e.g. hot drinks) directly on to the wood surface.
- Please do not drag and pull your furniture.

SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

LARGE CAM-LOCK

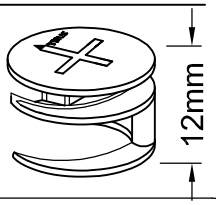

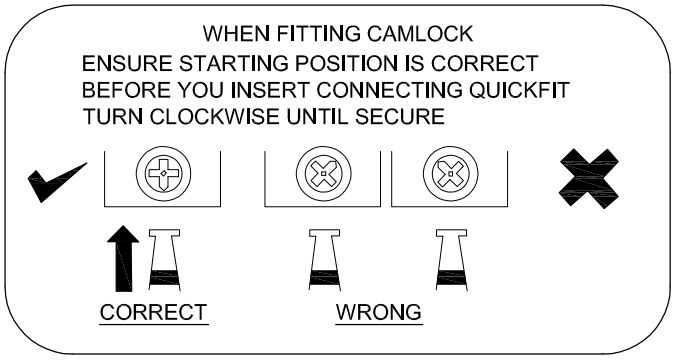

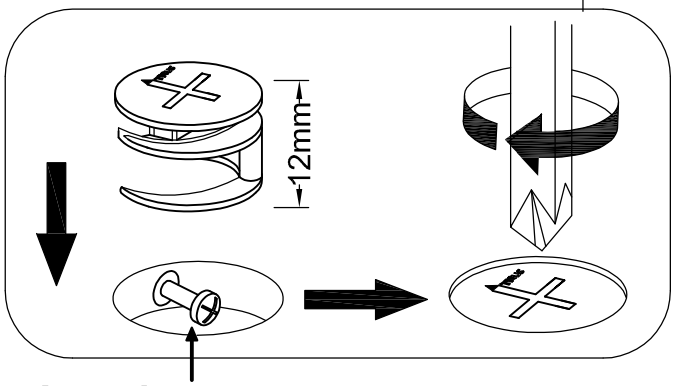

Quickfit head needs to be in centre

SMALL CAM-LOCK

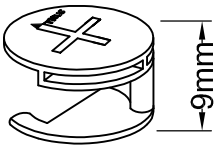

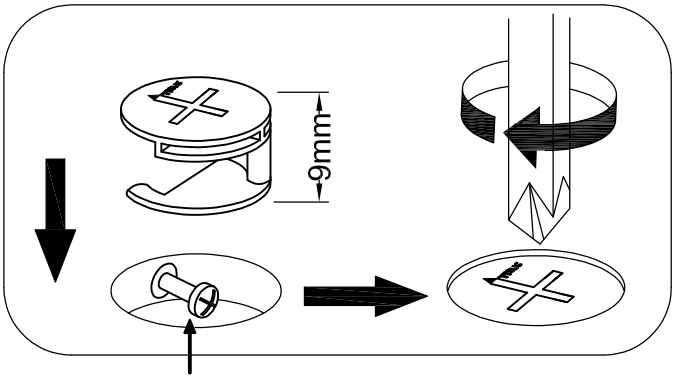

Quickfit head needs to be in centre

QUICKFIT
Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

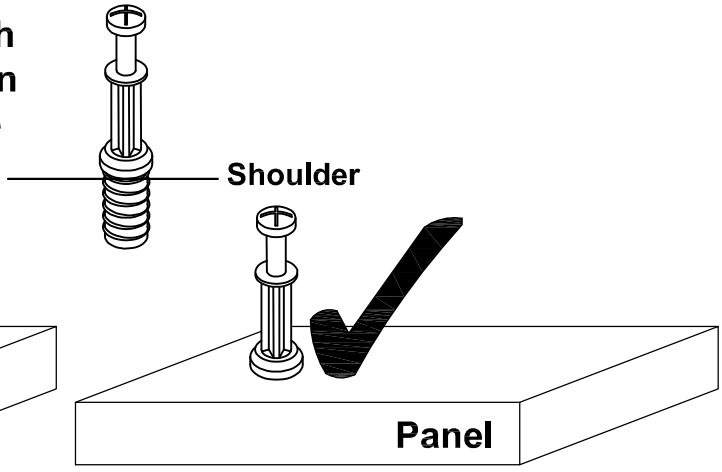

STEP 1

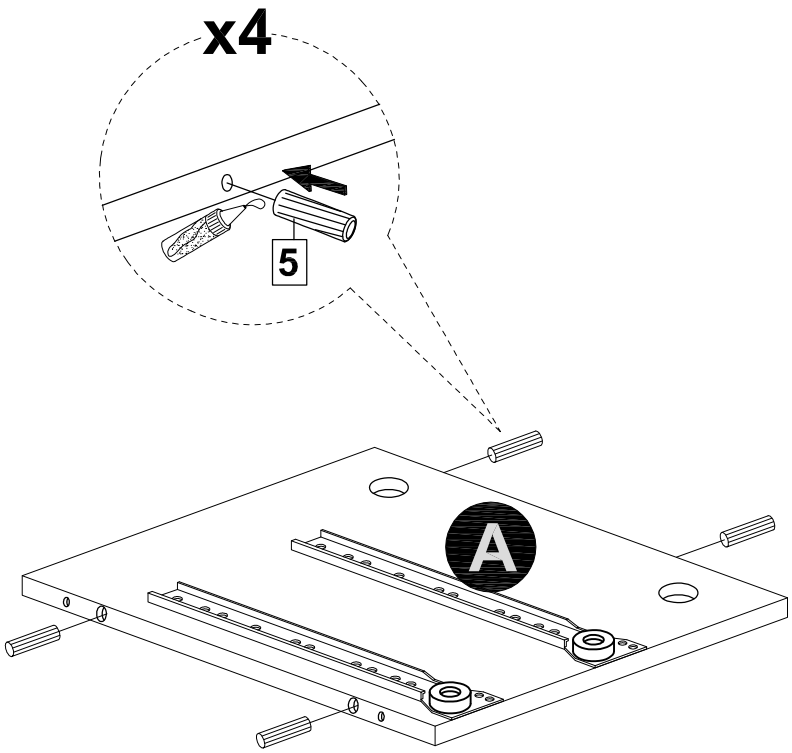

STEP 2

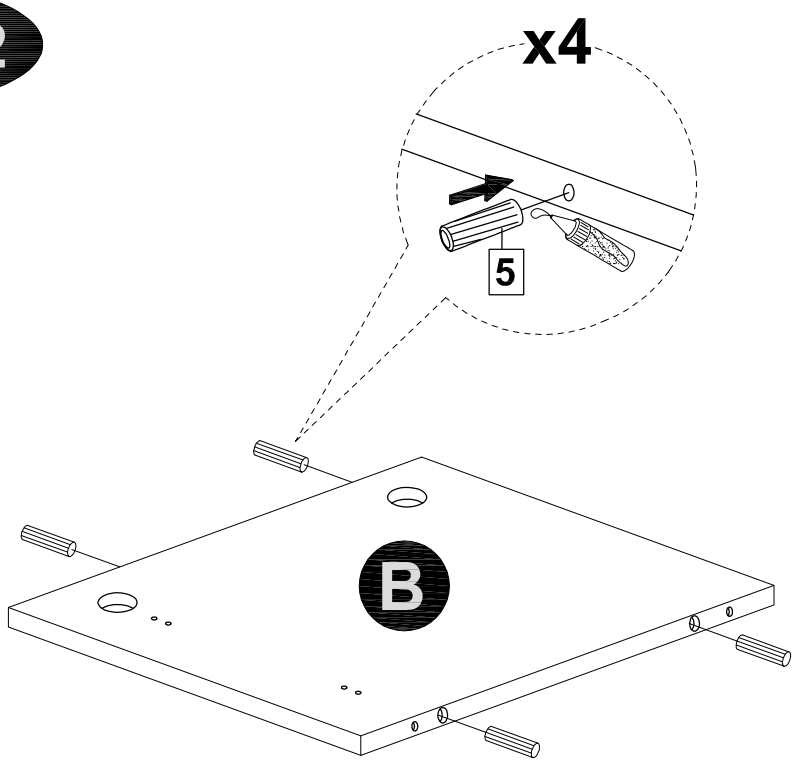

STEP 3

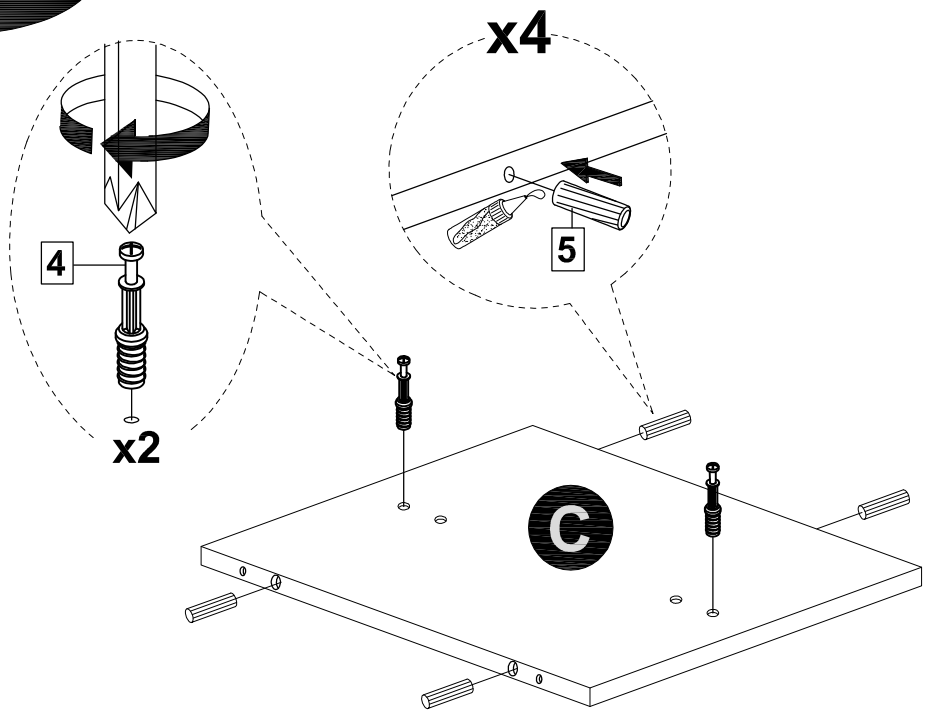

STEP 4

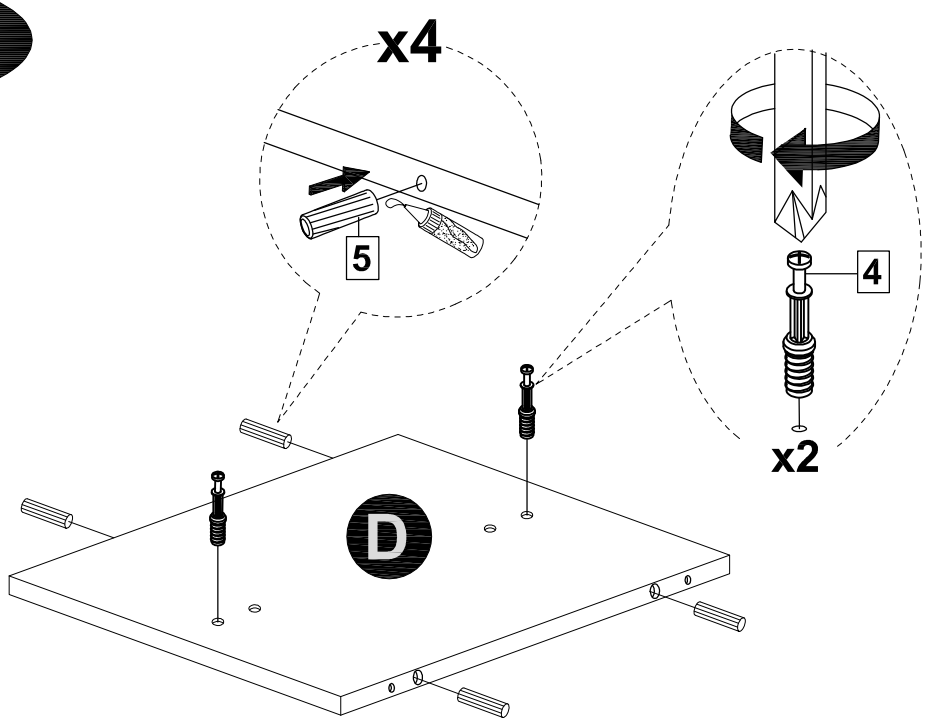

STEP 5

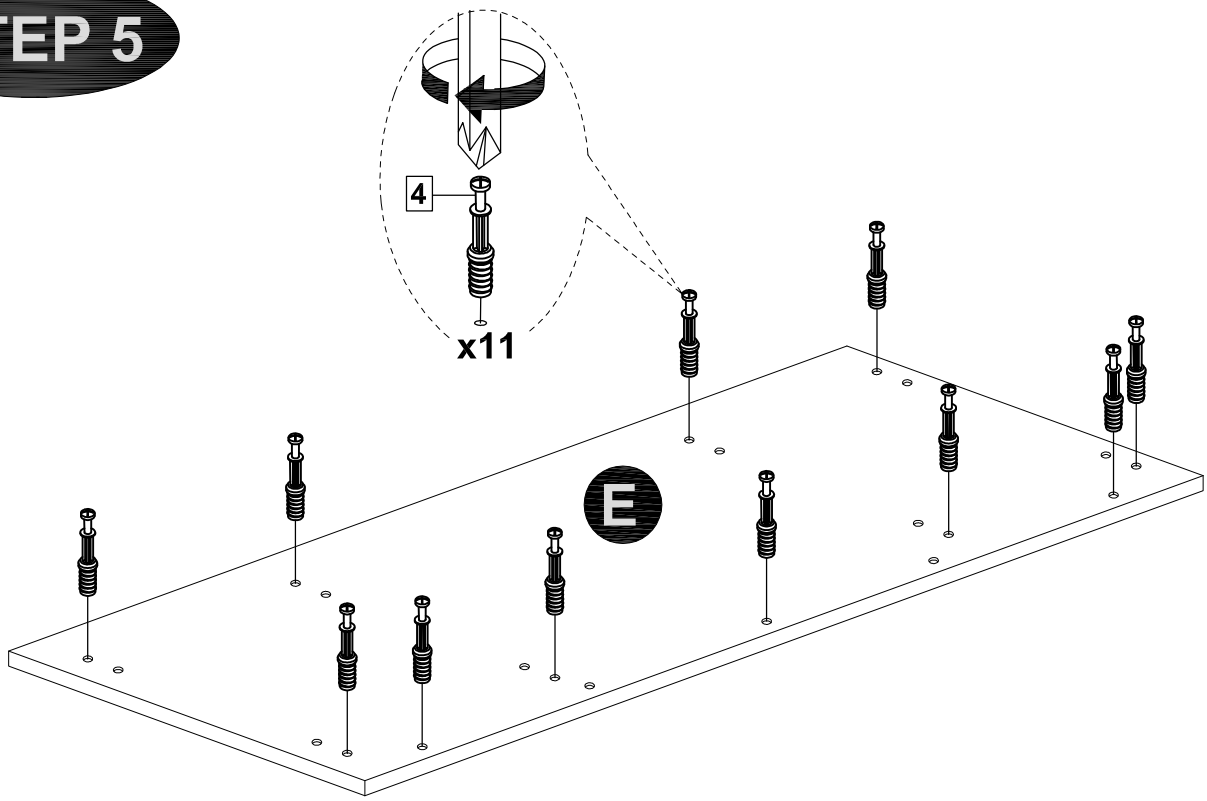

STEP 6

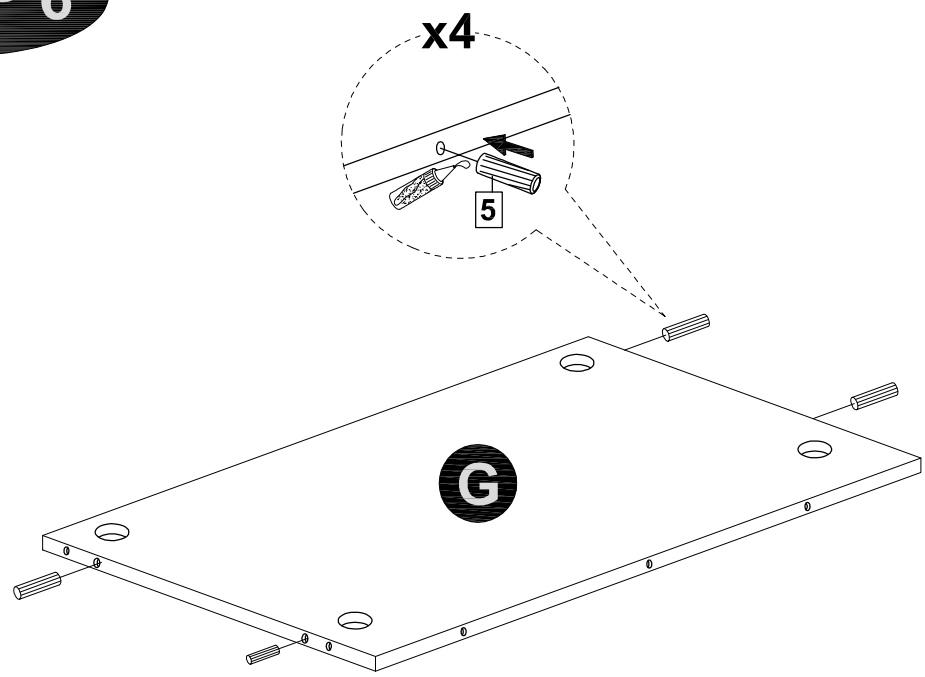

STEP 7

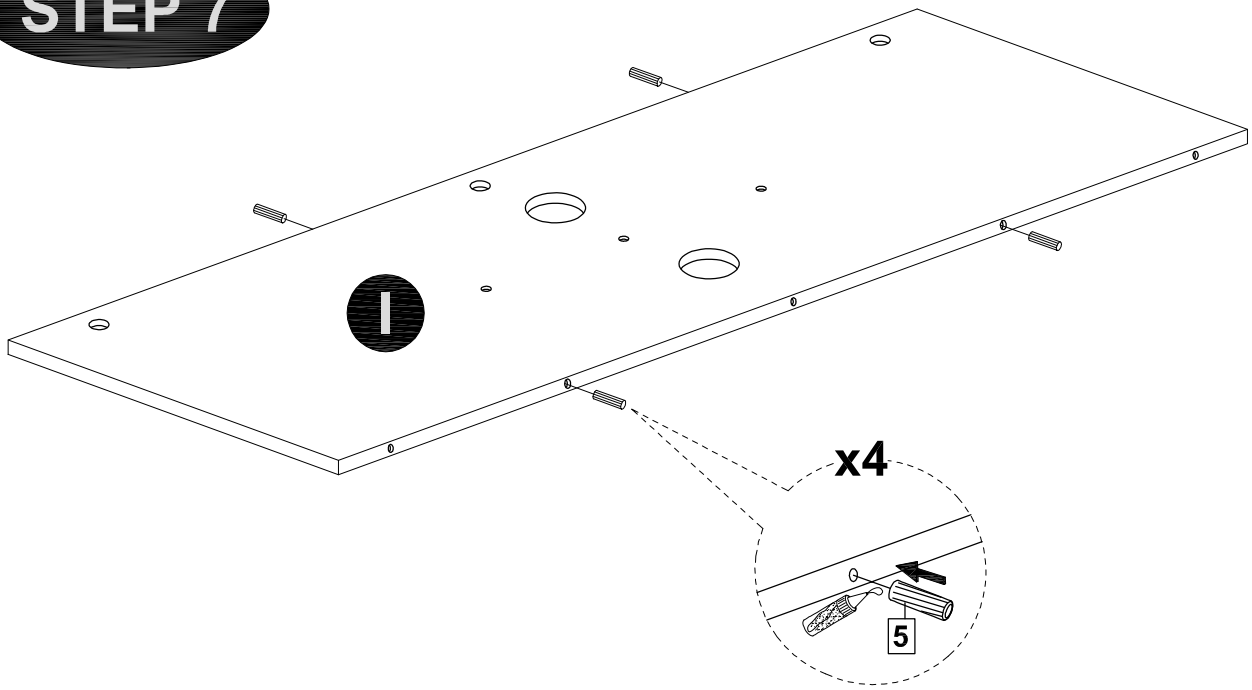

STEP 8

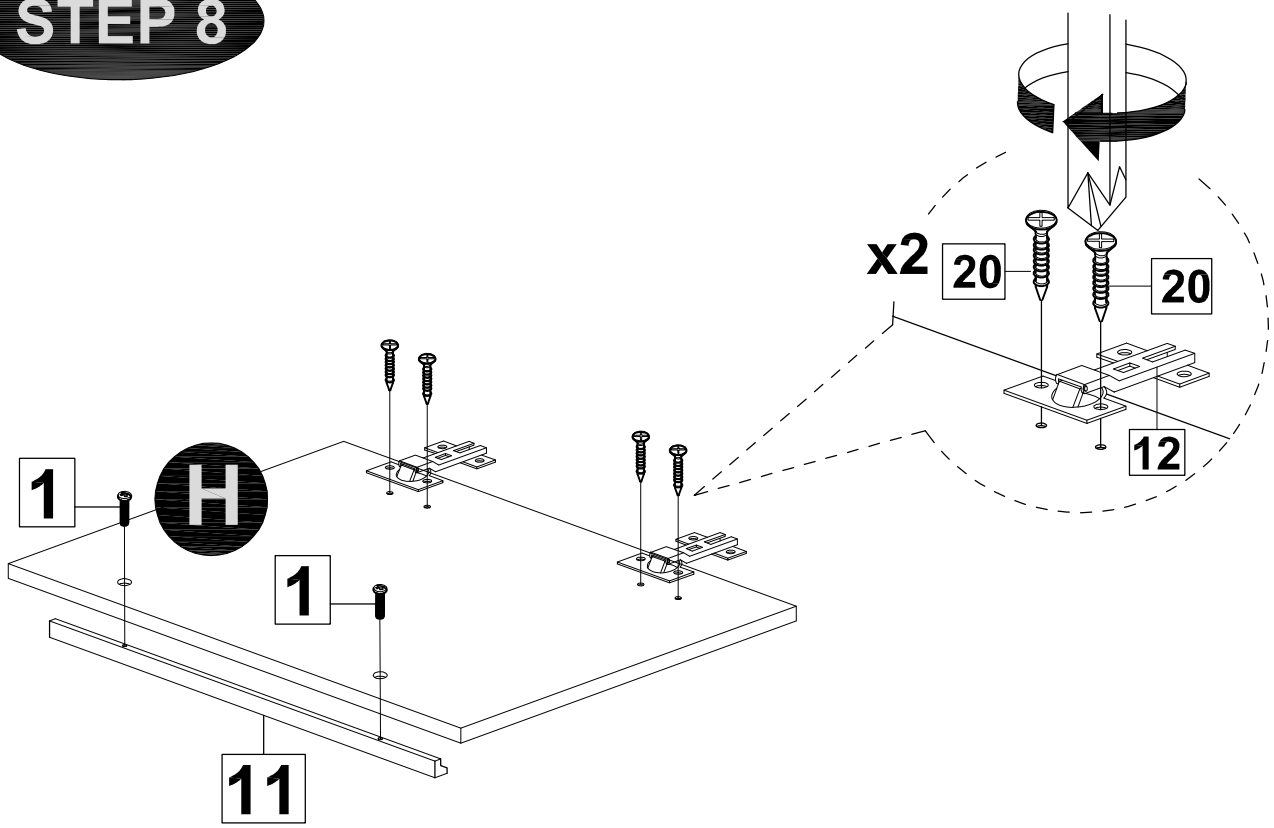

STEP 9

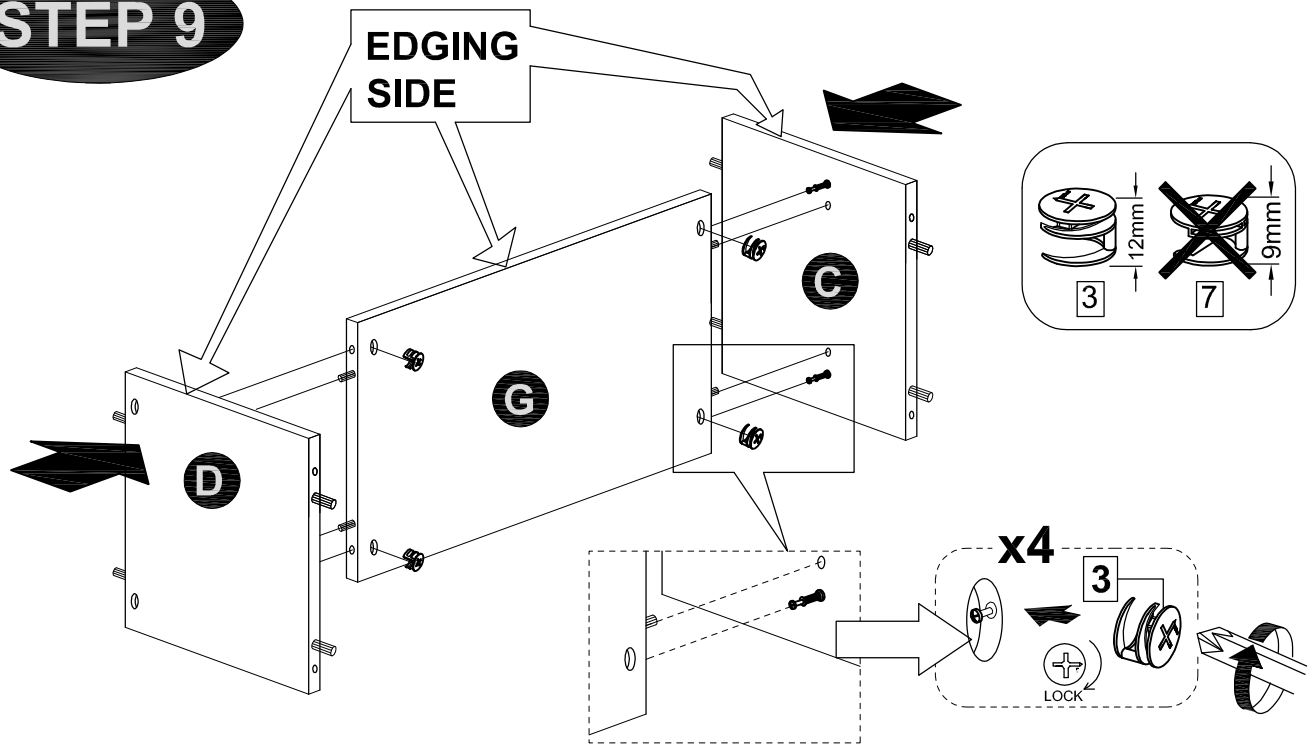

STEP 10

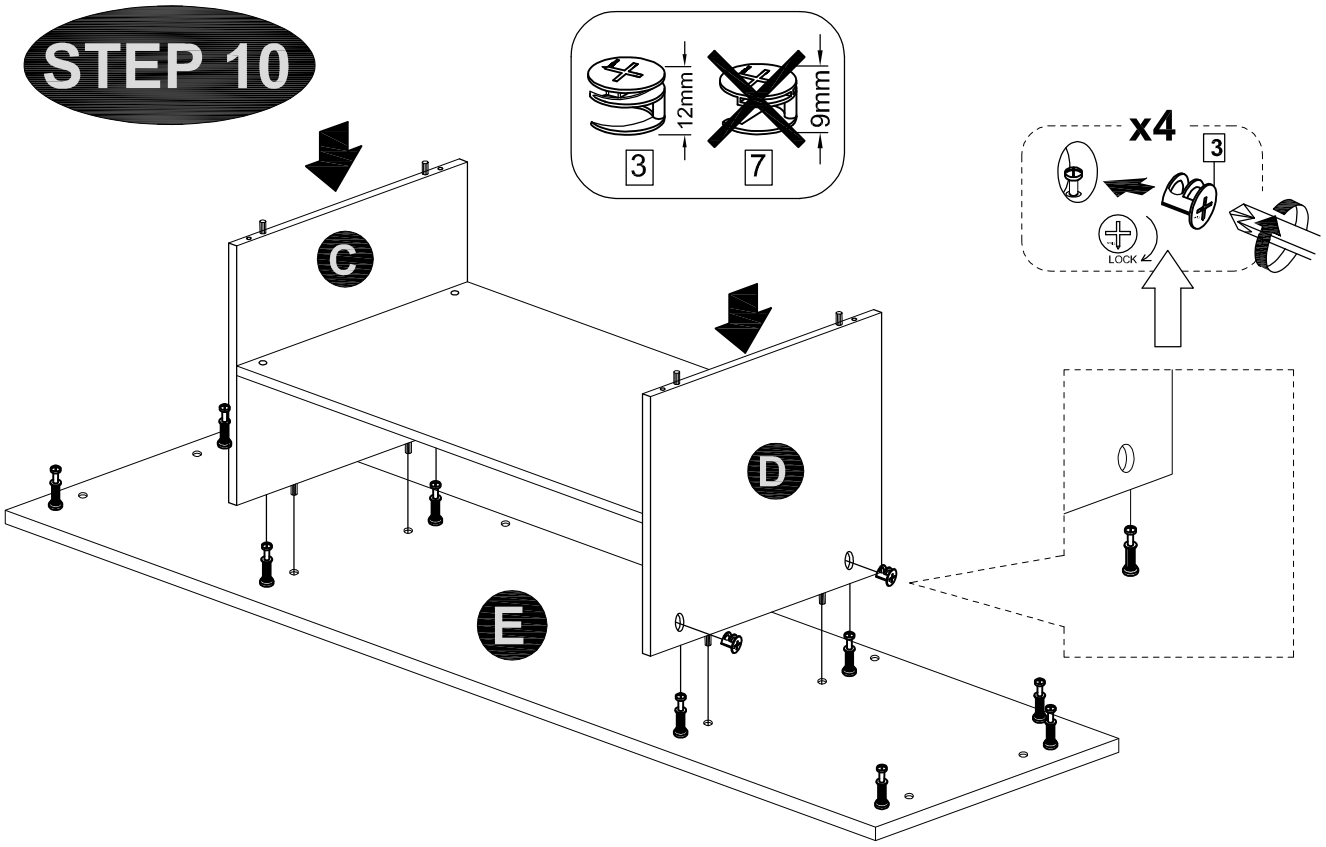

STEP 11

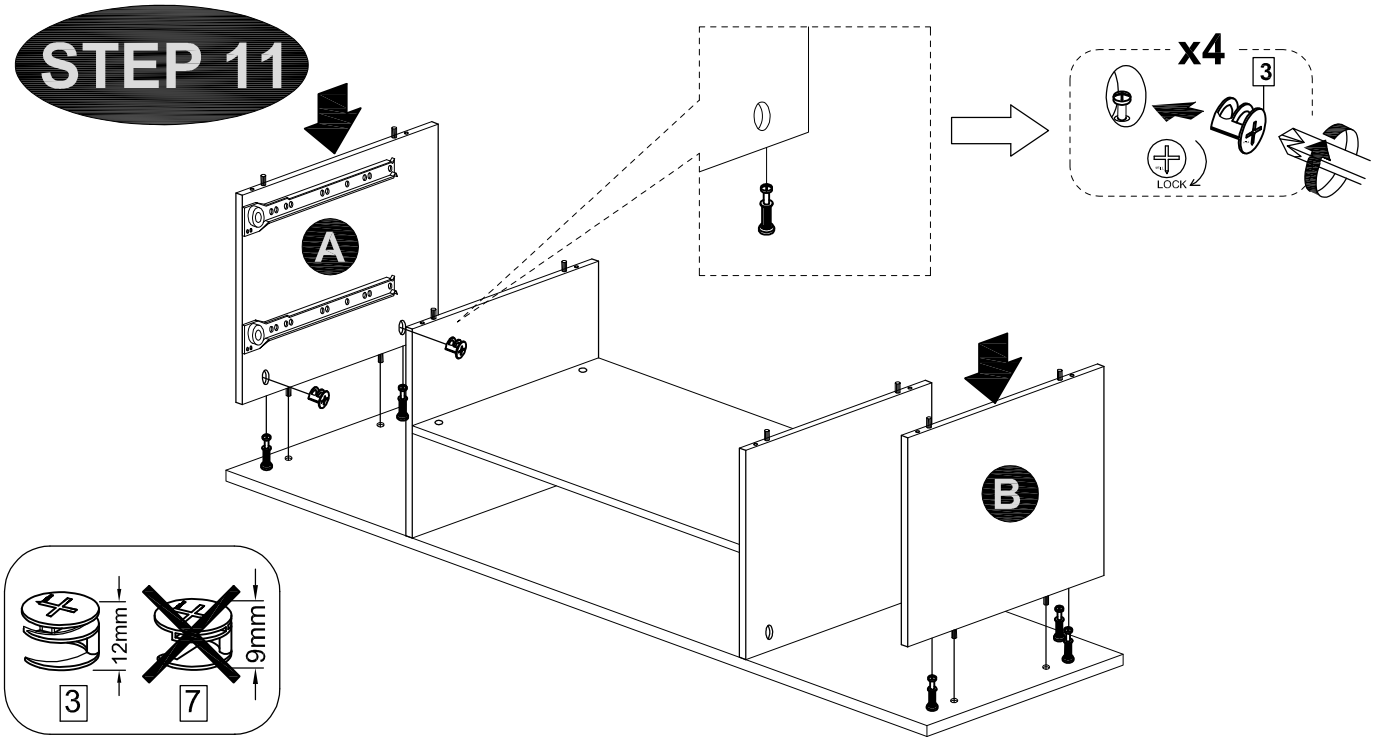

STEP 12

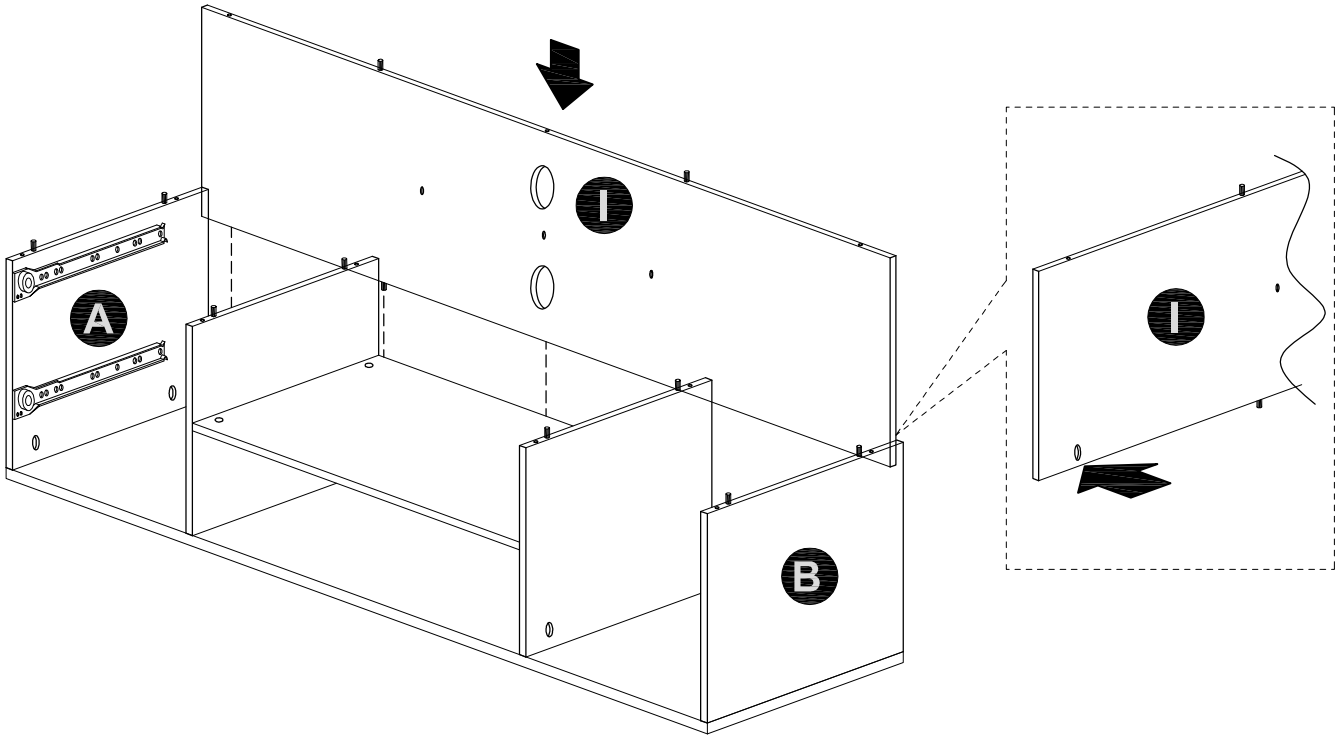

STEP 13

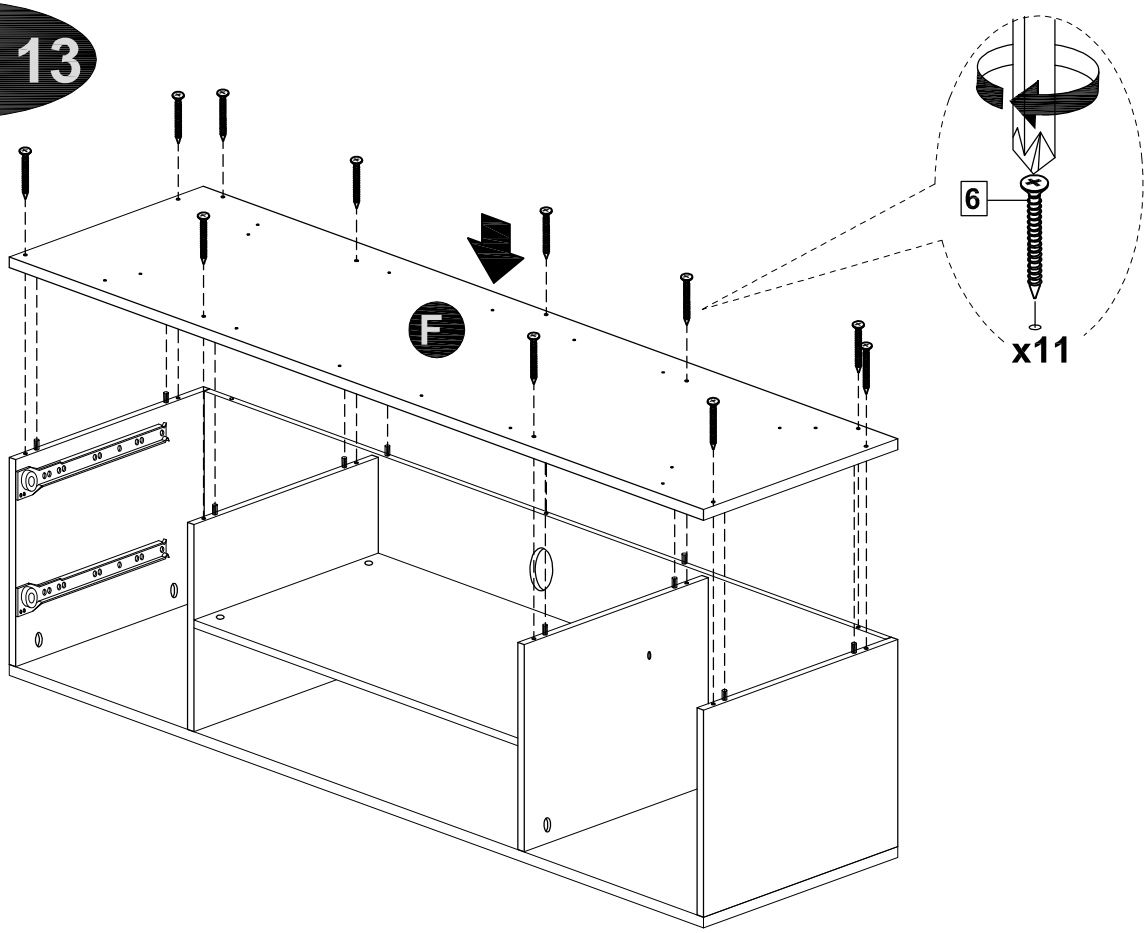

STEP 14

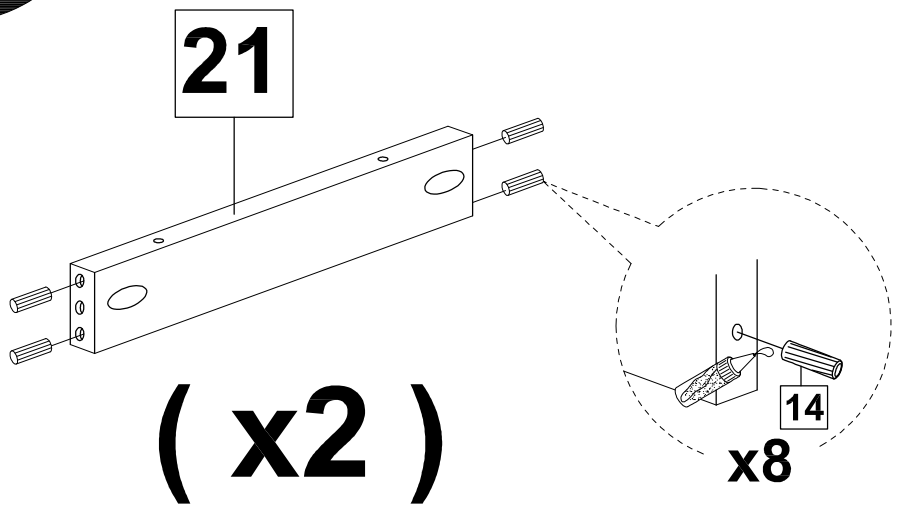

(x2)

STEP 15

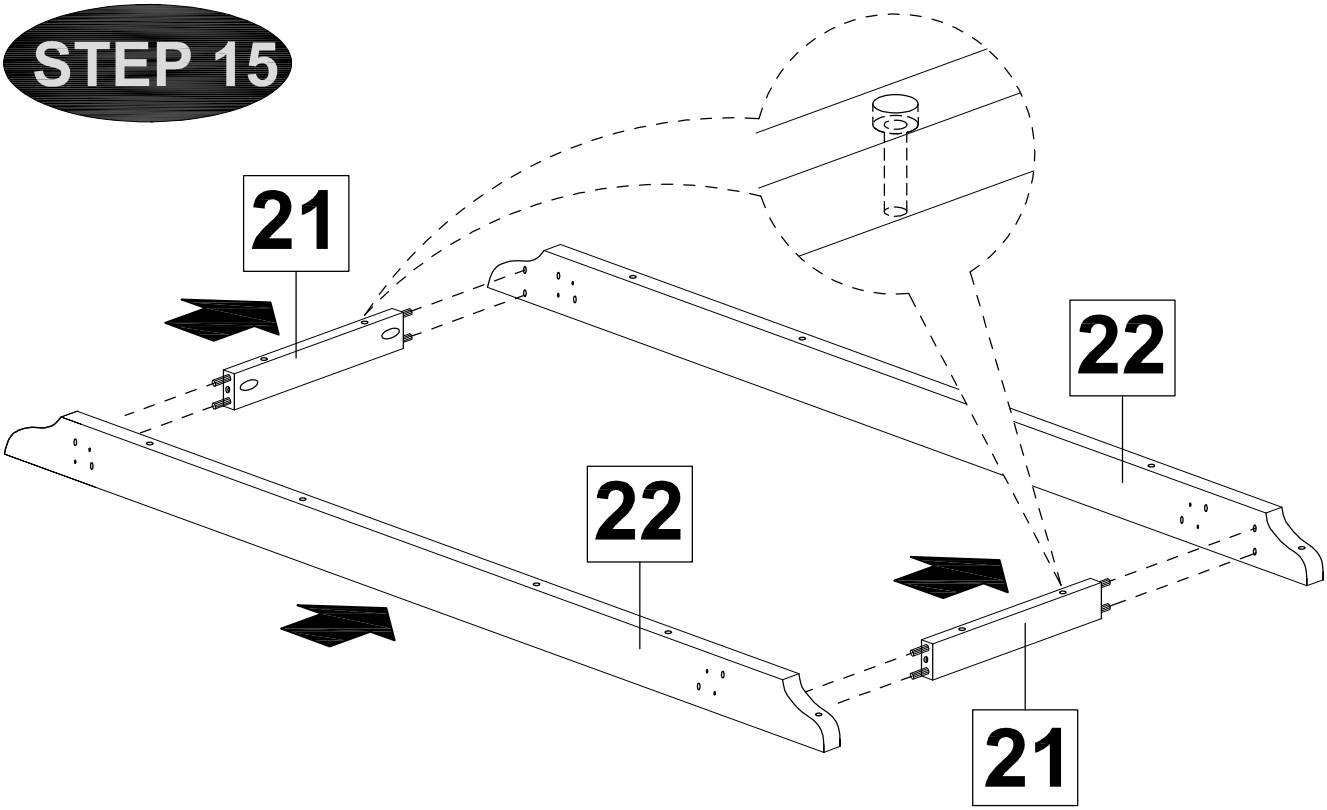

STEP 16

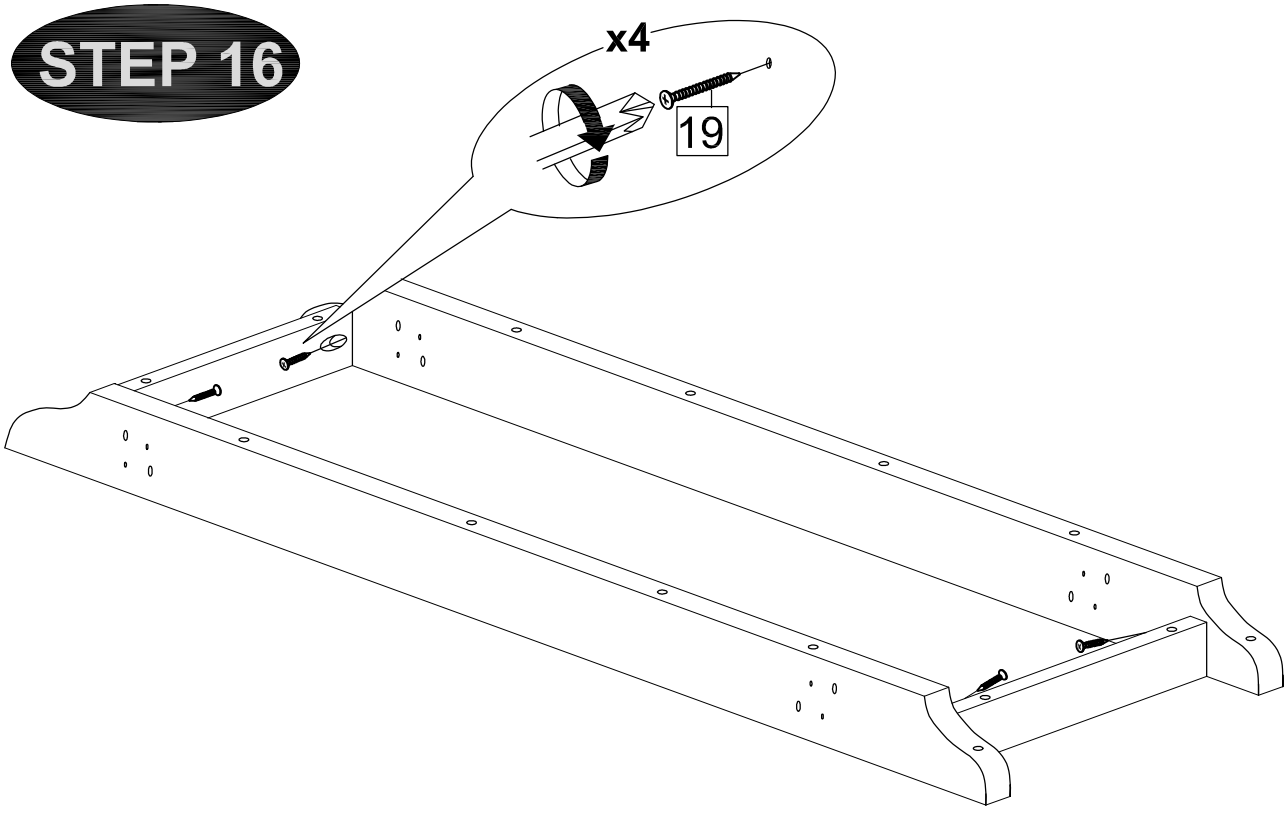

STEP 17

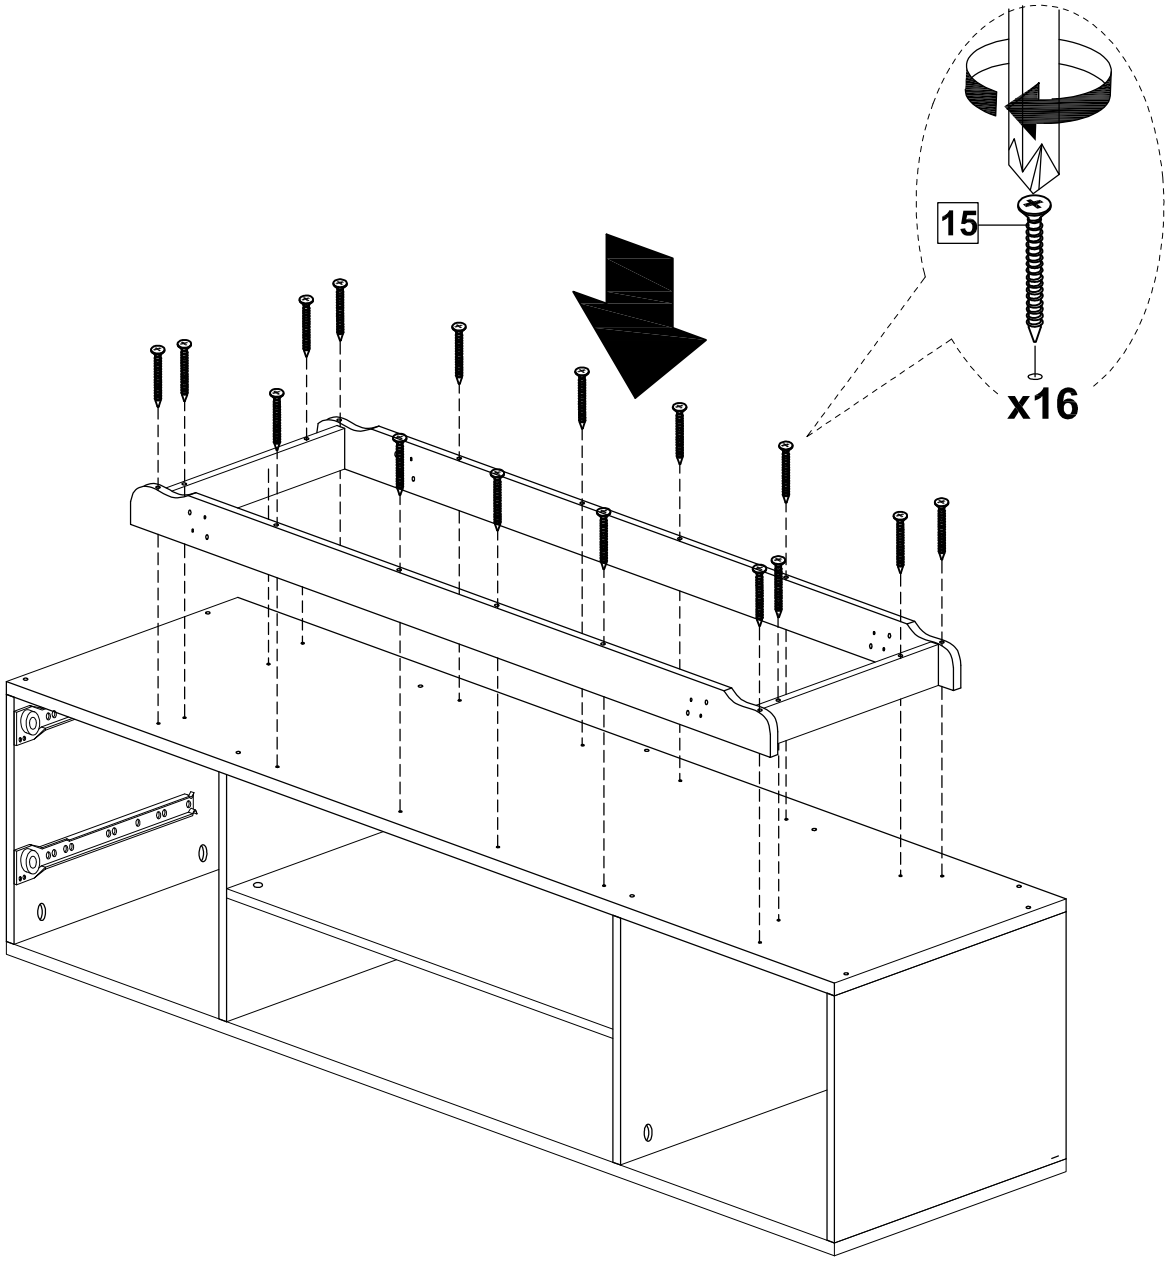

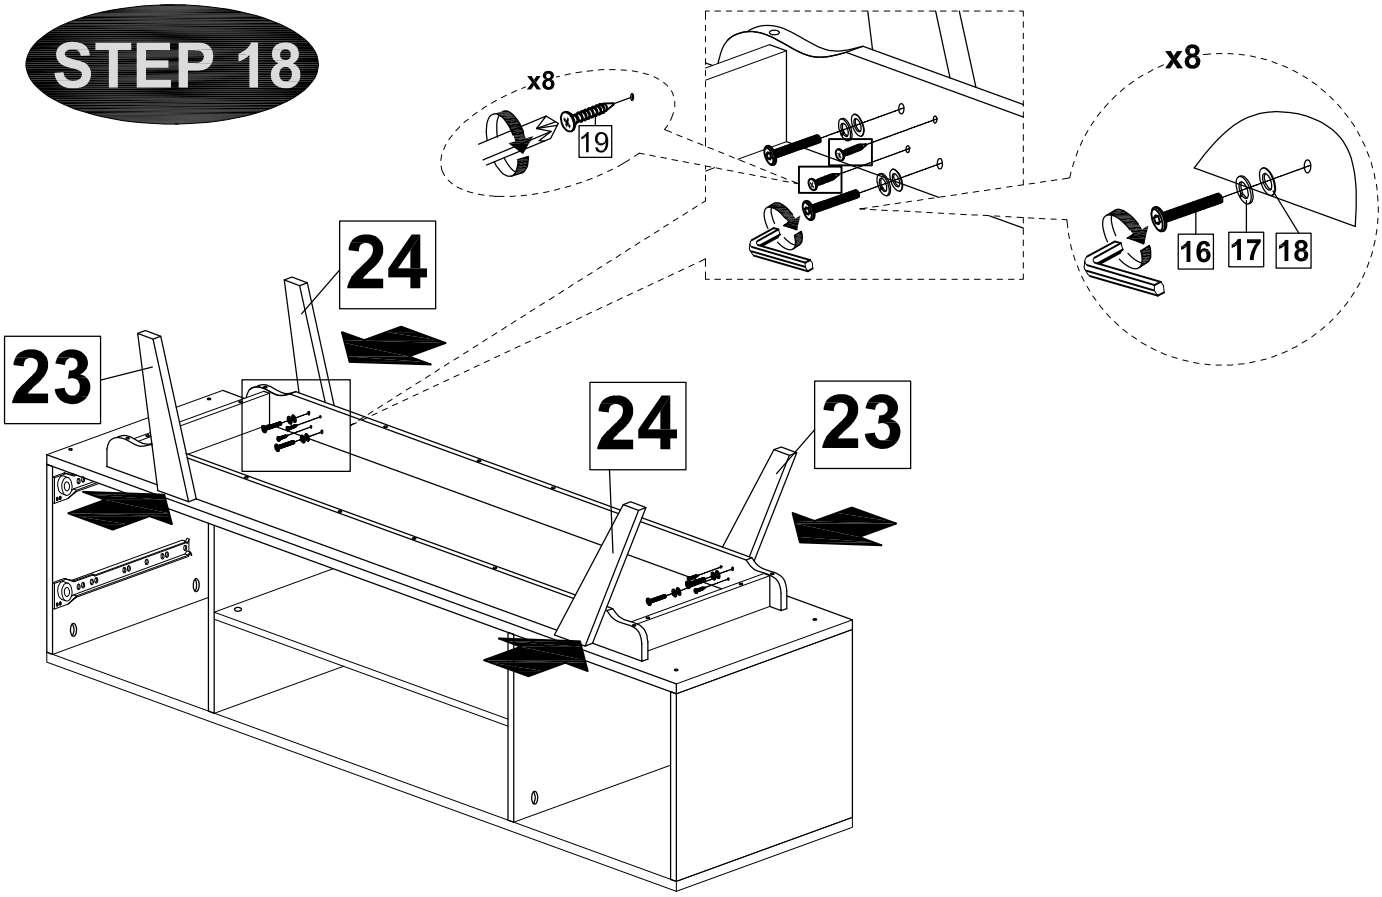
STEP 18
x8
19
x8
16
17
18
24
23
24
23

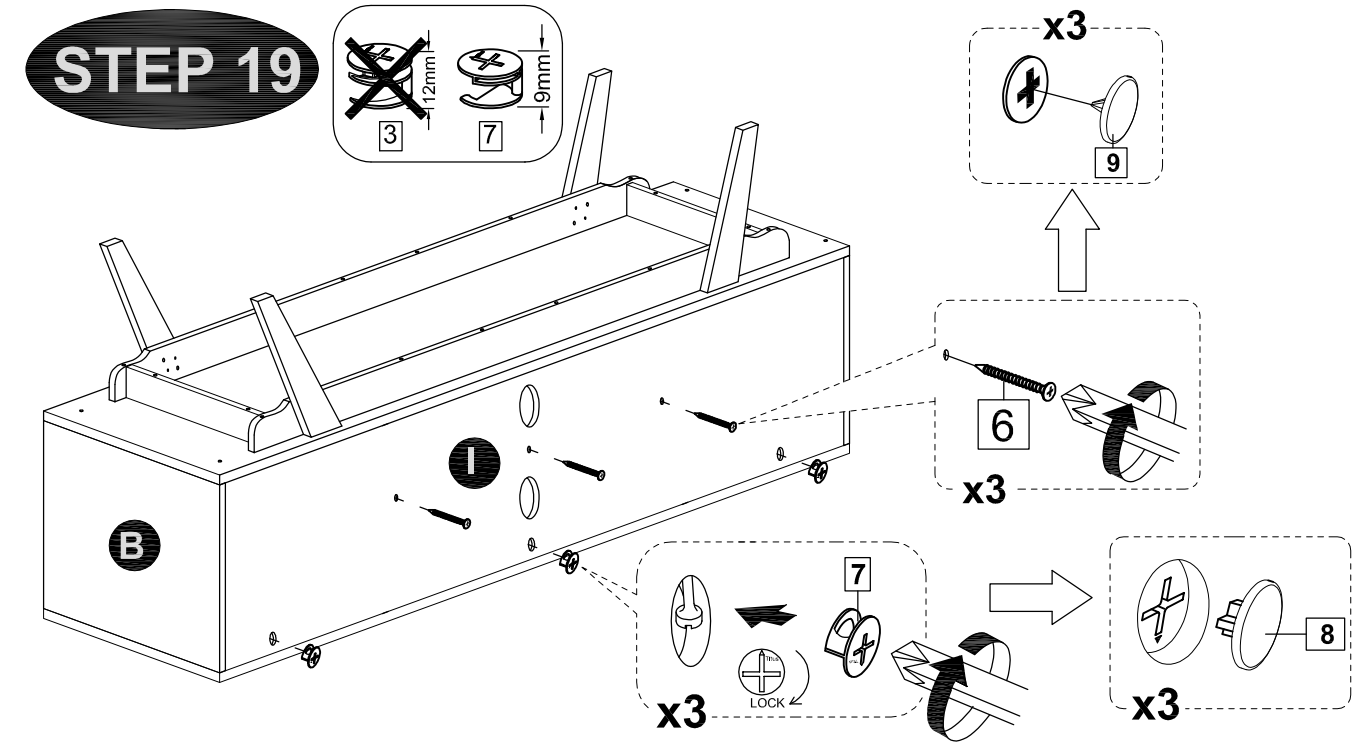
STEP 19
12mm
3
9mm
7
x3
9
6
x3
I
B
7
LOCK
x3
8
x3

STEP 20

Hinge Adjustment

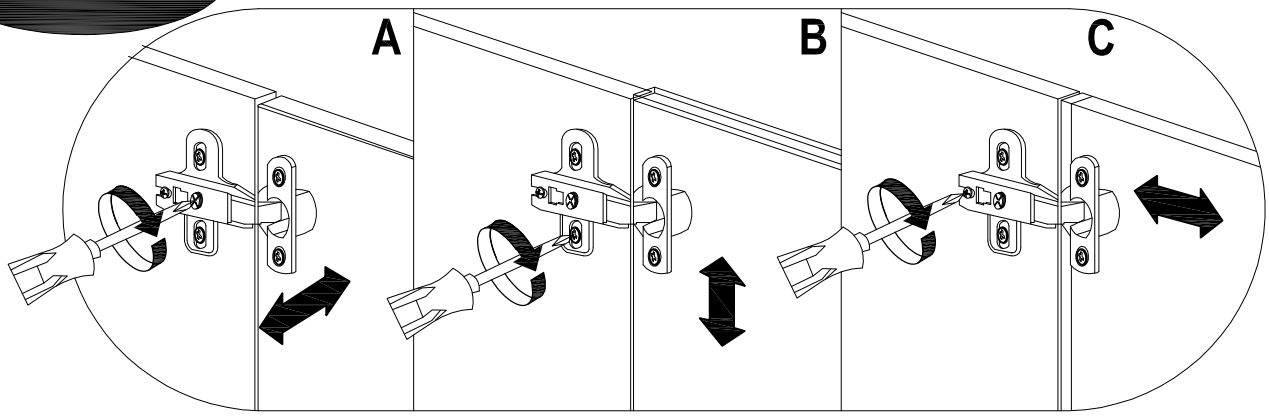

A.Lateral adjustment by screw adjusting

B.Vertical adjustment via slot in the mounting plate

C.Front-to-Back by slacking the hinge arm mounting screw

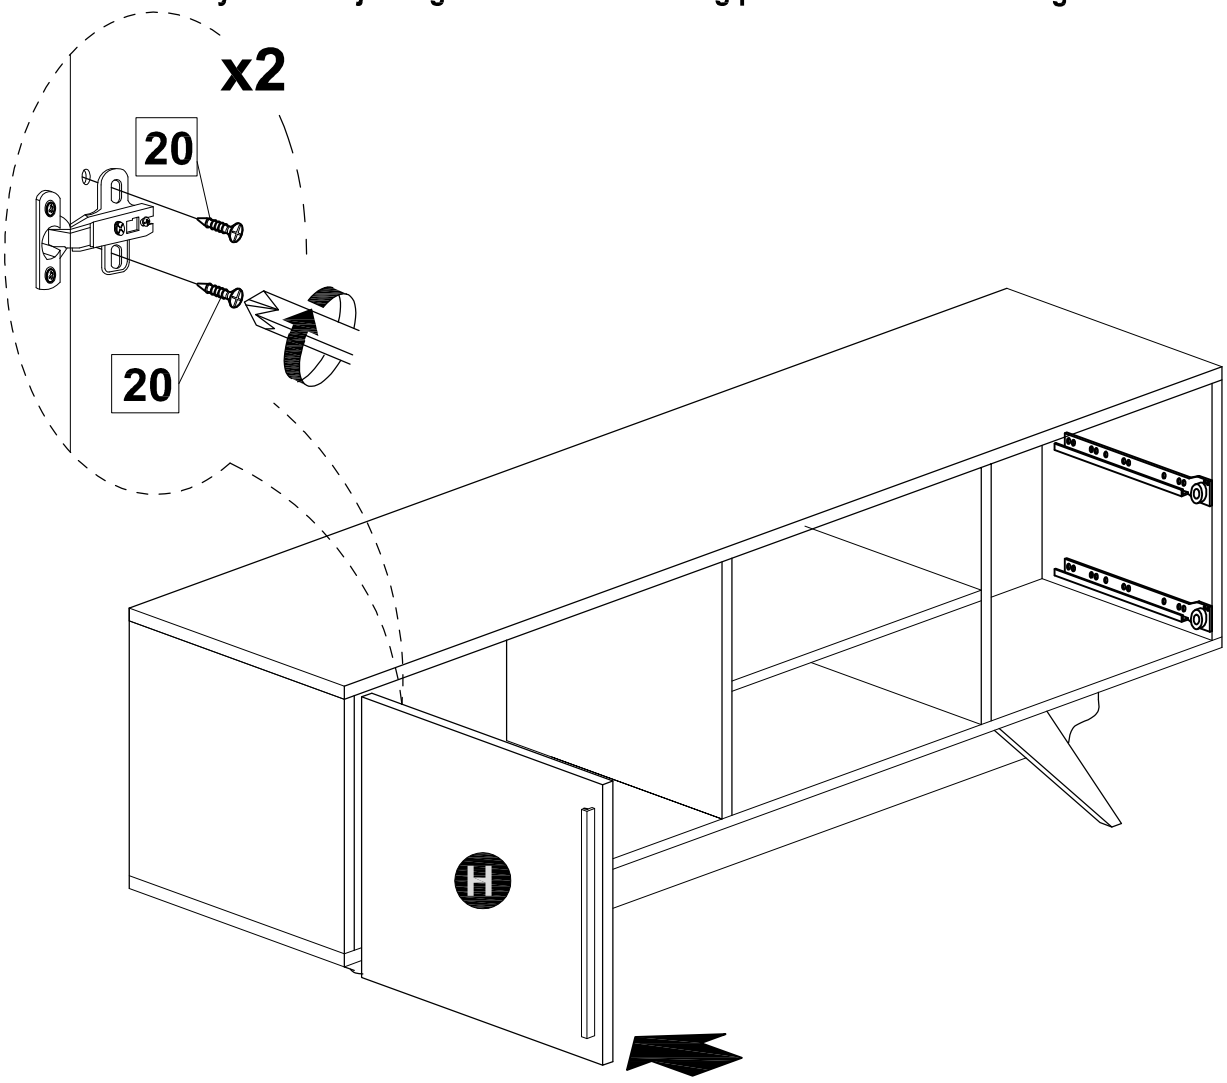

STEP 21

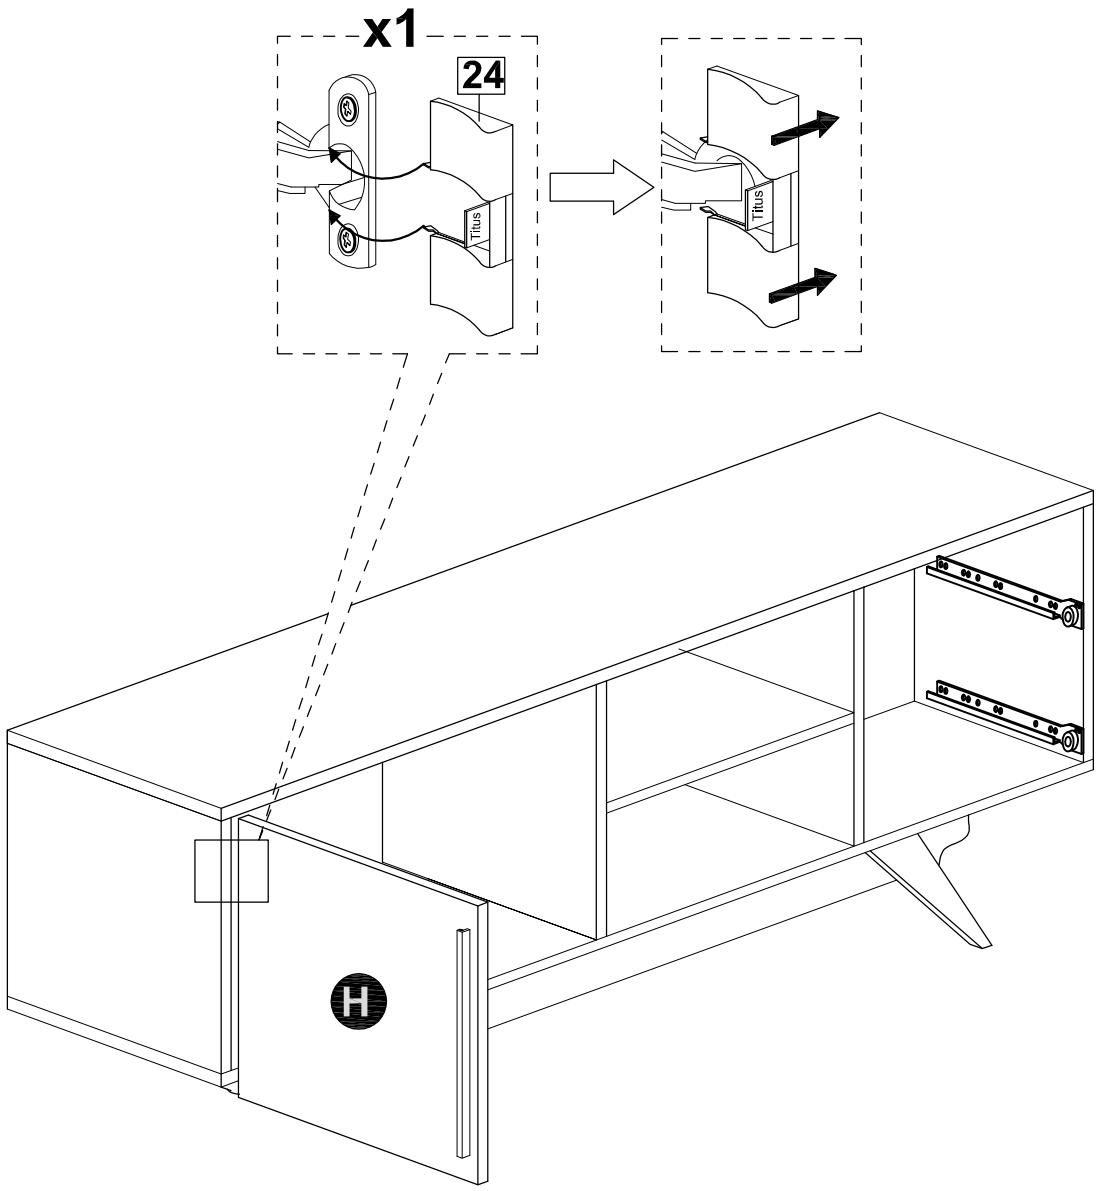

STEP 22

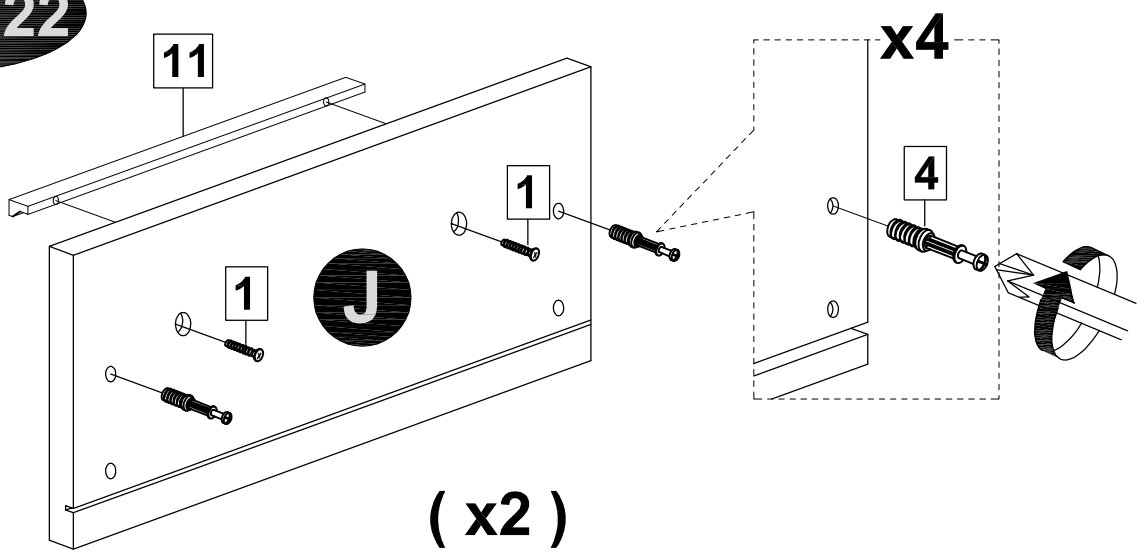

(x2)

STEP 23

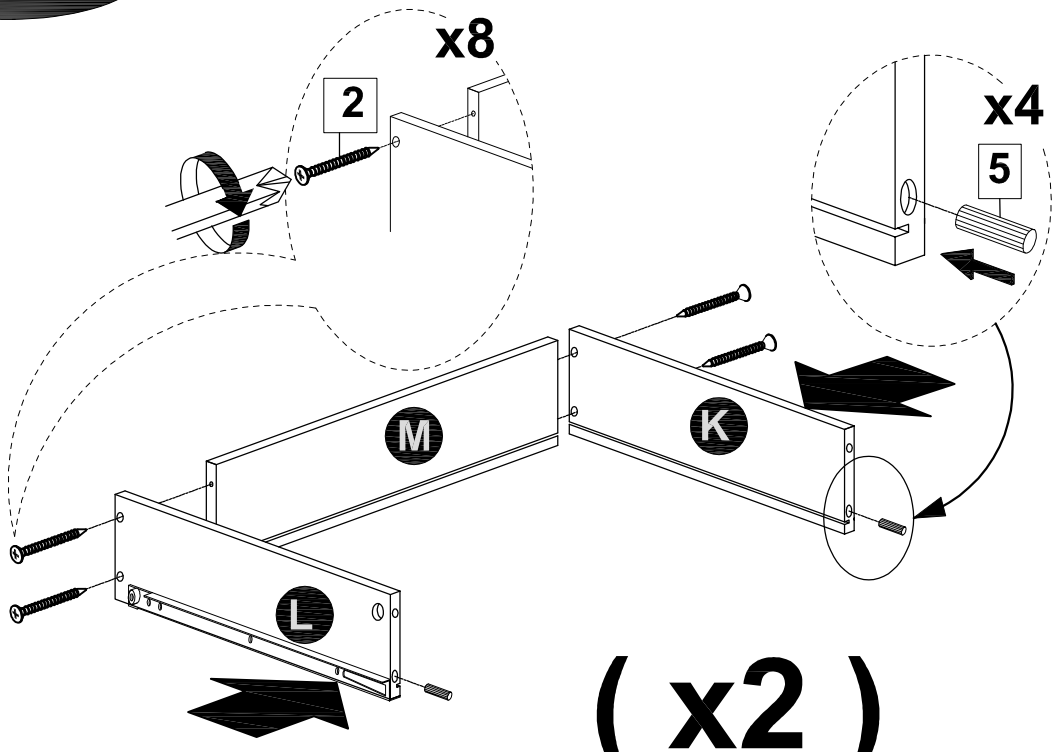

(x2)

STEP 24

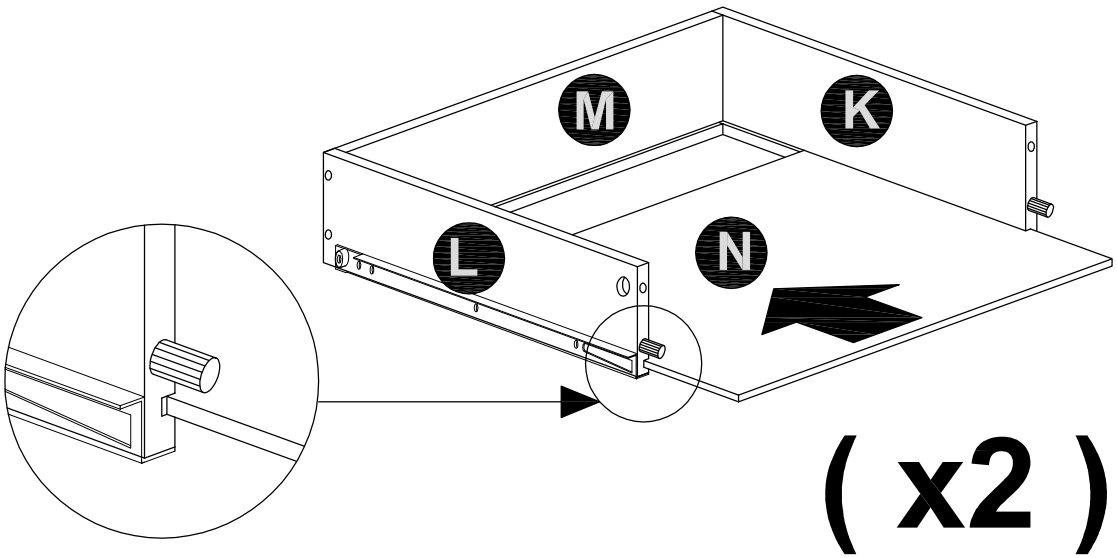

(x2)

STEP 25

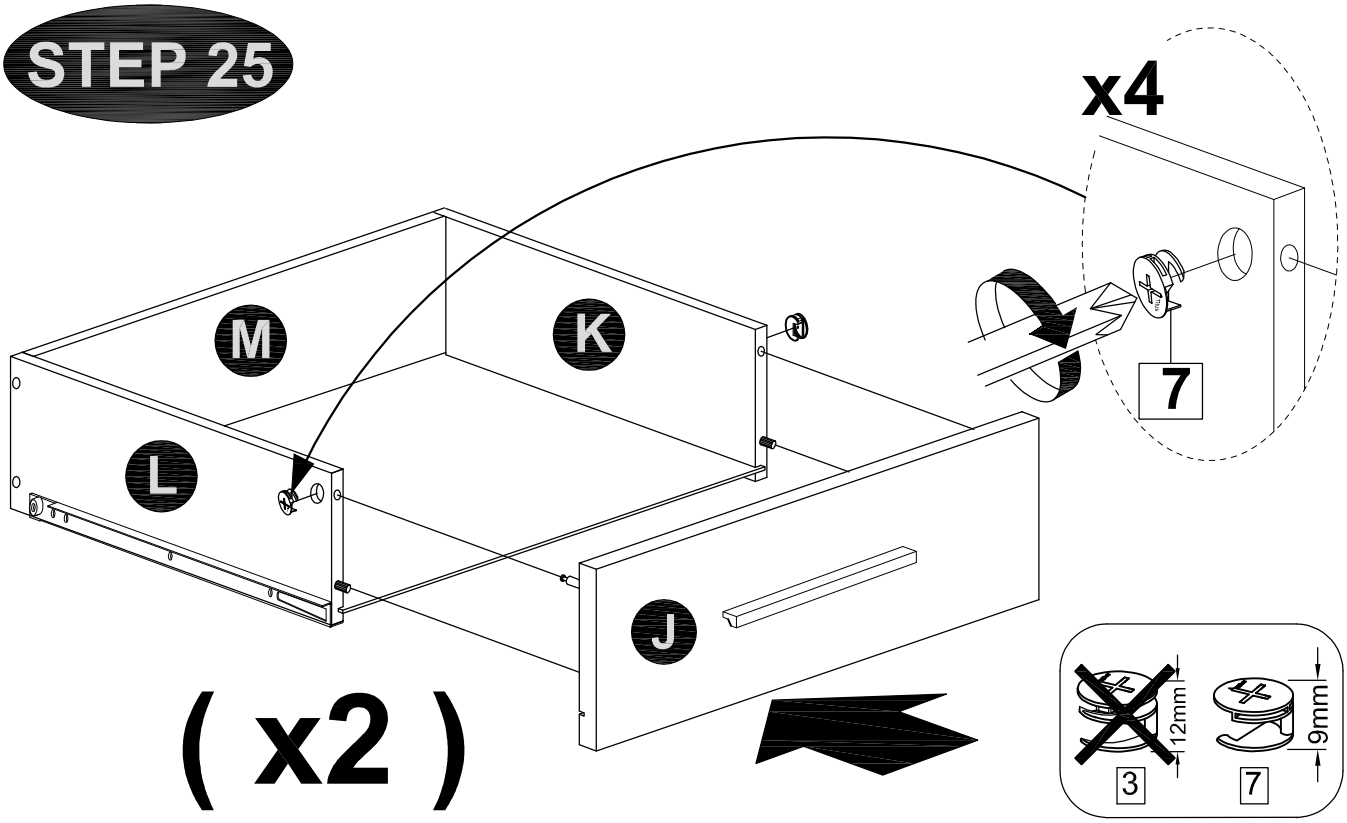

(x2)

STEP 26

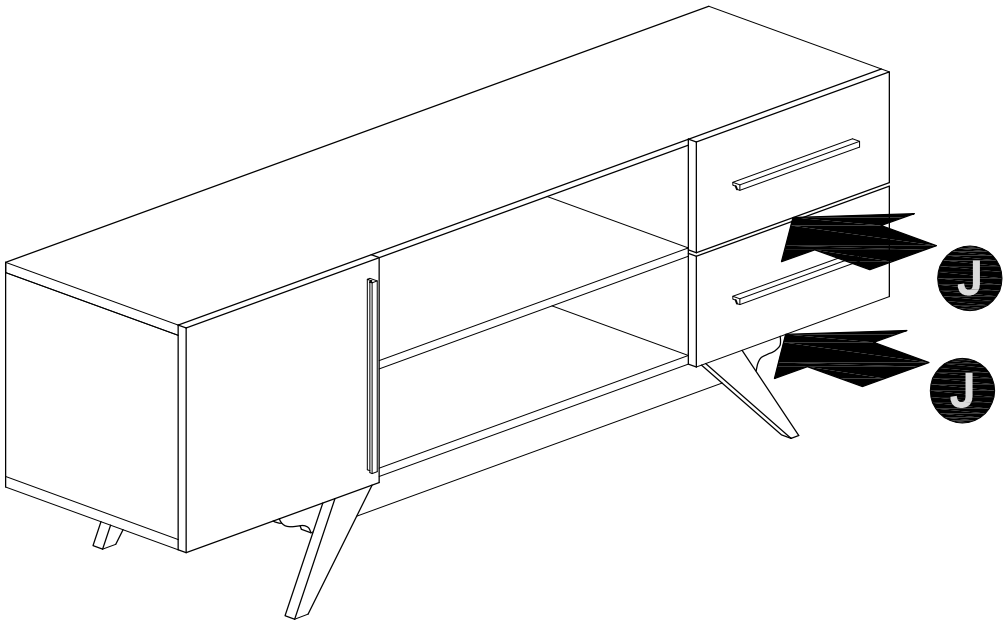

STEP 27

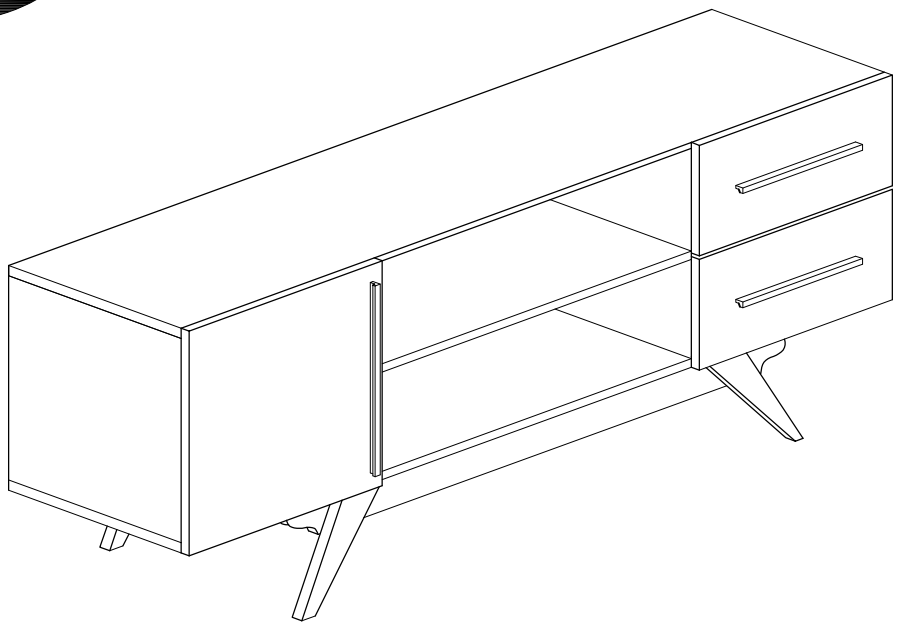

SAFETY WARNING :

It is recommended that you fit the anti-tip bracket to this item to avoid tipping and causing injury.

FITTING OF ANTI-TIP BRACKET

STEP 1 :
Insert screws through bracket into pre-drilled holes in cabinet.

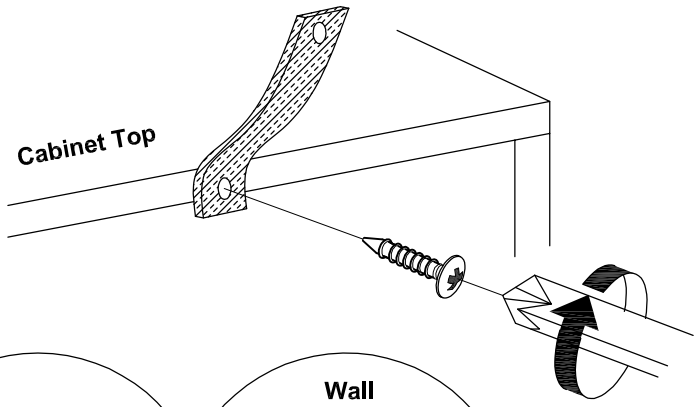

STEP 2 :
Make a mark on the wall through the bracket.

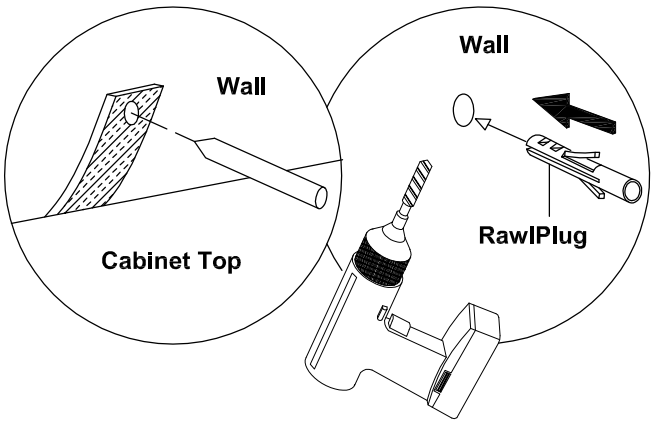

Drill a hole in the wall and insert the rawlplug.

STEP 3 :
Insert screw through bracket into hole in wall

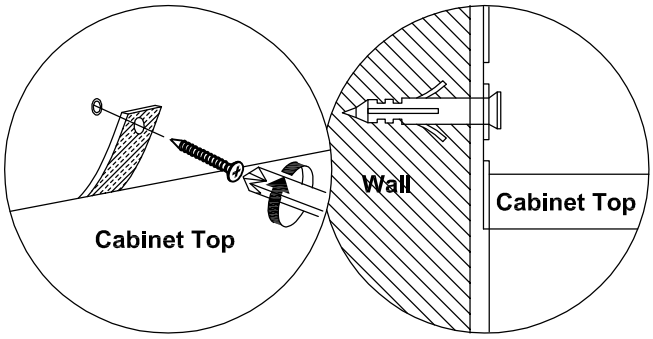

NOTE : Wall fixings are not supplied with this product as different wall materials require different types of fixing devices (such as Rawl plugs on brick work). You must use fixing devices suitable for the type of wall you intend to mount this product to.Please ensure that the head of any screw used has a diameter greater that the diameter of the mounting hole on the bracket and that the fixing is safe and secure before use.

The screw supplied is to fix the anti-tip strap to the cabinet.

HARDWARE LIST

Anti-Tip Strap - 2pcs

M4 x 16MM - 2pcs