
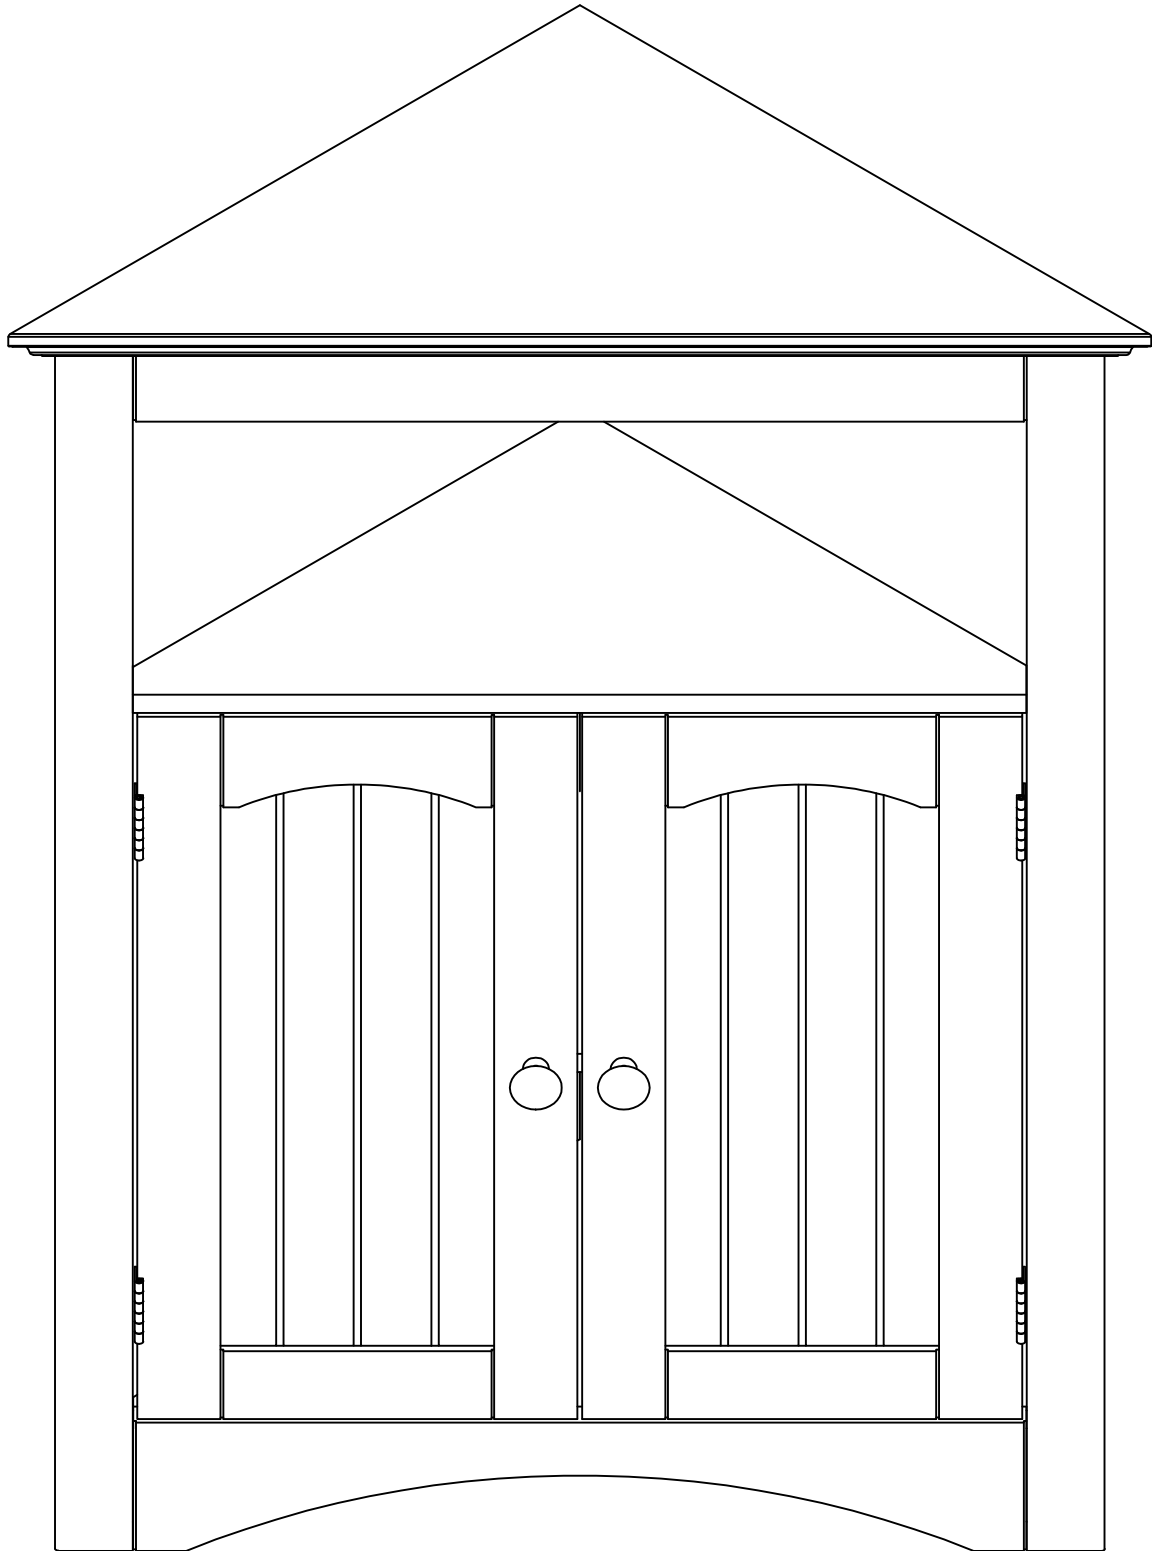


Installation & Assembly

















PACKAGE CONTENTS

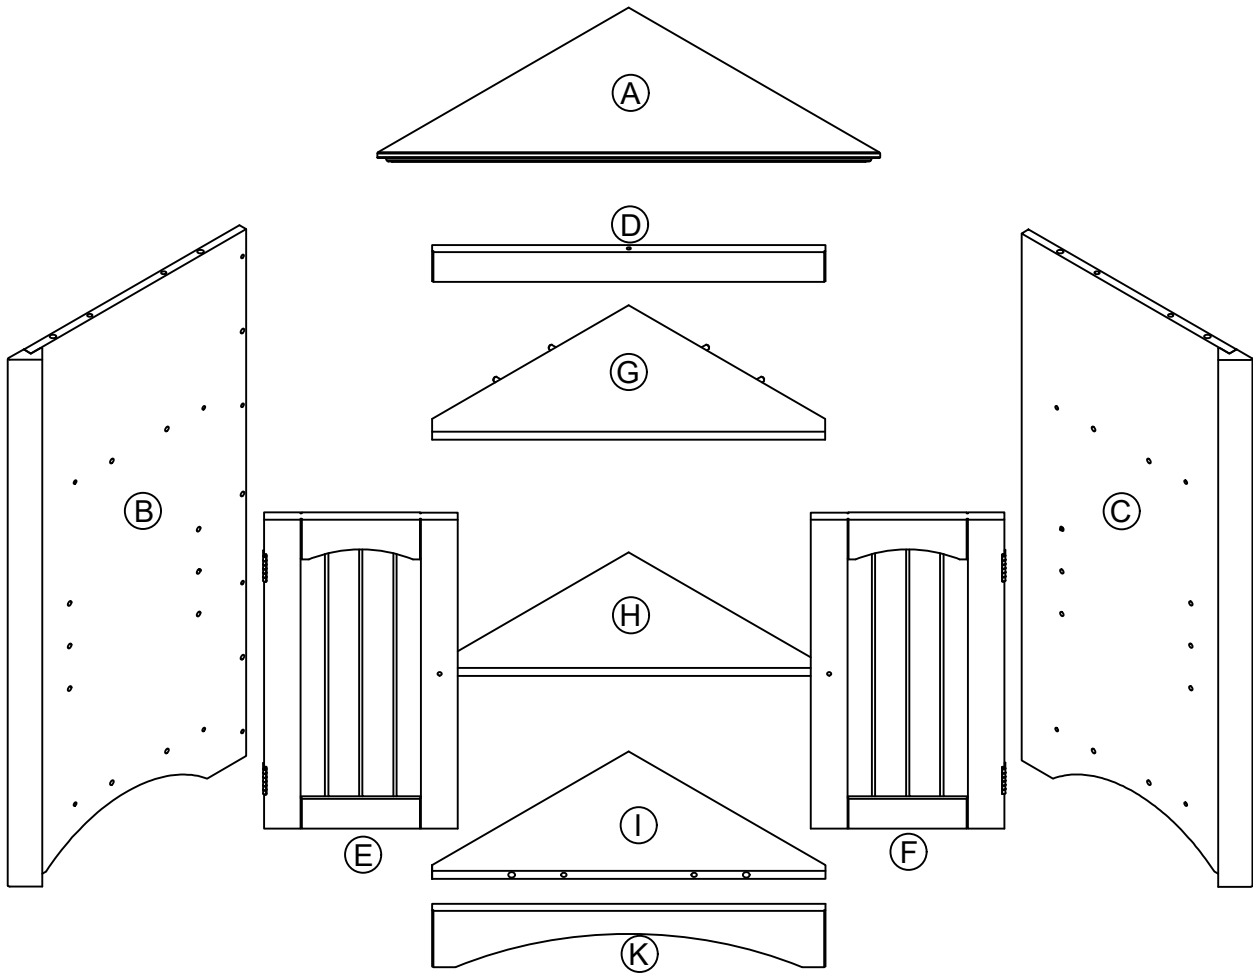


PART	DESCRIPTION	QTY		PART	DESCRIPTION	QTY
A	Top Panel	X1		F	Right Door	X1
B	Left Side Board	X1		G	Upper Shelf	X1
C	Right Side Board	X1		H	Shelf	X1
D	Front Bar	X1		I	Base Panel	X1
E	Left Door	X1		K	Base Panel Front Rail	X1

HARDWARE CONTENTS




1	2	3	4
 Ø6*33mm 18PCS	 Ø15*9mm 18PCS	 Ø6*30mm 21PCS	 2PCS
5	6	7	8
 5/32"*19mm 2PCS	 4PCS	 Ø3*10mm 4PCS	 Ø4*38mm 4PCS
9	10	11	12
 Ø3*12mm 8PCS	 1PC	 Ø4*20mm 1PC	 1PC
13	14		
 1PC	 2PCS		

STEP1


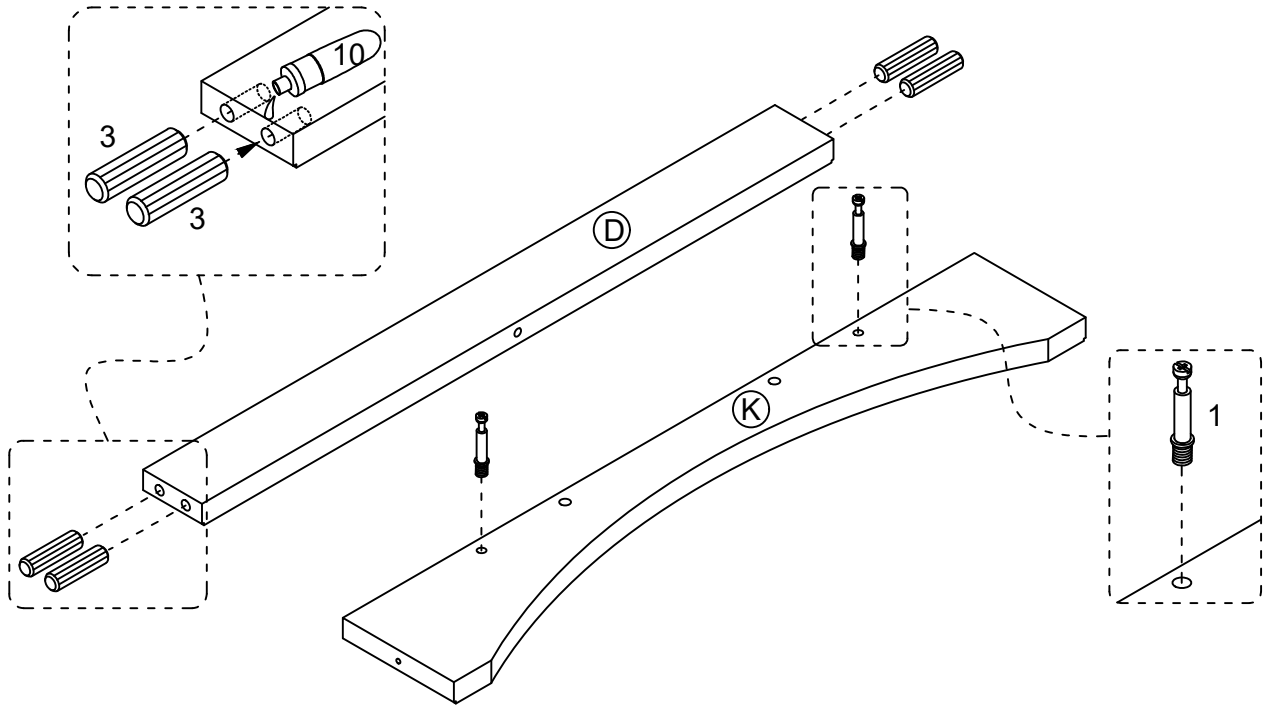


Glue the wood dowels 3 into the inner holes on the side panels D.

NOTE: It is very important to use a small amount of glue 10 on ends of dowels and wipe away excess glue immediately.



	1 x 2pcs
	3 x 4pcs
	10 x 1pc

STEP2



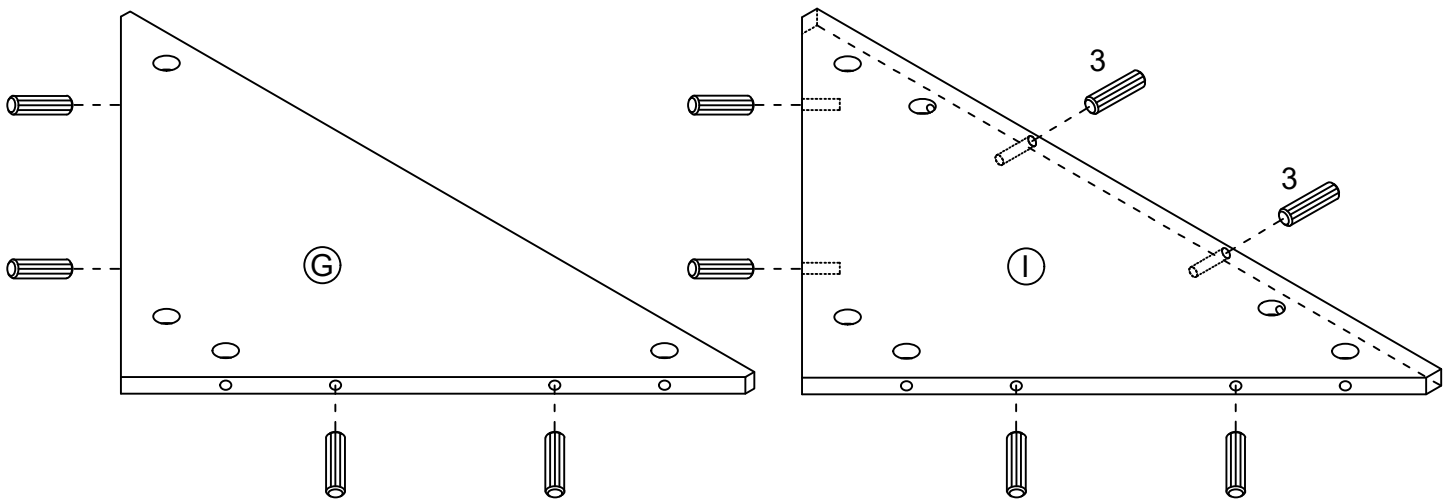
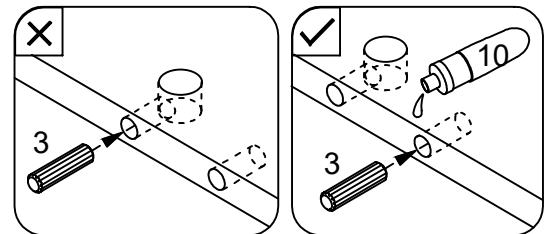



Glue the wood dowels 3 into the inner holes on the front upper rail G and I .

NOTE: It is very important to use a small amount of glue 10 on ends of dowels and wipe away excess glue immediately.




	3 x 10pcs
	10 x 1pc

STEP3

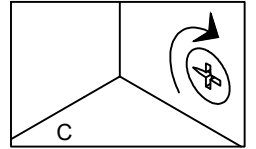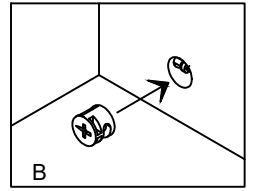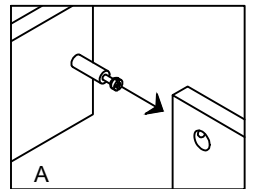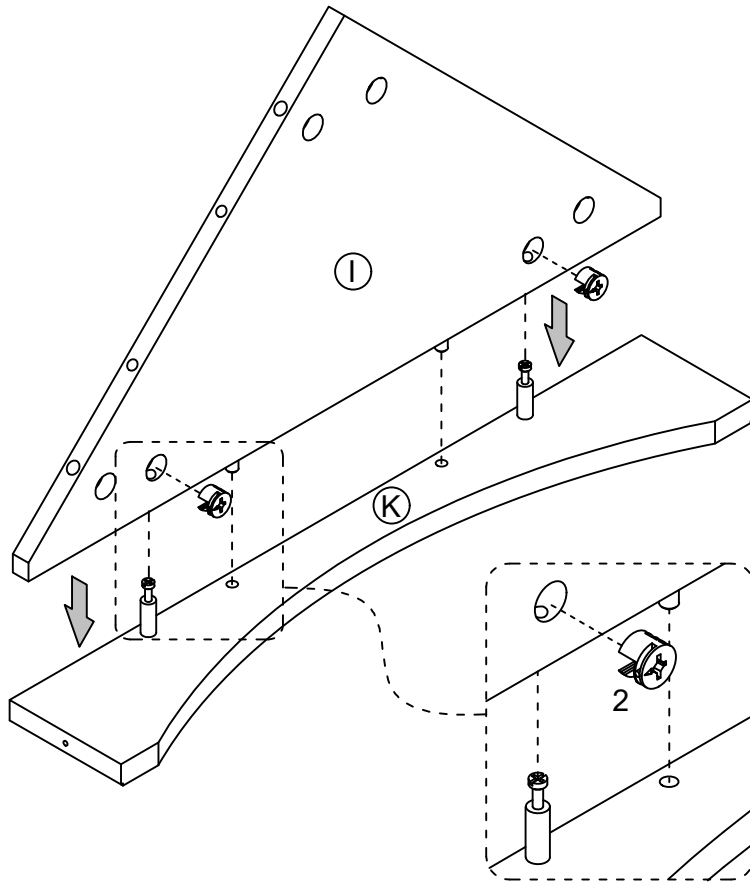




	2 x 2pcs
---	----------


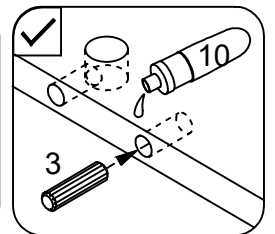
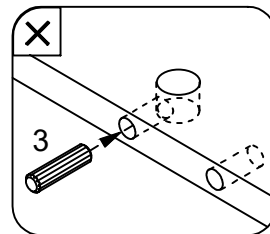
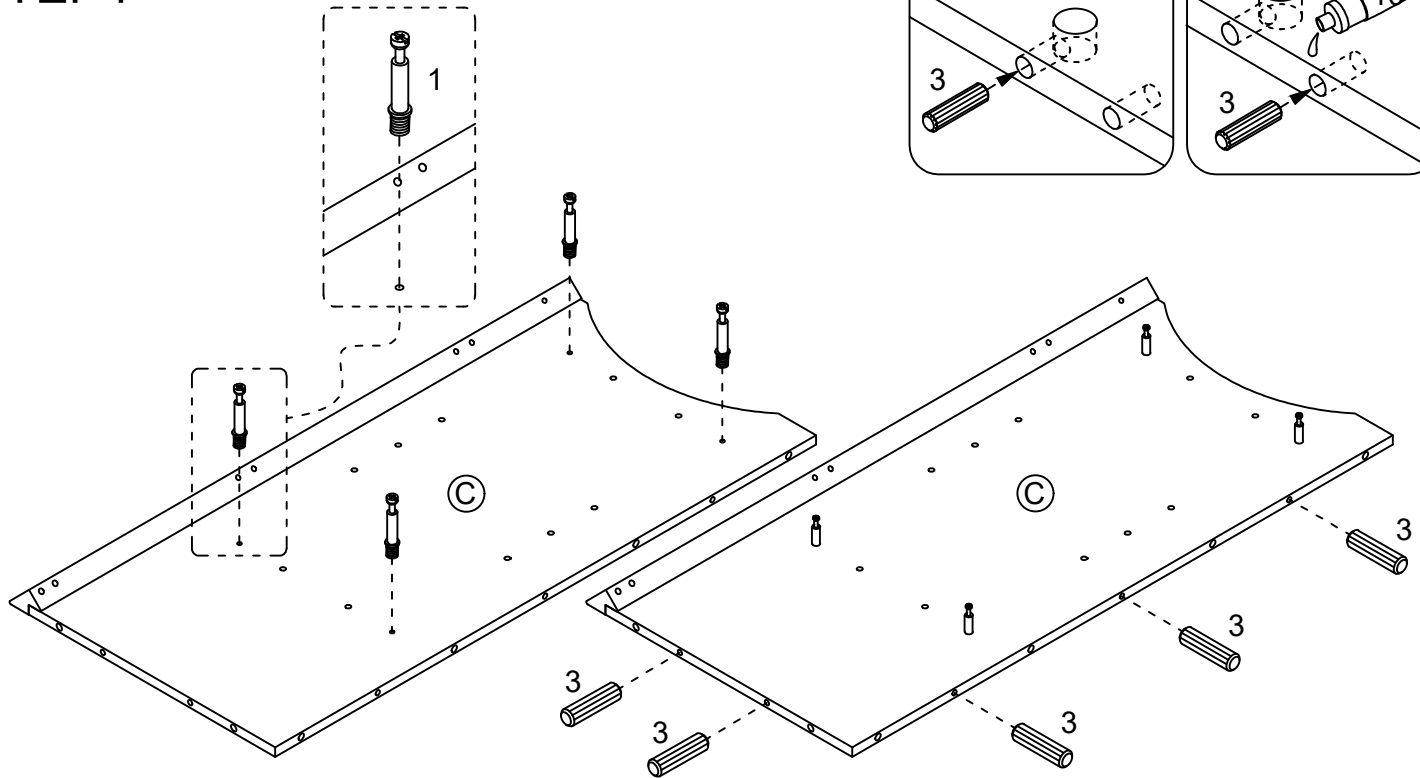
STEP4




Glue the wood dowels 3 into the inner holes on the side panels C.
 NOTE: It is very important to use a small amount of glue 10 on ends of dowels and wipe away excess glue immediately.




	1 x 4pcs
	3 x 5pcs
	10 x 1pc

STEP5

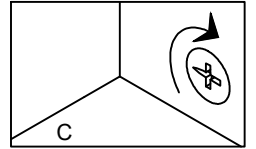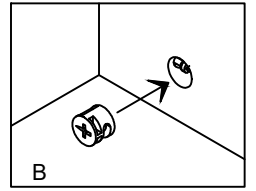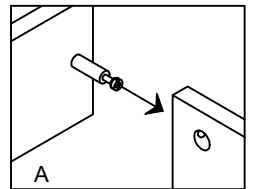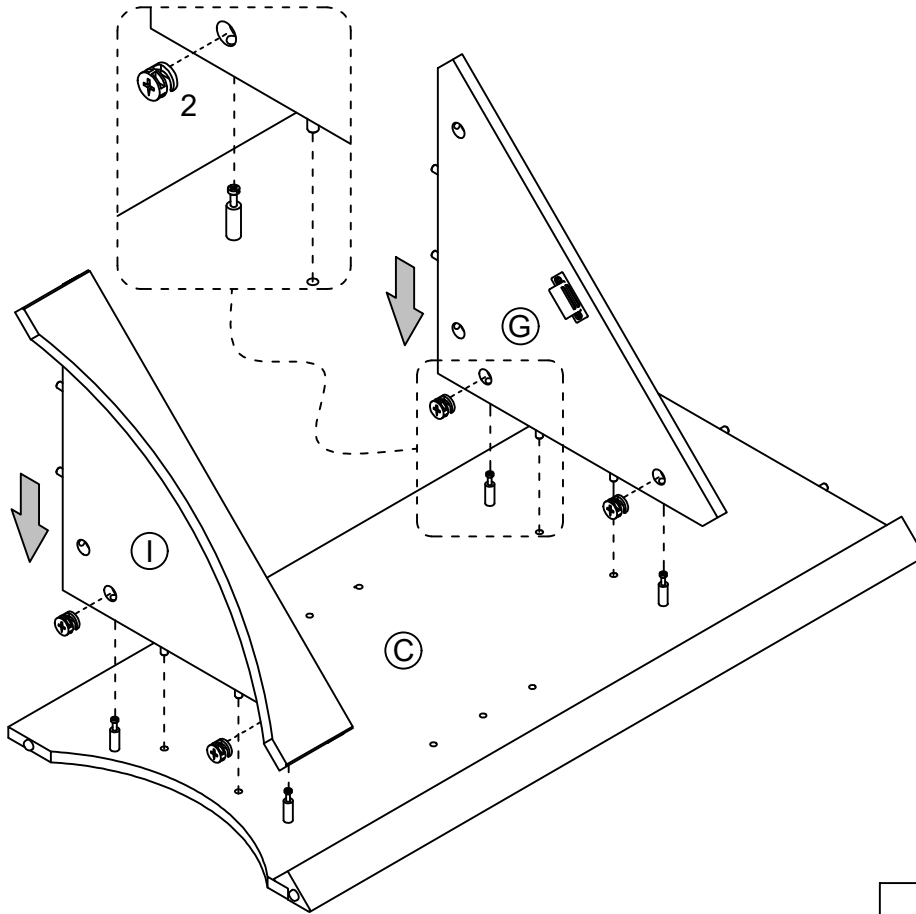




	2 x 4pcs
---	----------

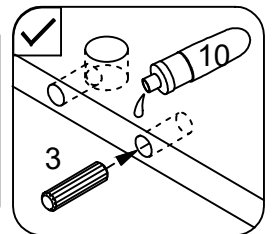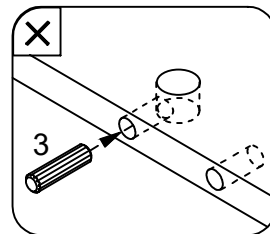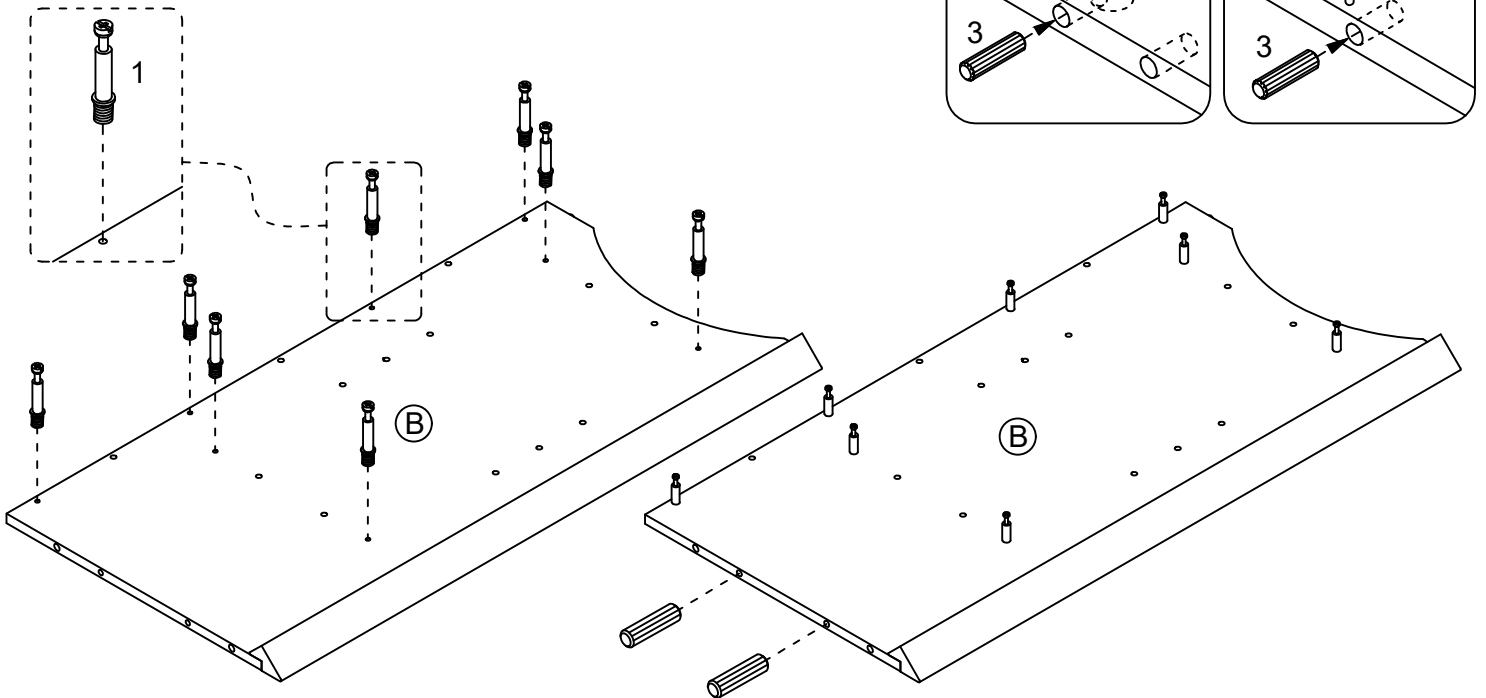STEP6









Glue the wood dowels 3 into the inner holes on the side panels B.

NOTE: It is very important to use a small amount of glue 10 on ends of dowels and wipe away excess glue immediately.







	1 x 8pcs
	3 x 2pcs
	10 x 1pc

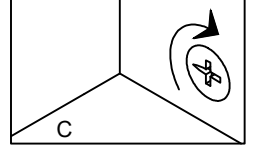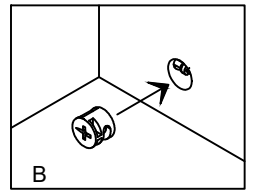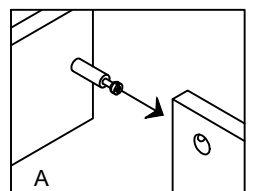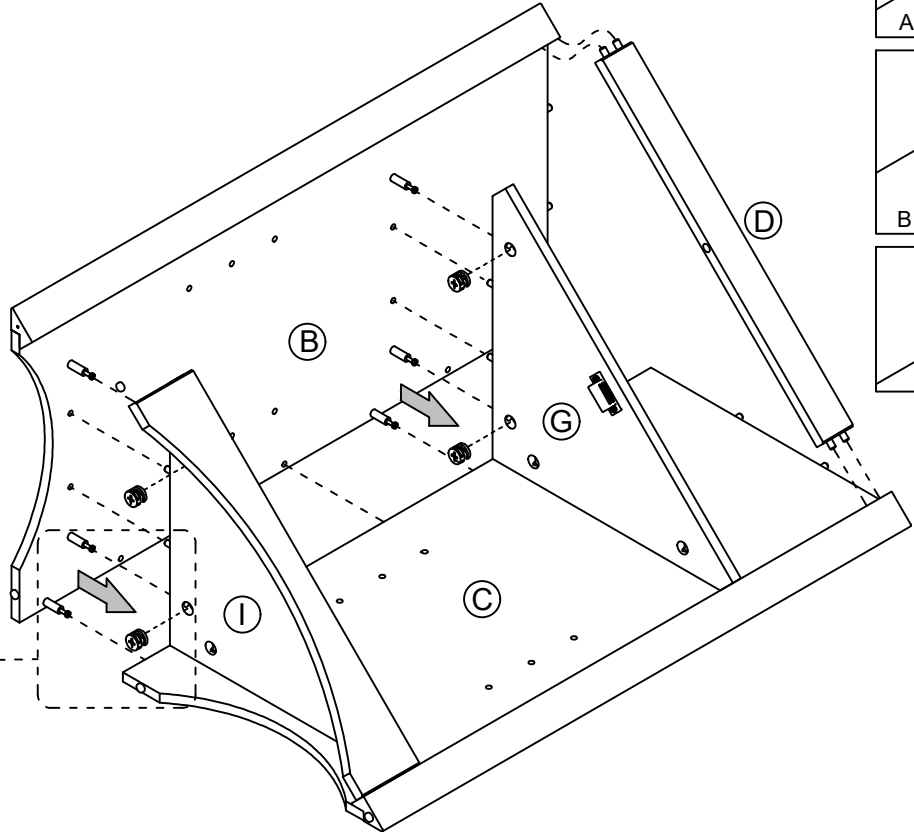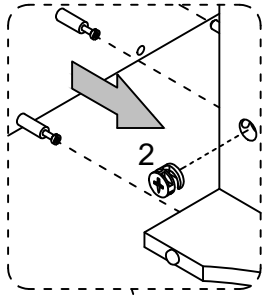

STEP 7





	2 x 4 pcs
---	-----------

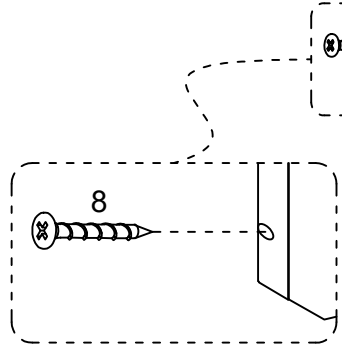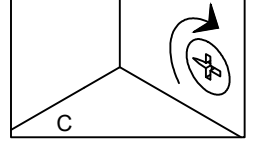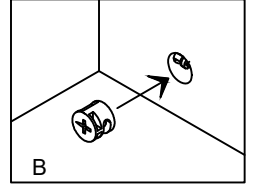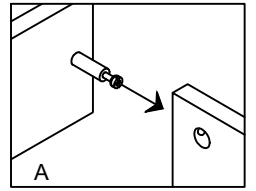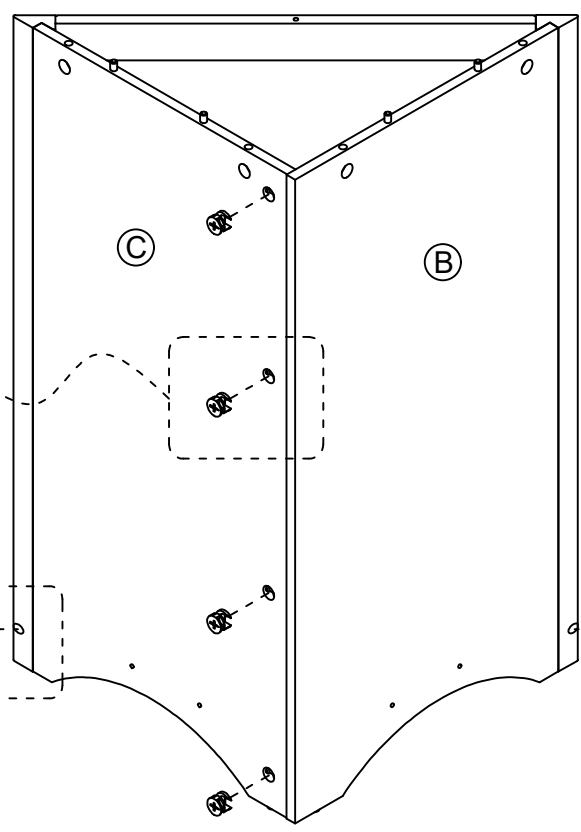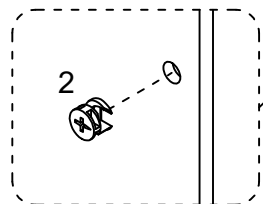
STEP 8




	2 x 4 pcs
	8 x 2 pcs


STEP9

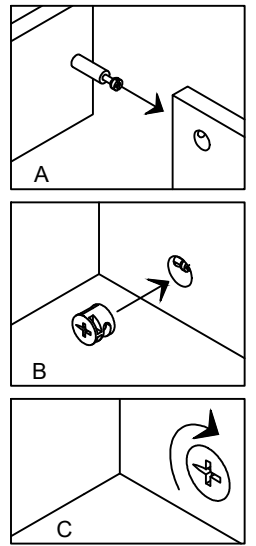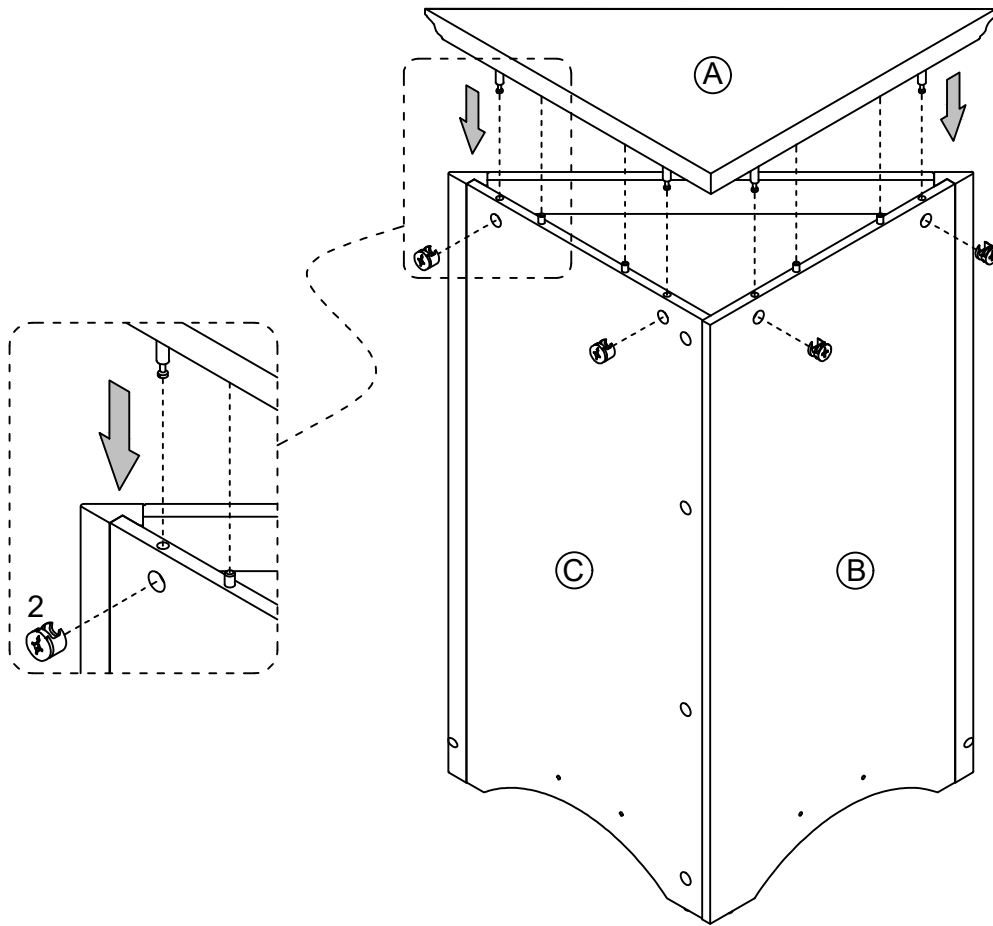


	2 x 4pcs
---	----------


STEP10

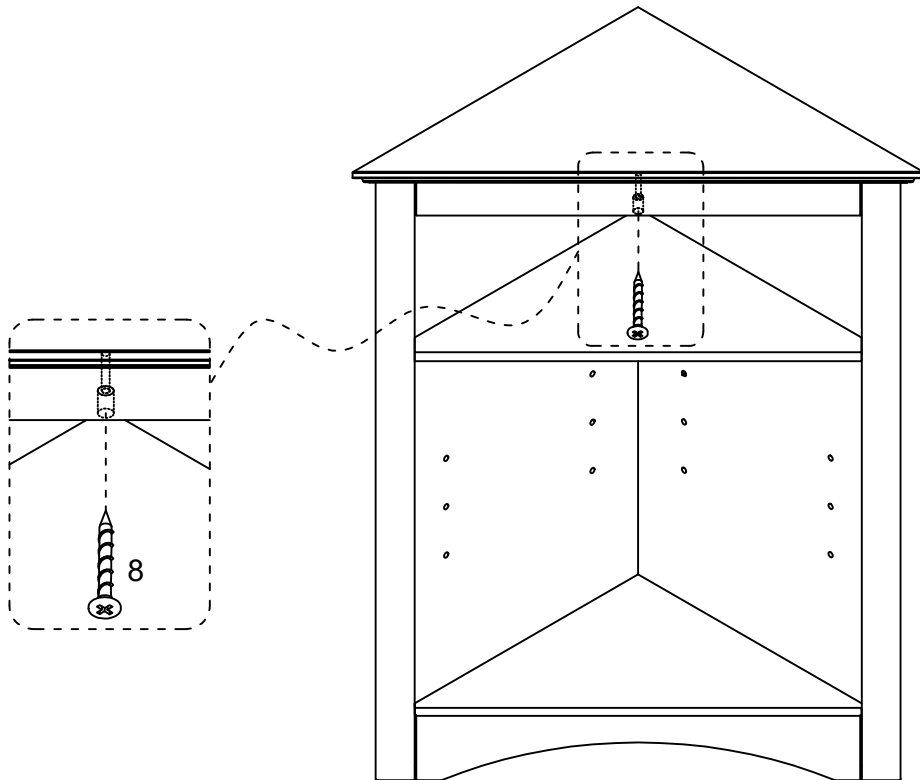


	8 x 1pc
---	---------

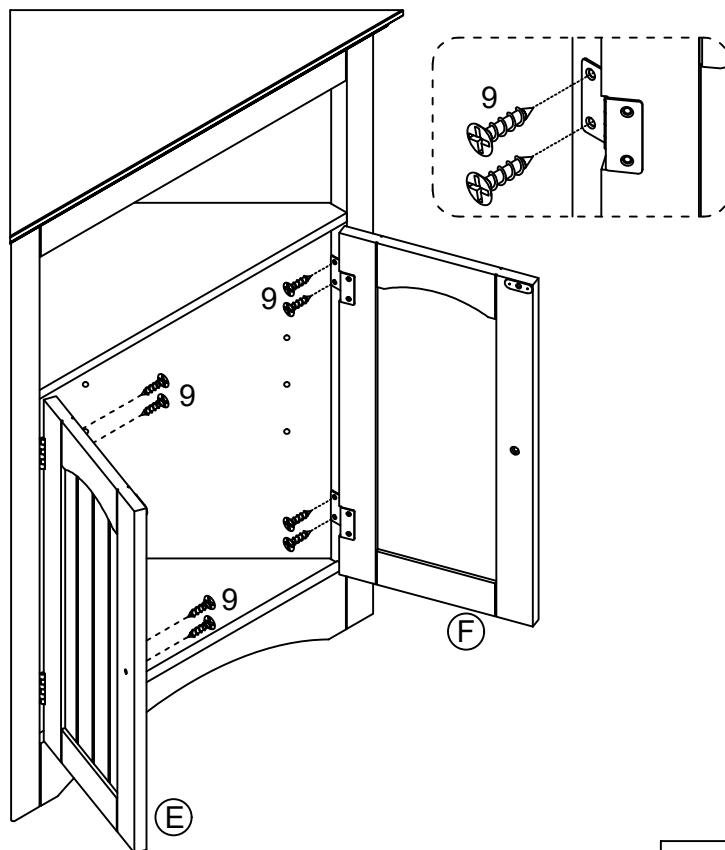

STEP11






	9 x 8pcs
---	----------

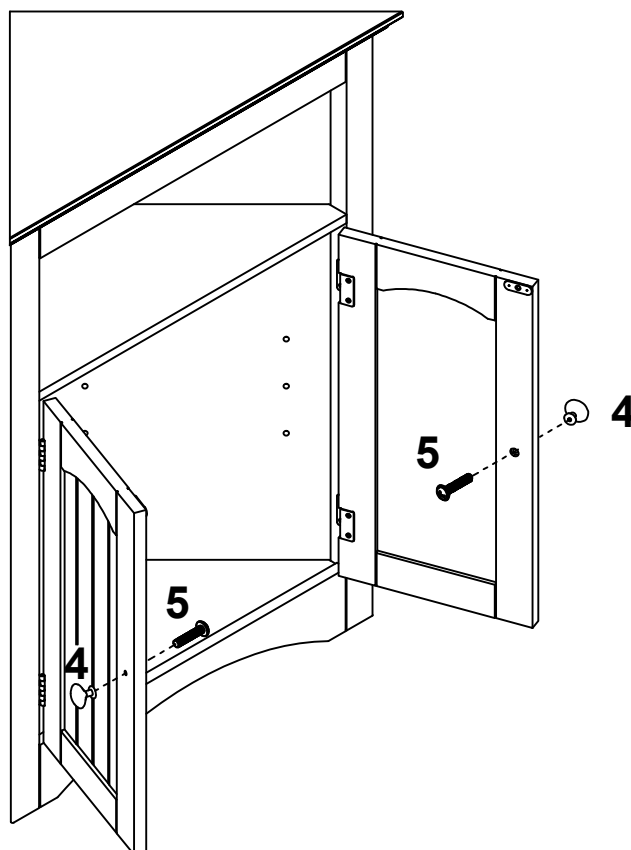

STEP12




	4 x 2pcs
	5 x 2pcs



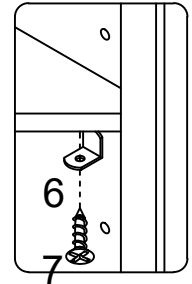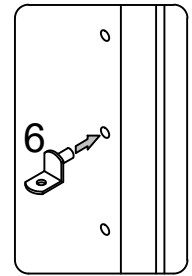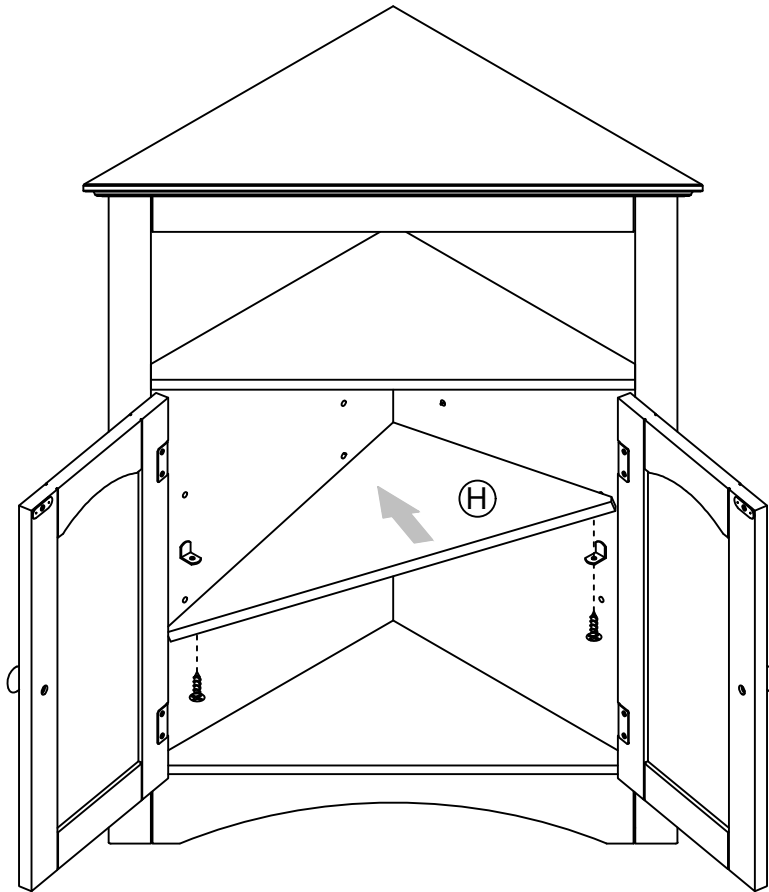


STEP13

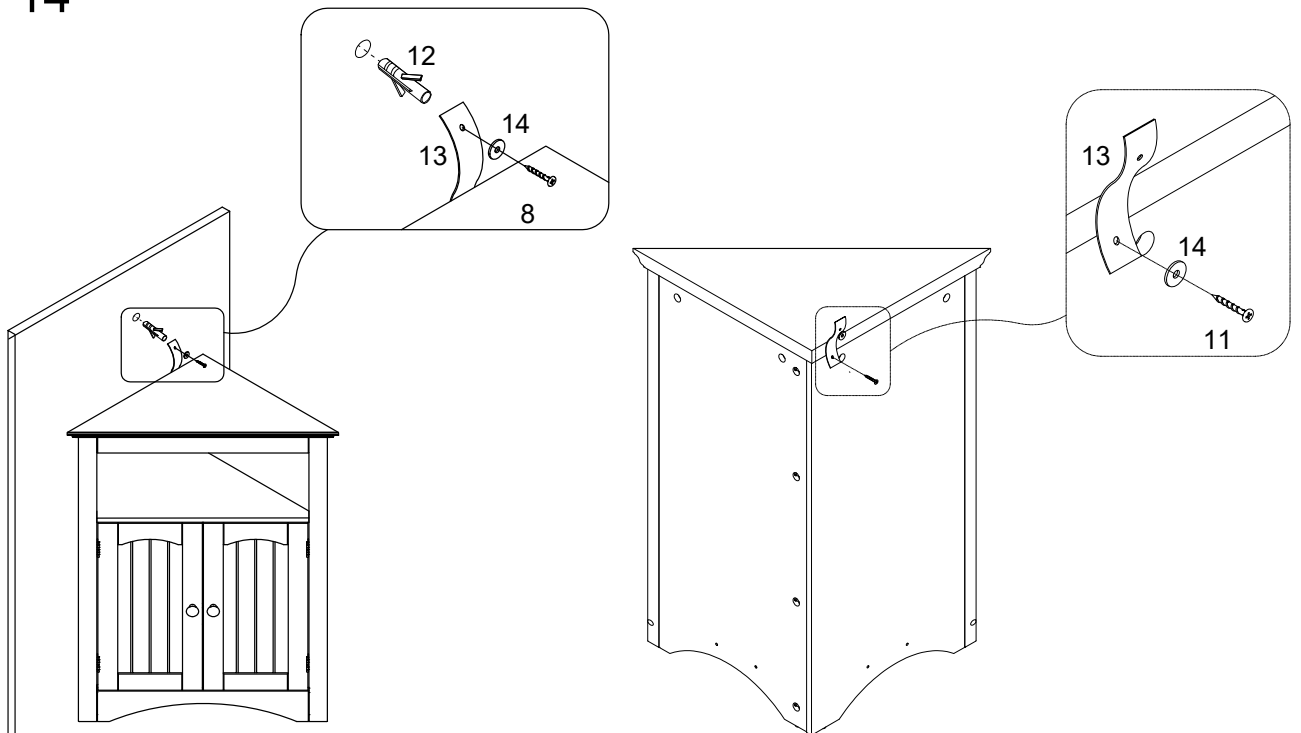

	6 x 4pcs
	7 x 4pcs

STEP14



8		1pc
11		1pc
12		1pc
13		1pc
14		2pcs