

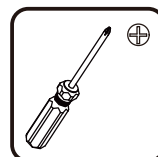
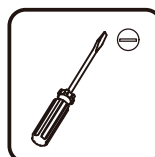



Installation & Assembly

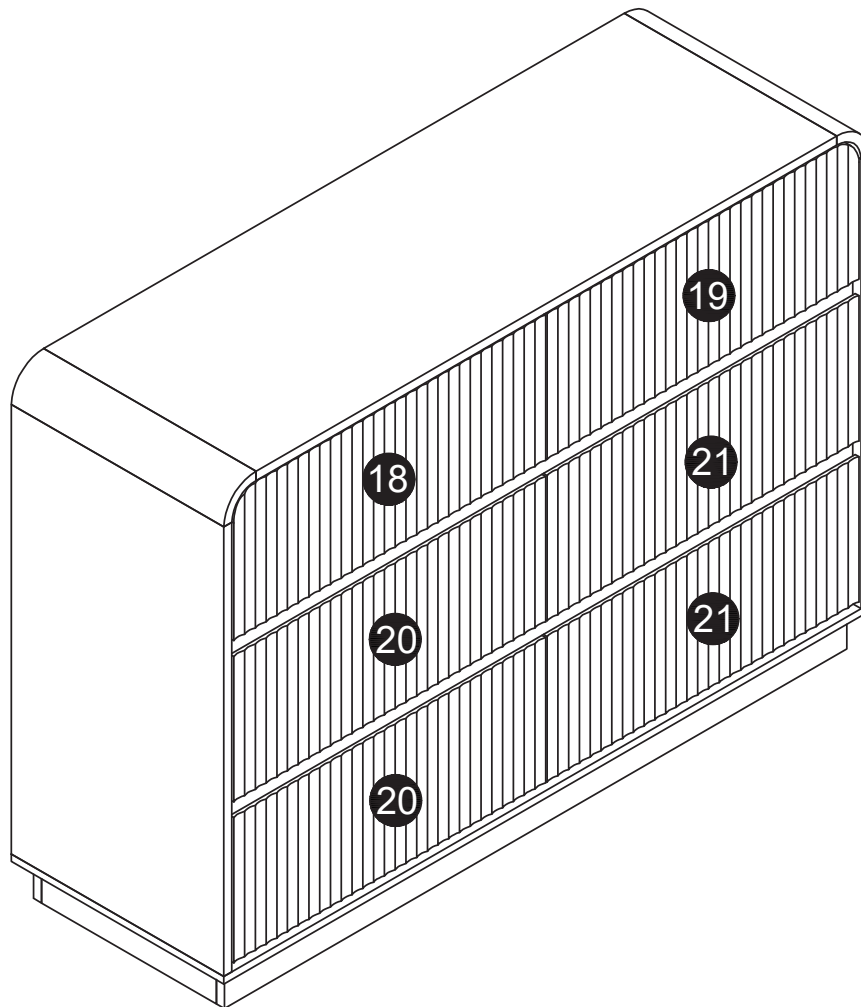


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

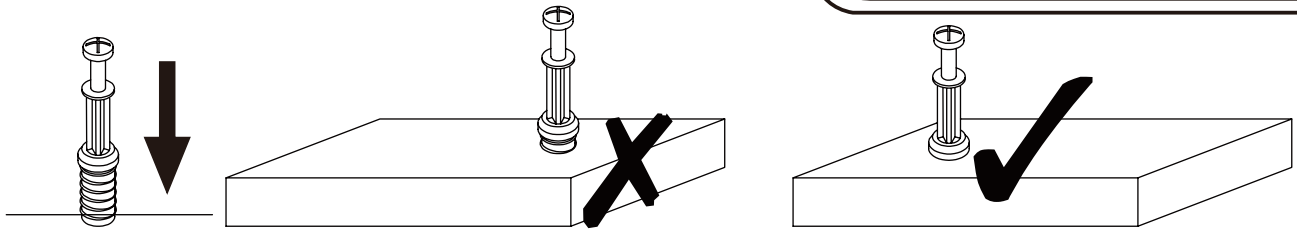


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

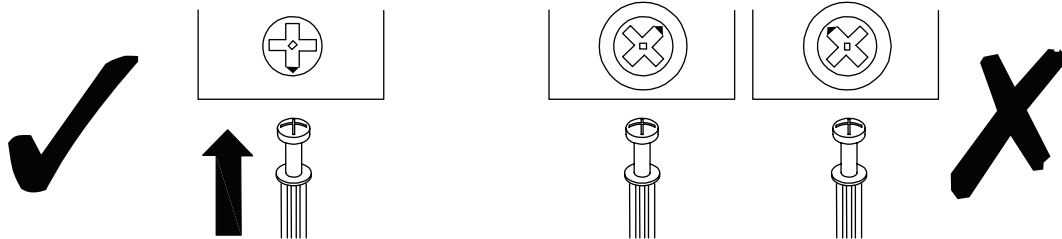












EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










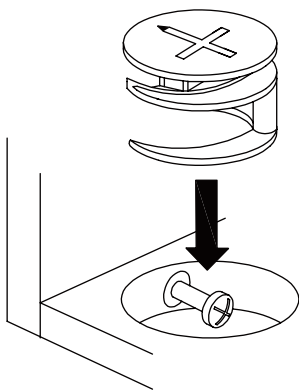





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.



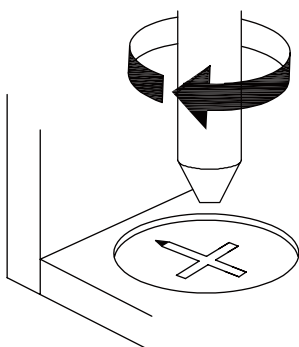


EN_Turn cam lock clockwise to tighten.

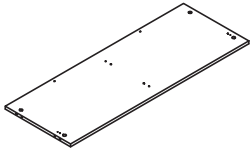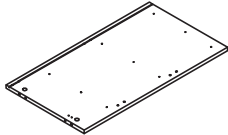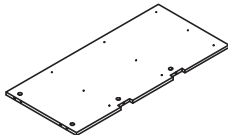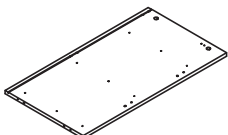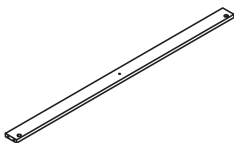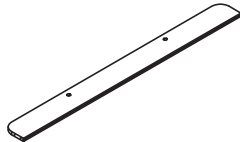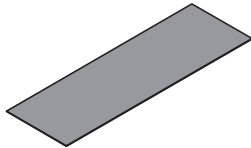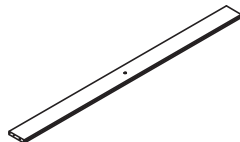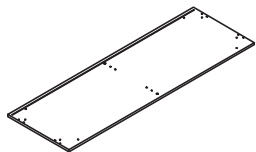NO.	PARTS	QTY	SPARE
①		x1	
②		x2	
③		x1	
④		x1	
⑤		x1	
⑥		x2	
⑦		x1	
⑧		x2	
⑨		x1	
⑩		x1	
⑪		x2	

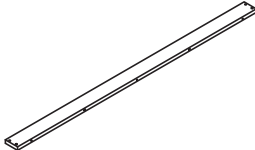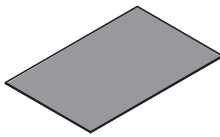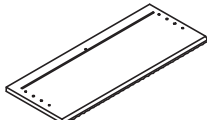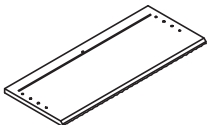
NO.	PARTS	QTY	SPARE
⑫		x2	
⑬		x6	
⑭		x6	
⑮		x6	
⑯		x6	
⑰		x6	
⑱		x1	
⑲		x1	
⑳		x2	
㉑		x2	
	 Hardware Kit	x1	

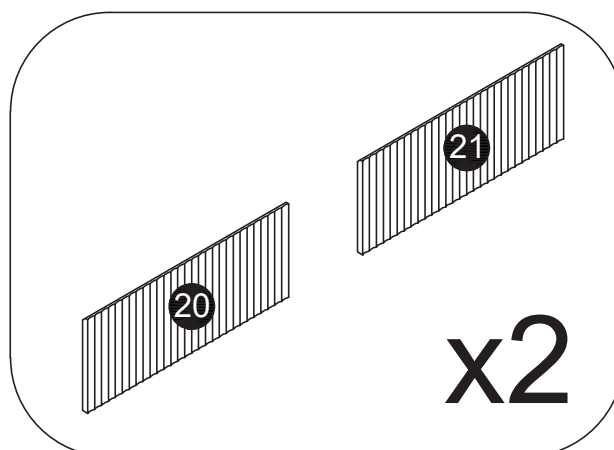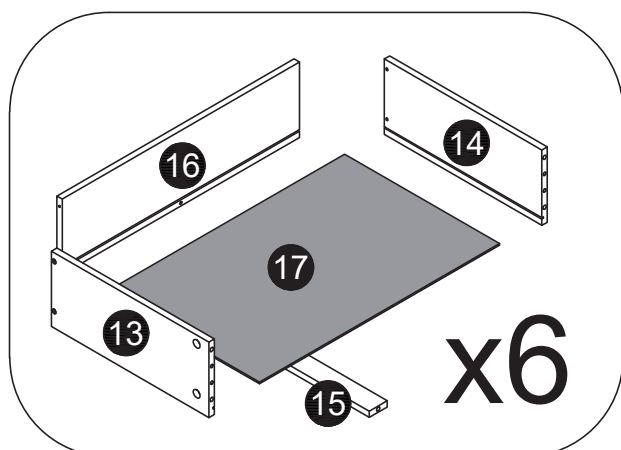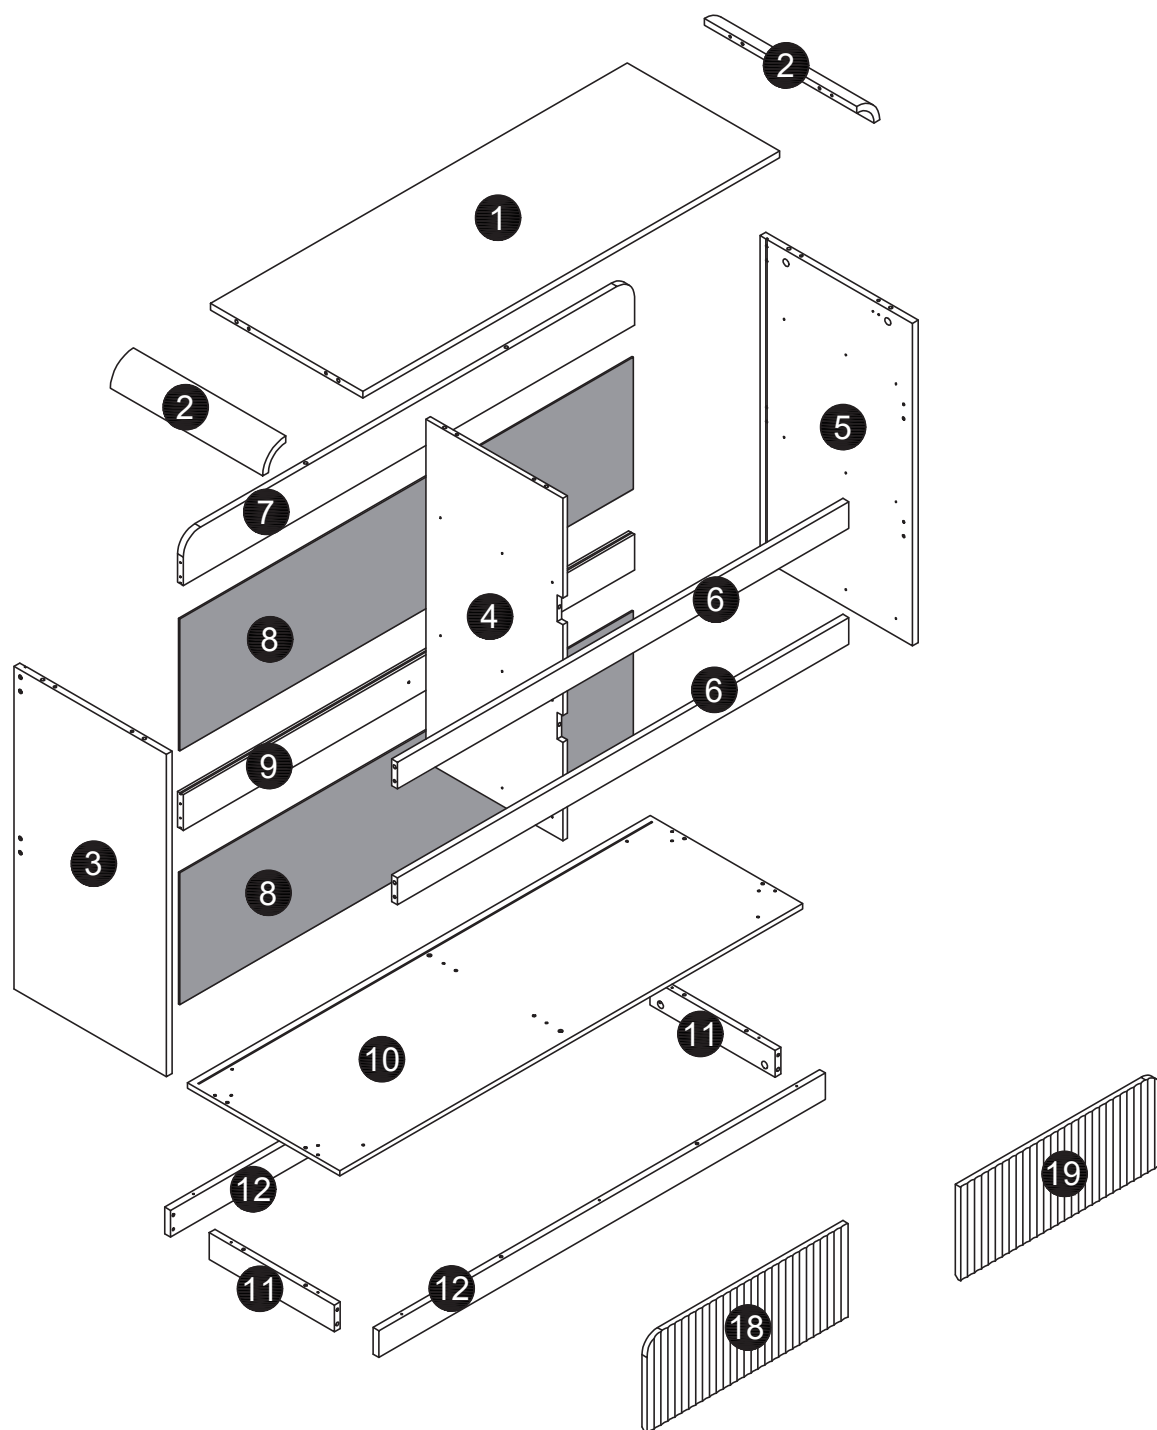

 A x44 Ø6x35mm +3(spare)	 B x52 Ø15x10mm +3(spare)	 C x56 Ø6x30mm +5(spare)	 D x32 Ø4x35mm +3(spare)	 E x72 Ø3.5x12mm +5(spare)	 F x8 Ø6x40mm
 G x15 Ø5x40mm +1(spare)	 H x8 Ø15mm +2(spare)	 I x10 Ø4x30mm	 J x2	 K x8 Ø4x14mm	 L x2 Ø6x30mm
 M x8 Ø3x16mm +1(spare)	 N x2 Ø4x14mm				
O-1	O-2	N-1	N-2		
 CL x6 L350mm	 CR x6 L350mm	 DL x6 L350mm	 DR x6 L350mm		

01


D x30

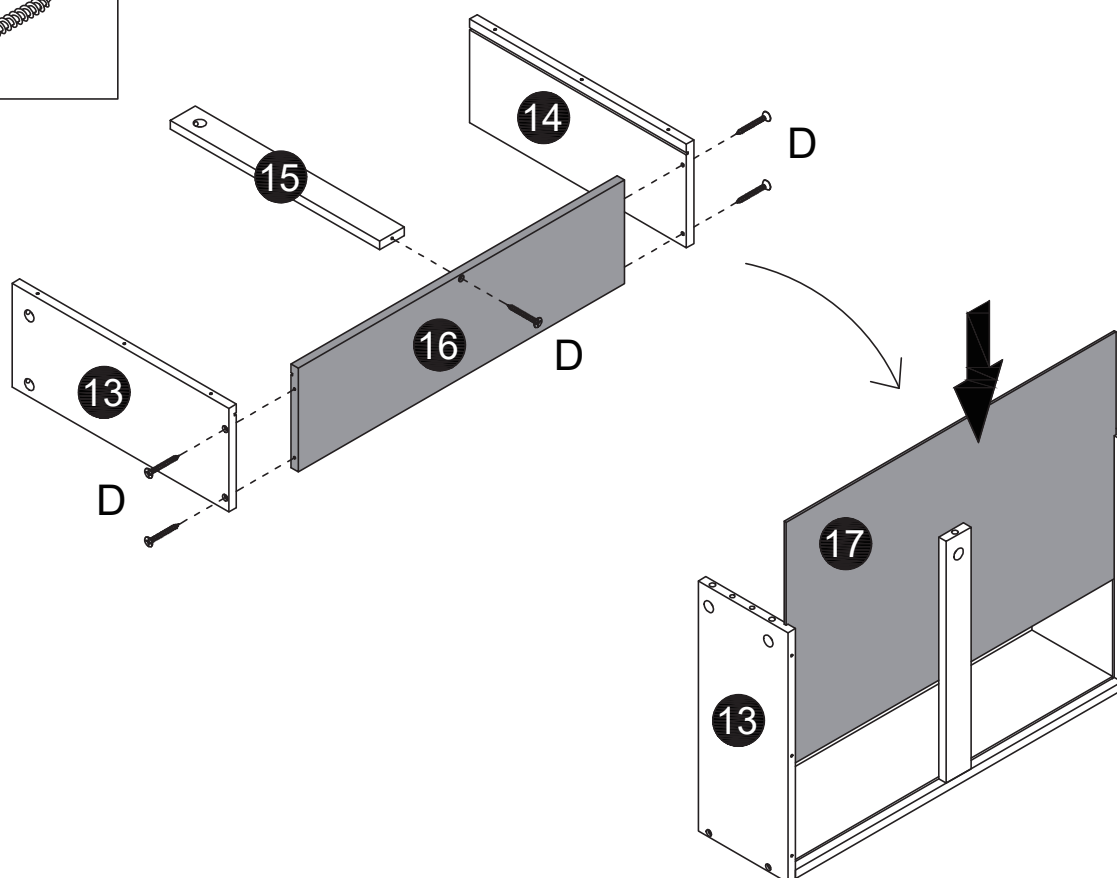

x6

02

A x30

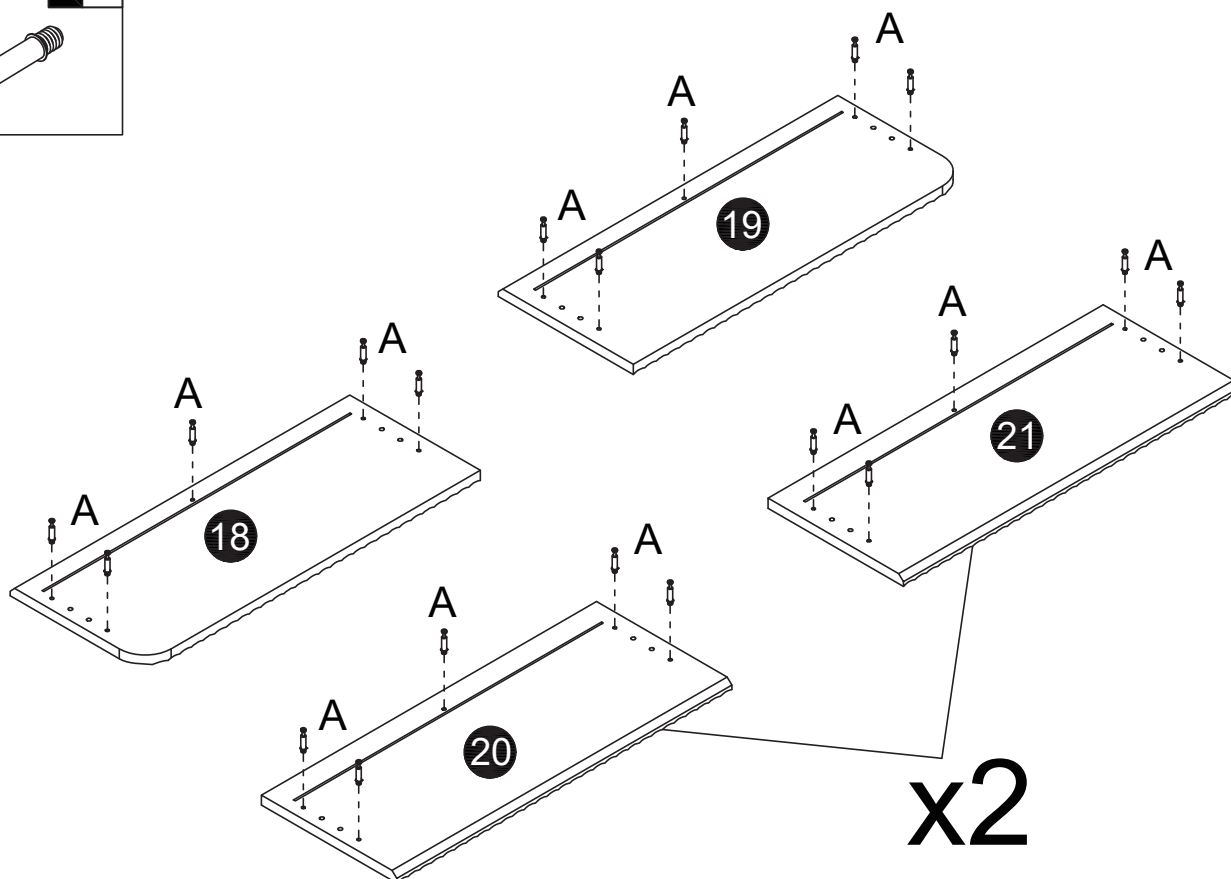




x2

03

B x30



C x24

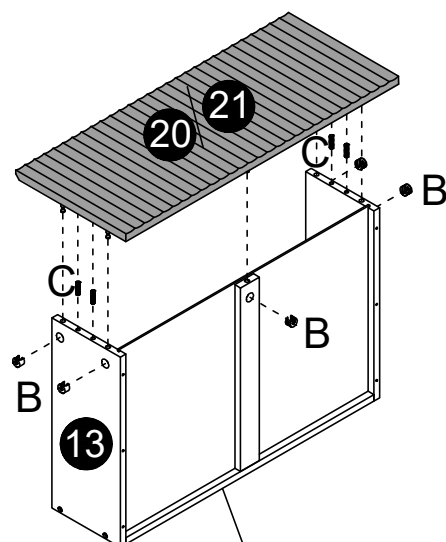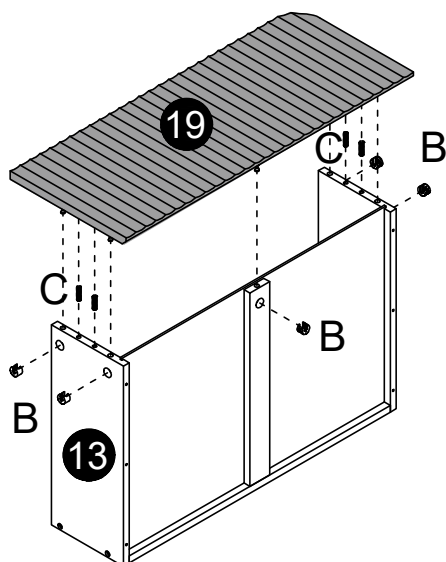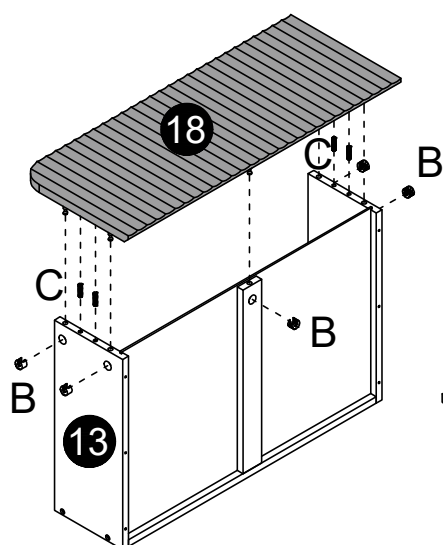


x4

04





E x36



DLx6




DRx6

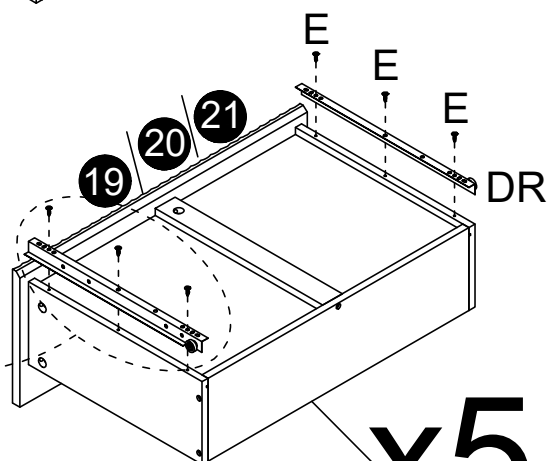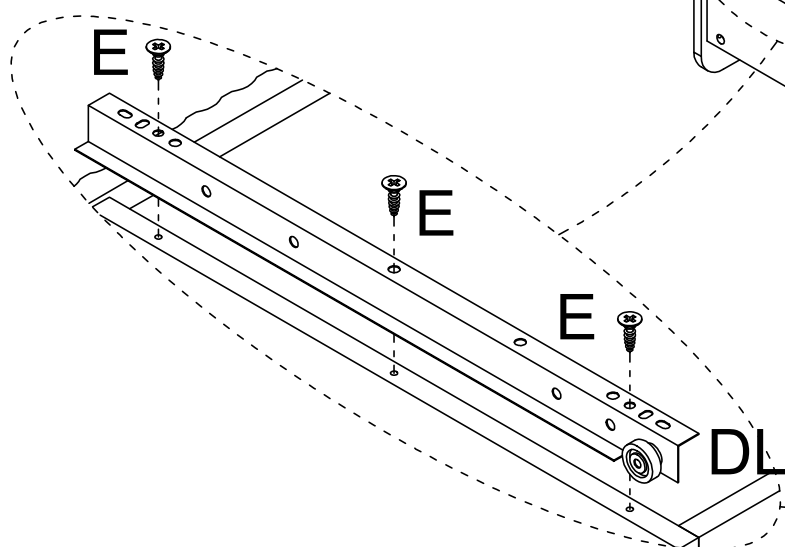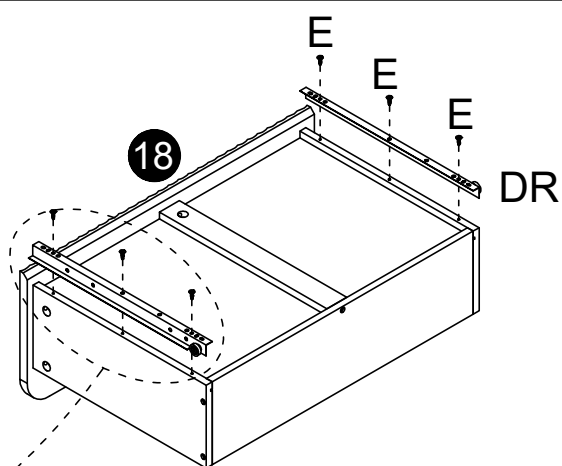

x5

A x4









E x18



CL x3




CR x3

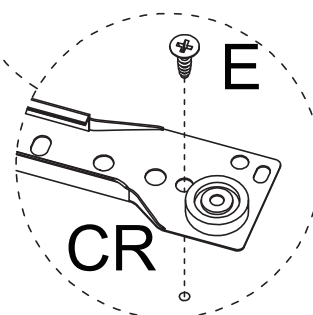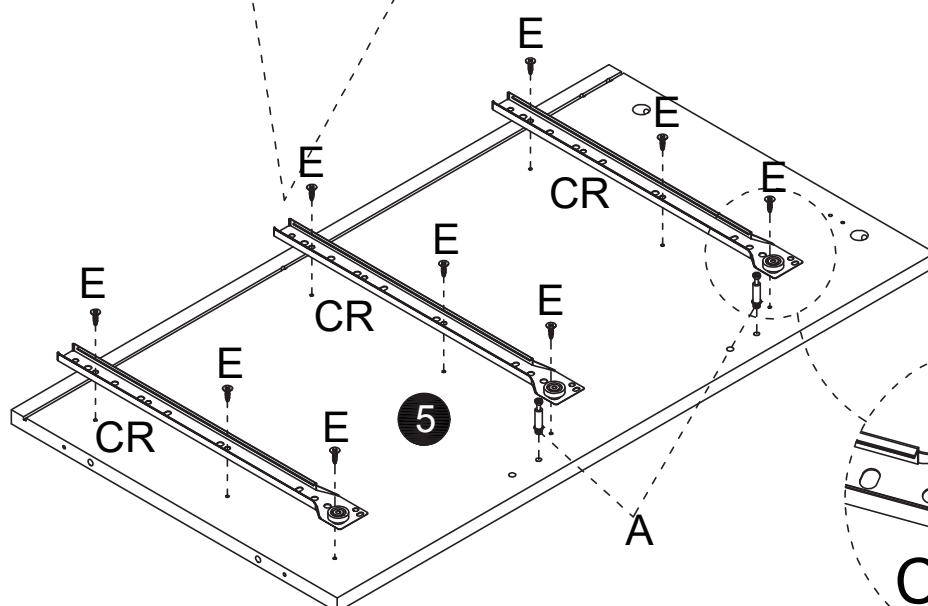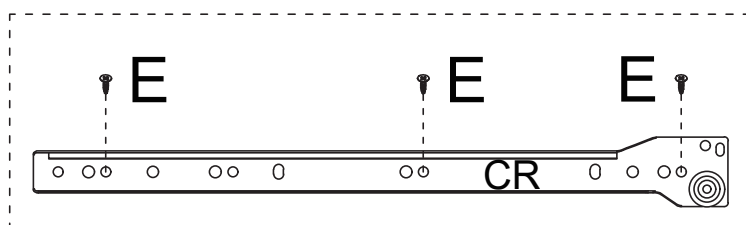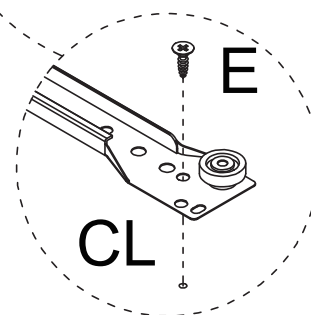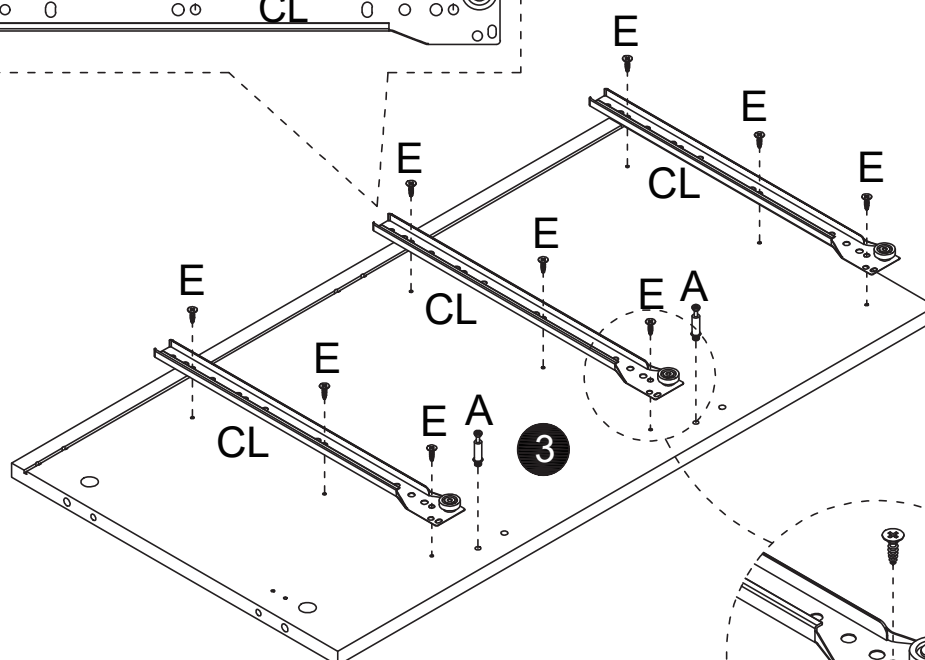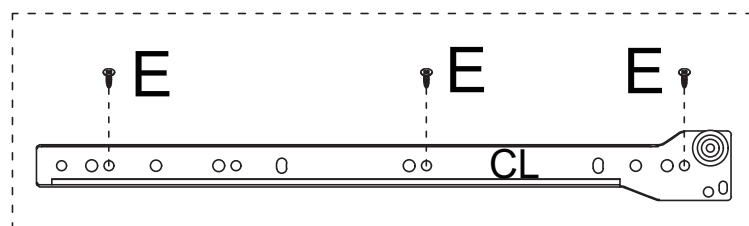


E x18





CL x3






CR x3

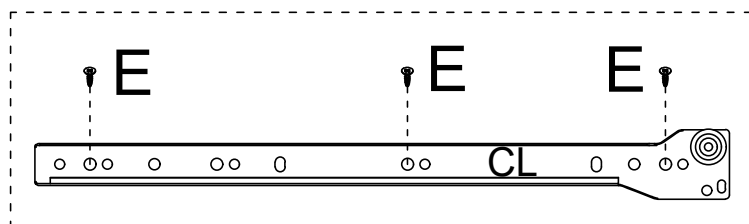


Second hole

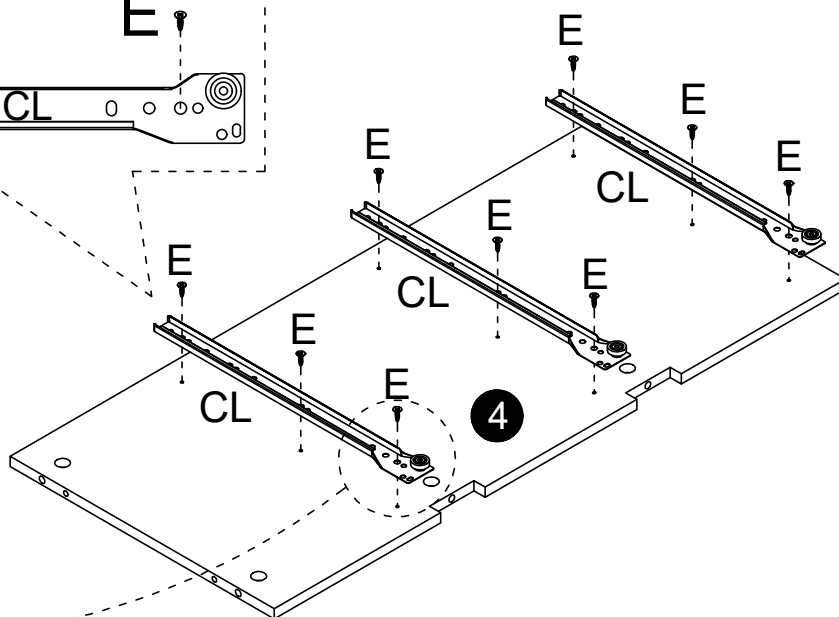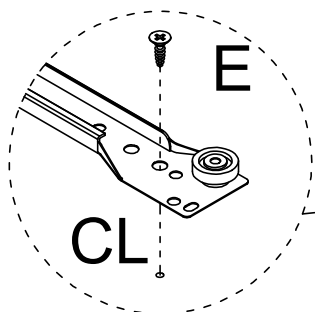


180°

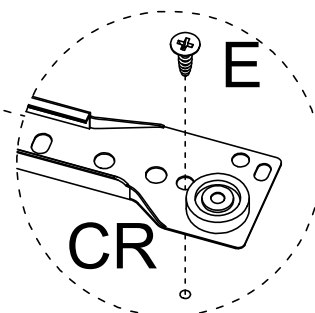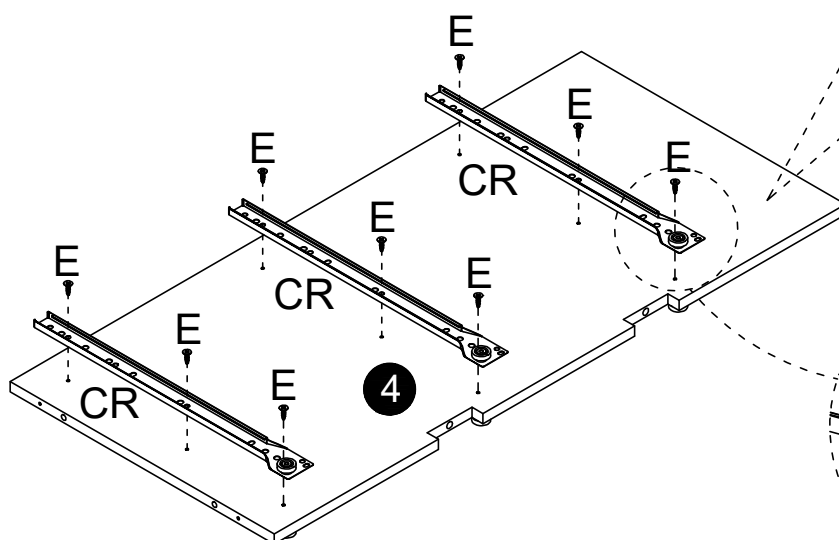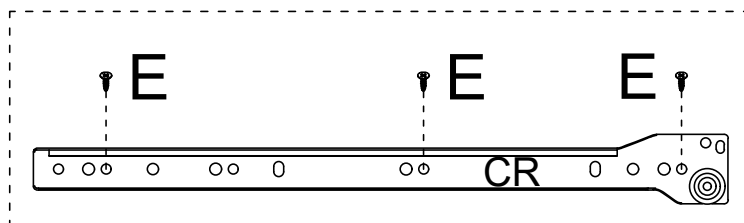

A x2



07

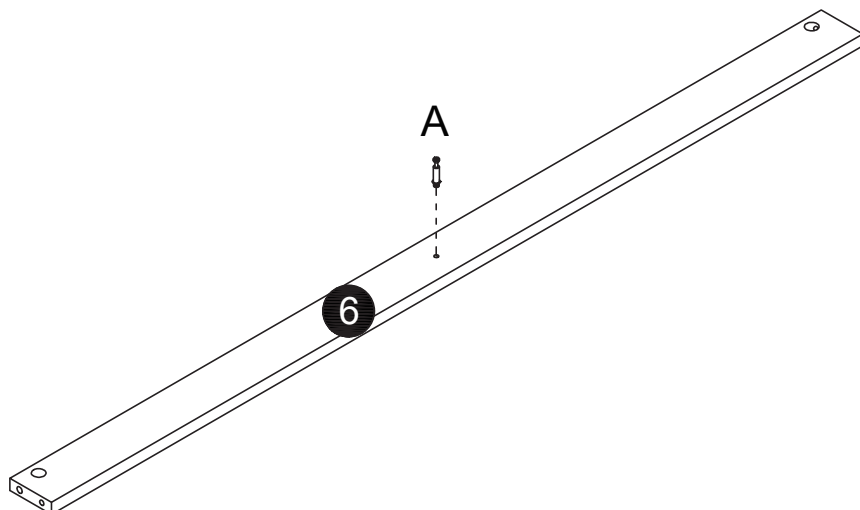


x2

B x2



08


For easier installation, please pad one piece of foam under the product (take it from the packaging box).

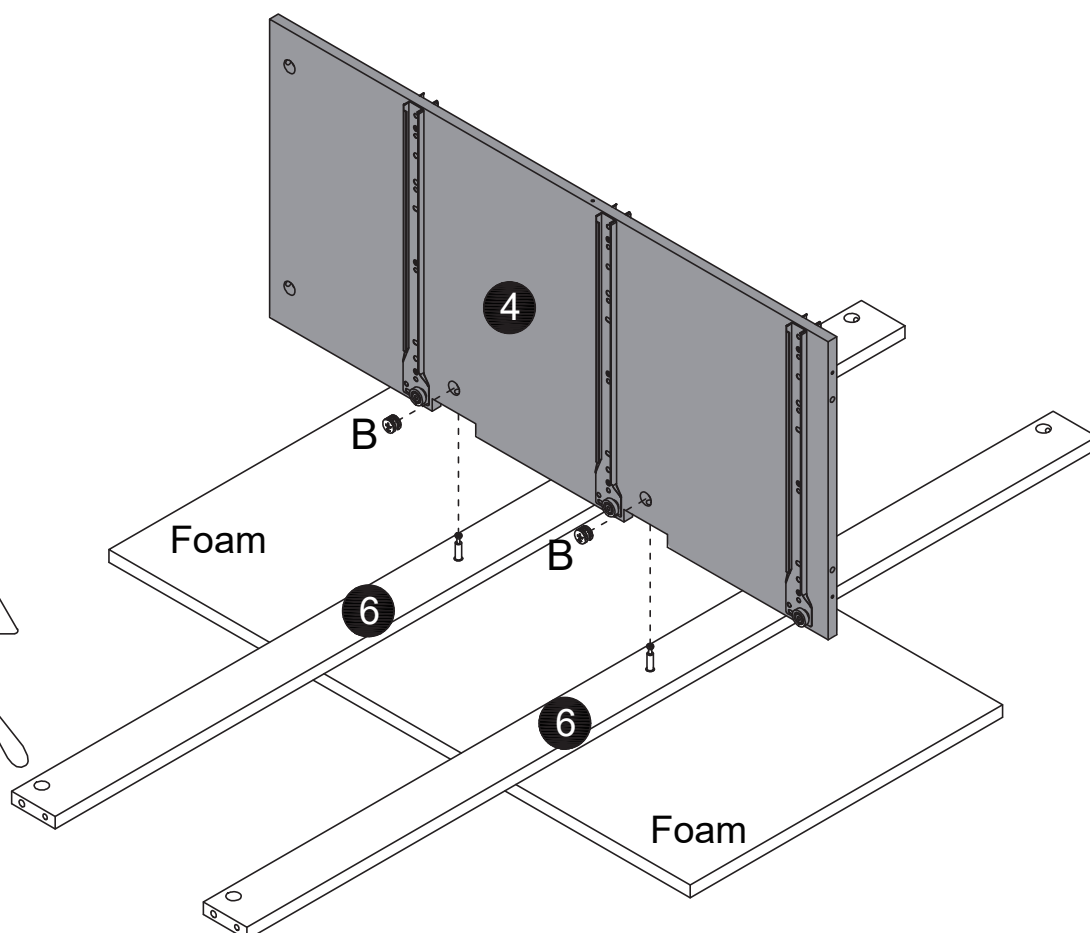


B x2





C x2

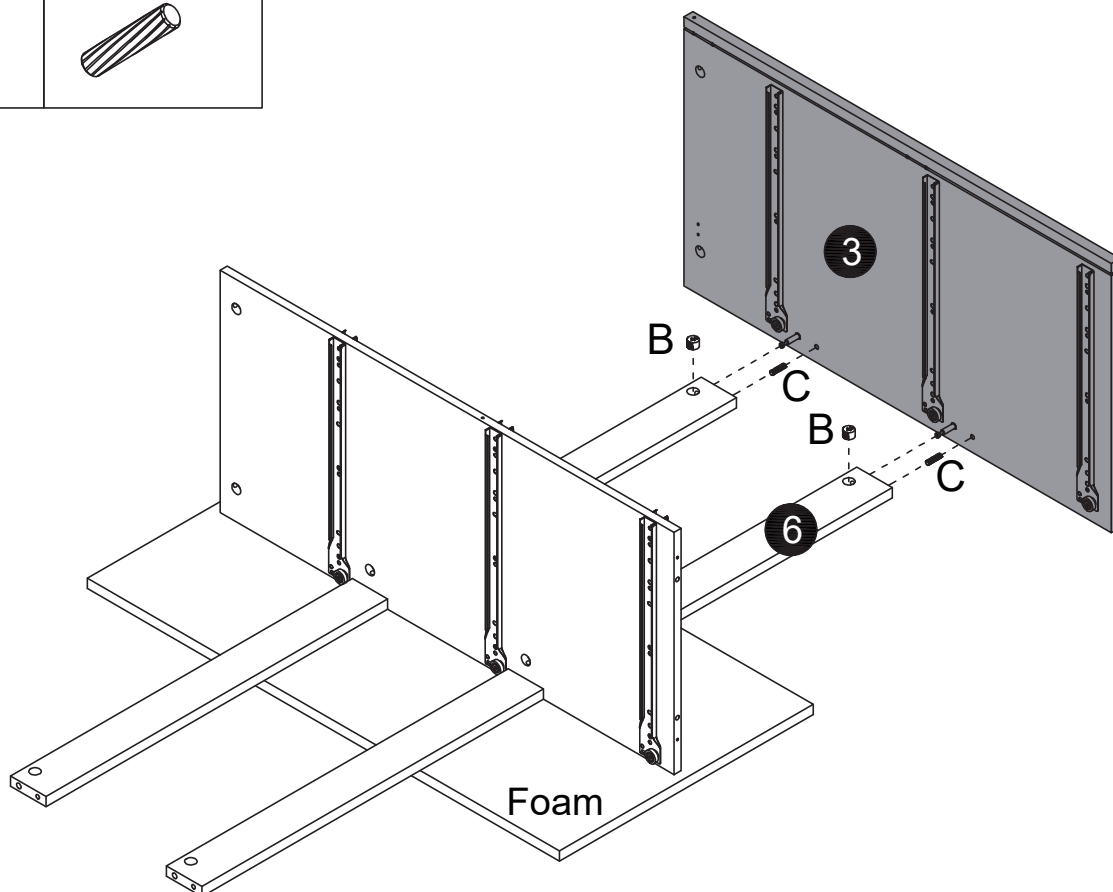


G x3

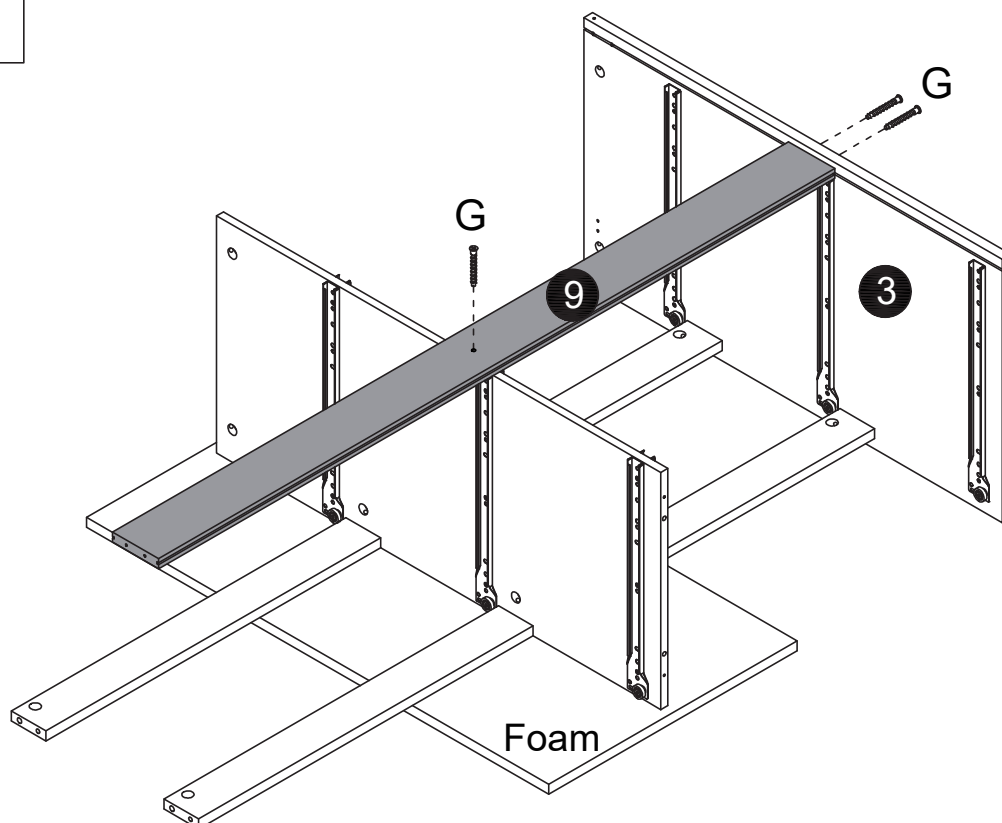

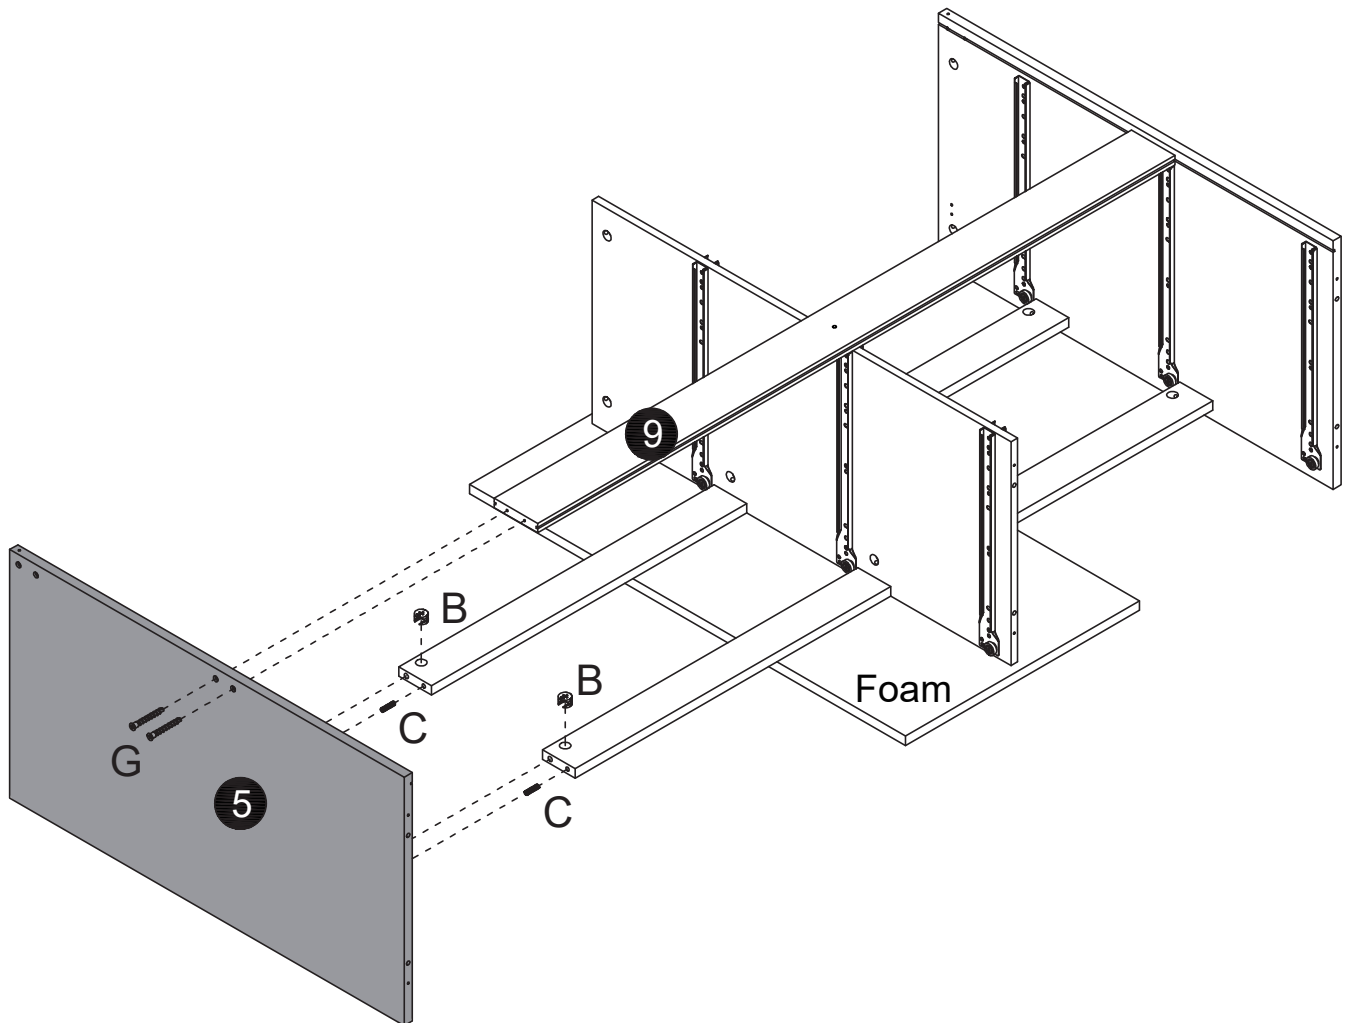


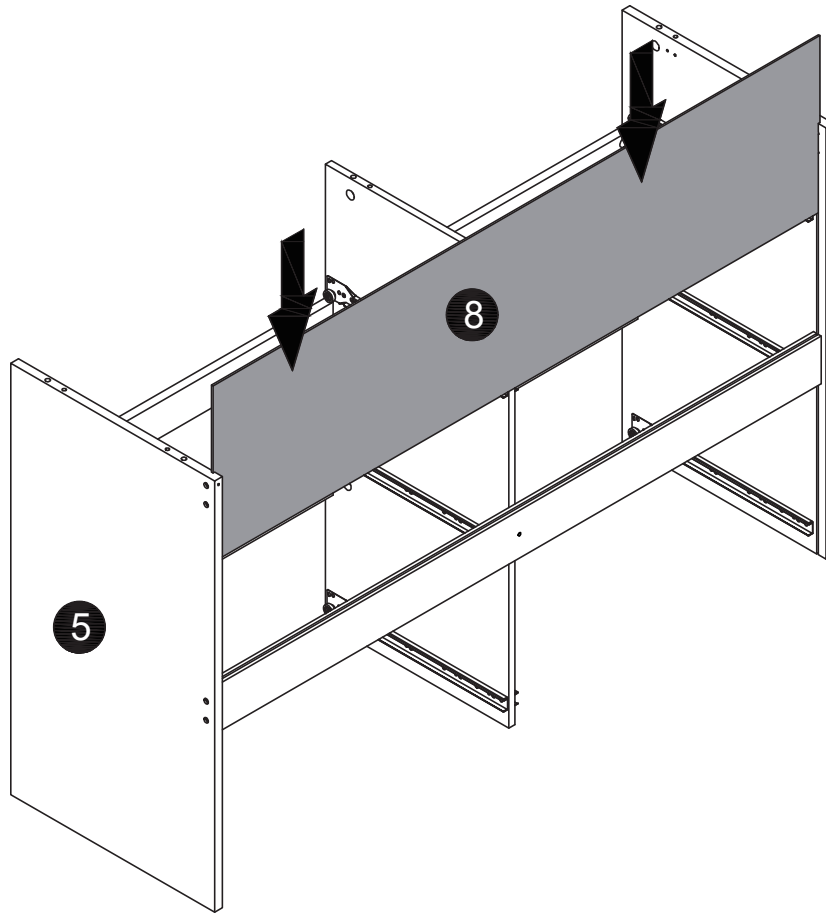


G x4

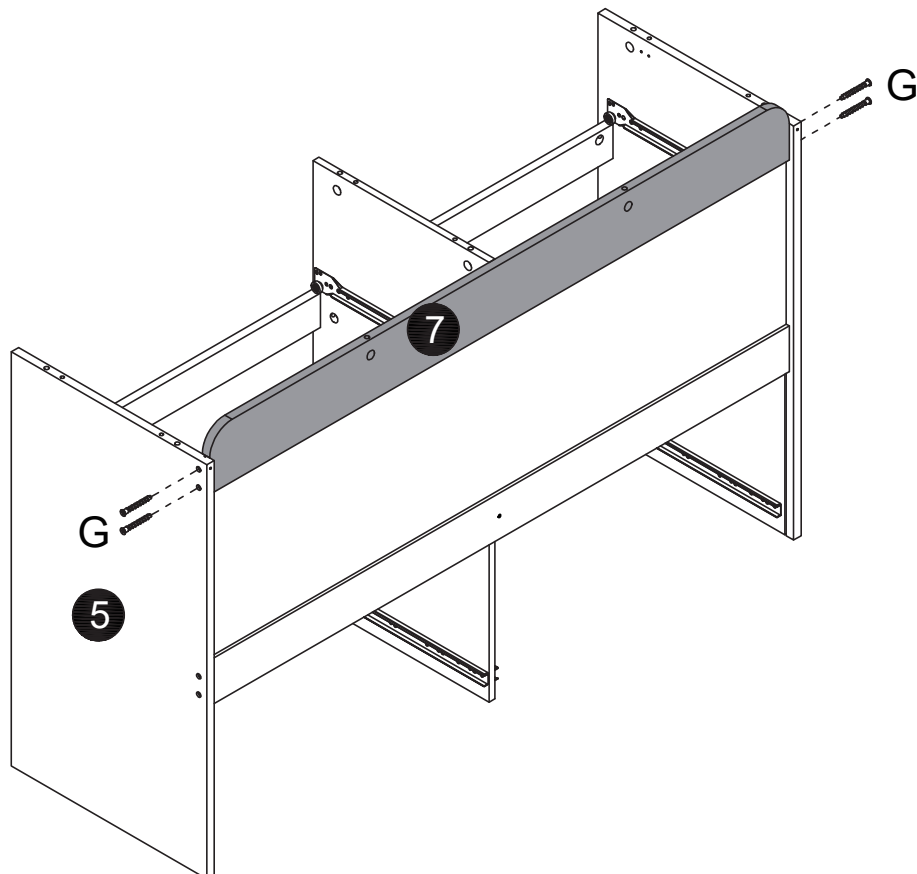

F x8

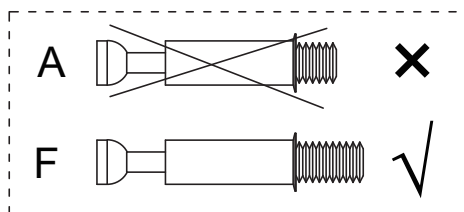

Caution : Need to use the correct part #F instead of part #A.

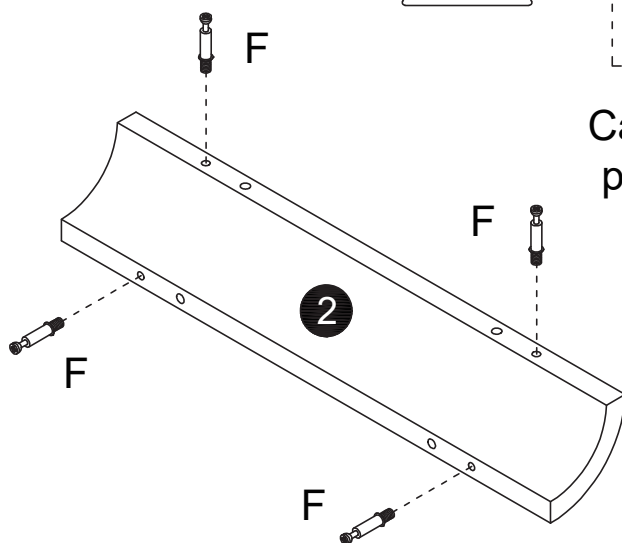


x2


B x4




C x4

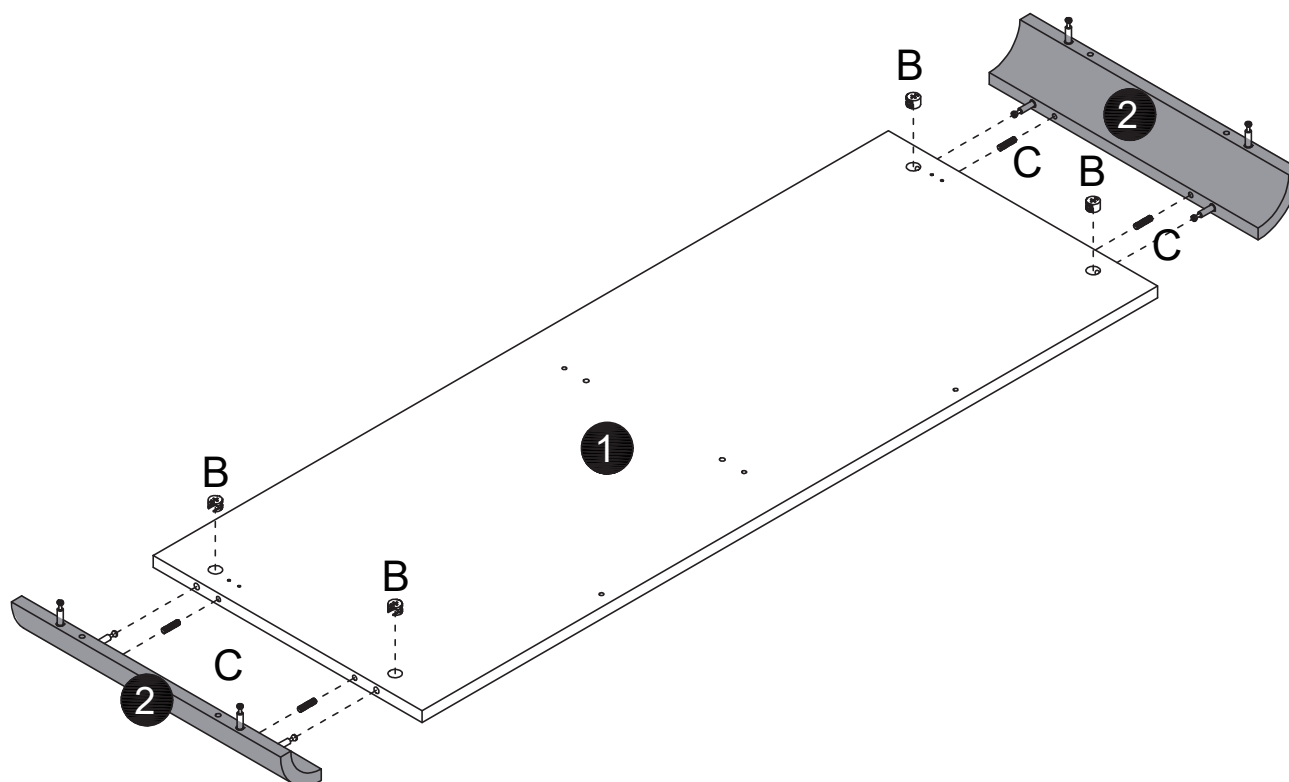

A x4



16

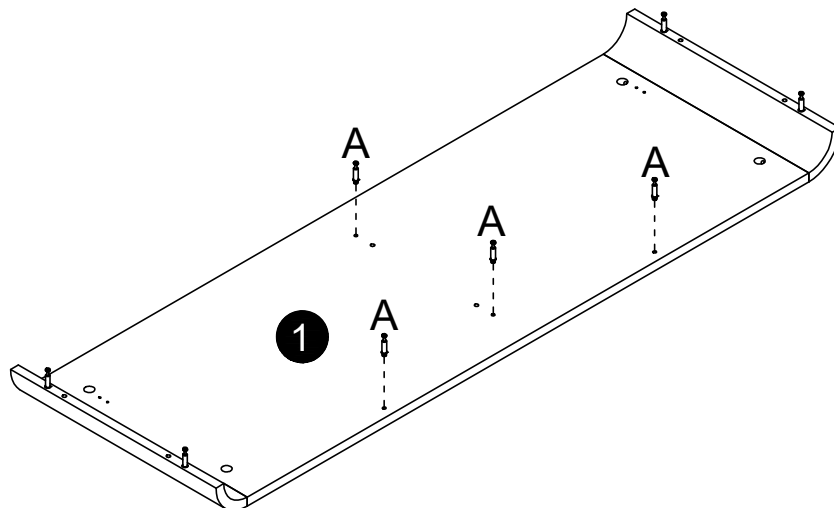


B x8




C x6




17

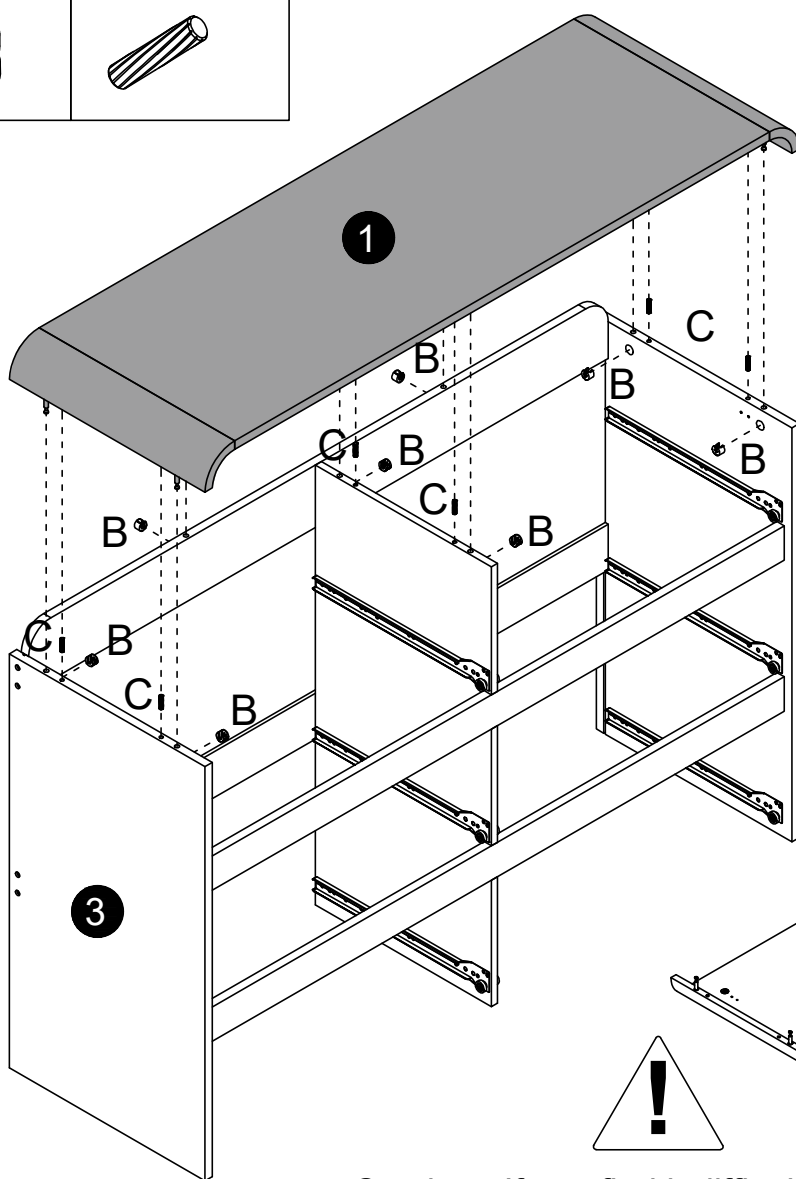


Caution : If you find it difficult to connect the No. 1 plate to the cabinet, you can loosen part B of the No. 1 plate first, and tighten it after the subsequent installation is completed.

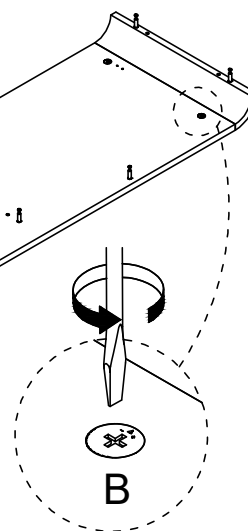

A x4



18

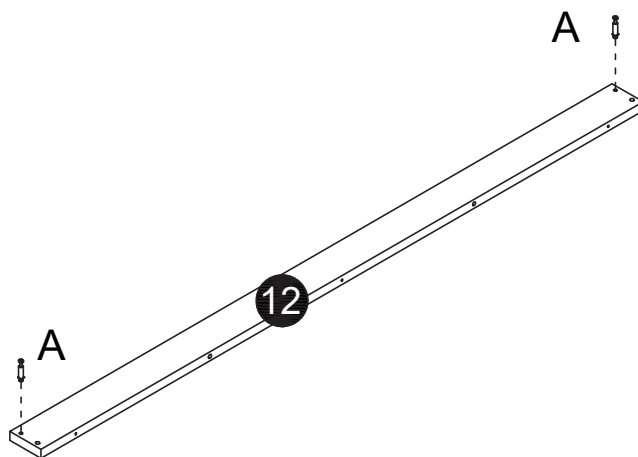

x2

B x4





C x12




I x10




19

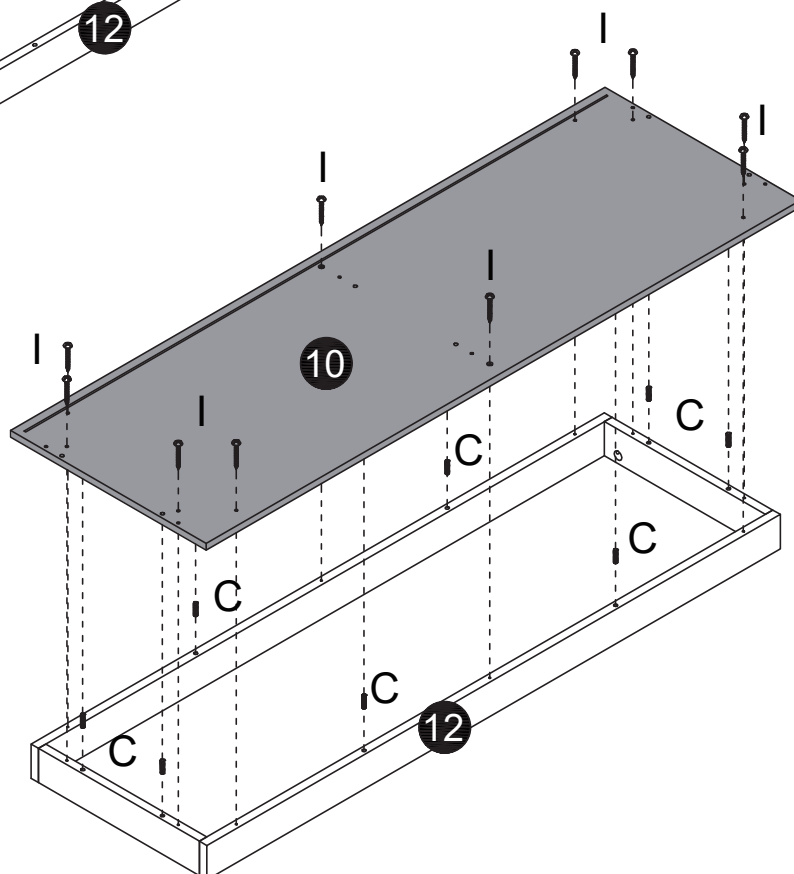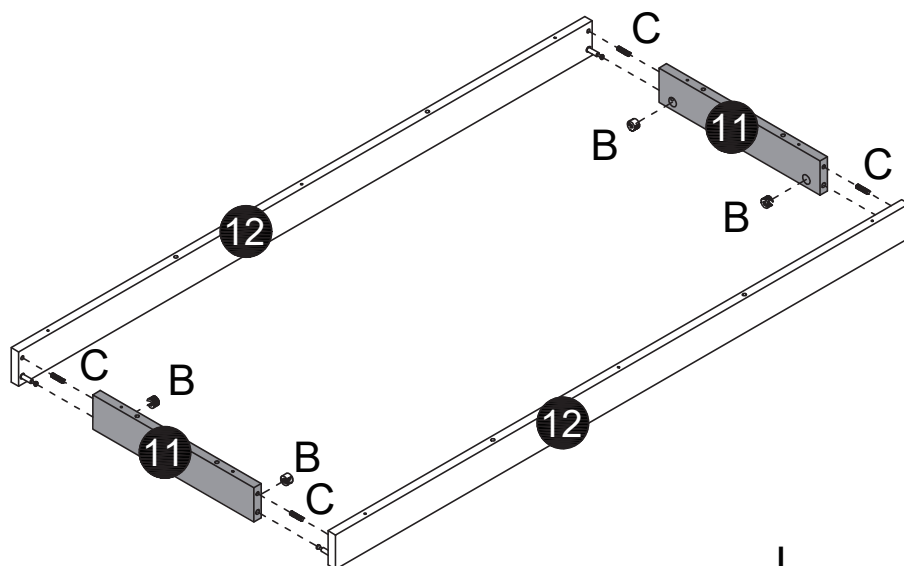

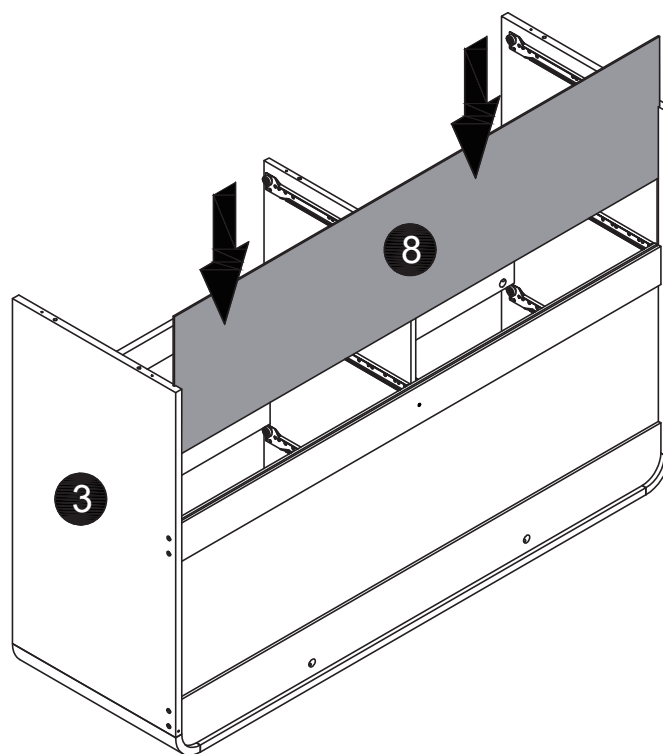

C x6

G x6

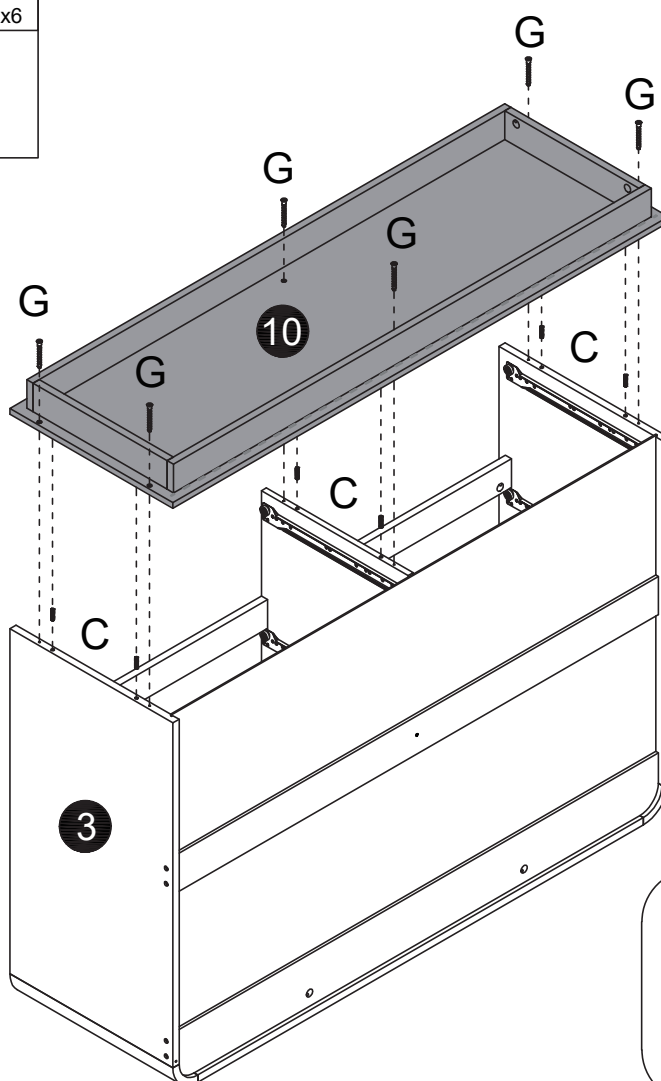



H x8



J x2



K x8

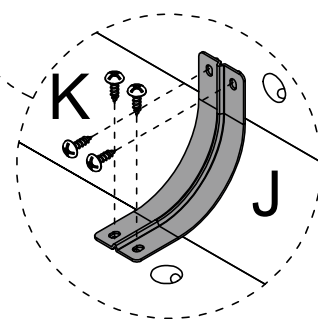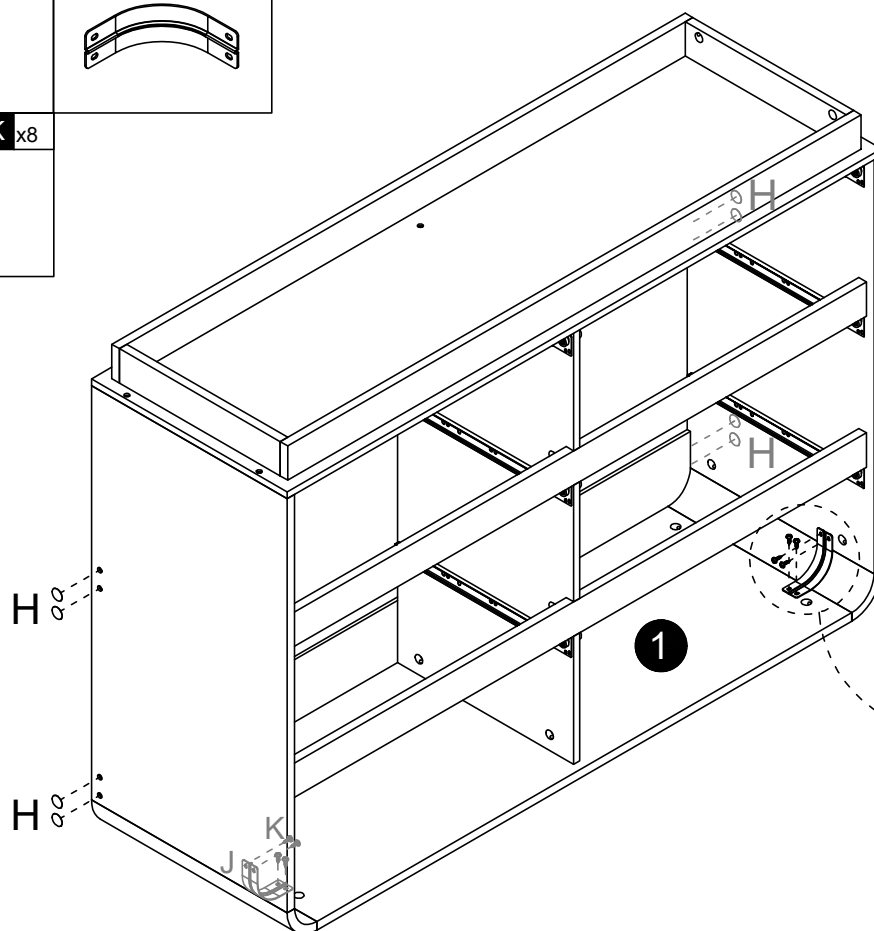




M x8





M-1




M-2

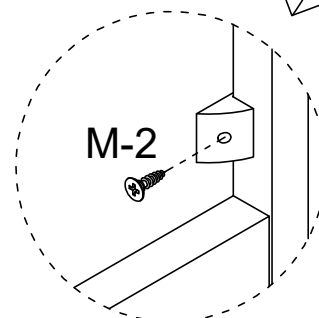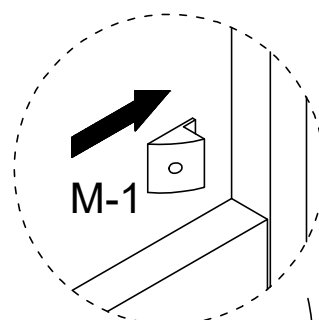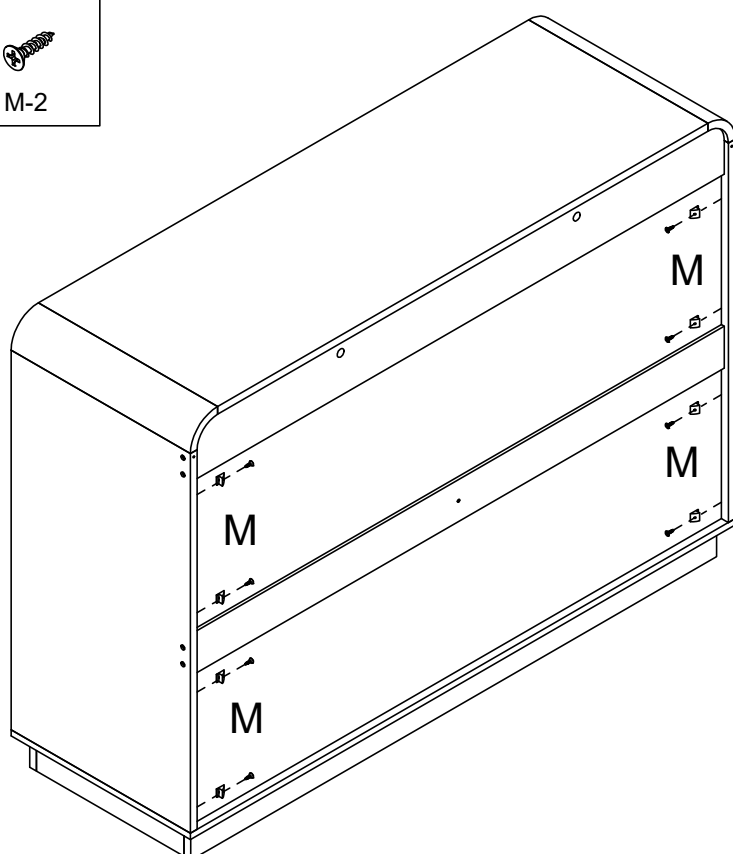

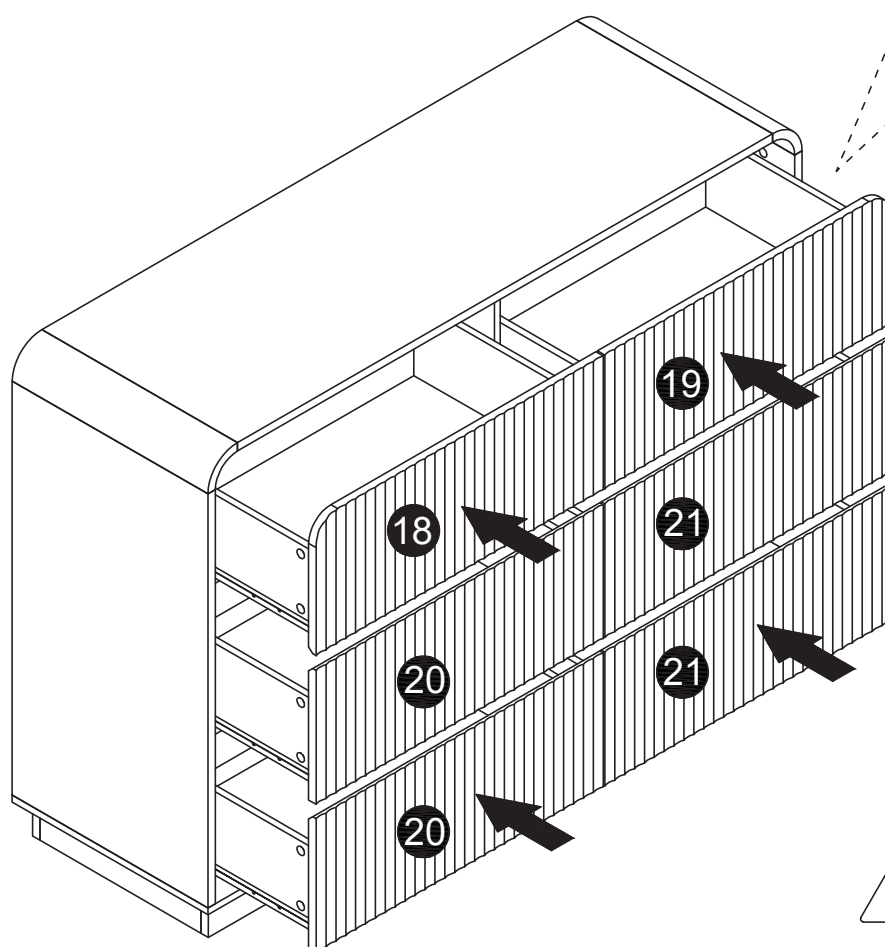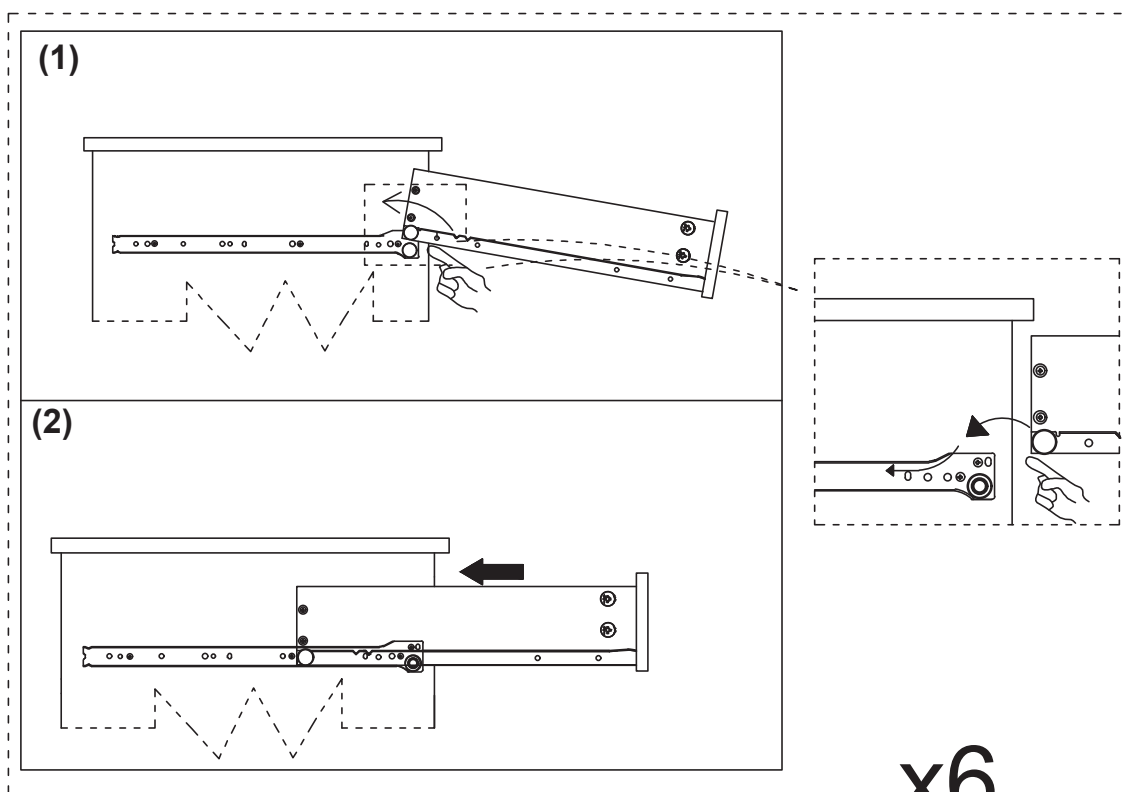


Caution : The drawers are differentiated on the left and right, please place them according to the corresponding numbers.


D x2



L x2




N x2




N-1


N-2

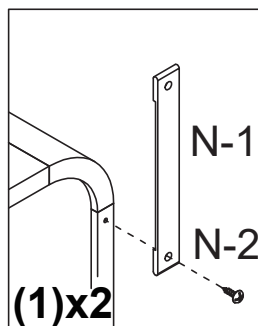


First fix the anti-rewind screw in the reserved hole of the product.

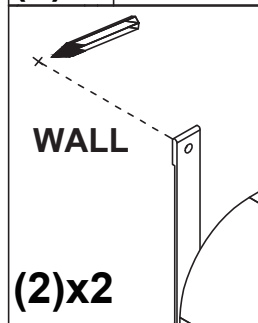


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

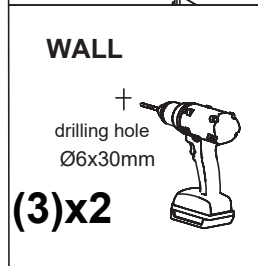

Then use a tape drill to make holes in the wall that are suitable for the product screws.

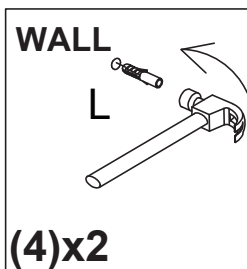

Then, put the expansion bolt into the hole

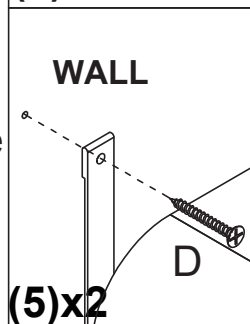

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

