

INSTRUCTION MANUAL



Attention:

Thank you very much for your purchase.

When the number of your order is more than 1, we will split your order and ship the goods separately to ensure the safety.

We promise to deliver at the same time, but the time of receipt may be slightly different due to logistics.

PARTS LIST



① X1

Left side panel
14.4*13.1*0.6in



② X1

Right side panel
14.4*13.1*0.6in



③ X1

Left trim panel
13.1*1.96*0.6in



④ X1

Right trim panel
13.1*1.96*0.6in



⑤ X1

Rear trim panel
18.03*1.96*0.6in



⑥ X1

Main panel
19.3*13.1*0.6in



⑦ X1

Front trim panel
19.3*2.56*0.6in



⑧ X2

Support panel-1
7.1*4.92*0.6in



⑨ X2

Support panel-2
13*4.92*0.6in



⑩ X1

Fixed panel
19.3*13.1*0.6in



⑪ X1

Front skirting panel
18.03*3.15*0.6in



⑫ X1

Rear skirting panel
18.03*2.36*0.6in



⑬ X1

Back panel
18.43*12.44*0.16in



⑭ X2

Drawer left
9.85*3.15*0.6in



⑮ X2

Drawer right
9.85*3.15*0.6in



⑯ X2

Drawer back
15.83*3.15*0.6in



⑰ X2

Drawer bottom
16.22*9.6*0.16in




⑱ X2

Drawer front
19.05*5.9*0.6in


HARDWARE LIST




Cam Bolt & Cam Lock
F7*31 F15*11

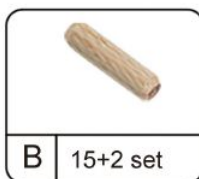

Wood Dowel
F8*30

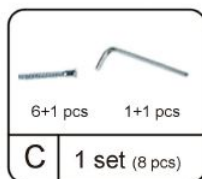


Screw & Allen Key
F5*40

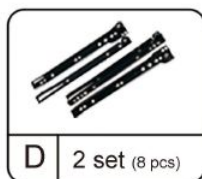


Slide rail
F20*250




Screw
F3.5*14

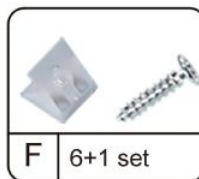


Rear panel hook & Screw
F3*14

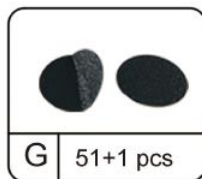

Hole cover
F20

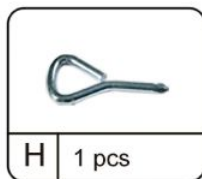

Screw driver

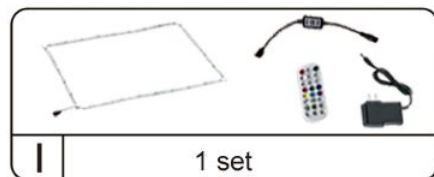

Light strip






Insert nut
F10*11
If the nut is missing from the panel,
use a hammer to drive in the spare nut.



Attention:


1. Please place the product on the carpet or carton to assemble to avoid scratching the floor;
2. During the installation process, keep away from children and pets, and avoid accidentally swallowing spare parts;
3. It is recommended to use a low-speed electric drill for installation.

Step 1

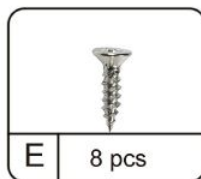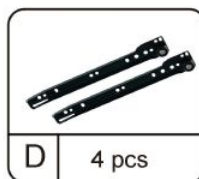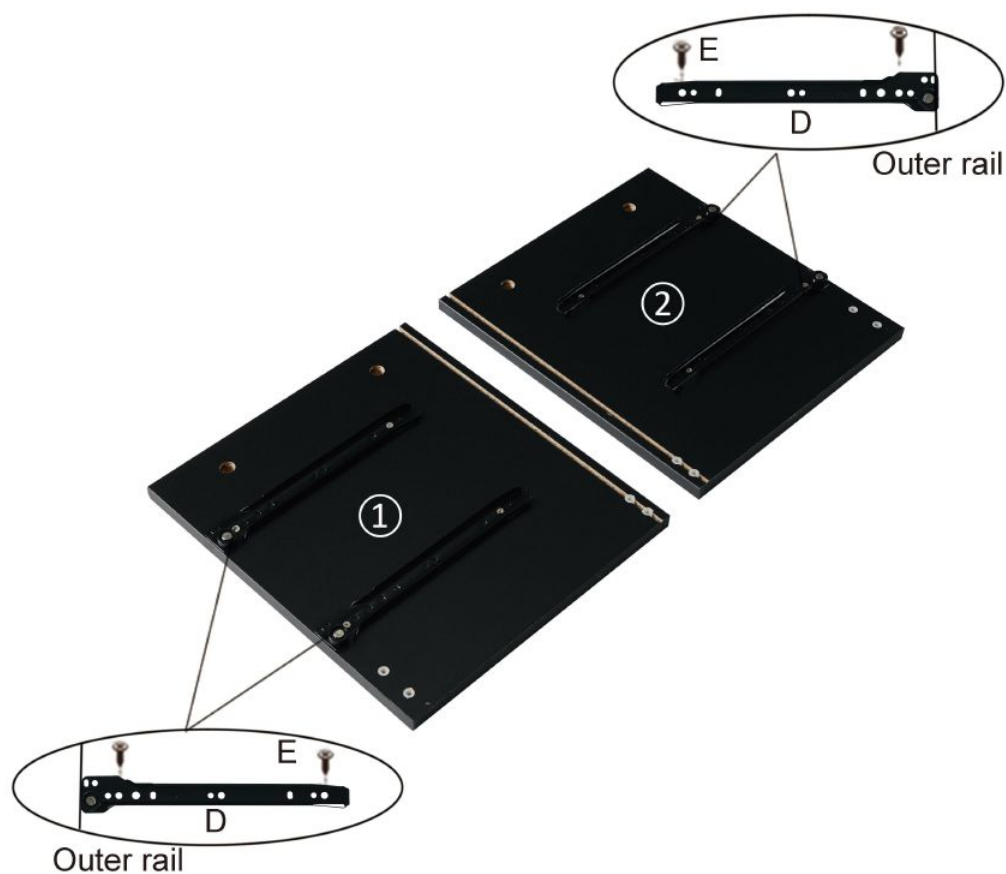

INSTRUCTION MANUAL



Step 2

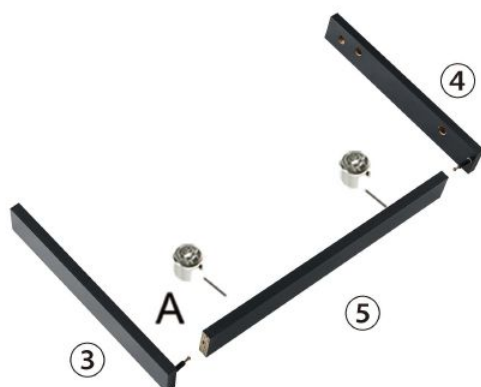

(Attention: Cam bolt & Insert nut need to be put together)





Step 3

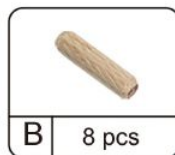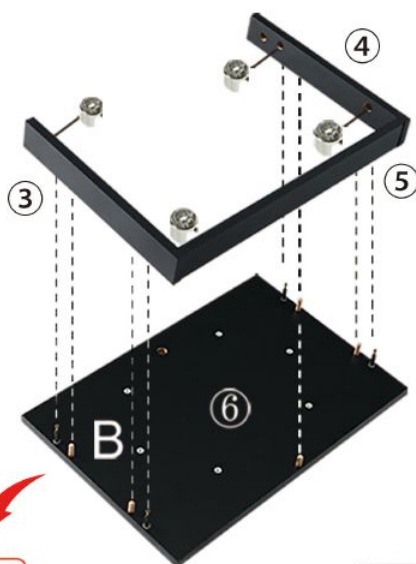


INSTRUCTION MANUAL

Step 4

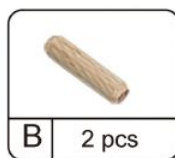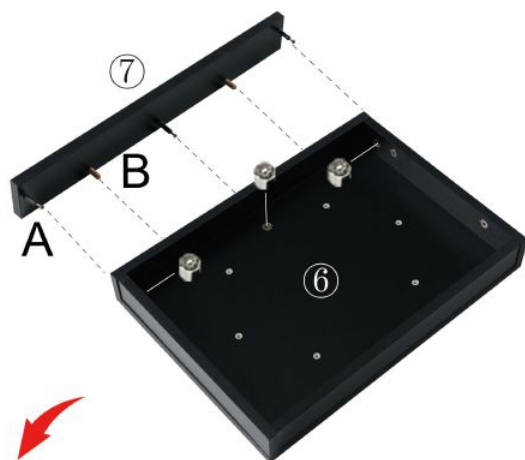

Step 5

Note: the direction of ⑧, ⑨

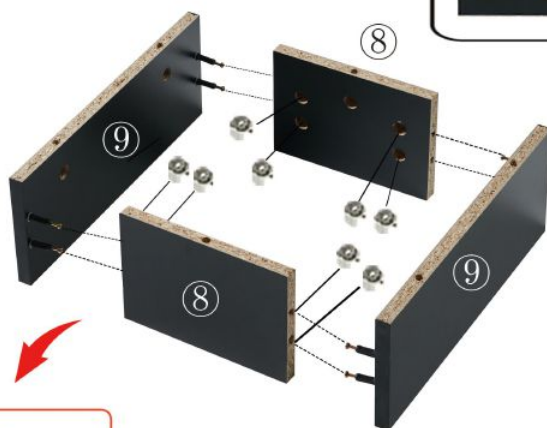

INSTRUCTION MANUAL

Step 6



Stick light strip to the ⑥

Note1: The direction of the light strip.


Note2: After the Light strip is pasted incorrectly, it should be gently removed to prevent damage.

Note3: When the light strips are connected to each other, the plus sign "+" must correspond, please ignore the letter "RGB".



Step 7



Front ⑦

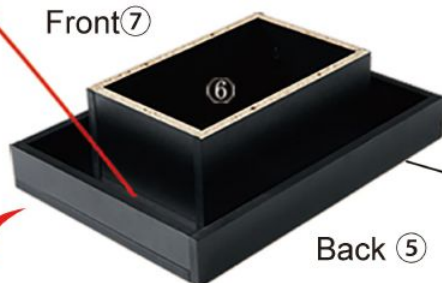


Back ⑤

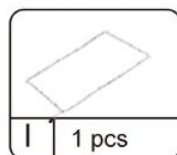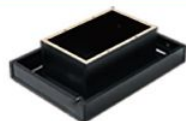



INSTRUCTION MANUAL

Step 8


Use the Allen key from the parts kit to screw the screws into the plate in a clockwise direction.

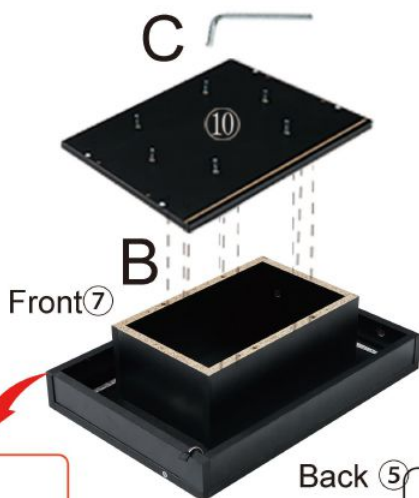

Back ⑤

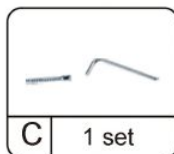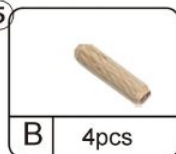



Step 9

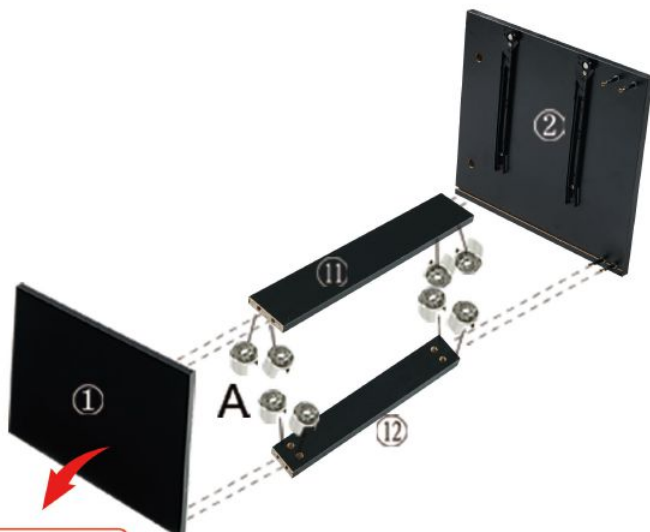


Step 10



Step 11

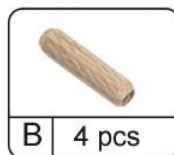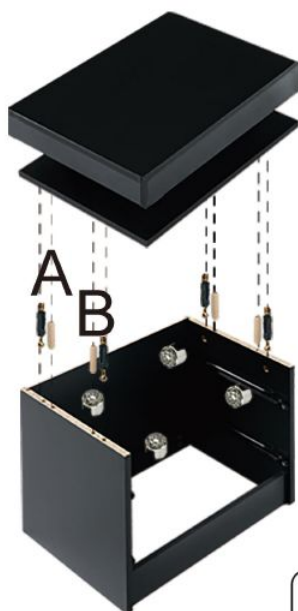


Step 12 X2

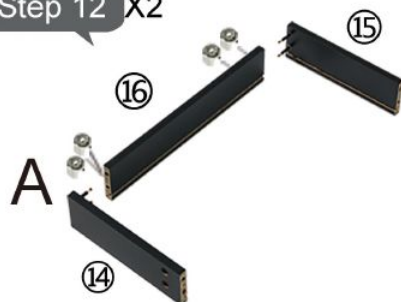

1. Connect part 14&15 to 16




2. Insert part 17

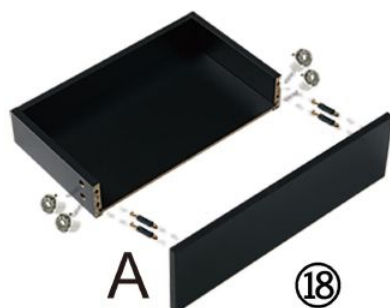

3. Connect part 18



4. Install hardware "D" to part 14 & 15 according to the pre-drilled holes

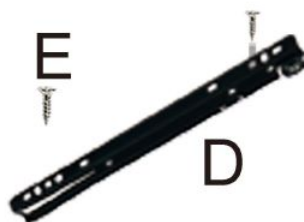

D

E




X2




A

16 set

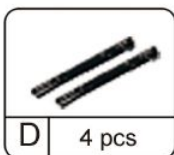

D

4 pcs

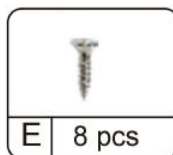

E

8 pcs


Step 13



Step 14



As the picture shows,
fix hardware "F" into the gap with screws
to make the back panel more stable.

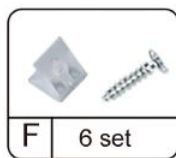


F

6 set

Step 15

Attention:

- The plastic cover prevents the light strip interface from falling off from the controller.
- You can operate the advanced remote control in any direction to switch mode or light.

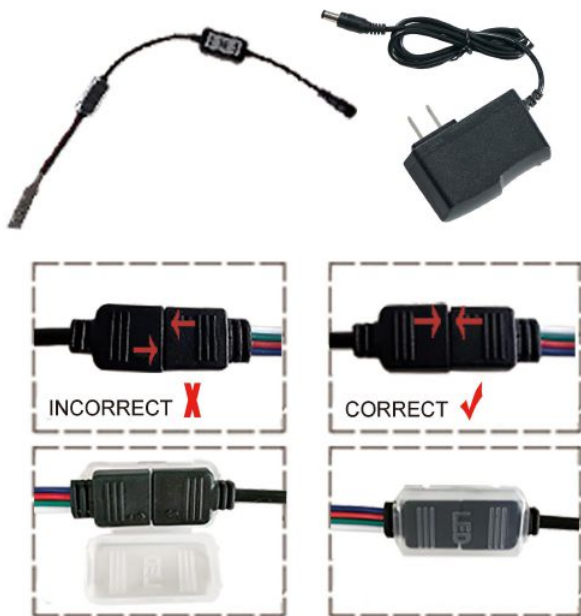


1.If the plastic cover falls off, connect the light strip plug to the adapter socket correctly



2.Take out the remote control gasket




Step 16

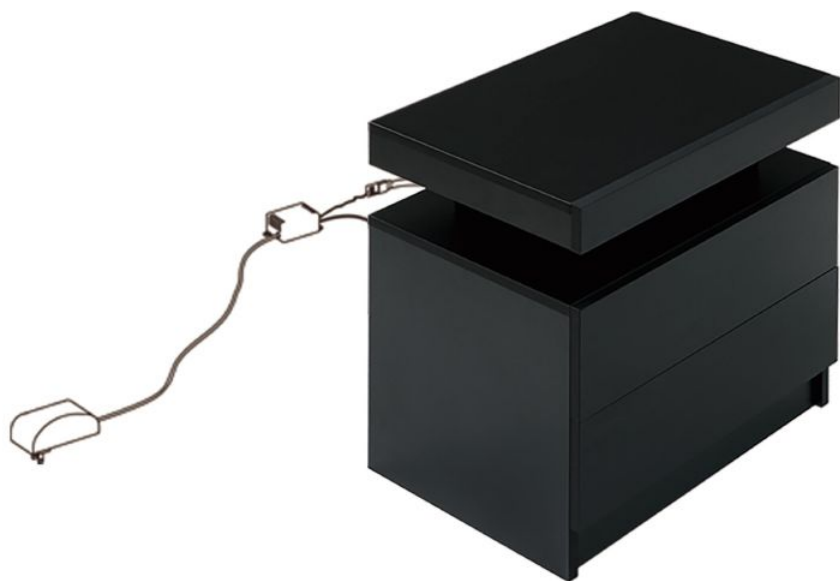

A/C

Please stick the hardware "G" on the exposed cam lock hole that makes your product more beautiful.

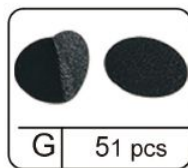



Congratulations on successful installation!!!