
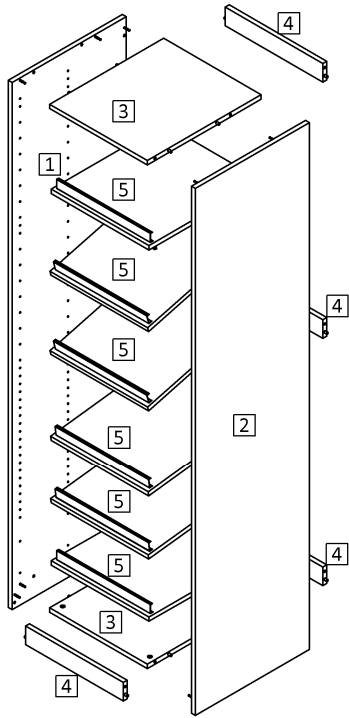


ASSEMBLY INSTRUCTIONS

BOX 09




- ASSEMBLY INSTRUCTIONS:**
- 1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;
 - 2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;
 - 3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;
 - 4- DO NOT USE ABRASIVES SOLUTIONS;

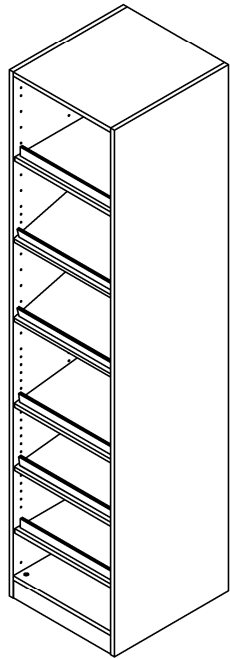


PART LIST		
PART NUMBER	Qty	DESCRIPTION:
1	1	LEFT SIDE PANEL
2	1	RIGHT SIDE PANEL
3	2	BOTTOM/TOP PANEL
4	4	FRAME
5	6	SHOE RACKS






CABINET ASSEMBLY

CABINET HARDWARES	16	16	16
			
CAM LOCK SCREWS			
CAM LOCK			
DOWEL 5/16 X 1 3/16			

STEP 01 PREPARATION OF THE SIDE PANELS


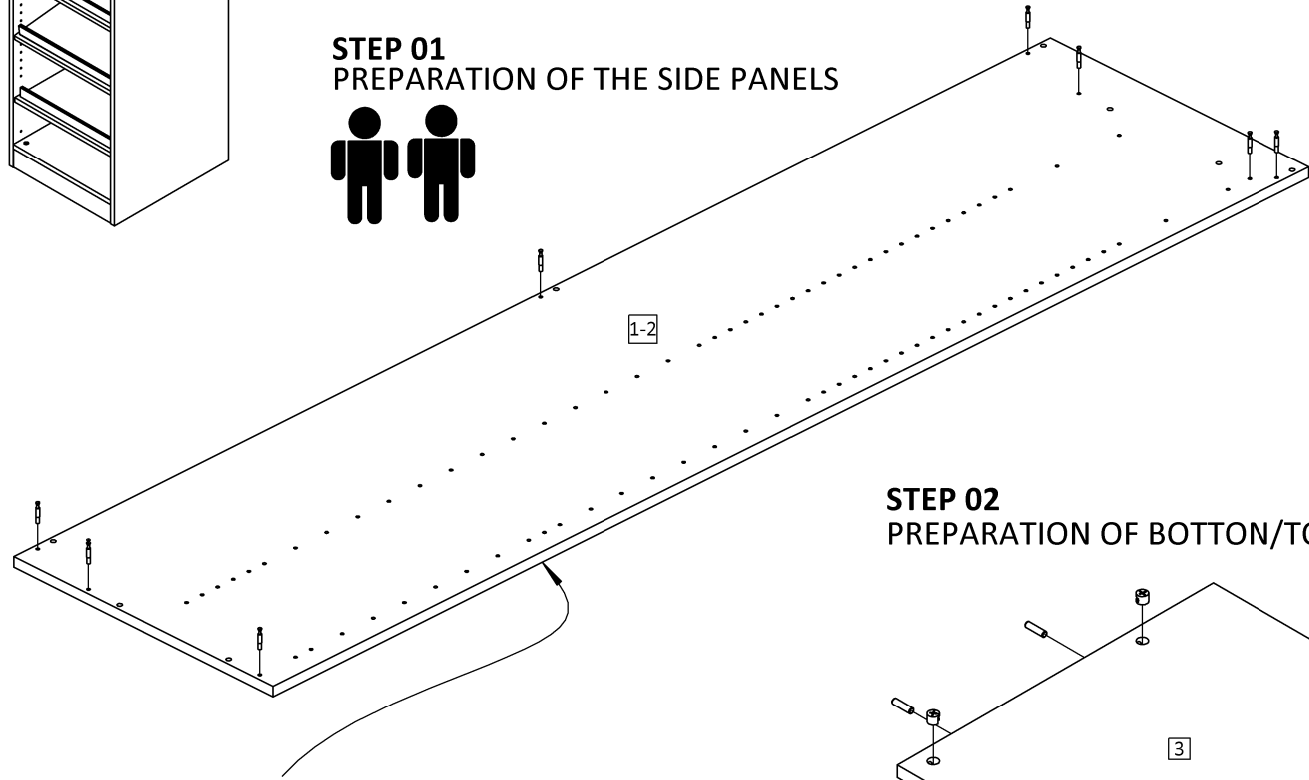


STEP 02 PREPARATION OF BOTTOM/TOP PANELS

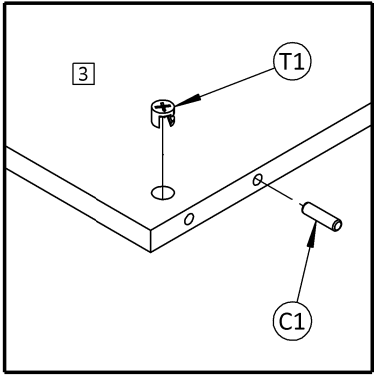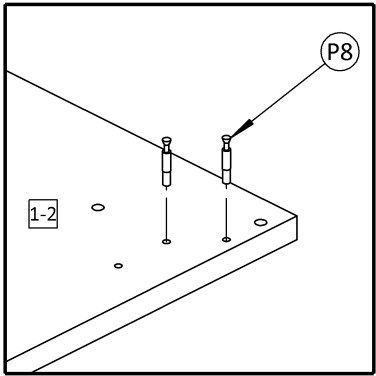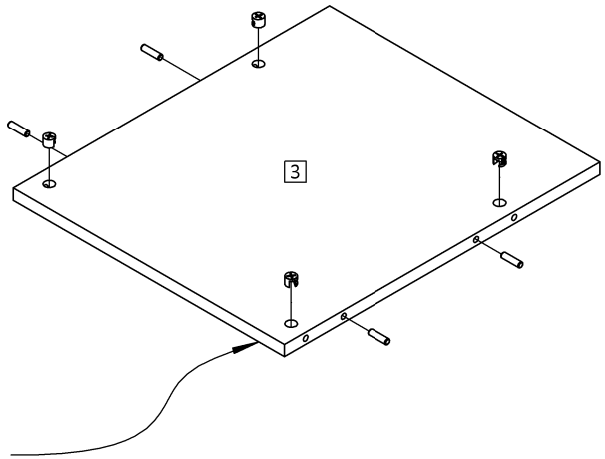

**ASSEMBLY INSTRUCTIONS**

BOX 09

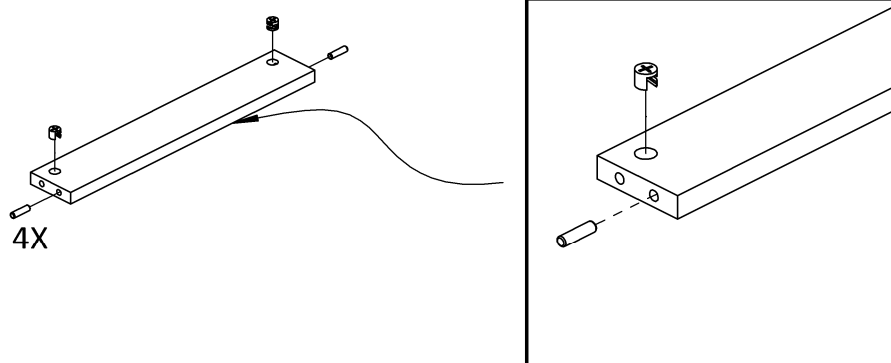
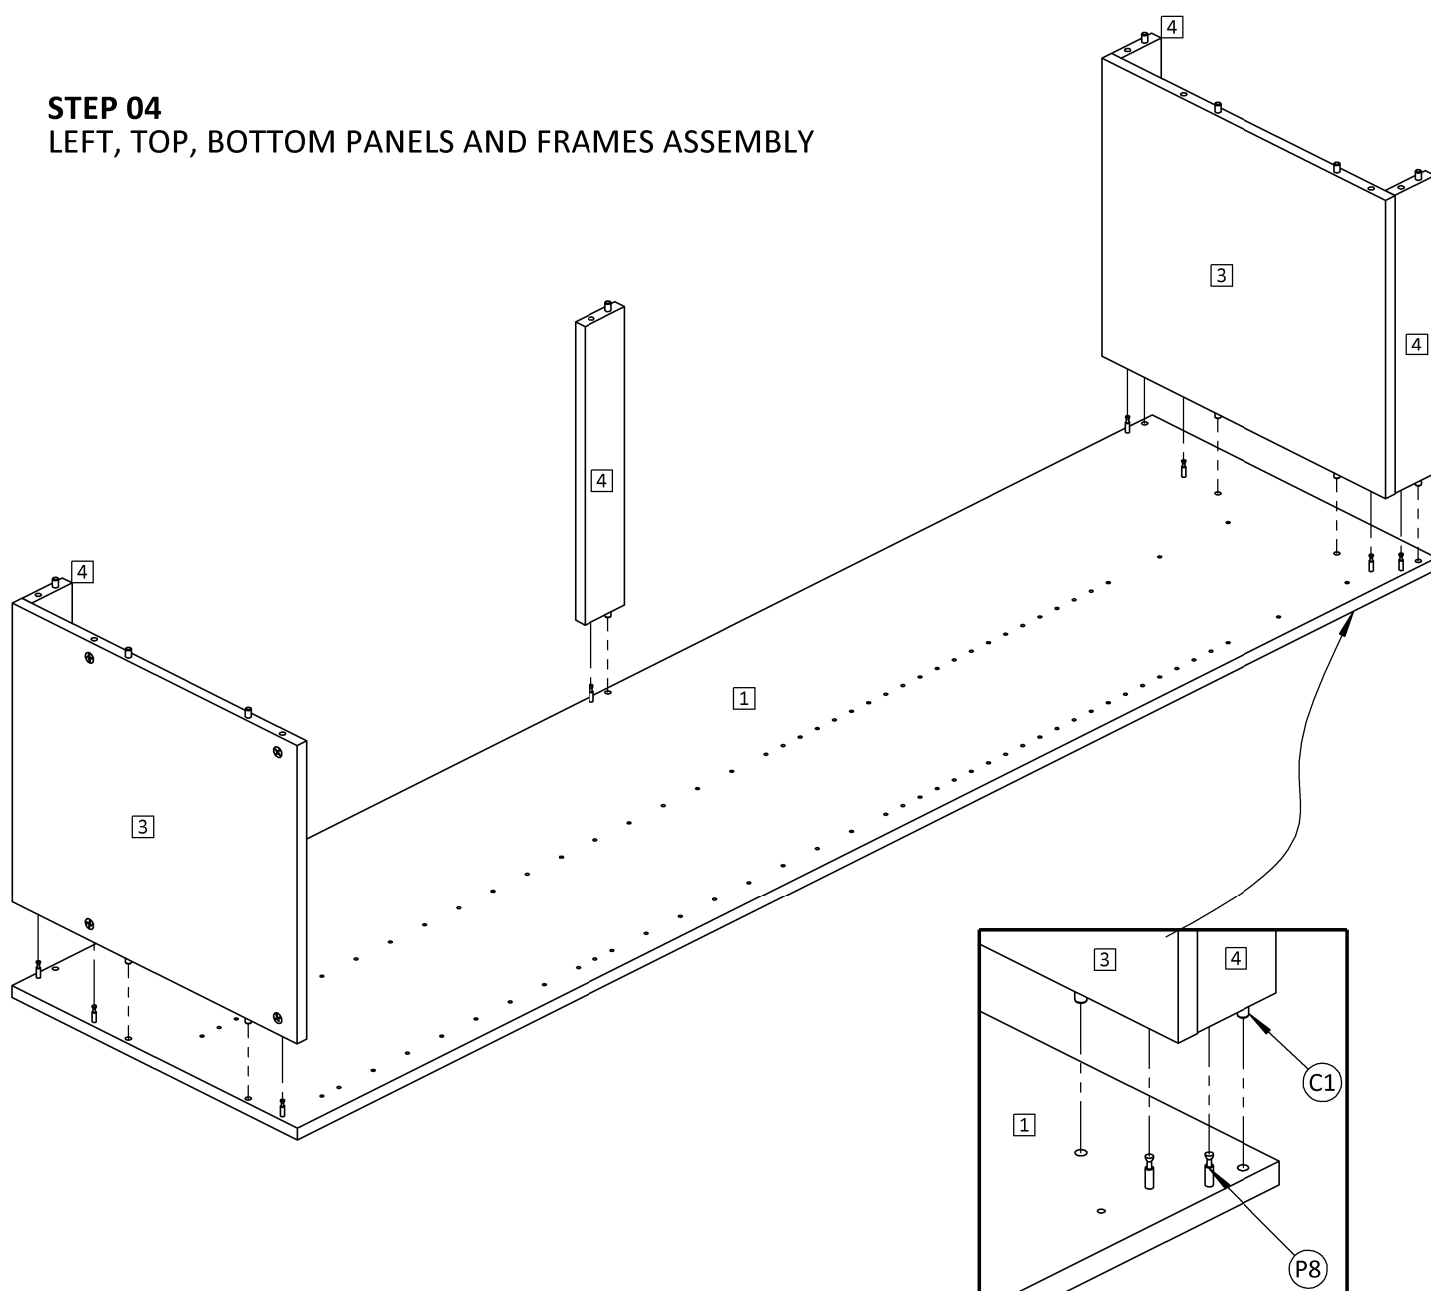
STEP 03
PREPARATION OF THE FRAMES**STEP 04**
LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY

ASSEMBLY INSTRUCTIONS

BOX 09


STEP 05

RIGHT SIDE PANEL ASSEMBLY

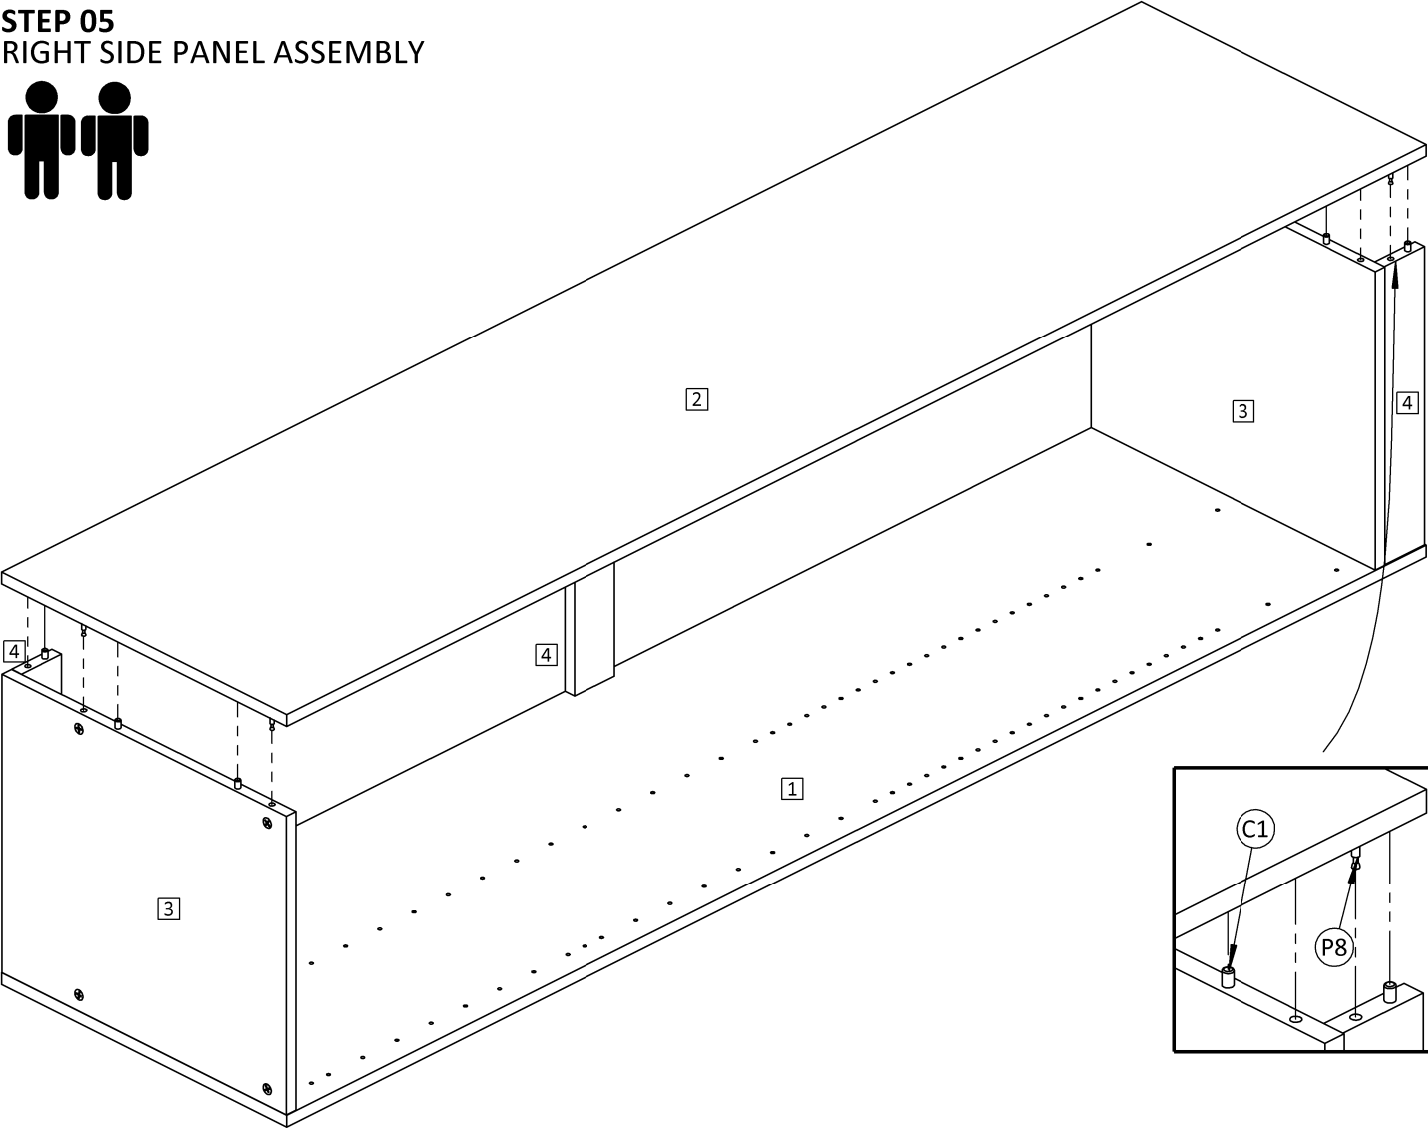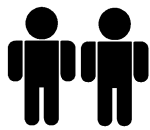


SHOE RACK ASSEMBLY

Item 5 - Shoe Rack


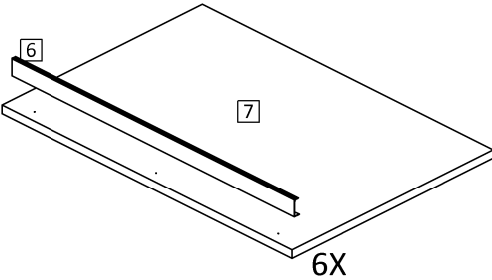


PART LIST		
PART NUMBER	QTY	DESCRIPTION:
6	6	METAL FILLER
7	6	SHOE RACK

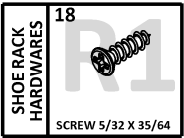

STEP 06

SHOE RACK ASSEMBLY

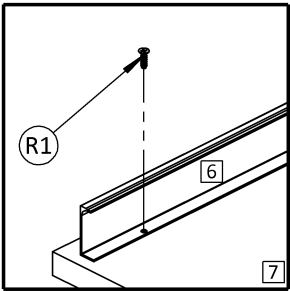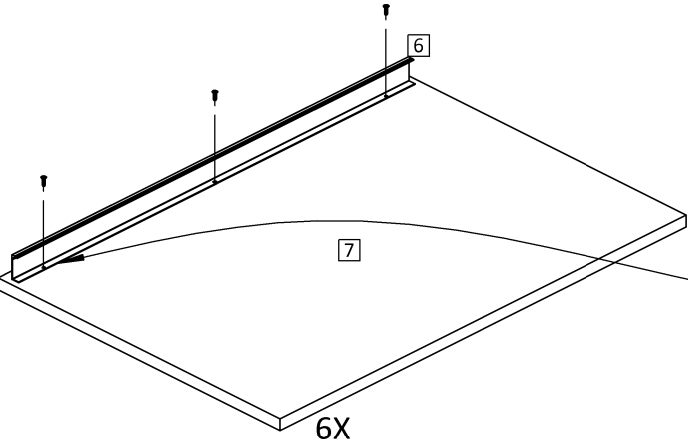

STEP 07

FIXING THE CABINET ON THE WALL

FIXING THE CABINET

Rev.01



REF.: MCL017




DRILL THE WALL
USING A DRILLER
IN ORDER TO
INSERT THE PLUG

ASSEMBLY INSTRUCTIONS



BOX 09




IT IS REQUIRED TO FIX
THE CABINETS ON THE WALL
RISK OF FALL!



FIXING HARDWARES	06	06	06	08
	SCREW 5/32 X 2 3/4	SCREW 1/4 X 2 3/4	PLASTIC PLUG	SCREW 9/64 X 1 1/4

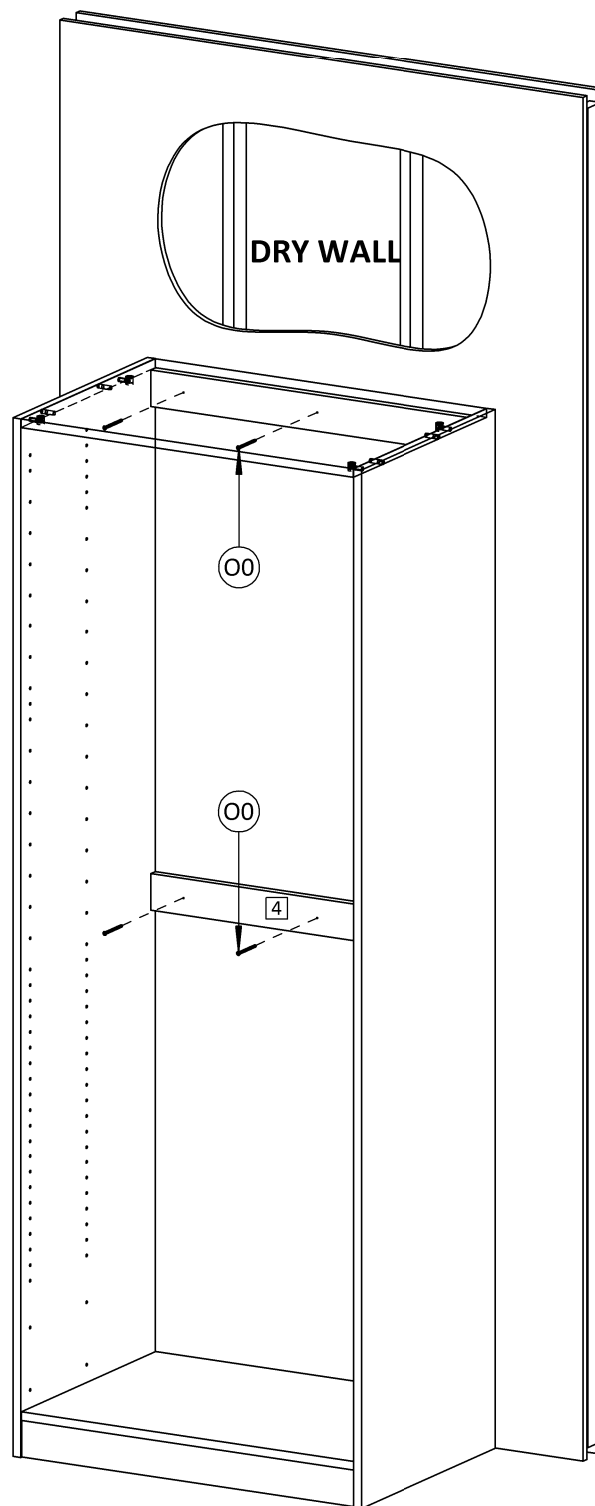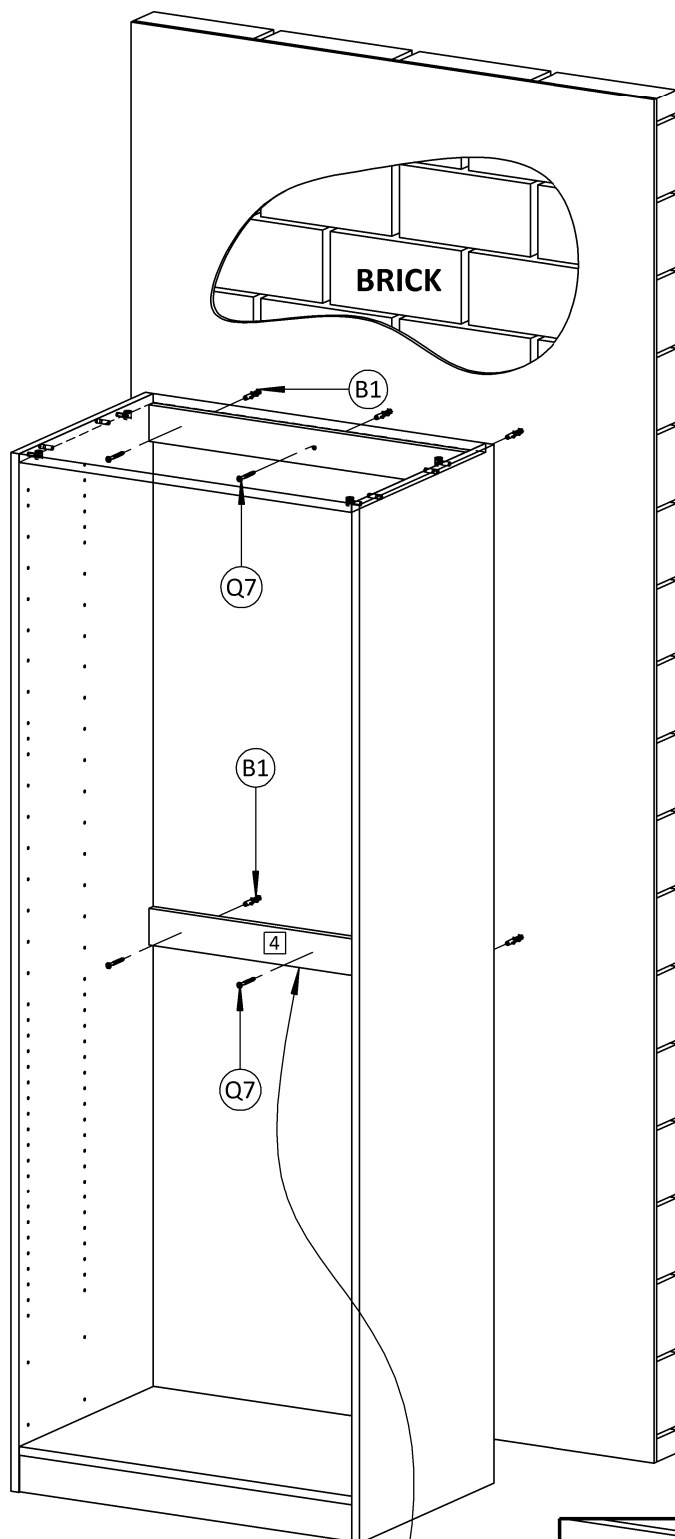

SCREW IN THE CENTER
OF THE FRAME

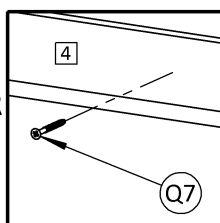

THE CABINET MUST ALWAYS BE
SUPPORTED ON THE GROUND





STEP 08

JOINING THE CABINETS

ASSEMBLY INSTRUCTIONS

BOX 09

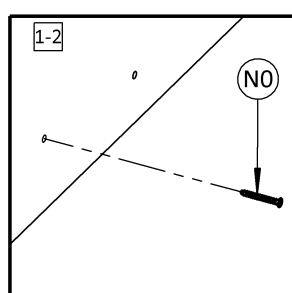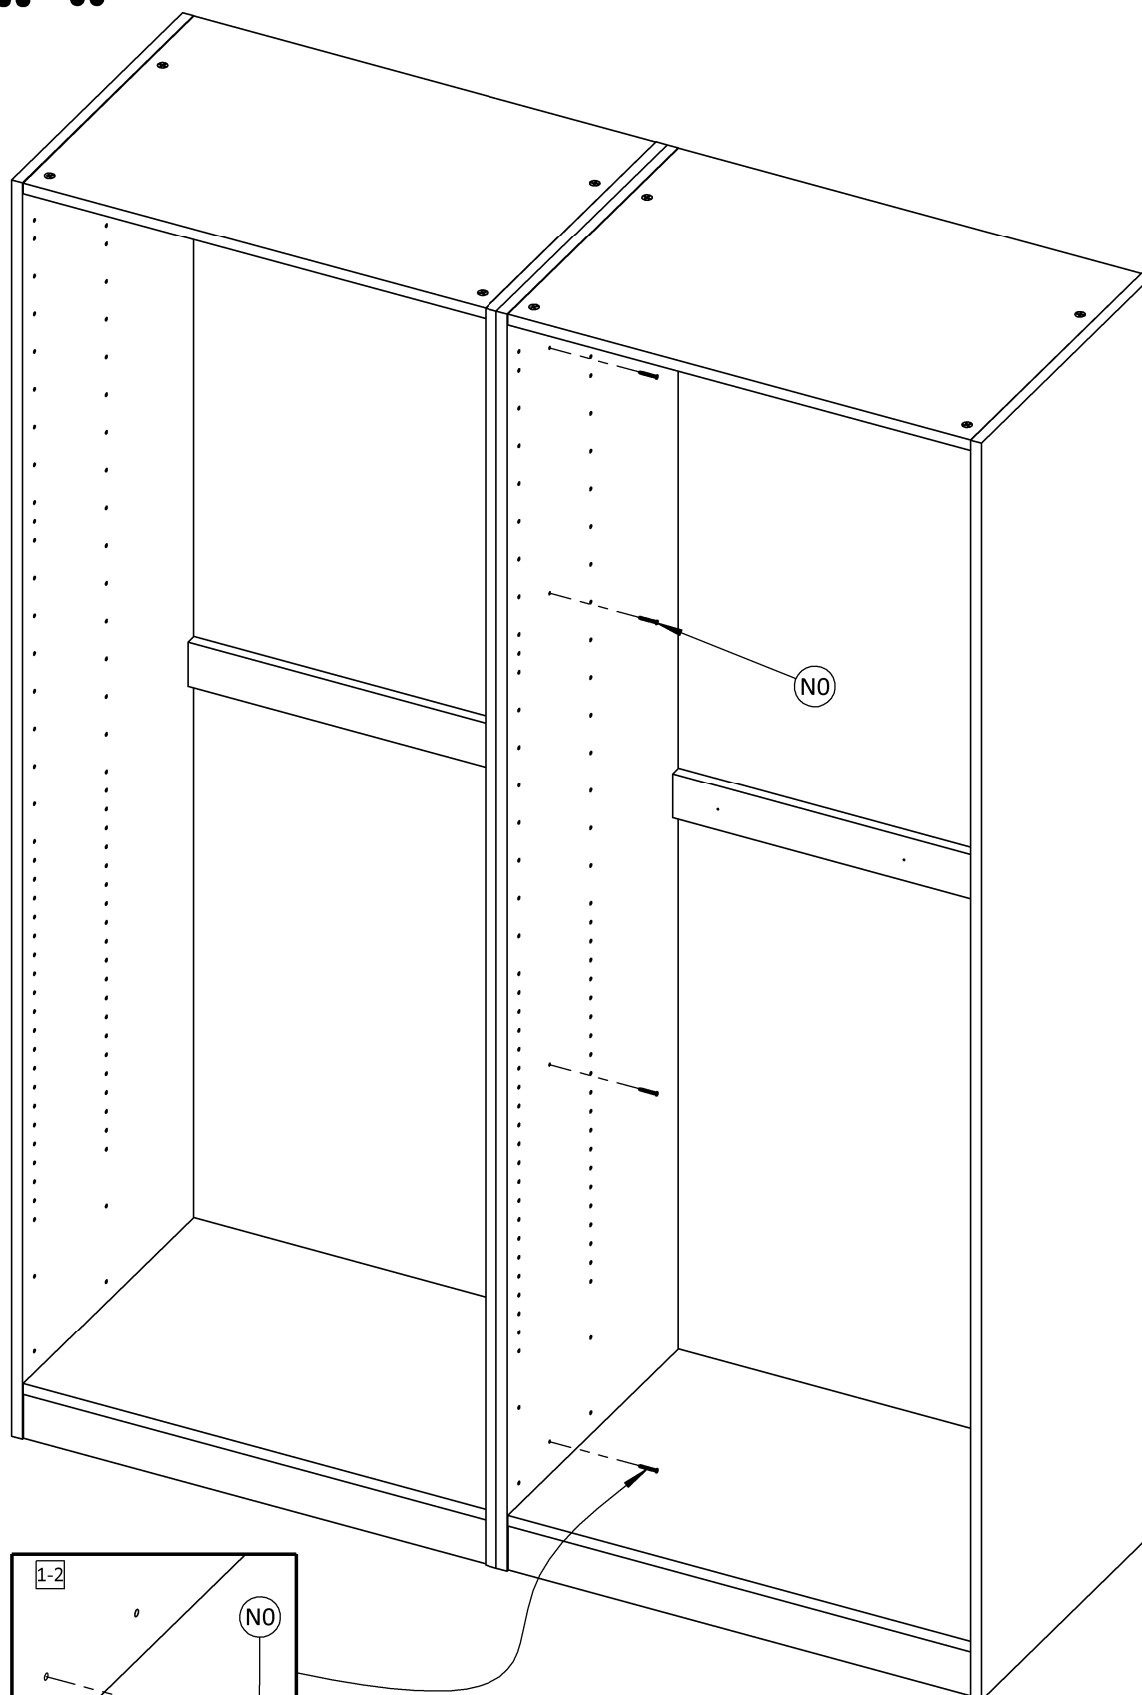






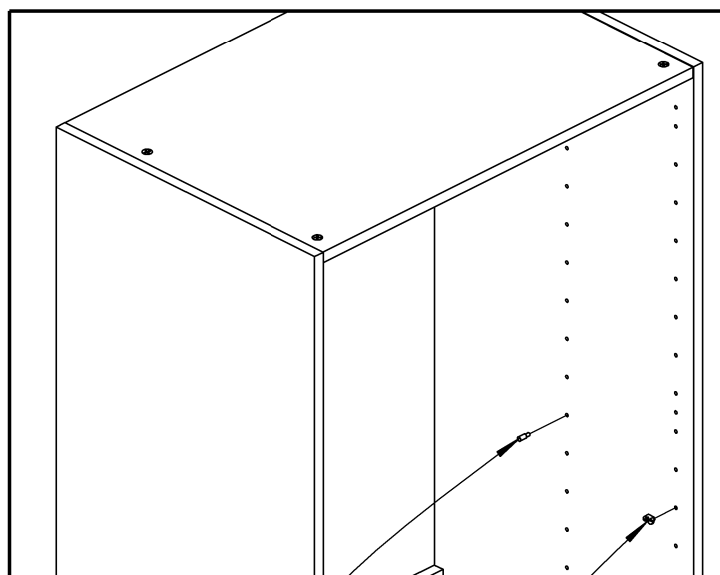
ASSEMBLY INSTRUCTIONS

BOX 09


FIXING THE SHOE RACK INSIDE THE CABINET

STEP 09 FIX THE SHOE RACK SUPPORTS ON THE SIDE PANNELS


FIXING SHOE RACK HARDWARES	12	12	12
			
	SHELF SUPPORT	SHOE RACK PIN	SCREW 15/64 X 33/64





BACK

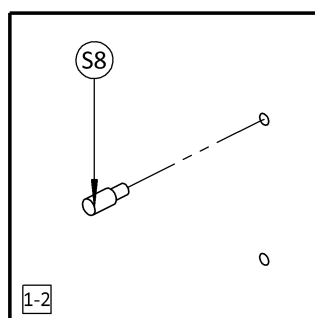

FRONTAL

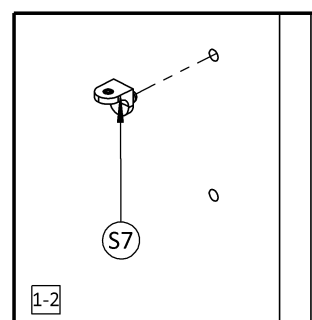

THE BACK PIN CAN BE FIXED UP 1,2" OR 2,5"
IN RELATION TO THE FRONTAL SUPPORT

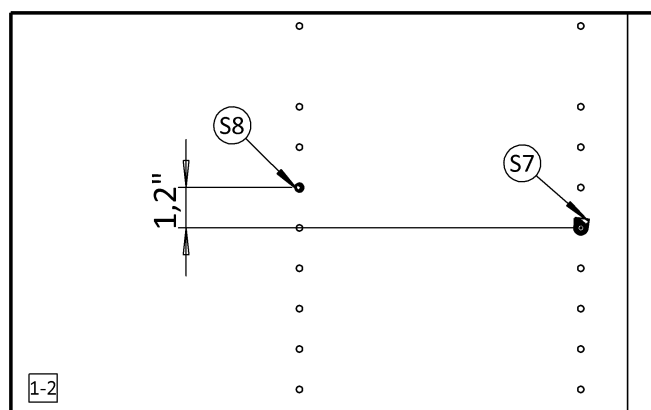
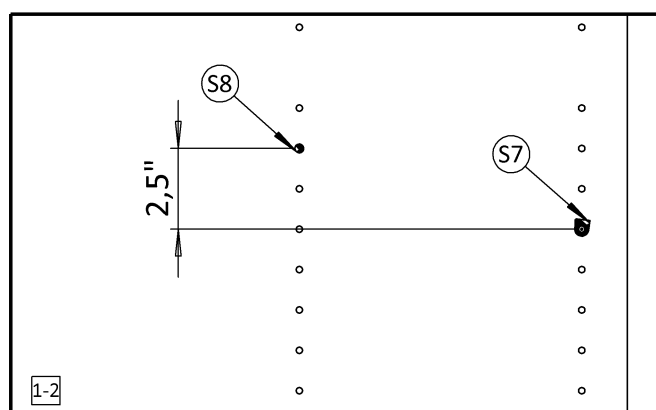


**STEP 10**

FIX SHOE RACK INSIDE THE CABINET

ASSEMBLY INSTRUCTIONS

BOX 09

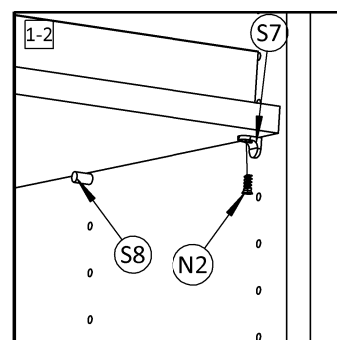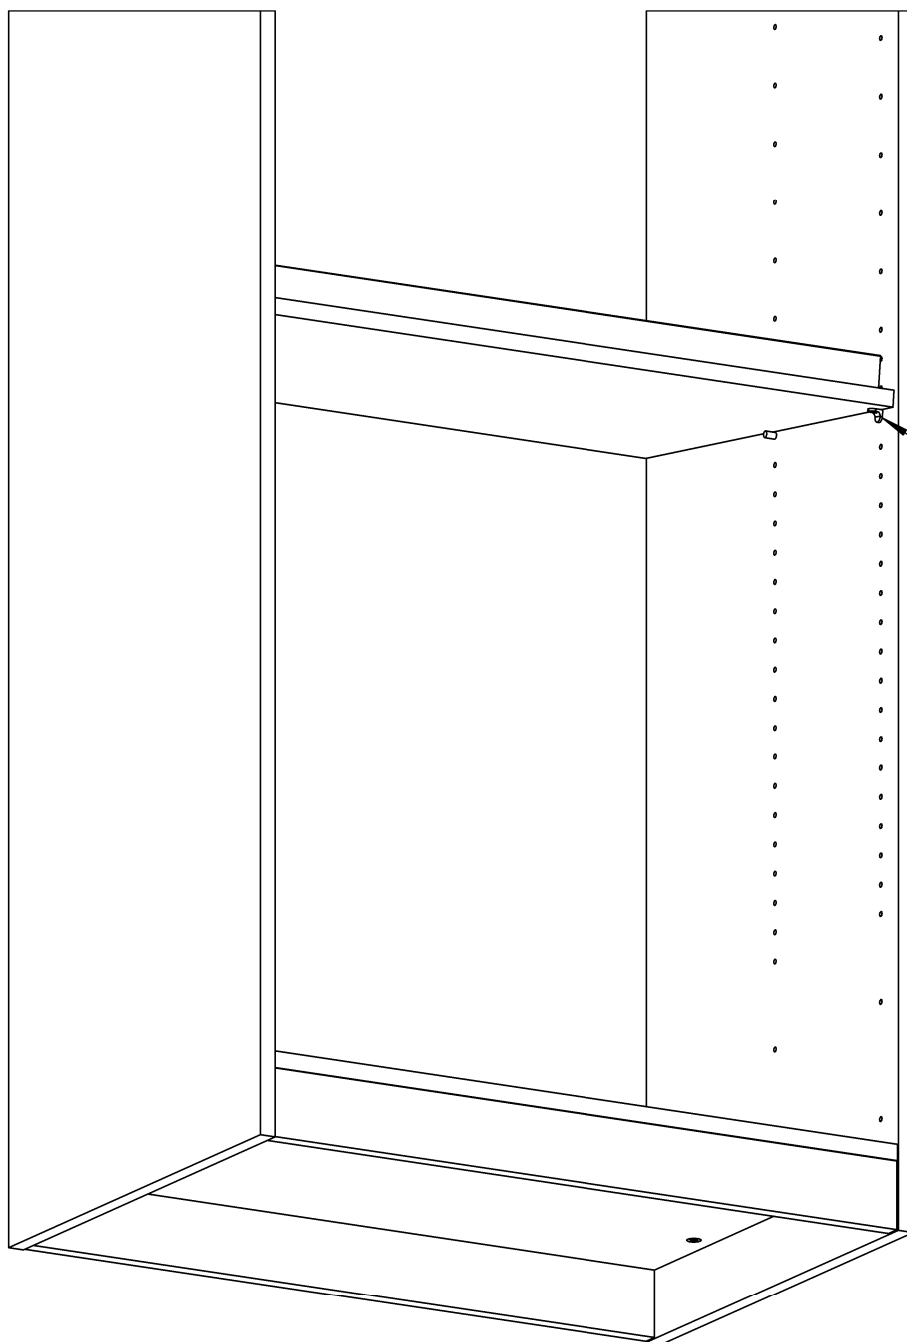FIX THE SHOE RACK SUPPORTS
ON THE SIDE PANNELS