


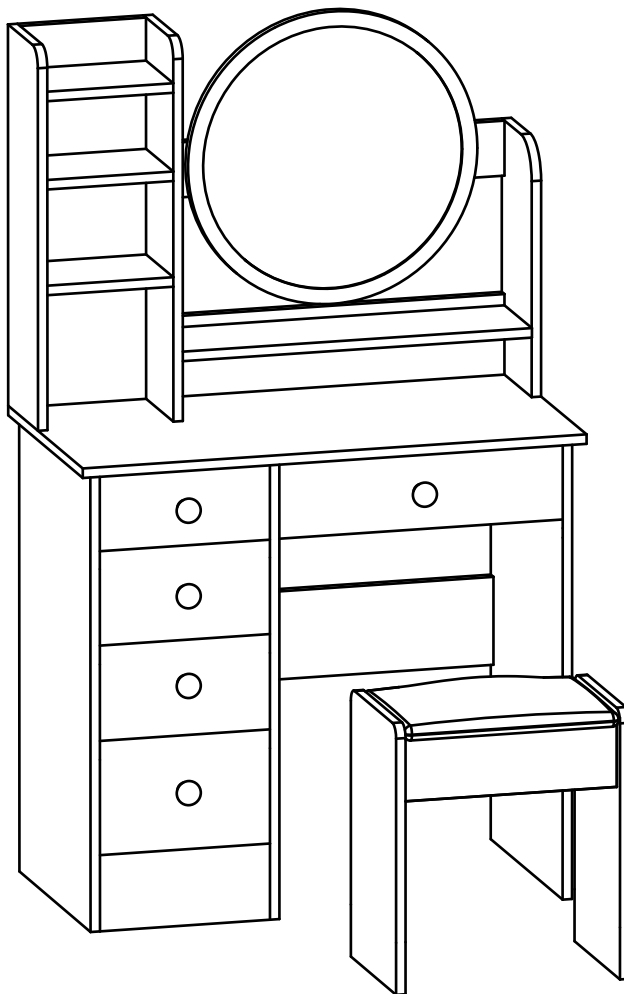


THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.



WARNING

- Unit can tip over causing severe injury or death.
- Anchor unit to stud in wall (if instructed to).
- Do Not allow children to climb on unit.
- Put heavy items on lower shelves or drawers.


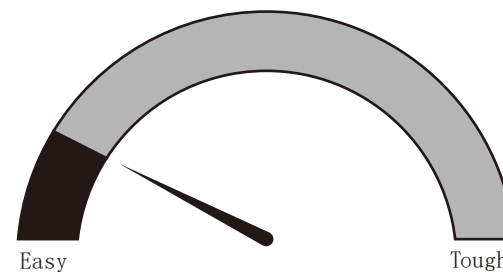


Assembly Difficulty Meter

Helpful Hints




PEOPLE NEEDED FOR ASSEMBLY: 1 - 2
ESTIMATED ASSEMBLY TIME: 1 HOUR







- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with a R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.







Before You Start

- ✓ — Read through each step carefully and follow the proper order
- ✓ — Separate and count all your parts and hardware
- ✓ — Give yourself enough room for the assembly process
- ✓ — Have the following tools: Hammer
- ✓ — Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight.
Failure to do so may result in stripping the screw.






A  Quickfit Screw 77 PCS	B  Camlock 77 PCS	C  Long screw 24 PCS	D  Long screw nut 24 PCS	E  Drawer limit screw 10 PCS
F  Handle screw 5 PCS	G  Small screw 8 PCS	H  2 PCS	I  Drawer handle 5 PCS	J  Screw of the mirror 3 PCS

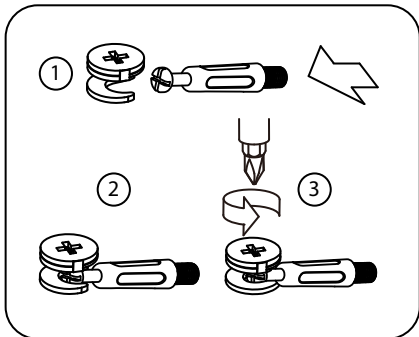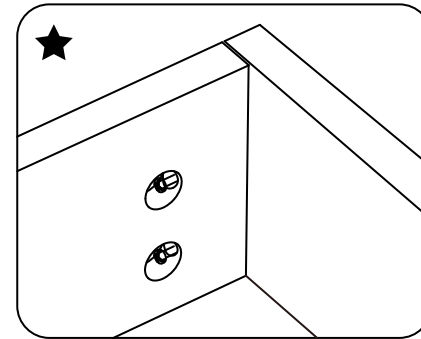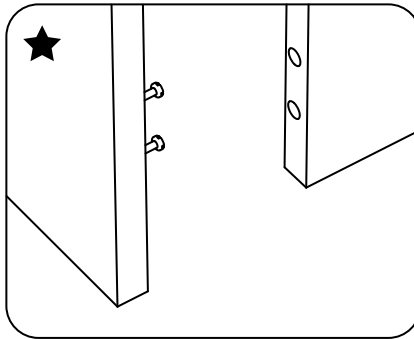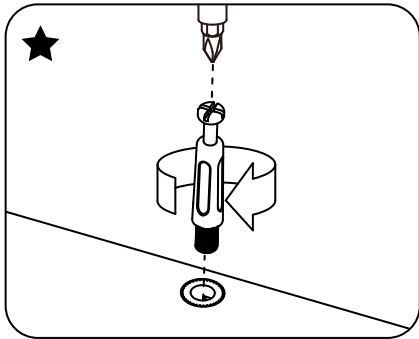



Parts assembly diagram

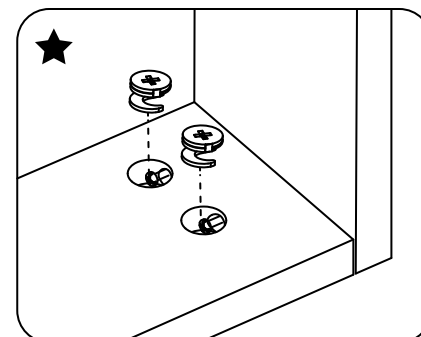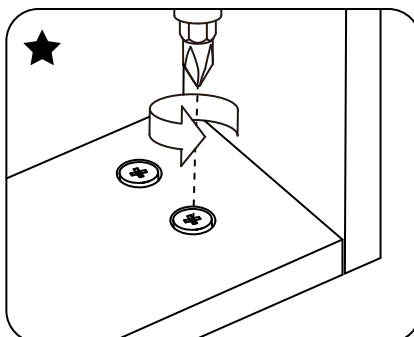


First install the drawer .

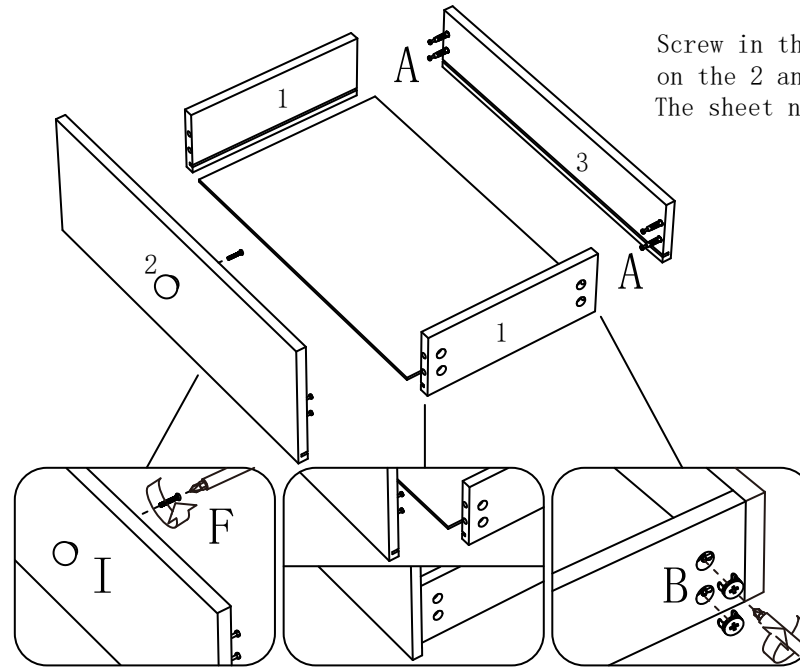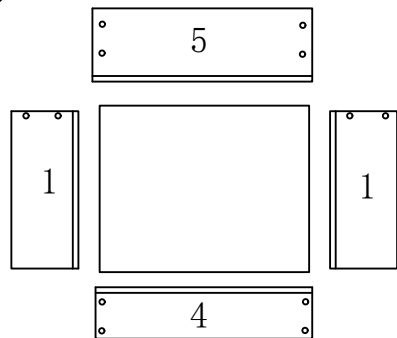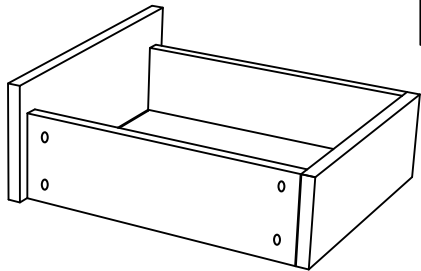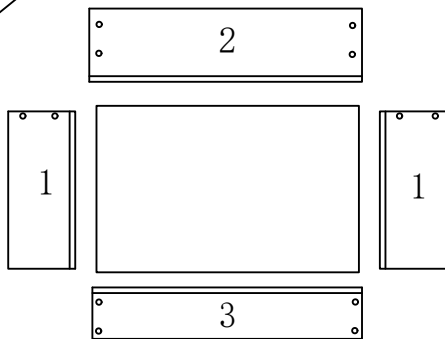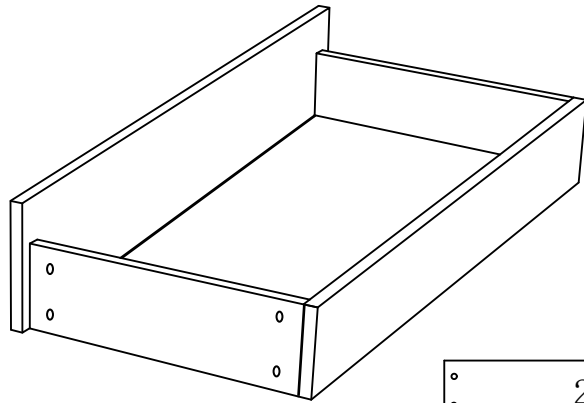


Screw in the eccentric screw
on the 2 and 3 plates first
The sheet needs to be aligned with the slot

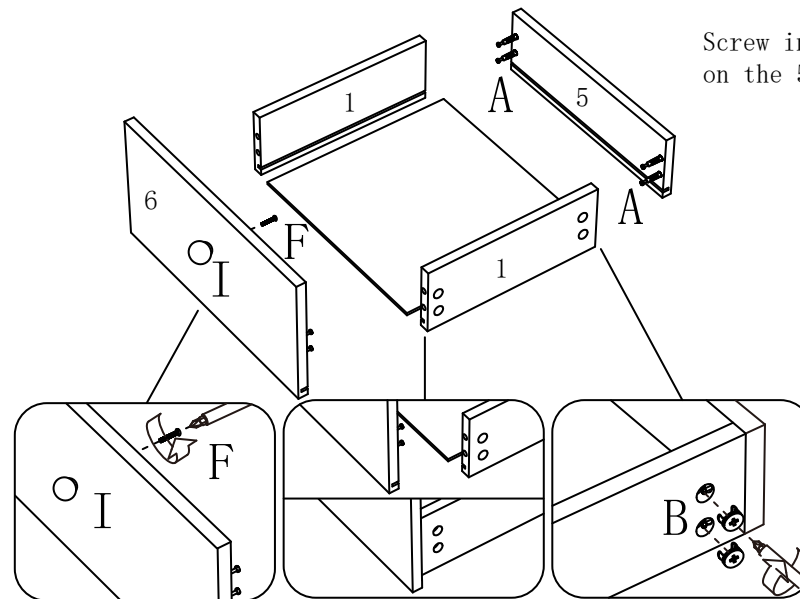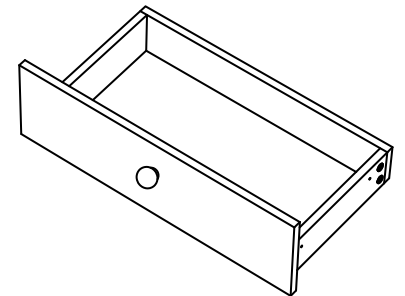

Screw in the eccentric screw
on the 5 and 6 plates first

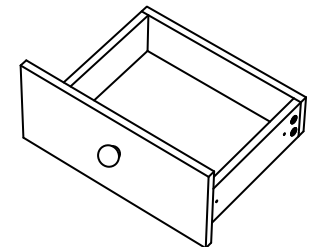



A  40PCS	B  40PCS	F  5PCS	I  5PCS	The installation steps of other drawers are the same
---	---	---	--	---

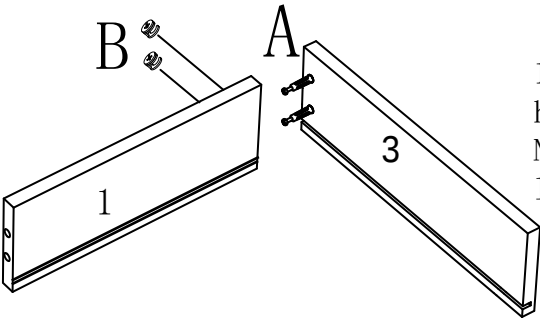

1. Screw A into the corresponding hole of No. 4 plate, then insert No. 1 plate into A, and finally lock A with B


2. Screw A into the corresponding hole of No. 2 plate, then insert No. 1 plate into A, and finally lock A with B

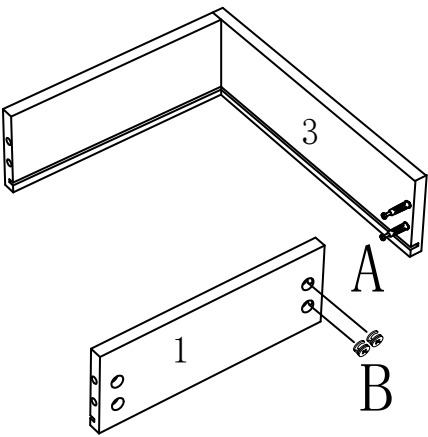

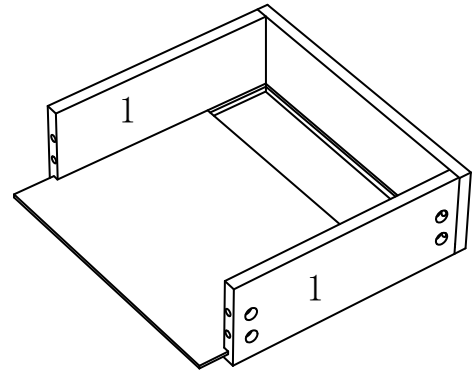

3. Align the sheet with the slot of plate 1 and push it forward


3. Align the sheet with the slot of plate 1 and push it forward

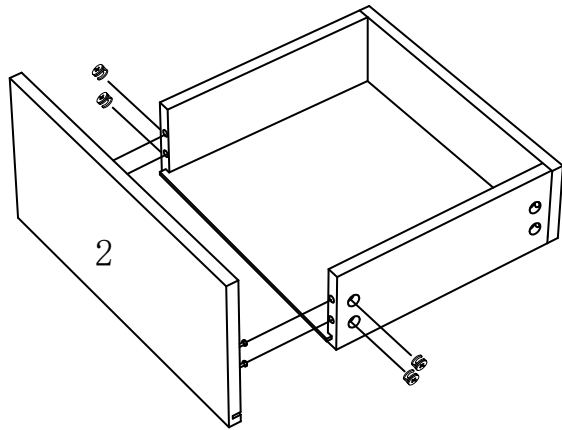

4. Screw A into the corresponding hole of No. 2 plate, then connect No. 2 plate with the previously installed part, and finally lock A with B for fixation

4. Screw A into the corresponding hole of No. 2 plate, then connect No. 2 plate with the previously installed part, and finally lock A with B for fixation

5. Fix I in front of plate 2 with F









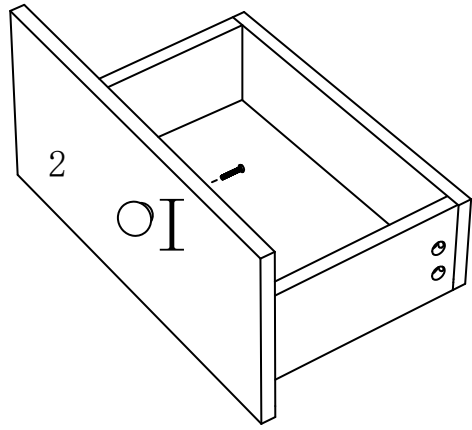


First install the drawer .

Screw in the eccentric screw on the 4 and 6 plates first

Screw in the eccentric screw on the 7 and 8 plates first

X2

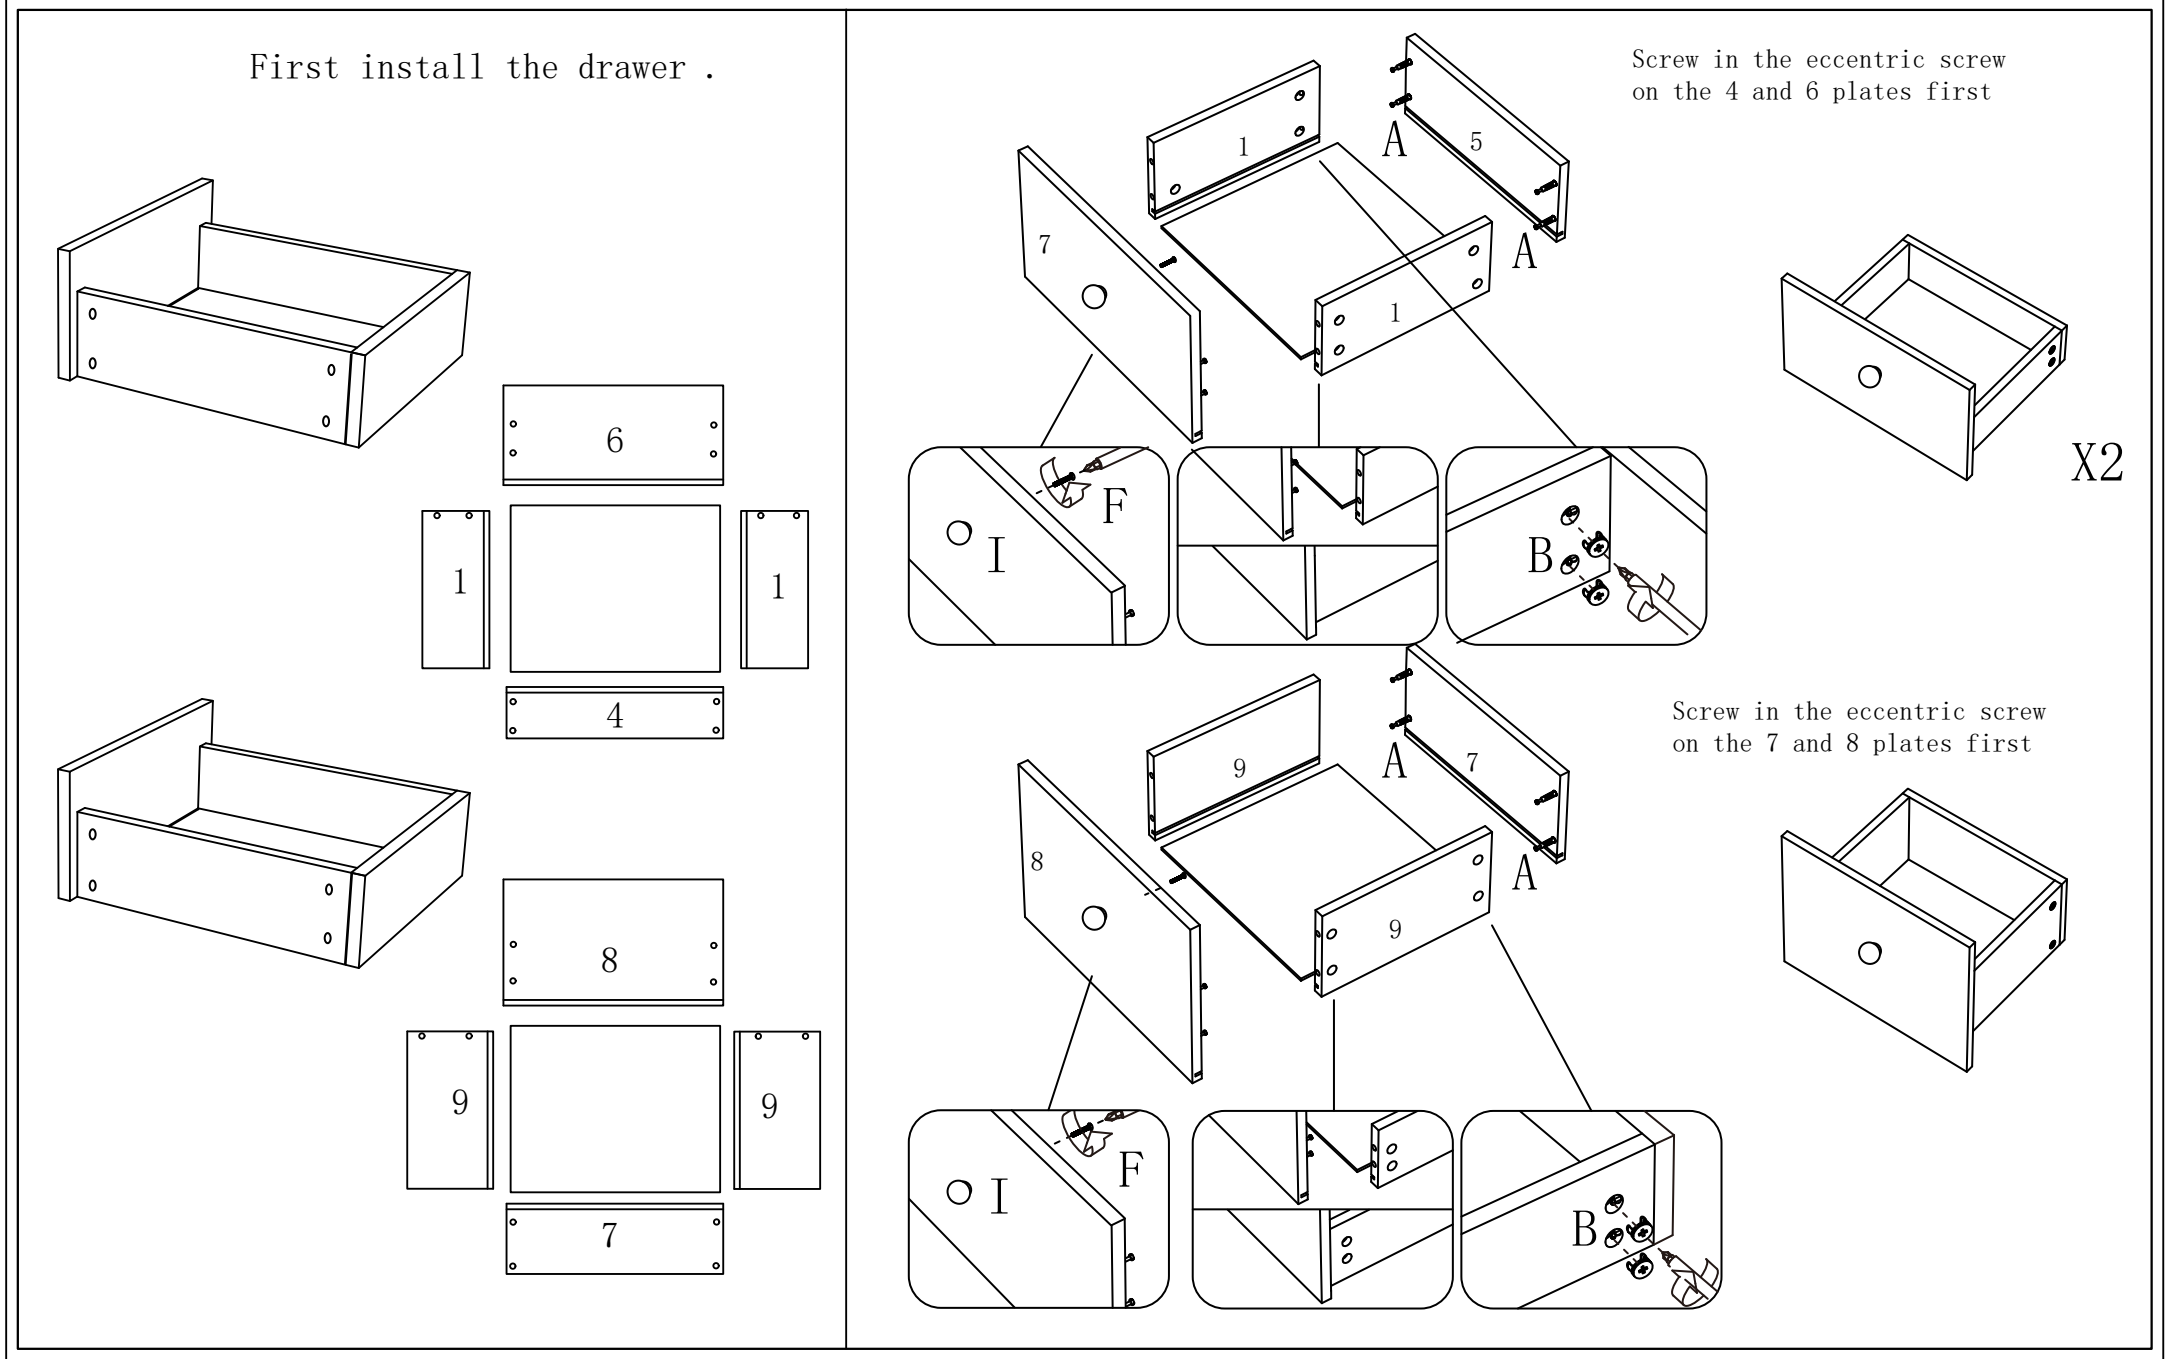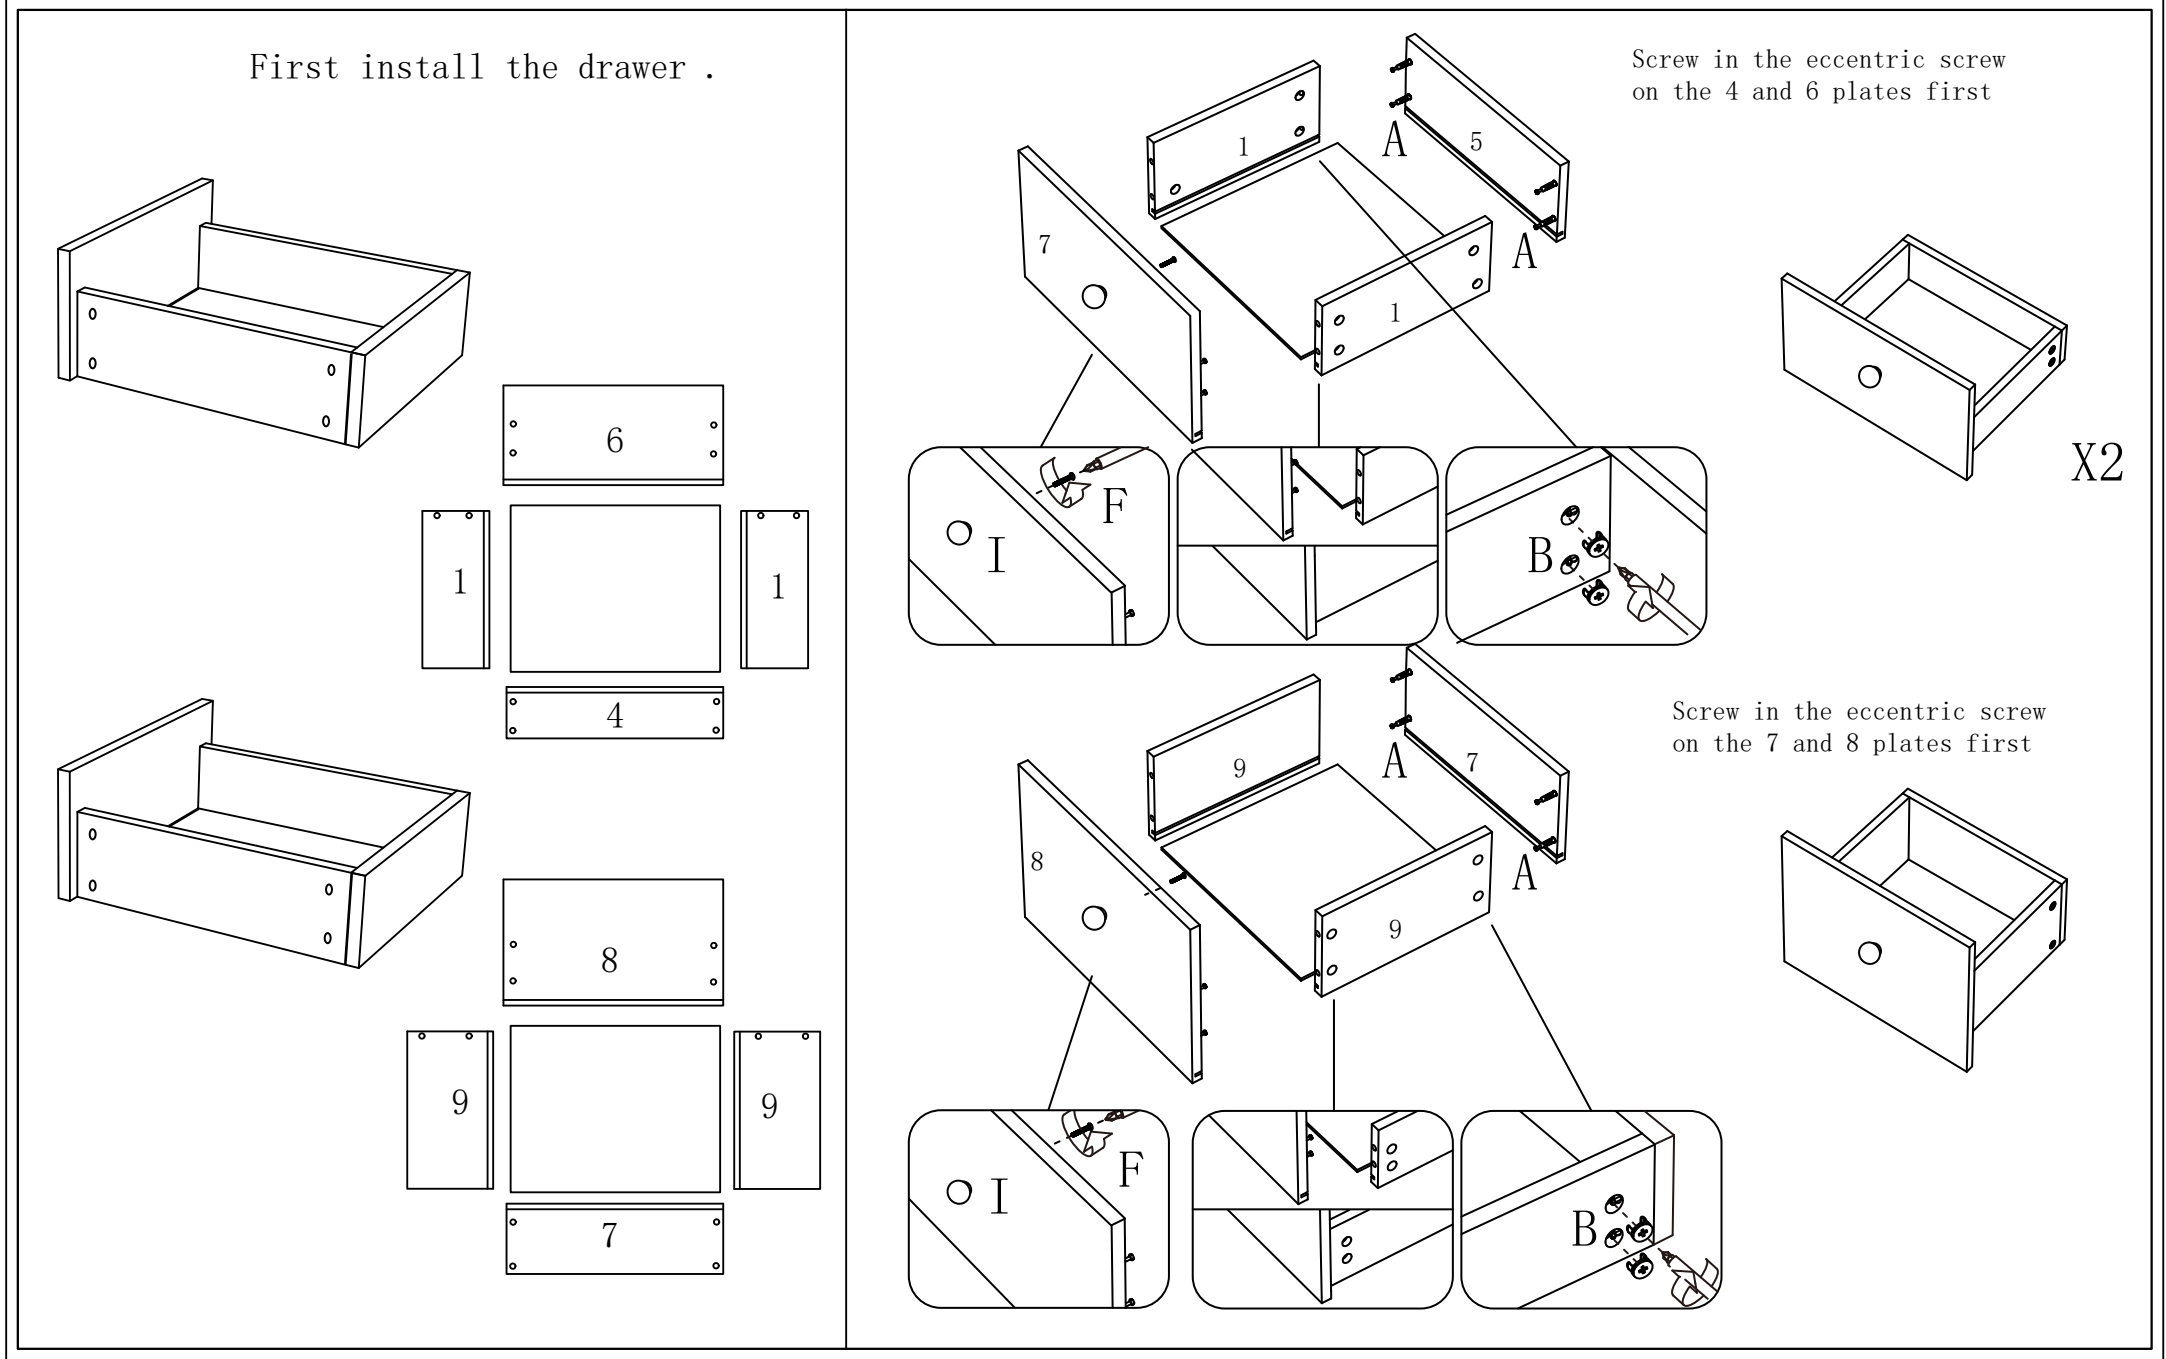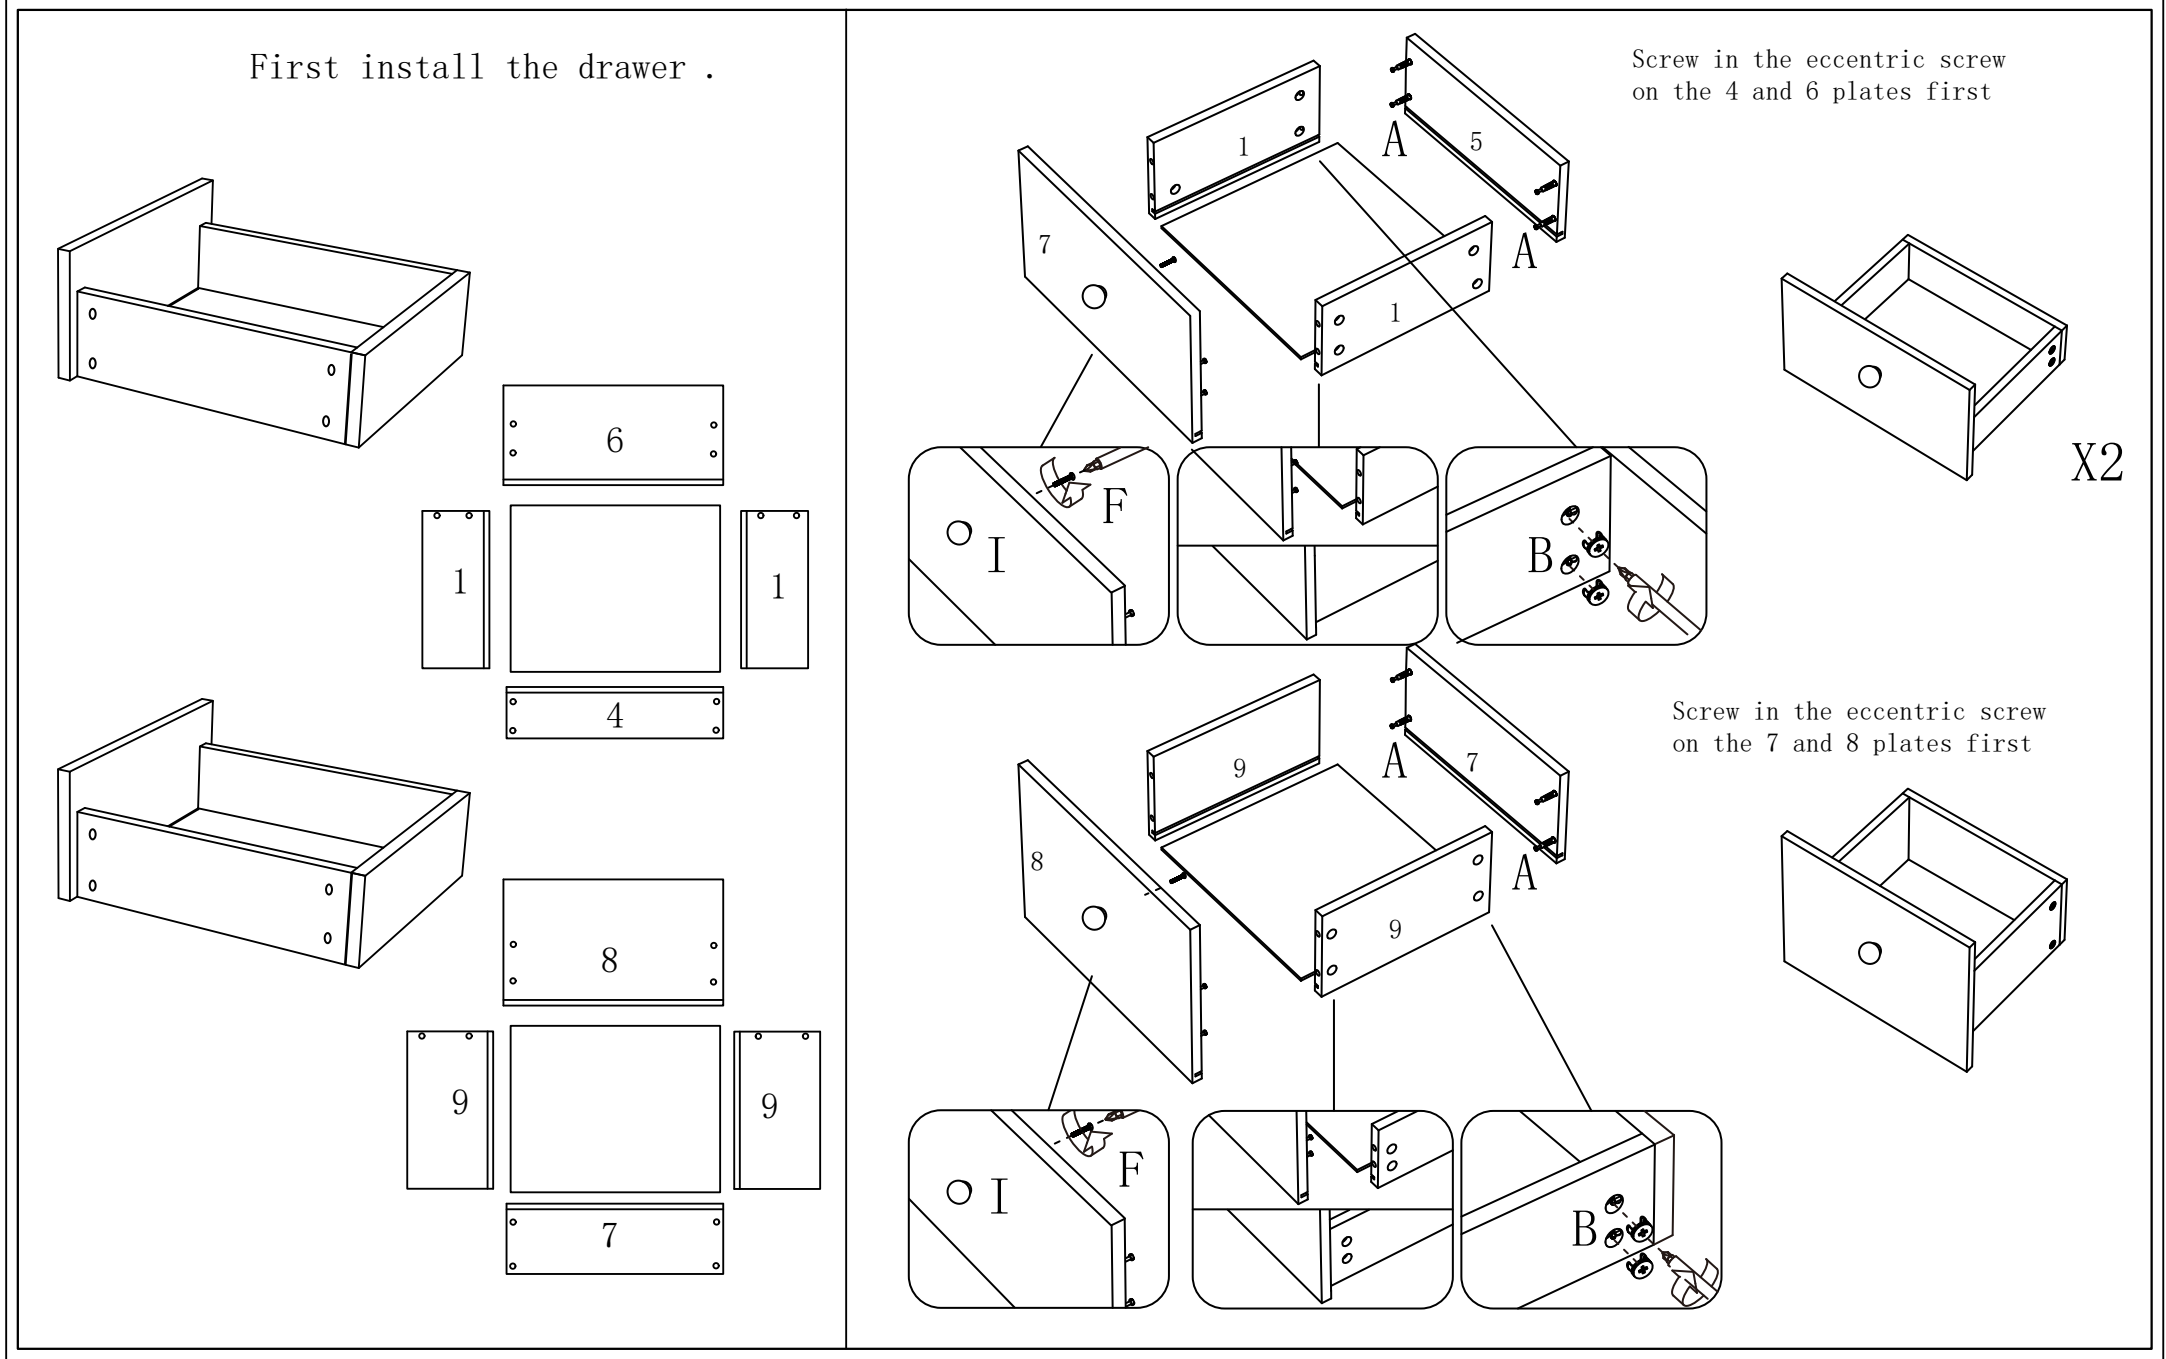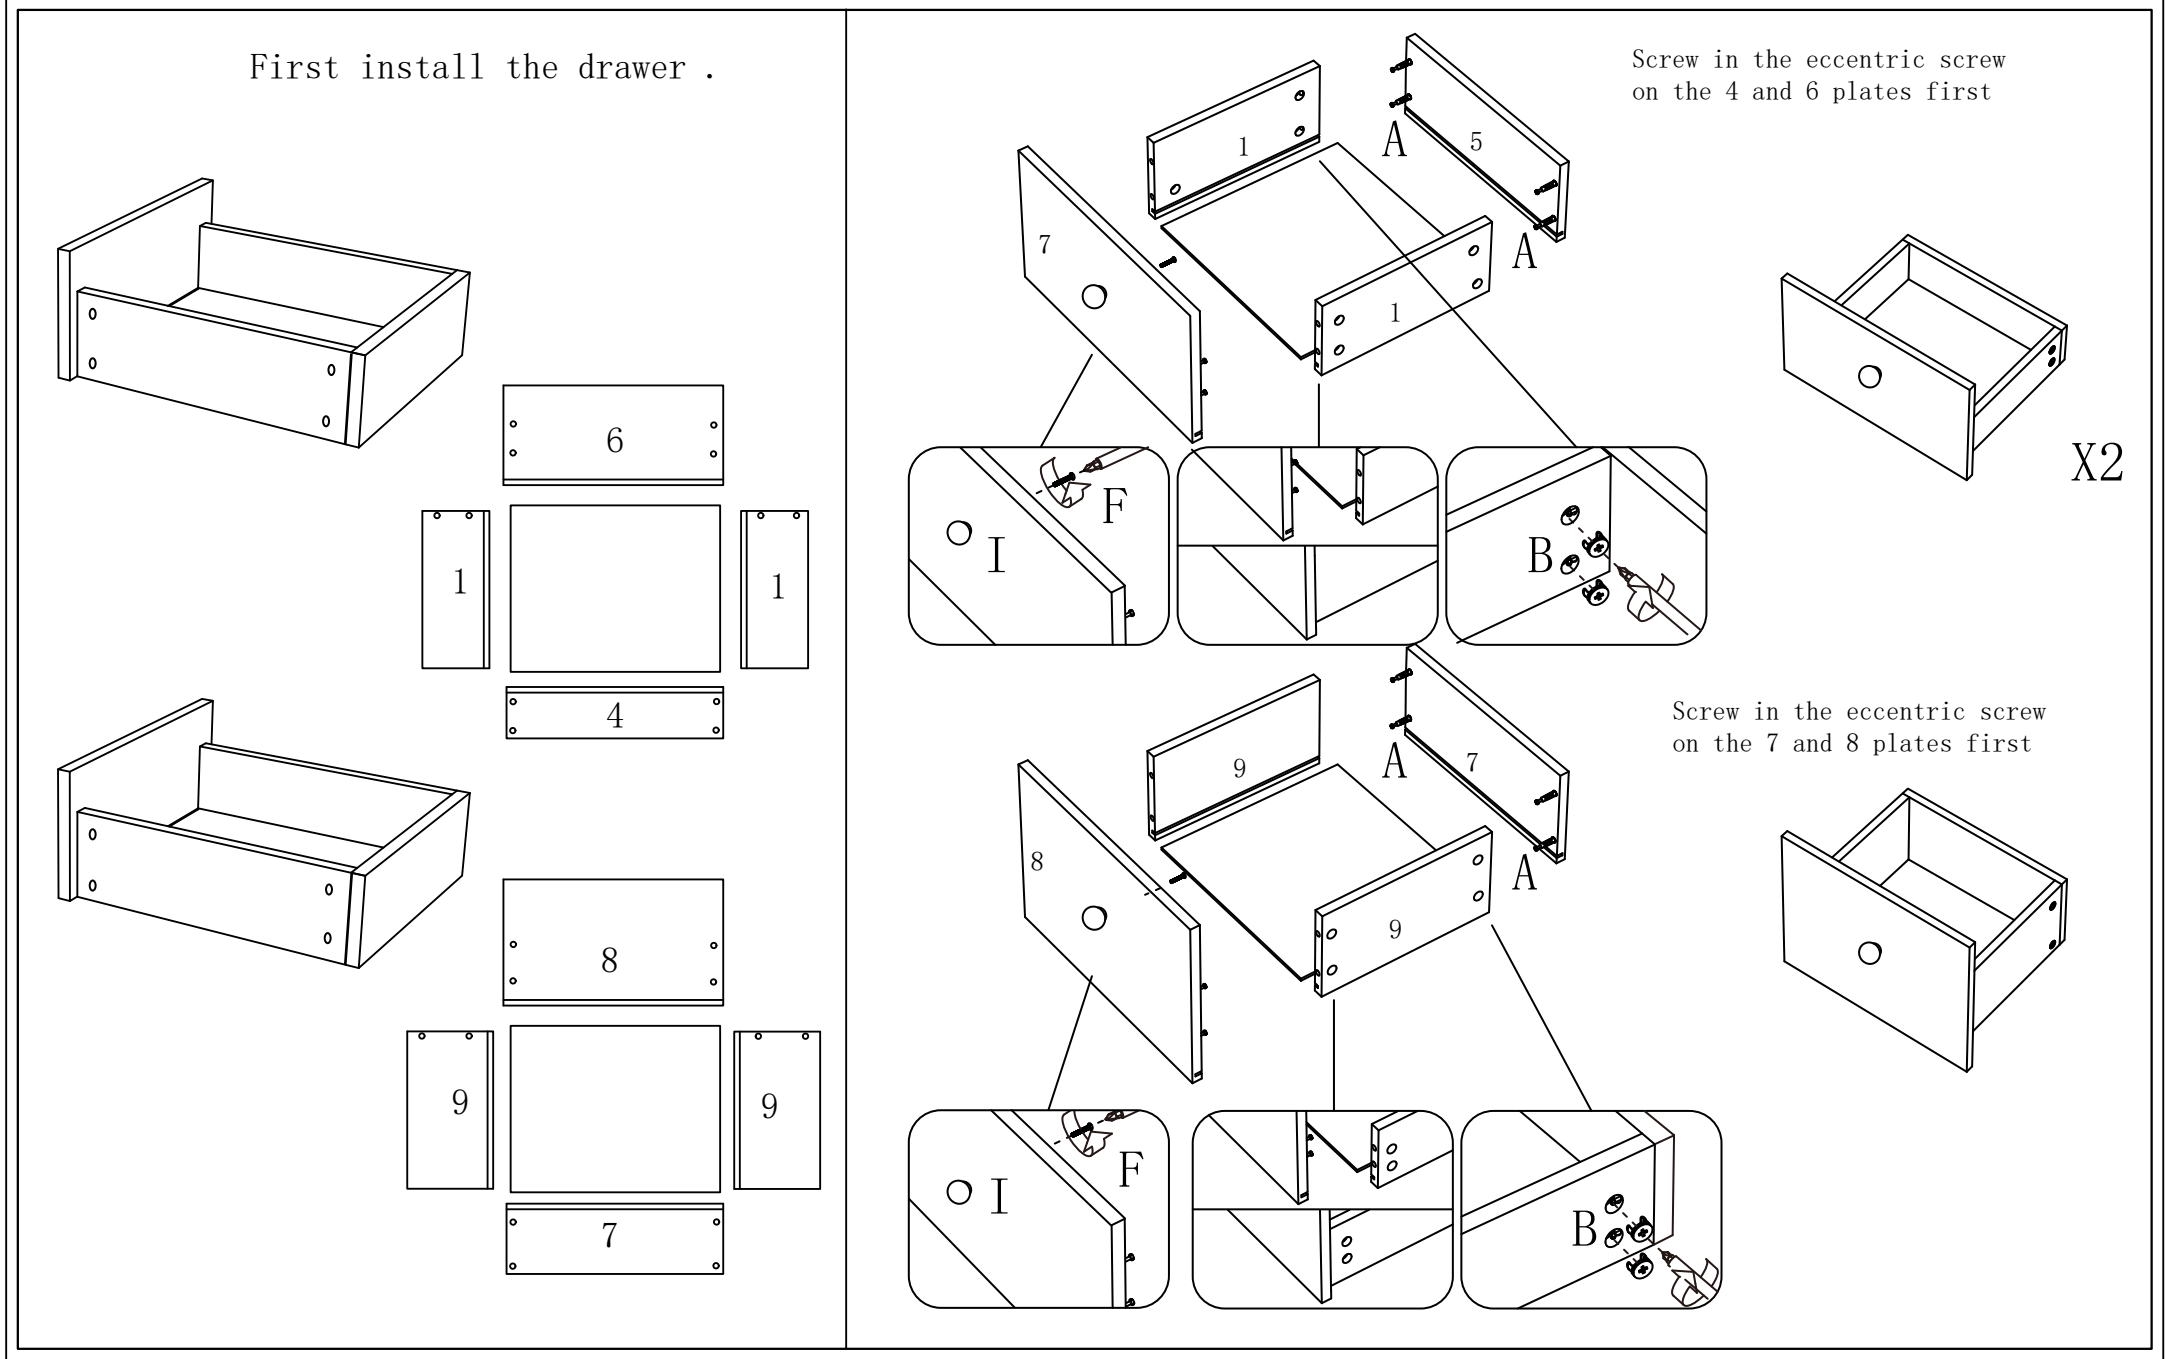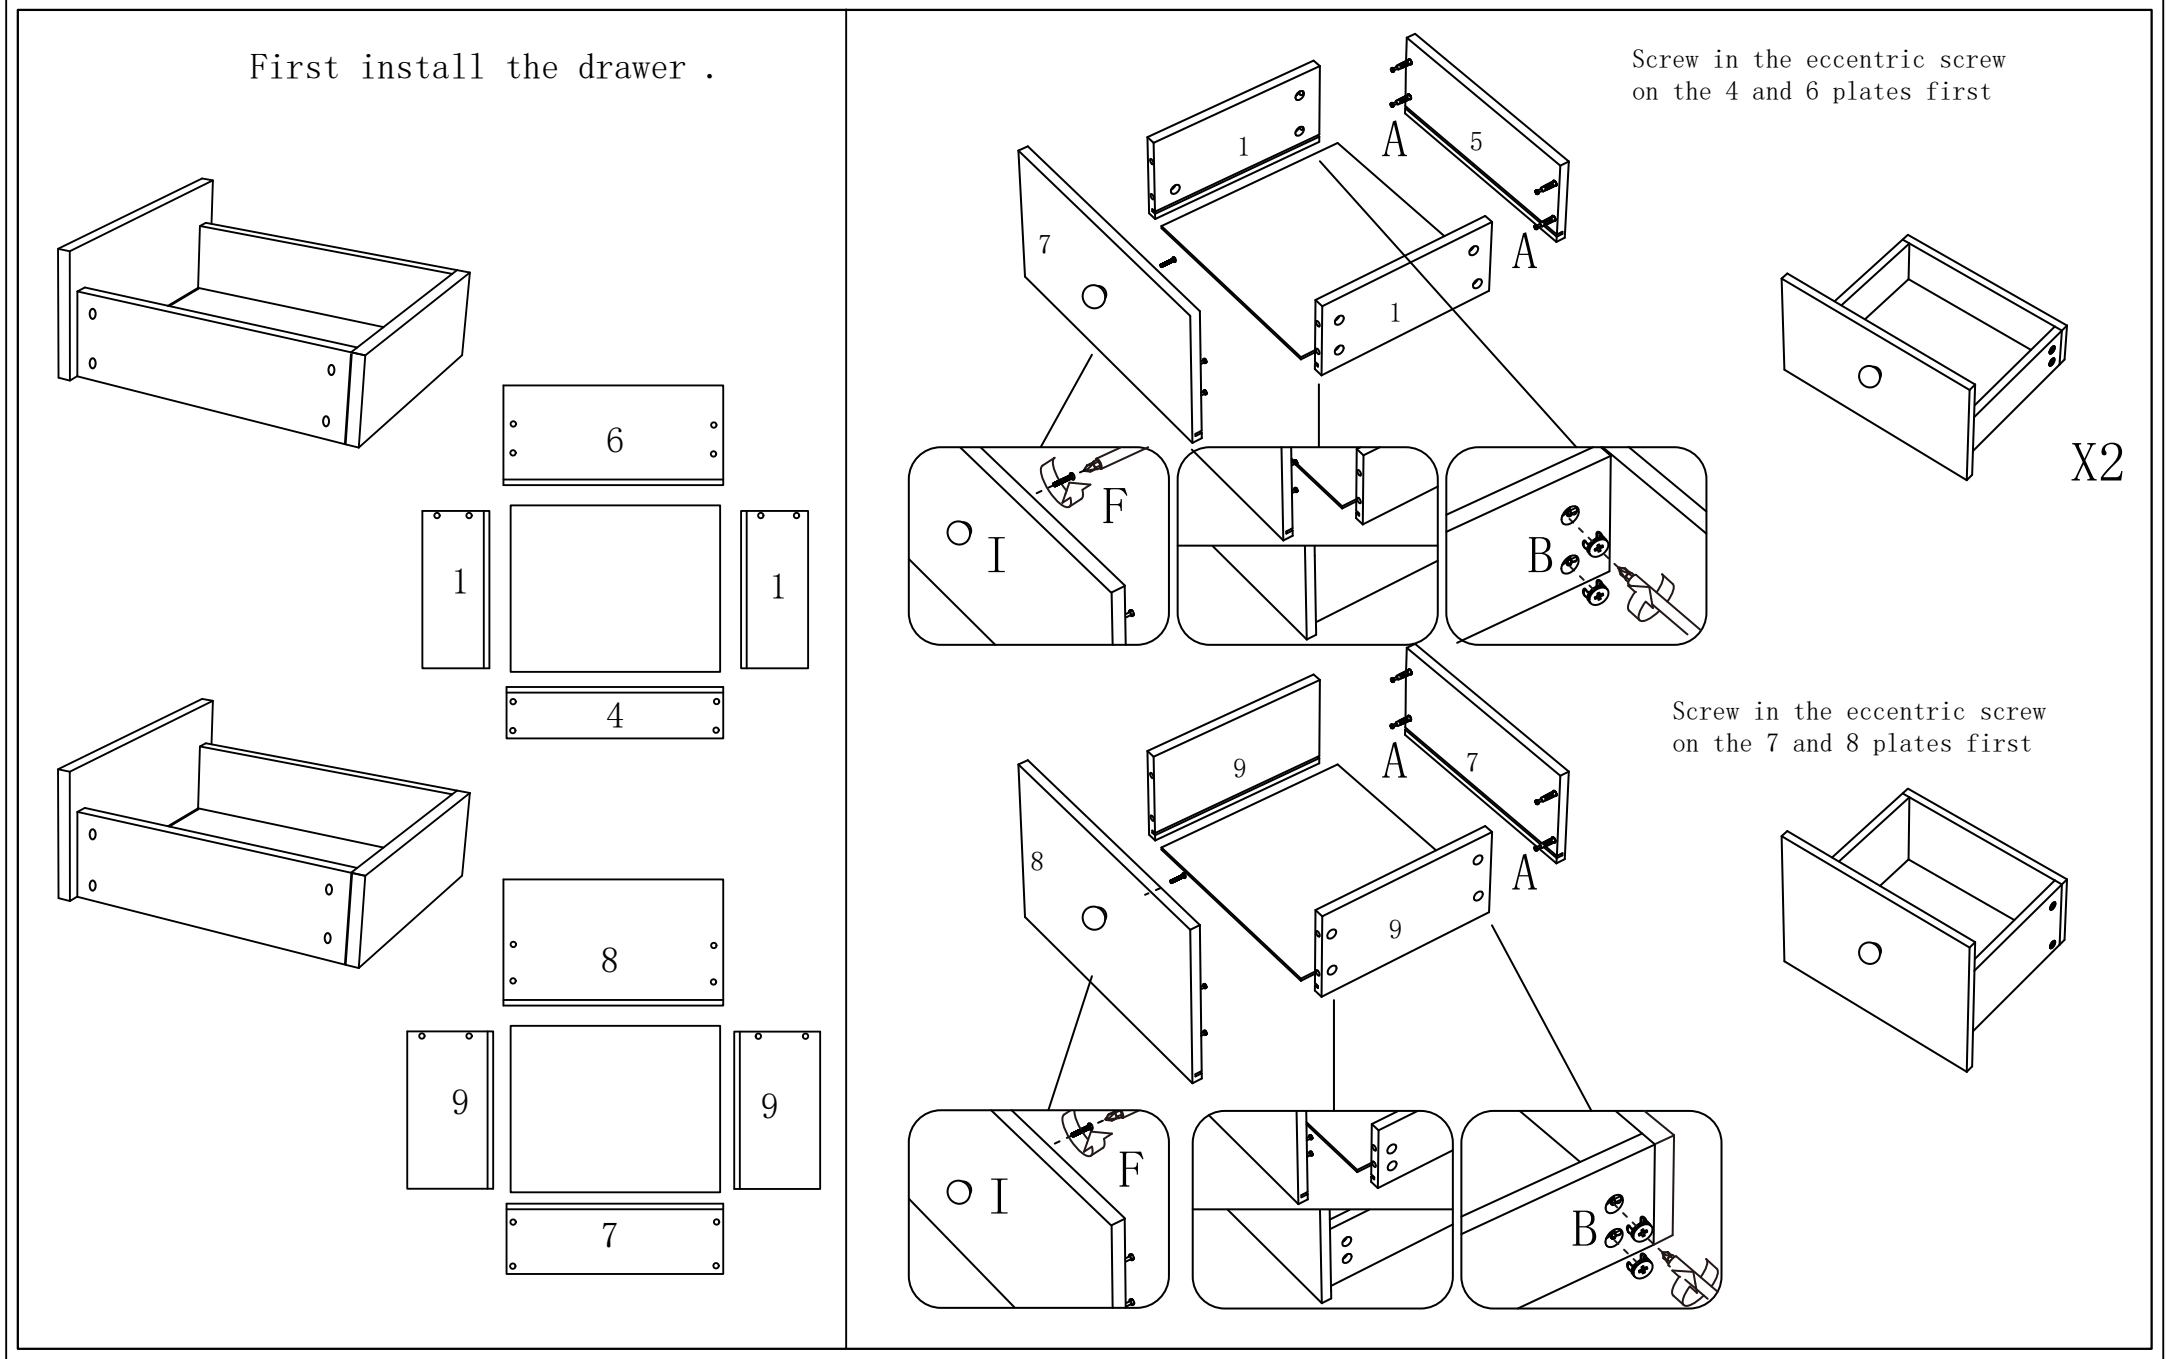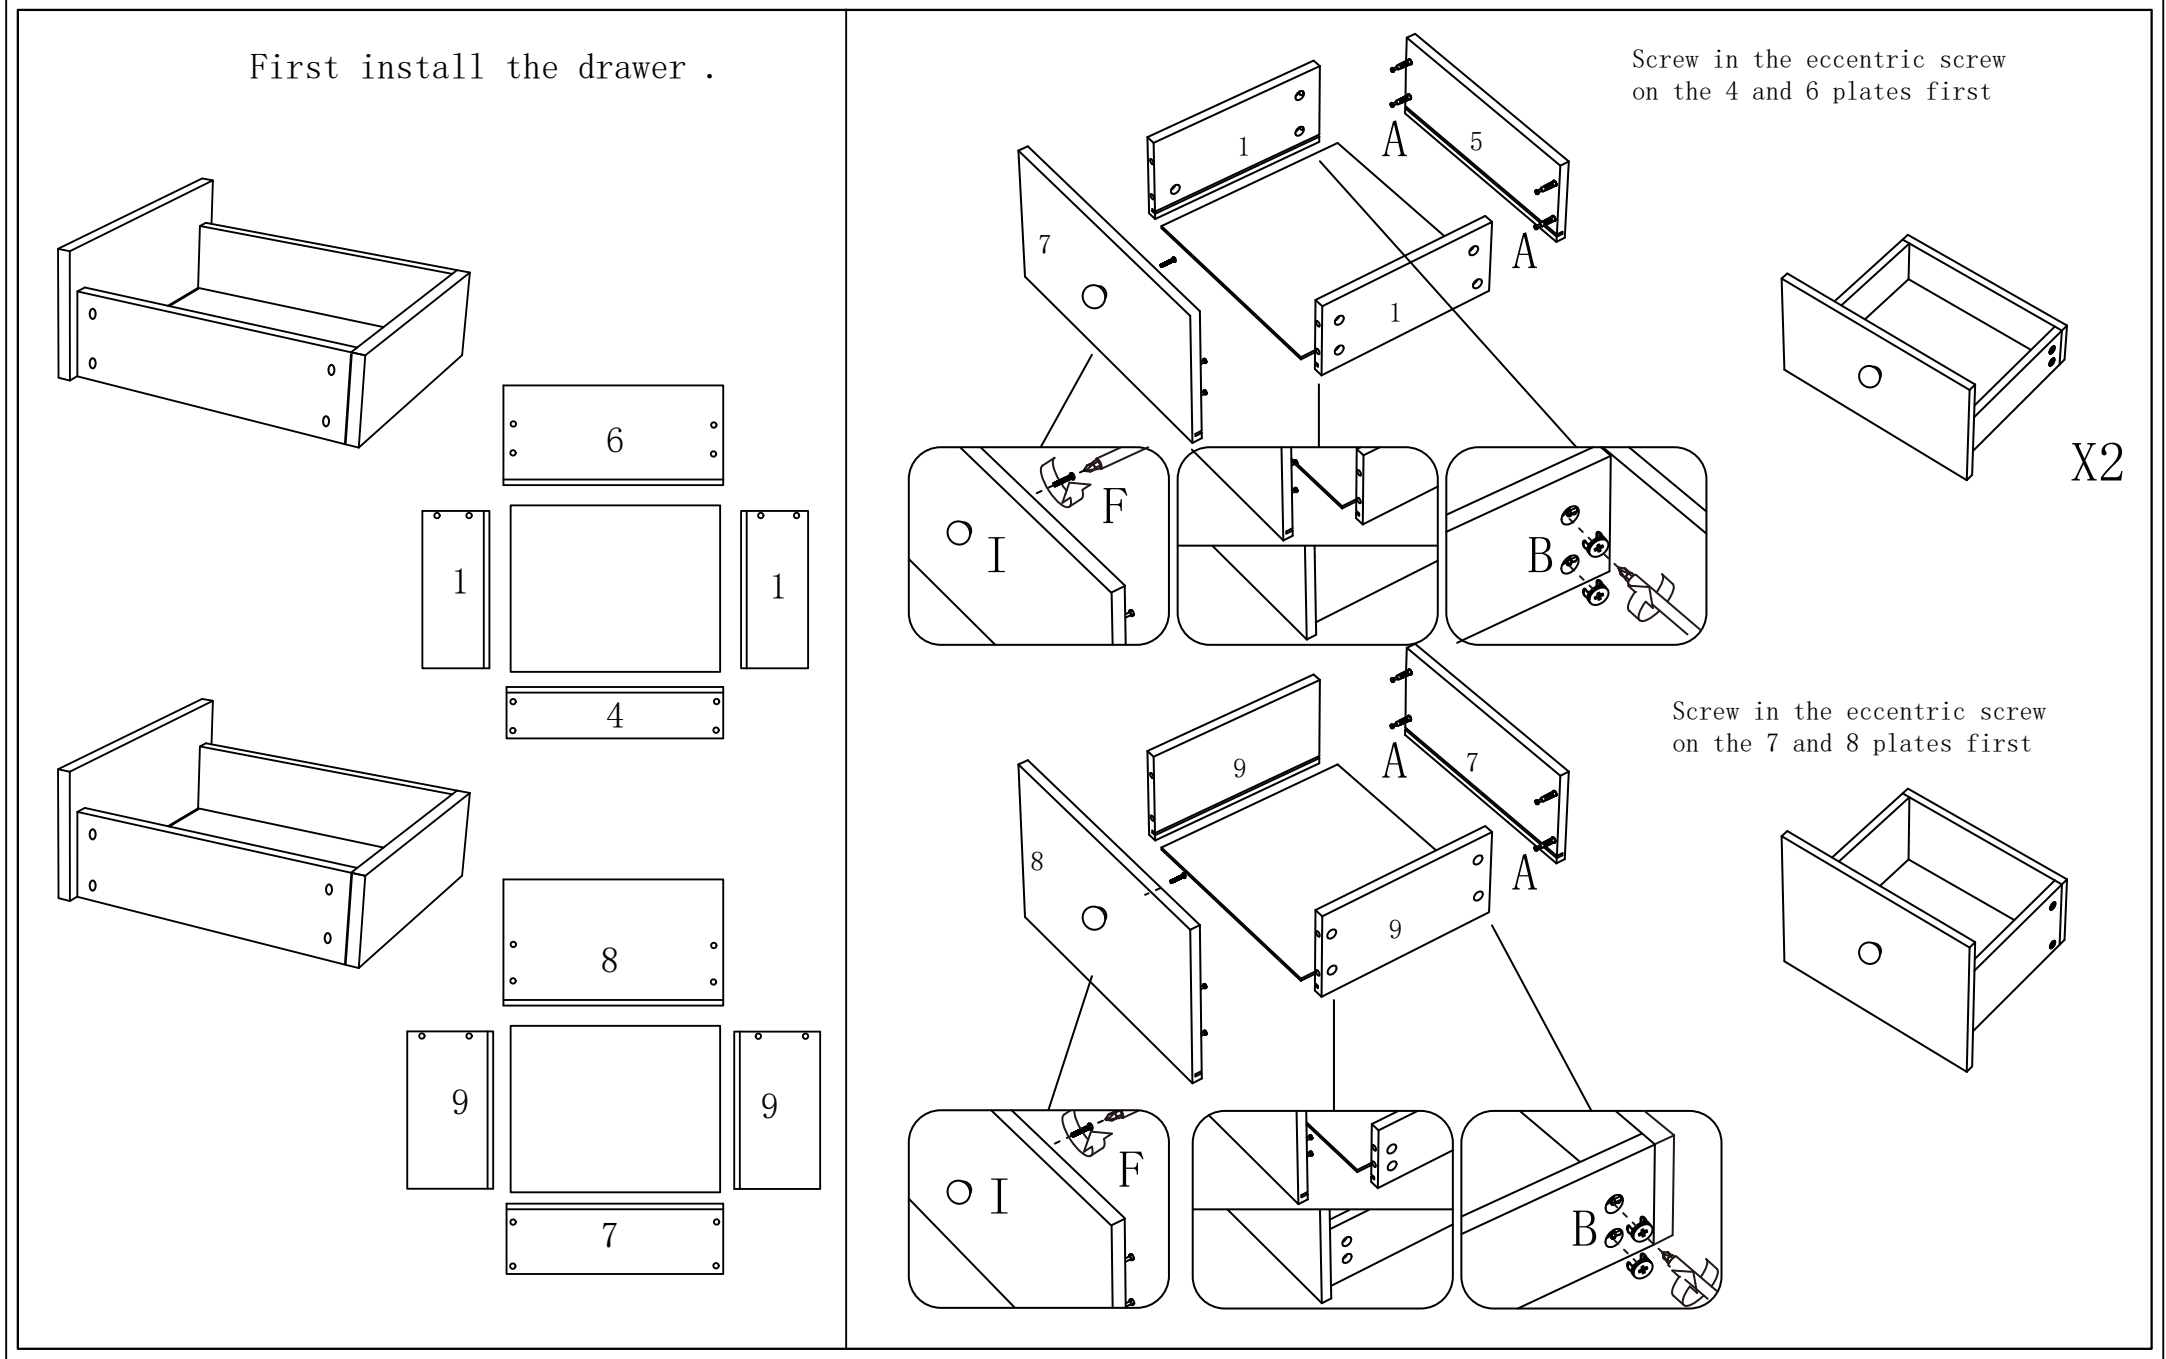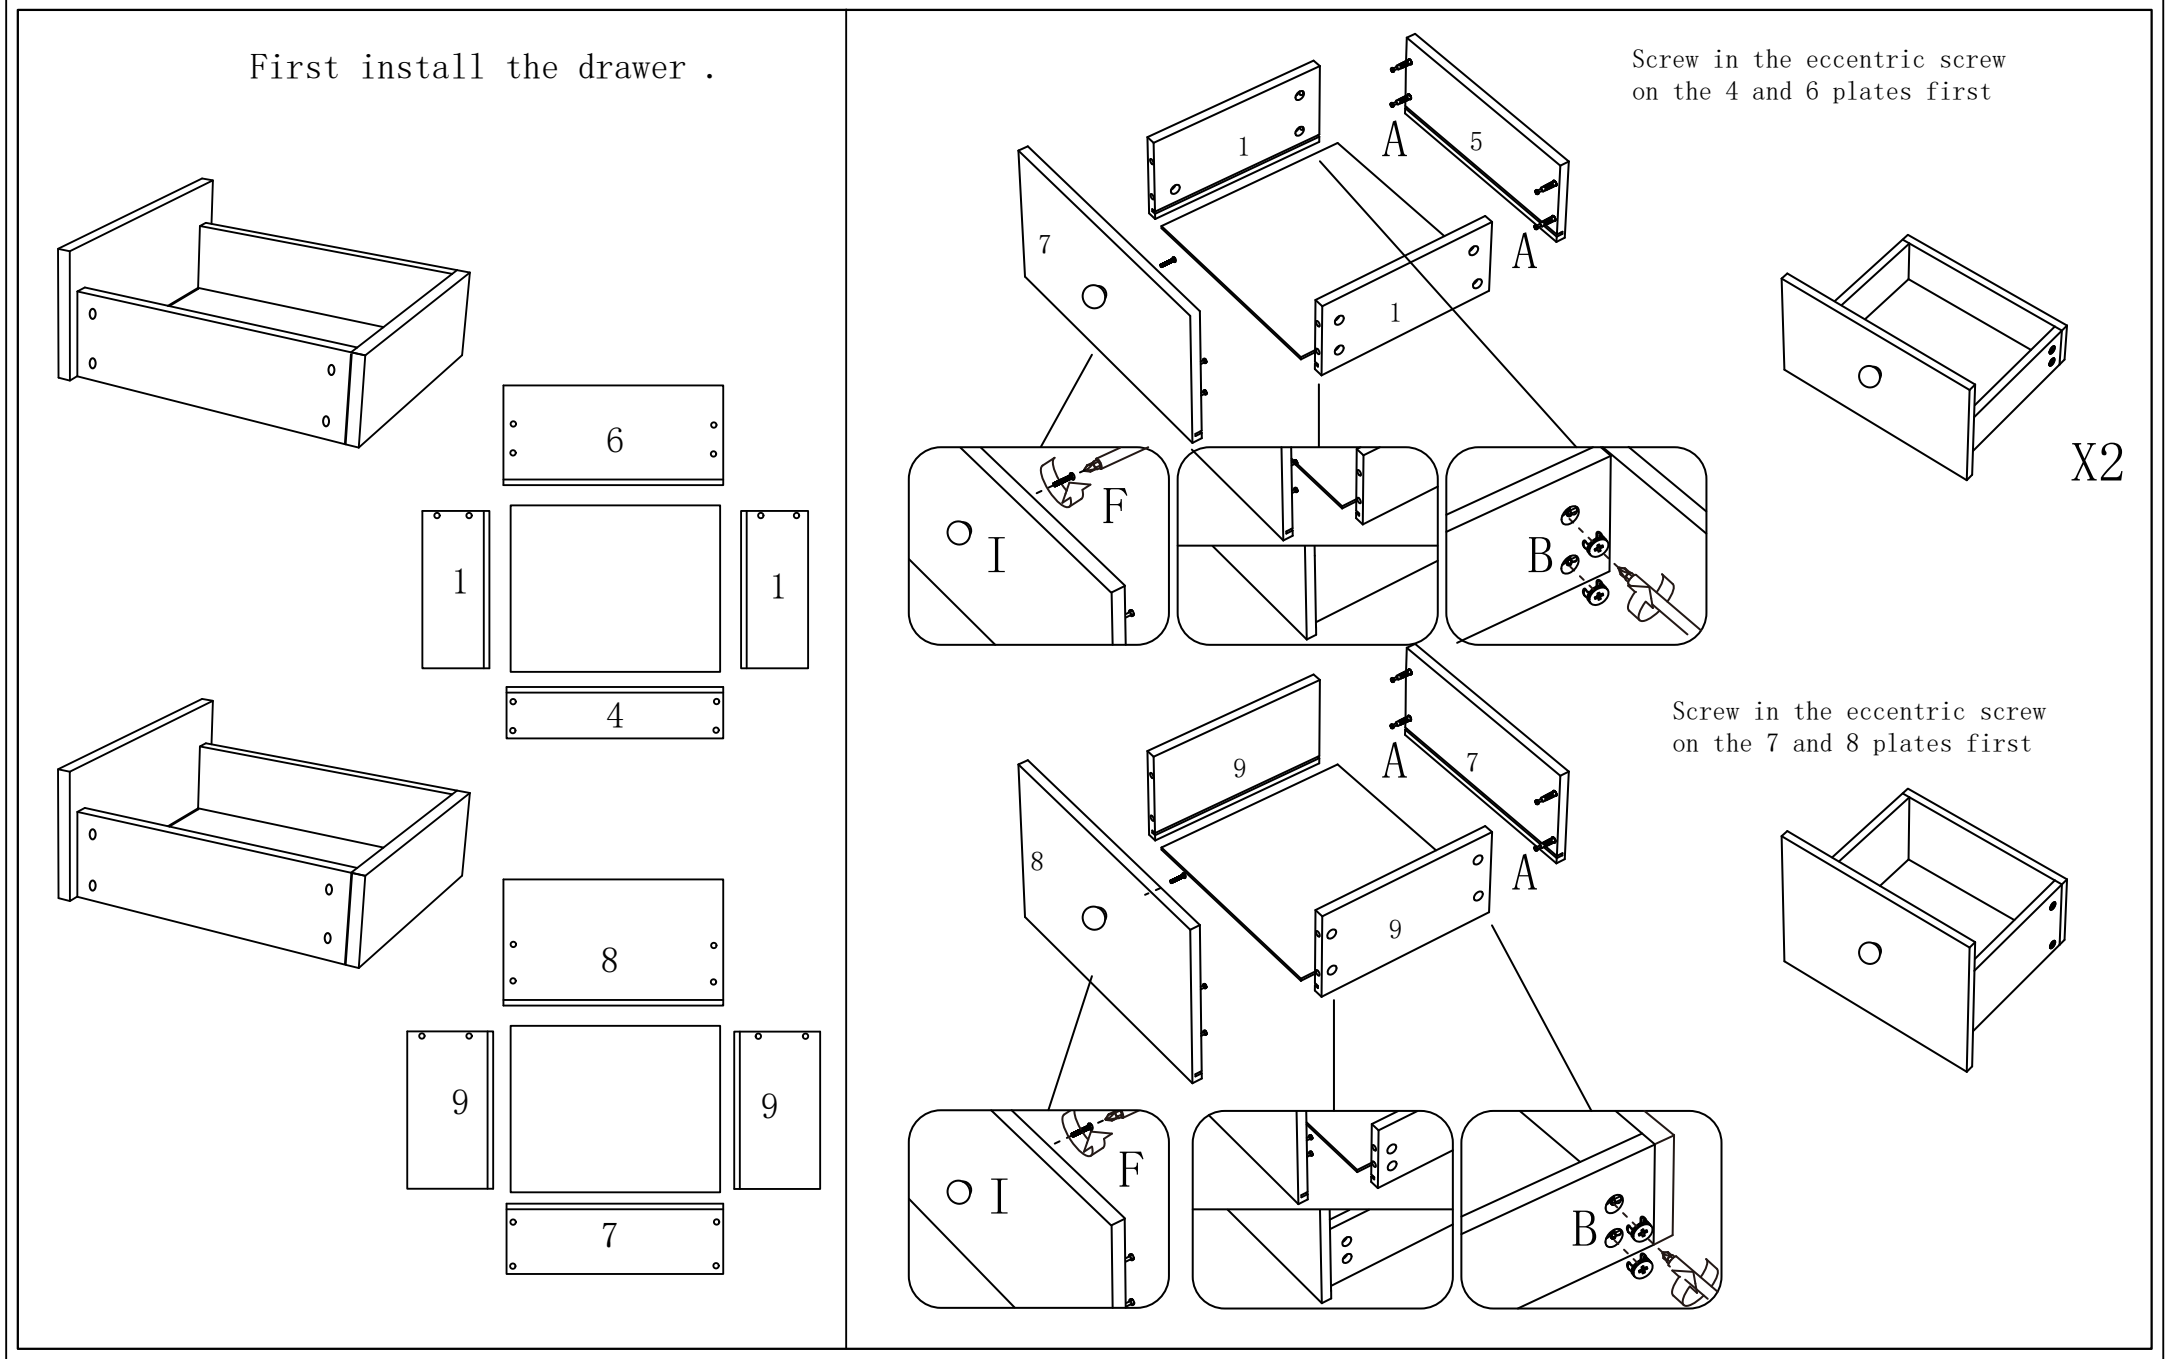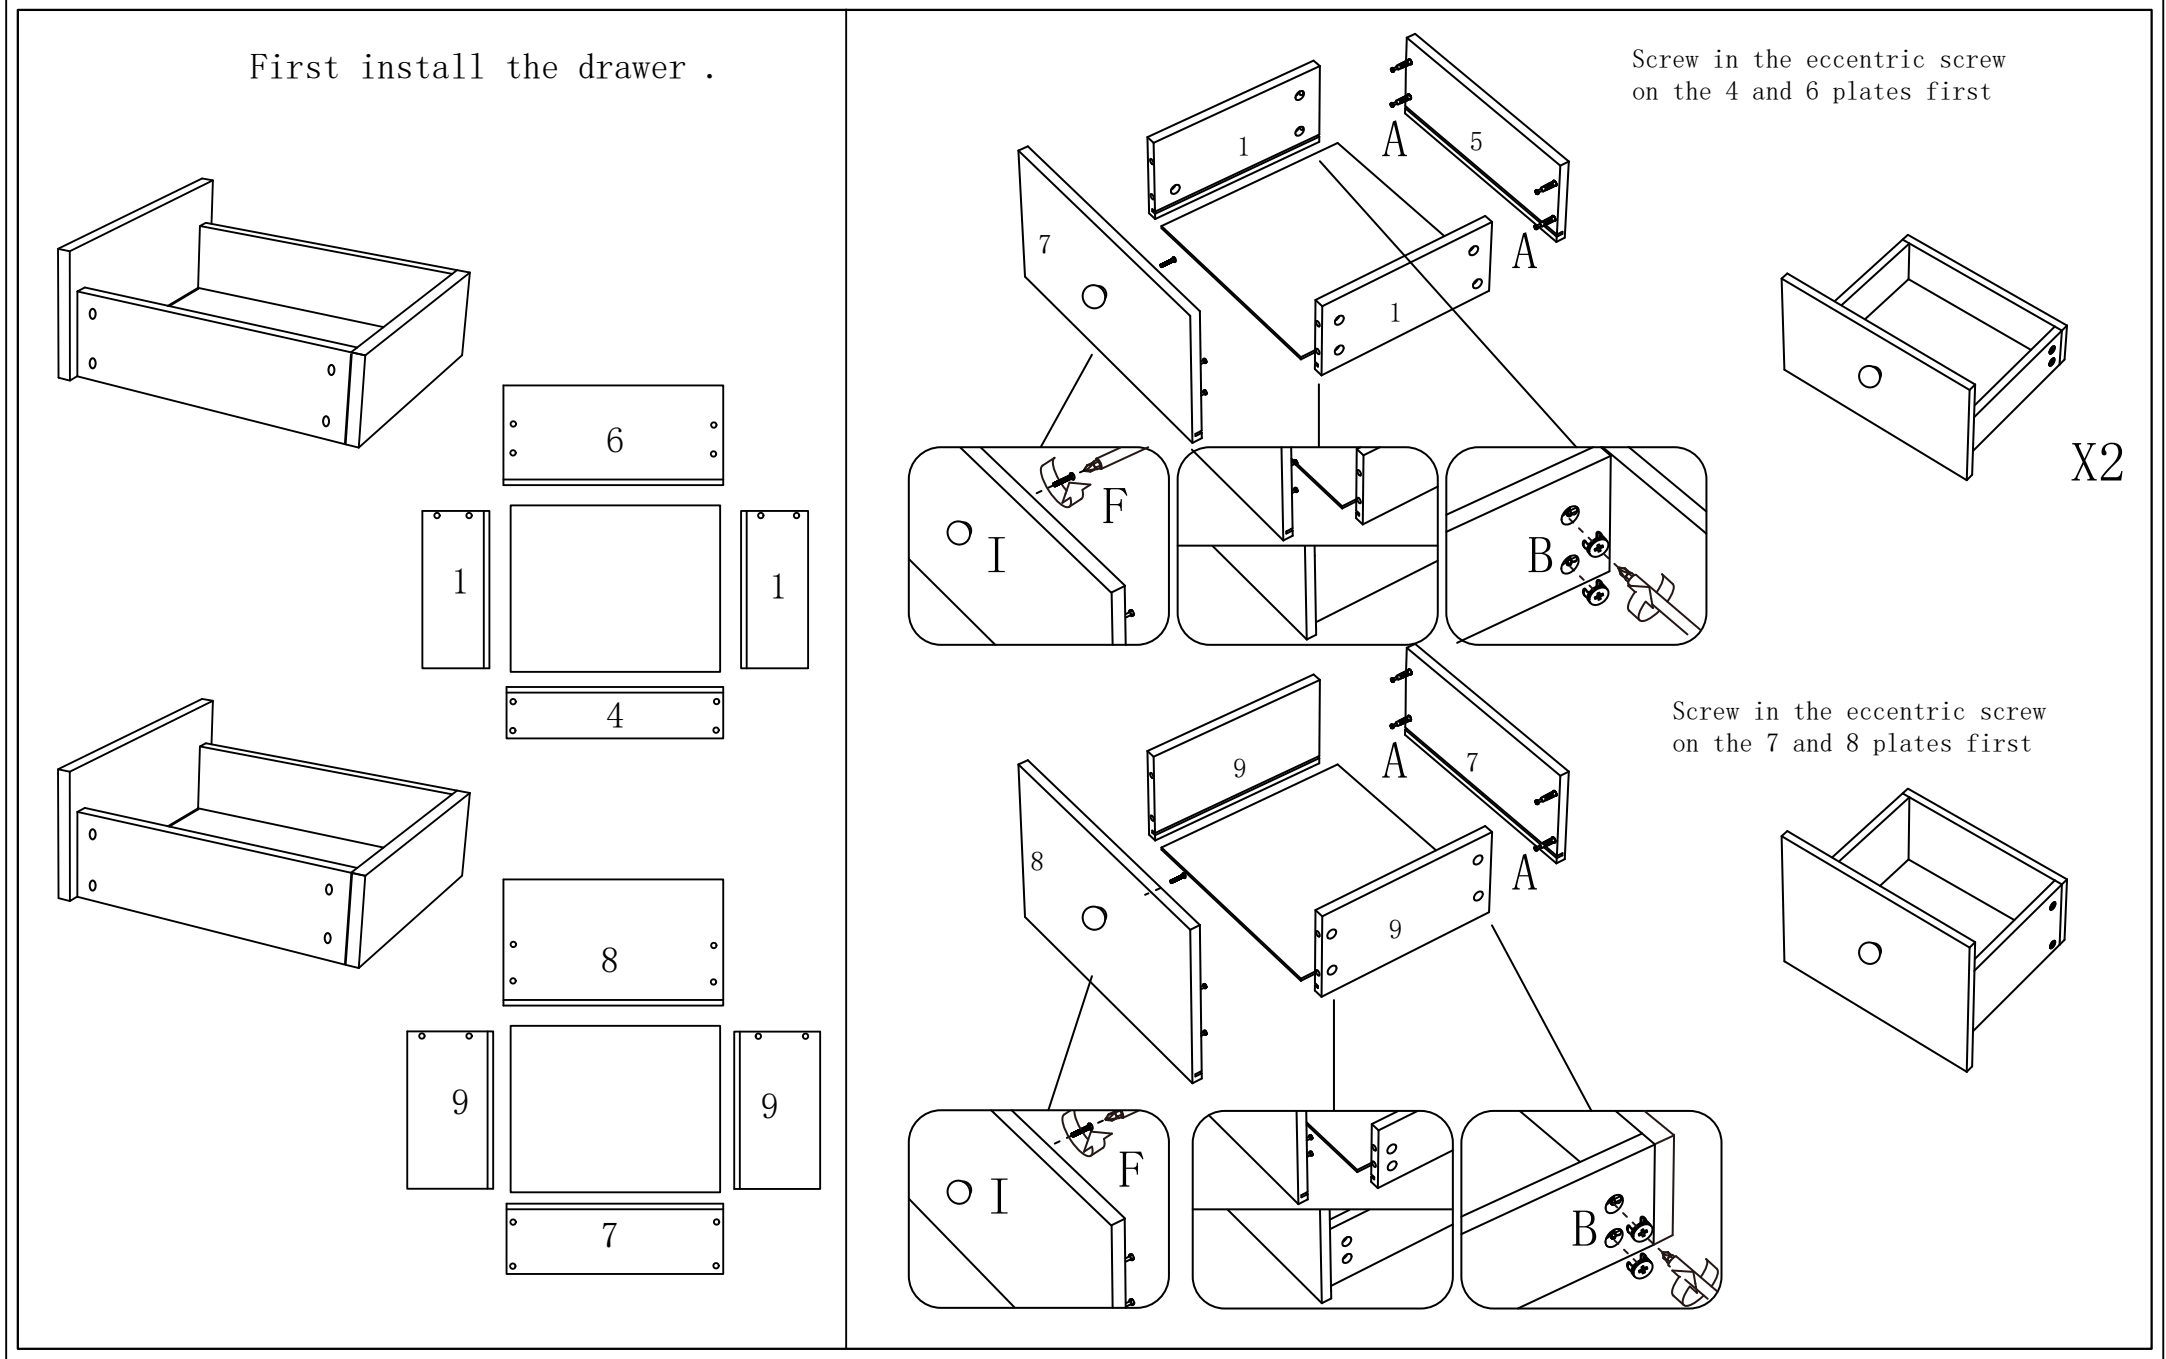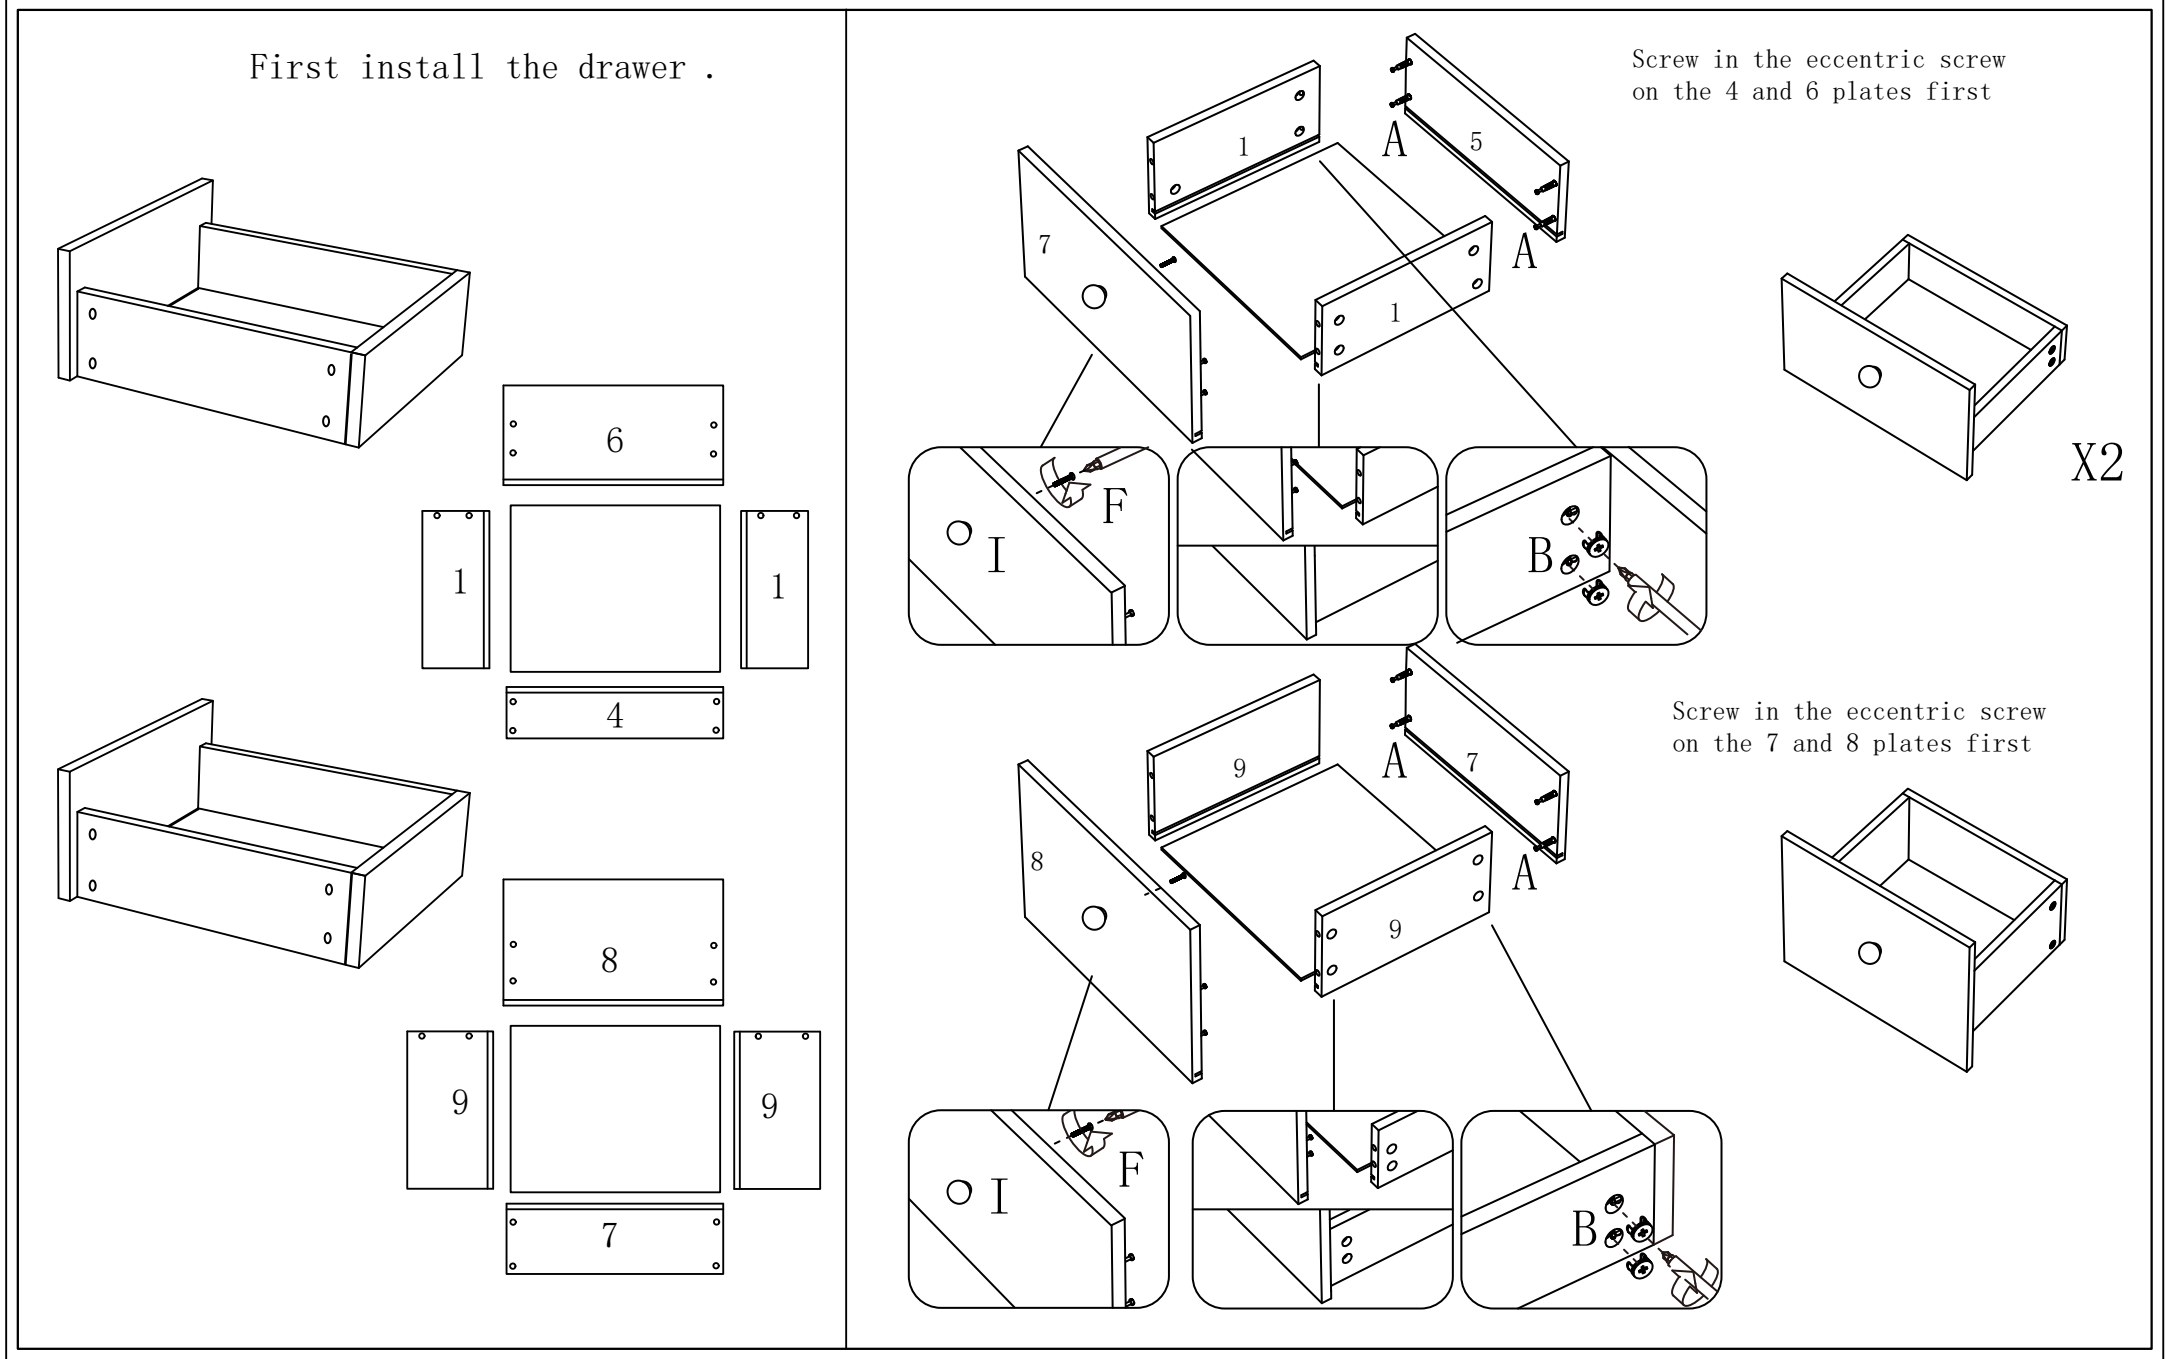


First install the drawer .

Screw in the eccentric screw on the 4 and 6 plates first

X2

Screw in the eccentric screw on the 7 and 8 plates first

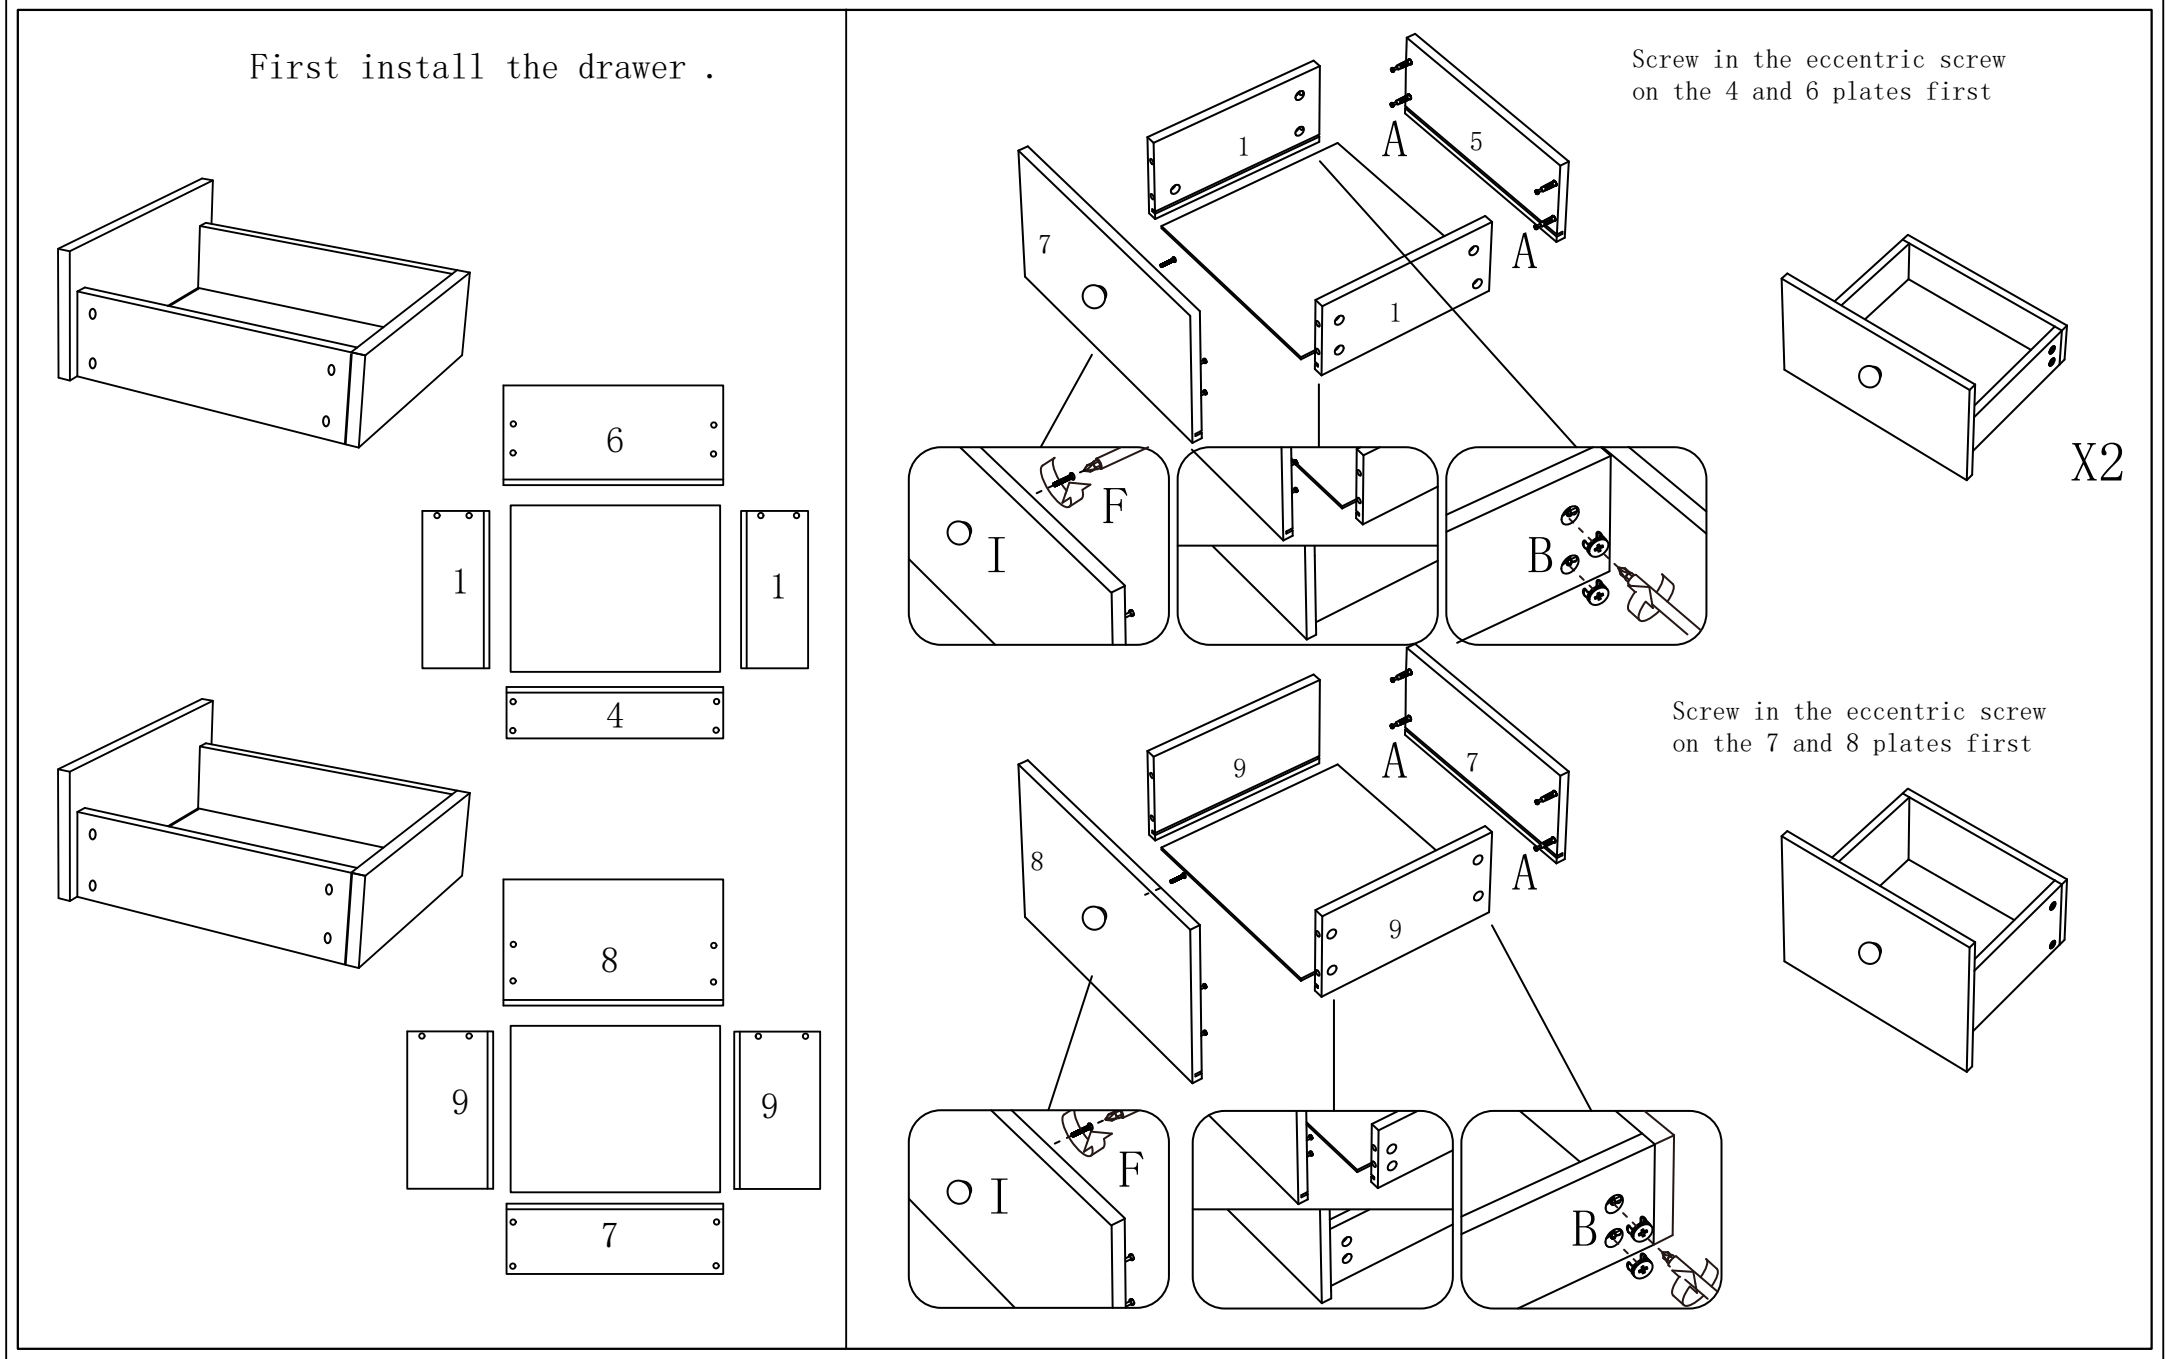


First install the drawer .

Screw in the eccentric screw on the 4 and 6 plates first

X2

Screw in the eccentric screw on the 7 and 8 plates first

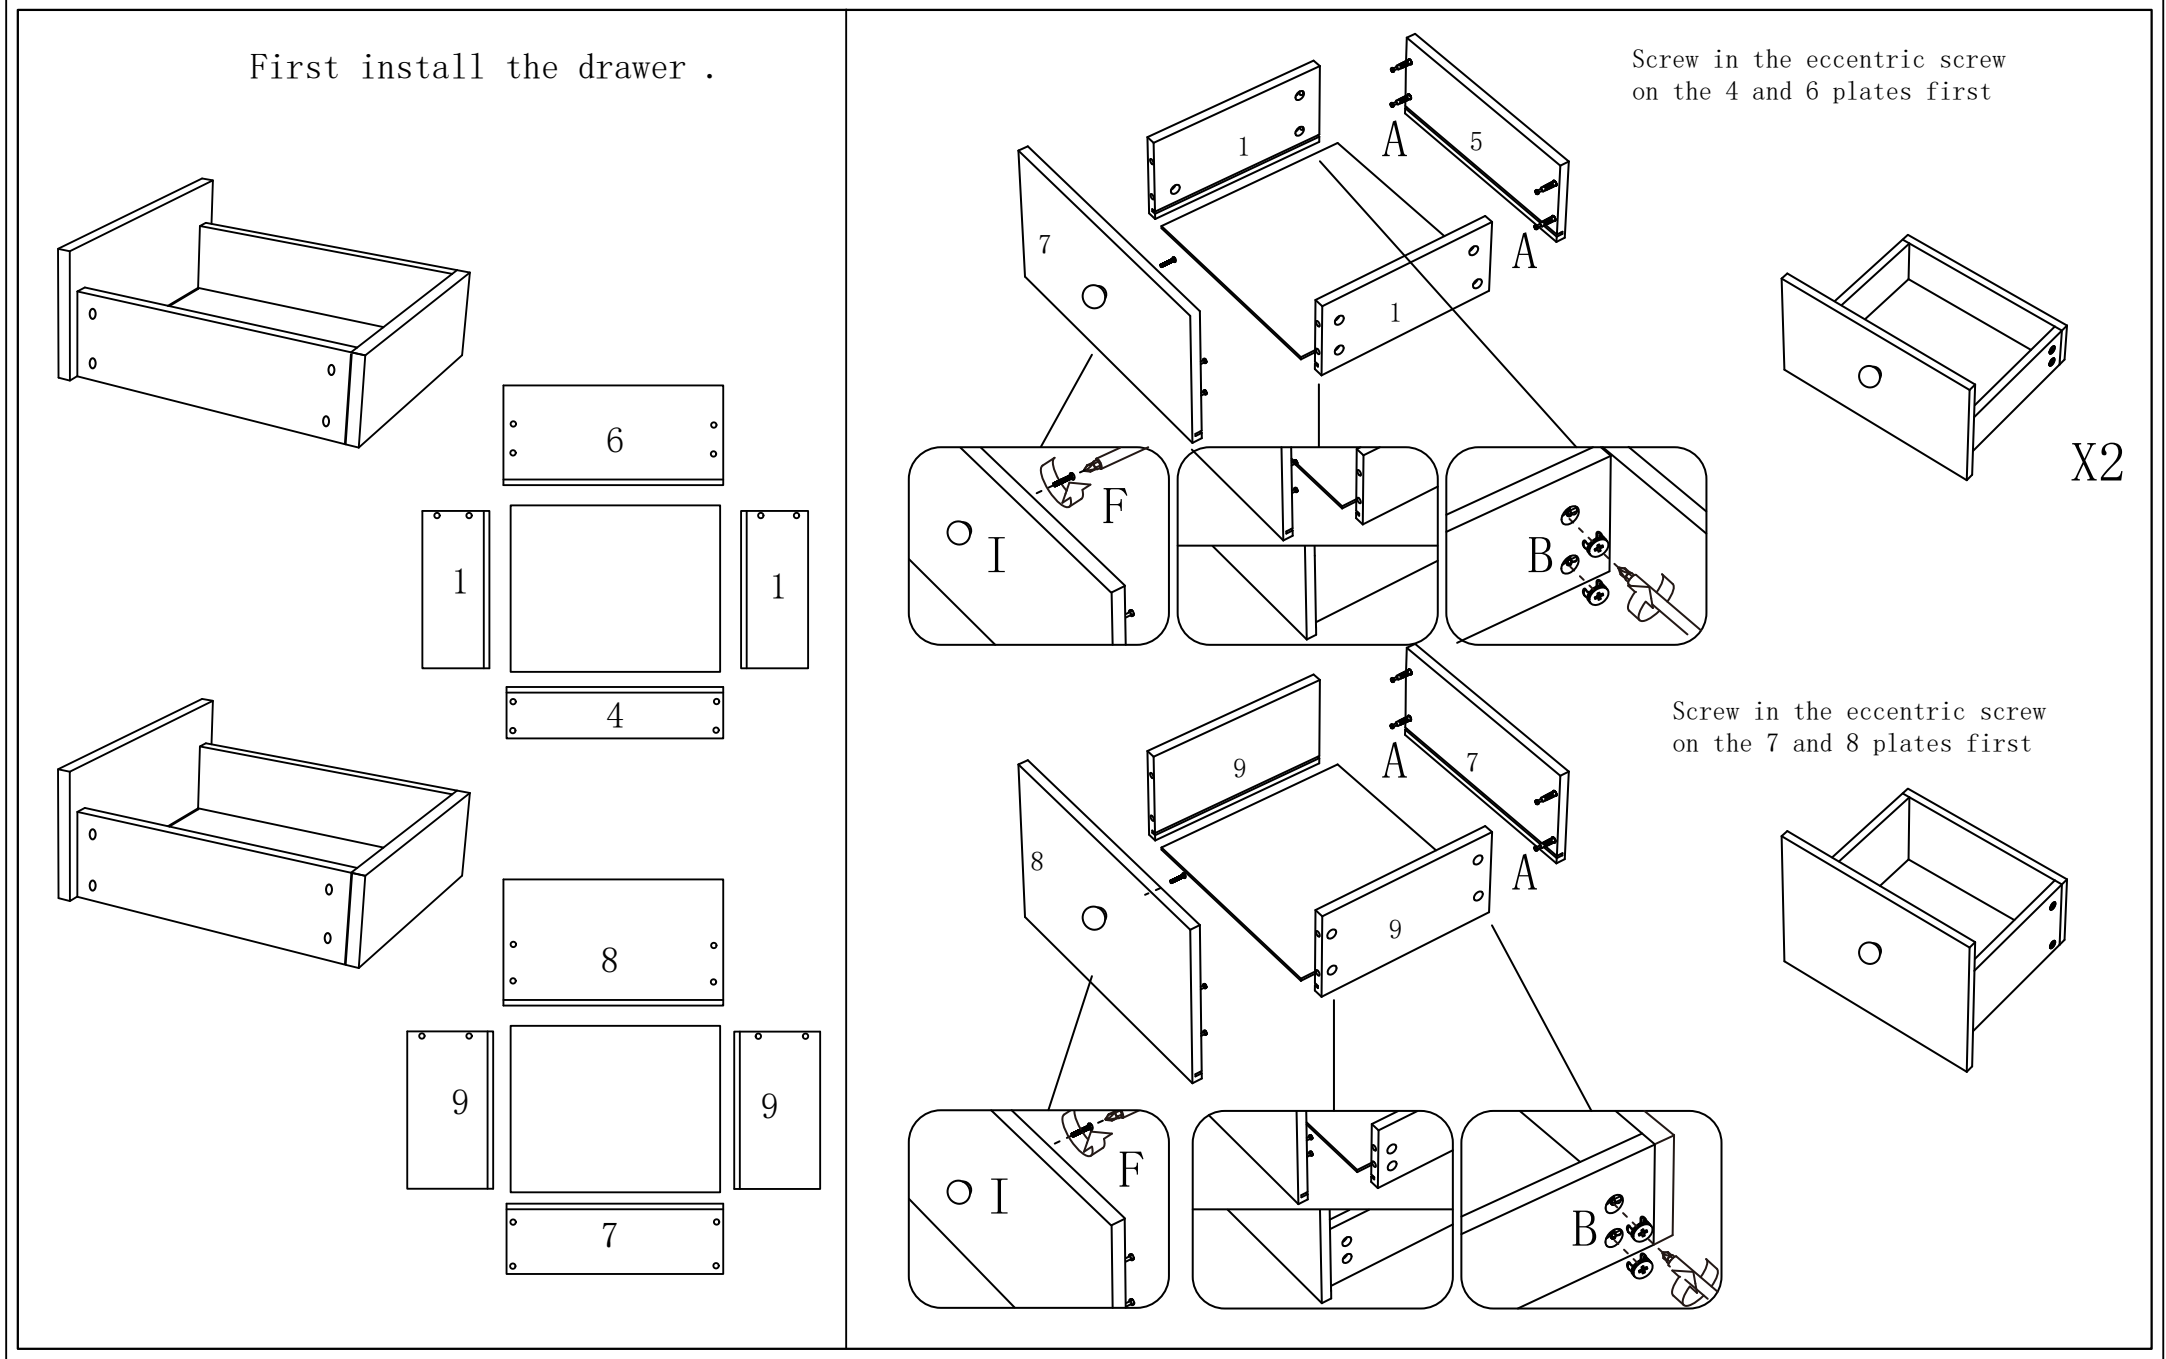


First install the drawer .

Screw in the eccentric screw on the 4 and 6 plates first

X2

Screw in the eccentric screw on the 7 and 8 plates first

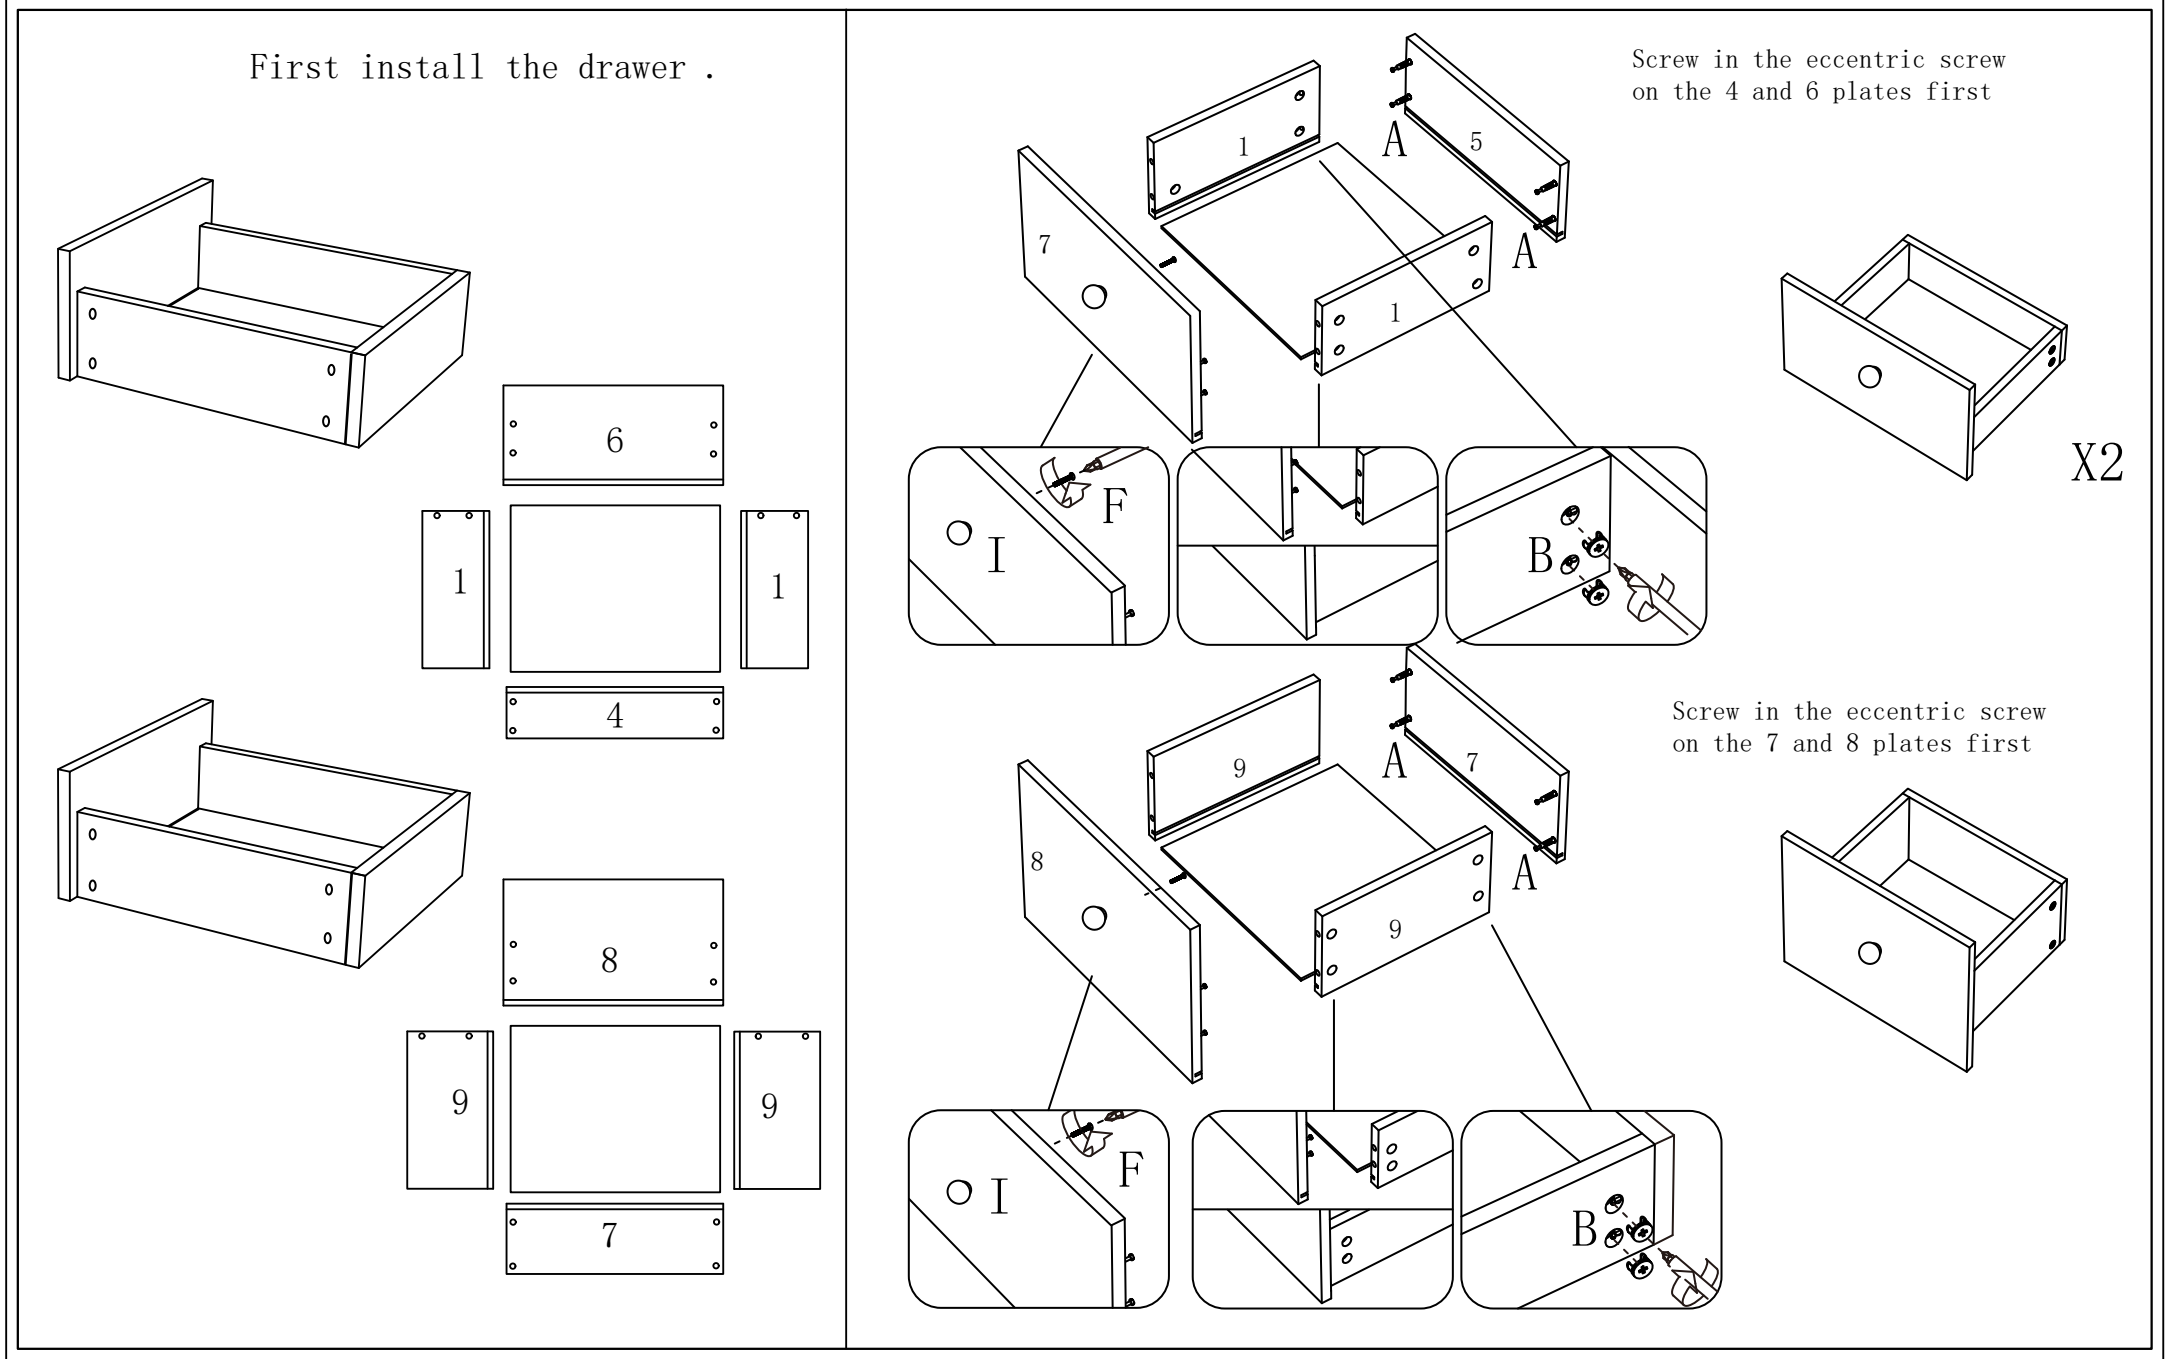

C




4PCS

D





4PCS



When placing D, it should be noted that the round hole should be aligned with the direction of screw in C


Second install the cabinet.

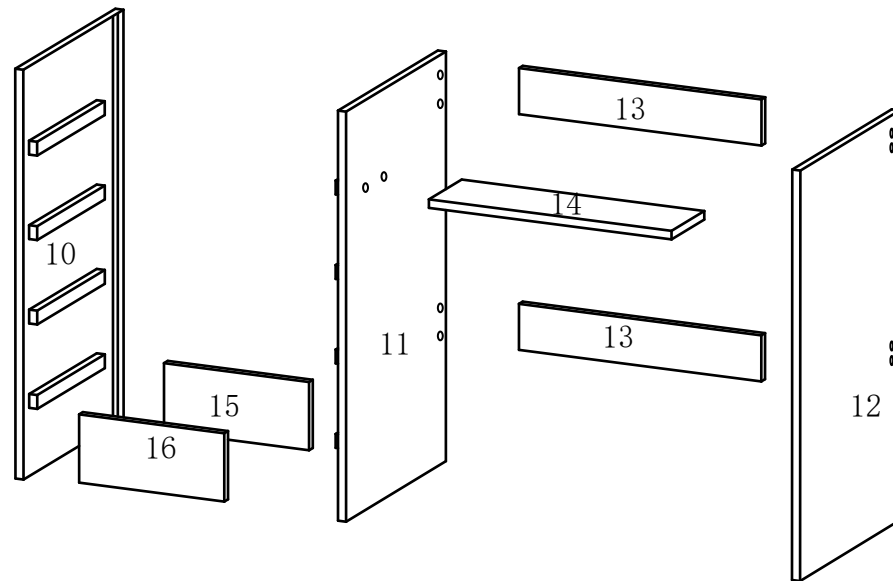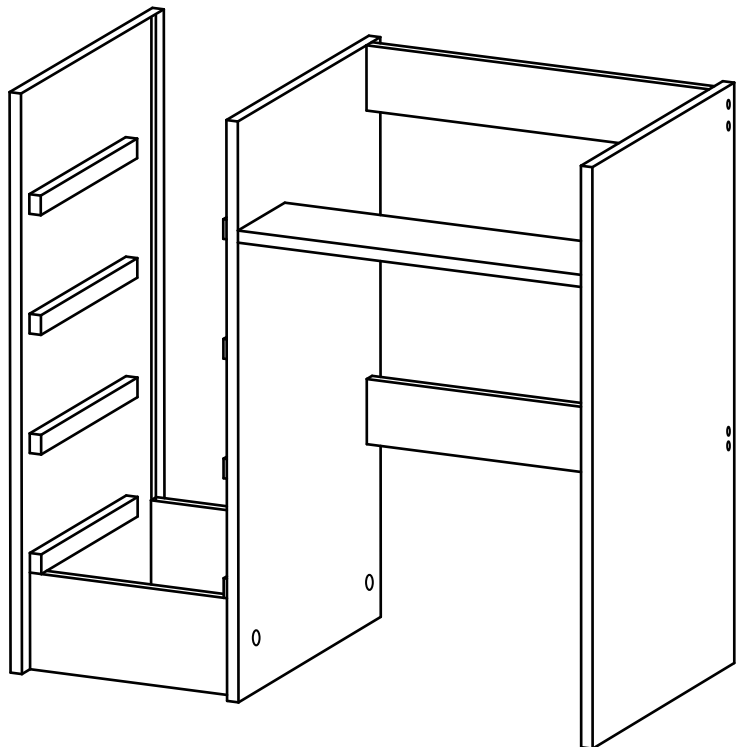


1. Place D in the corresponding position of plate 13 and plate 14

When placing D, it should be noted that the round hole should be aligned with the direction of screw in C

2. Connect and fix plates 10, 11, 15 and 16 with C

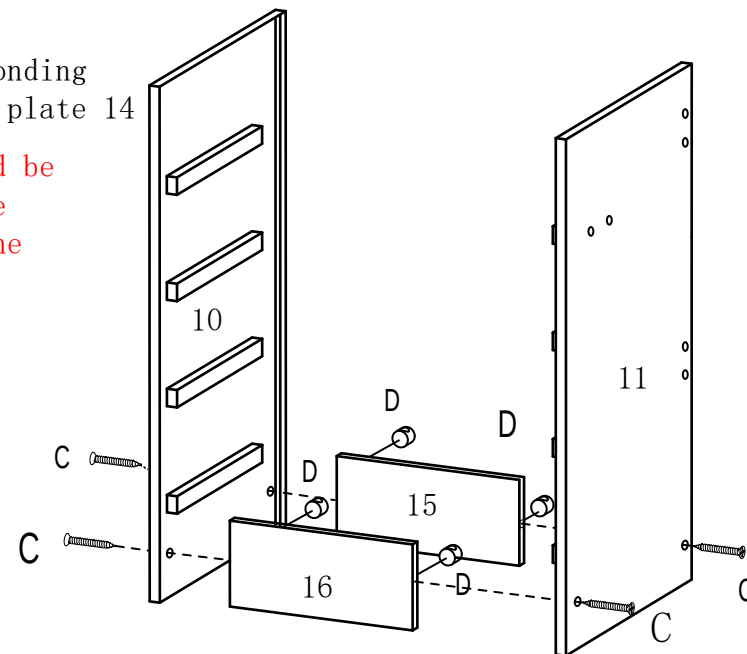

A  4 PCS	B  4 PCS
C  8 PCS	D  8 PCS

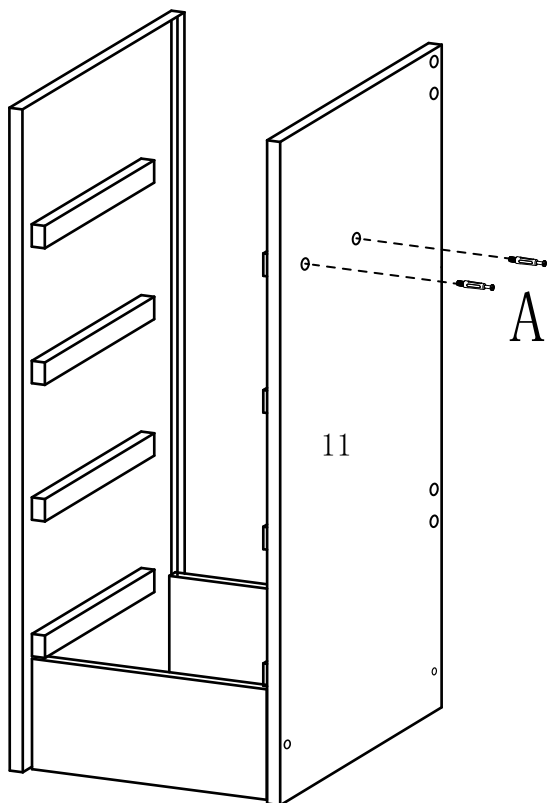


Screw A into the corresponding hole of plate 11

1. Place D into the corresponding hole of No. 13 plate


When placing D, it should be noted that the round hole should be aligned with the direction of screw in C



2. Screw A into the corresponding hole of plate 14

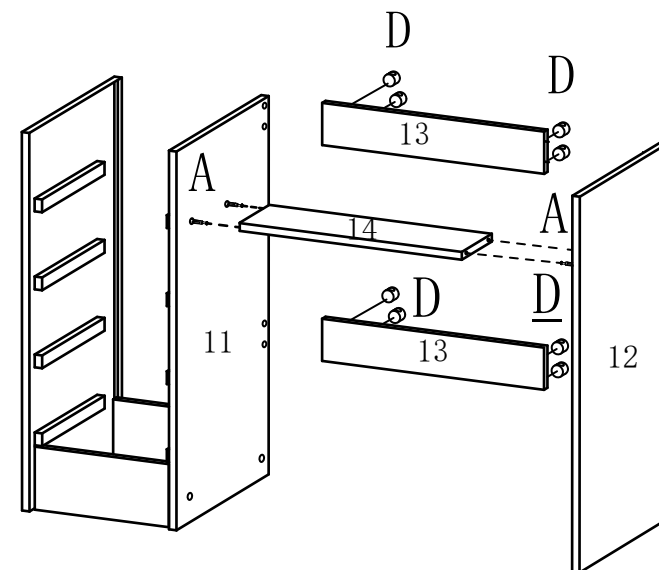


Connect and fix plate 11, 12 and 13 with C





Use B to connect plate 11, plate 12 and plate 14

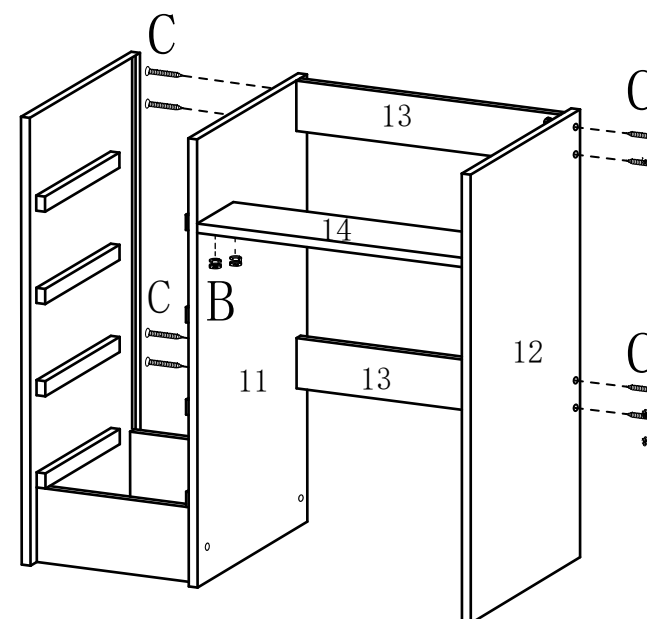


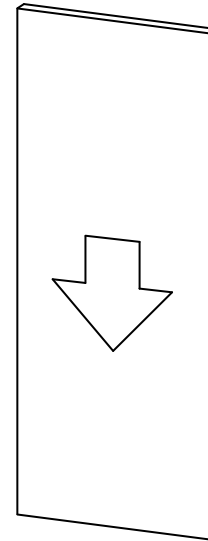
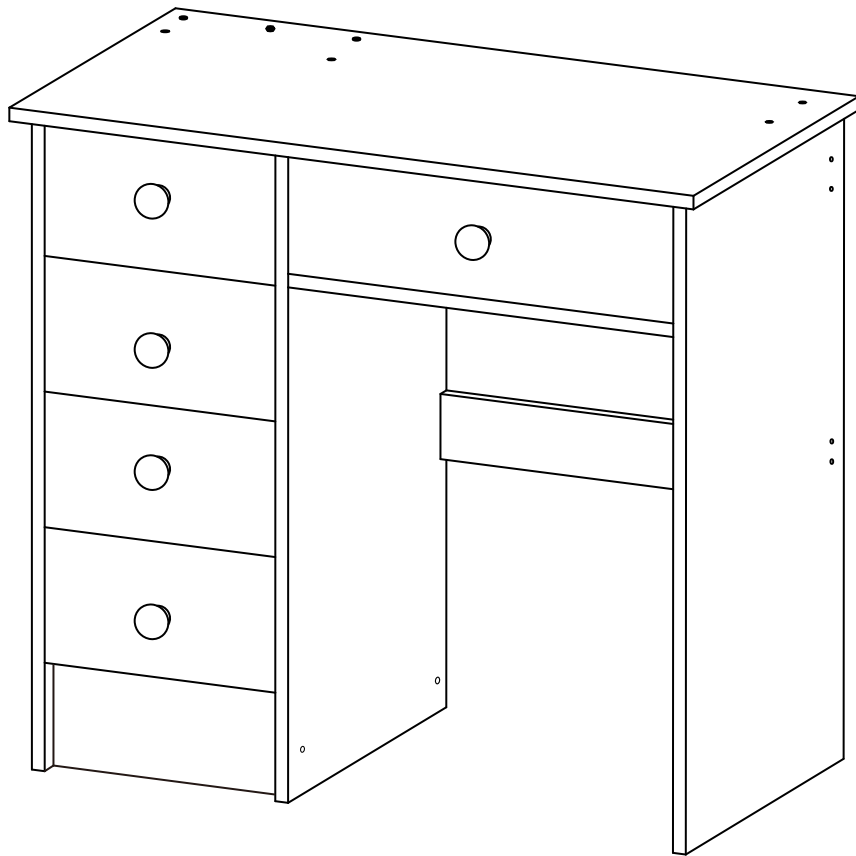


Align the sheet with the
slot of plate 10, 11 and 15
and push forward

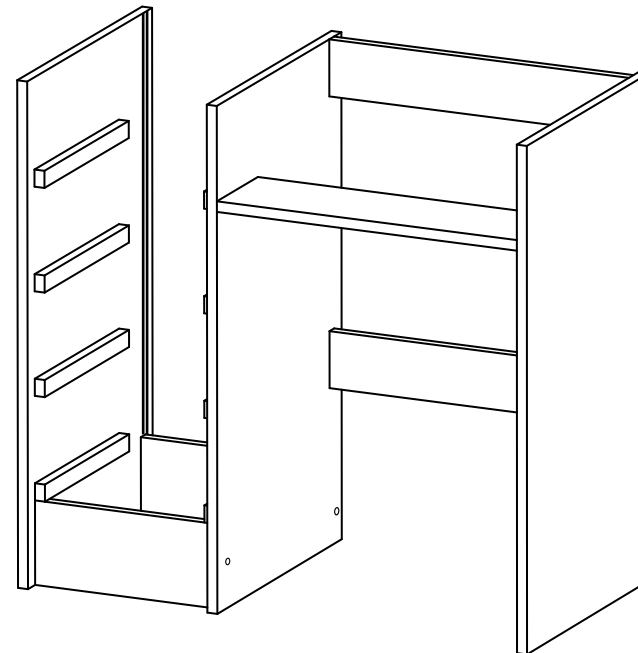


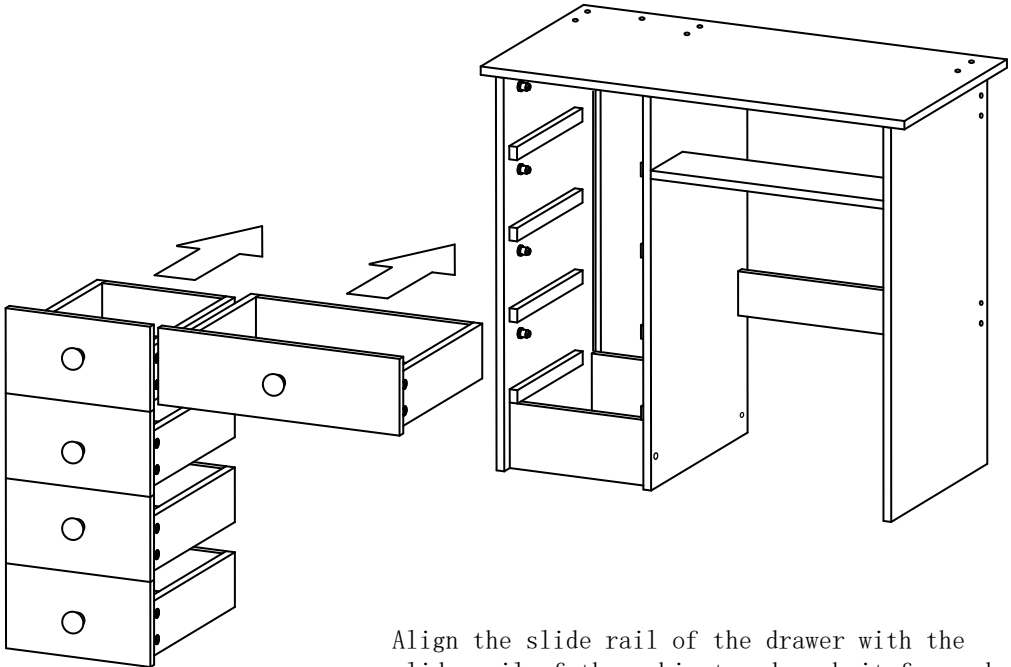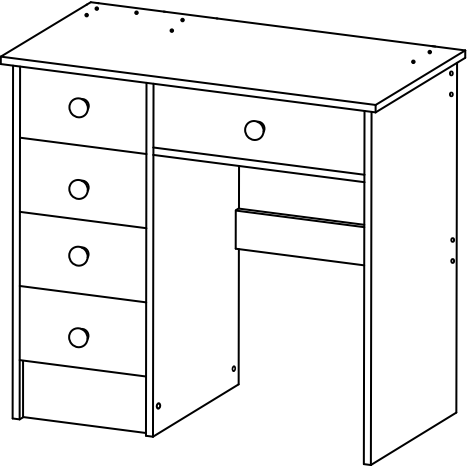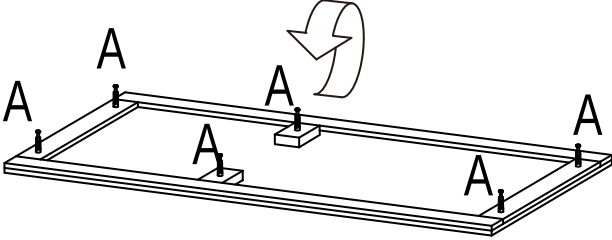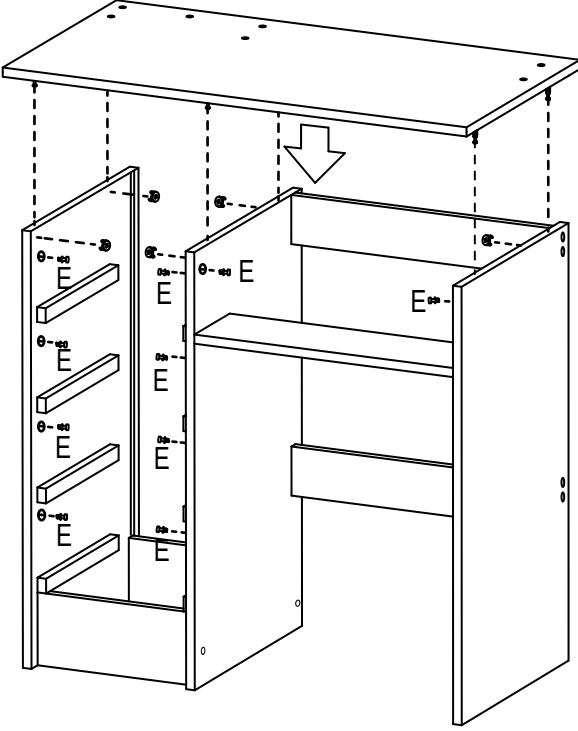A  6PCS	B  6PCS	 Align the slide rail of the drawer with the slide rail of the cabinet and push it forward 
E  10PCS	 Screw A into the corresponding hole of 14 plate Align the panel with the previously installed part and connect it. Lock A with B and fix it Install the Positioning pin (E) on both sides 	

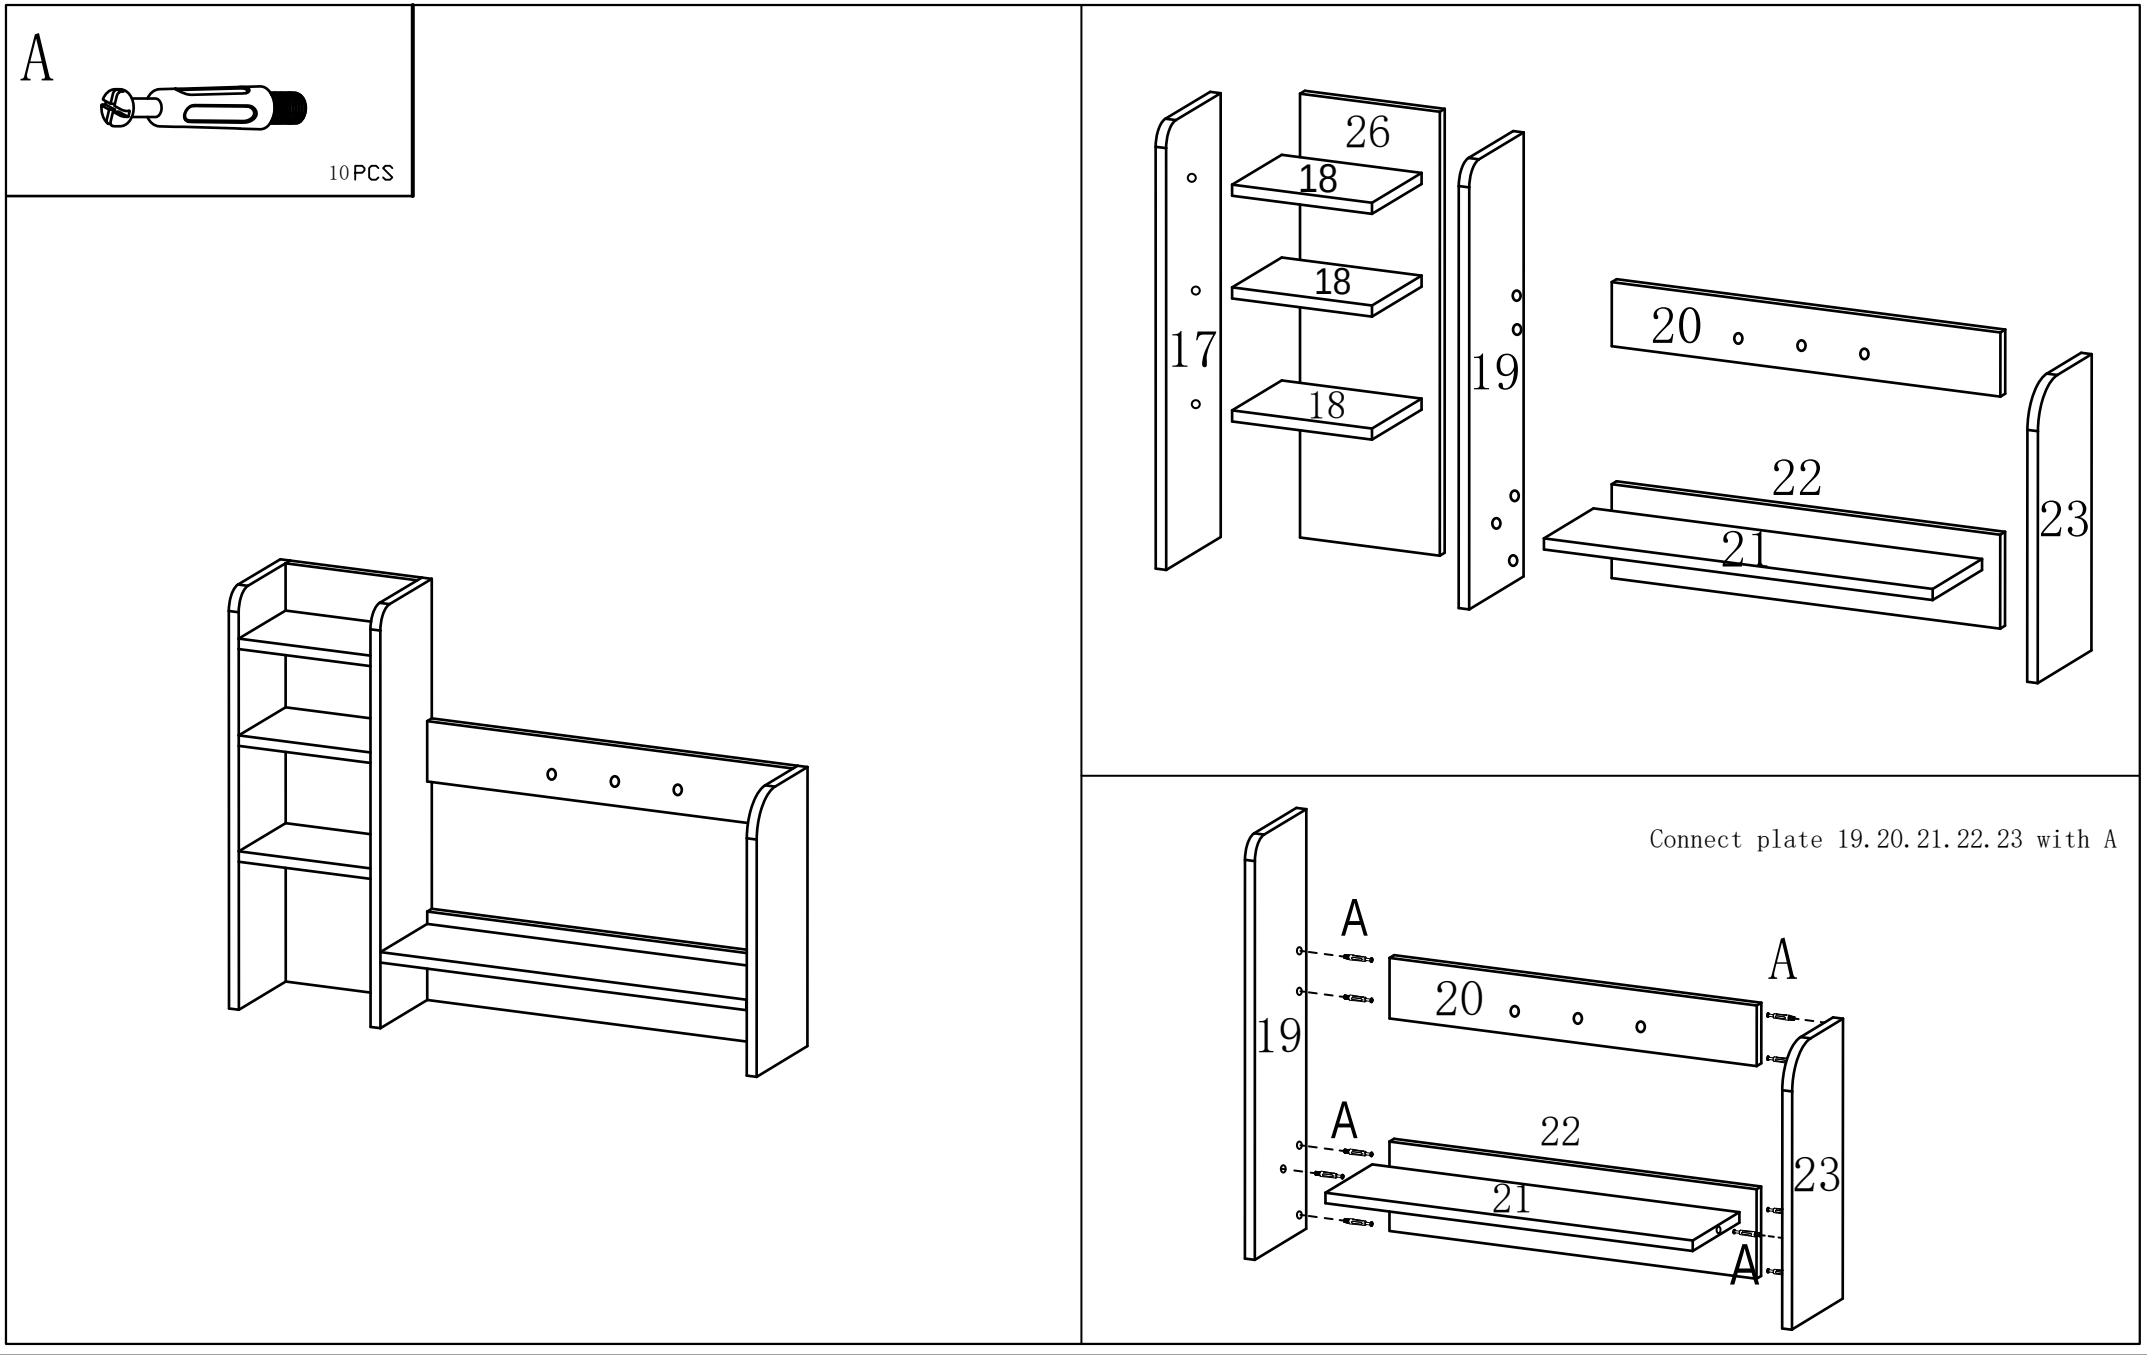


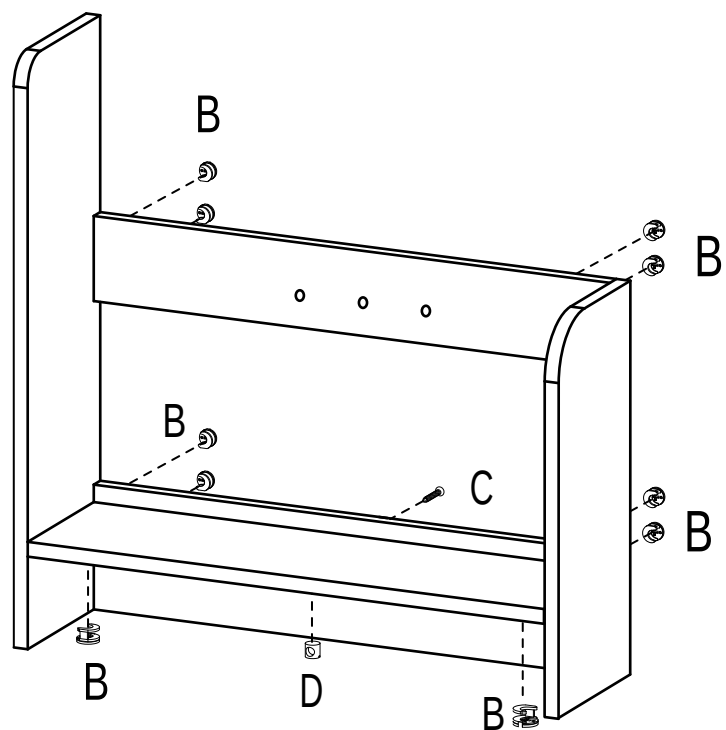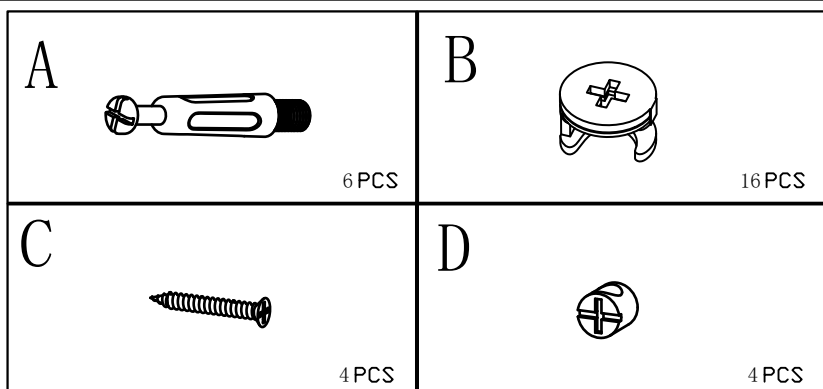

Lock A with B and fix it; Put D into the corresponding hole of plate 21, and then screw in with C

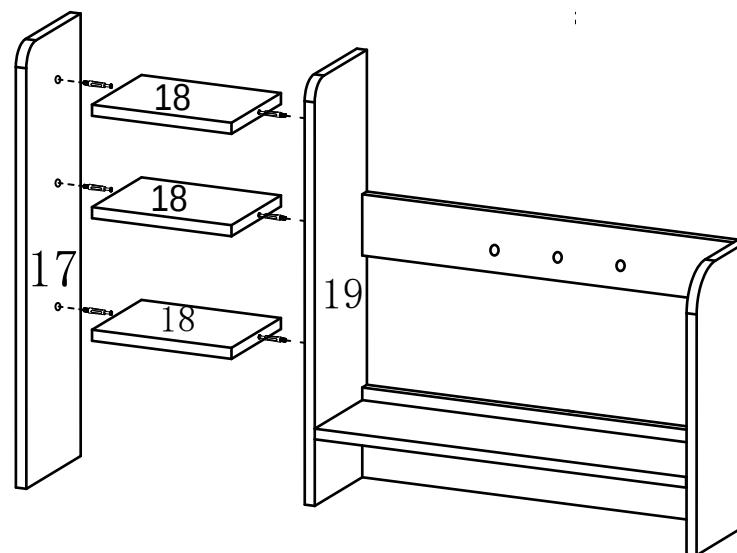

Connect plates 17, 18 and 19 with A

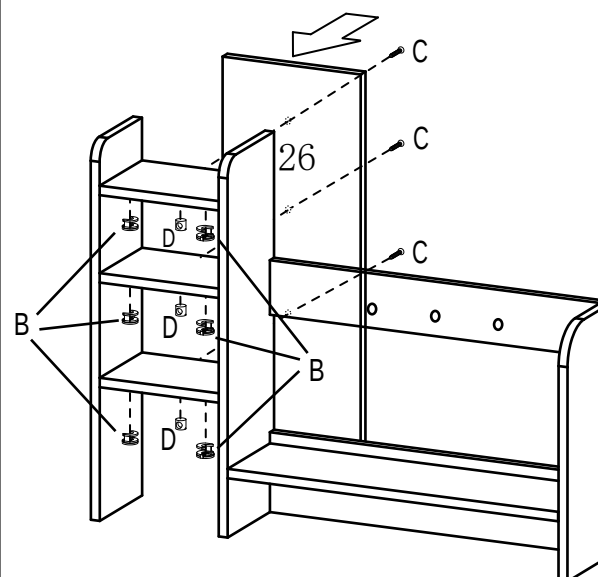

Lock A with B, place D in plate 18, and screw C in

A





7 PCS


B



7 PCS

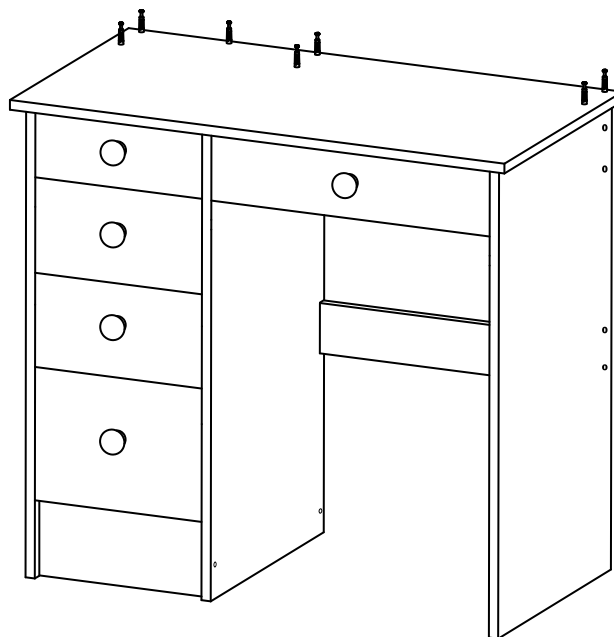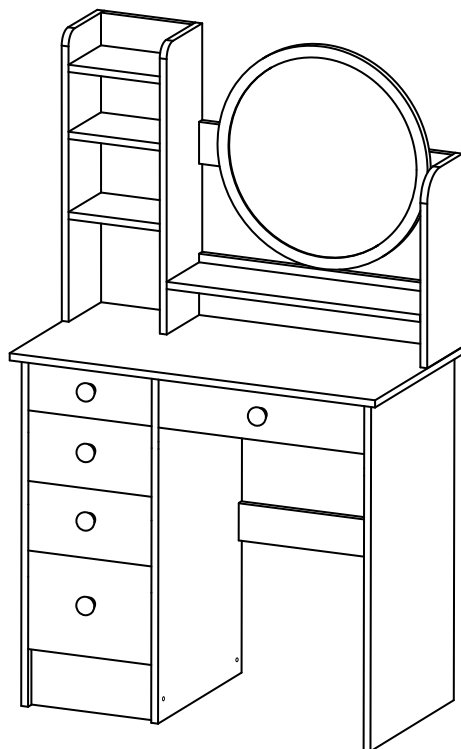

Screw in A on the panel

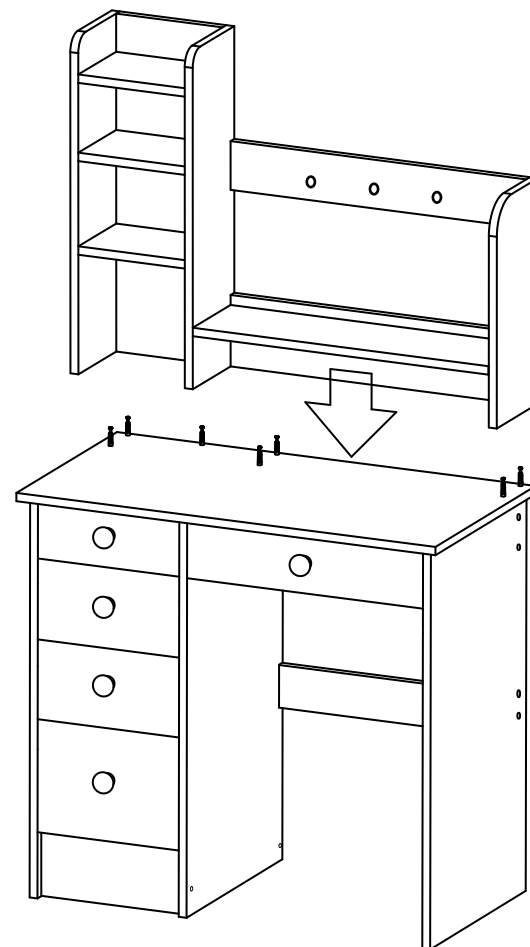


Align the upper part with A and
connect it with the lower part,
then lock and fix it with B


J



3 PCS

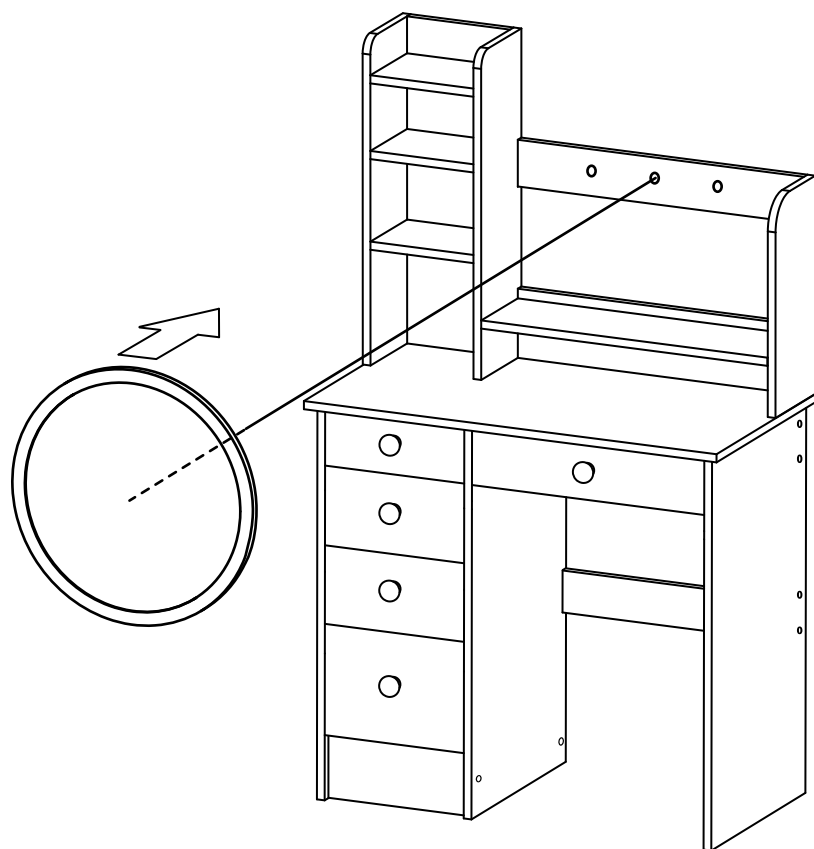

Align the mirror with the hole of plate 20

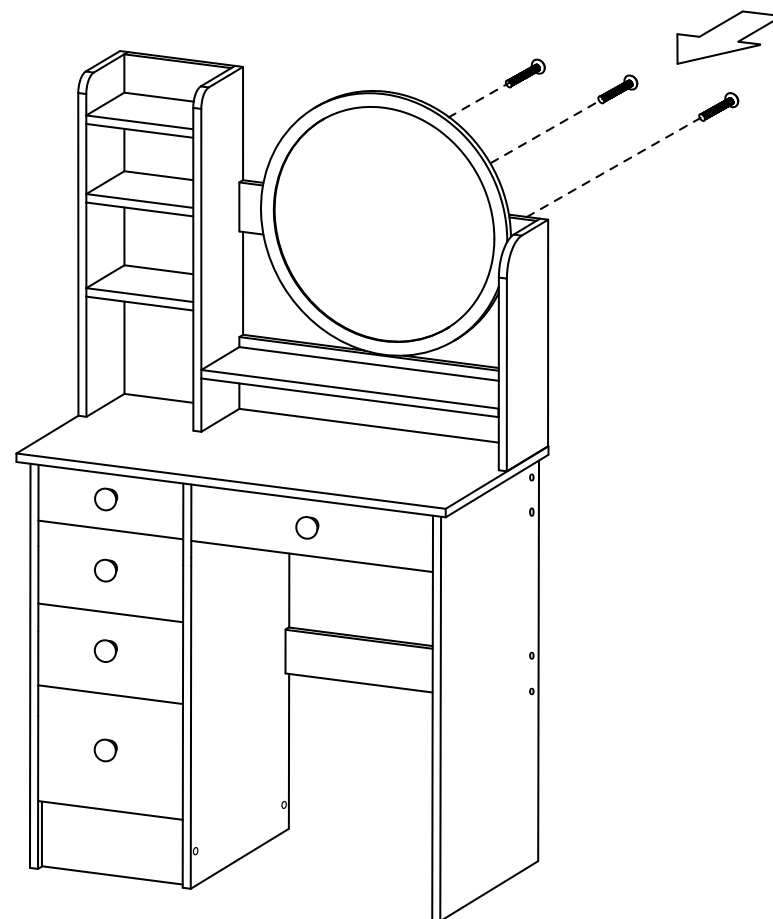

Screw F into the hole of plate 20 to fix the mirror

C



8 PCS

D





8 PCS





G



8 PCS

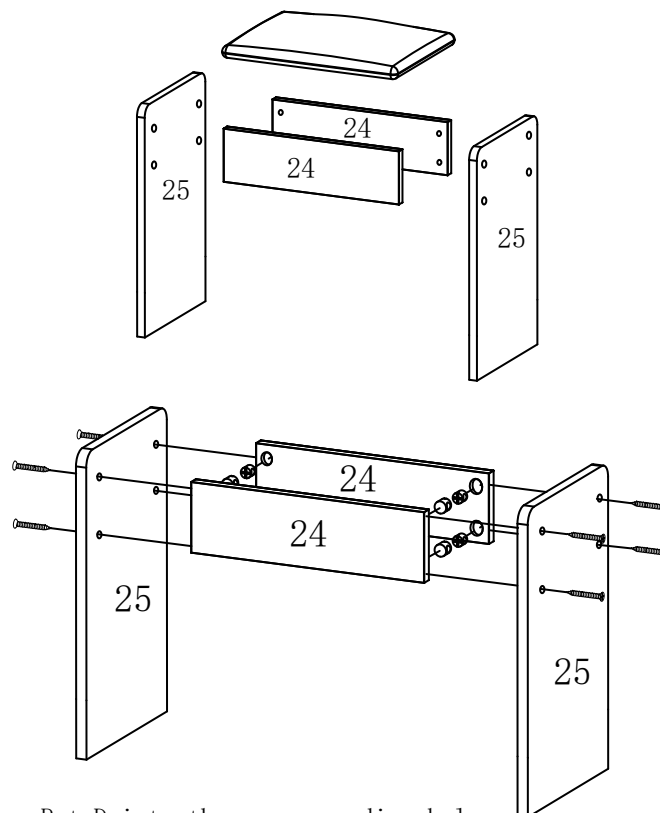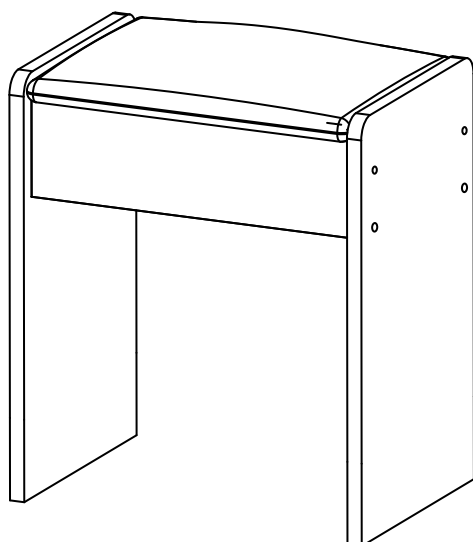

Put D into the corresponding hole of plate 24, and then screw C into plate 25

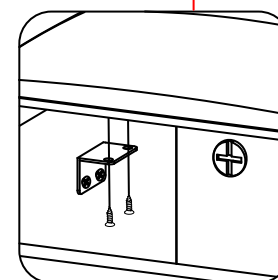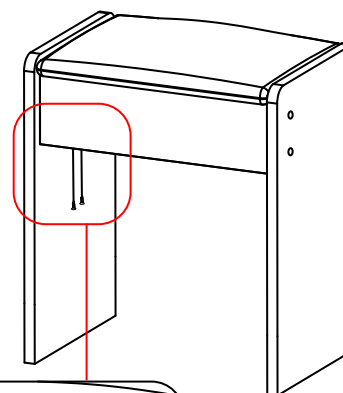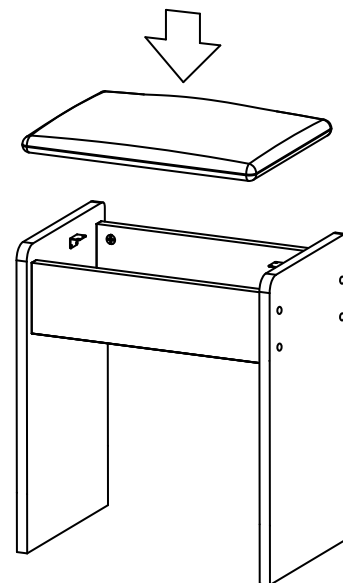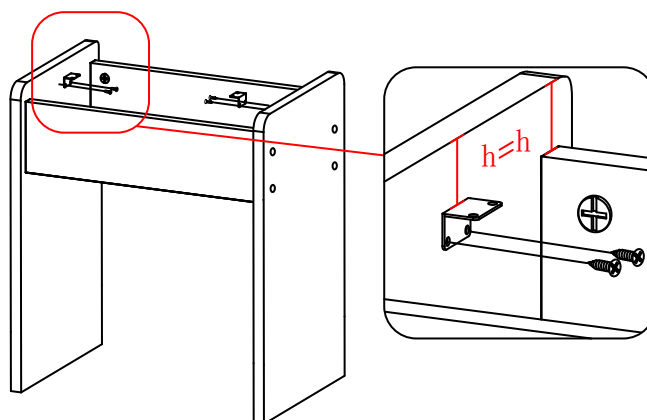

Fix H on the inside of two 25 plates with G. Fix H under the soft bag with G.