



ASSEMBLY INSTRUCTIONS

6PCS DINING TABLE SET

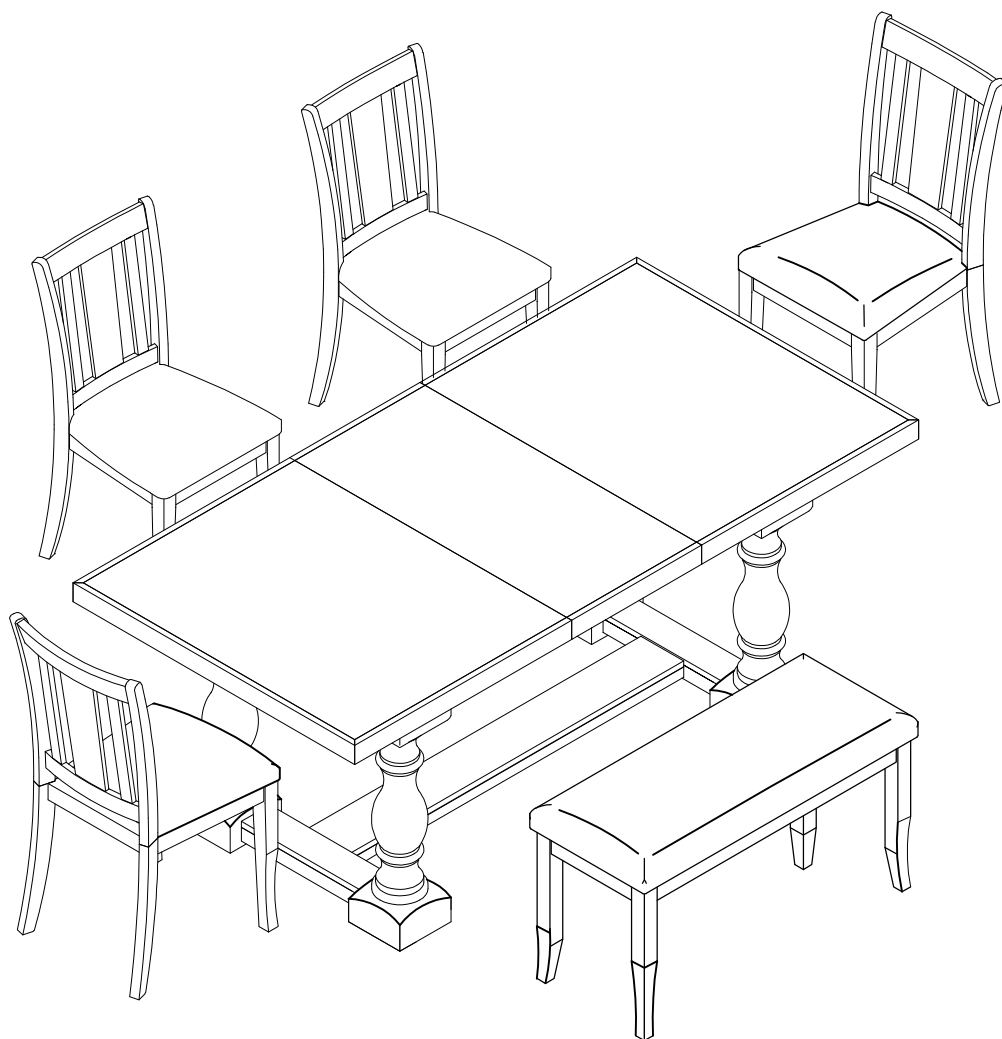


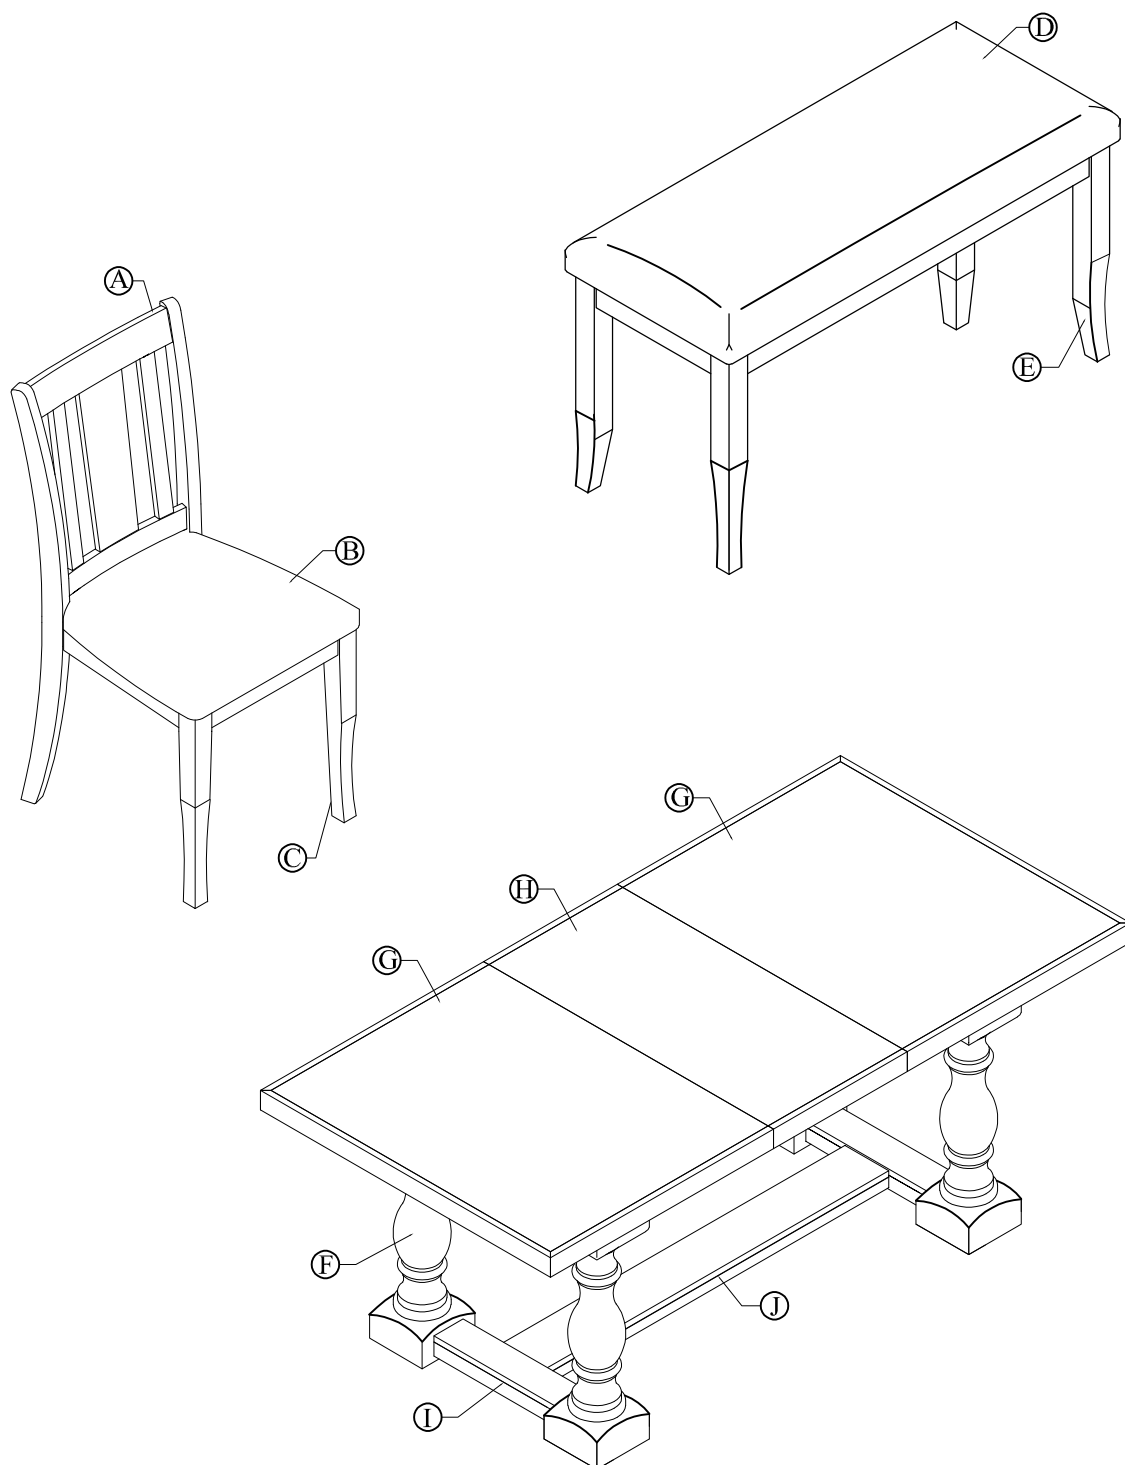


Notice:

1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust on a flat ground and tighten up all screws again.
6. Note: If one of some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.


CARTON CONTENT:

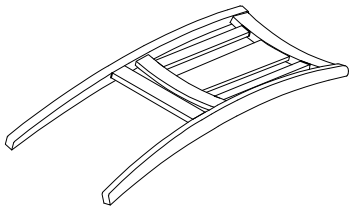


Ⓐ x4

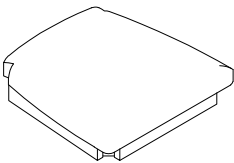


Ⓑ x4

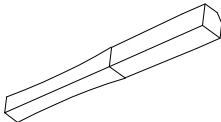


Ⓒ x8




Chair Hardware

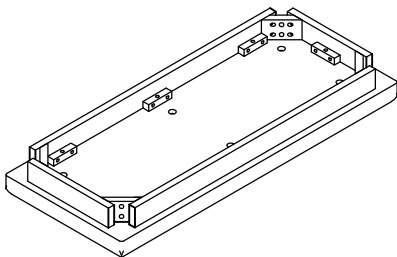


Ⓓ x1

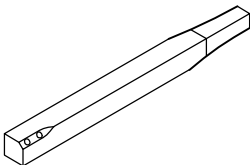


Ⓔ x4

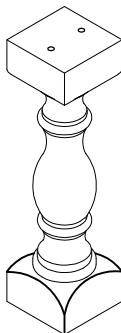


Ⓕ x4




Bench Hardware

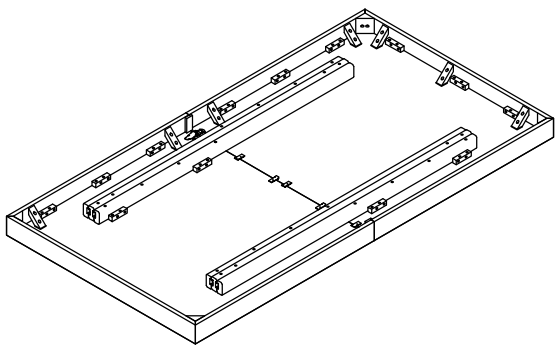


Ⓖ x1

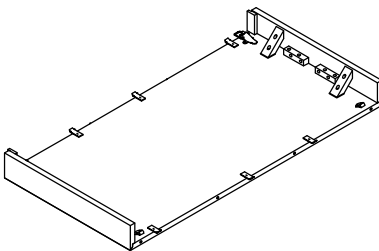


Ⓗ x1

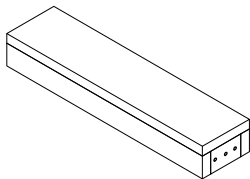

Ⓘ x2

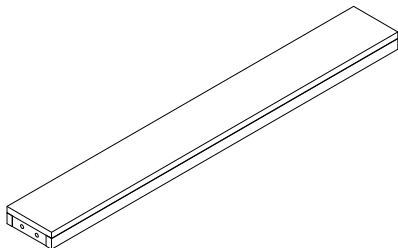

Ⓙ x1

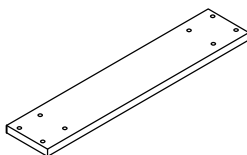

Ⓚ x2


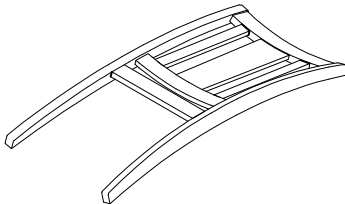
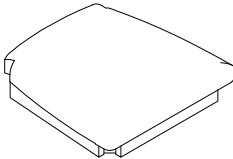
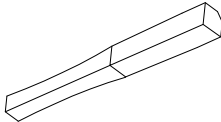
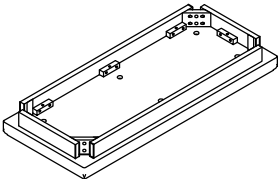
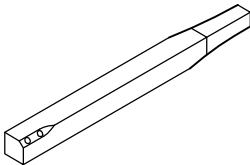

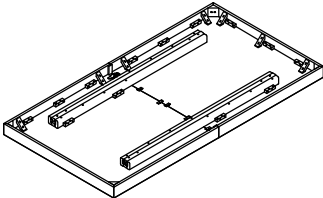
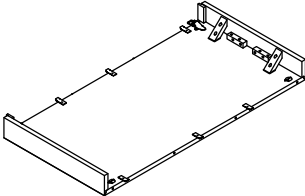
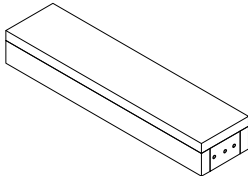
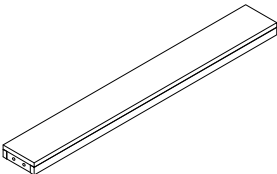
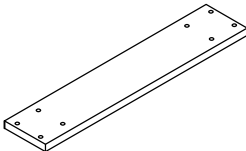




Table Hardware

Part List

A  4PCS	B  4PCS	C  8PCS	D  1PCS
E  4PCS	F  4PCS	G  1PCS	H  1PCS
I  2PCS	J  1PCS	K  2PCS	

CHAIR HARDWARE FOR ONE			
① x 4 PCS  BOLT Ø1/4 * 75 mm	② x 4 PCS  BOLT Ø1/4 * 60 mm	③ x 2 PCS  BOLT Ø1/4 * 40 mm	④ x 10 PCS  FLAT WASHER Ø1/4 * 13 mm
⑤ x 10 PCS  LOCK WASHER Ø1/4 * 19mm	⑥ x 1 PC  ALLEN KEY 4mm		
BENCH HARDWARE			
① x 8 PCS  BOLT Ø1/4 * 60 mm	② x 8 PCS  FLAT WASHER Ø1/4 * 13 mm	③ x 8 PCS  LOCK WASHER Ø1/4 * 19mm	④ x 1 PC  ALLEN KEY 4mm
TABLE HARDWARE			
① x 8 PCS  BOLT Ø5/16 * 60 mm	② x 16 PCS  BOLT Ø5/16 * 40 mm	③ x 24 PCS  FLAT WASHER Ø5/16 * 13 mm	④ x 24 PCS  LOCK WASHER Ø5/16 * 19mm
⑤ x 1 PC  ALLEN KEY 4mm			
			5/10

STEP 1:

Ⓑ x1


Ⓒ x2

② x4

④ x4

⑤ x4

⑥ x1

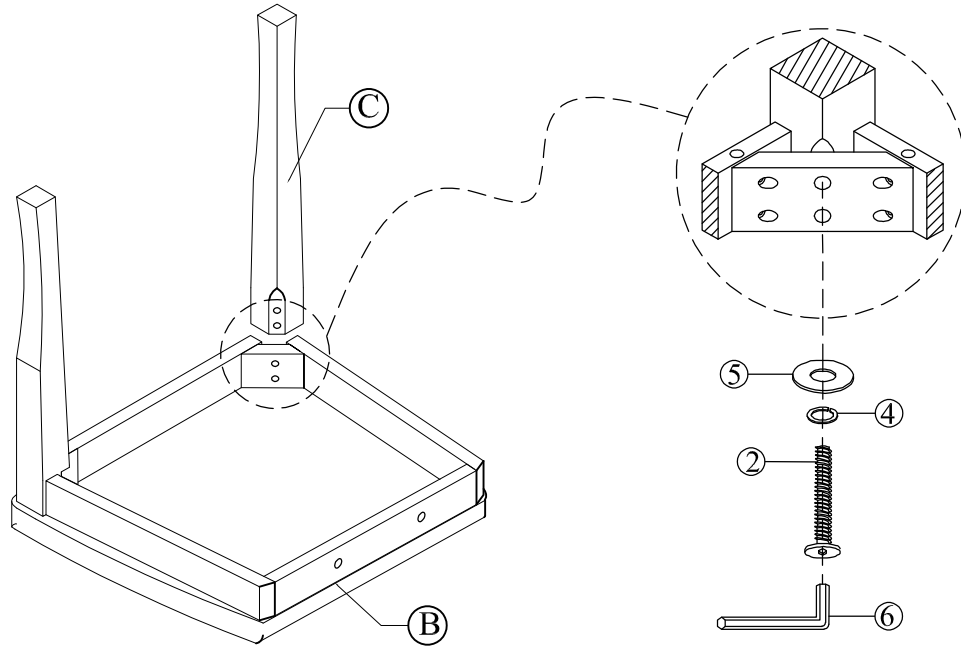

Connect the Front Leg (C) and Cushion seat (B), tighten Bolt (2), Flat Washer (4), Lock Washer (5) with Allen Key (6)

STEP 2:

Ⓐ x1


① x4

③ x2

④ x6

⑤ x6

⑥ x1

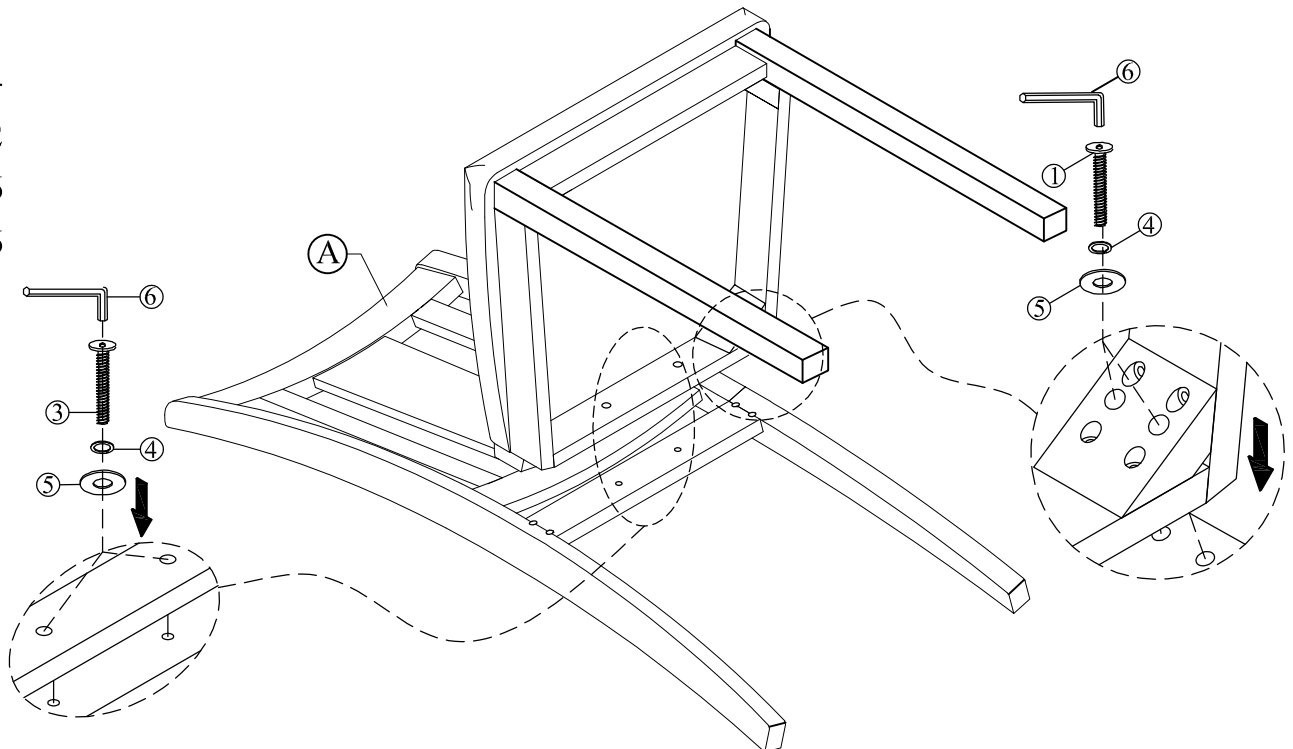

Connect the Part from Step 1 and Chair Back (A), tighten Bolt (1), Bolt (3), Flat Washer (4), Lock Washer (5) with Allen Key (6)

STEP 3:

Ⓓ x1


Ⓔ x4

① x8

② x8

③ x8


④ x1

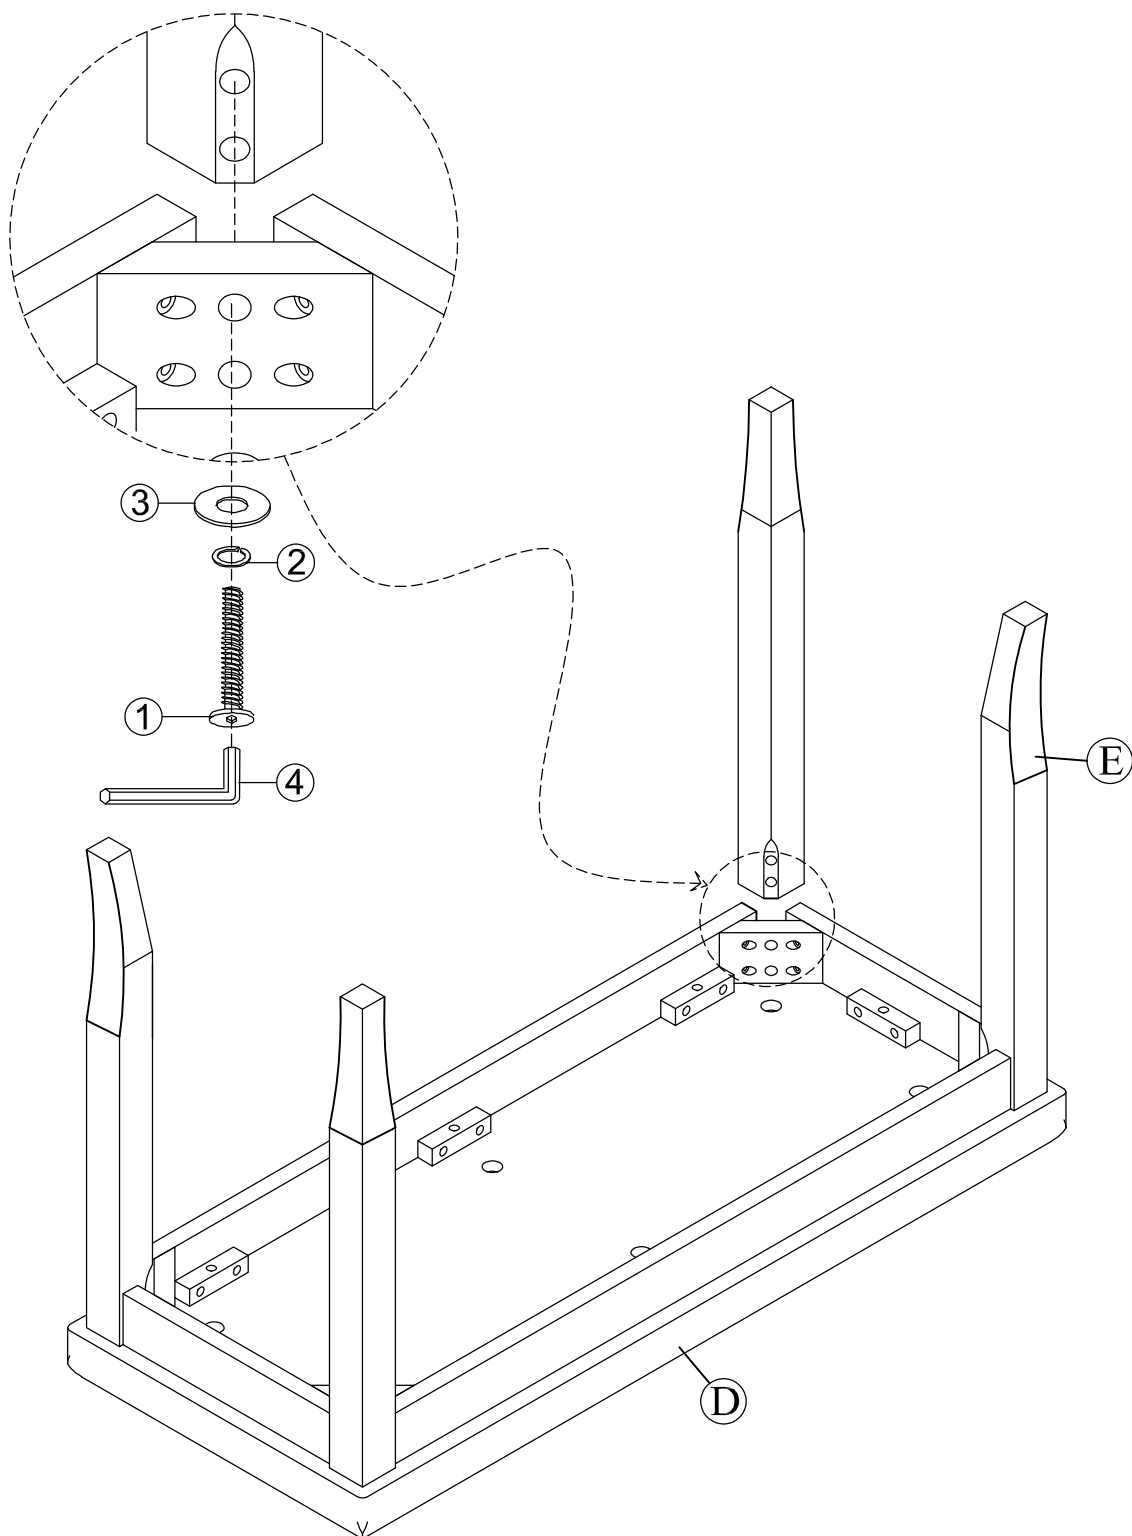

Connect the Leg (E) and Cushion seat (D), tighten Bolt (1), Flat Washer (2), Lock Washer (3) with Allen Key (4)

STEP 4:


- ⓕ x4
- ⓐ x2
- ⓑ x4
- ⓒ x4
- ⓓ x4
- ⓔ x1

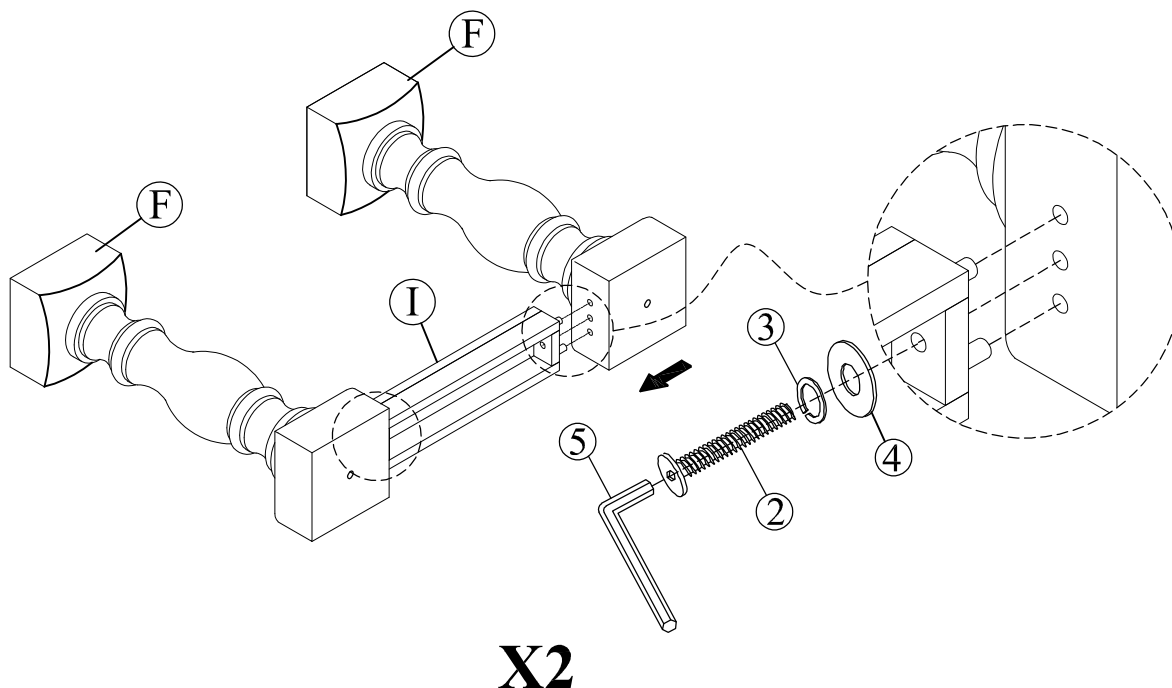

Connect the Leg (F) and the support (I), tighten Bolt (2), Flat Washer (3), Lock Washer (4) with Allen Key (5)

STEP 5:


- Ⓚ x2
- ⓐ x8
- ⓒ x8
- ⓓ x8
- ⓔ x1

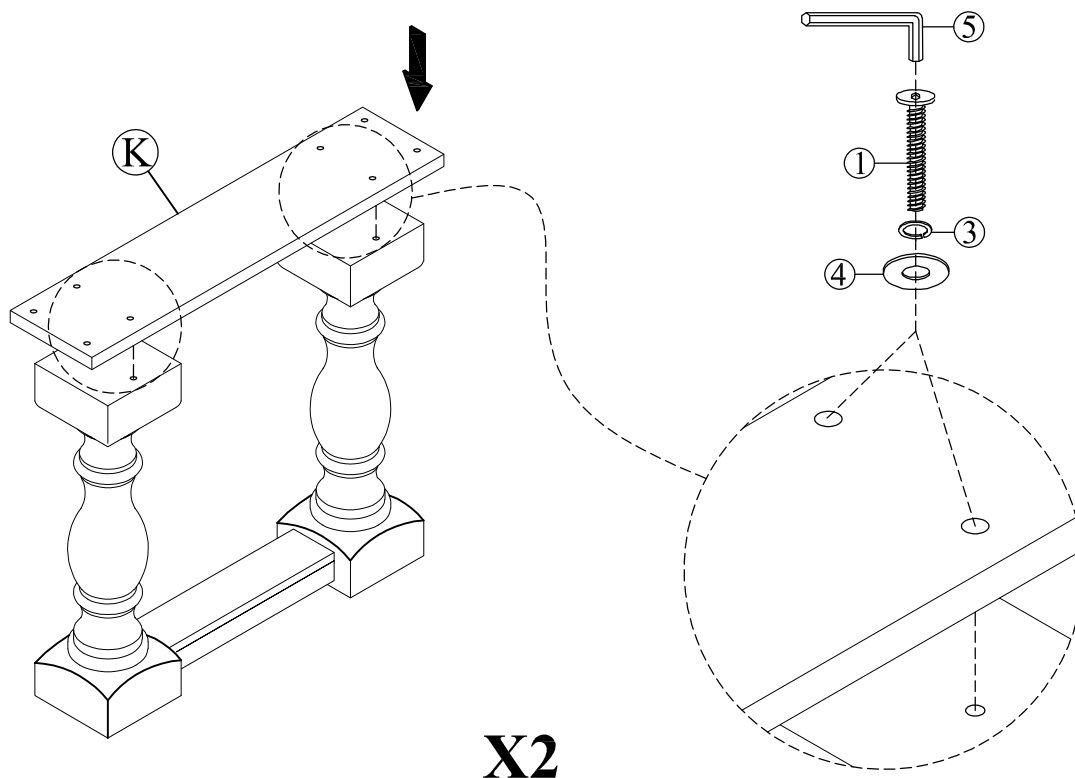

Connect the Part from Step 1 and Panel (K), tighten Bolt (1), Flat Washer (3), Lock Washer (4) with Allen Key (5)

STEP 6:


- ① J x1
- ② x4
- ③ x4
- ④ x4
- ⑤ x1

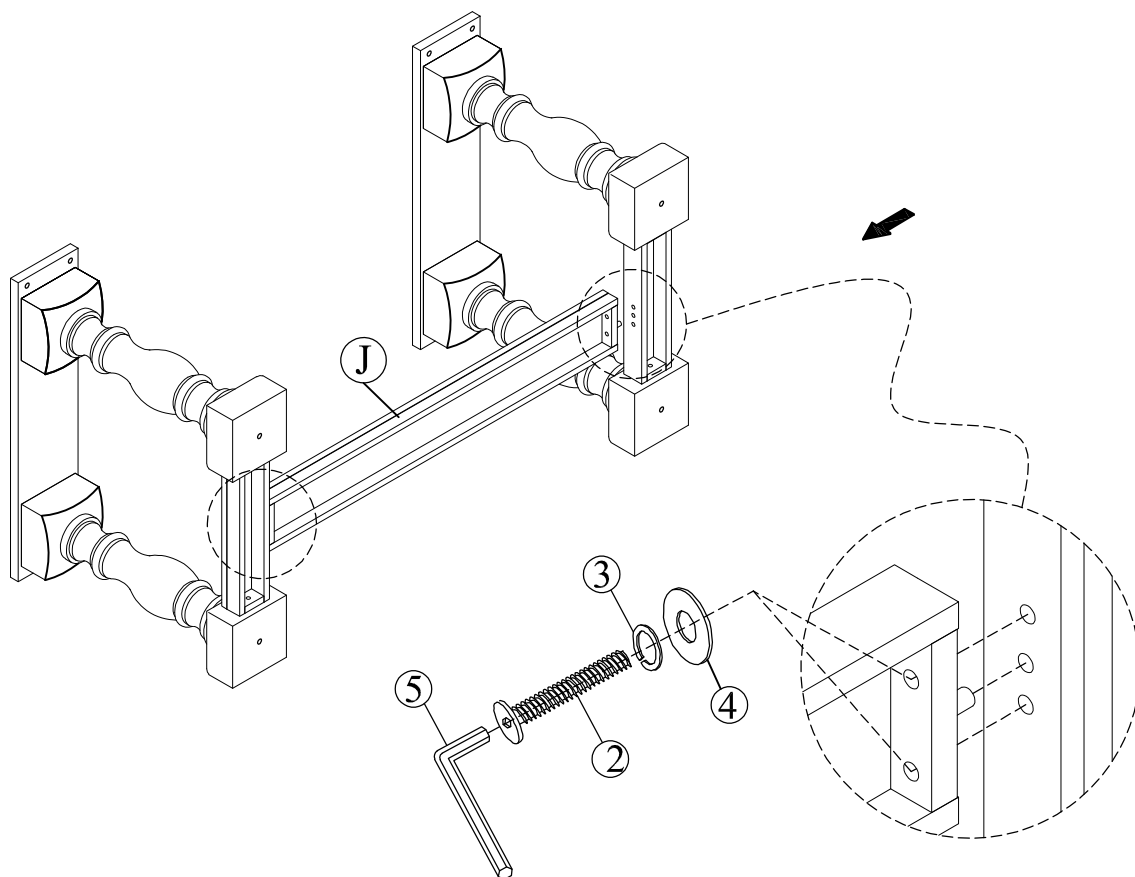

Connect the Part from Step 2 and the Middle Rail (J),tighten Bolt (2), Flat Washer (3), Lock Washer (4) with Allen Key (5)

STEP 7:


- ① G x1
- ② x8
- ③ x8
- ④ x8
- ⑤ x1

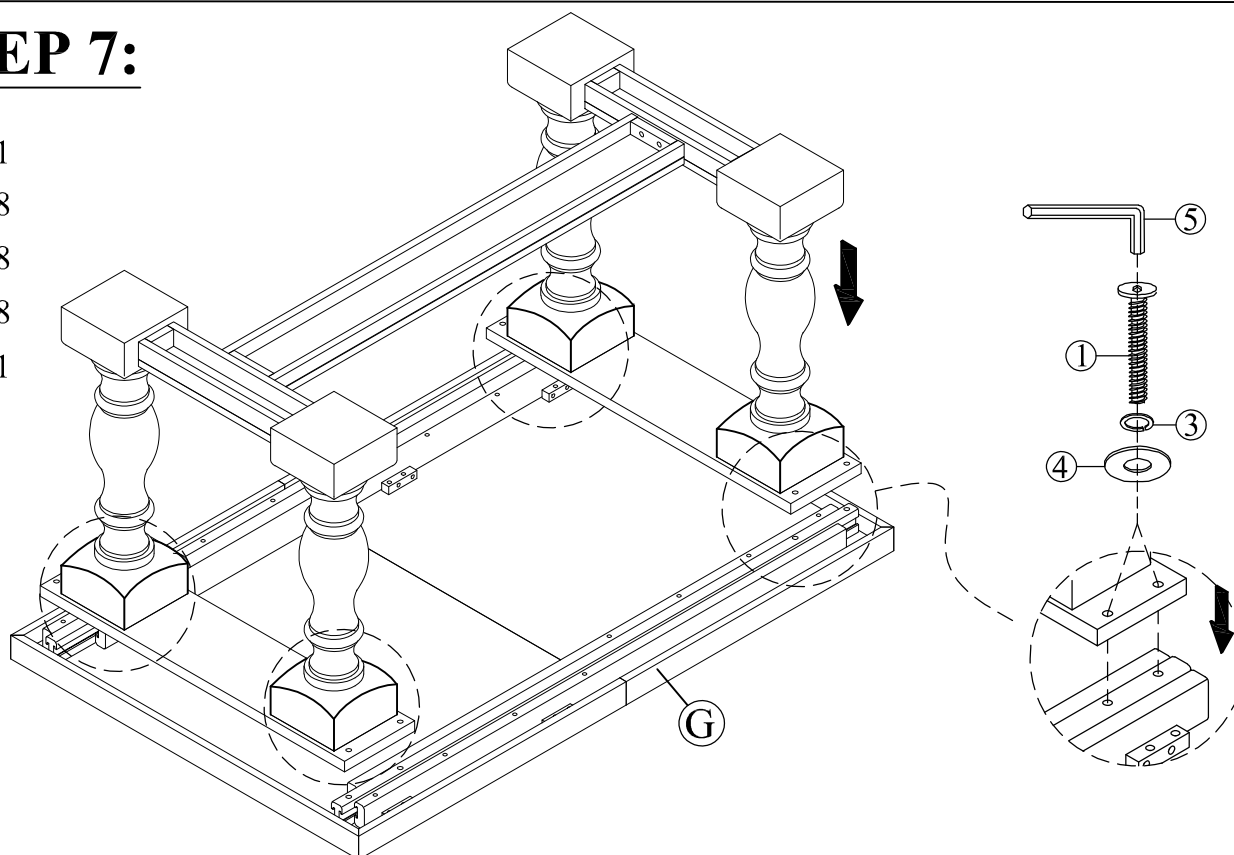

Connect the Part from Step 3 and Top Panel (G),tighten Bolt (1), Flat Washer (3), Lock Washer (4) with Allen Key (5)

STEP 8:

Ⓜ x1

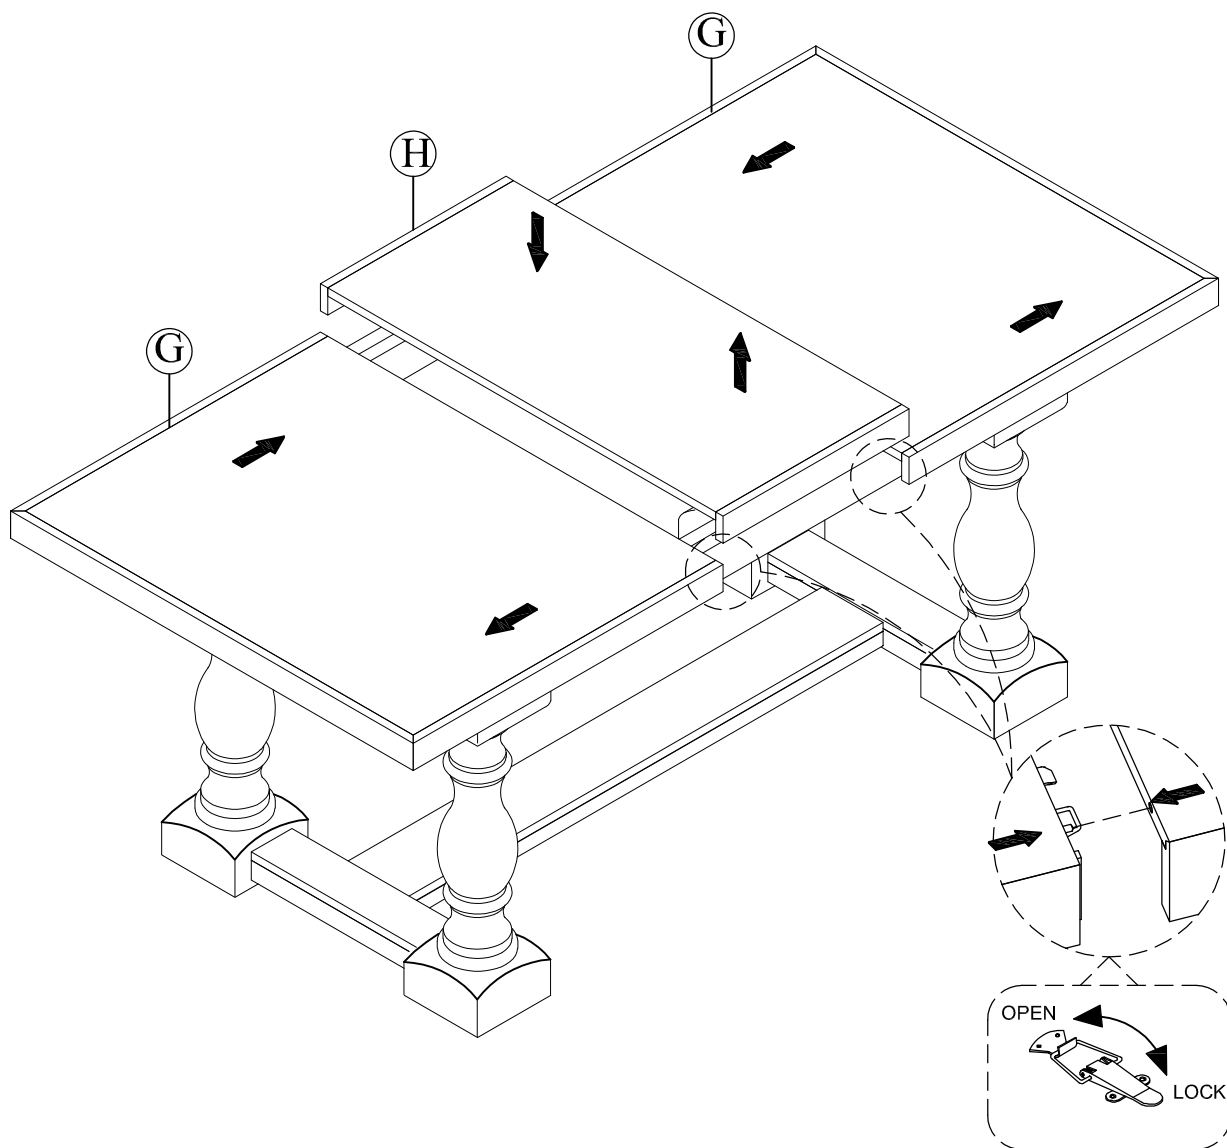

Open the 4 lockers under the Top Panel (G), drag them to side , put the Medium Panel (H) into the middle, fit the posotion then close the lockers.