


RECESSED HANDLE ASSEMBLY INSTRUCTION SHEET

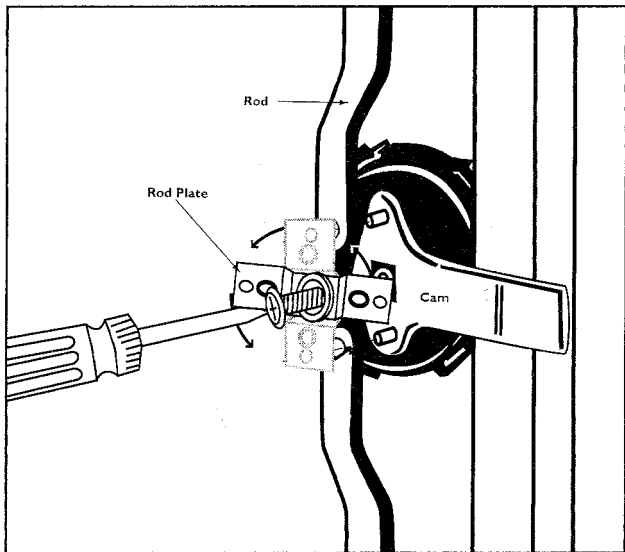

Loosen screw and rotate rod plate on back of handle. Place rods through holes at top and bottom of door and then attach to cam. Rotate rod plate back to its original position and re-tighten screw to secure rods to door handle.