



BOX SPRING Set-up Instruction

BBS Size: Full/Queen/King/Cal king


If you have any questions about the product, please don't hesitate to contact us.
You can reach us through your order.
Thanks for your support!

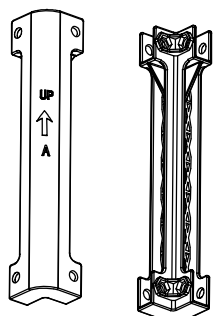


A*4 PCS

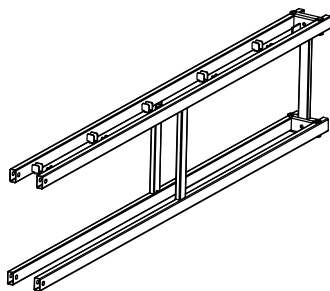


B*2 PCS

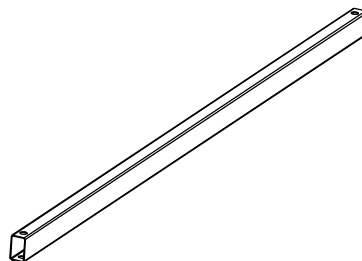


C*2 PCS

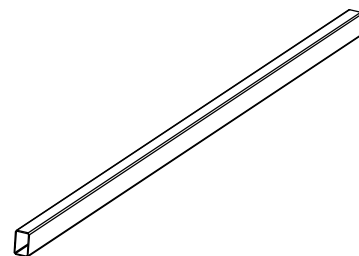


D*20 PCS

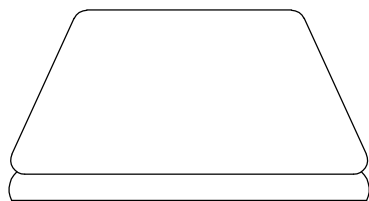


E*1 PCS
(Bed Cover)

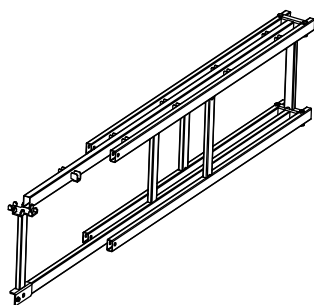

F*1 PCS

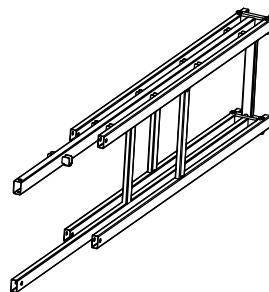

G*1 PCS

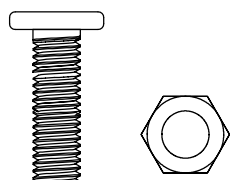

(M6x24 bolt)*17 PCS
(M6 nuts)*16 PCS




(M6x32 bolt)*5 PCS



1 PCS


Step 1

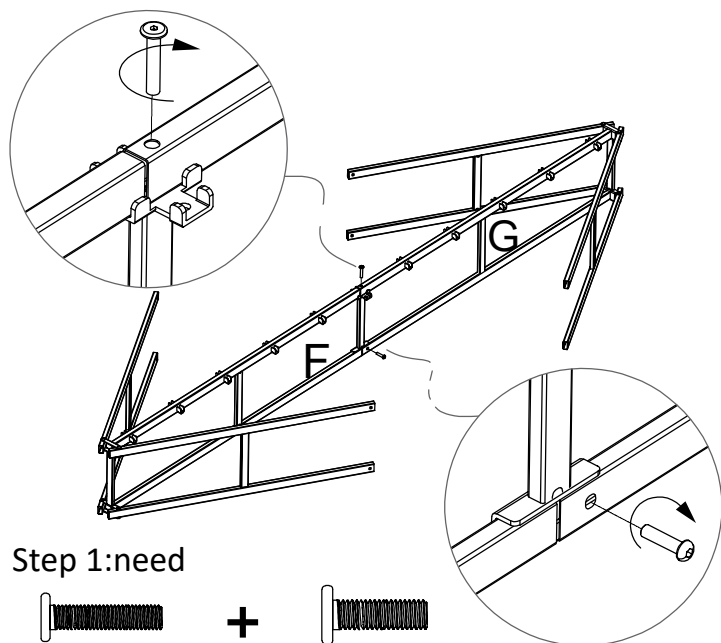

Step 1: need

(M6*32bolt)x1Pcs+(M6*24bolt)x1Pcs

Step 2

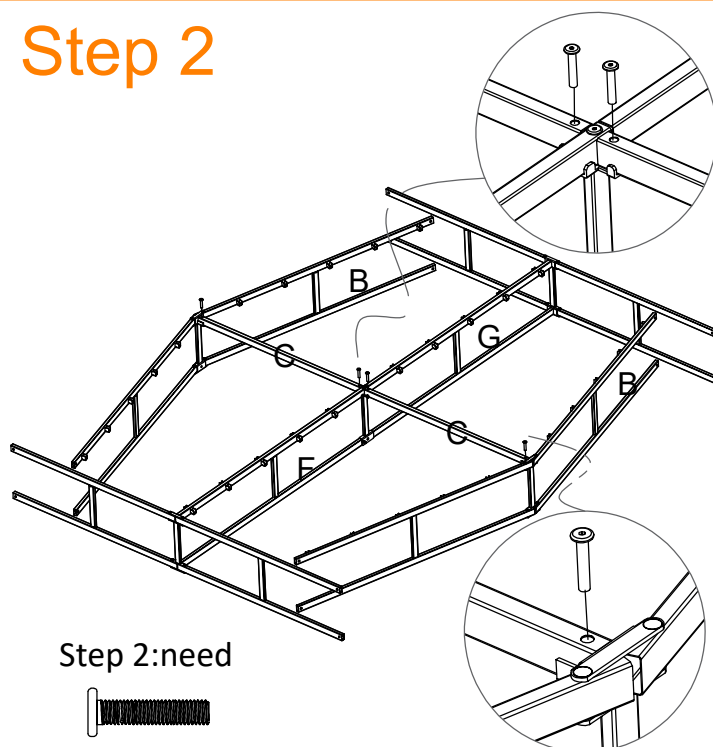


Step 2: need

(M6*32bolt)x4Pcs




Please do not tighten the screws completely to avoid tilting the final assembly, but tighten them completely after the assembly is complete.


Step 3

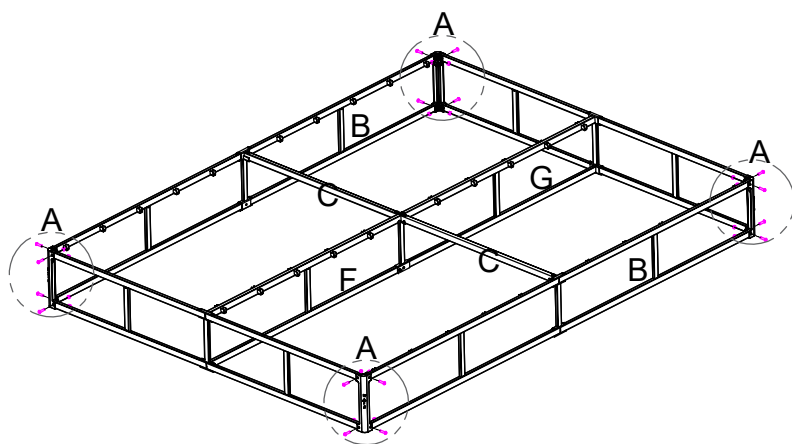


Step 3:need




(M6*24bolt+M6 nuts)x16Pcs

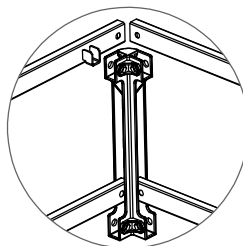

①Put F/G and B into A

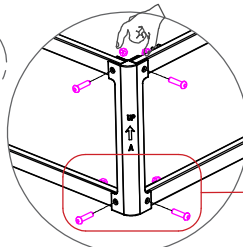


②Insert the M6 nut into the corresponding hexagonal groove
(Install the screws below and gently press down on the tube with your hand for better installation)

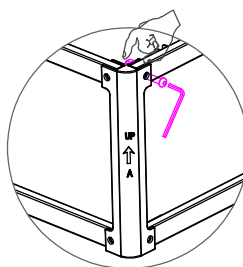


③After making sure that the M6 nut is in the groove and pressing it firmly with your fingers, then rotate the M6 bolt and lock it with the Allen wrench.


Step 4

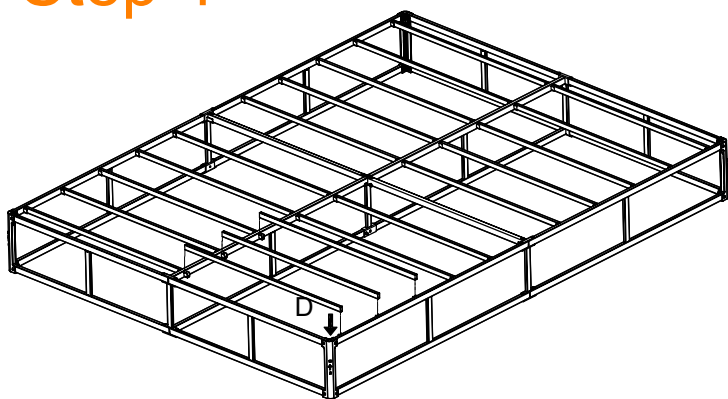

Step 4:need Dx20Pcs

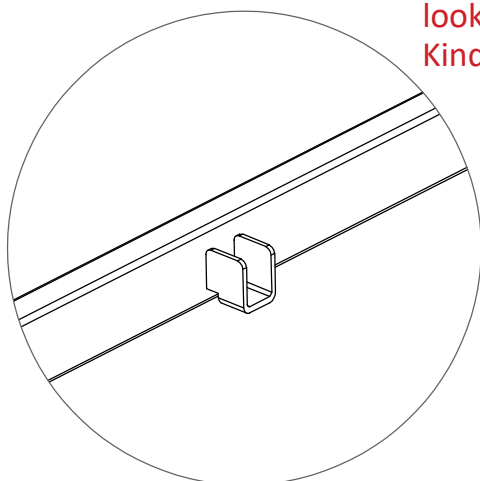

Step 5

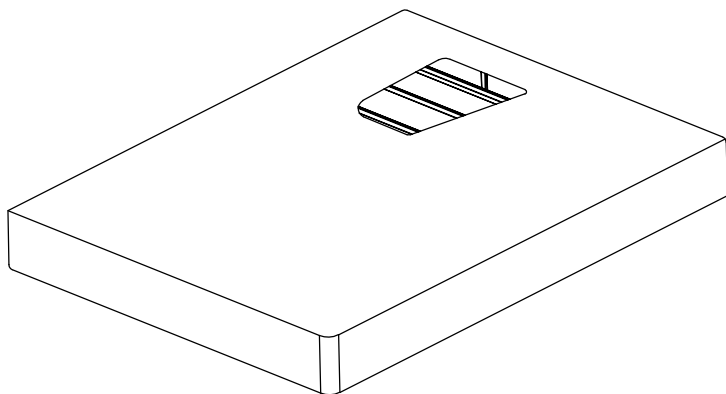


Tips : For the KING size, The length and width of the cover look almost the same but actually they are different in size. Kindly reverse the direction if the cover doesn't work.


BOX SPRING Set-up Instruction

BBS Size: Twin/Twin XL


If you have any questions about the product, please don't hesitate to contact us.
You can reach us through your order.
Thanks for your support!

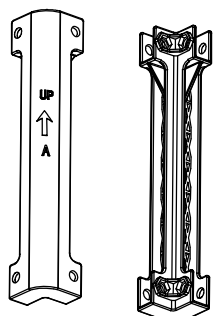


A*4 PCS

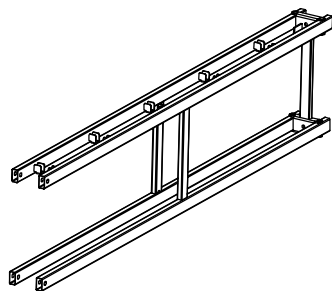


B*2 PCS

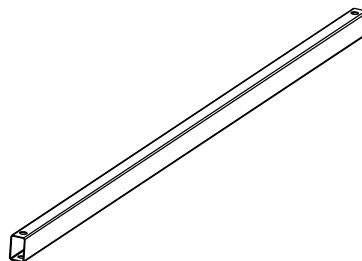


C*1 PCS

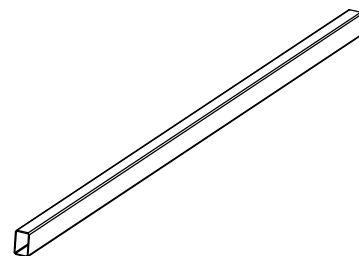


D*10 PCS

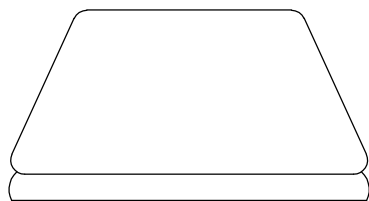

E*1 PCS
(Bed Cover)

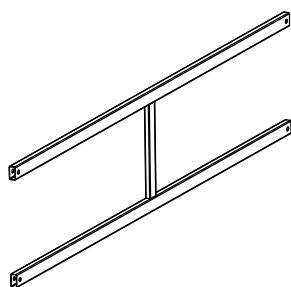

F*2 PCS

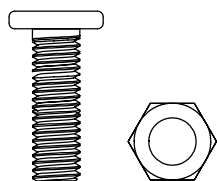

(M6x24 bolt)*16 PCS
(M6 nuts)*16 PCS




(M6x32 bolt)*2 PCS




1 PCS

Step 1

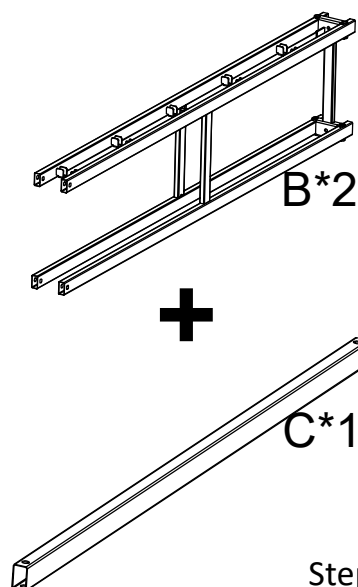

B*2

C*1

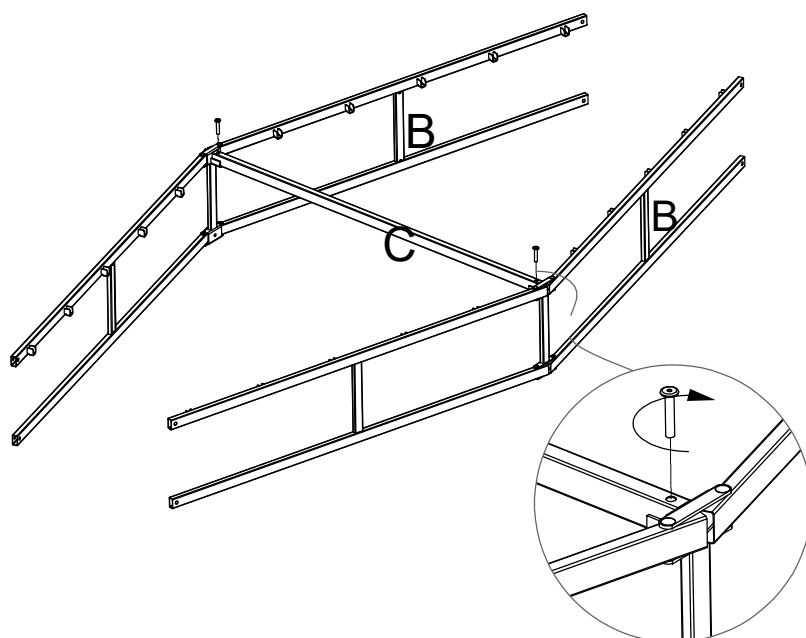

Step 1: need




(M6*32bolt)x2Pcs

①




Please do not tighten the screws completely to avoid tilting the final assembly, but tighten them completely after the assembly is complete.


Step 2

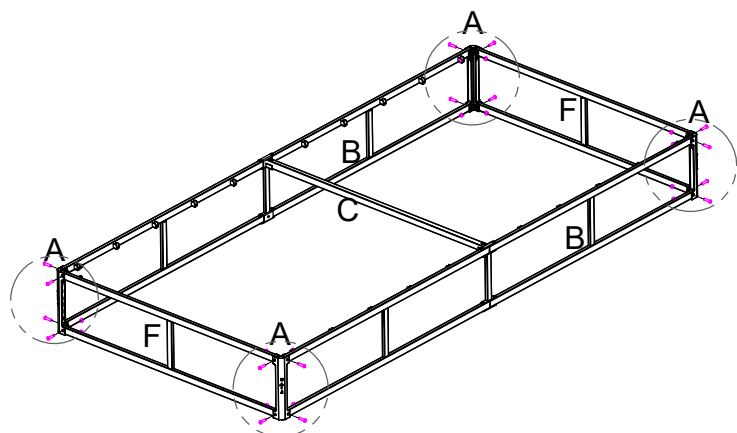


Step 3: need




(M6*24bolt+M6 nuts)x16Pcs

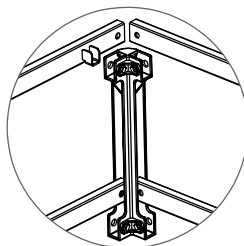

① Put F and B into A

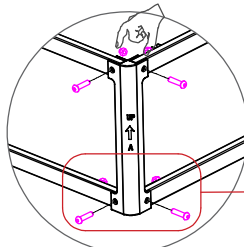


② Insert the M6 nut into the corresponding hexagonal groove
(Install the screws below and gently press down on the tube with your hand for better installation)

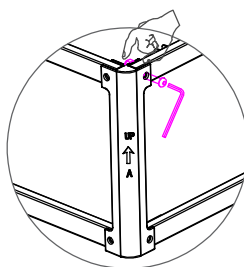


③ After making sure that the M6 nut is in the groove and pressing it firmly with your fingers, then rotate the M6 bolt and lock it with the Allen wrench.

Step 3

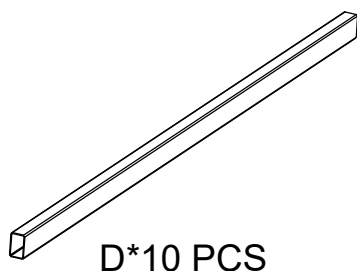


D*10 PCS

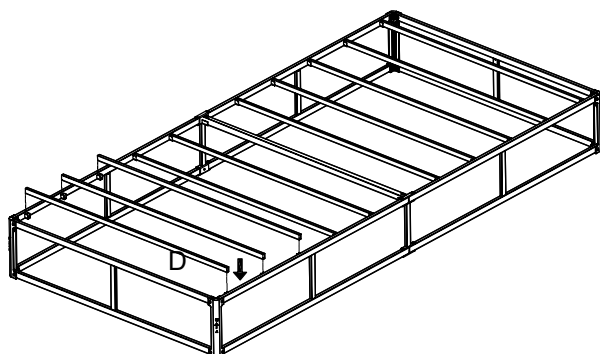


Step 4: need D*10Pcs

Step 4

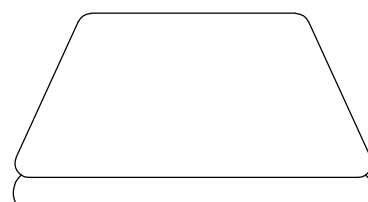

E*1 PCS
(Bed Cover)

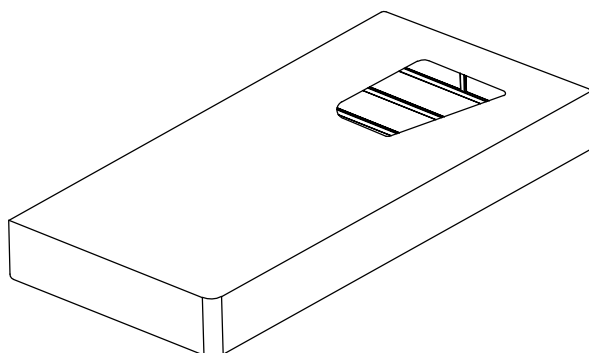

Please open the bed cover and distinguish the length and width first before use it, and make sure it will cover the box spring perfect.