

Montageanleitung

Assembly instruction

Instructions de montage

Instrucciones de montaje

Istruzioni per il montaggio

Руководство по монтажу

Instrukcja montażu

Montážní návod

Návod na montáž

Szerelési utasítás

Инструкция за монтаж

Kurulum Talimatları

Navodilo za montažo

Montagehandleiding

A s e n n u s o h j e

Upute o montaži

Instrucțiuni de montaj

Monteringsveiledning




إرشادات التركيب

Monteringsvejledning

Instruções de montagem


Monteringsanvisning




Beschläge / fittings / Ferrures pour meubles / Herrajes / Guarnizioni / Крепления / Okucia / Kování /Kovanie / Vasalások / обков / Parçaları /okovje / Hang- en sluitwerk / helat / Oblo-ge / armături, balamale / Beslag / بعض التركيبات / Beslag / Guarnições / Beslag

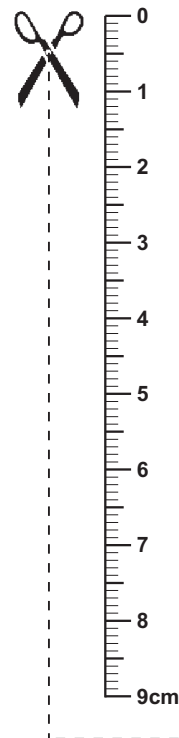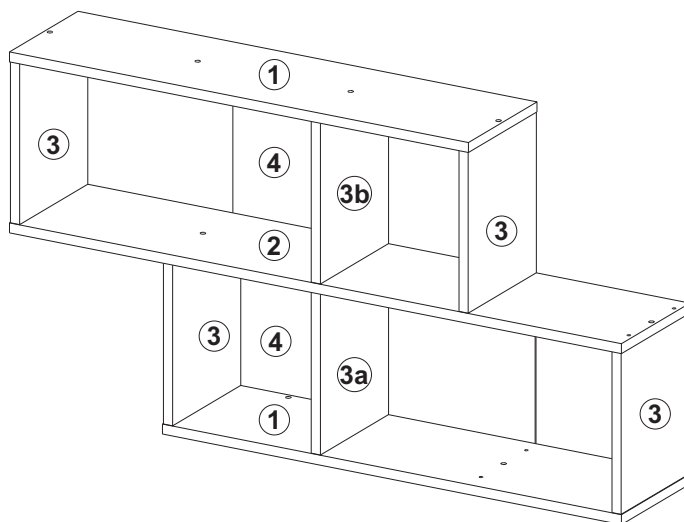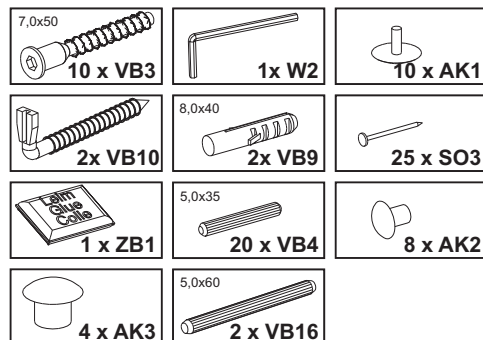





Sie benötigen:
You need:
Vous avez besoin de:
Necesita:
Le servono :
Вам потребуются:
Potrebujete:
Tarvitset:
Aveți nevoie de :
Du behøver:
سوف تحتاج إلى:

Potrzebne są:
Potřebujete:
Potrebujete:
Szükséges eszközök:
На Вас са Ви нужни:
İhtiyaciniz:
U hebt nodig:
Trebate:
Du skal bruge:
Necessita de:
Du behöver:

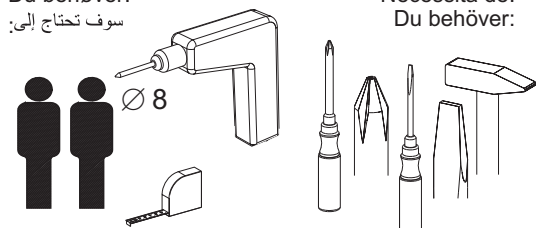

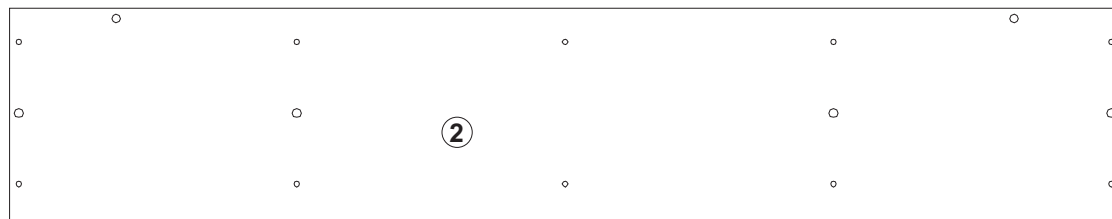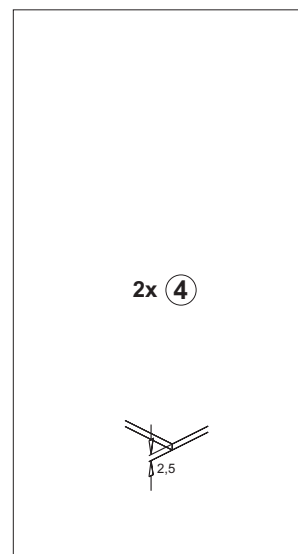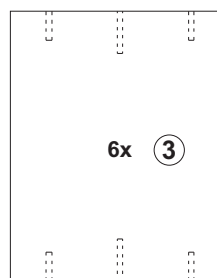

A

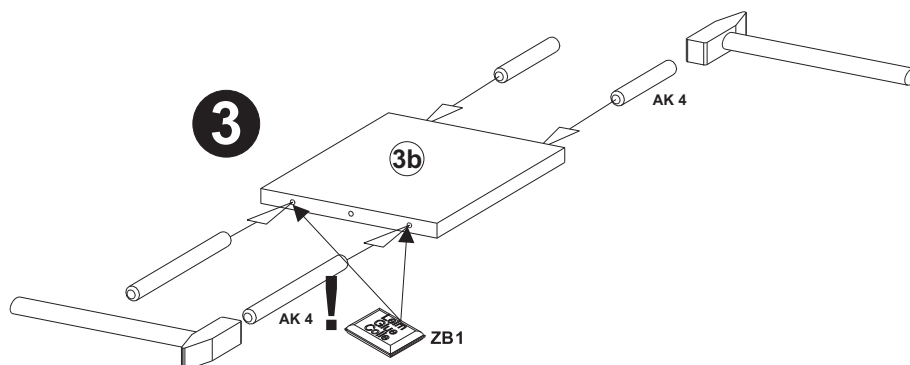
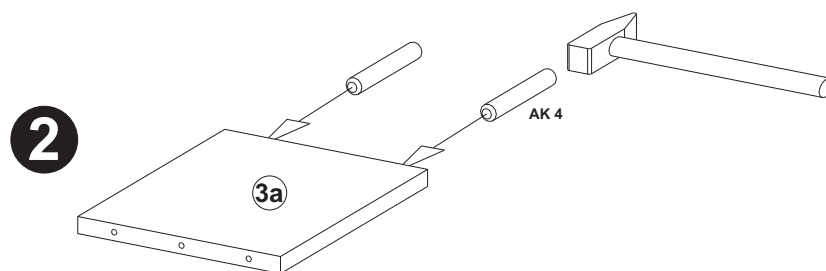
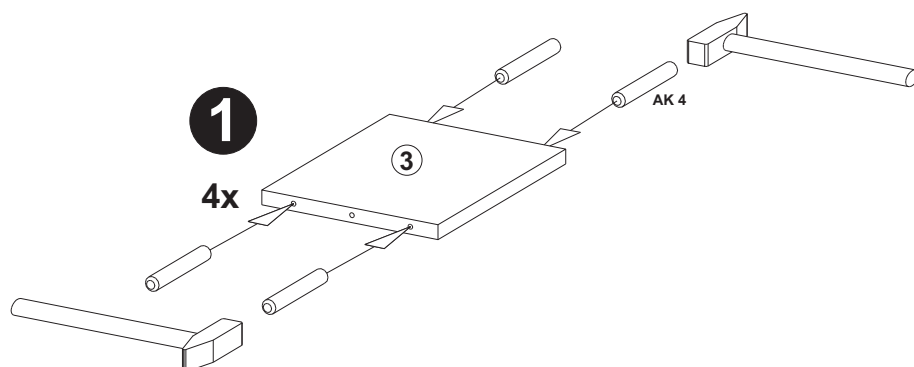



B





7,0x50
10 x VB3

W2



10 x AK1

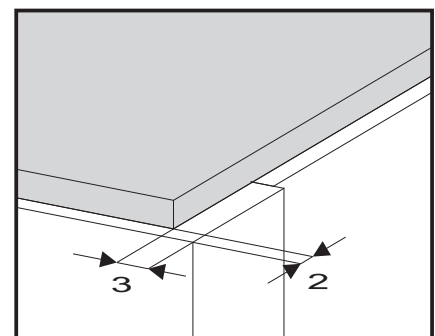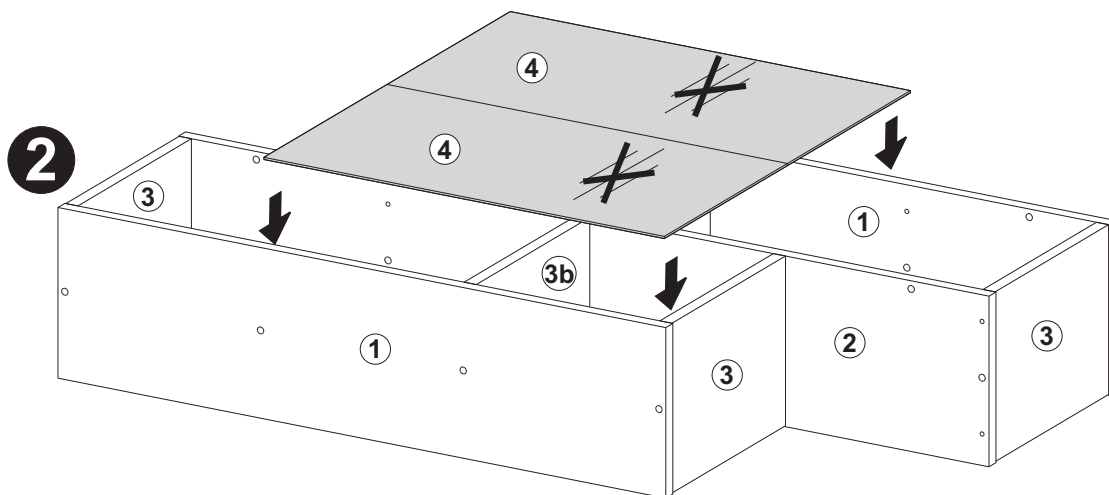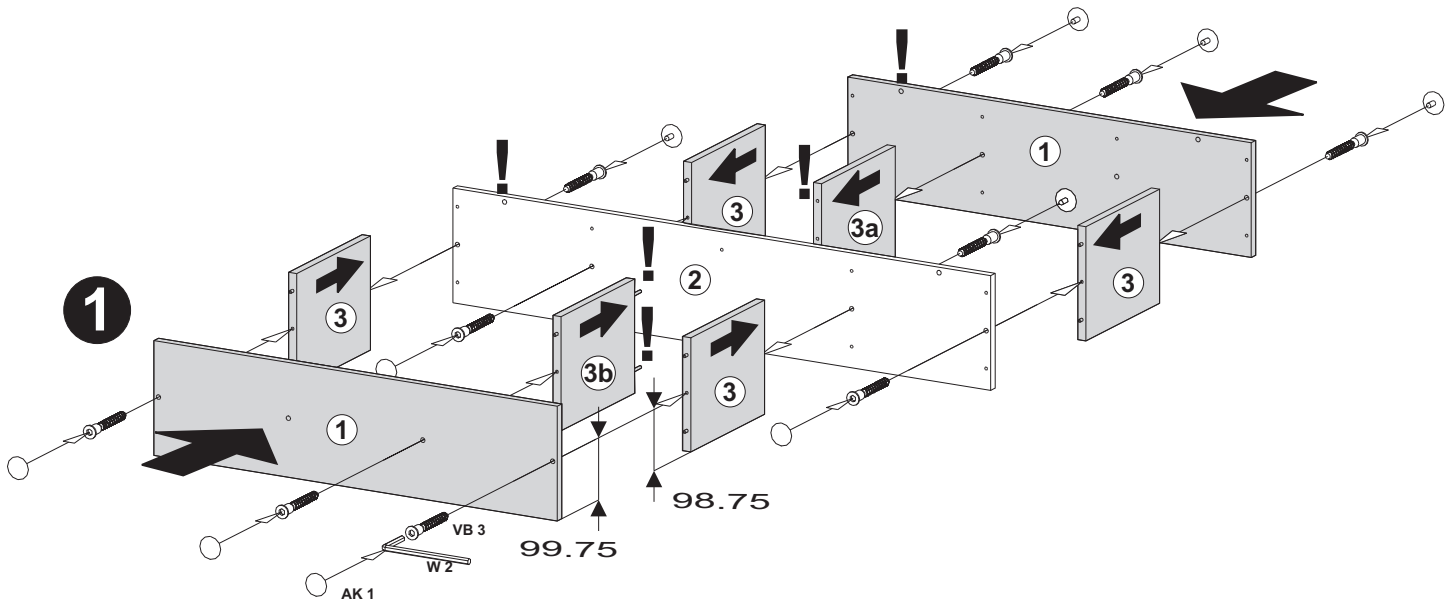

C



1

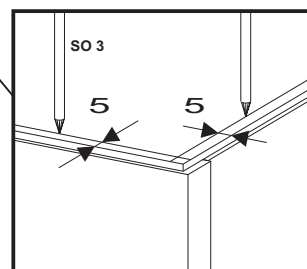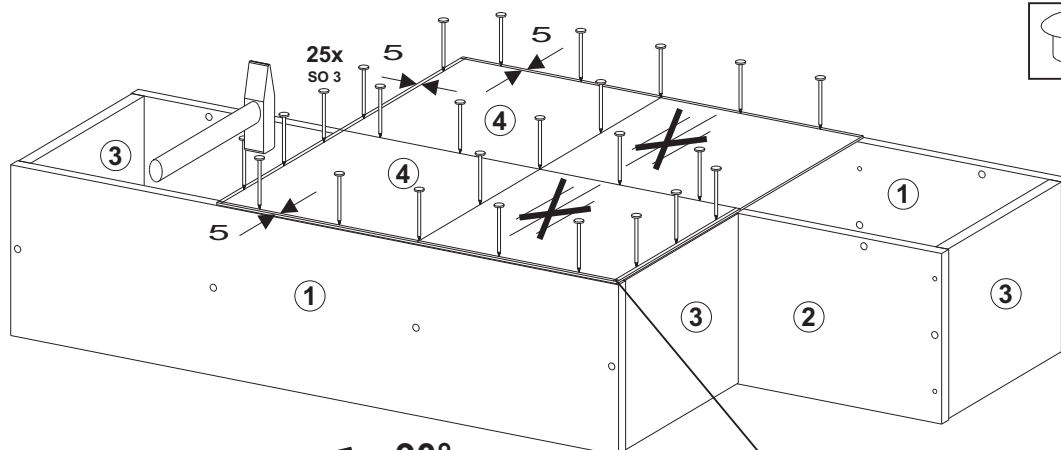

2

