
Owner Manual

Product Dimensions: W 43.31" X D 23.62" X H 16.73"
Product Weight: 53 lbs

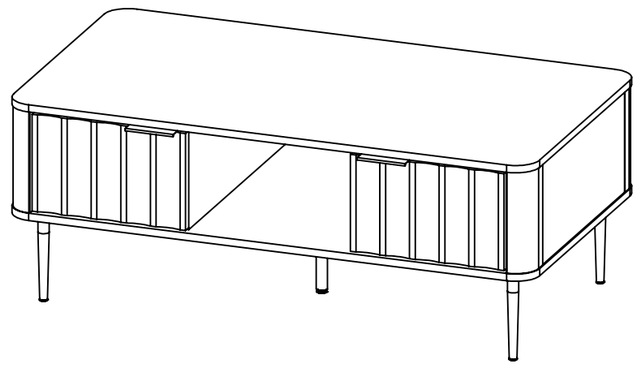

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
*This item should be assembled on a soft surface to prevent scratching the finish during assembly.
*This item may require periodic tightening.
*If you are having difficulty, our friendly Customer Care team is always here to help. Please email **us**


PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
*If any part is missing or damaged, do not attempt to assemble the product.
*Estimated Assembly Time: 60 minutes.
*Tools Required for Assembly (Not included): Screwdriver

CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies.
Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills.
How often you apply the wax depends on how much wear the furniture receives

Part List







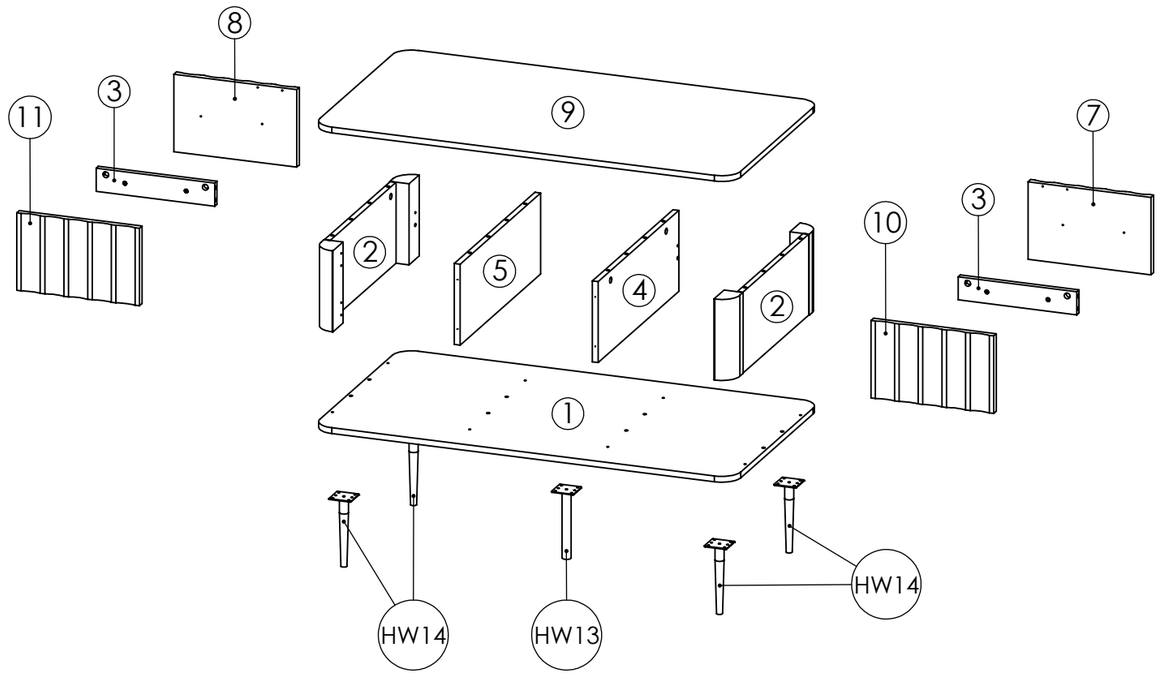


WARNING

TOTAL WEIGHT CAPACITY: 136 LBS

Top Load Capacity: 70 Lbs
Shelf Load Capacity: 22 Lbs
Warning: Do not stand on table
Warning: Do not over torque bolt

Hardware List

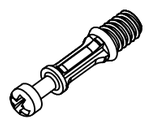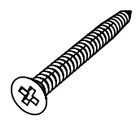HW1x12 ∅6X32 MM 	HW2x12 ∅15X12 MM 	HW3x20 ∅8X32 MM 	HW4x8 ∅6X50 MM 	HW5x4 ∅6X25 MM 	HW6x8 ∅6X12 MM PH 
HW7x38 ∅5X12 MM 	HW8x8 ∅5X8.5 MM 	HW9x4 ∅26X83 MM 	HW10x4 100X37X16 MM 	HW11x12 20 MM 	HW12x4 ∅8 MM 
HW13x1 Center Leg	HW14x4 ∅6X32 MM				


Part List & HW

Piece	Description	Qty	Carton Call
1	Bottom Panel	1	1 of 1
2	Side Panel -Left	1	1 of 1
3	Approne Rear	2	1 of 1
4	Center Panel -Right	1	1 of 1
5	Center Panel -Left	1	1 of 1
6	Side Panel -Left	1	1 of 1
7	Fixed Door -Right	1	1 of 1
8	Fixed Door -Left	1	1 of 1
9	Top Panel	1	1 of 1
10	Door -Right	1	1 of 1
11	Door -Left	1	1 of 1


Piece	Description	Qty	Carton Call
HW1	Cambolt ∅6 x 32 mm	12	1 of 1
HW2	Camlock ∅15 x 12 mm	12	1 of 1
HW3	Wooden Dowel ∅8 x 32 mm	20	1 of 1
HW4	Screw M6 x 50 mm	8	1 of 1
HW5	Screw M6 x 25 mm	4	1 of 1
HW6	Screw M6 x 12 mm PH	8	1 of 1
HW7	Screw M5 x 12 mm	38	1 of 1
HW8	Screw M5 x 8.5 mm	8	1 of 1
HW9	Full Curve Hinge	4	1 of 1
HW10	Handle 100 x 37 x 16 mm	4	1 of 1
HW11	Cover Cap Sticker ∅20 mm	12	1 of 1
HW12	Bumpers ∅8 mm	4	1 of 1
HW13	Center Leg	1	1 of 1
HW14	Side Legs	4	1 of 1

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

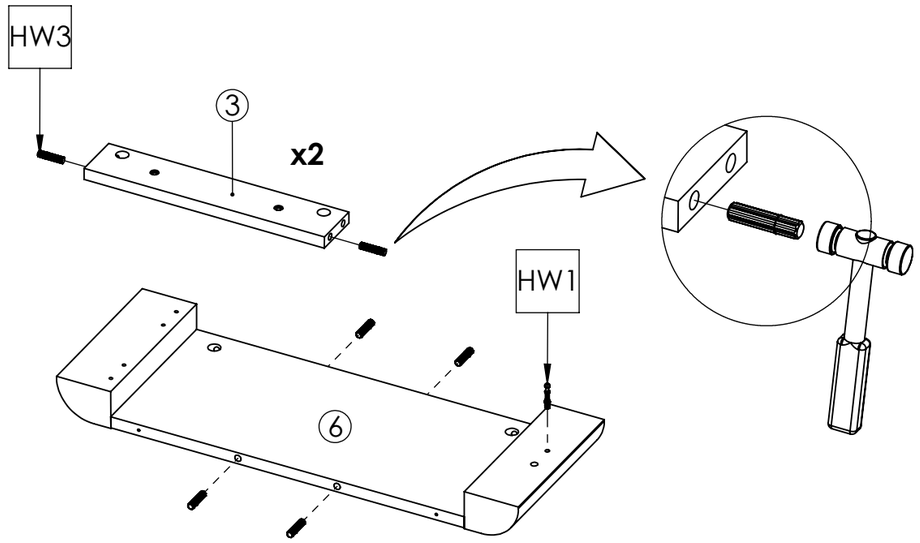


STEP1: Insert Cambolt (HW1) into Side Panel -Left (6),
Insert Wooden Dowel into Side Panel -Left (6) and Rear Approne (3)

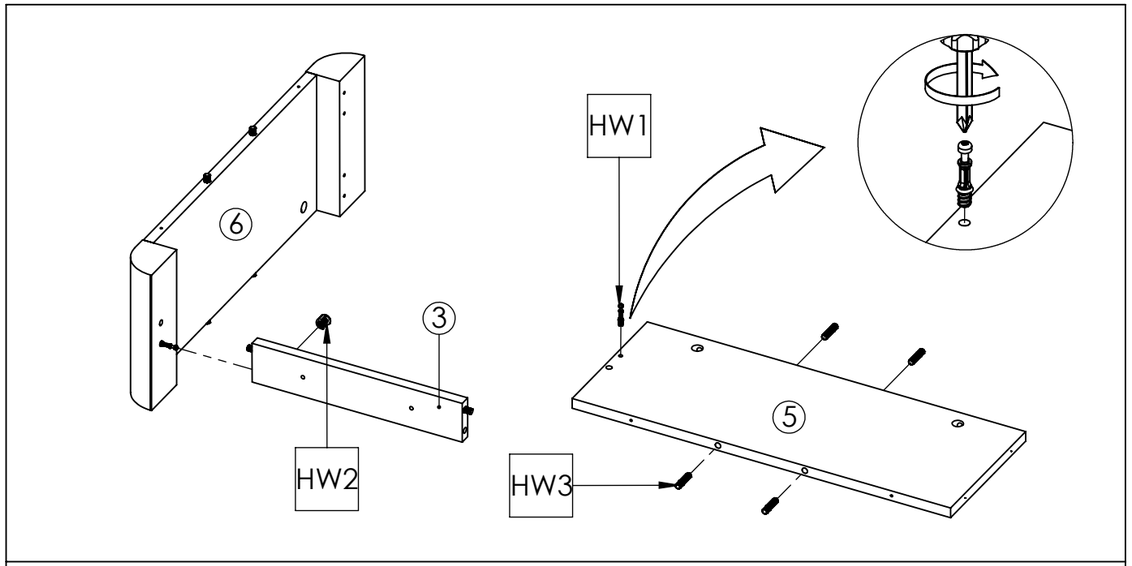


STEP2: Attach Rear Approne (3) into Side Panel -Left (6),
Secure with Camlock (HW2) and tighten it using Screwdriver.
Continue Insert Cambolt (HW1) and Wooden Dowel (HW3)
into Center Panel -Left (5)

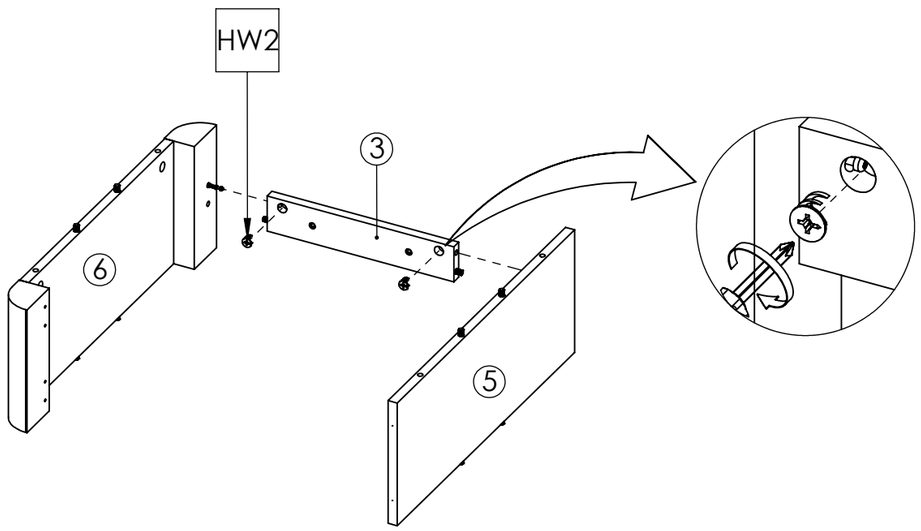


STEP3: Attach Center Panel -Left (5) into Rear Approne (3),
Secure with Camlock (HW2) and tighten it using Screwdriver.

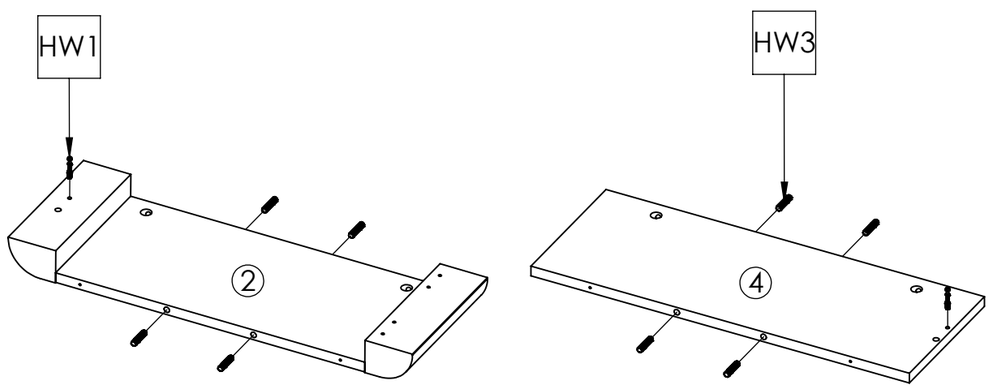


STEP4: Insert Cambolt (HW1) into Side Panel -Right (2),
Insert Wooden Dowel into Side Panel -Right (2) and Center Panel -Right (4).

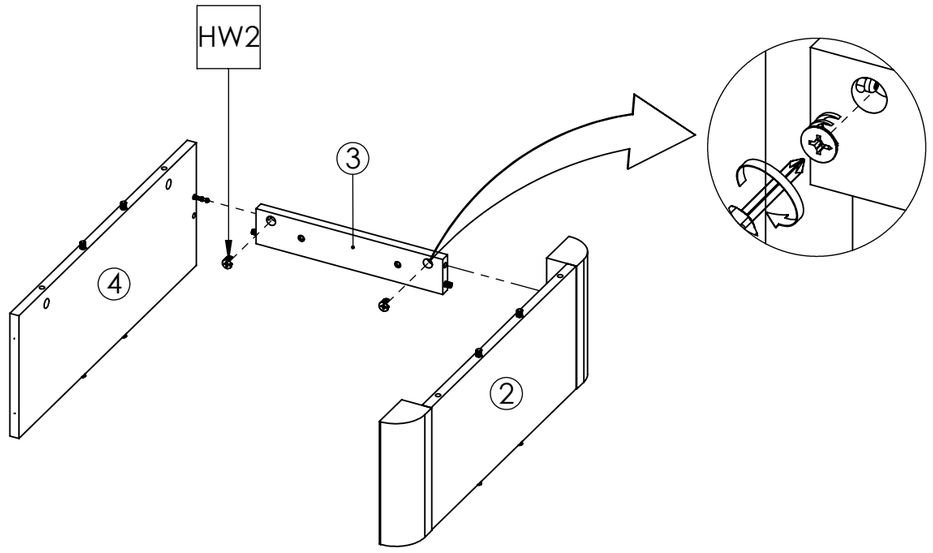


STEP5: Attach Side Panel -Right (2) and Center Panel -Right (4)
into Rear Approne (3),Secure with Camlock (HW2) and tighten it using Screwdriver.

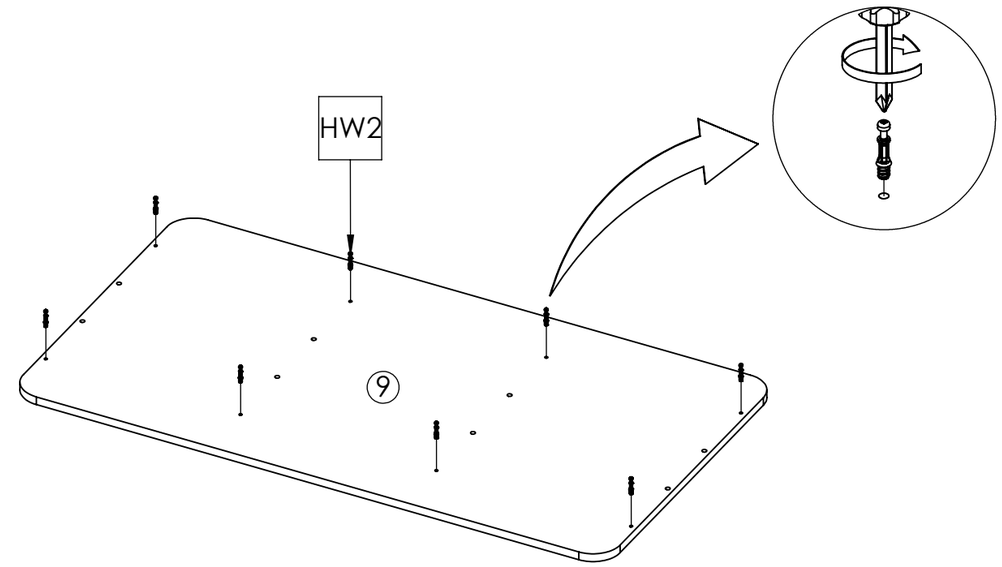


STEP6: Insert Cambolt (HW1) into Top Panel (9), Tighten it using Screwdriver.

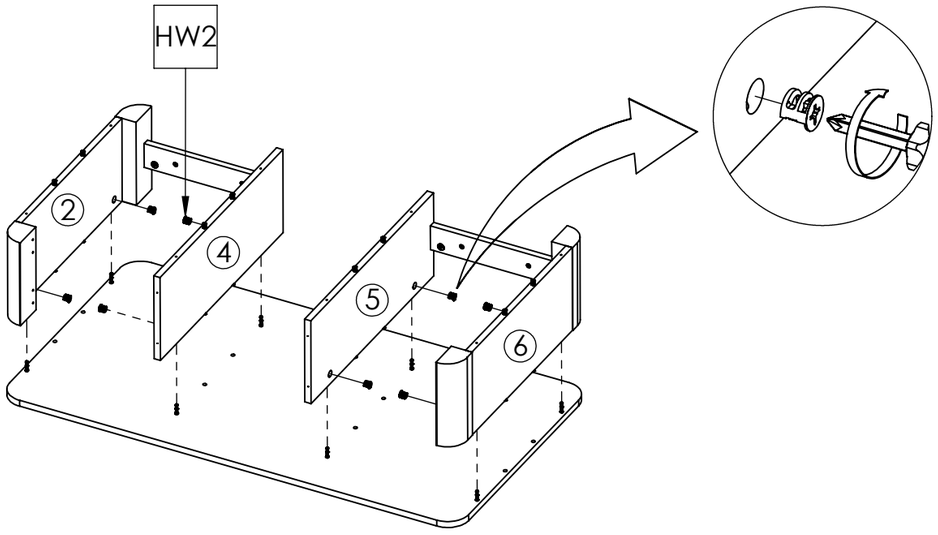


STEP7: Attach Side Panel Left-Right (6 & 2) and Center Panel Left-Right (5 & 4)
into Top Panel (9), Secure with Camlock (HW2) and tighten it using Screwdriver.

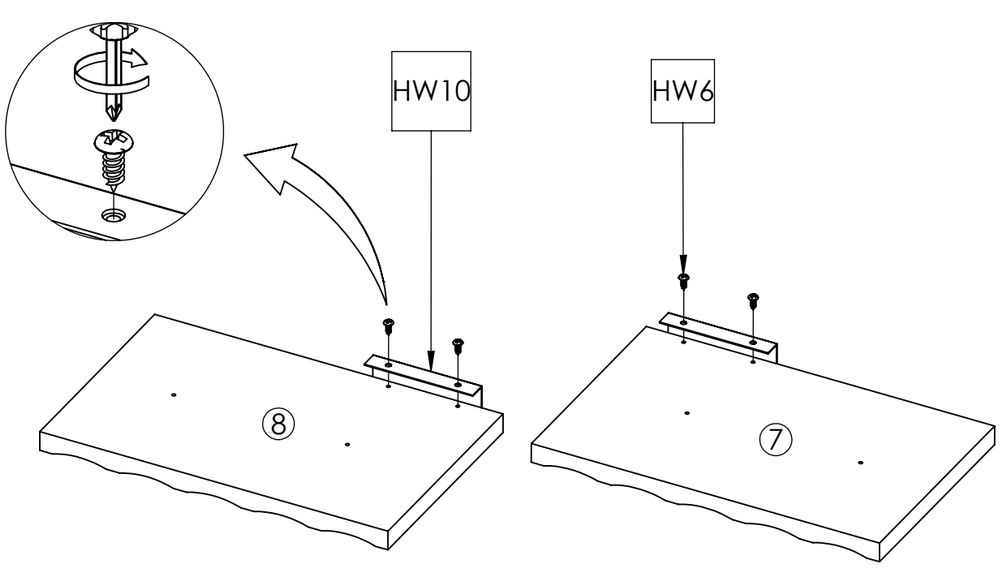


STEP8: Insert Handle (HW10) into Fixed Door Right-Left (8 & 7),
Secure with Screw M6 x 12 mm PH (HW6) and tighten it using Screwdriver.

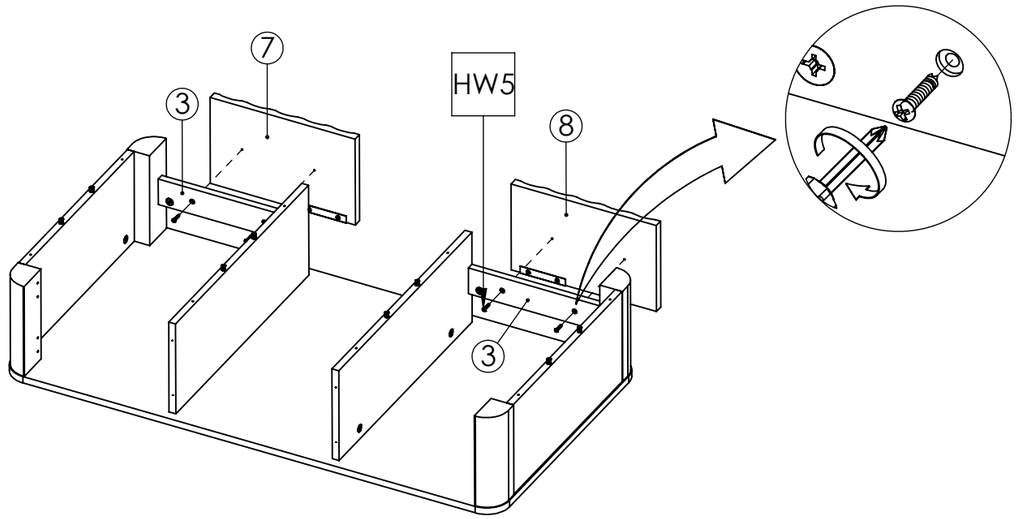


STEP9: Attach Fixed Door Right-Left (8 & 7) Into Rear Approne (3),
Secure with Screw M6 x 25 mm (HW5) and tighten it using Screwdriver.

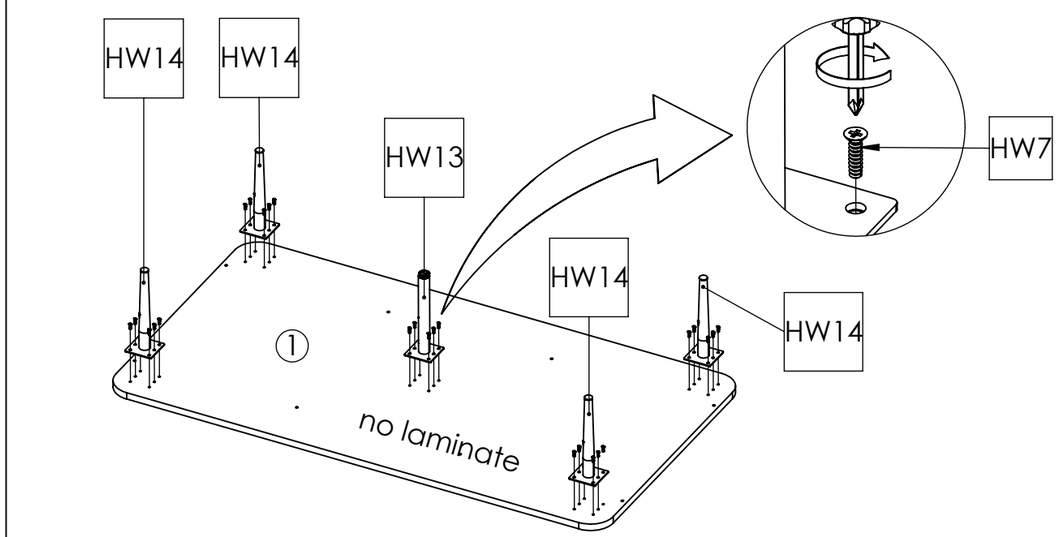


STEP10: Insert Center & Side Legs (13 & 14) into Bottom Panel (1),
Secure with Screw M5 x 12 mm (HW7) and tighten it using Screwdriver

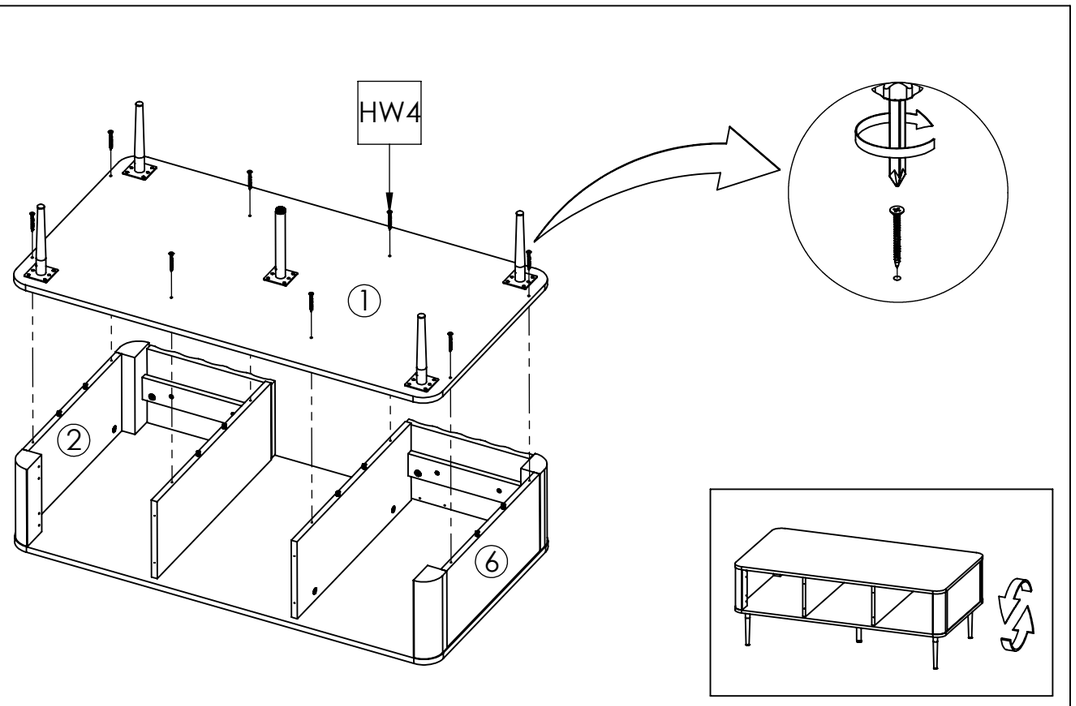


STEP11: Attach Bottom Panel (1) into Side Panel Right-Left (2 & 6),
Secure with Screw M6 x 50 mm (HW4) and tighten it using Screwdriver.

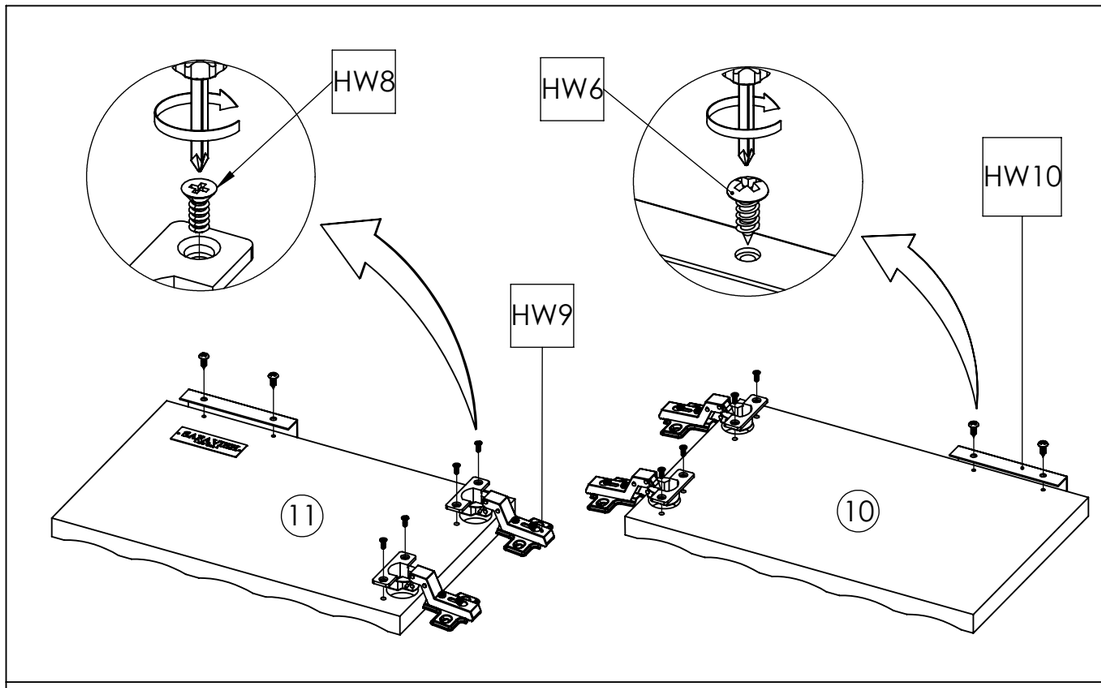


STEP12: Insert Full Curve Hinge (HW9) into Front Panel Right-Left (10 & 11),
Secure with Screw M6 x 8.5 mm (HW8). Continue insert Handle (HW10),
Secure with Screw M6 x 12 mm PH (HW6) and tighten it using Screwdriver.

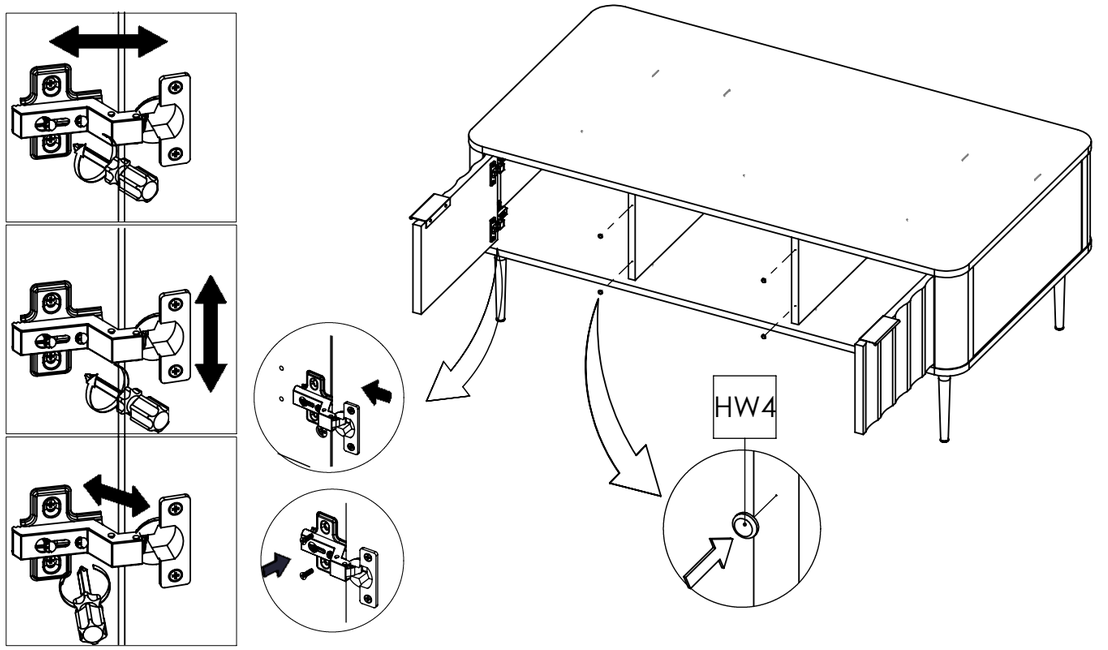

STEP13: Install The Full Curve Hinge (HW9) Into position as shown in picture, Secure With Screw M5X12 mm (HW8). Continue to Attach Bumpers (HW12) into Center Panel Right-Left (4 & 5).

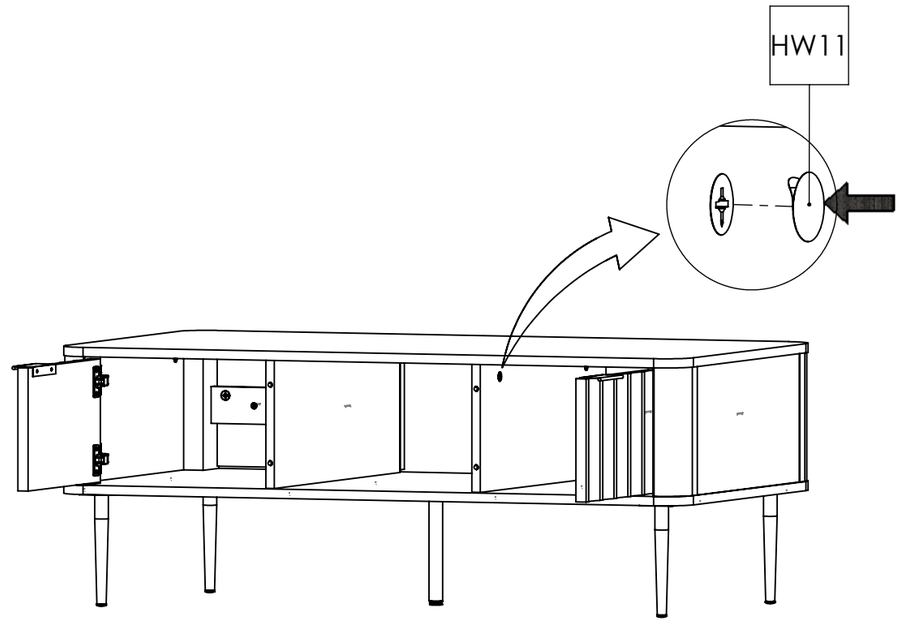

STEP14: Attach the cover cap sticker (HW11) to the panel that has lamination.

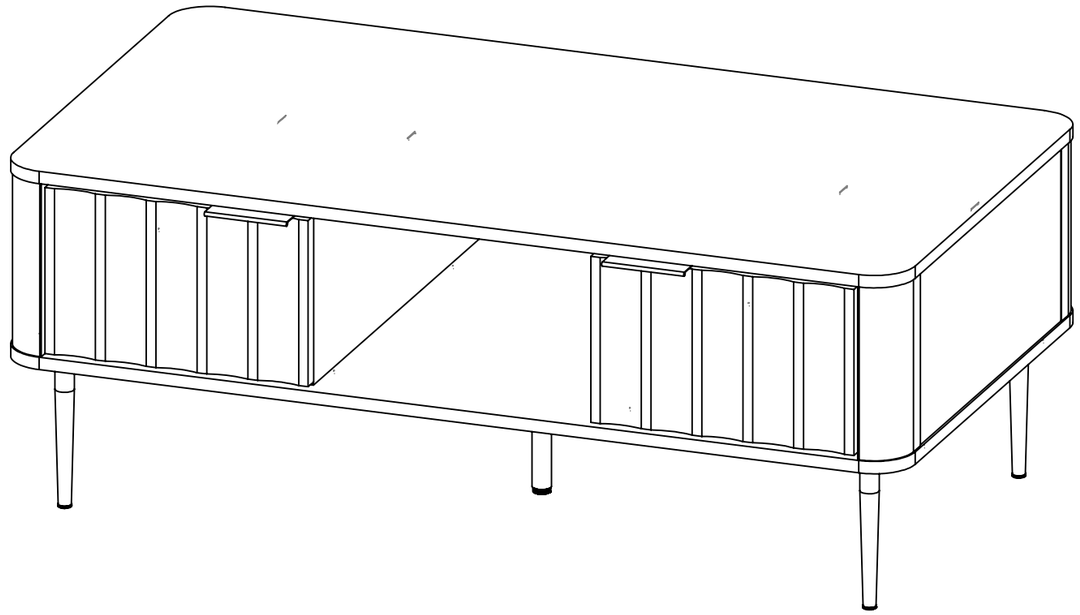

STEP15: Assembly is Compleated.