







ASSEMBLY INSTRUCTION

1 OF 4

PANEL AND FITTINGS IDENTIFICATION:

					
(A) Backrest 1PCS	(B) Seat board×1 1PCS	(C) Left armrest×1 1PCS	(D) Right armrest×1 1PCS	(E) Brace×1 1PCS	(F) Swivel Bottom×1 1PCS


HARDWARE LIST:

						
(G) Screw M6×30 4PCS	(H) Screw M6×15 18PCS	(I) Washer M6 12PCS	(J) Nut M6 2PCS	(K) Rubber washer 2PCS	(L) Allen wrench 1PCS	(M) Open spanner 1PCS

Step 1:

Use screw (G) to fix the backrest (A) with the seat board (B) . As the picture shows.

Note: When you assembly one side, pls just fix it don't tight it. After you fix the another side, then tight both side.

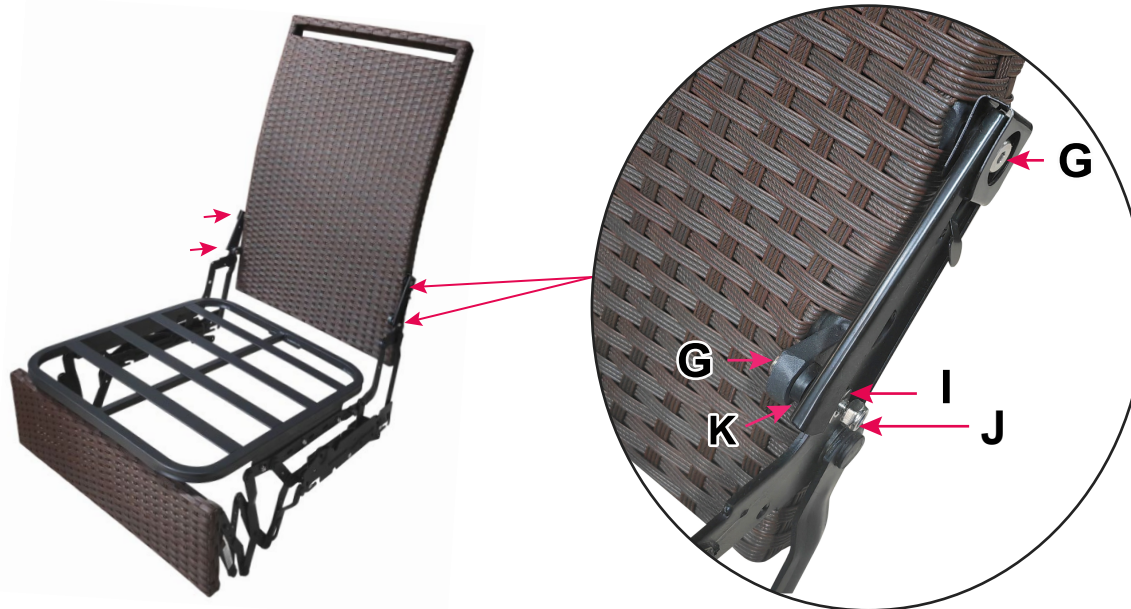

Please note :
The side with logo is the back of the chair. Don't assemble it in opposite position.


Step 2:

Use screw (H) and washer (I) to assemble armrest (C,D) with the finished seat board (B) , As the picture shows.



2 OF 4



Armrest hole site

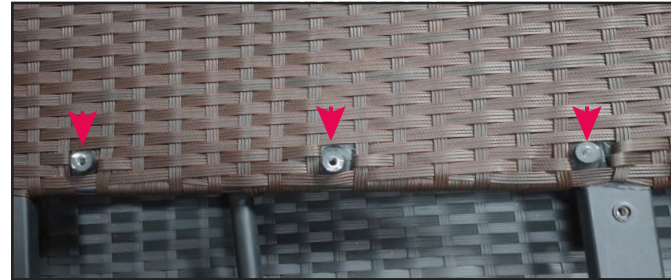


Seat board hole site

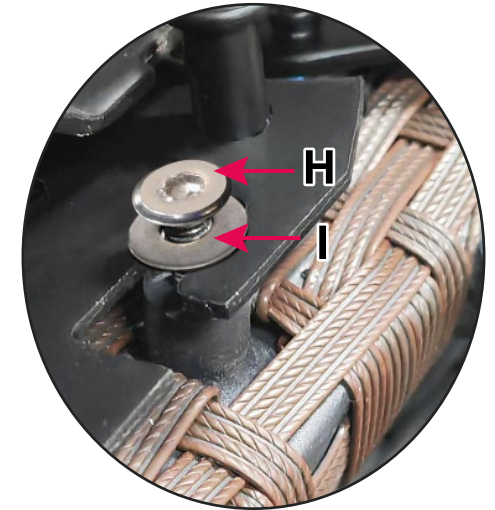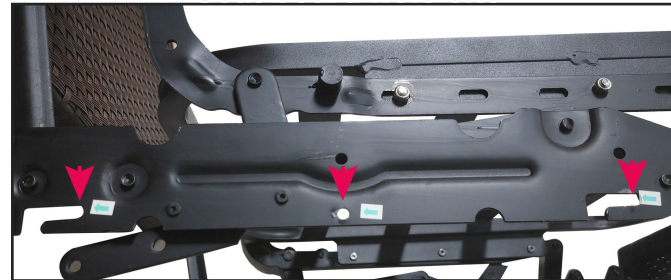

Step 3:


Use screw (H) to fix the brace (E) with the right/left armrest (C,D) .

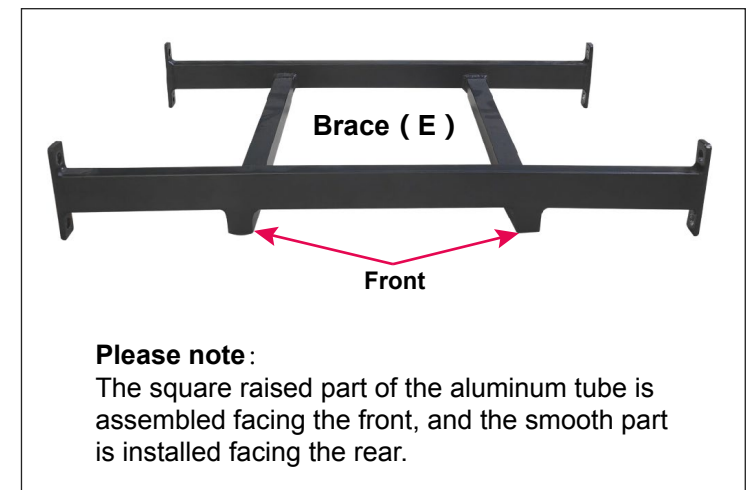

Step 4:

Use screw (H) and washer (I) to assemble finished Swivel Bottom (F) with the finished brace (E) , As the picture shows.

3 OF 4

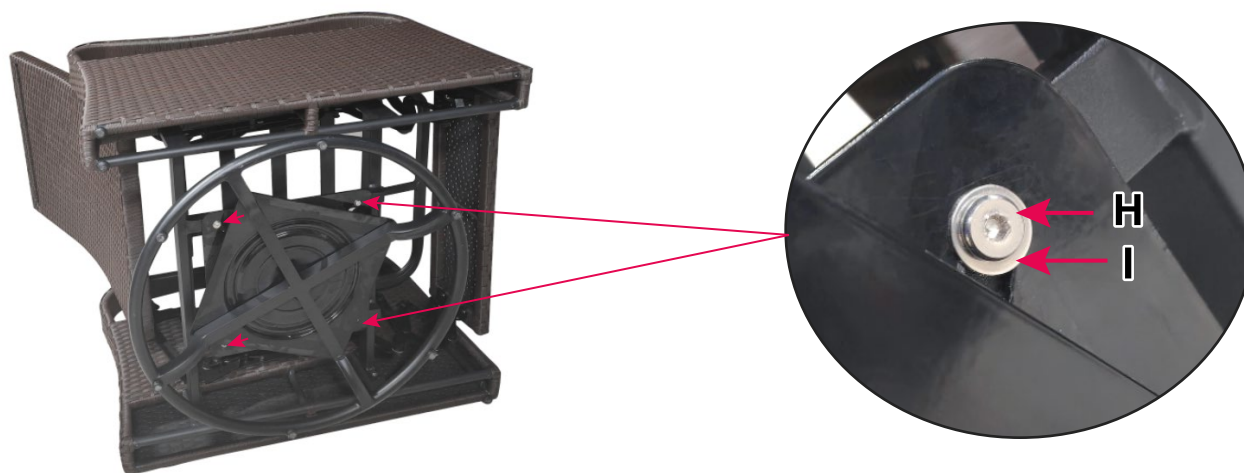**Step 5:**

Put the cushion, Installation completed.

